
# **Entry Table**

### Assembly Instructions - Please keep for future reference

1061030296B 1061030297B

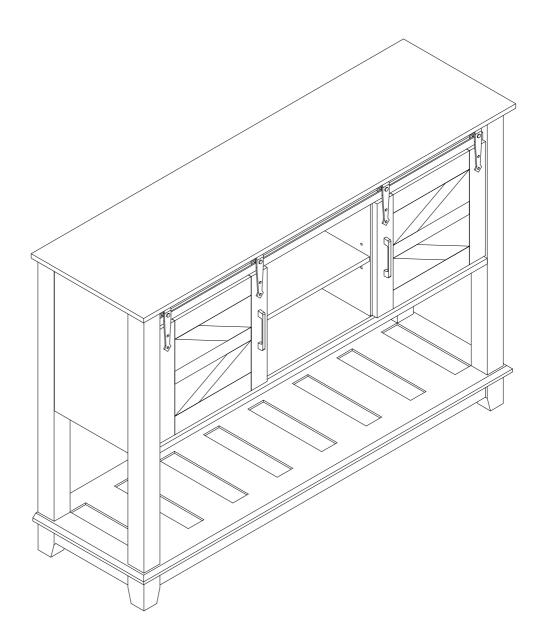

#### Dimensions

Width - 45.6inch Depth - 13.78inch Height - 32inch

Important – Please read these instructions fully before starting assembly

# Safety and Care Advice

#### Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

#### Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

#### Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts


• Regularly check and ensure That all bolts and fittings are tightend properly.

### WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable) Do not allow children to climb or hang on the furniture Do not open more than one drawer at a time Do not place heavy items in the top drawers Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

please note that only the anti tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type

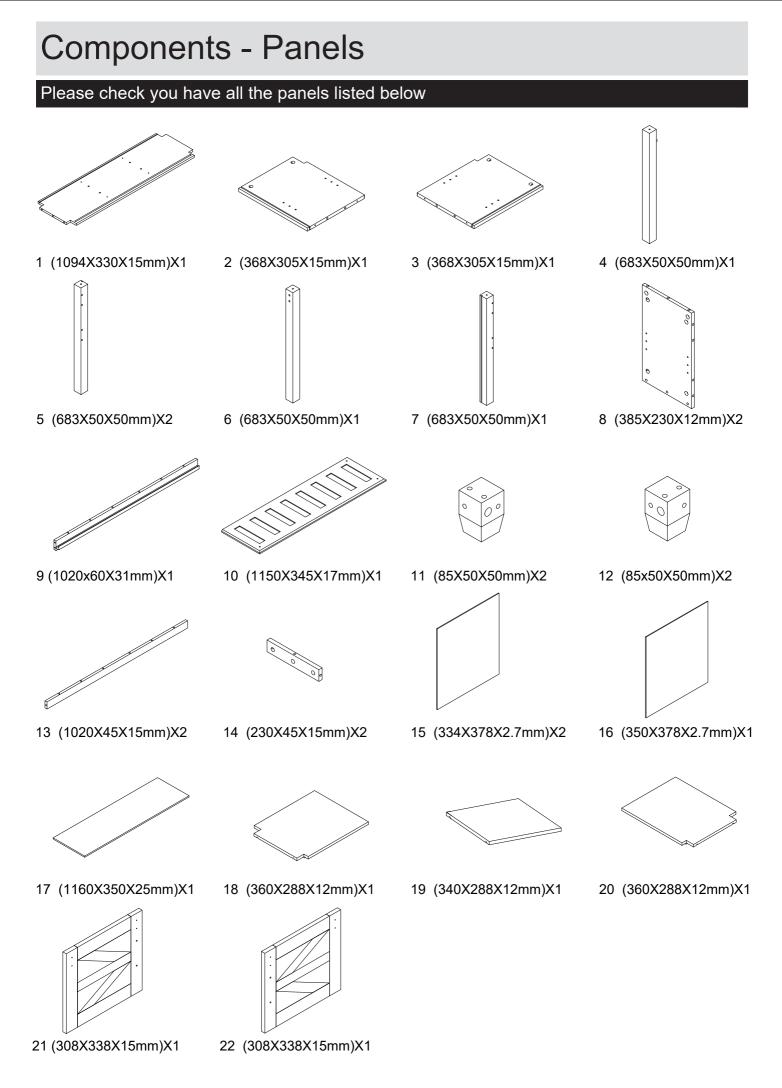

## **Components - Fittings**

#### Please check you have all the panels listed below

*Note:* The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

|                           | ₿ 👰                    | <b>C</b>            |
|---------------------------|------------------------|---------------------|
| Male Camlock x 50         | Female Camlock x50     | Dowel x 34          |
|                           | 6                      | F I                 |
| 4*14mm Screw x 20         | Pulley x 4             | Plate x 4           |
| G                         |                        | 0 9                 |
| Handle & Fixings x 2      | Adjustable Foot x 1    | Protective Feet x 4 |
|                           |                        |                     |
| 6*30mm Screw x4           | Shelf Support Pin x 12 | 5*45mm Screw x 4    |
|                           |                        |                     |
| Back Panel Stiffener x 12 | Wall Eixing Pack x 2   |                     |
|                           |                        |                     |
|                           |                        |                     |
|                           |                        |                     |
|                           |                        |                     |
|                           |                        |                     |
|                           |                        |                     |


#### **Tools required**


Ð


Phillips screwdriver (medium & large)


### Ruler - Use this ruler to help correctly identify the screws


# **Using Camlocks**

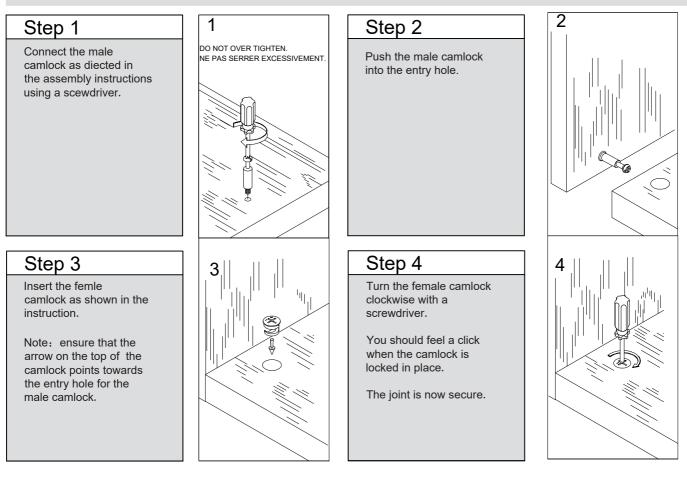


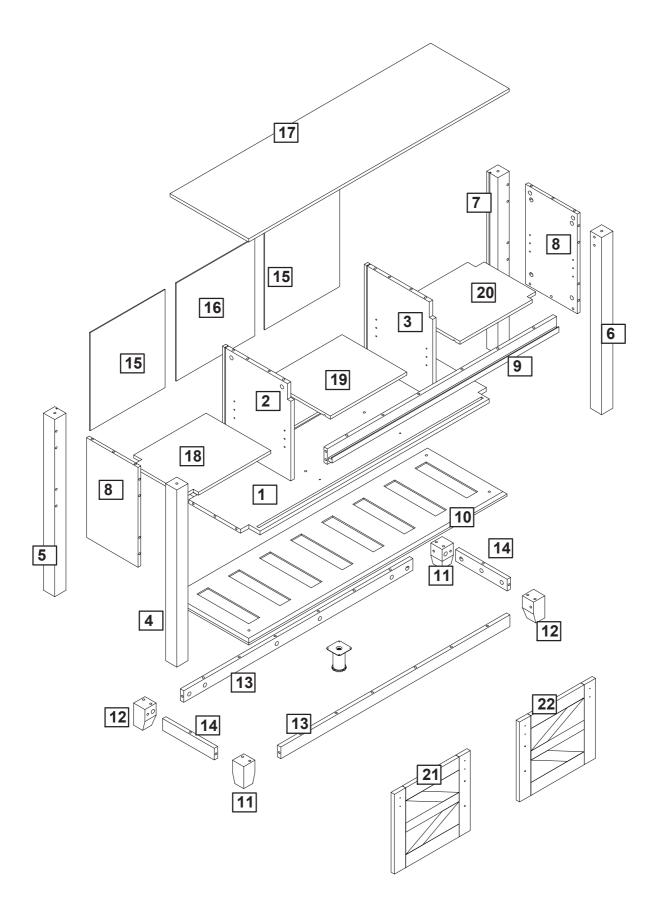


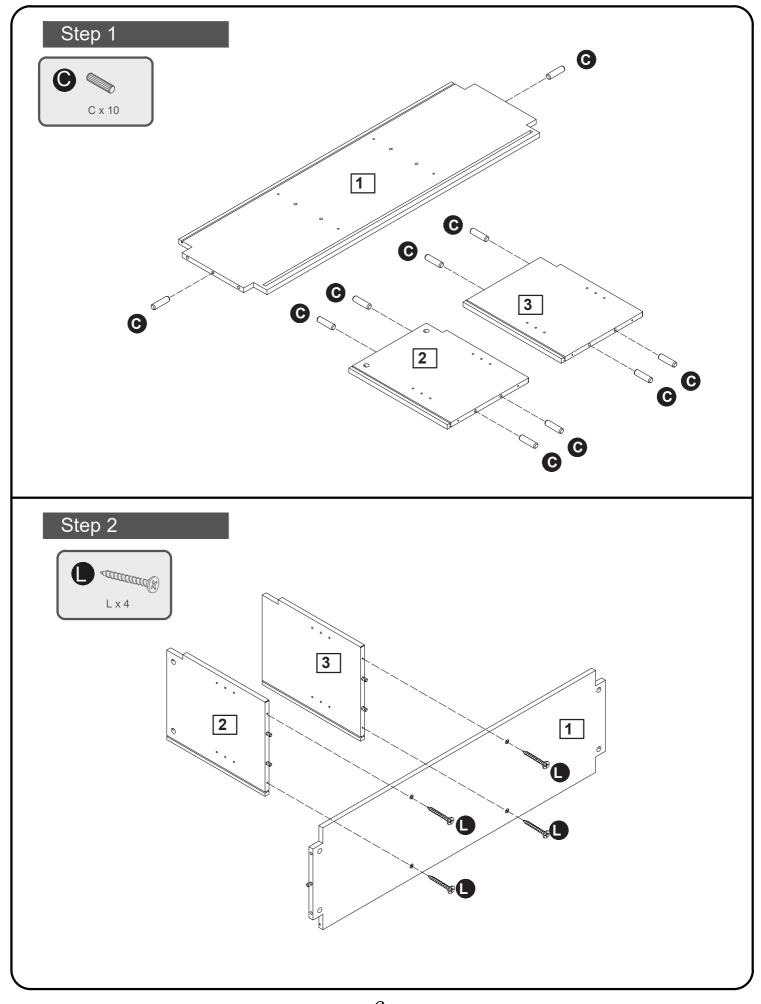


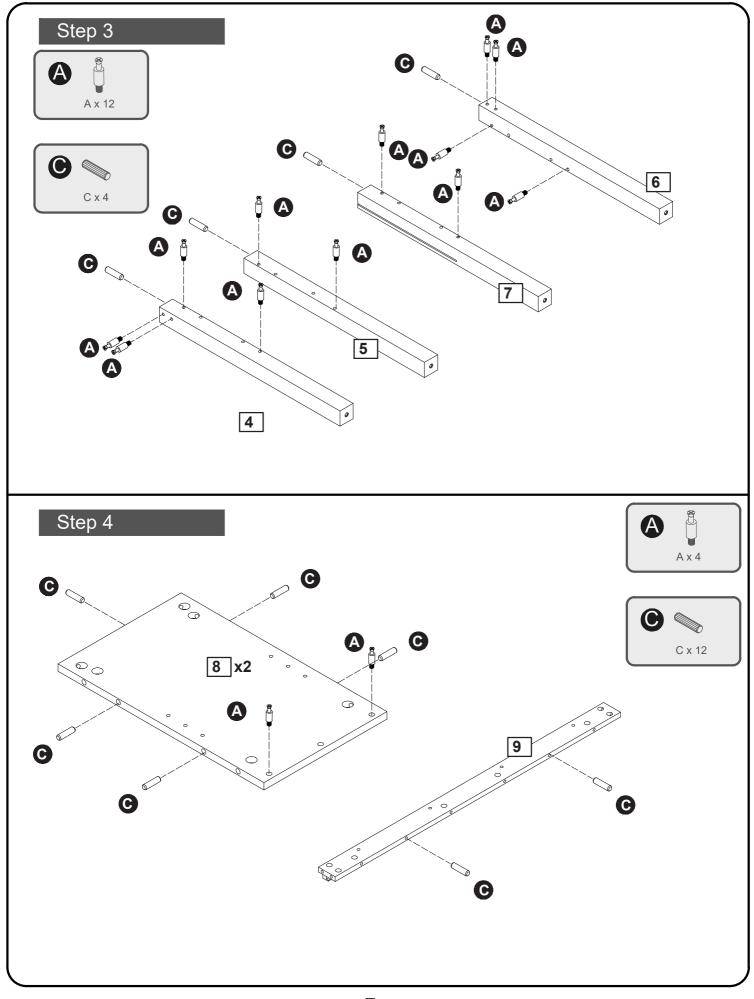


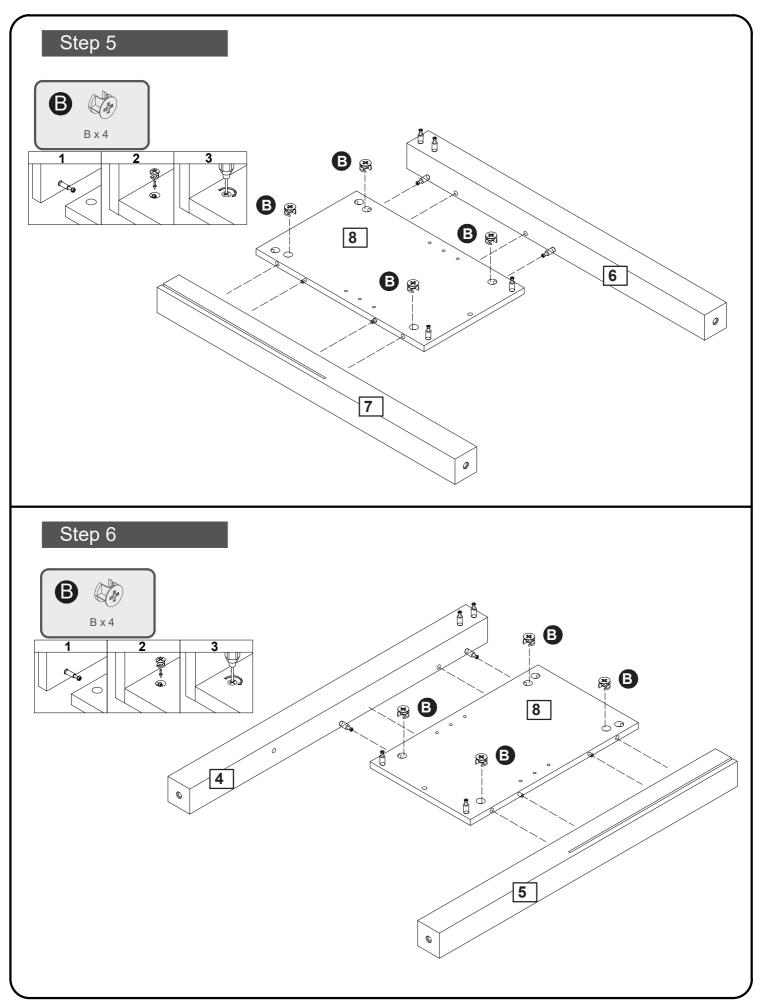


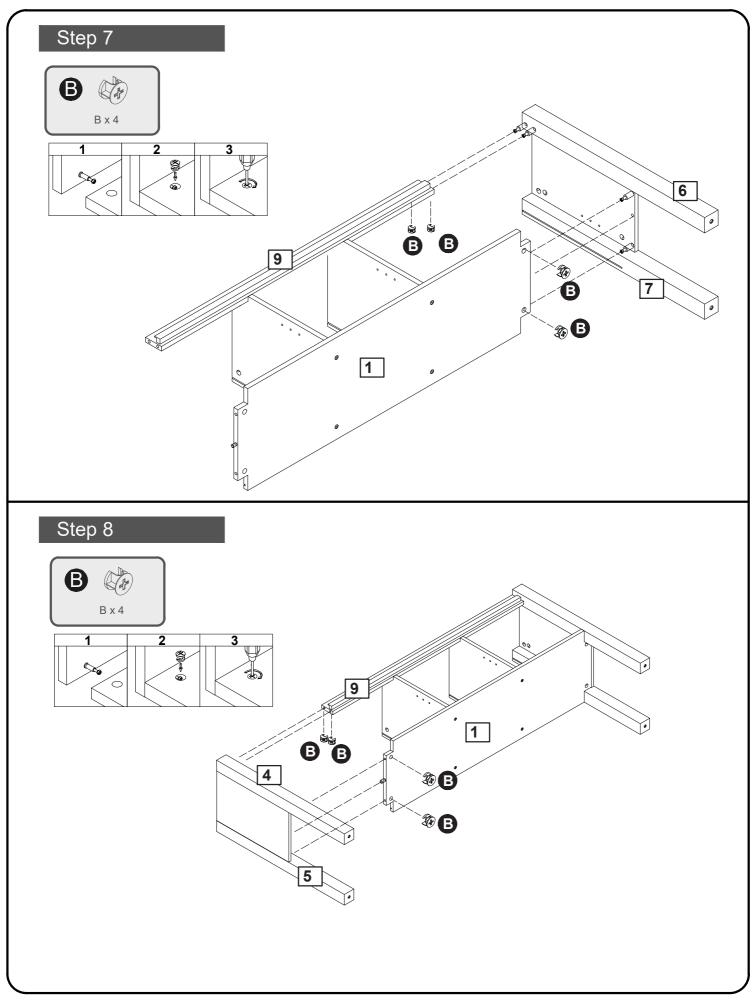


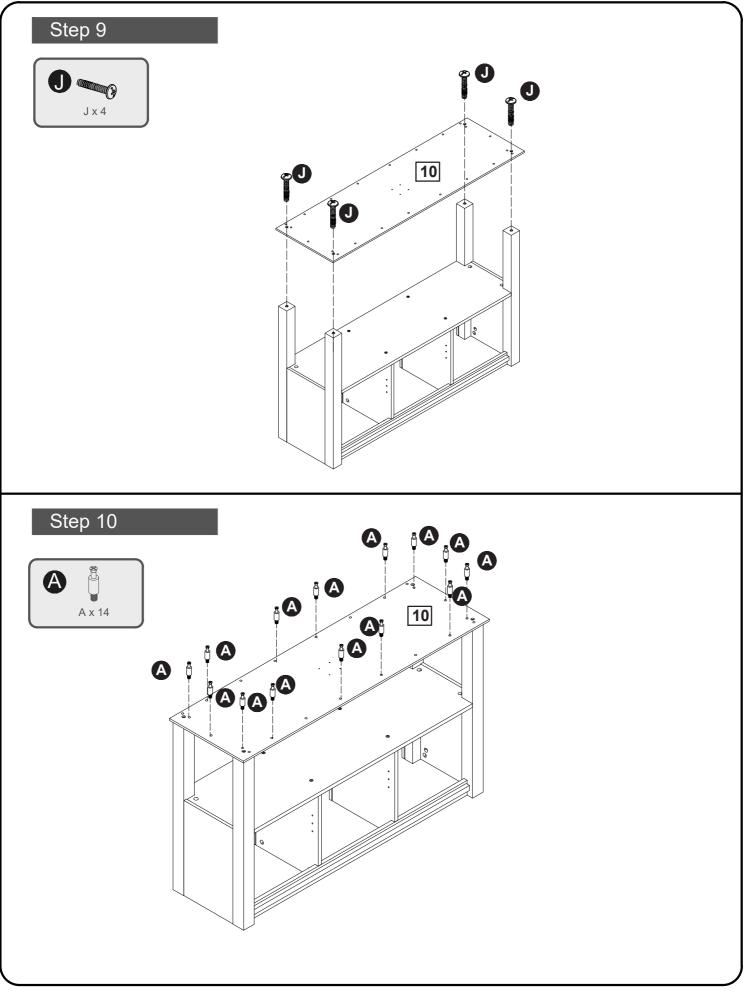


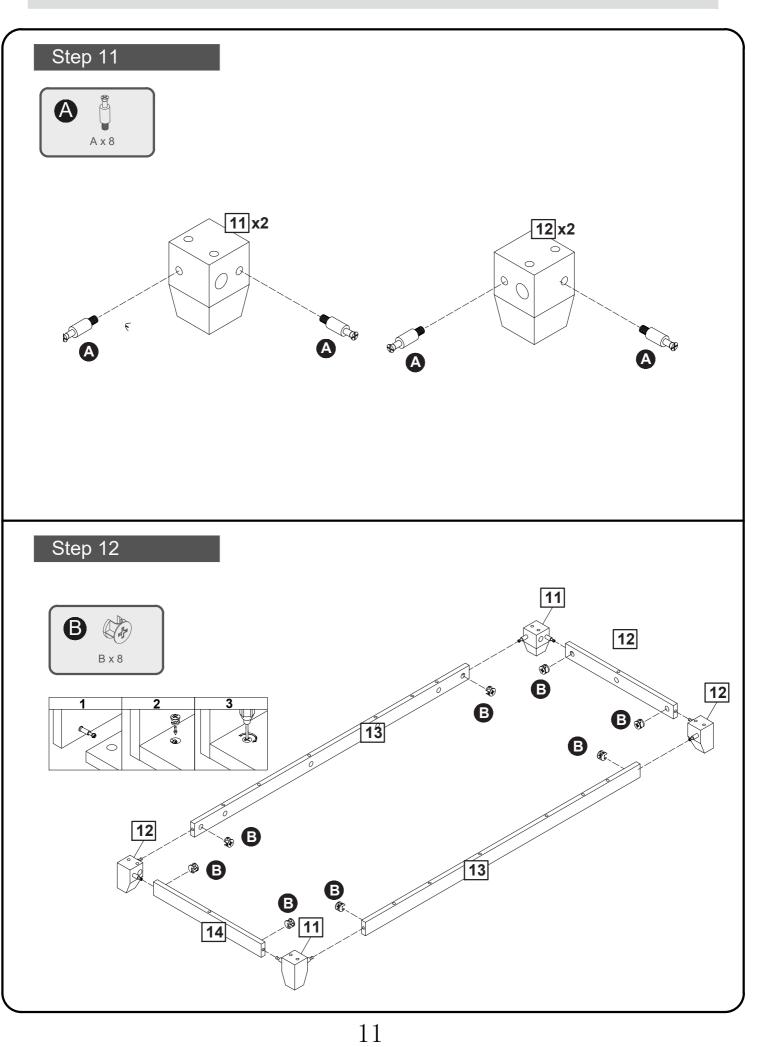


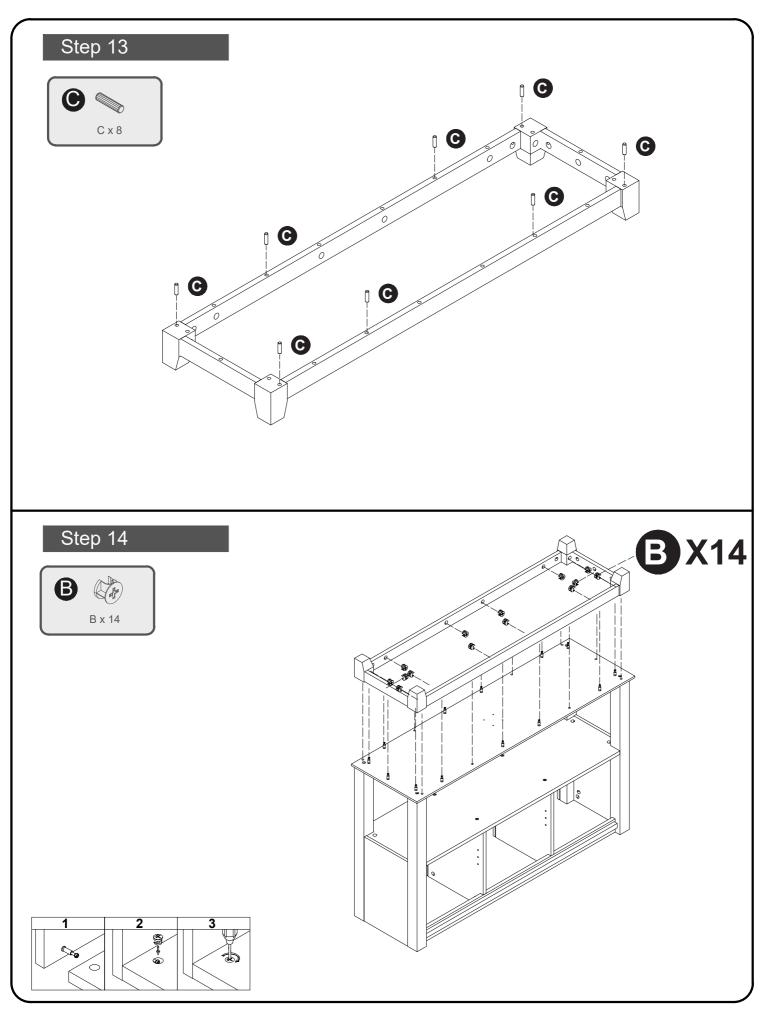


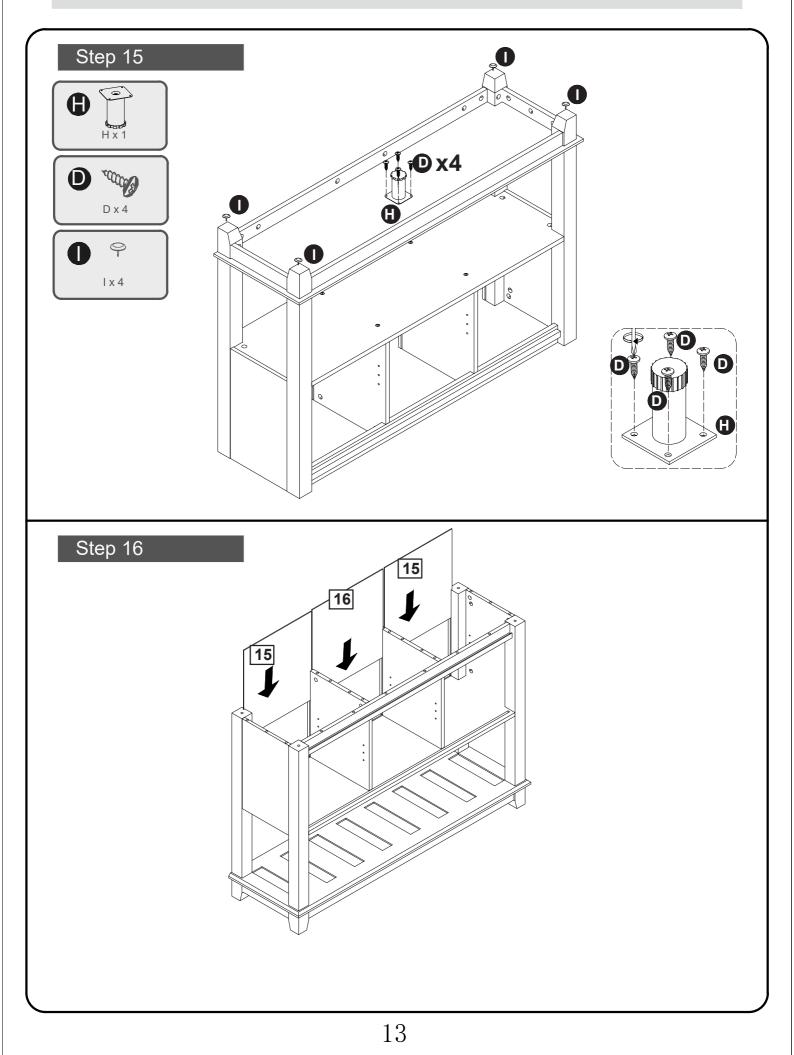

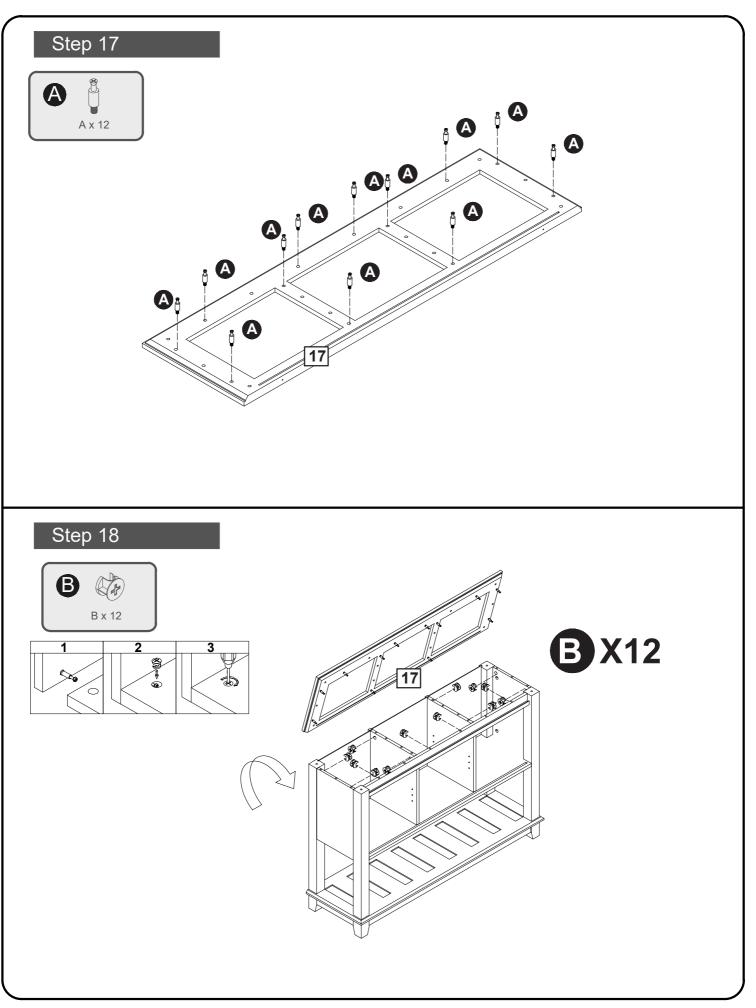


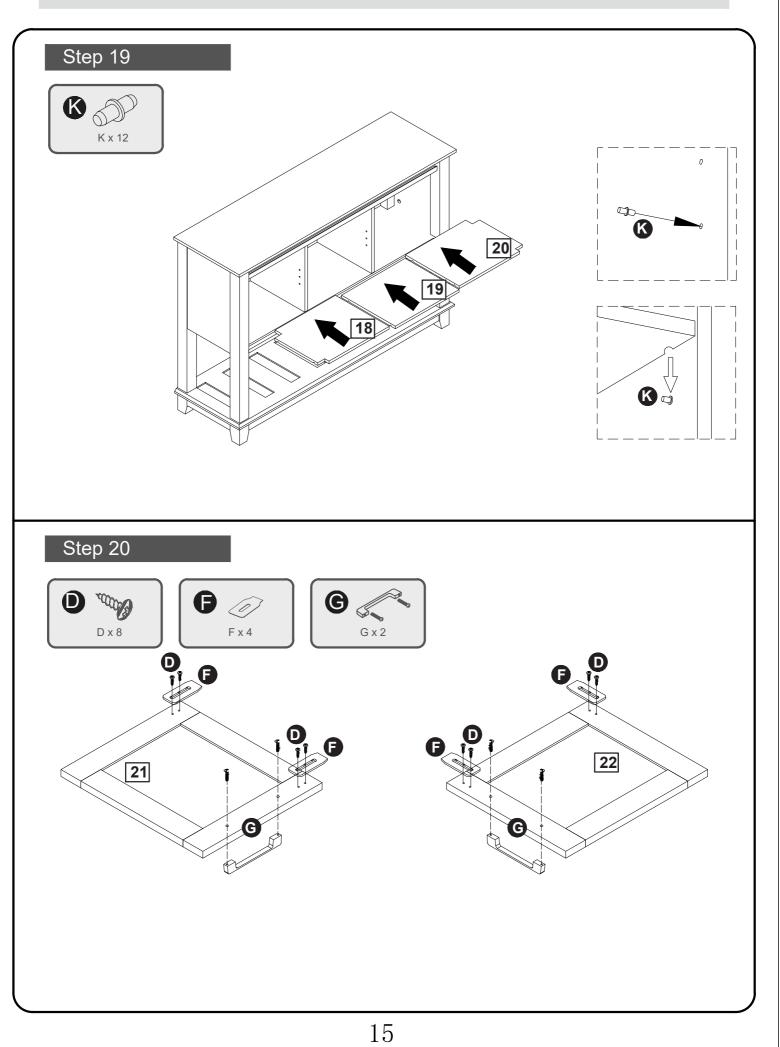

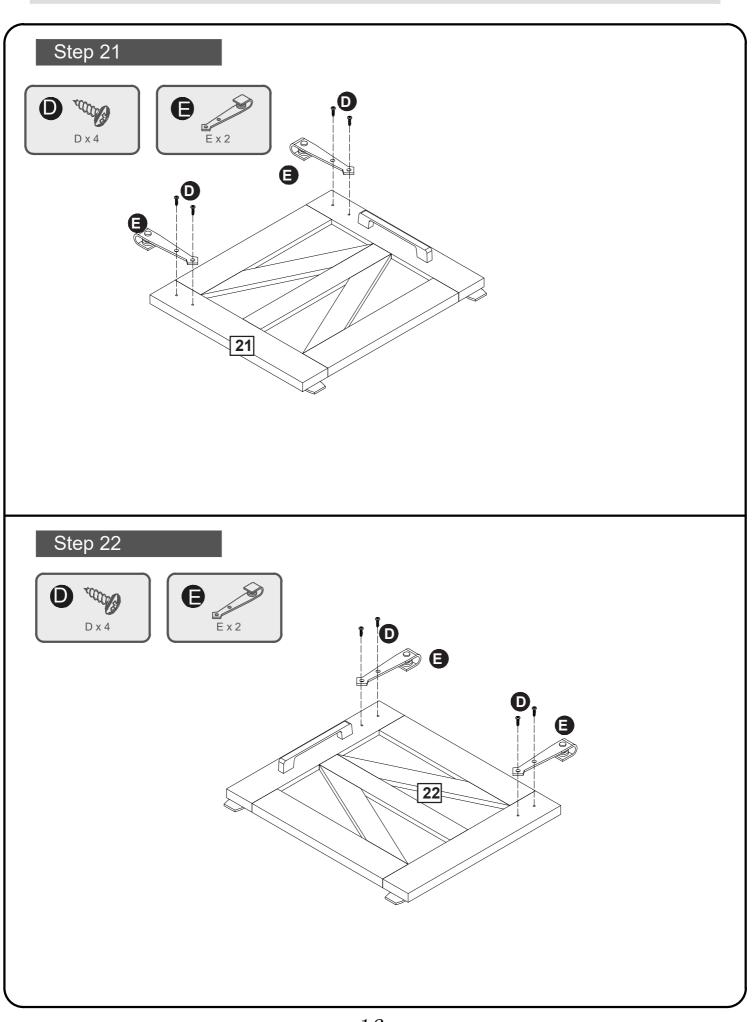

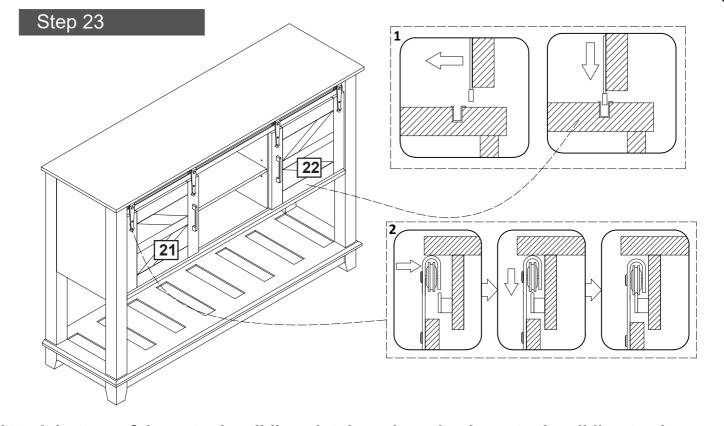

Attach bottom of doors to the sliding slot then close the doors to the sliding track. Slightly uplift the doors and hook pulley to the sliding track.

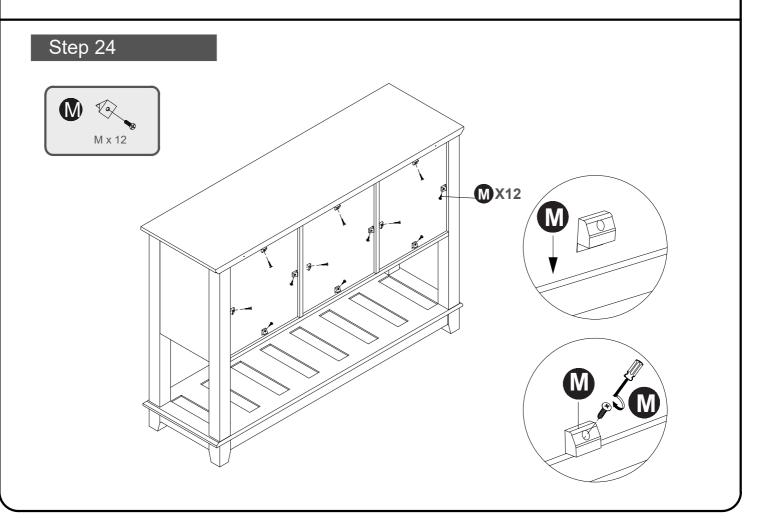

### Step 25





DANGER - To prevent furniture from toppling, please secure it to walls and floors.

Do not put heavy items on top shelves.

Do not place unstable furniture near where children play. An anchor kit suitable for plaster walls is included with this item, if you require a different kit, please consult your local hardware store.



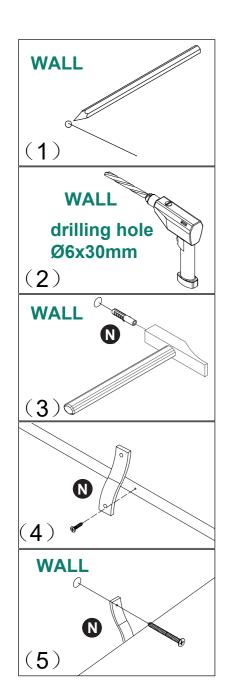

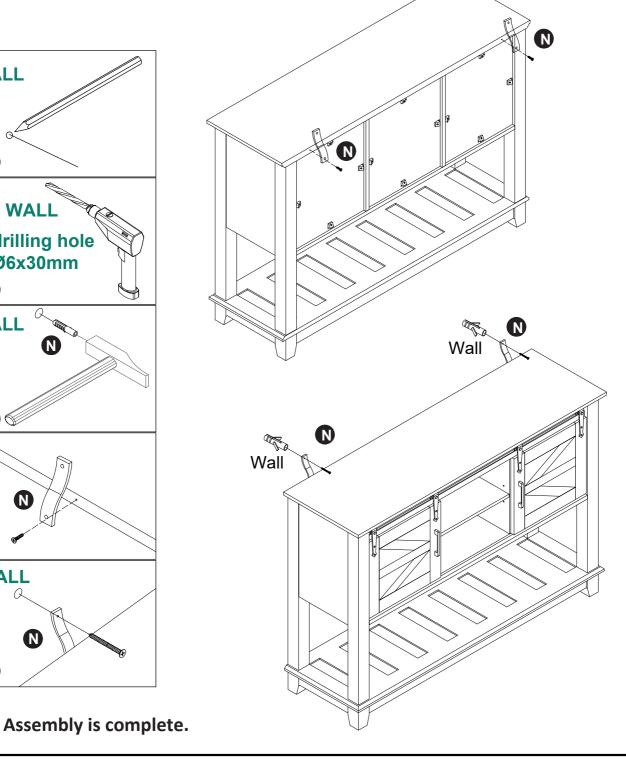

### A Guide to Wall Mounting & Fixings

