
# **TV Stand**

#### Assembly Instructions - Please keep for future reference 1016620#

#### ∕**i**∖ Note:

Comes with TWO PACKAGES with TWO TRACKINGS, may NOT be delivered at the same time.

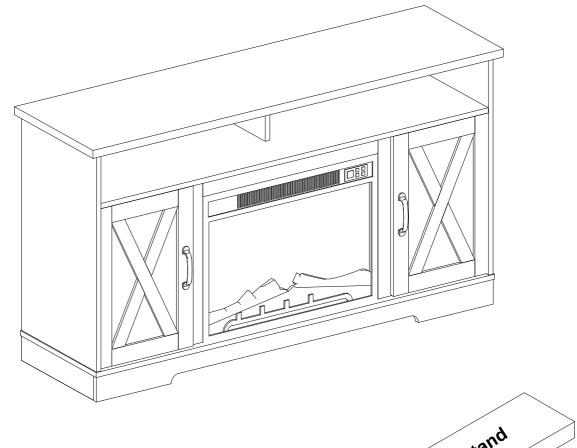

Carton 1 of 2

#### Dimensions

Width - 63inch Depth - 15.5inch Height - 30inch

Carton 2 of 2

# TV stand fireplace

#### Important – Please read these instructions fully before starting assembly

# Safety and Care Advice

#### Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

#### **Care and maintenance**

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners. • From time to time check that there are no loose screws on this unit.

 This product should not be discarded with household waste.
Take to your local authority waste disposal centre.

#### **Handy Hints**

 Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts • Regularly check and ensure That all bolts and fittings are tightend properly.

#### WARNING In order to help prevent overturning – please follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable) Do not allow children to climb or hang on the furniture Do not open more than one drawer at a time Do not place heavy items in the top drawers Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

please note that only the anti tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type

### **Components - Panels**

#### Please check you have all the panels listed below

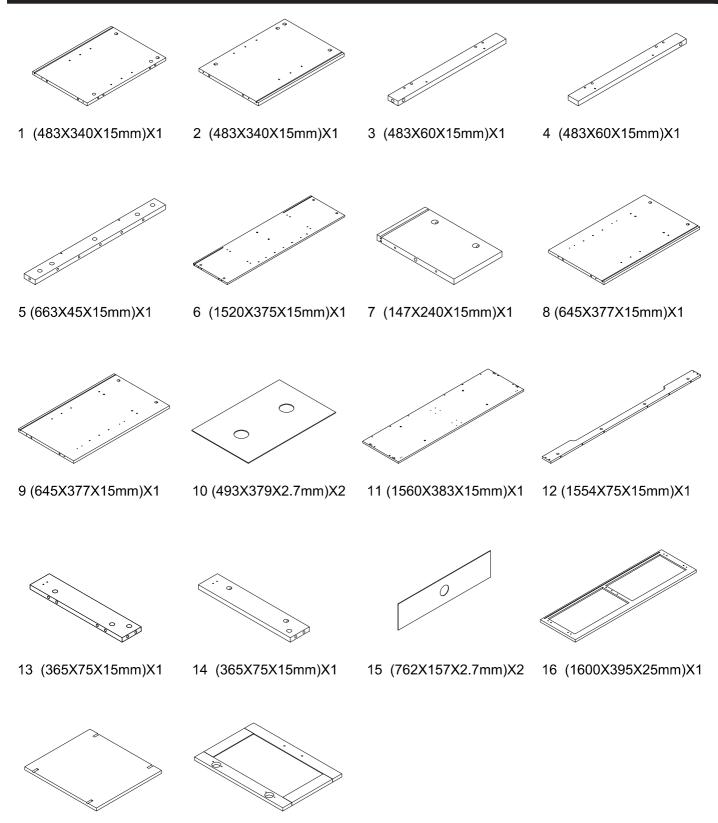

17 (369X340X12mm)X2

18 (477X382X15mm)X2

### **Components - Fittings**

 
#### Please check you have all the panels listed below

*Note:* The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

	B	<b>C</b>
Male Camlock x 33	Female Camlock x 33	Dowel x 38
	E Spin	
Shelf Support Pin x 8	3.5*14mm Screw x 40	5*45mm Screw x 10
G		0 9
Handle & Fixings x 2	x 2	Protective Feet x 6
		0
Adjustable Foot x 2	3*16mm Screw x 16	Screw x 16
Door Hinge x 4	Wall Fixing Pack x 2	



#### Tools required




Phillips screwdriver (medium & large)

#### Ruler - Use this ruler to help correctly identify the screws

 $\square$  The screws length is measured from the head to the point (30mm screw shown).

## **Using Camlocks**

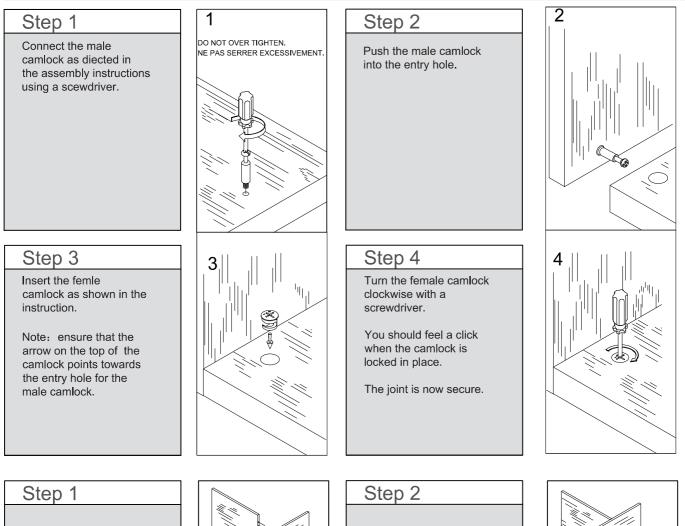

# **Adjusting Hinges**

1


#### Hinge adjustment:

 
a: To move the top panel up or down, loosen screws shown and move top panel to suit

b.To move the top panel in or out, loosen screws shown and move top panel to suit.

Retighten screws

C:To move the top panel left or right, adjust screws shown.

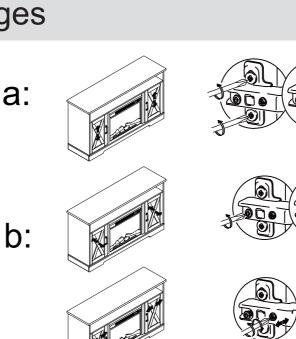














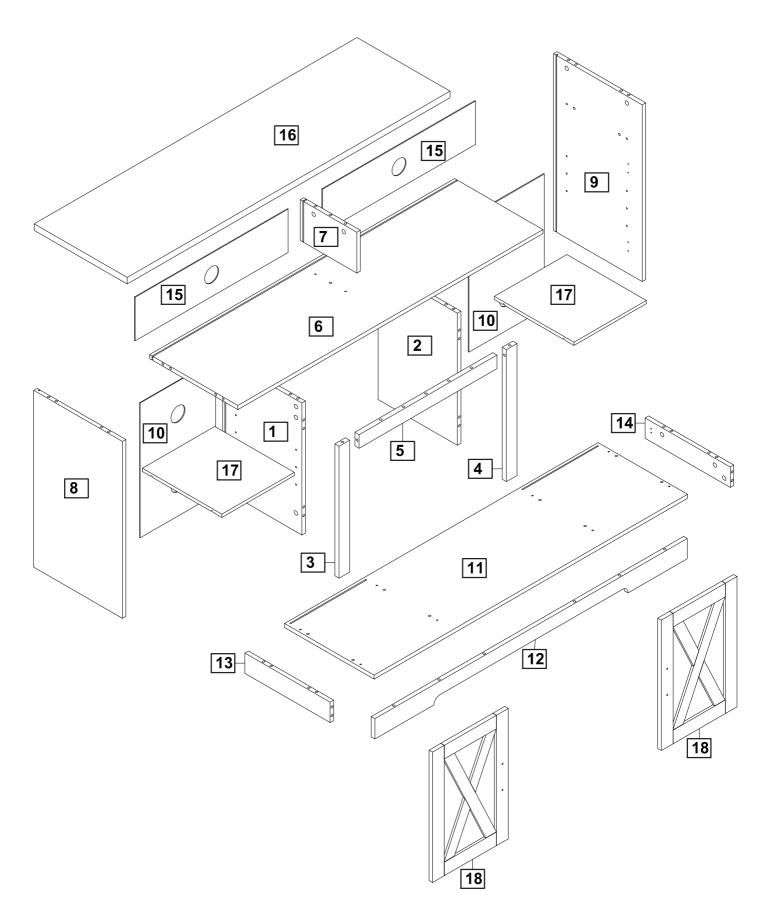


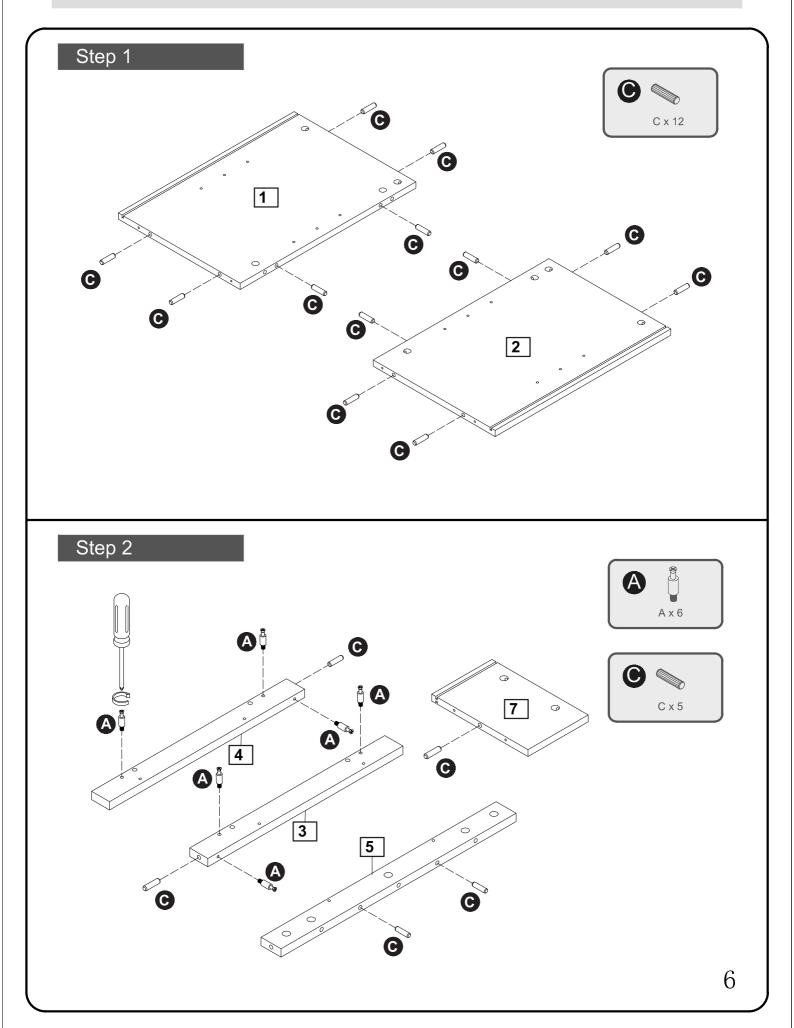


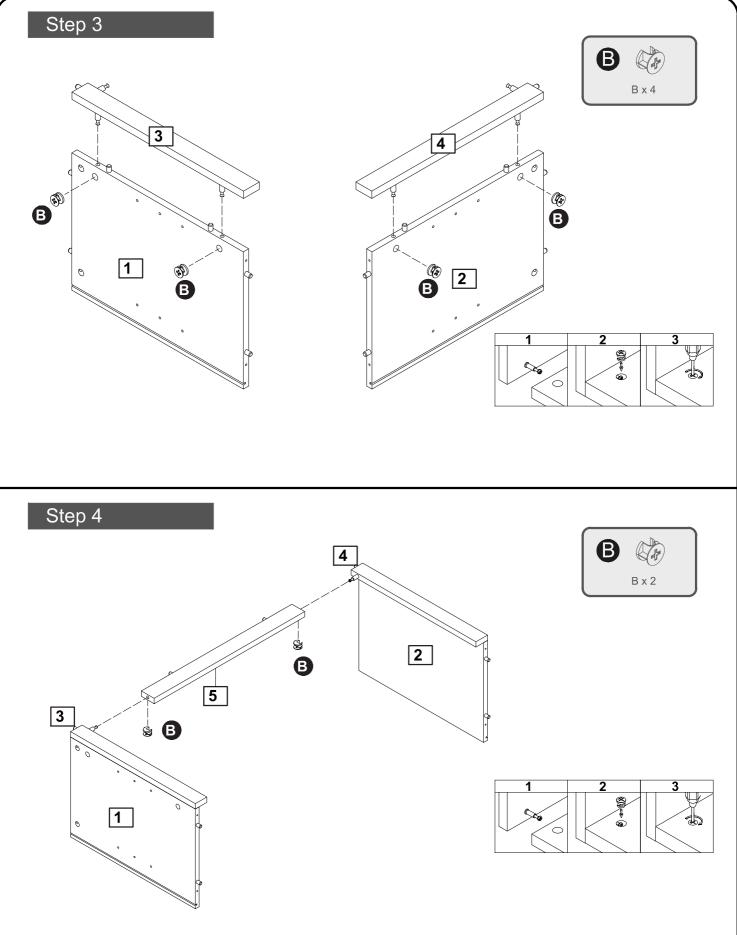


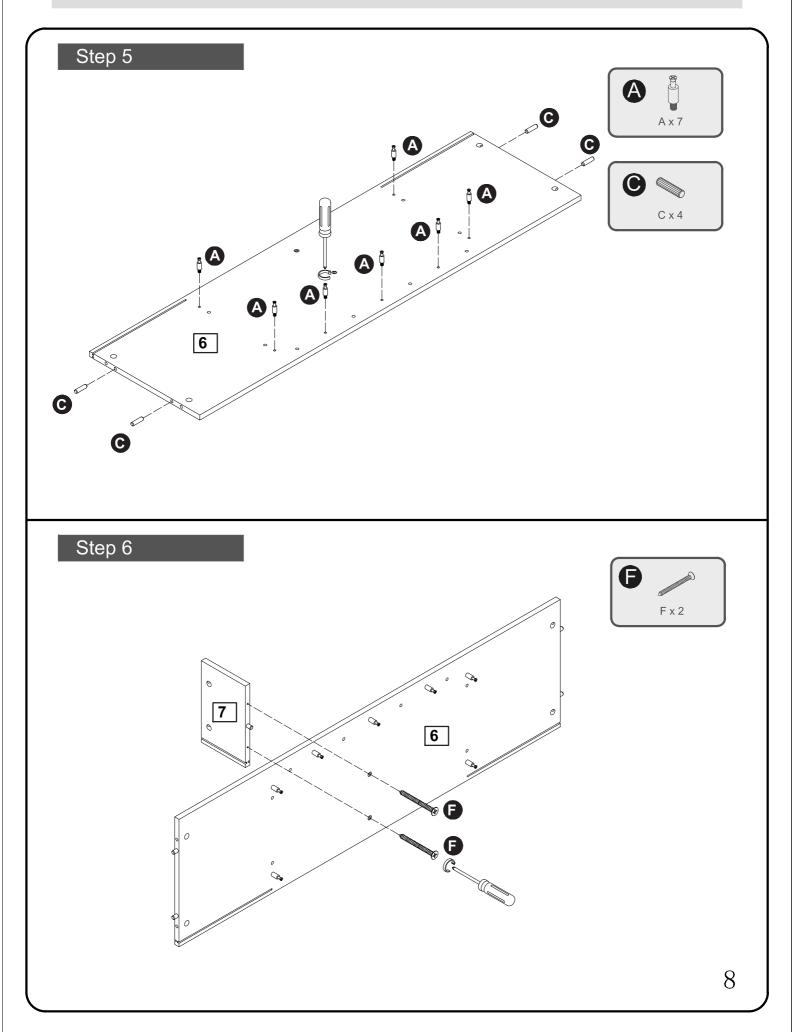


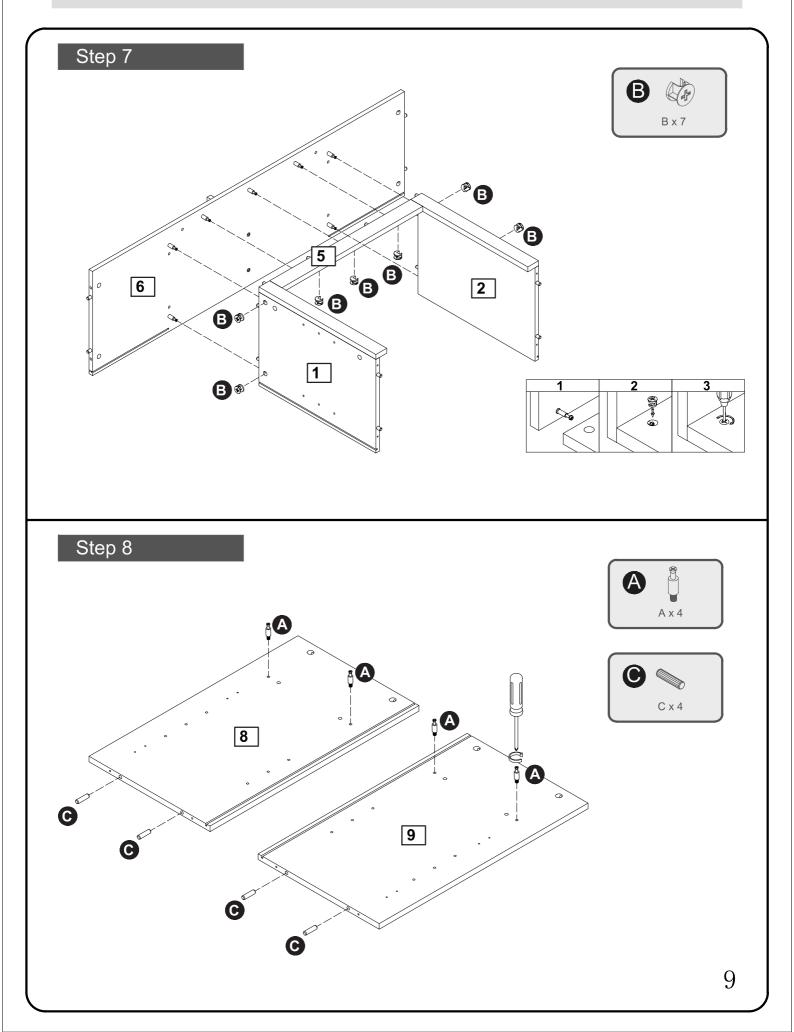


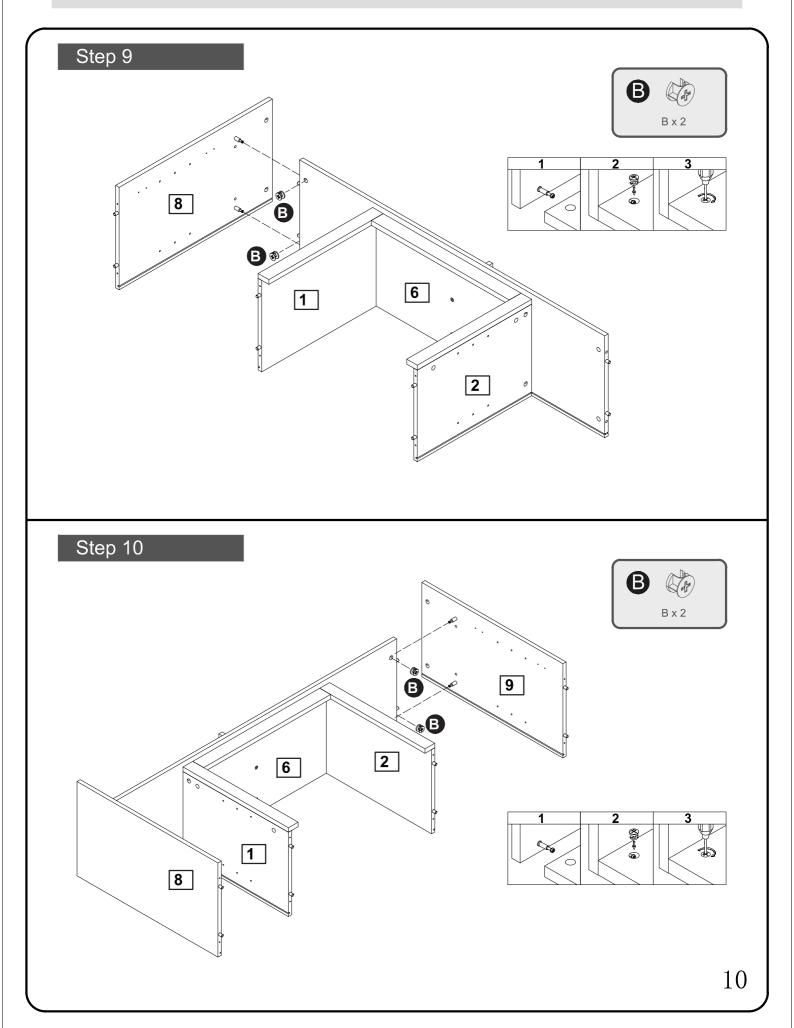


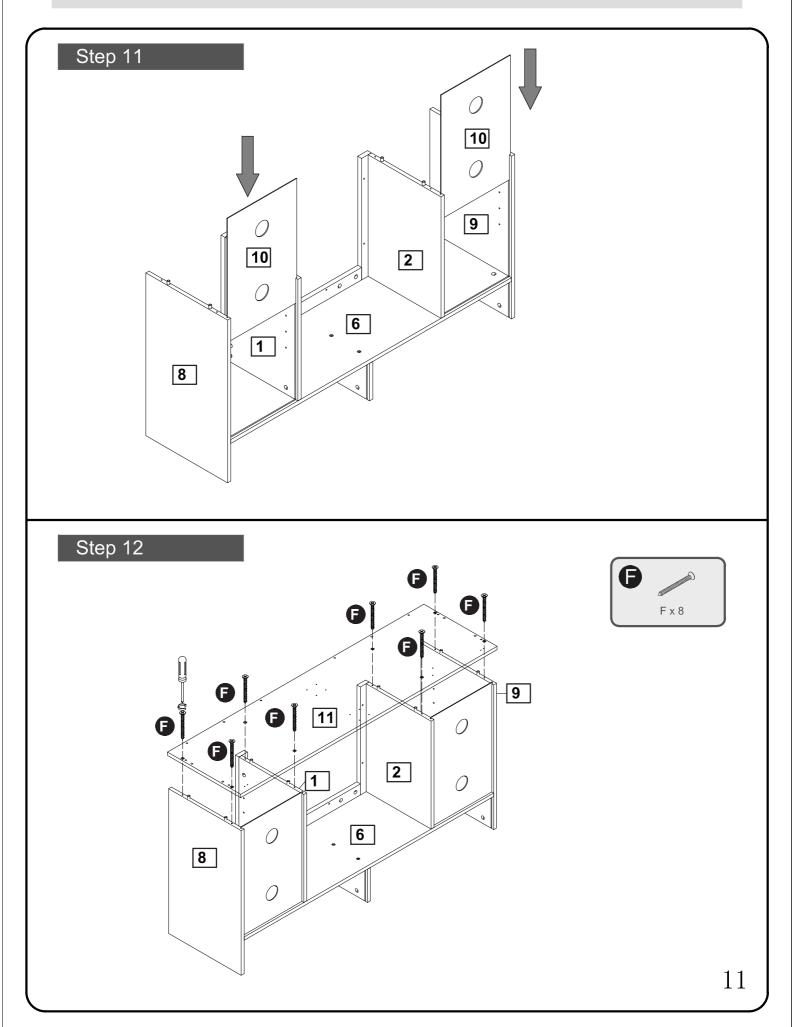


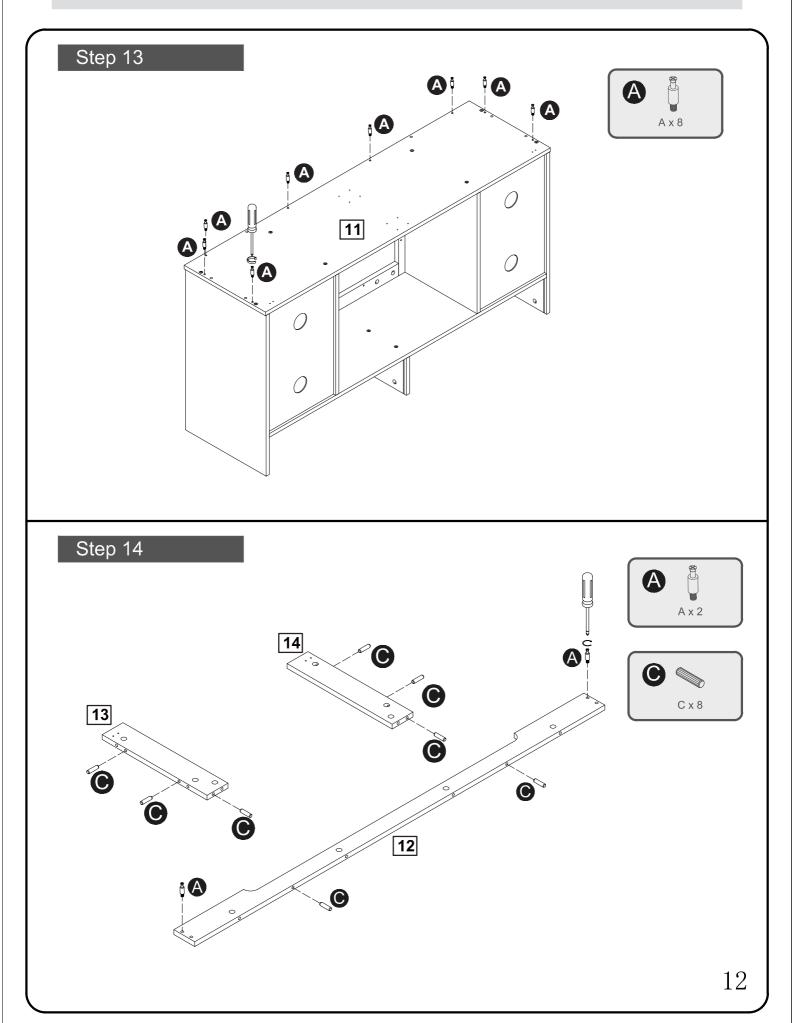


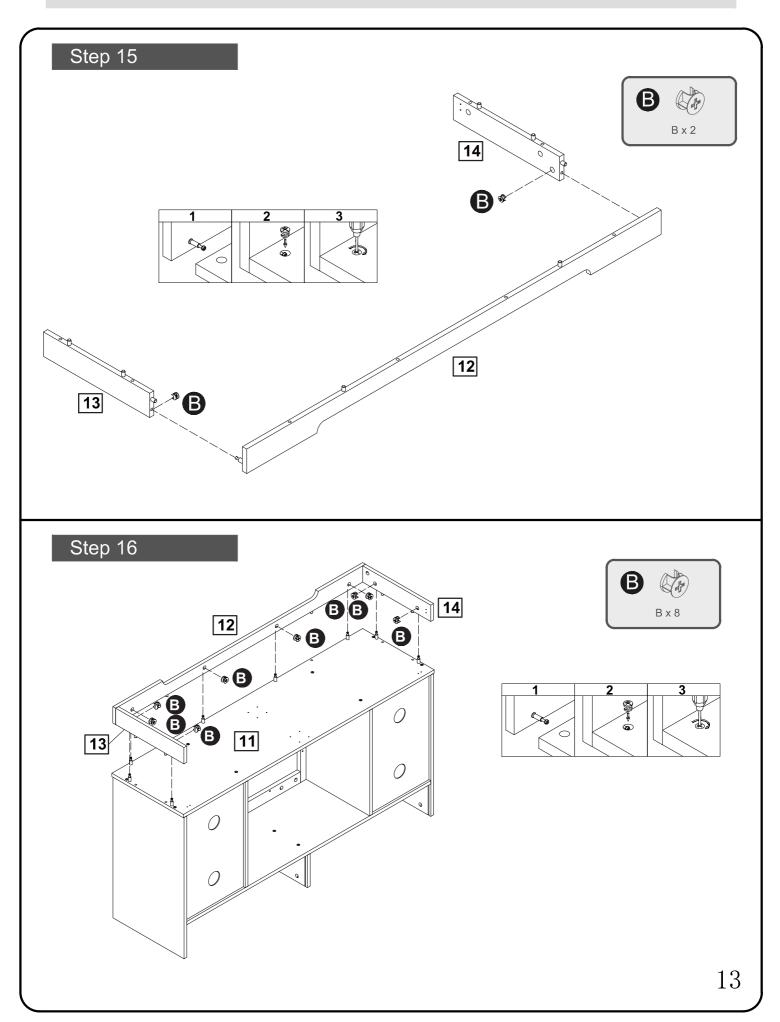


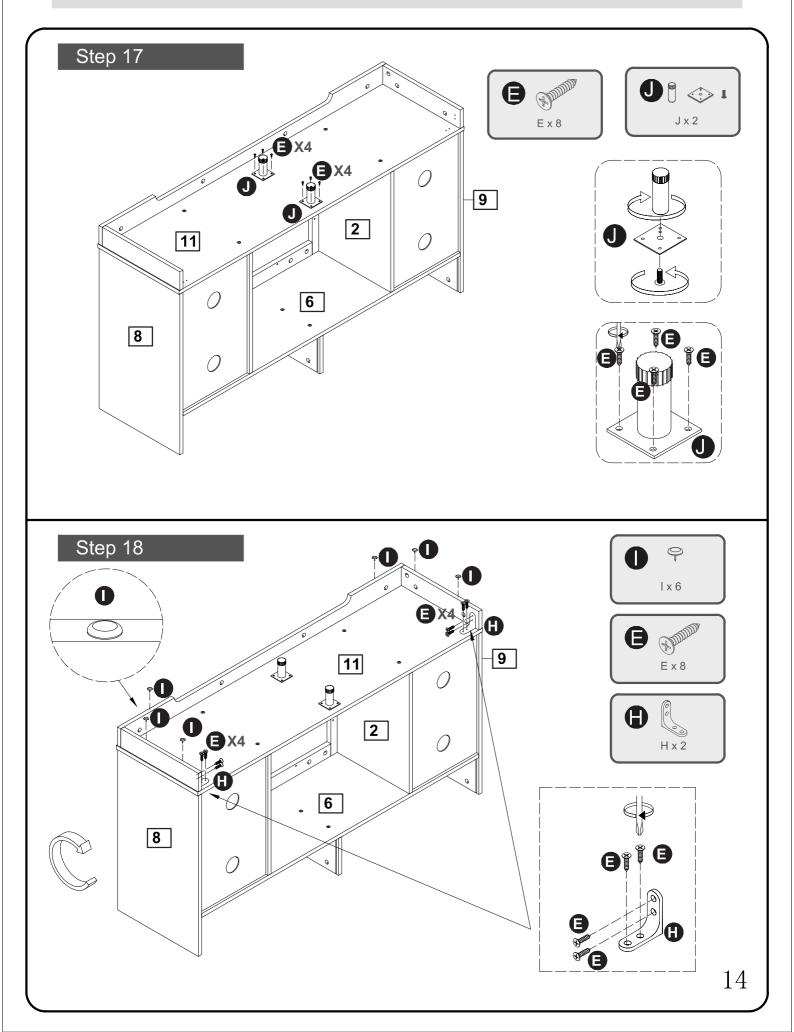


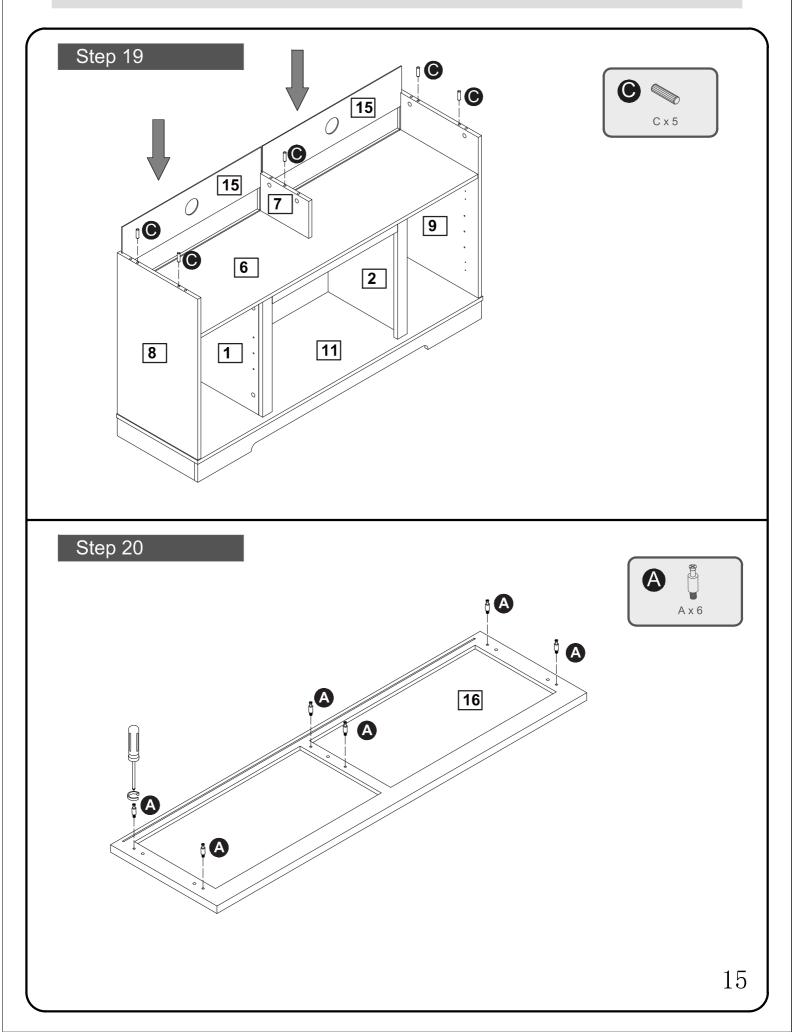

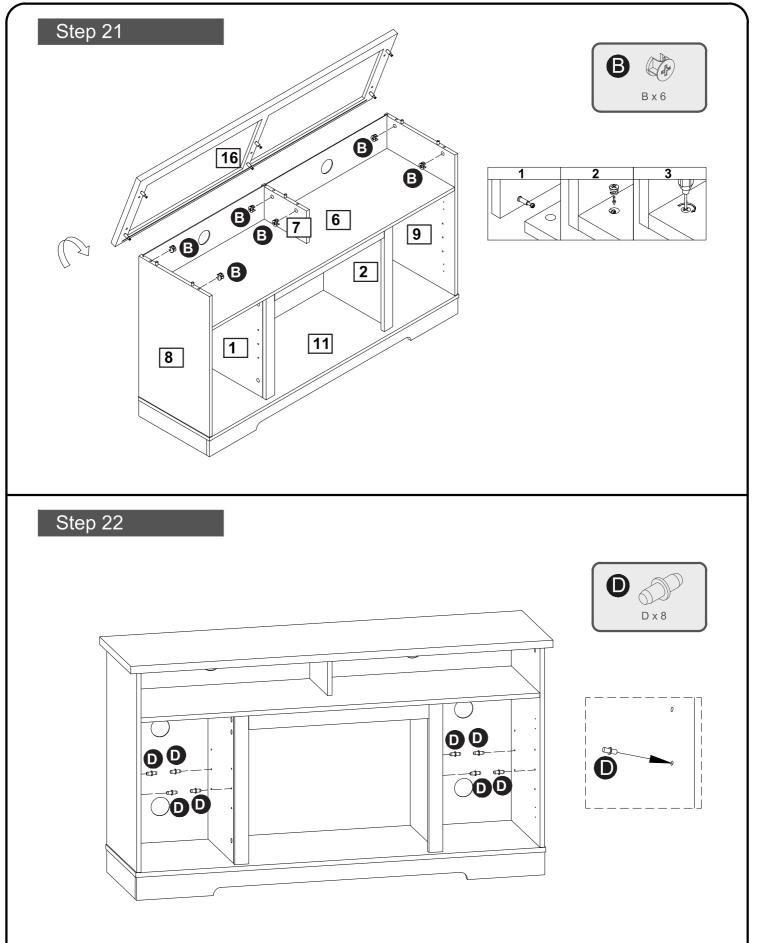


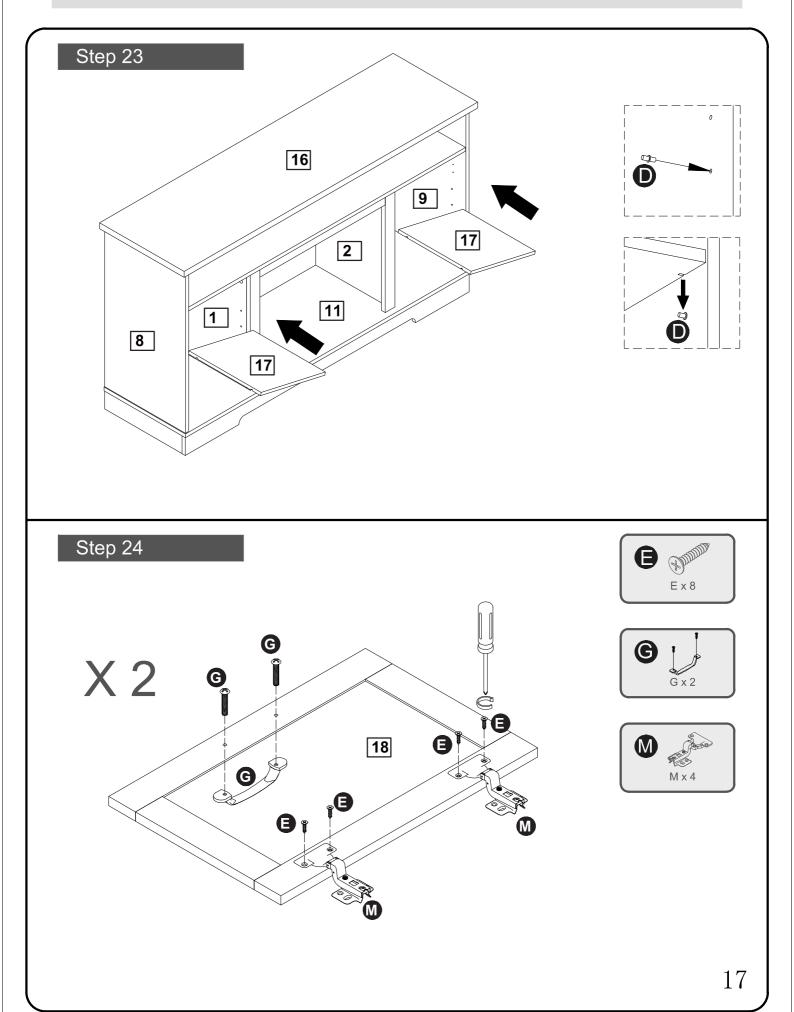

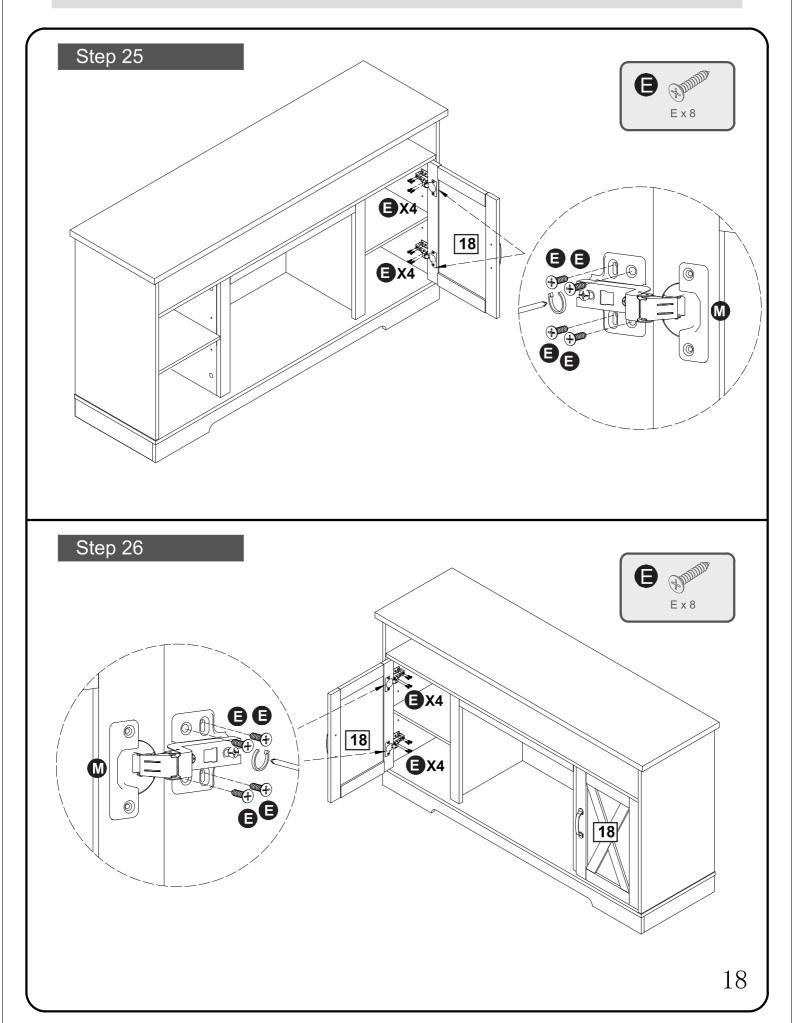

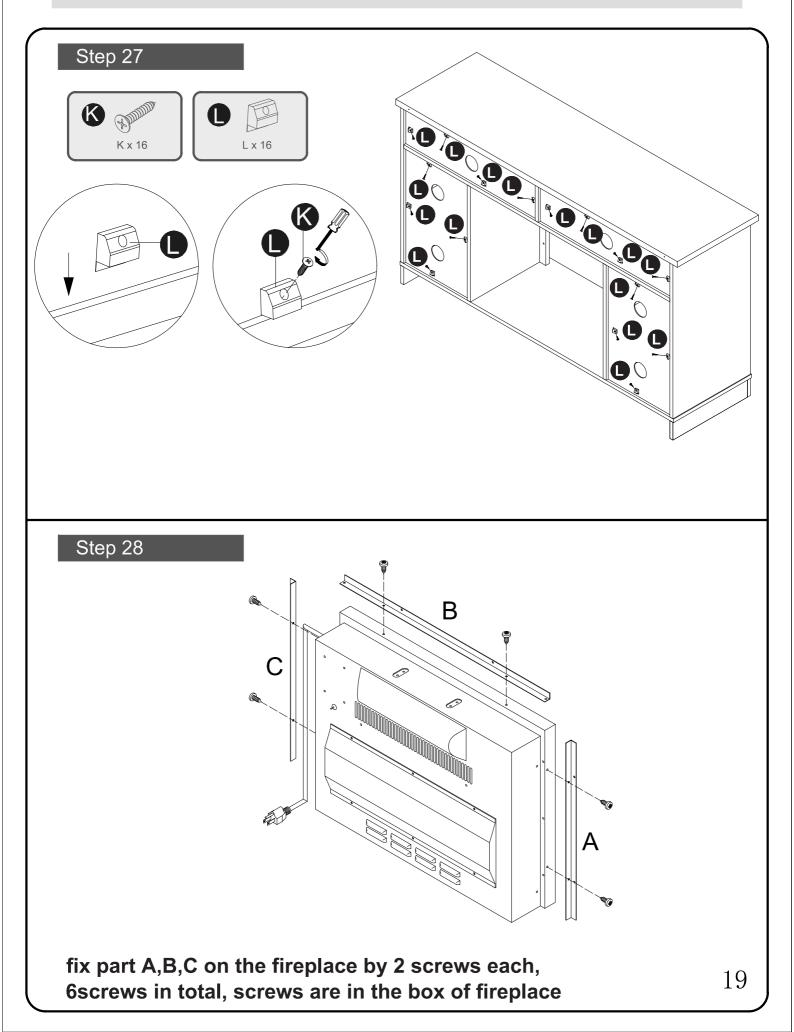



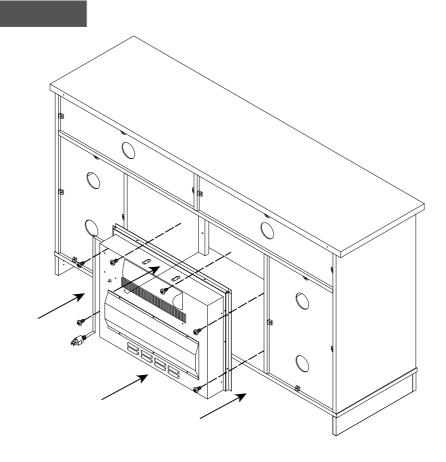

#### Step 30

The unit is floor standing, but it is recommended that the unit is secured to the wall.

1. Move the unit into desired position.

2. Mark the wall with a suitable scribe the position of the fixing holes.




Warning: Before driling,check wall for hidden pipes and cables.

3. Drill holes and insert 2 x wall plug

4. Attach 2 x Wall Straps to to the top of the unit using 2 x Washers and 2 x Screws

5. Secure the straps to the wall using 2 x Washers and 2 x Screws

Note: To hide the straps behind the unit, drill the holes lower than the top of the unit

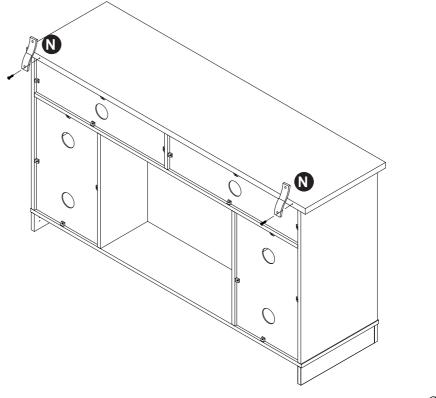

#### Step 31

The unit is floor standing, but it is recommended that the unit is secured to the wall.

**1.** Move the unit into desired position.

2. Mark the wall with a suitable scribe the position of the fixing holes.



Warning: Before driling,check wall for hidden pipes and cables.


3. Drill holes and insert 2 x wall plug


4. Attach 2 x Wall Straps to to the top of the unit using 2 x Washers and 2 x Screws

5. Secure the straps to the wall using 2 x Washers and 2 x Screws

Note: To hide the straps behind the unit, drill the holes lower than the top of the unit

#### Step 32

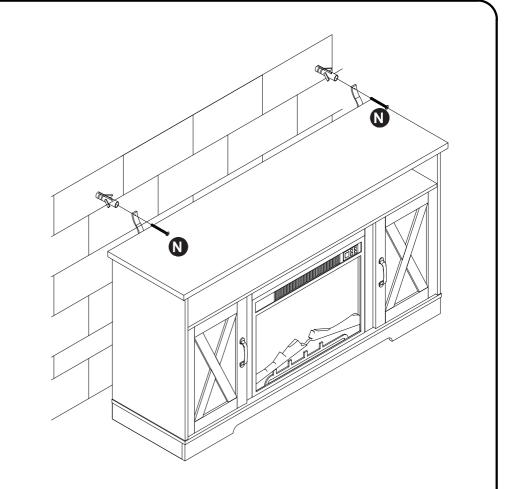

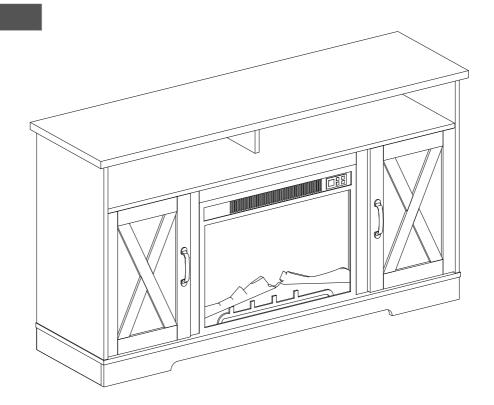

#### A Guide to Wall Mounting & Fixings

