
CABINET

Assembly Instructions - Please keep for future reference



A NOTE:

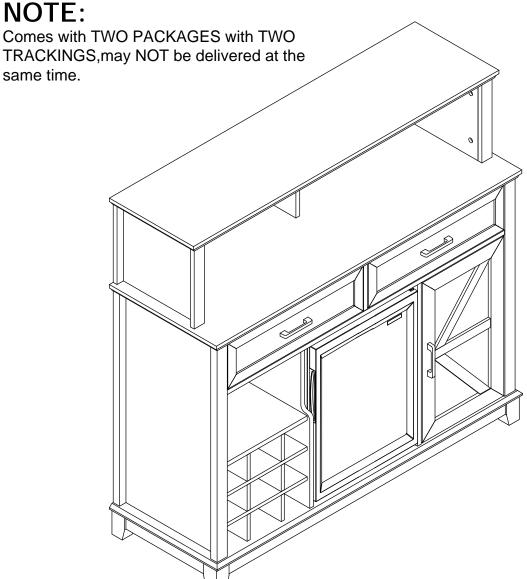

Dimensions

Width - 47.2inch

Depth - 16.5inch

Height - 45inch

Any question please feel free to contact us: support@amer-life.com TEL:(901) 347-2181. We will provide further assistance within 24 hours.

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
 Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)

Do not allow children to climb or hang on the furniture

Do not open more than one drawer at a time

Do not place heavy items in the top drawers

Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A	B	©
Cam Bolt x 72	Cam Lock x 72	6*30mm Wooden Dowel x 86
		6
3.5*14mm Screw x 38	5*40mm Screw x 14	Door Stopper x 1
G	•	•
Back Panel Stiffener x 12	6*50mm Wooden Dowel x 8	Protective Foot x 4
0 %	(K)	
Shelf Support Pin x 4	Adjustable Foot(Hx85mm) x 1	4*14mm Screw x 4
M		0
Hinge x 2	Handle & Fixings x 1	Wall Fixing Pack x 2
P Stemware Rack x 2	Q Reversible Screwdriver x 1	R Drawer Slide x 2
5*50mm Screw x 6	Handle & Fixings x 2	

 Tools required



Phillips screwdriver (medium & large)

Ruler - Use this ruler to help correctly identify the screws


0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

The screws length is measured from the head to the point (30mm screw shown).

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

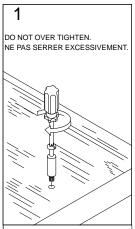

Step 2

Push the male camlock into the entry hole.

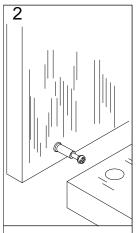

Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.



Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.




Components - Panels

Please check you have all the panels listed below

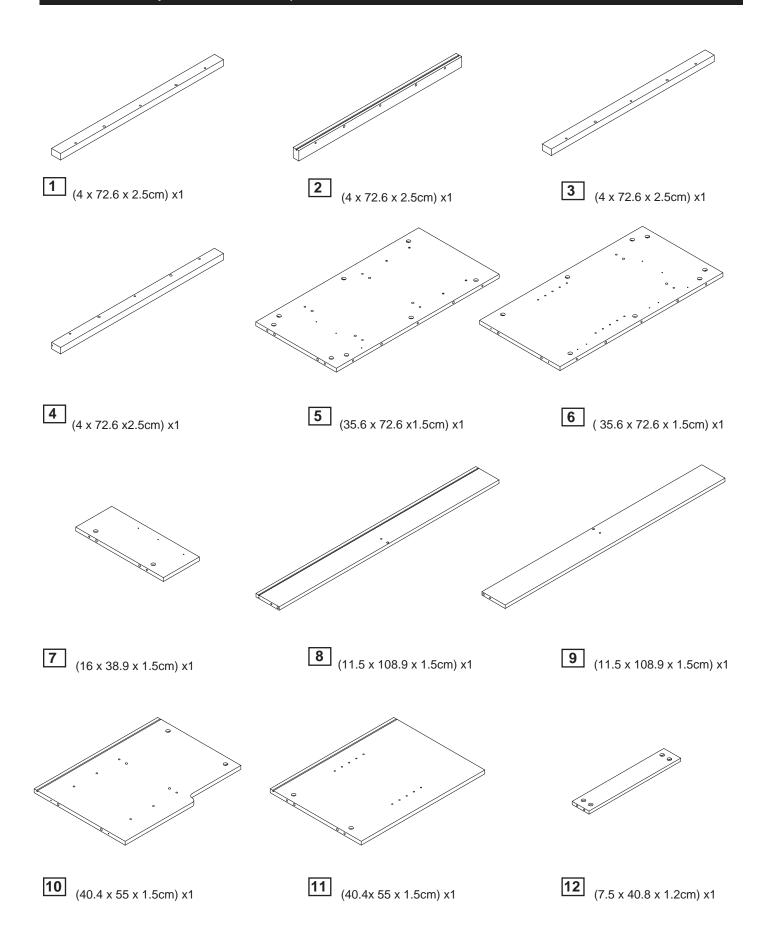


Components - Panels

Please check you have all the panels listed below

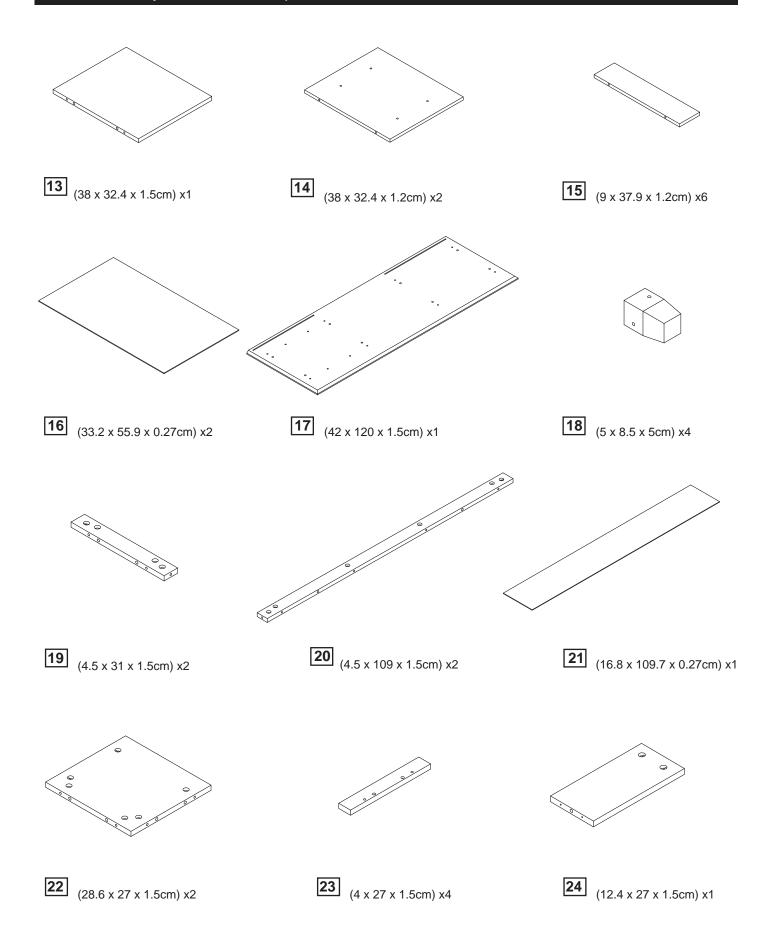


Components - Panels

Please check you have all the panels listed below

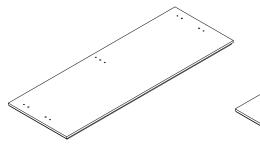




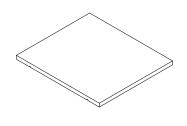

25 (42 x 120 x 2.4cm) x1

(33 x 120 x 2.4cm) x1

(37 x 32.3 x 1.5cm) x1

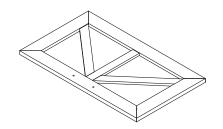








(31.8 x 54.4 x1.5cm) x1

(9.5 x 33 x1.2cm) x2

 30 (9.5 x 33 x 1.2cm) x2



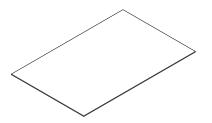


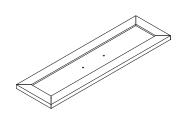



(9.5 x 48.8 x 1.2cm) x2


(32.5 x 49.6 x 0.27cm) x2


(15.4 x 53.1 x 1.5cm) x2

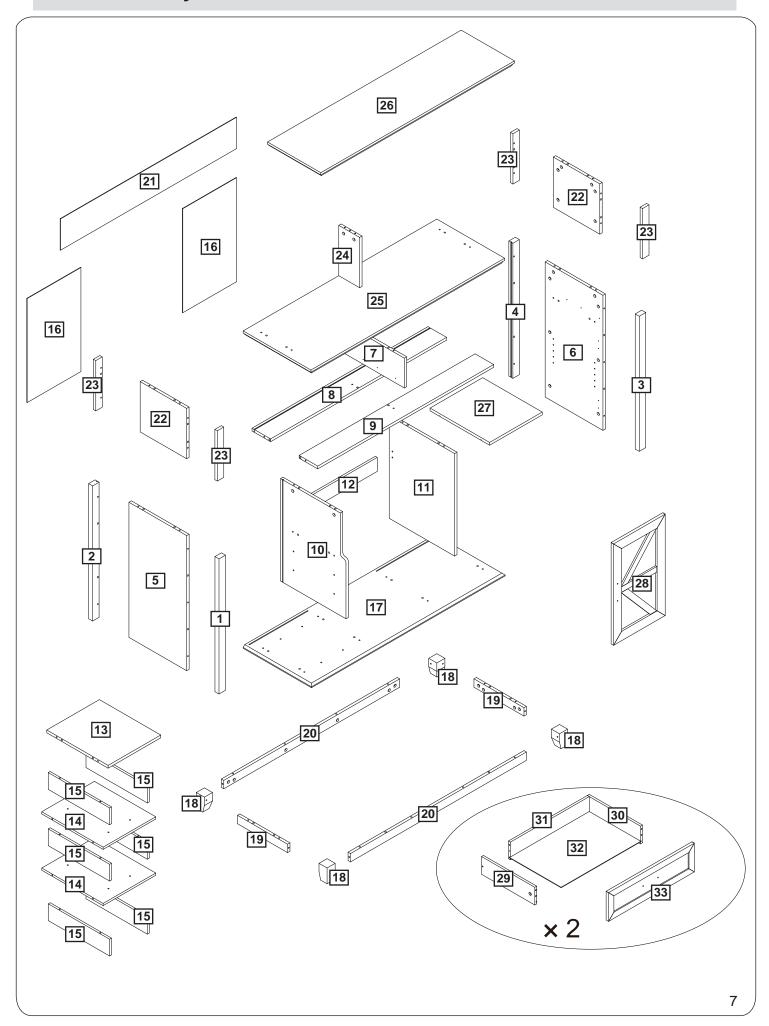


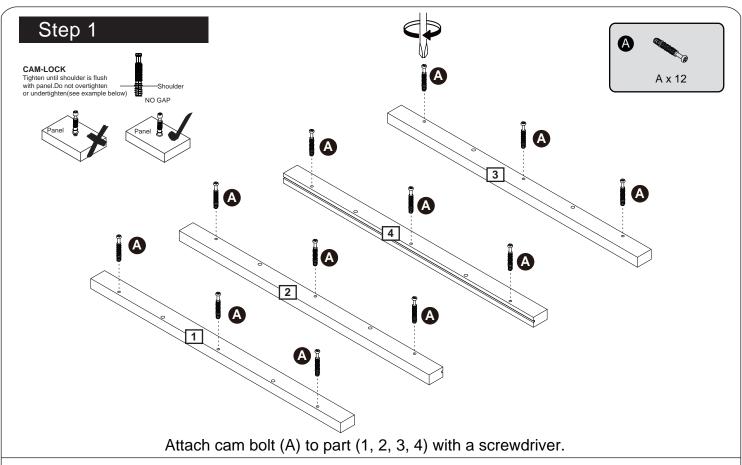

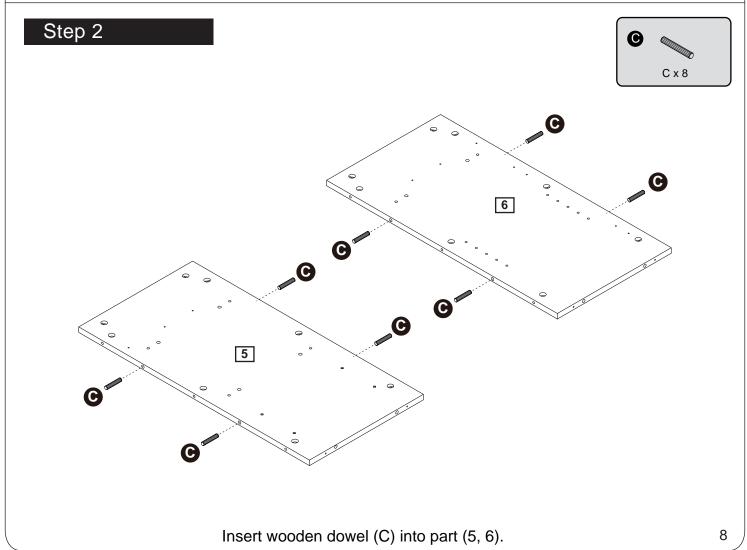


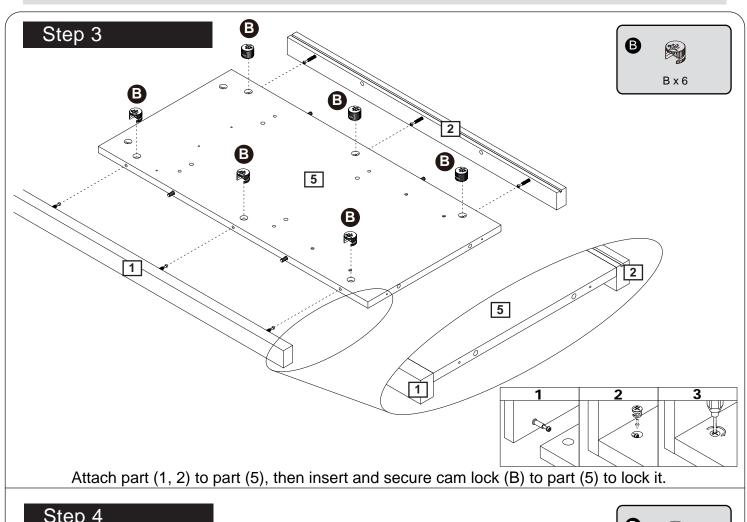


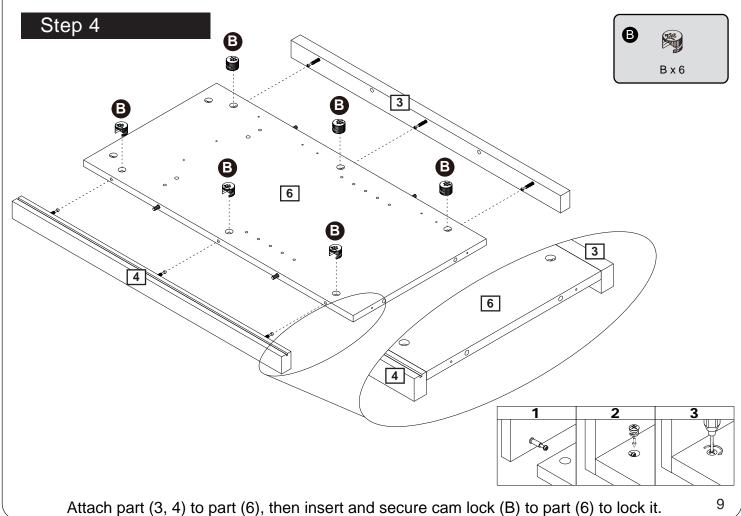


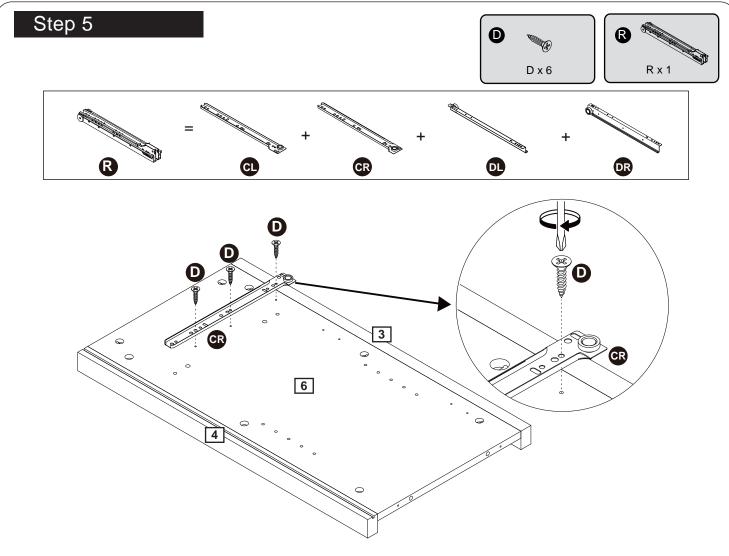



Use screw (D) to secure slide track (CR) to part (6) with a screwdriver.

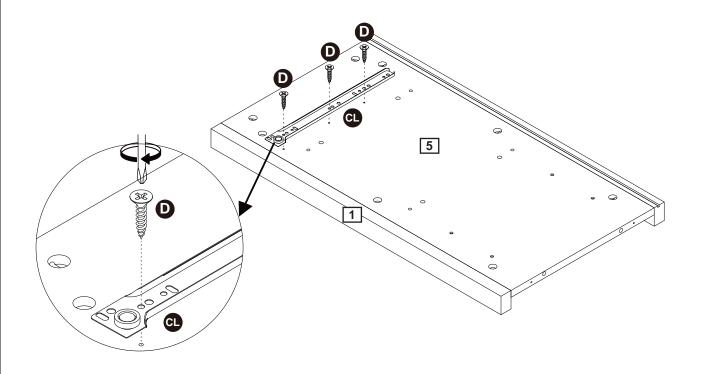


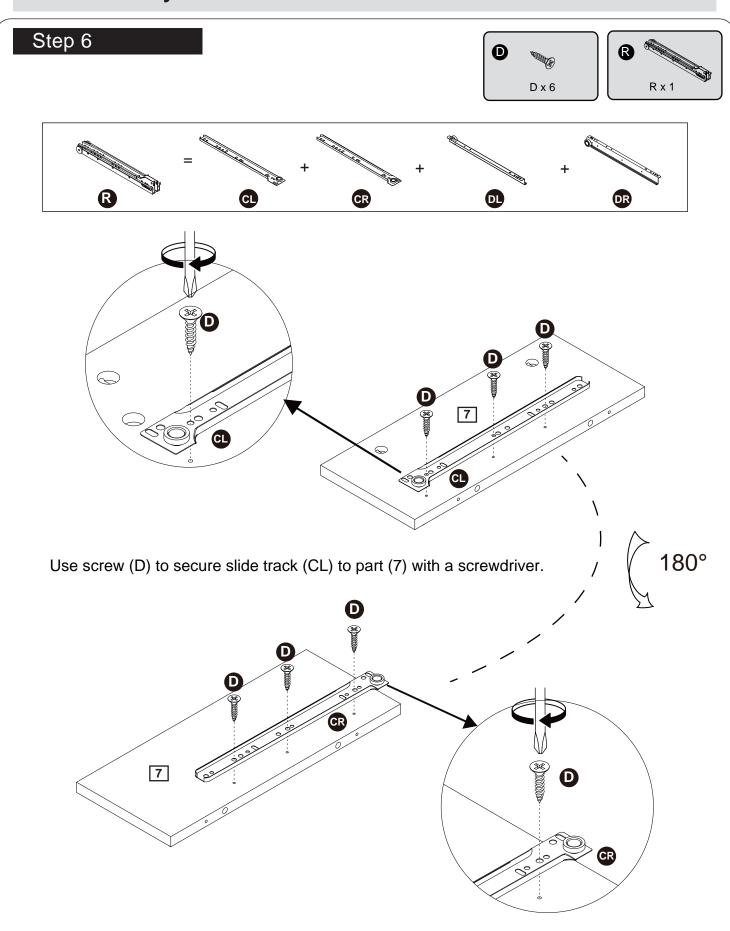


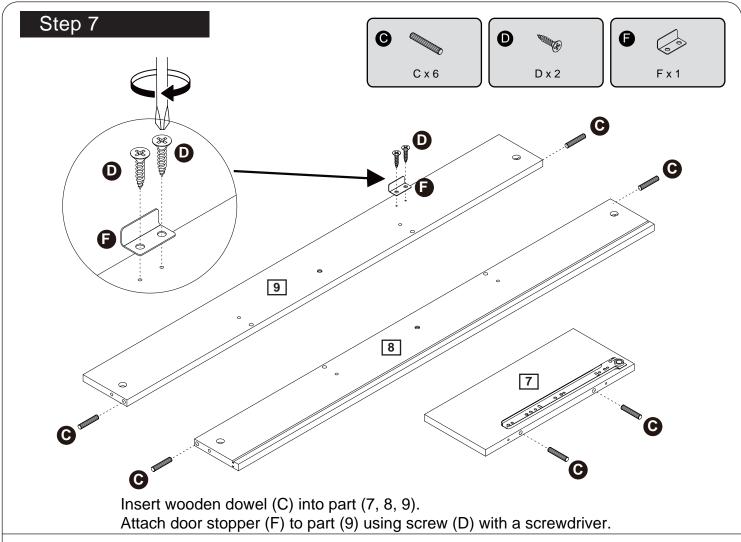


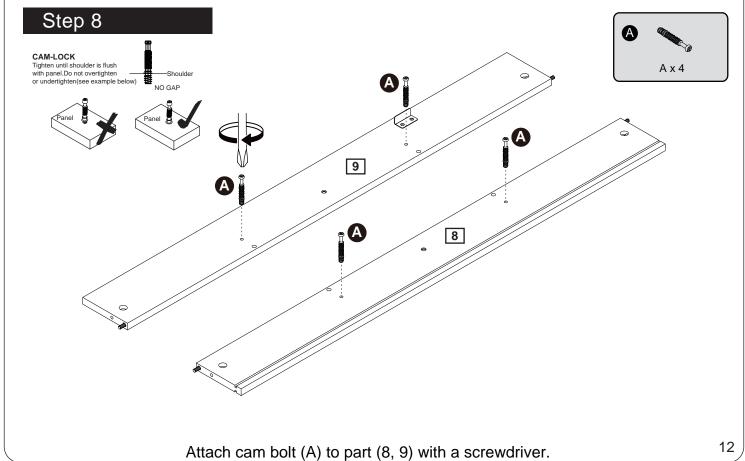

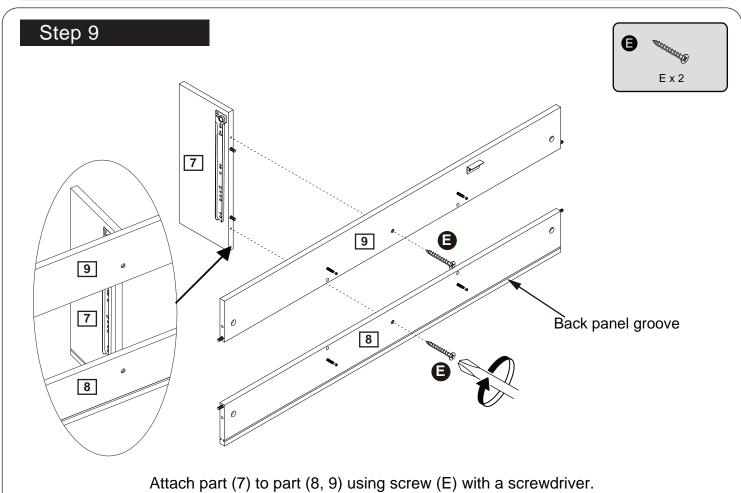


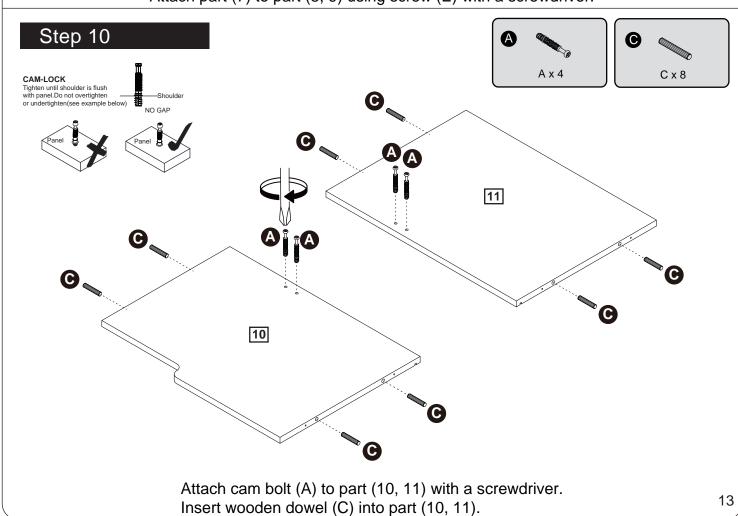


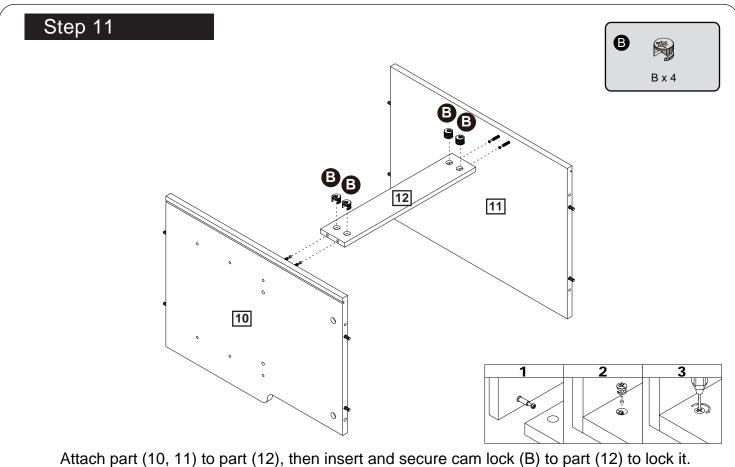

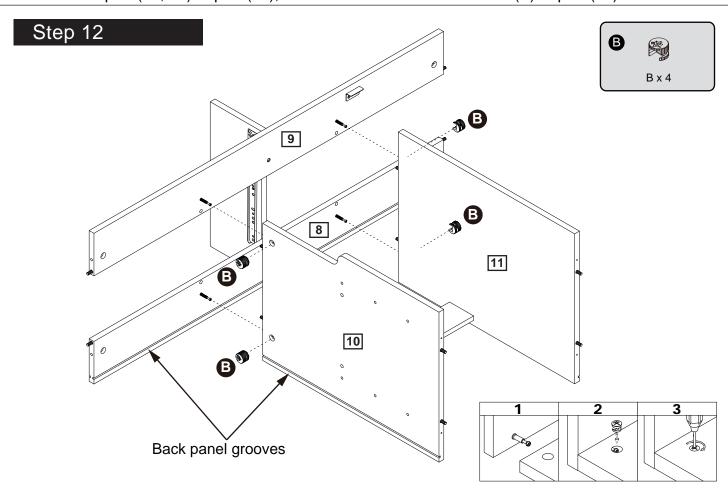



Attach part (10, 11) to part (8, 9), then insert and secure cam lock (B) to part (10, 11) to lock it. 14

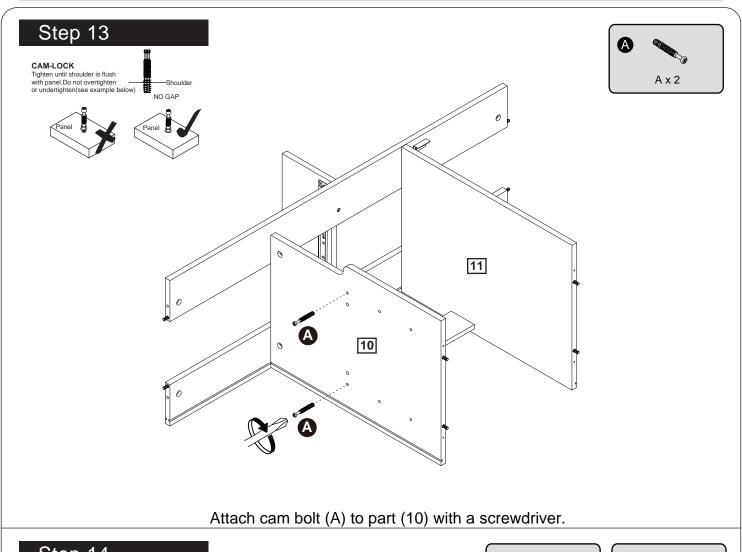

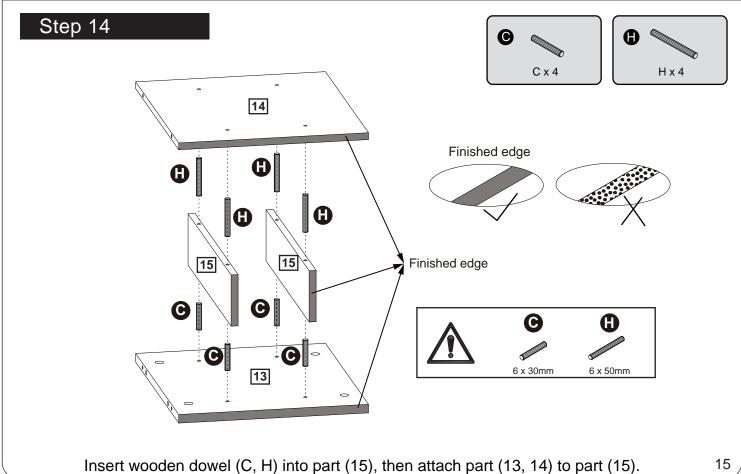


 
Step 15

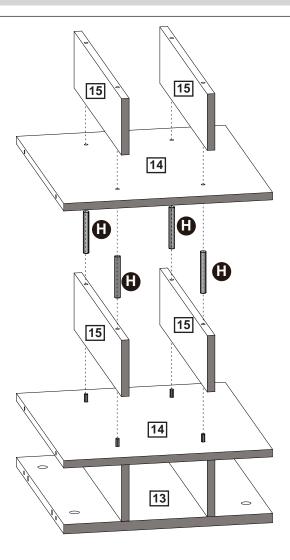





 
Insert wooden dowel (H) into part (15), and connect part (14) and (15) as per diagram.

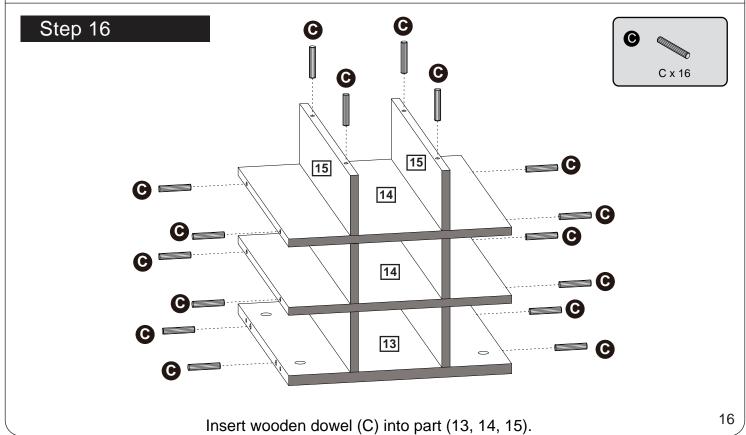


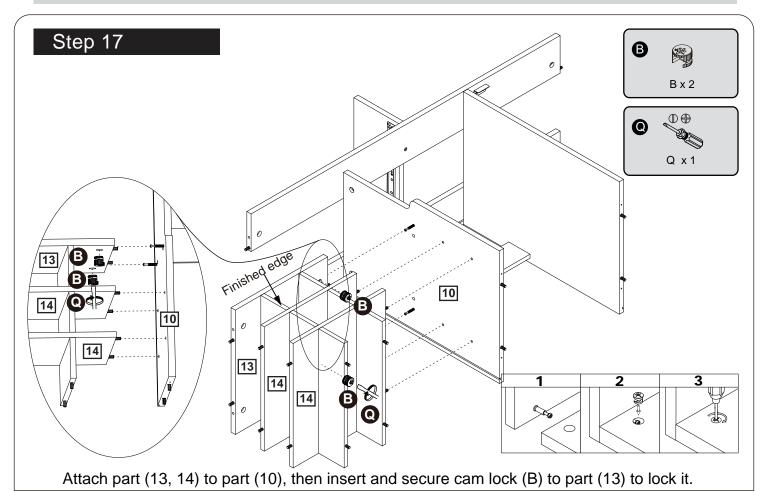


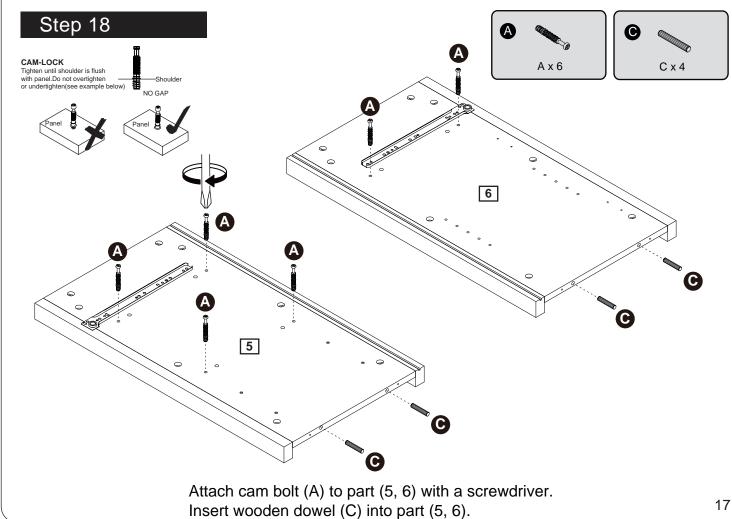


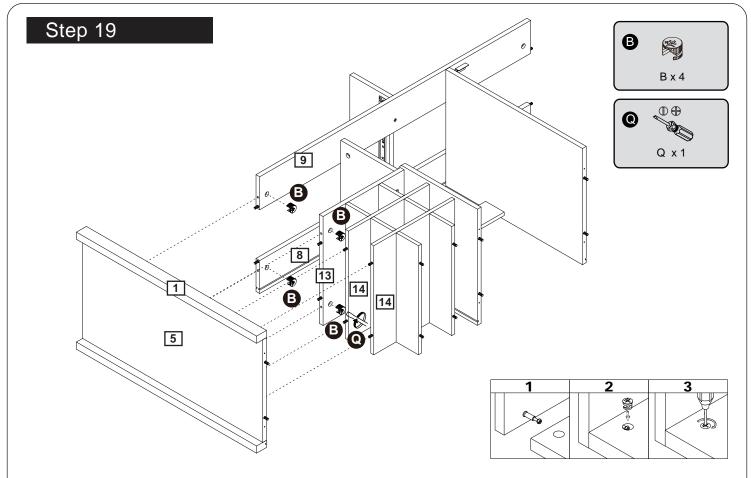





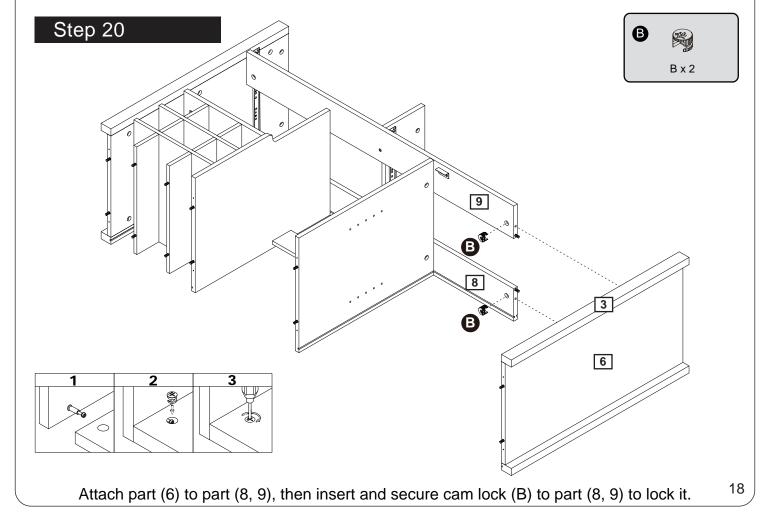


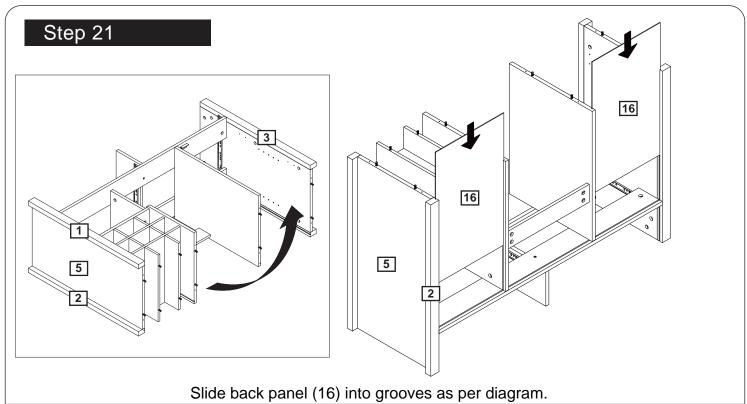

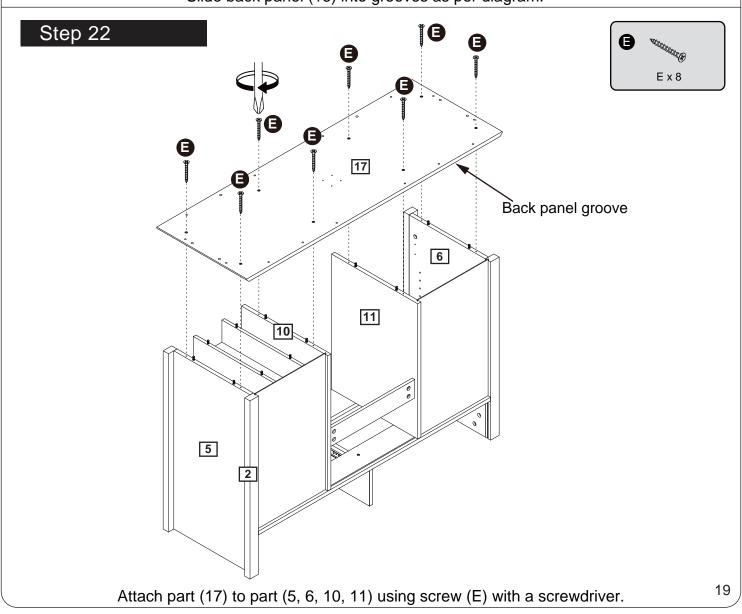


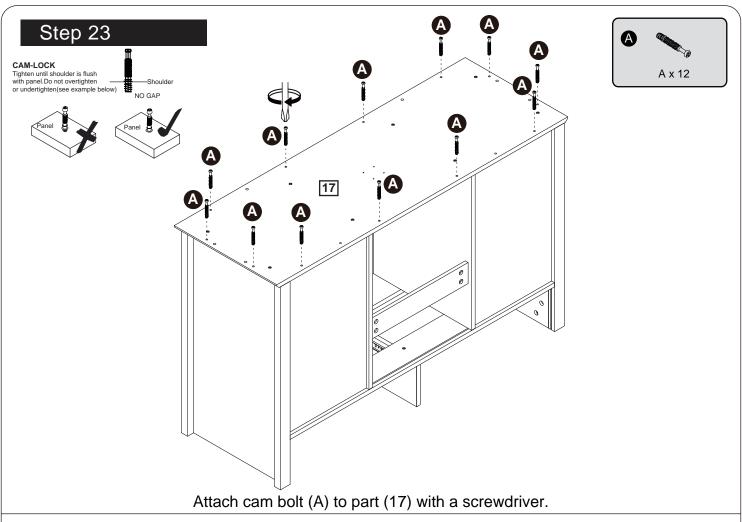


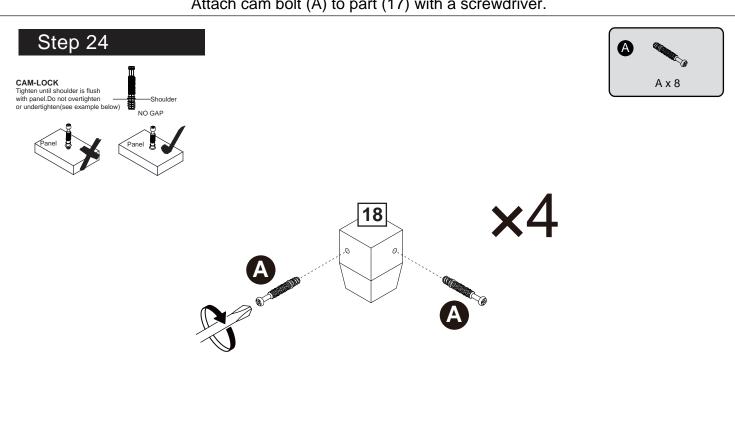

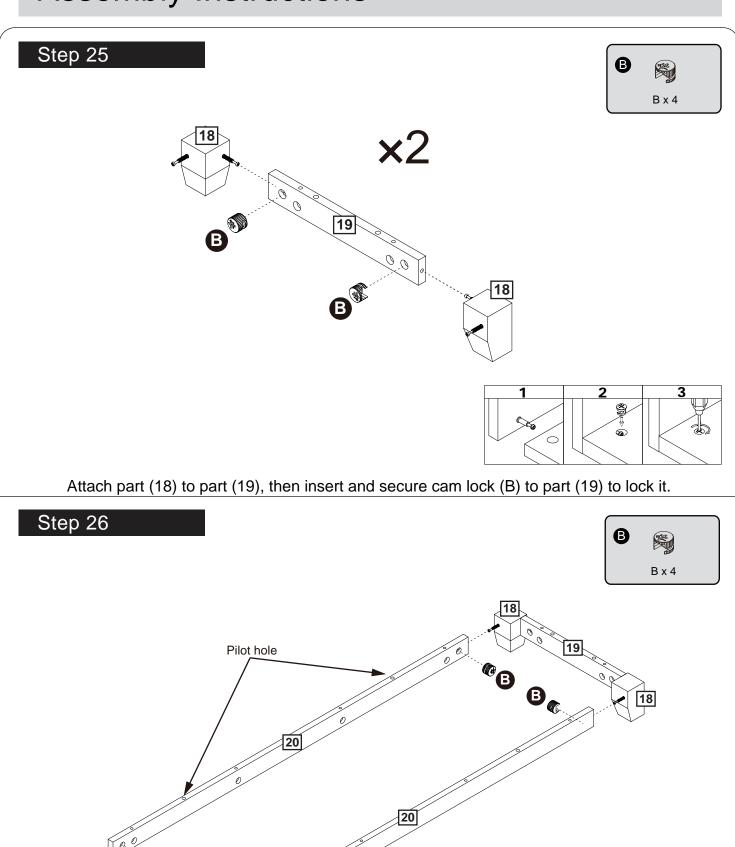



Attach part (18) to part (20), then insert and secure cam lock (B) to part (20) to lock it.

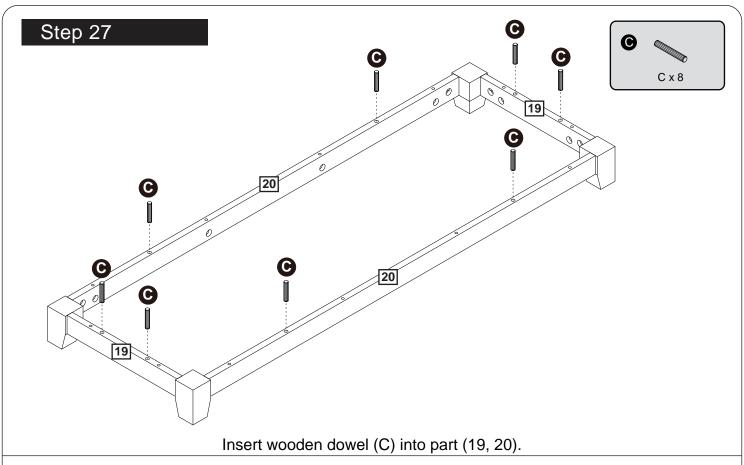


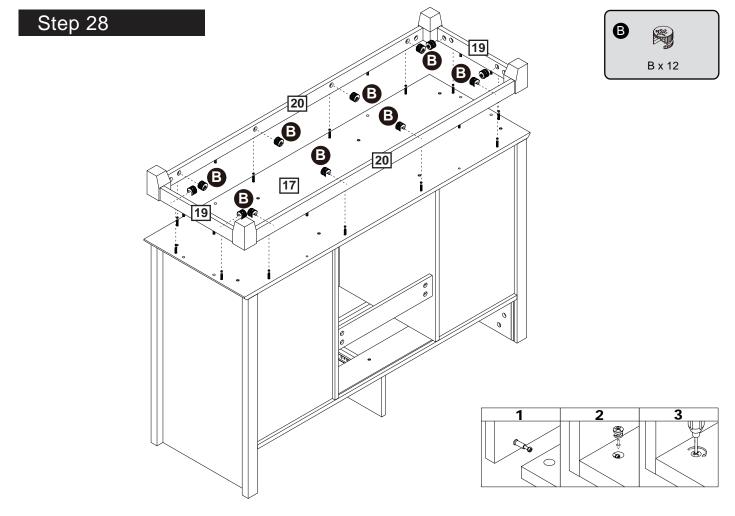



Attach part (19, 20) to part (17), then insert and secure cam lock (B) to part (19, 20) to lock it.

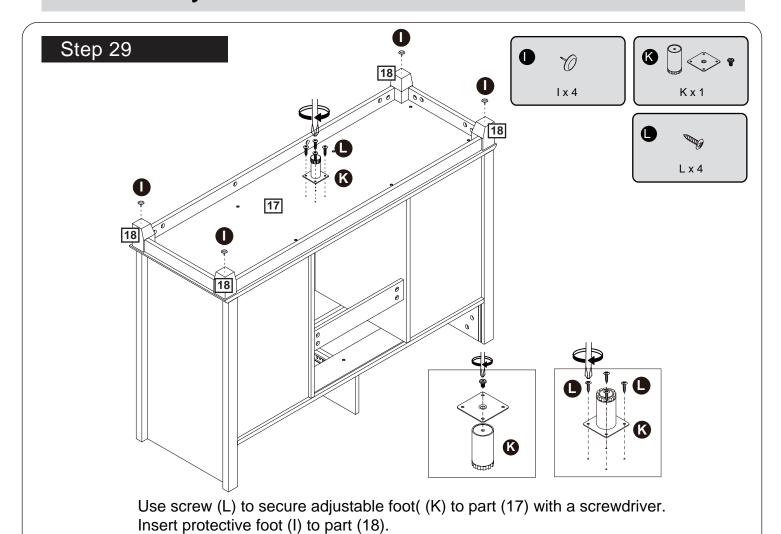


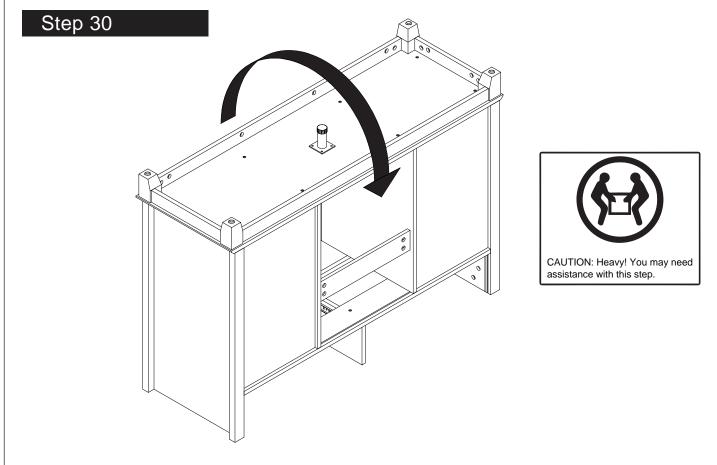


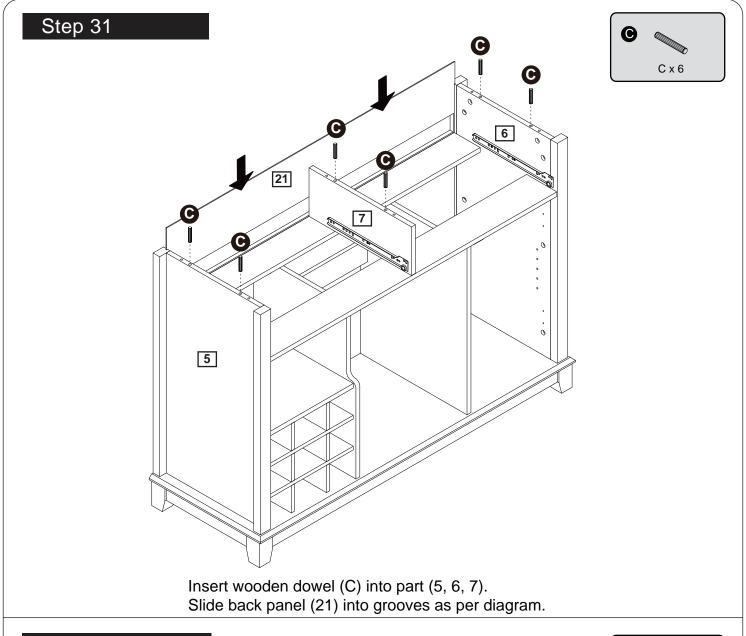


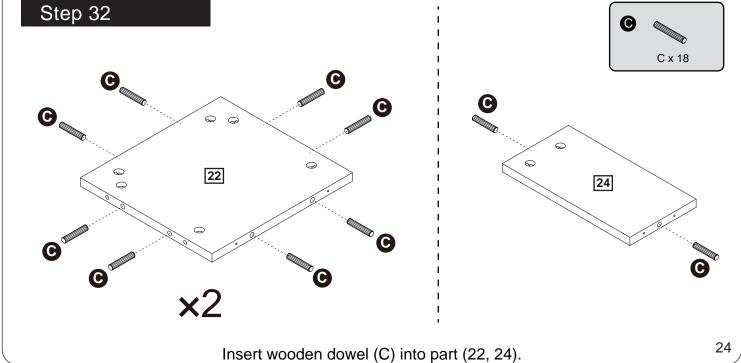


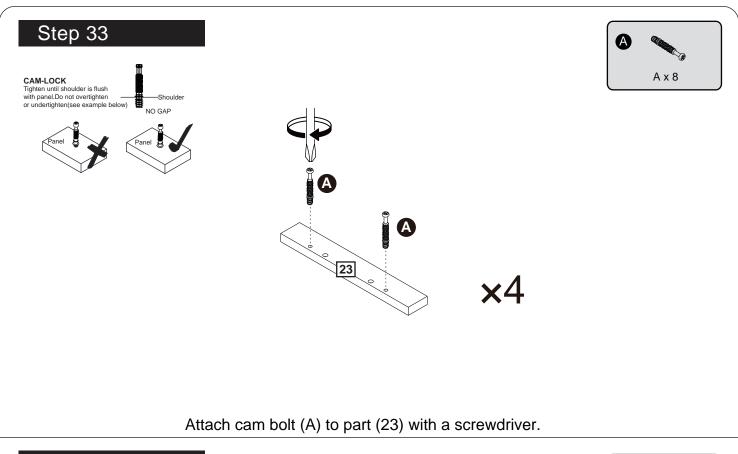


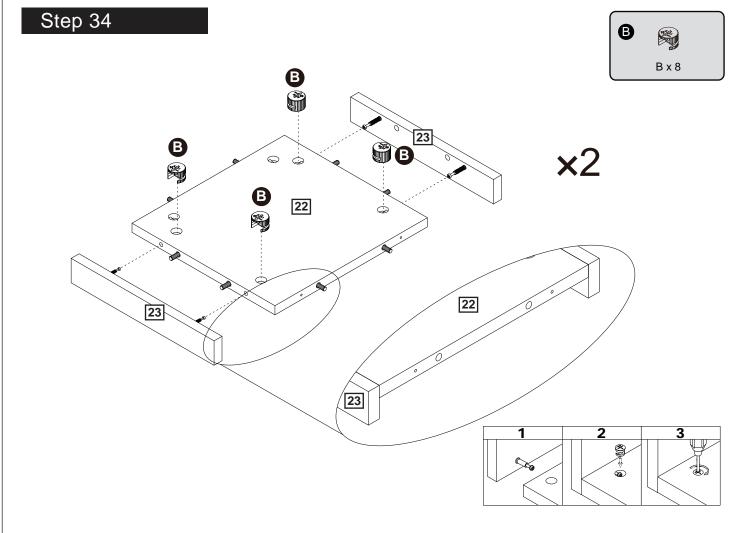


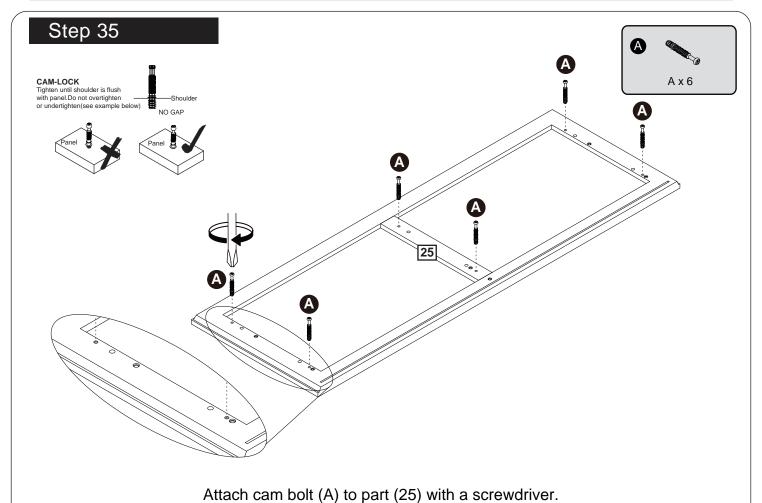


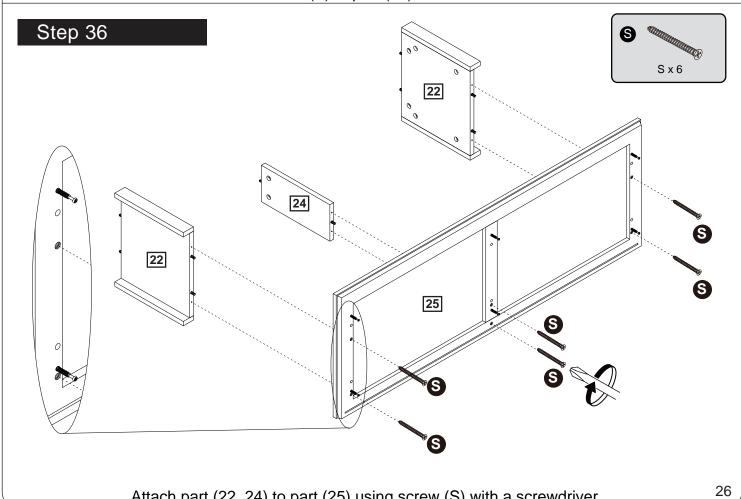

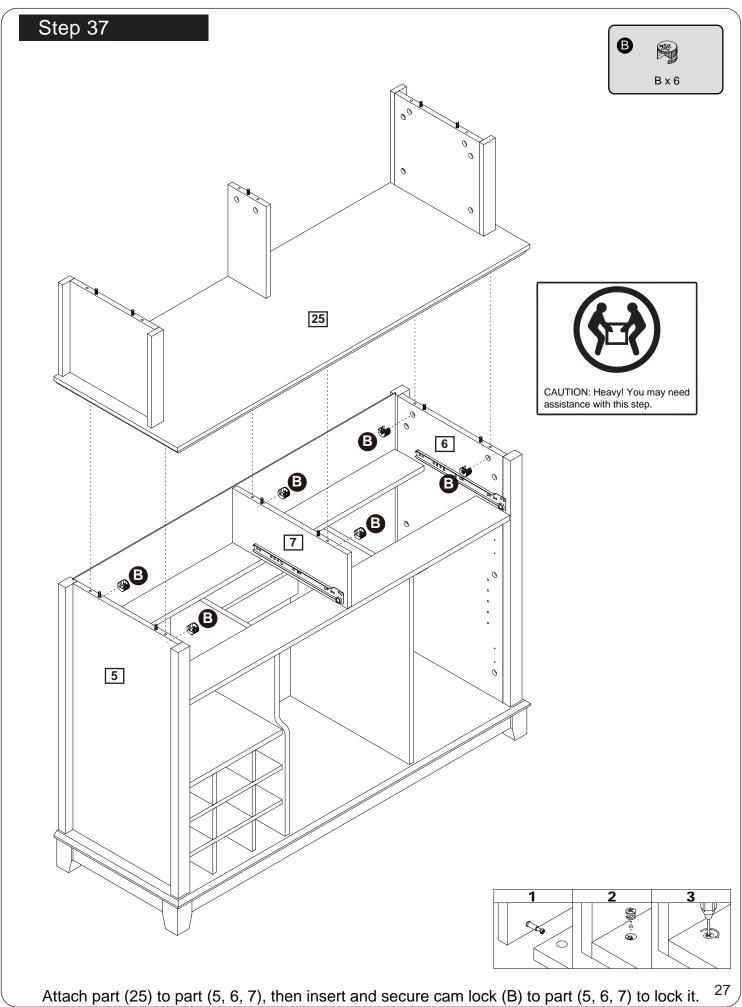


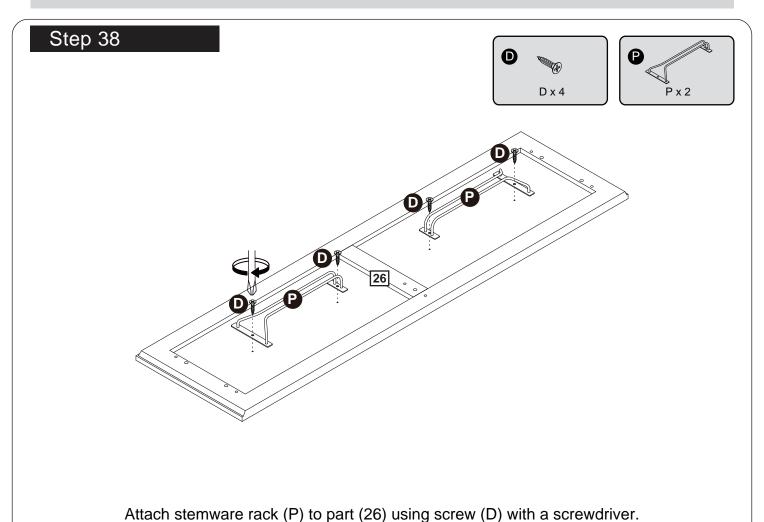


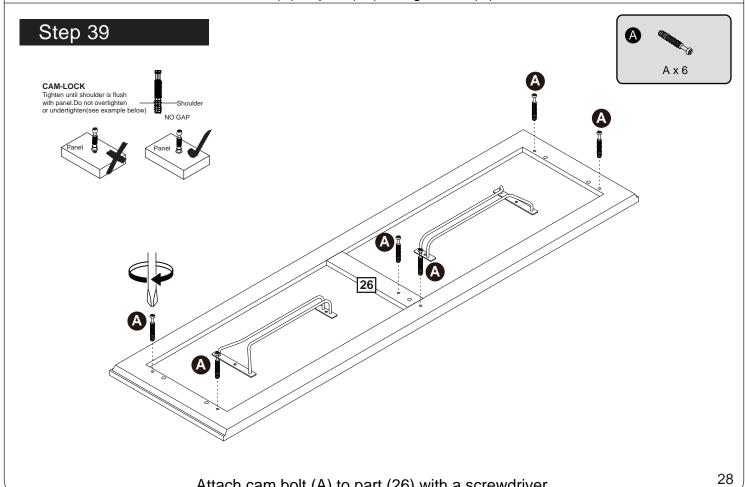


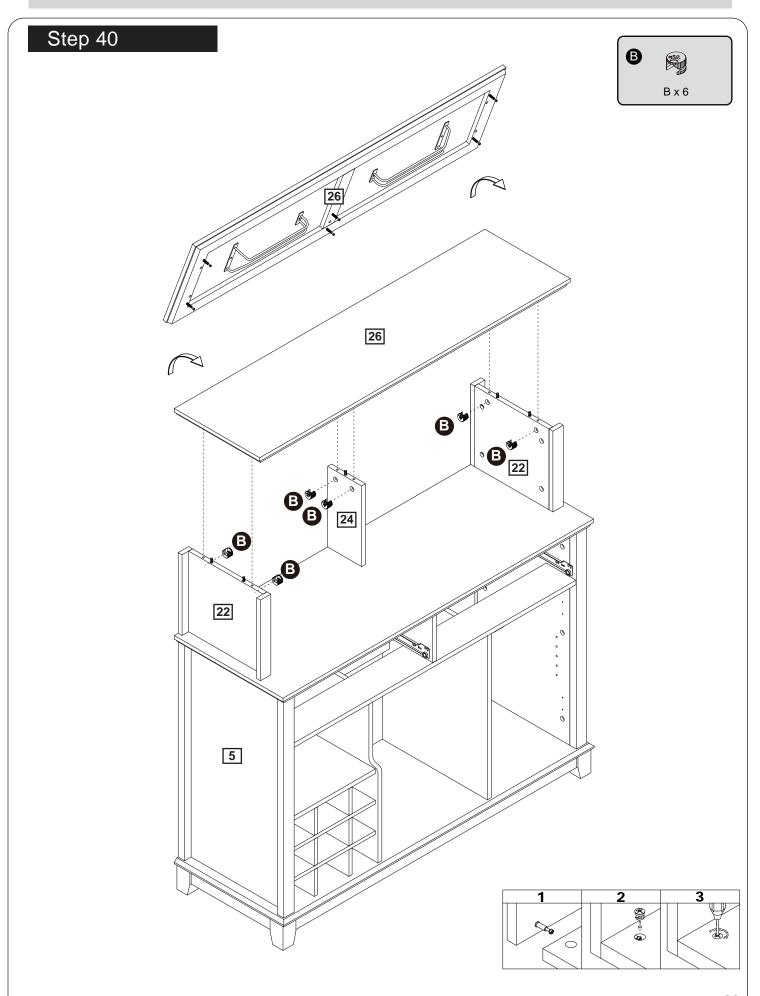



support pin.

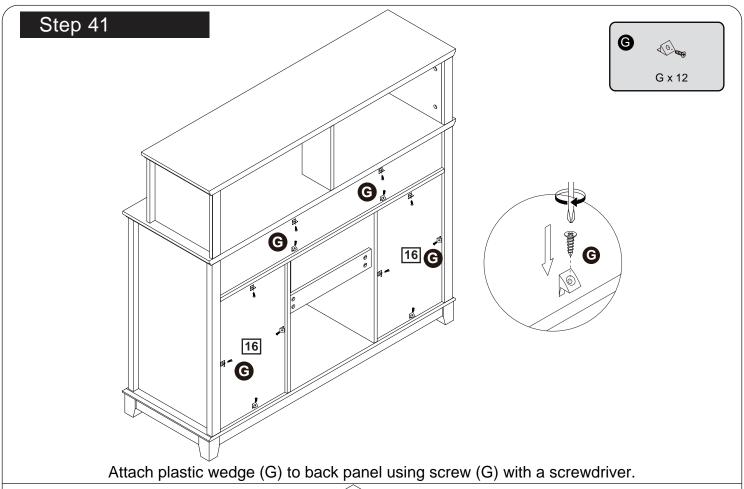


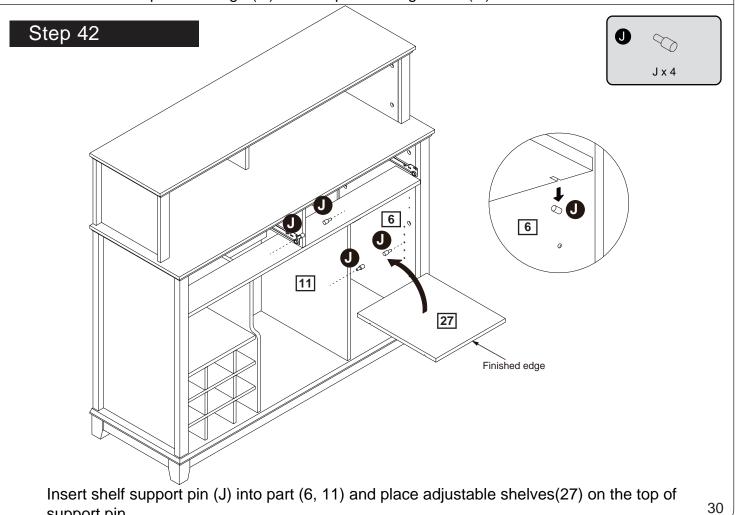

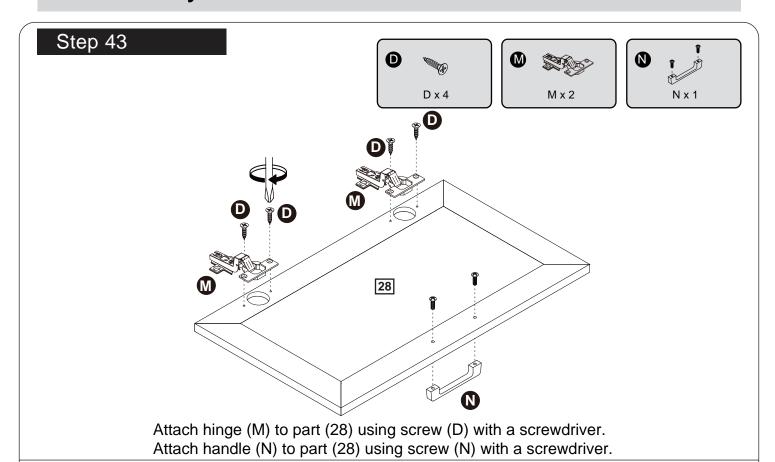

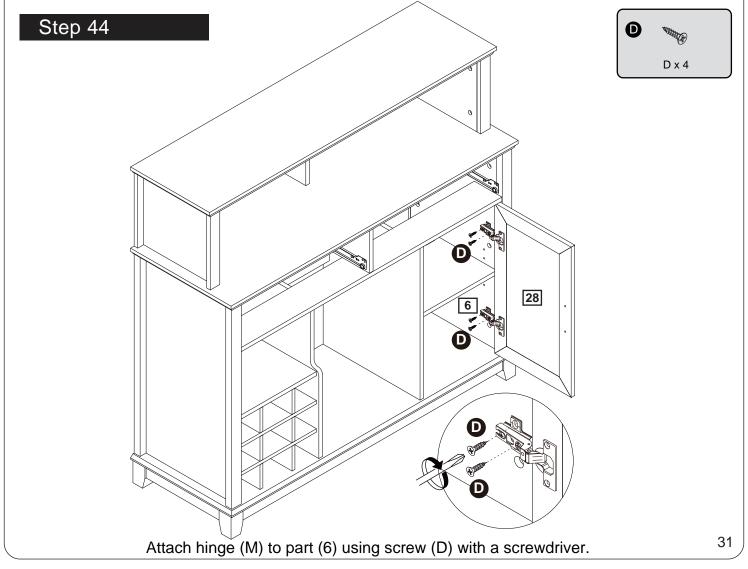


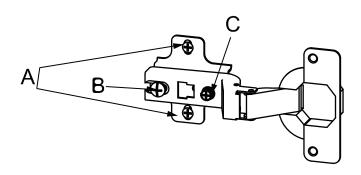

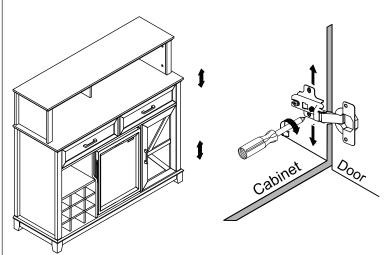


To adjust the vertical height.

Loosen the two screws "A" on both hinges. They are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

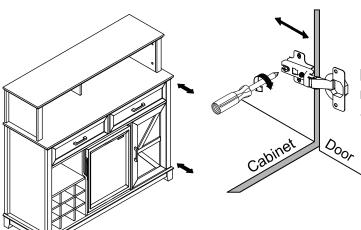


To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

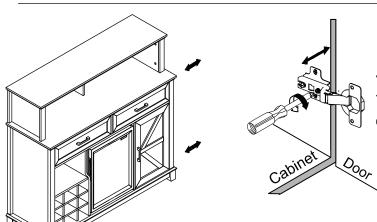


To adjust side ways.


Turning the screw "C" on BOTH hinges on each door.

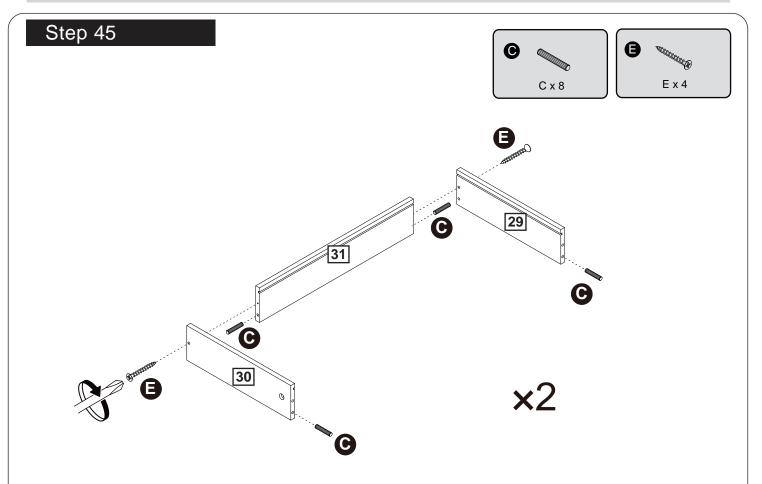


Insert wooden dowel (C) into part (31) and attach part (29, 30) to part (31) using screw (E) with a screwdriver.

Step 46

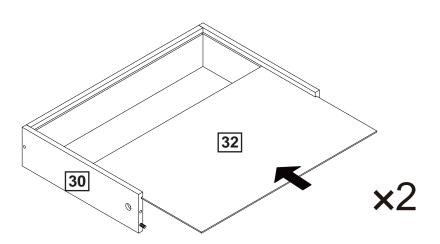

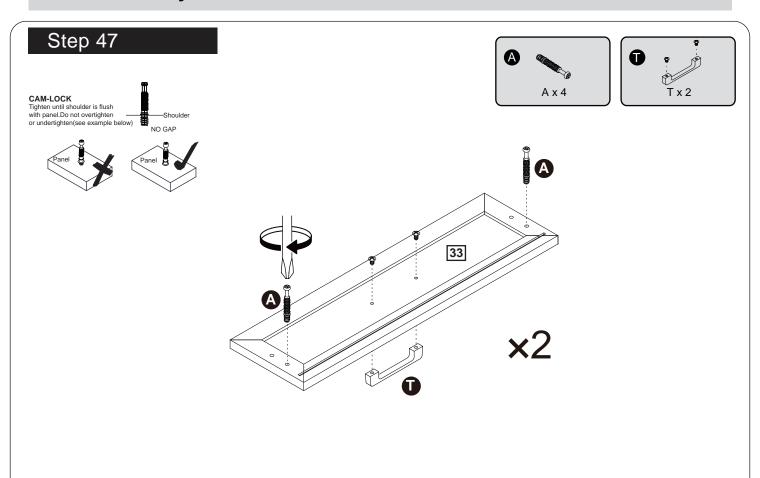


Attach cam bolt (A) to part (33) with a screwdriver. Attach handle (T) to part (33) using screw (T) with a screwdriver.

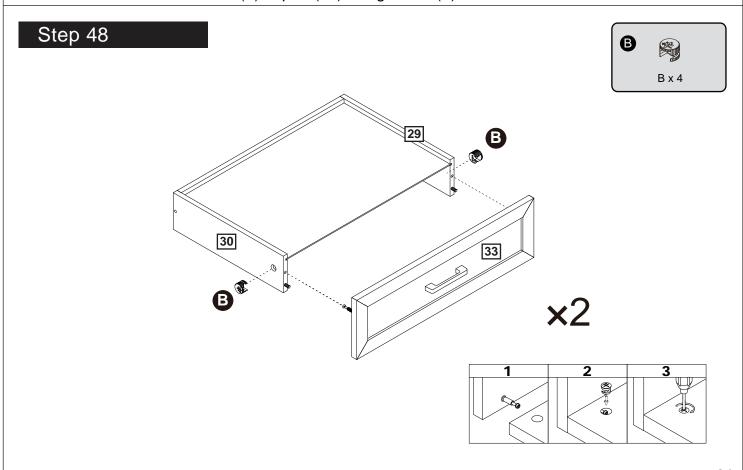


 Step 49








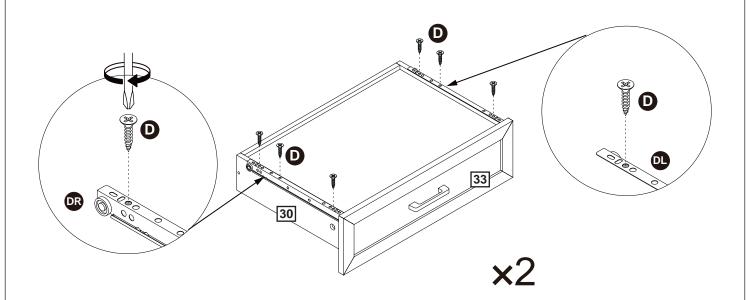


Step 50


Congratulation! You've made to the last step! But don't be too thrilled yet, put on the drawer can be frustrating if you do it wrong. So, take your time and follow the steps below.

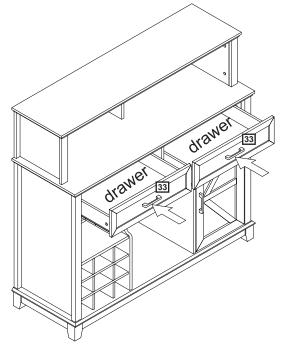


1. Please ensure that you have matched the wheels on BOTH sides of the drawer with the wheels on rails installed BEFORE push in the drawer.

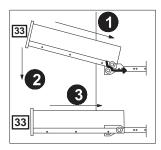

2. If the following occurs, redo the last step.

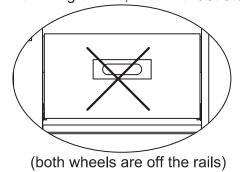

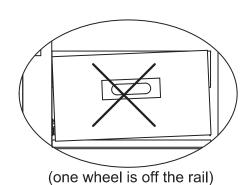


Step 51



When operation for the first time

IMPORTANT: please place the freezer upright for 24 hours because the oil in the compressor needs time to settle to the bottom. If the machine is turned on right away, the oil can leak into the refrigeration system causing issue.

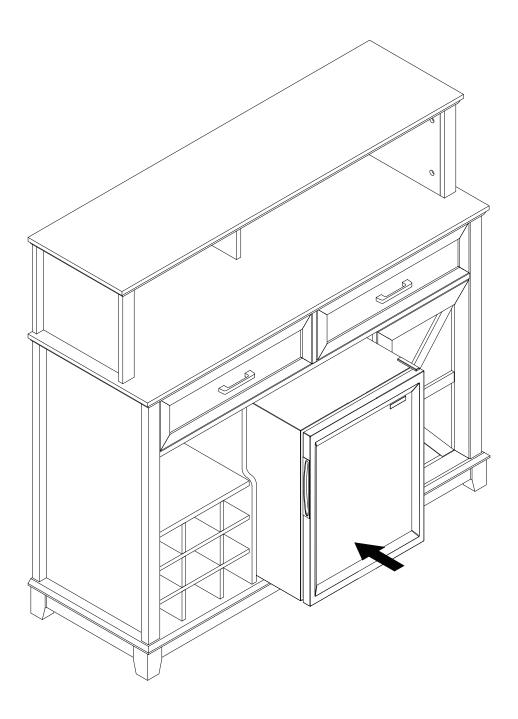

Step 52

The unit is floor standing, but it is recommended that the unit is secured to the wall.


- 1. Move the unit into desired position.
- 2. Mark the wall with a suitable scribe the position of the fixing holes.




Warning: Before driling,check wall for hidden pipes and cables.

- 3. Drill holes and insert 2 x wall plug
- 4. Attach 2 x Wall Straps to to the top of the unit using 2 x Washers and 2 x Screws
- 5. Secure the straps to the wall using 2 x Washers and 2 x Screws

Note: To hide the straps behind the unit, drill the holes lower than the top of the unit

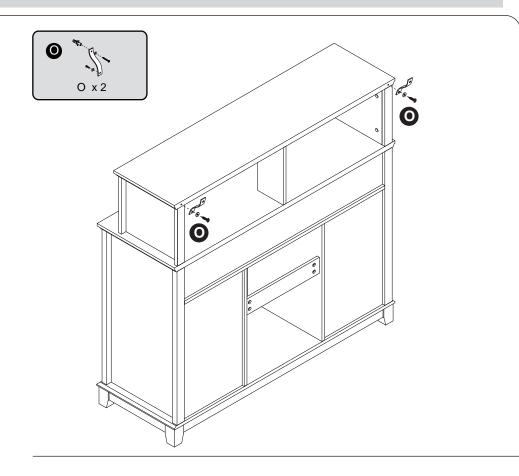

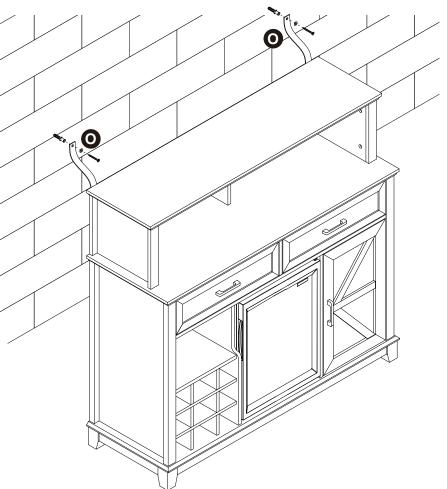

Assembly is complete.

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug




Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2 " Plasterboard" wall plug




For use when attaching light loads onto plasterboard partitions.

 No.3 "Cavity Fixing" wall plug




For use with plasterboard partitions or hollow wooden doors.

 No.4 " Cavity Fixing – Heavy Duty" wall plug




For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.5 "Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 " Shield Anchor" wall plug – heavy loads



For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.