
COFFEE TABLE

Assembly Instructions - Please keep for future reference

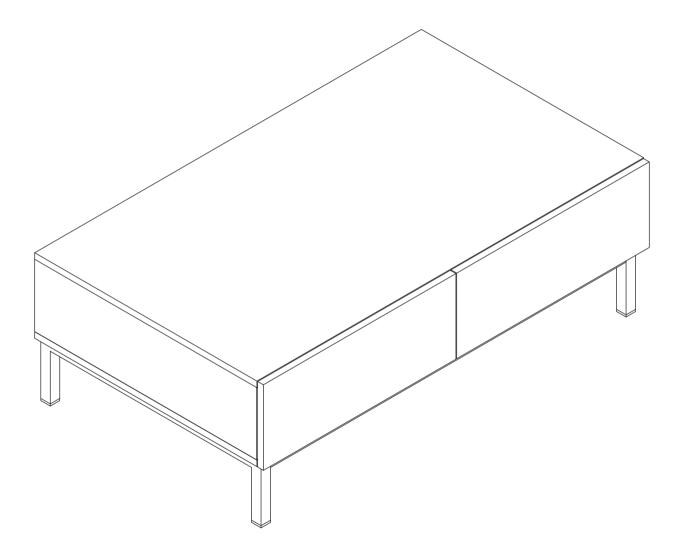

Dimensions

Width - 40 inch Depth - 23.6 inch Height - 13.5 inch


Any question please feel free to contact us: support@amer-life.com TEL:(901) 347-2181 We will provide further assistance within 24 hours.

Important - Please read these instructions fully before starting assembly




IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

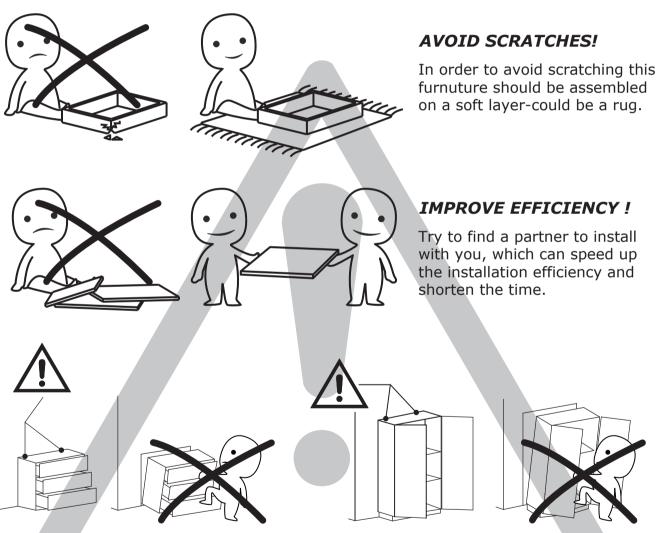

ANTI-TOPPLE WARNING !

 Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.



Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is comKlete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable) Do not allow children to climb or hang on the furniture Do not open more than one drawer at a time Do not place heavy items in the top drawers Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type

Componets - Panels

Please check you have all the panels listed below

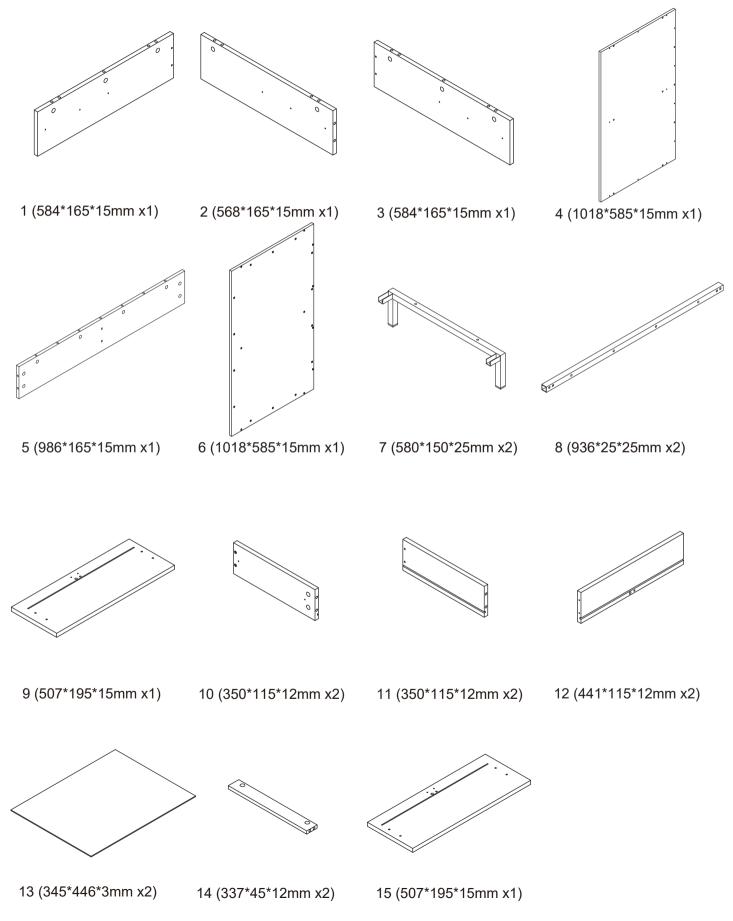

Componets - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

A	B	C
6*35mm x 28	15*9.5mm x 28	6*30mm x 24
	6	F attraction
3.5*12mm x 20	3*14mm x 4	4*35mm x 20
G		
x 2	x 2	6*16mm x 8
	K	O D
6*35mm x 12	x 1	x 4
	(B)	
x 4	3*18mm x 8	

Tools required

Phllips screwdriver (medium & large)

Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.


Step 3


Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

1


DO NOT OVER TIGHTEN. NE KAS SERRER EXCESSIVEMENT.

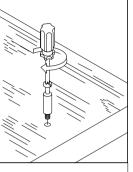

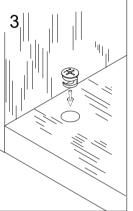

Step 2

Push the male camlock into the entry hole.

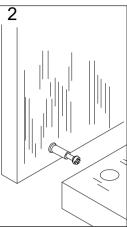



Step 4


Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.


The joint is now secure.

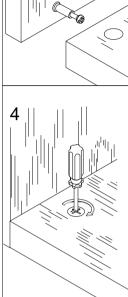


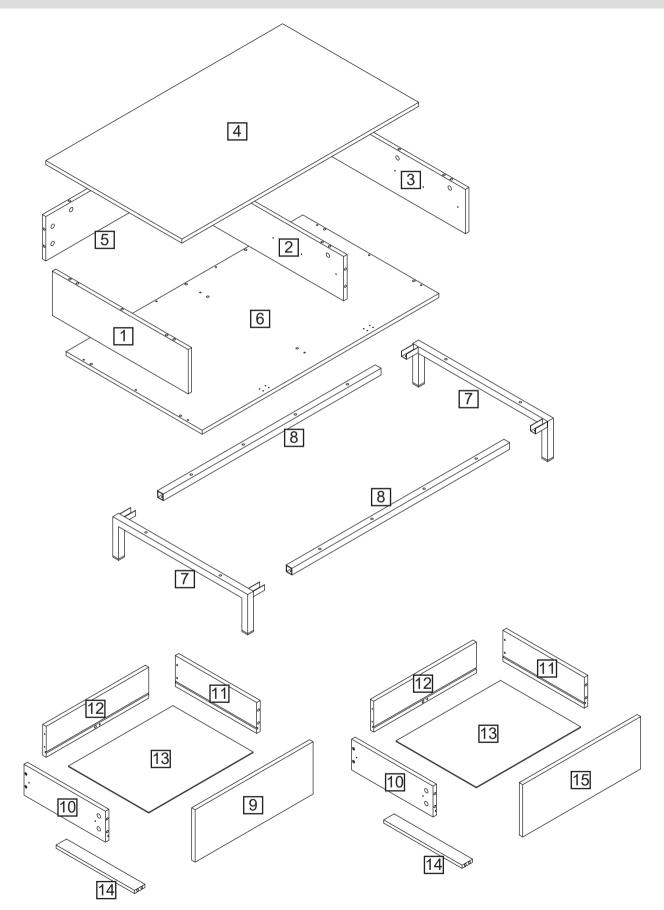


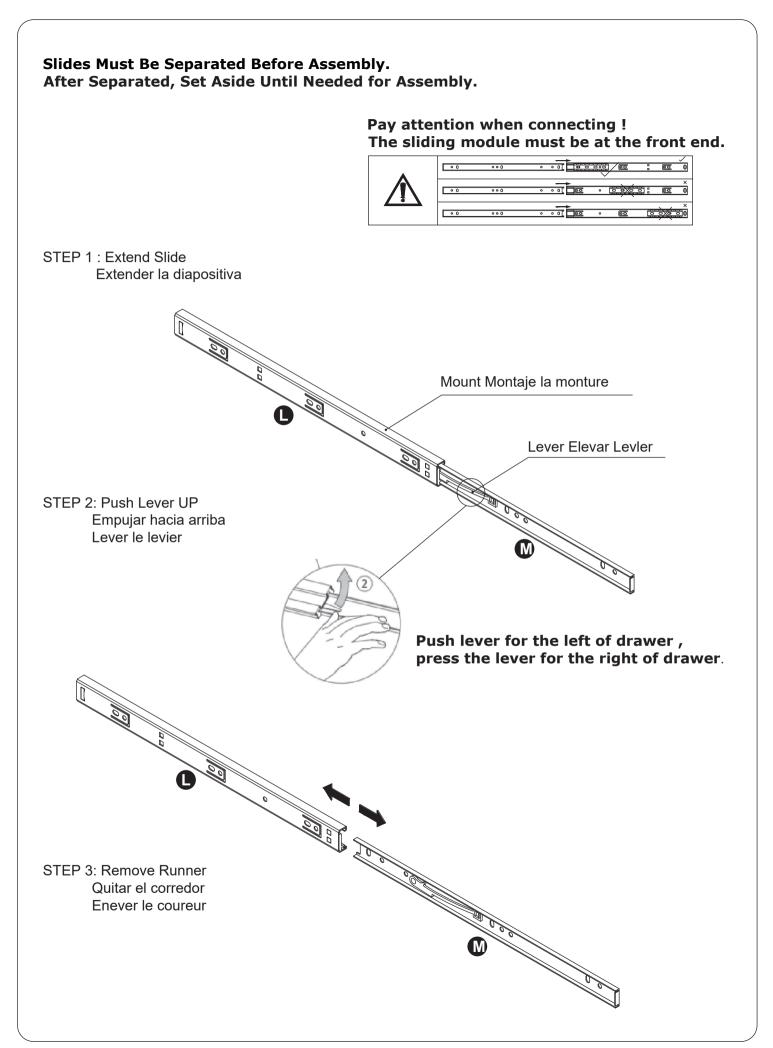


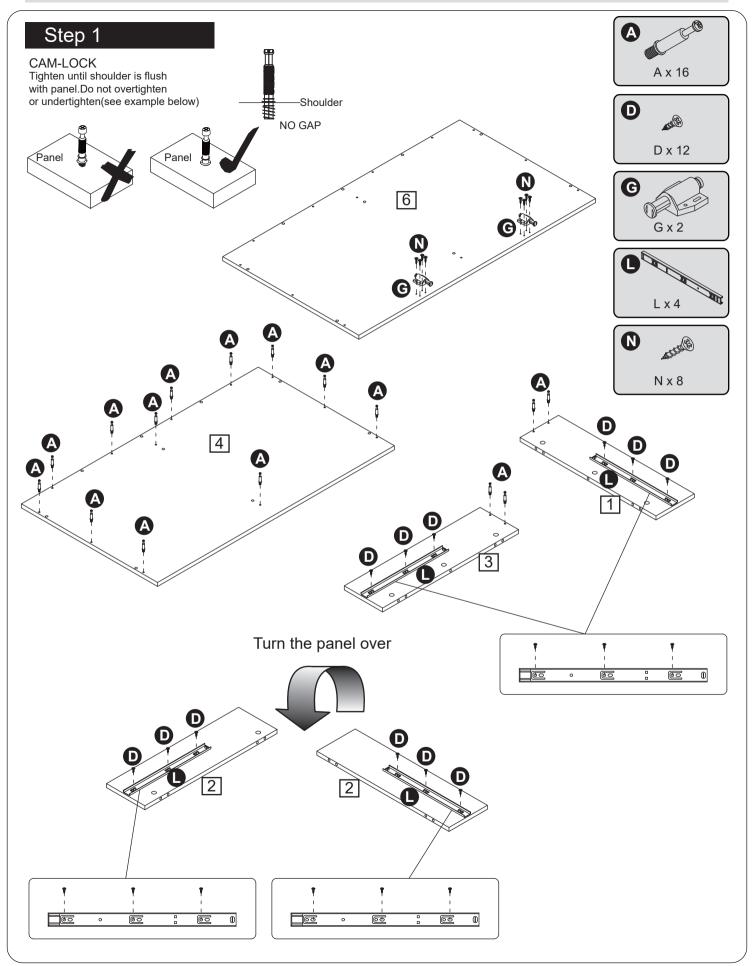


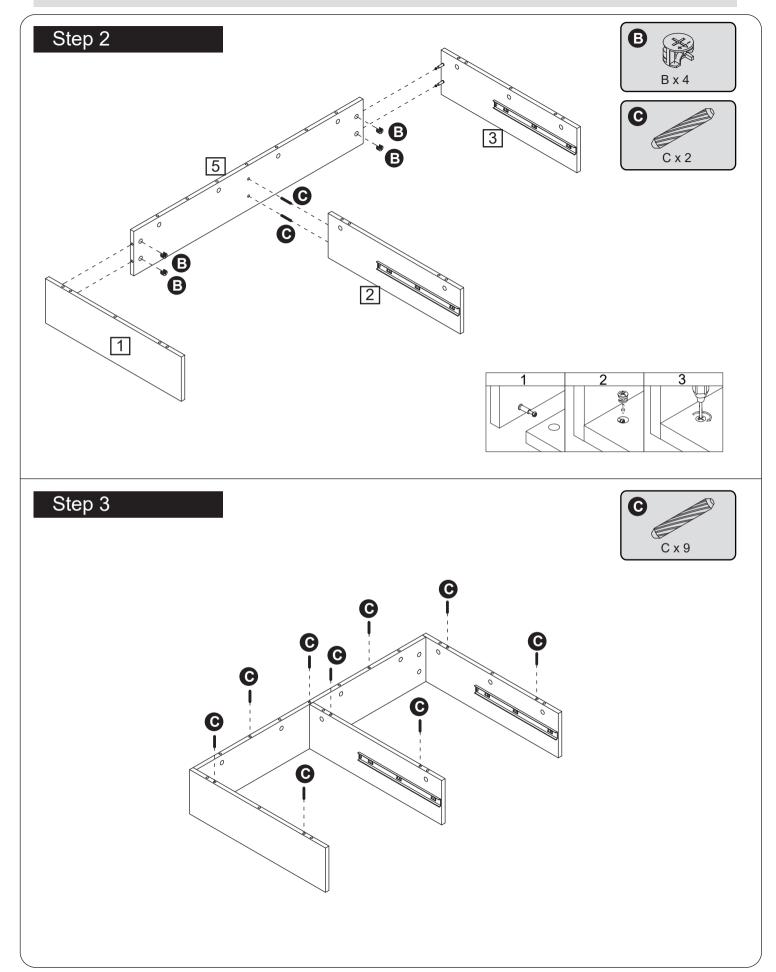

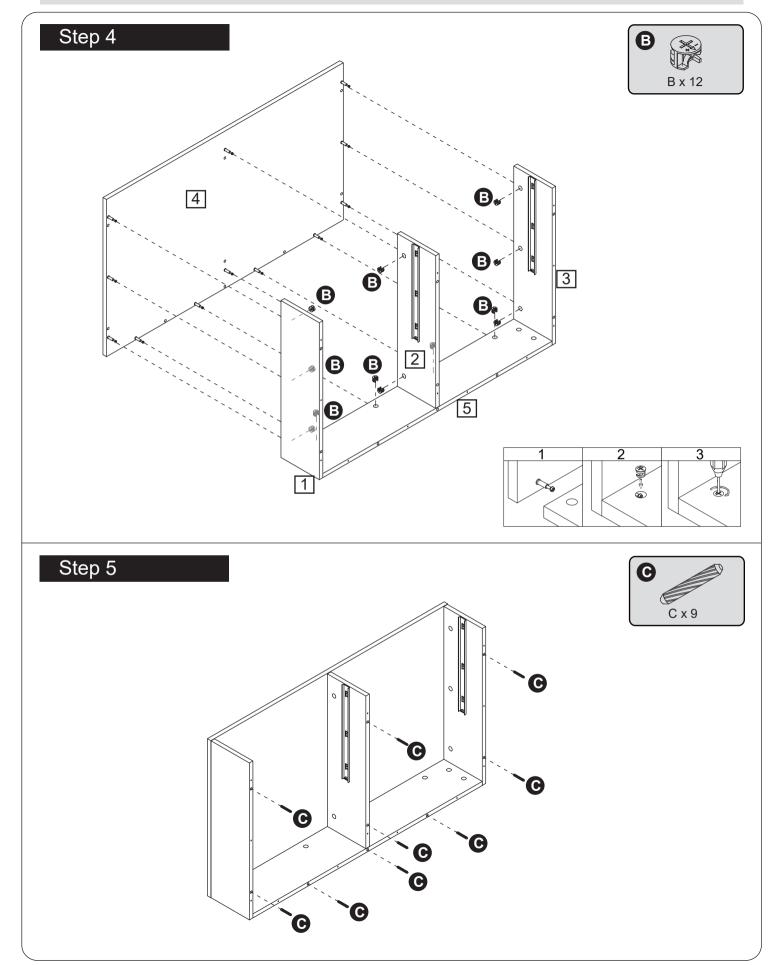

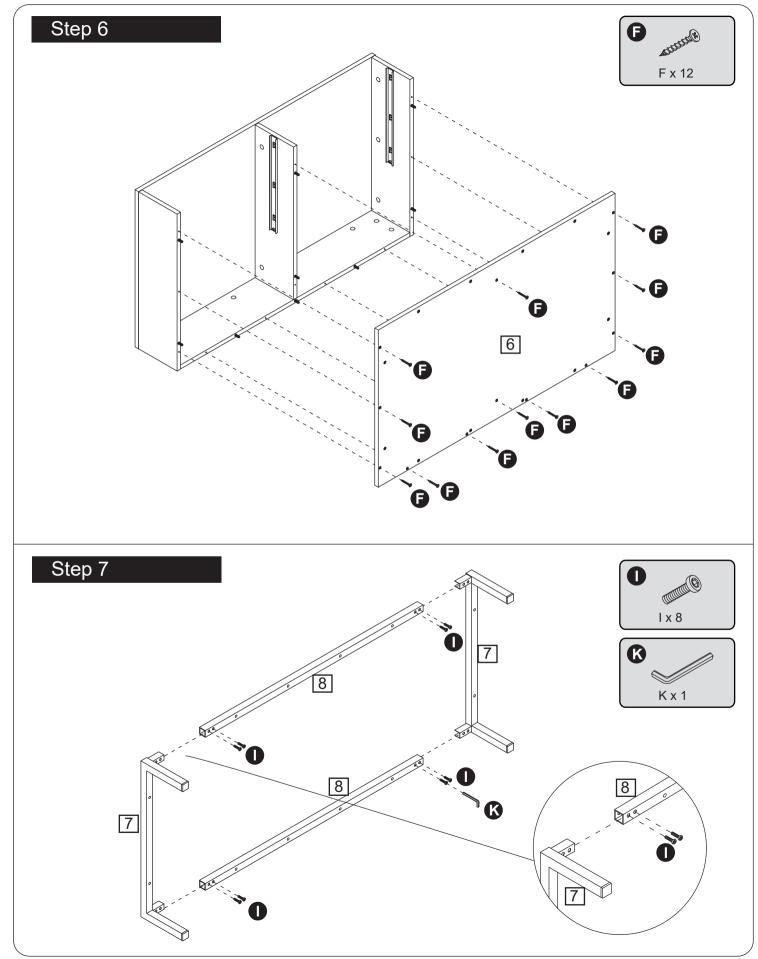


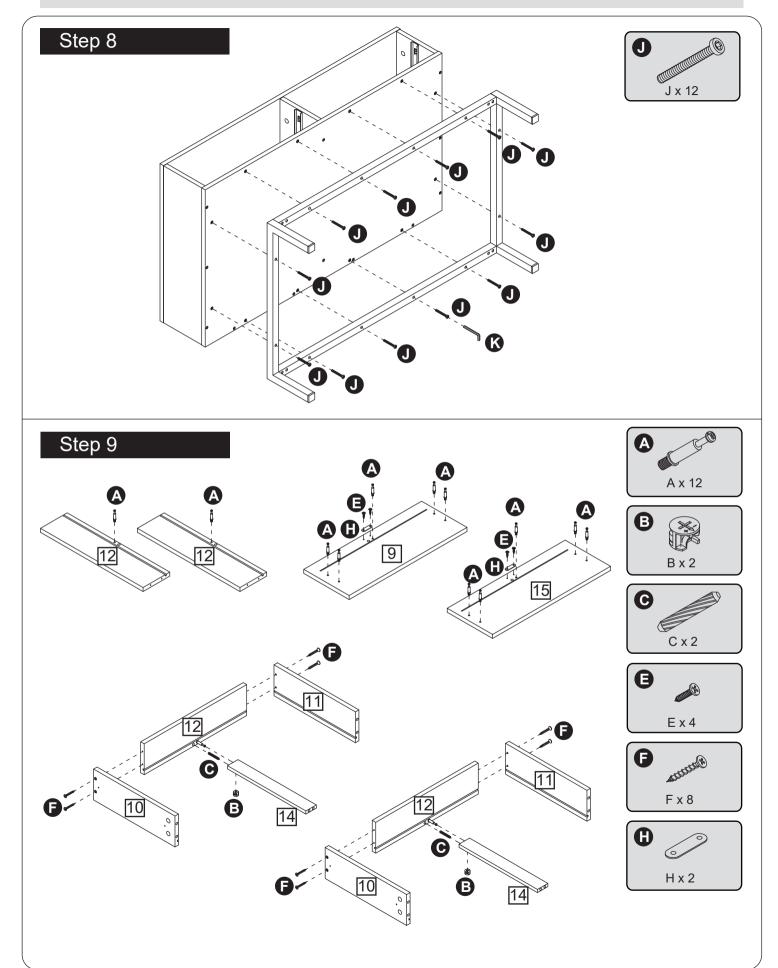

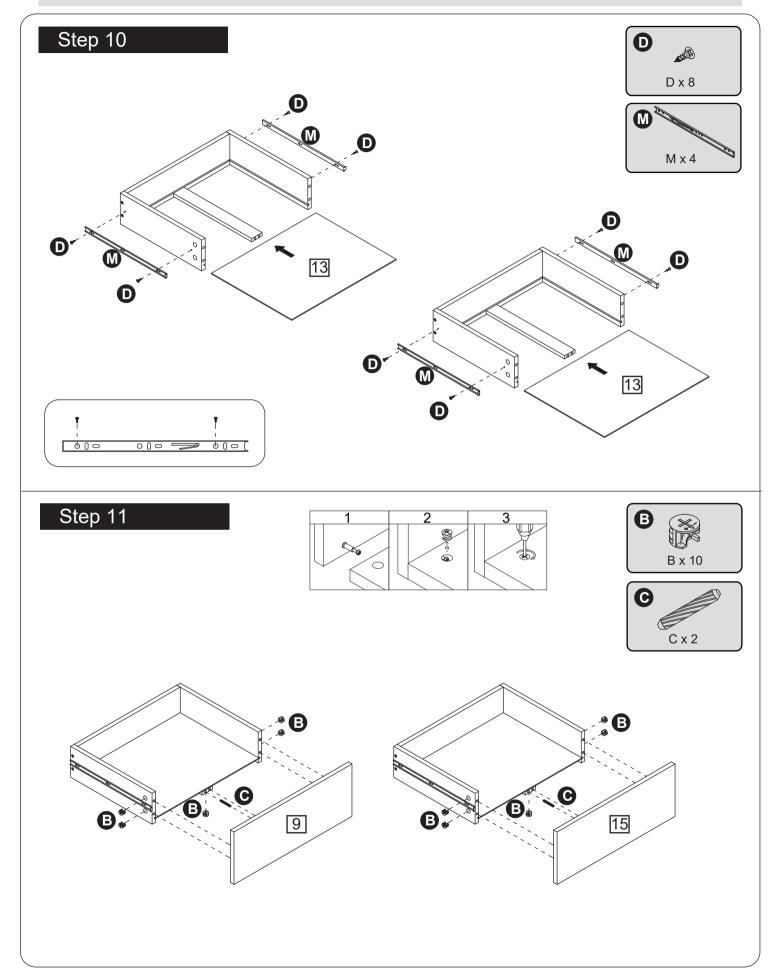

Step 12

⚠ It is highly recommended that the unit is secured to the wall. You can skip to the next step first, then come back to this step once the dresser is secured to the wall.

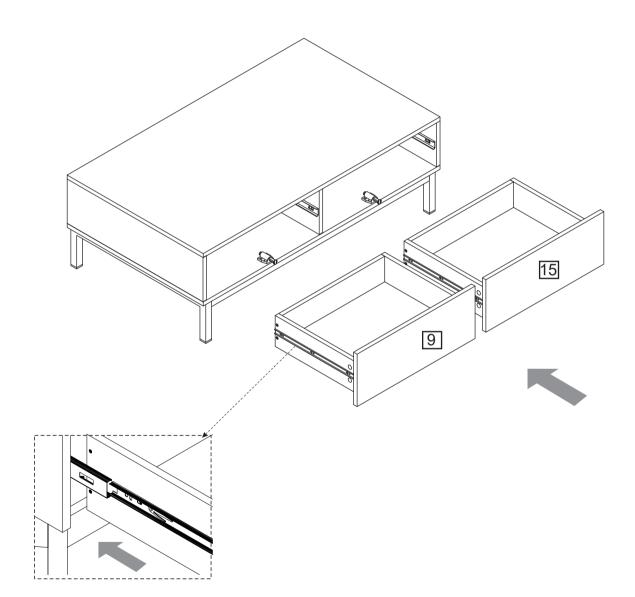

Attention:

- 1.Pull out the rail installed on the cabinet.
- 2.Align the slide runners on the drawer with the unit and push it carefully inside until it stops.

★ If the drawer does not go in smoothly please take it out and repeat the steps.