
TV Stand

Assembly Instructions-Please keep for future reference



A NOTE:

Comes with TWO PACKAGES with TWO TRACKINGS, may NOT be delivered at the

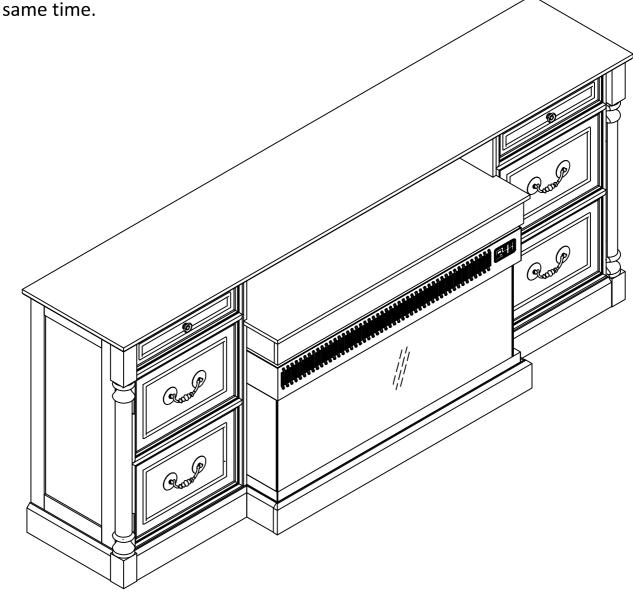

Dimensions

width-75 inch Depth-19inch Heigh-31.3 inch

Any question please feel free to contact us: support@amer-life.com TEL:(901)347-2181 We will provide further assistance within 24 hours

Important-Please read these instructions fully before staring assembly



Safety and Care Advice

Important-Please read these instructions fully before staring assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area,small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage/
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent ,do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
 Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly,only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.


WARNING In order to help prevent overturningplese follow these insturctions

To help prevent product toppling over please follow the steps below:

- Must use the anti tip strap or wall fixing method provided (whichever applies).
- Do not allow children to climb or hang on the furniture.
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose
- Installation shall be carried out exactly according to the instructions-otherwise a safety risk can occur
- In order to prevent falling down this product must be used with the wall attachment device provided

please note that only the wall attachment device is provided .You will need to supply wall plugs and screws applicable for your wall type.

Please check you have all the panels listed below

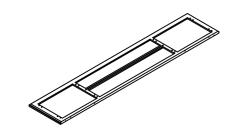

1 (190.5 x 37.9 x 2.4cm) x1



2 (77.1 x 31.5 x 3.2cm) x1



3 (77.1 x 31.5 x 3.2cm) x1



4 (68.1 x 34.7 x 1.2cm) x1



5 (68.1 x 34.7 x 1.2cm) x1



6 (43.1 x 8 x 1.2cm) x1

 


 
7 (43.1 x 8 x 1.2cm) x1




8 (94.4 x 30 x1.2cm) x1








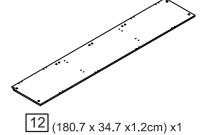

Components-Panels

 
Please check you have all the panels listed below




13 (180.7 x 7.8 x1.2cm) x1



 14 (31.5 x 9x 1.5cm) x2



15 (70.1 x 45.2x 0.3cm) x2

 

16 (93 x 15.5 x 0.3cm) x1



17 (77.1 x 4.9x 4.9cm) x1



18 (77.1 x 4.9 x 4.9cm) x1

 


19 (45 x 7.8 x 1.2cm) x2



20 (12 x 6 x1.2cm) x3










Components-Panels

Please check you have all the panels listed below



 25 (92 x 11.5x1.2cm) x1



26 (95.2 x 9x 1.5cm) x1



27 (41 x 55.2x 2.8cm) x1



 
28 (41 x 55.2x 2.8cm) x1



29 (42.7 x 30x 1.2cm) x2



30 (41 x 12 x 2.8cm) x2









34 (37.6 x 24.6 x 0.5cm) x2

Components-Fittings

Please check you have all the fittings listed below

NOTE: The quantities below are the correct amount to complete assembly. In some cases more fittings may be supplied than are required.


A	B	6
*34mm Cam Bolt x 60	15*9Cam Lock x 60	6*30mm Wooden Dowel x 66
0		6
6*20mm Wooden Dowel x 4	Magnet x 2	3*14mm Screw x 4
G W		• the
3.5*12mm Screw x 48	Hinge x 4	3.5*14mm Screw x 32
• Tittitititi	R Attitute	• THINTE
4*22mm Screw x 2	4*25mm Screw x 4	4*30mm Screw x 4
M a P		0
Handle x 4	5/32*23mm Handle bolt x 2	5/32*15mm Handle bolt x 8
e g	o	R
Shelf support x 8	Plastic connector x 9	1/4*20mm Bolt x 12
S	0	0 000
Hex key x 1	3.5*16 Screw x 24	Metal plate x 2
	W /	
Handle x 2	Washer x 2	
*		- '
∛ 4*12mm Screw x 2 4*25r	nm Screw x 2 Plastic strap	x 2 Nut x 2

Tools required



Ruler - Use this ruler to help correctly identify the screws

 0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170



The screws len9th is measured from the head to the Point (30mm screw shown).

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

DO NOT OVER TIGHTEN. NE PAS SERRER EXCESSIVEMENT.

Step 2


Push the male camlock into the entry hole.

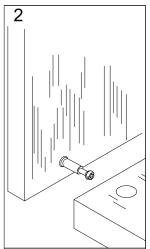

Step 3


Insert the female camlock as shown in the instructions.


Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

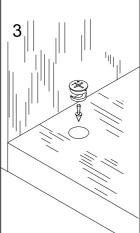



Step 4


Turn the female camlock clockwise with a screwdriver.
You should feel a click when the camlock is locked in place.
The joint is now secure.

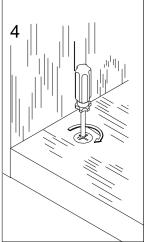


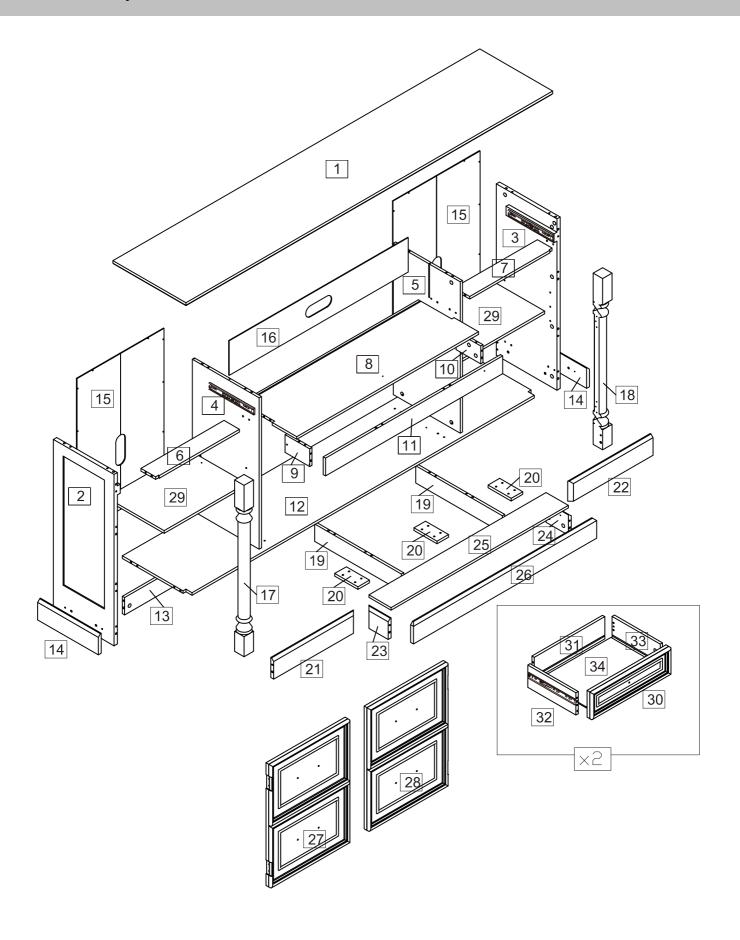


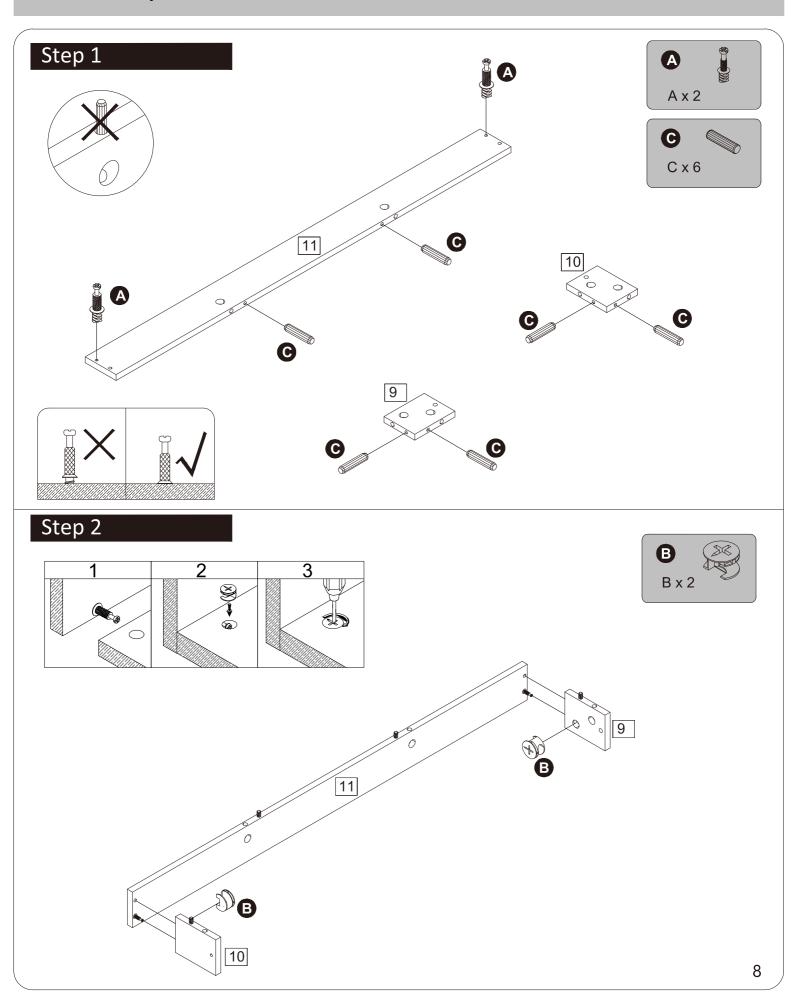

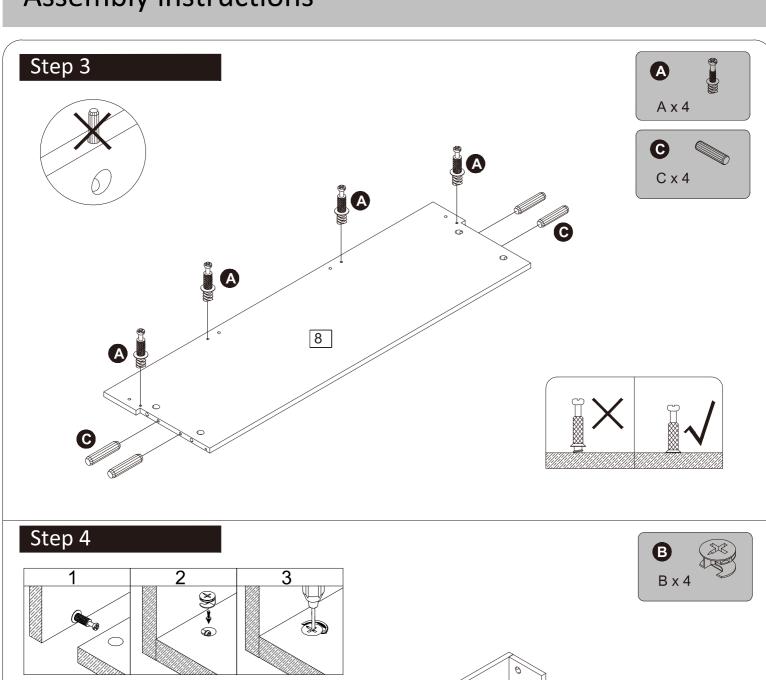


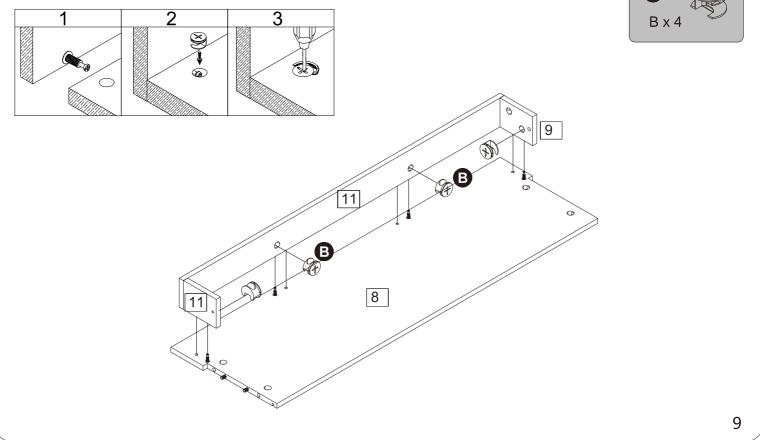


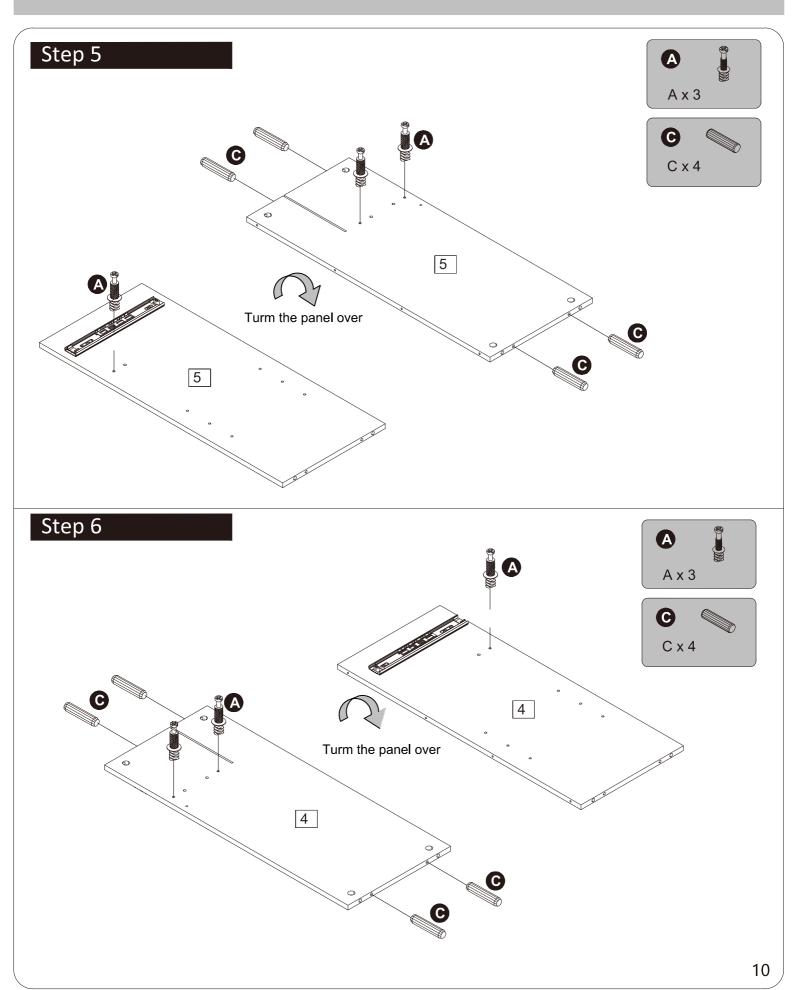


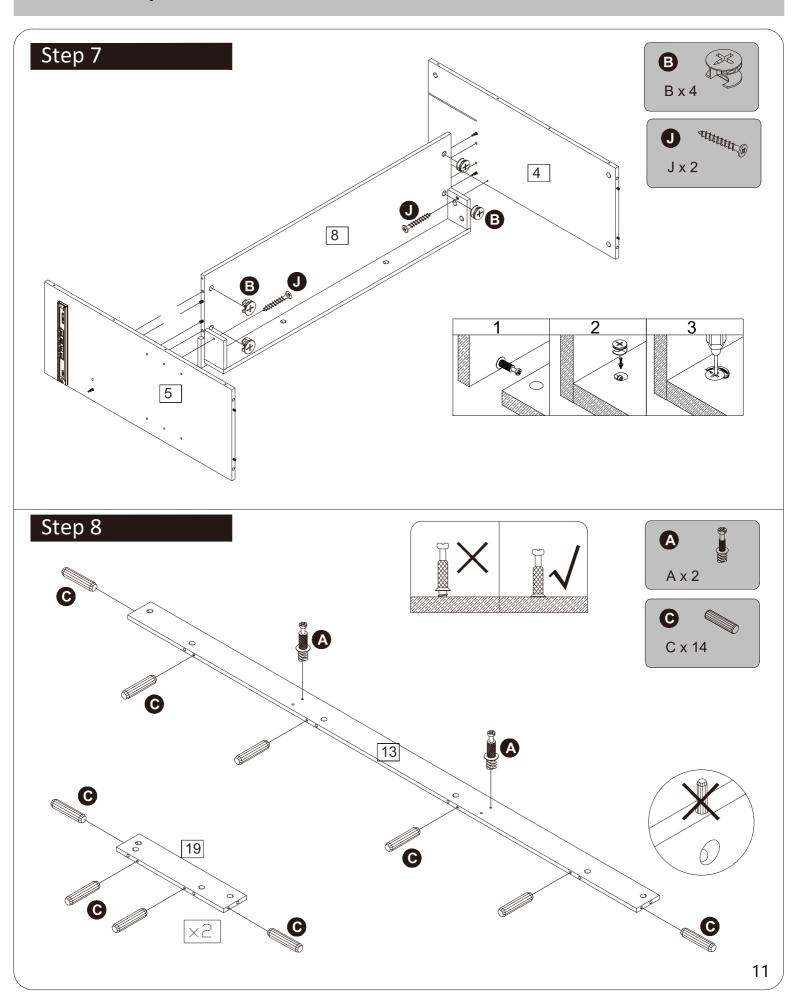



Step 9 B x 2 19 19

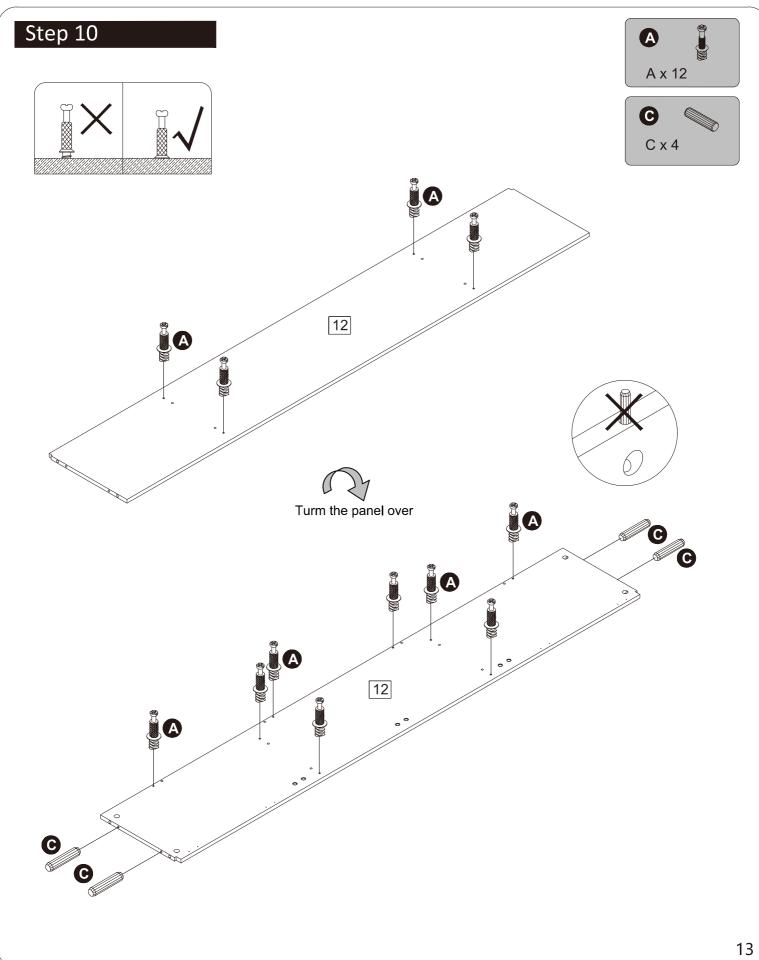


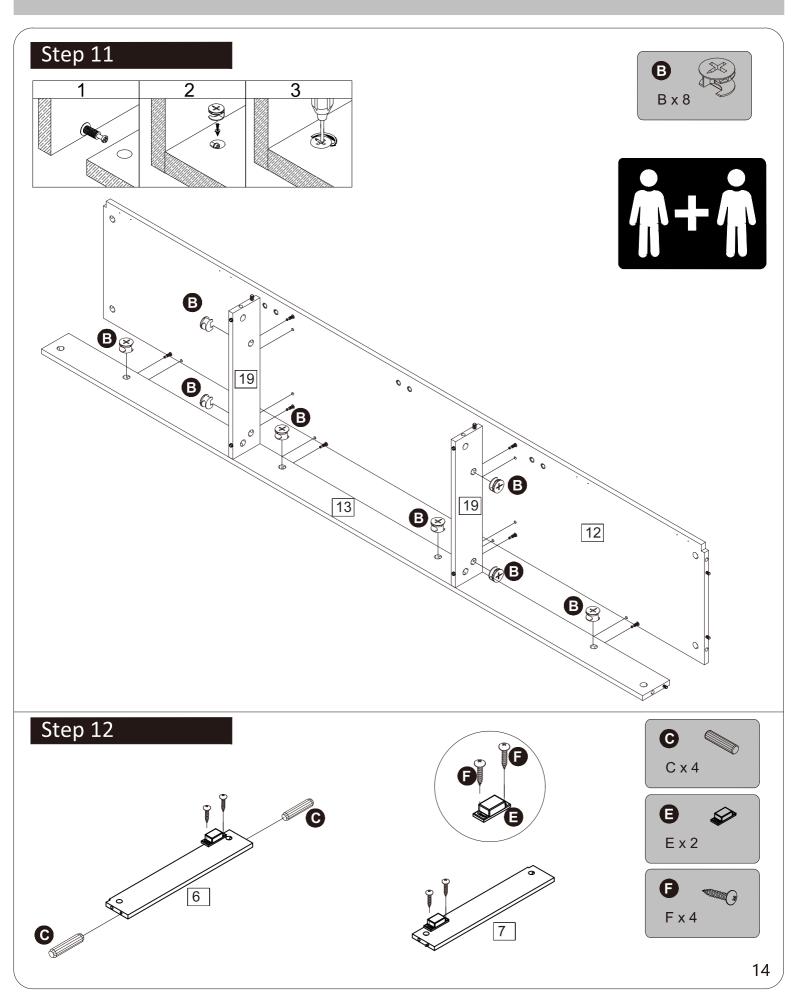


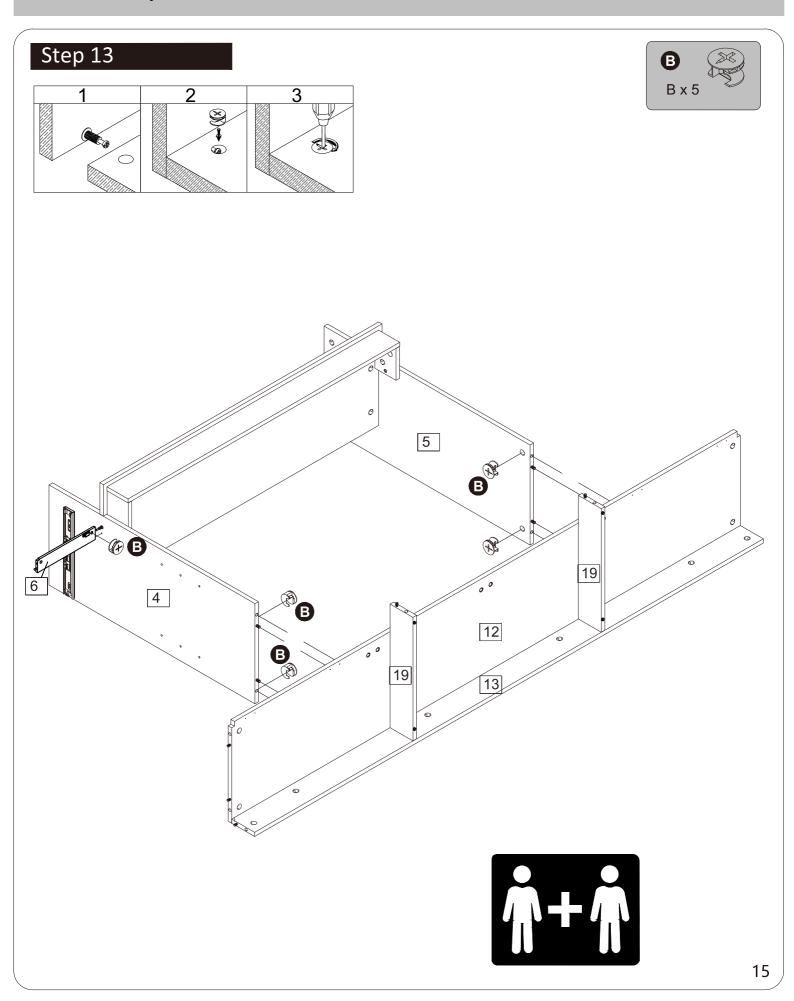


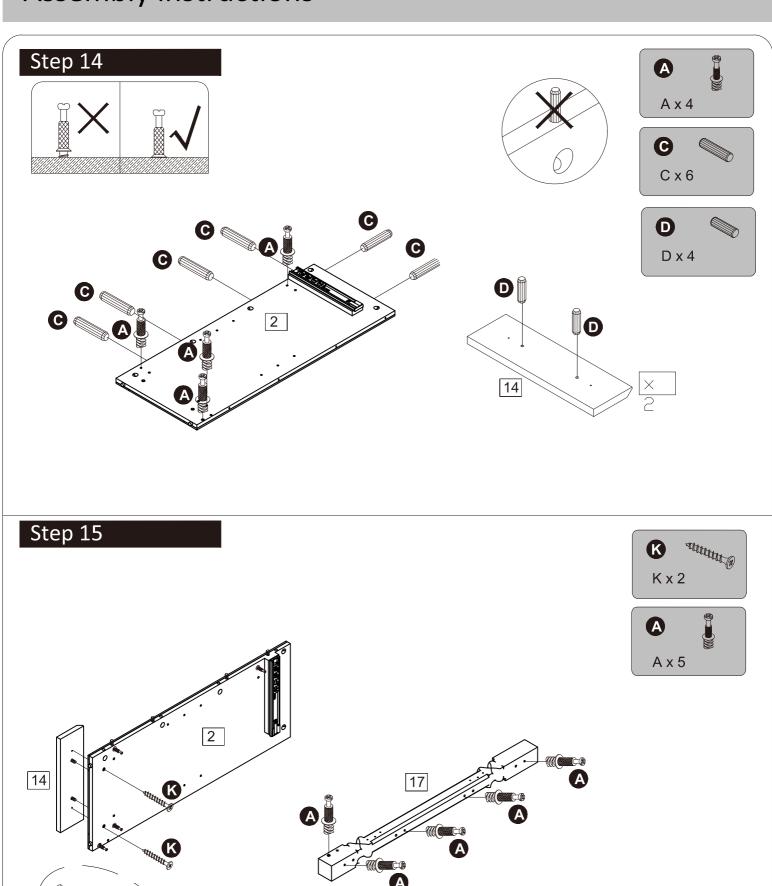


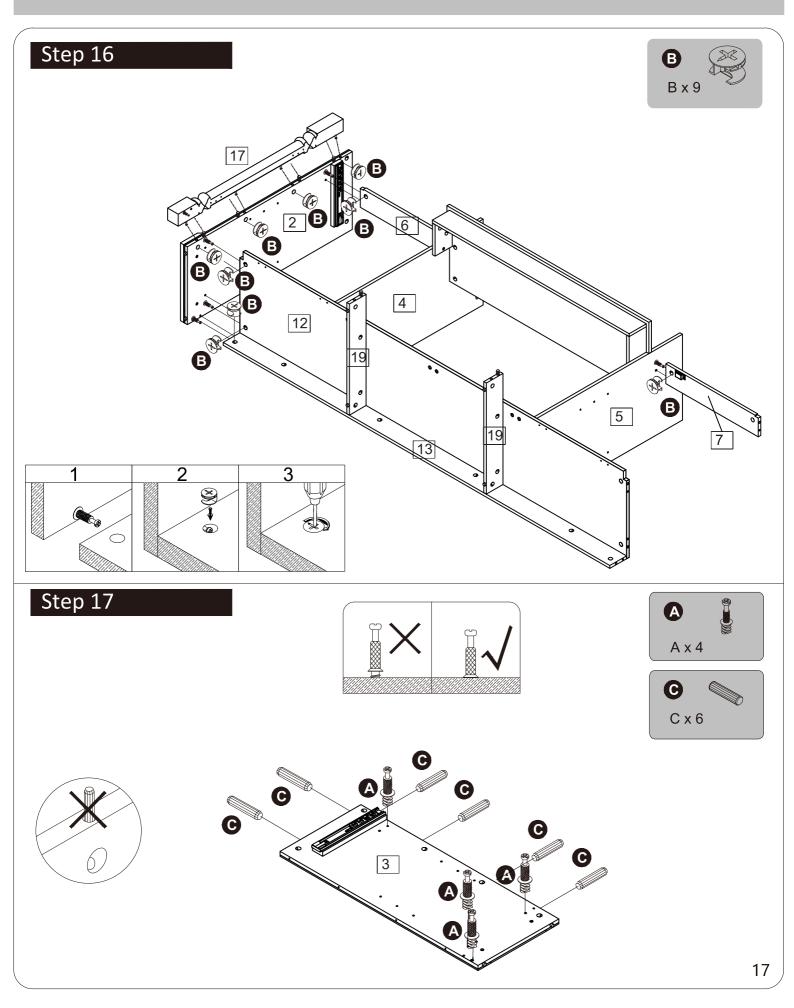


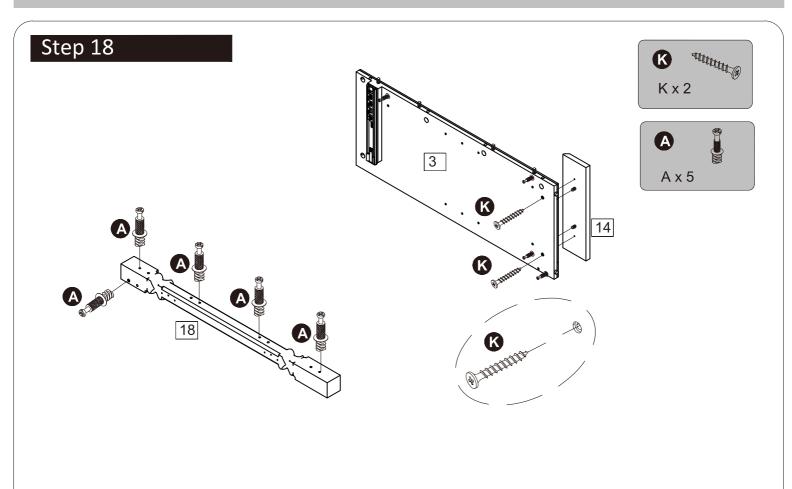


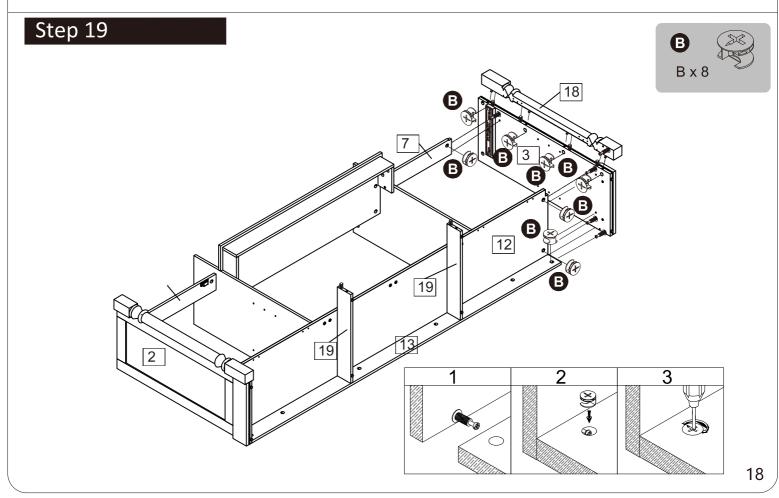


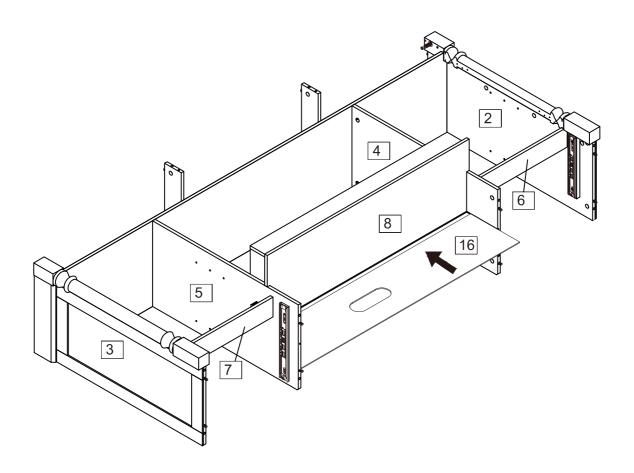


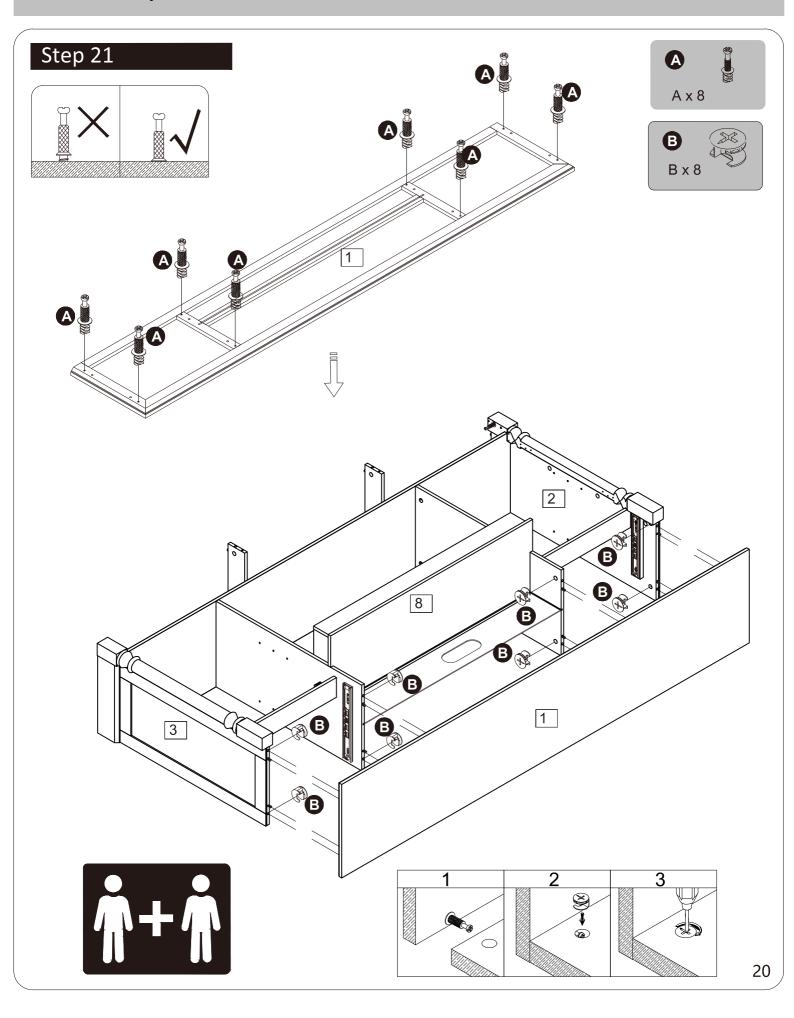


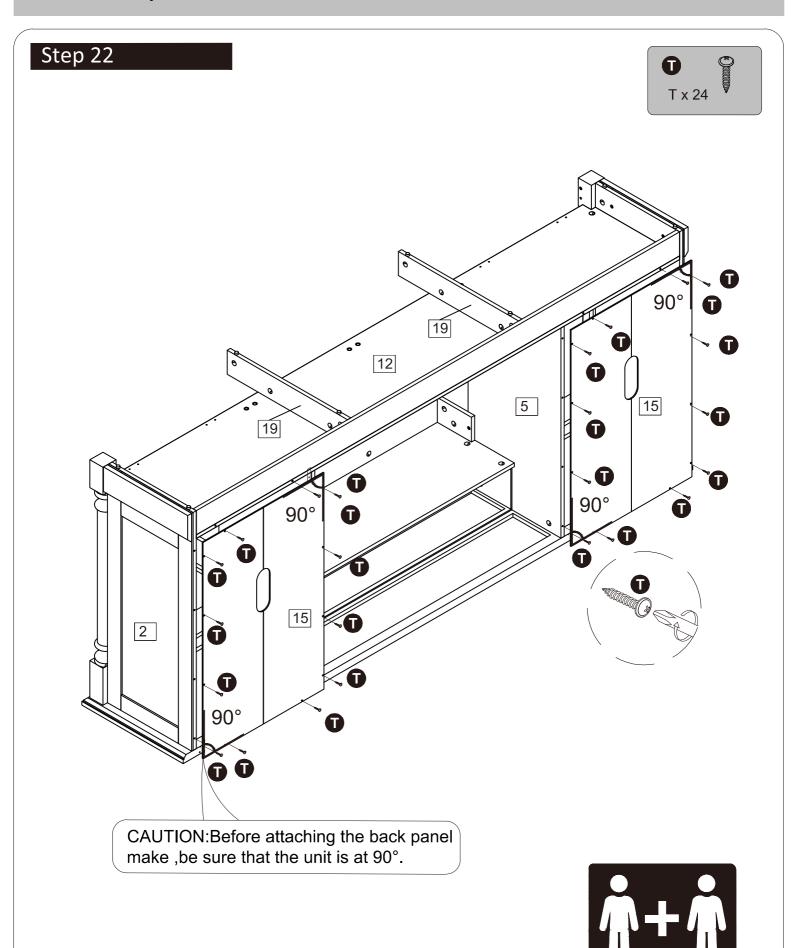

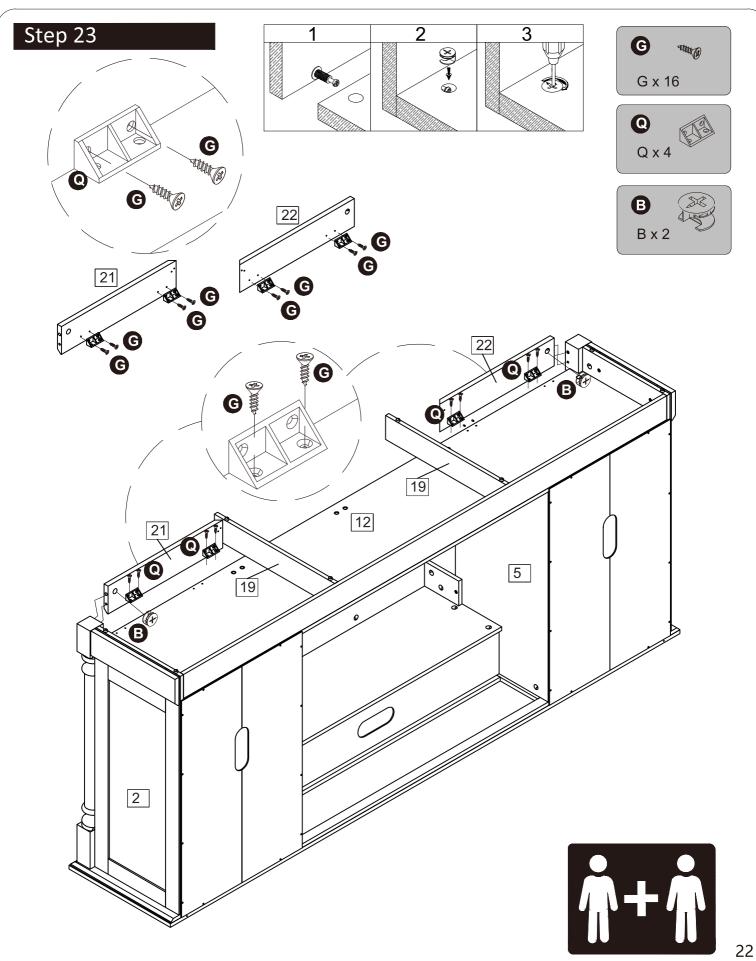


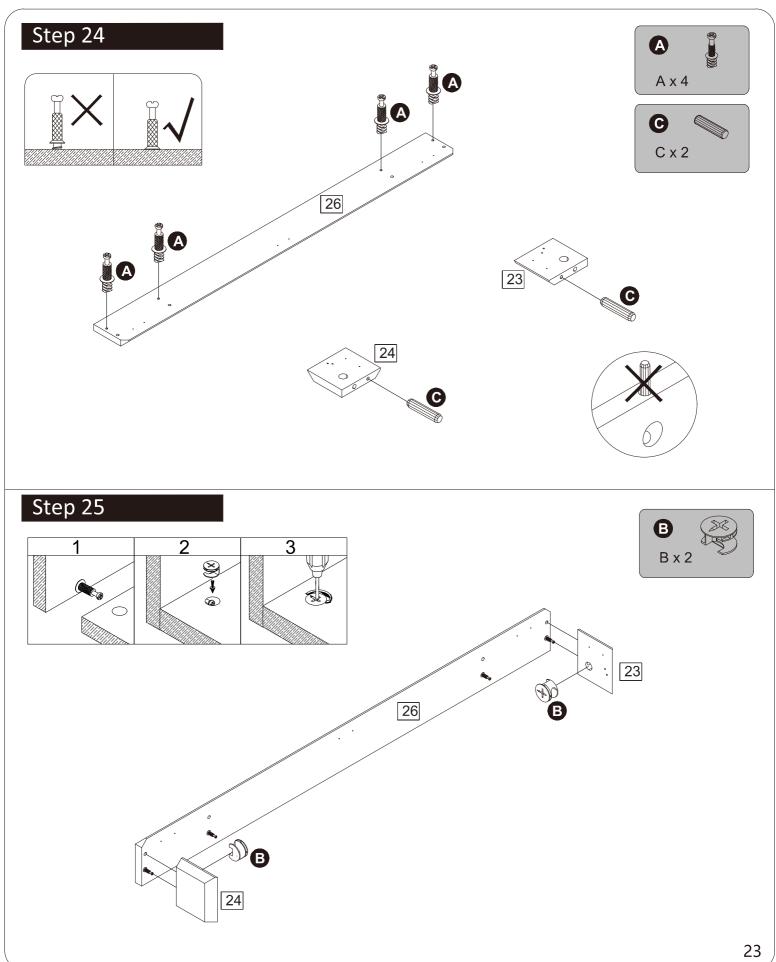


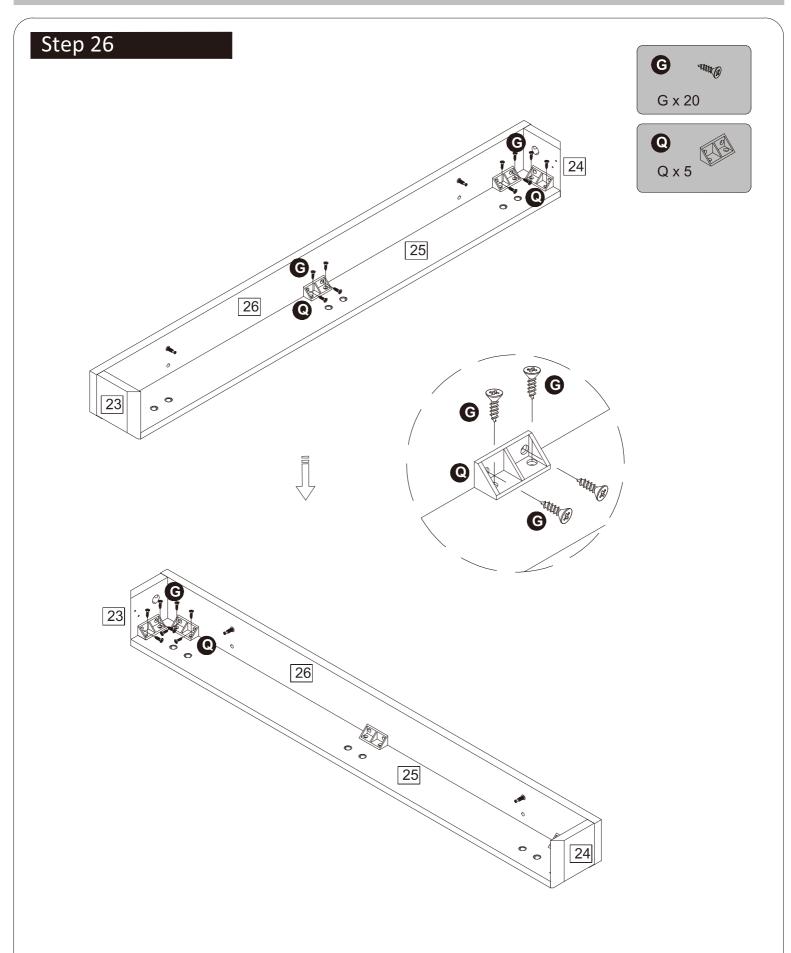


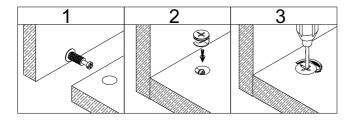





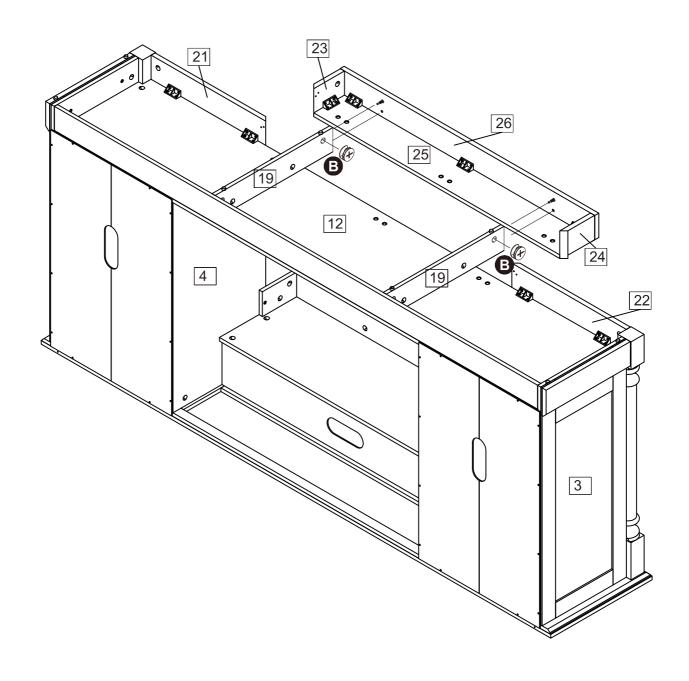


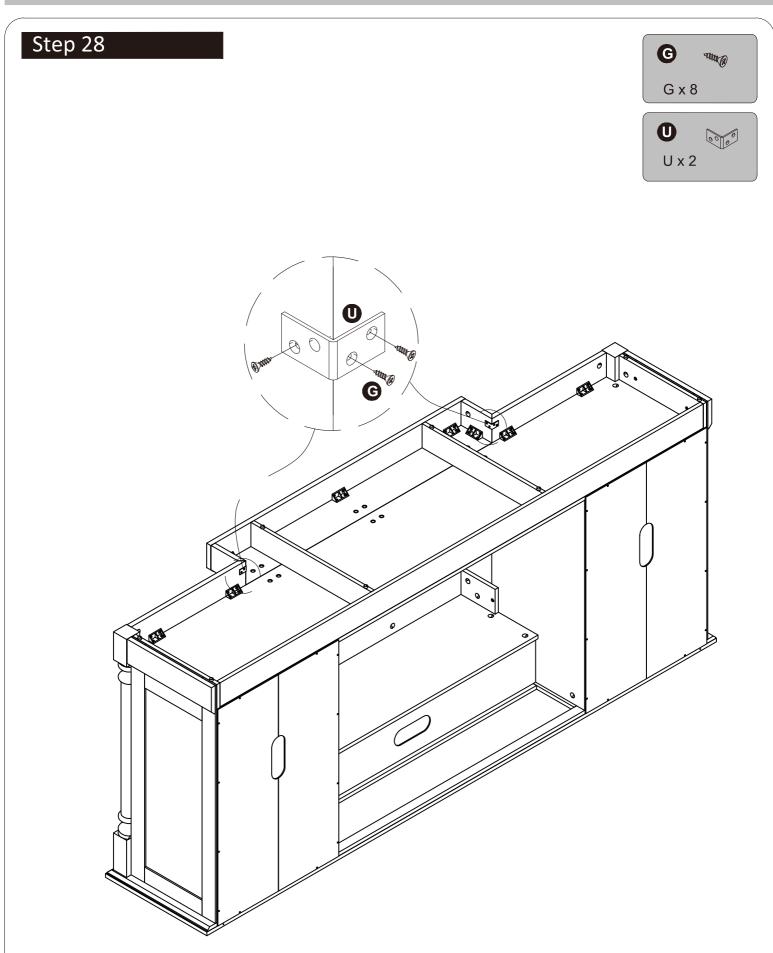

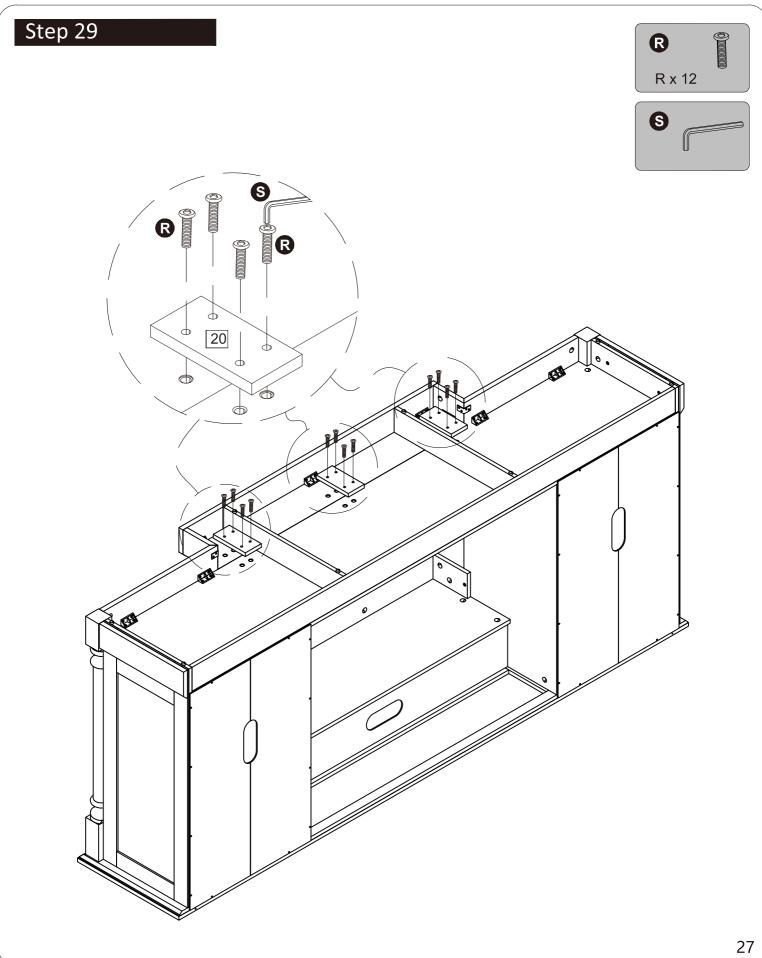


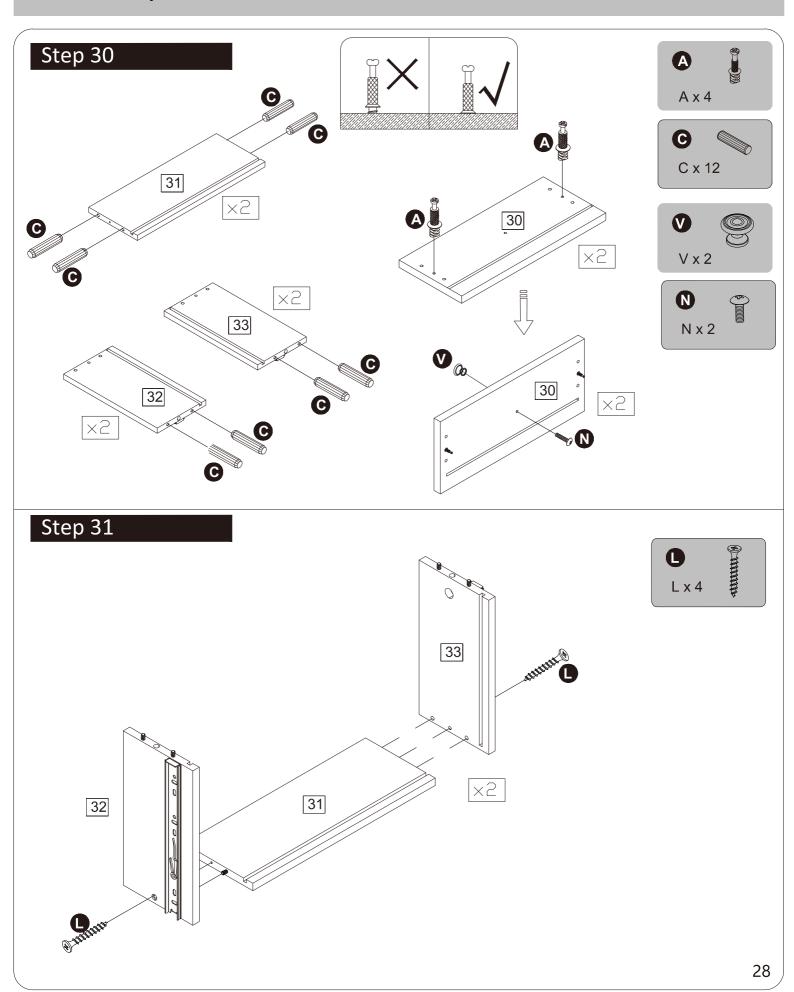


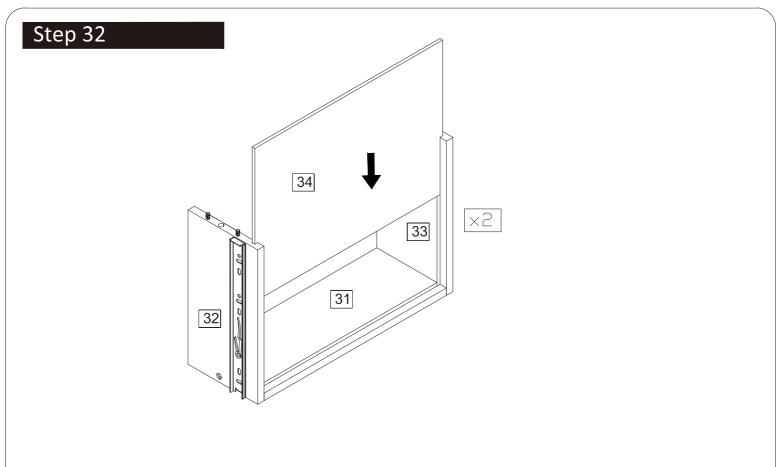

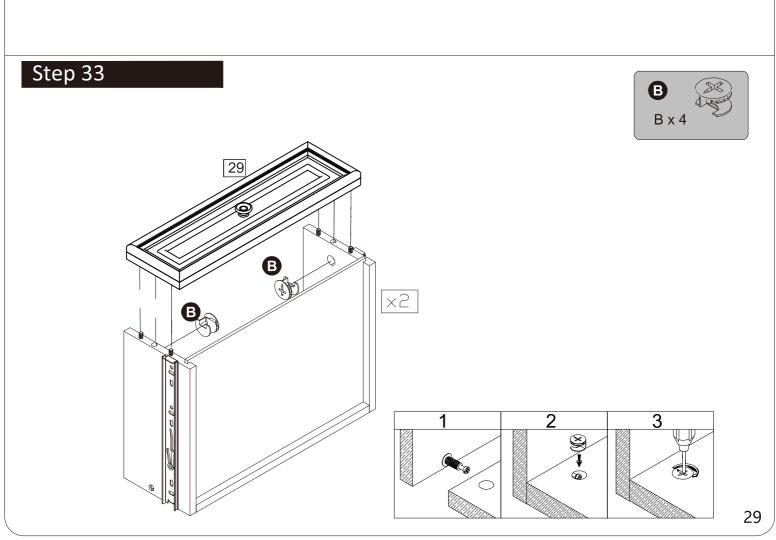



Step 34

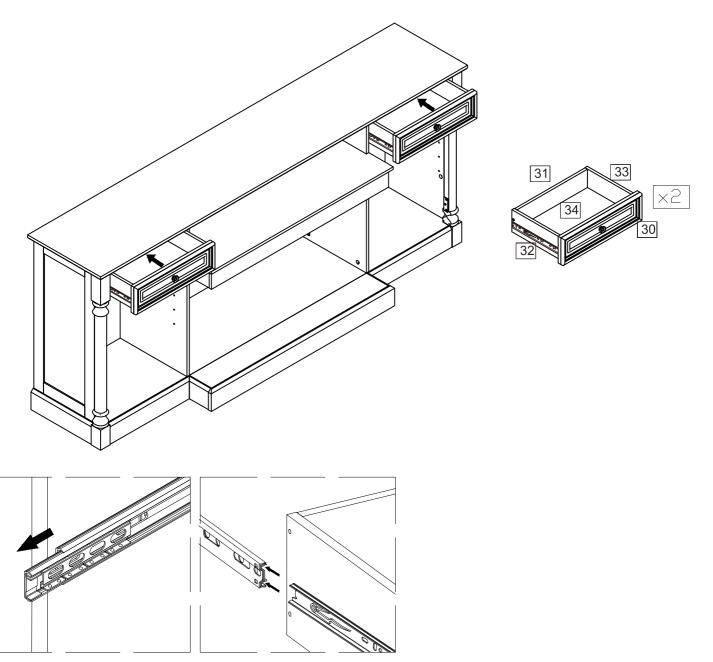

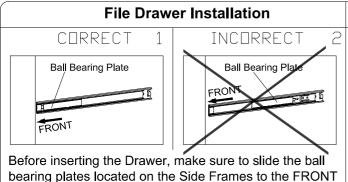


of the unit as illustrated.

 


 


To release the glides, pull the Drawer out until you can see/feel the black nylon clips. Now press the clip on the Left Glide UPWARD while lifting the clip on the Right Glide DOWNWARD. This will release the Drawer to be easily removed.


File Drawer Removal

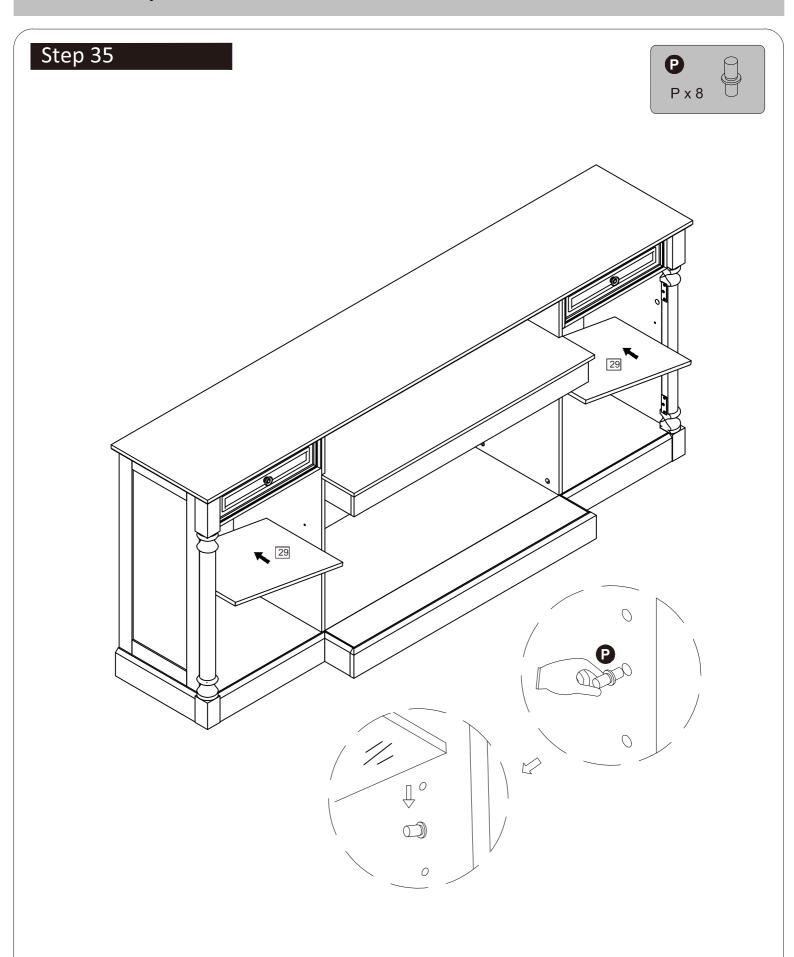

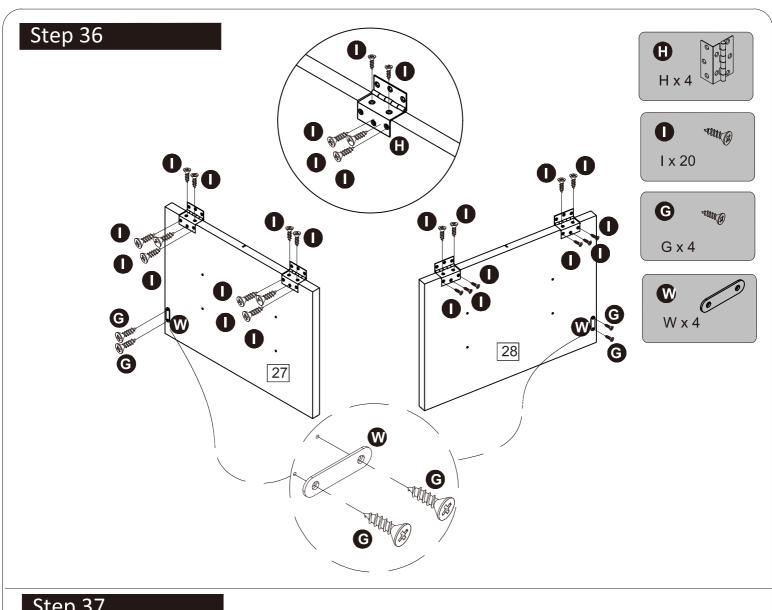


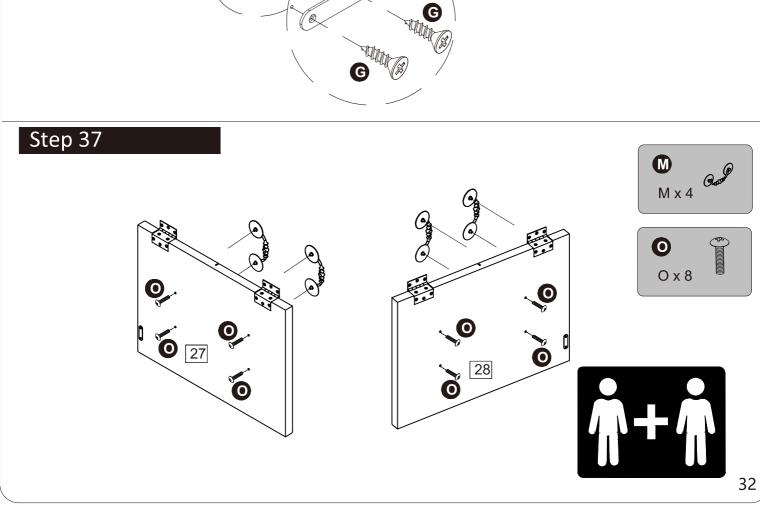



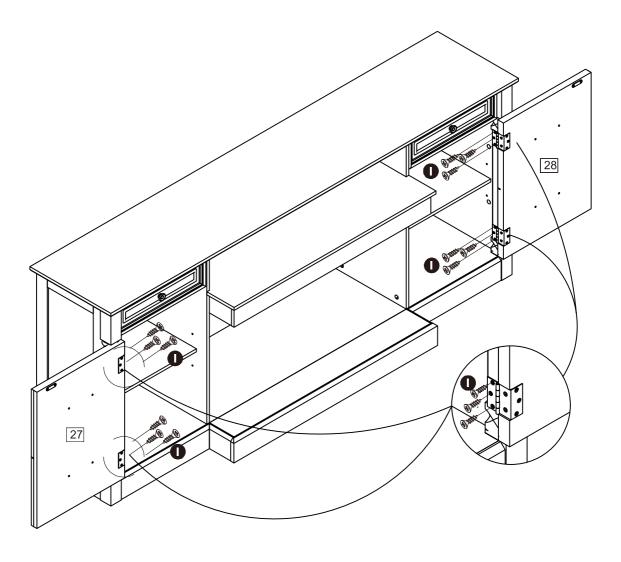




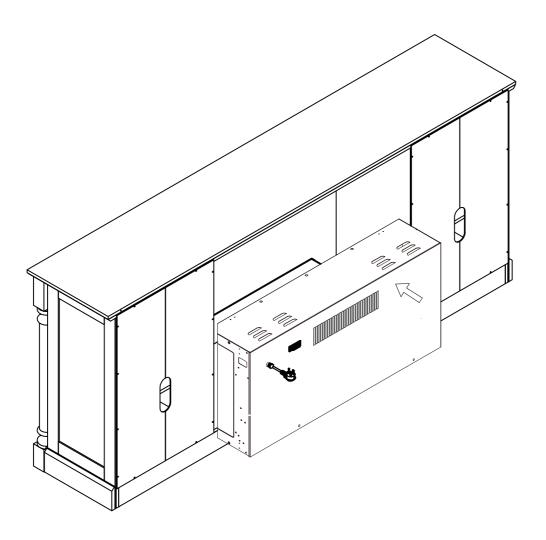





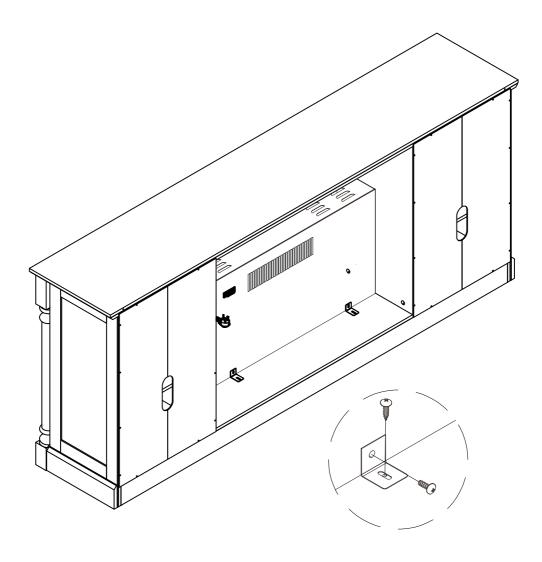


Step 41

BEFORE CONNECTING THE UNIT TO A WALL ELECTRIC OUTLET

Please carefully read and follow instructions and safety warnings in "Fireplace Homeowners Operating Manual" to operate your fireplace.

WARNING

IF THE INFORMATION IN THE FIREPALCE OPERATING MANUAL IS NOT FOLLOWED, AN ELECTRIC SHOCK OR FIRE MAY RESULT IN PROPERTY DAMAGE, PERSONAL INJURY, OR LOSS OF LIFE.

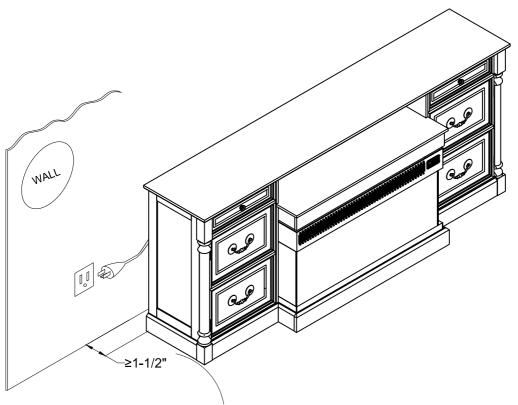

To allow proper heater ventilation, this unit must be located a minimum of 1-1/2" away from a back wall.



