Cabinet

Assembly Instructions - Please keep for future reference

1061100310M

1061100311M

1061100312M



Dimensions

Width-31.4 inch Depth-15.6 inch Height-47.9 inch Any question please feel free to contact us: support@amer-life.com TEL:(901) 347-2181 We will provide further assistance within 24 hours

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



·To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

- · Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- · From time to time check that there are no loose screws on this unit.
- ·This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- · Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- · Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)

Do not allow children to climb or hang on the furniture

Do not open more than one drawer at a time

Do not place heavy items in the top drawers


Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type

Components - Panels


Please check you have all the panels listed below

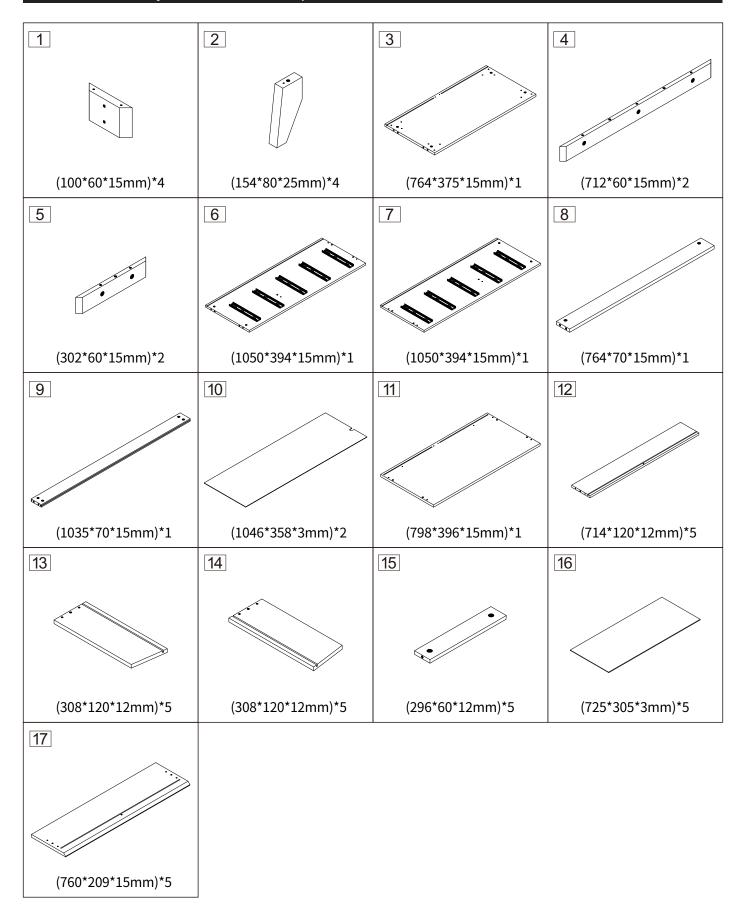


Components - Fittings

Please check you have all the panels listed below

Note: The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

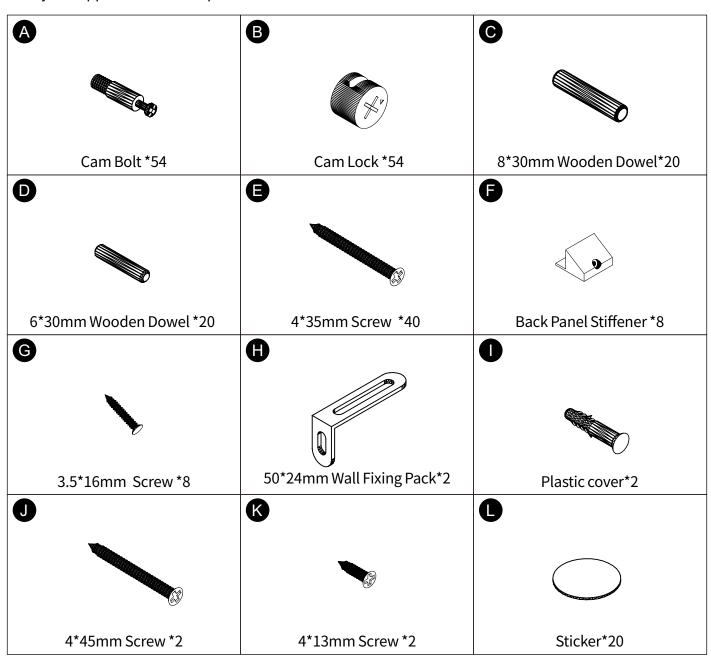

Tools required

 

Ruler - Use this ruler to help correctly identify the screws


0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

The screws length is measured from the head to the point (30mm screw shown).

Using Camlocks

Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

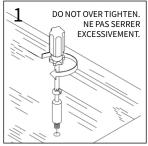

Step 2


Push the male camlock into the entry hole.



Step 3


Insert the femle camlock as shown in the instruction.


Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

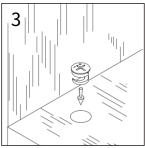



Step 4


Turn the female camlock clockwise with a screwdriver.
You should feel a click when the camlock is locked in place.
The joint is now secure.

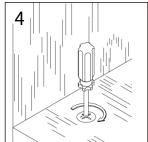

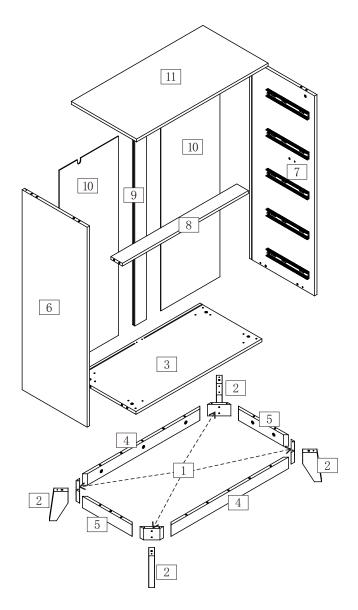


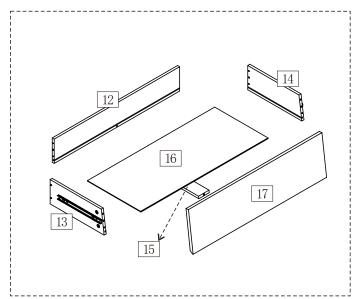

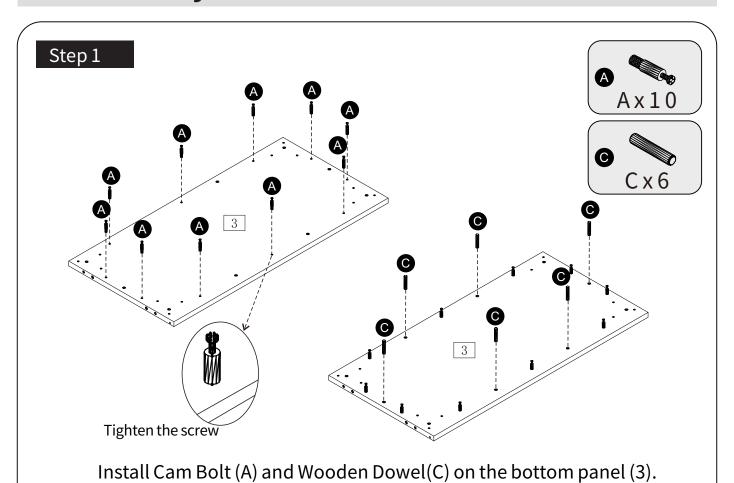


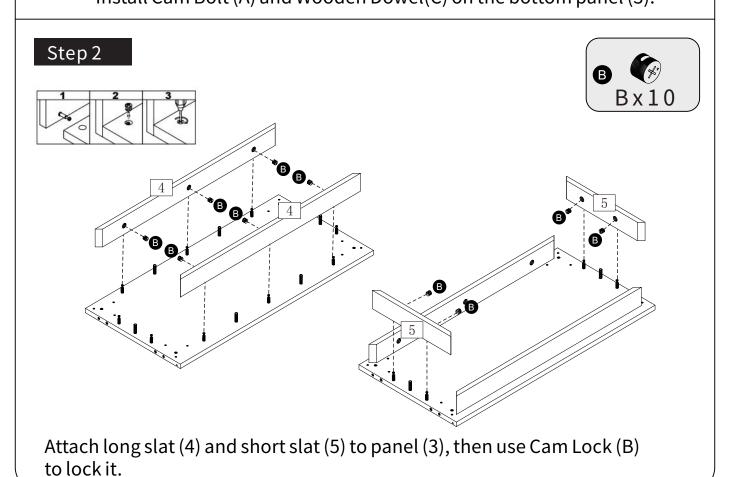


Step 3 Ex8 2 $\times 4$ Use screw (E) to secure block(1) to block (2) with a screwdriver.

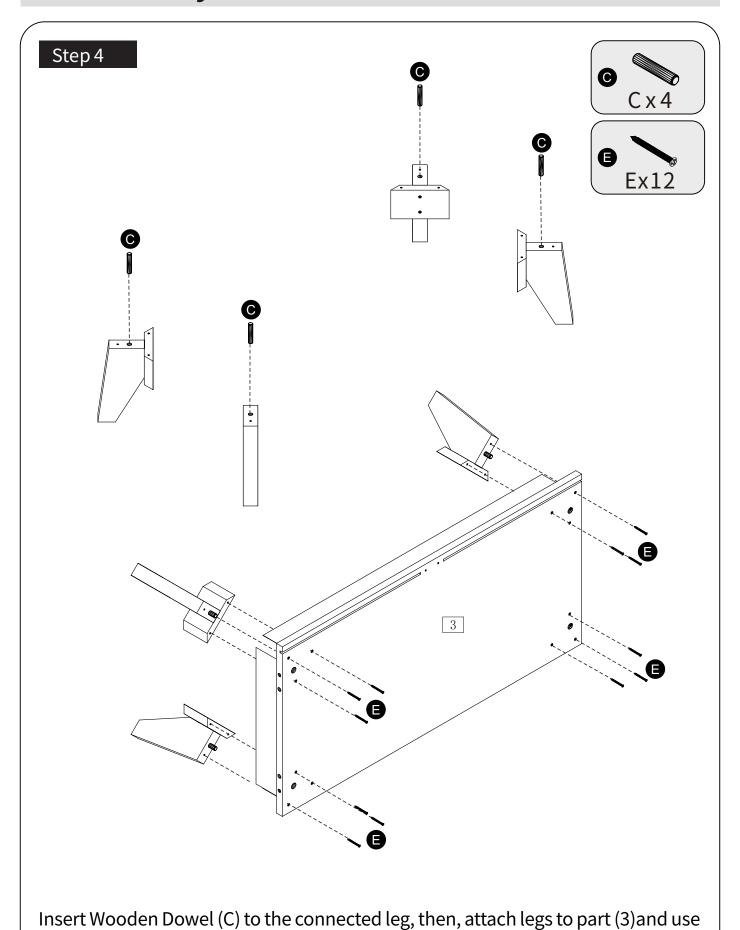


screw (E) to lock it.

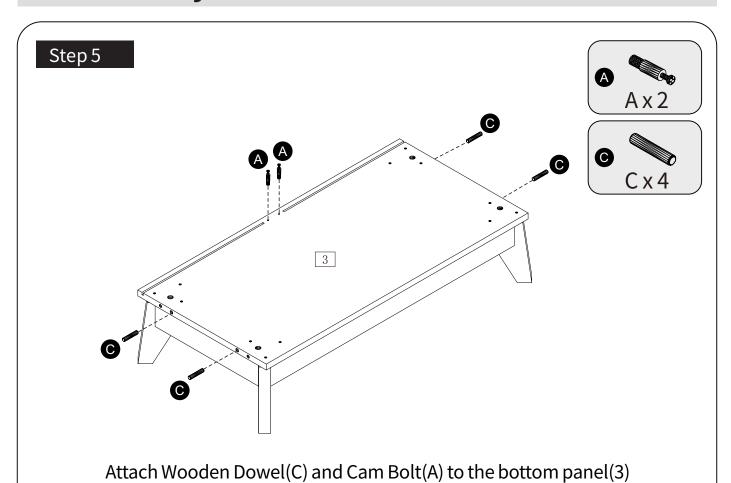

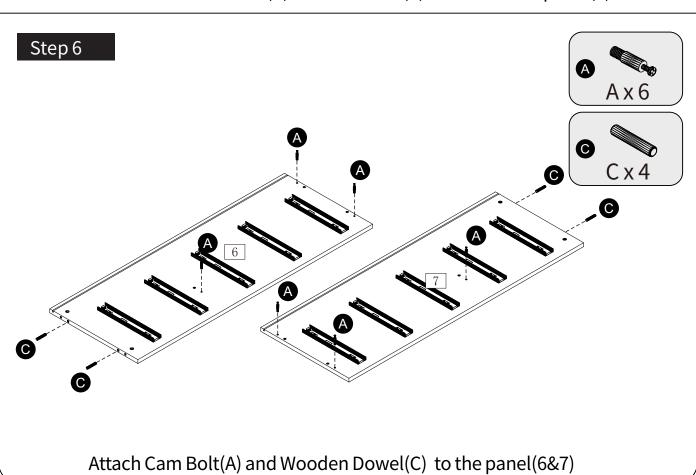

Step 7 Bx2

Attach panel (6) to panel (3), then insert Cam Lock (B) to panel (3) to lock it.

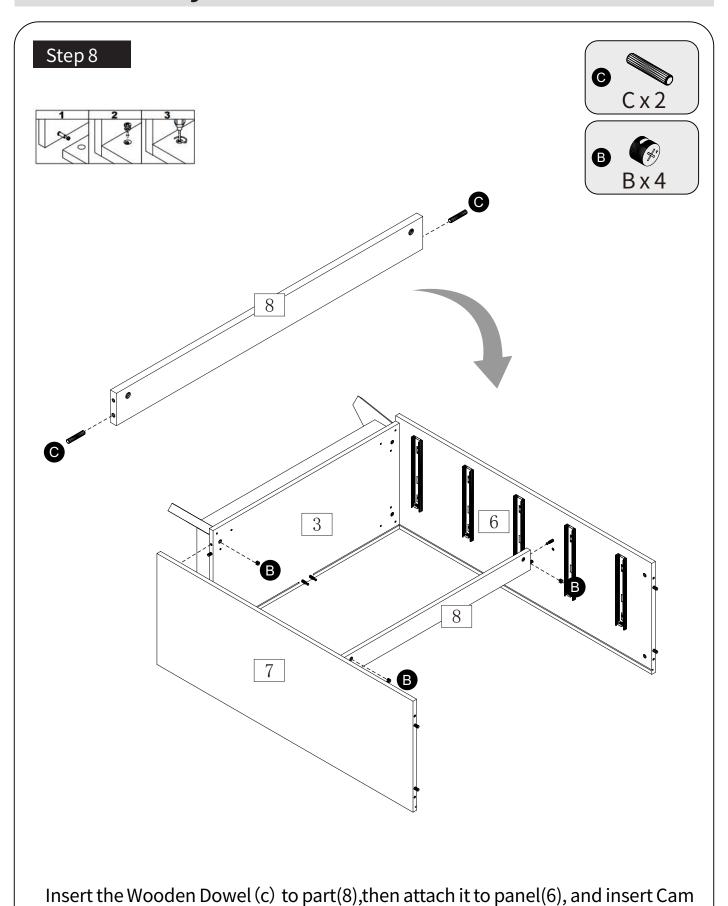


Lock(B) to panel(8) to lock it. Slide panel (7) to into panel (3.8), and insert Cam


Lock(B) to panel(3.8) to lock it.


Step 9 Attach part(9) to panel(3), then insert Cam Lock(B) to panel(9) to lock it.

Step 10

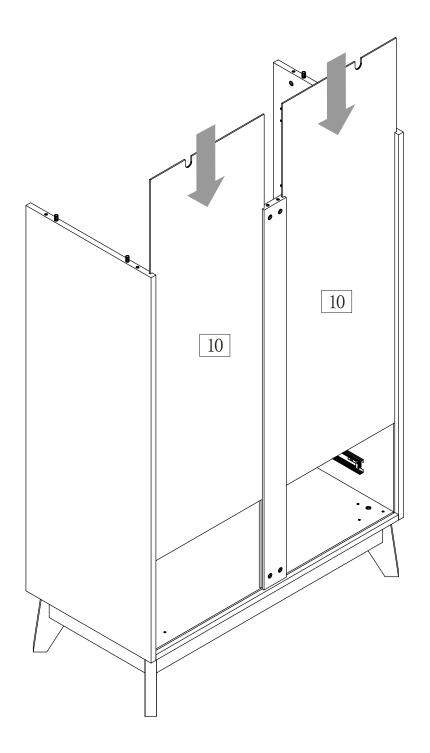



Slide the back panel (10) into grooves as per diagram.

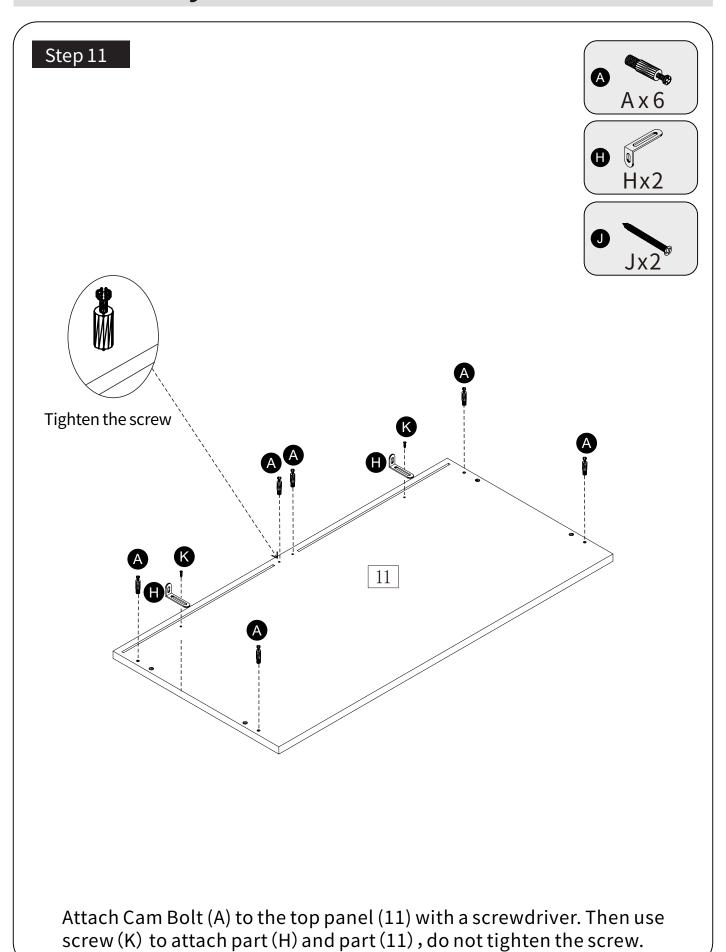


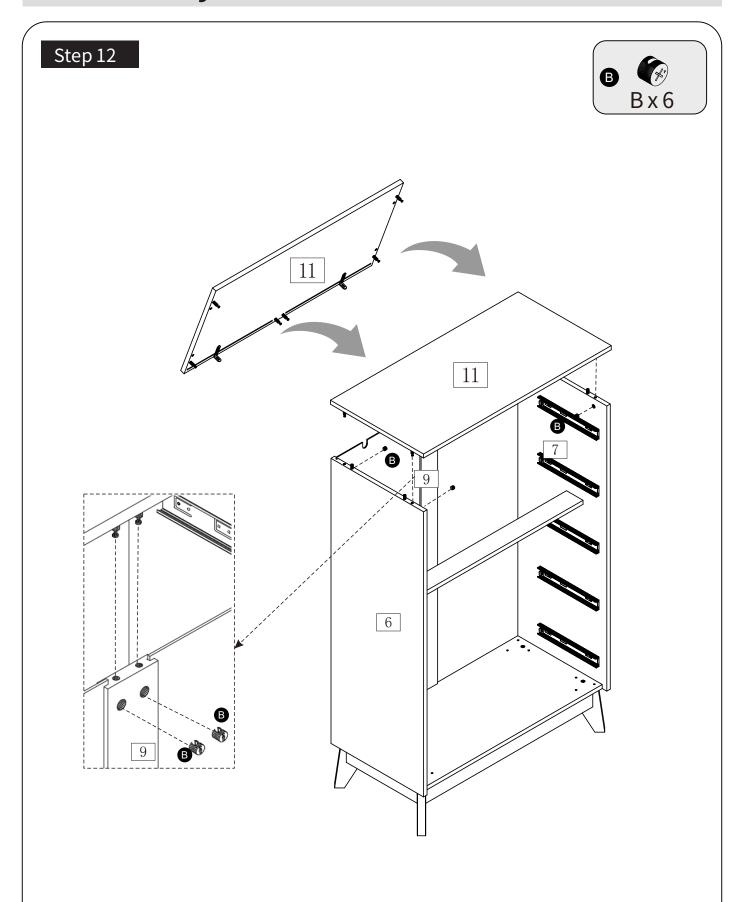


Turn over the panel (11) and attach it to the panel (6&7) and panel (9), then insert Cam lock (B) to panel (6,7,9) to lock it.

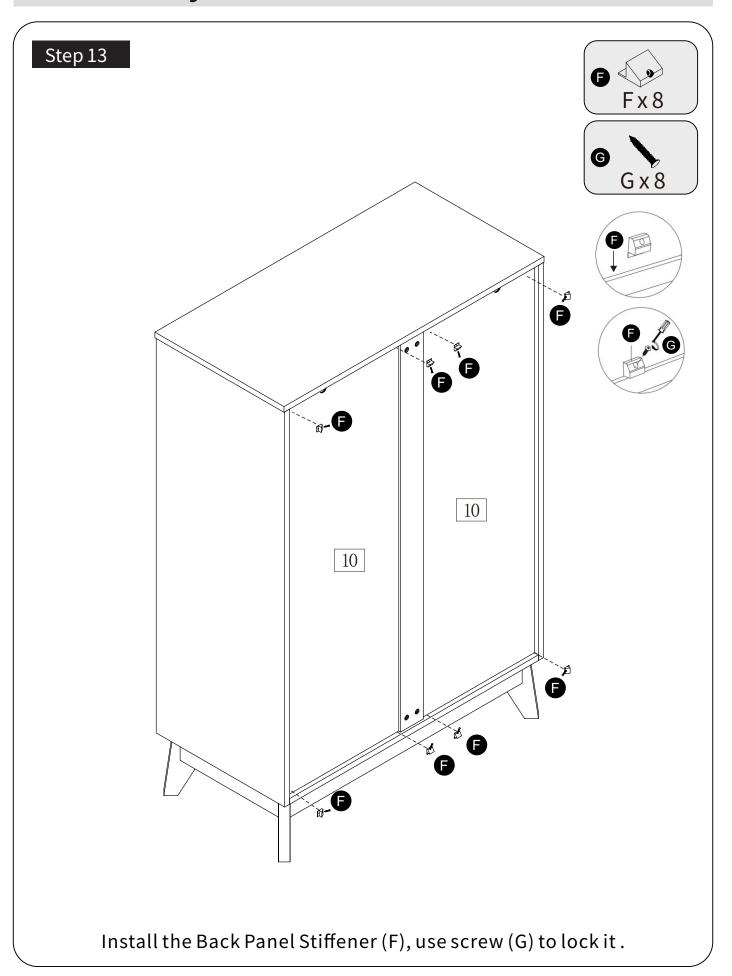

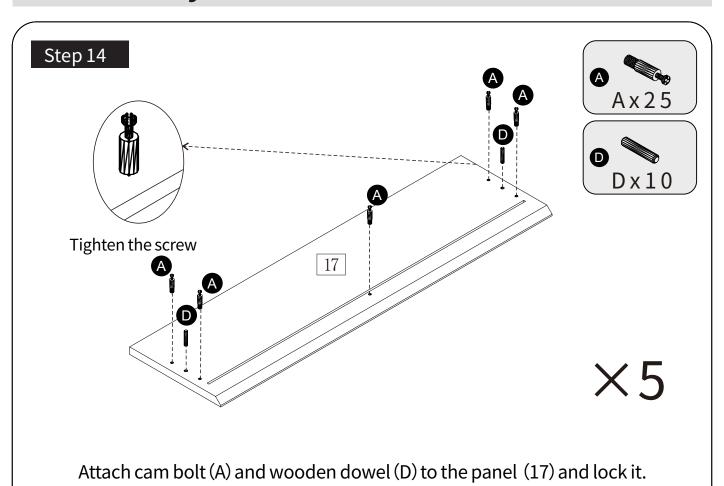

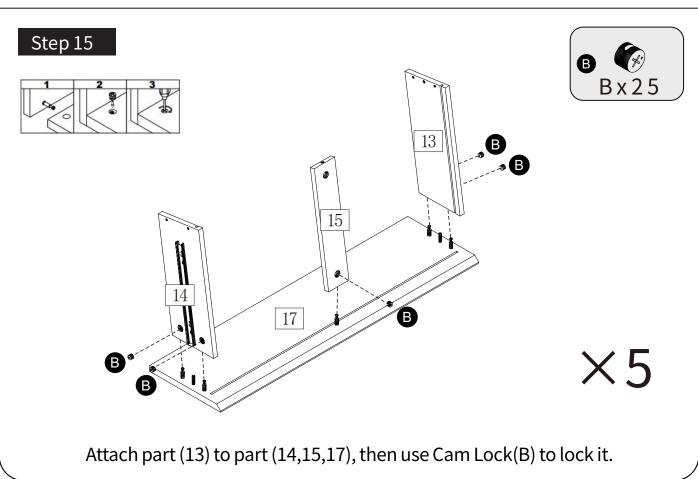

Step 16

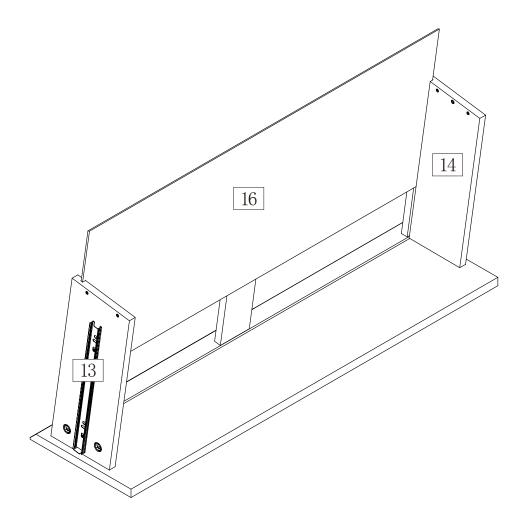


 $\times 5$


Slide panel (16) into grooves as per diagram.


Step 17 Ax5D x 1 0 0 12 $\times 5$

Attach Cam bolt (A) and wooden dowel (D) to panel (12) with a screwdriver.

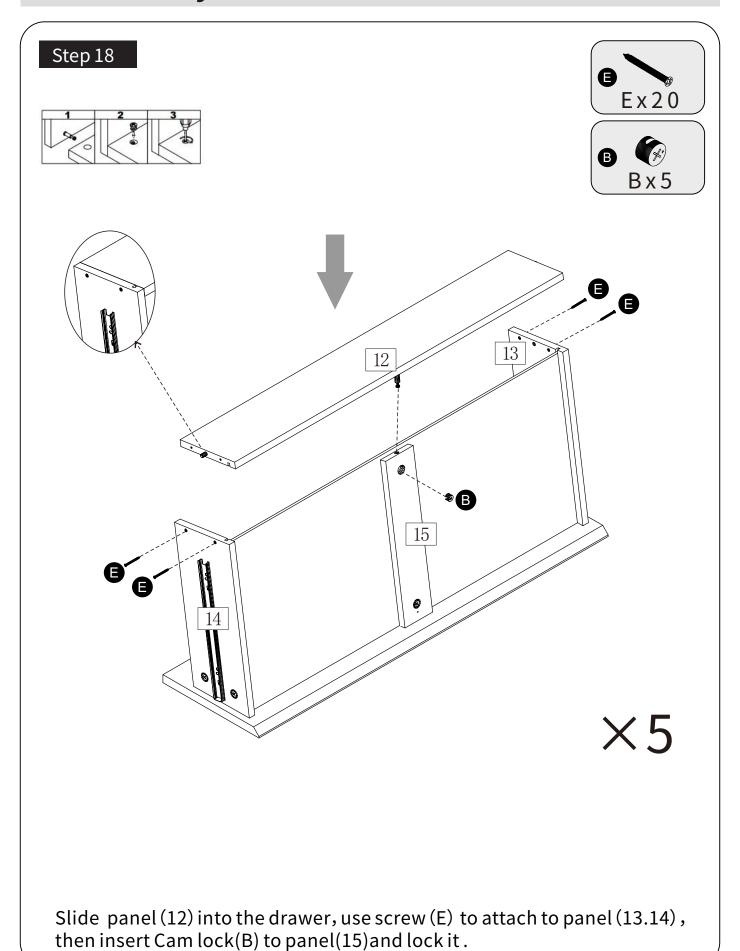

 Step 19




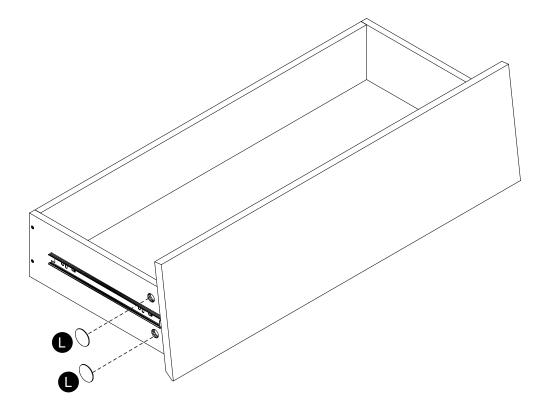

 $\times 5$

Use sticker (L) to cover screw holes.

 Step 20






It is highly recomm
-ended that the unit
is secured to the wall.

- 1. Move the unit into desired position.
- 2. Mark the wall on which the fixing holes needed to be drilled
- 3. Drill holes and insert wall plugs (I). Only one type of wall plug is provided.

Warning: Before driling, check wall for hidden pipes


and cables!

4. Pass L-shaped fixture(H) through the notch of the back panel (10), then secure it to the wall using screws(J) and plastic cover (I), finally, use screws (k) to lock the panel (11)

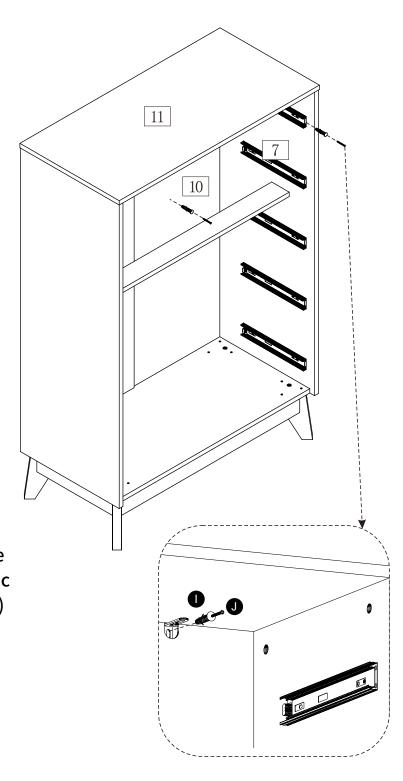

Step 21

1 It is highly recommended that the unit is secured to the wall. You can skip to the next step first, then come back to this step once the dresser is secured to the wall.

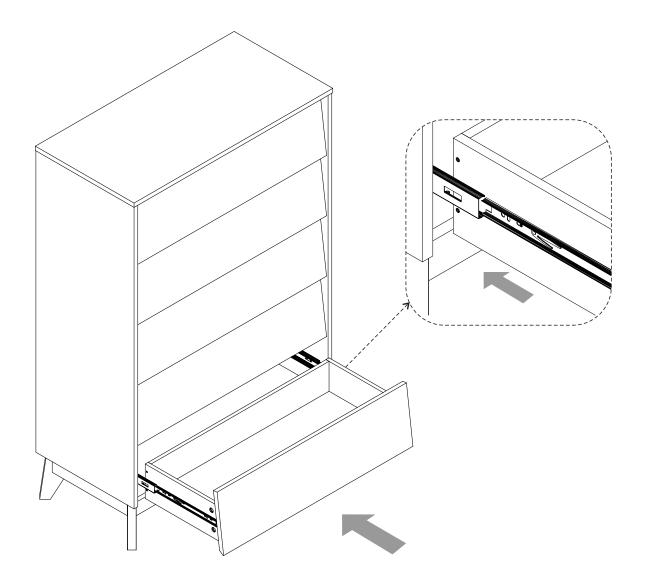


Attention:

- 1. Pull out the rail installed on the cabinet.
- 2. Align the slide runners on the drawer with the unit and push it carefully inside until it stops.
- ★If the drawer does not go in smoothly please take it out and repeat the steps.

Step 22

⚠ If you need to remove the drawer, please follow these steps: Fully extend the drawer and locate the release latch on the drawer rail. Push the latch on the left side up and the latch on the right side down. While supporting the drawer, pull it outwards to detach it.

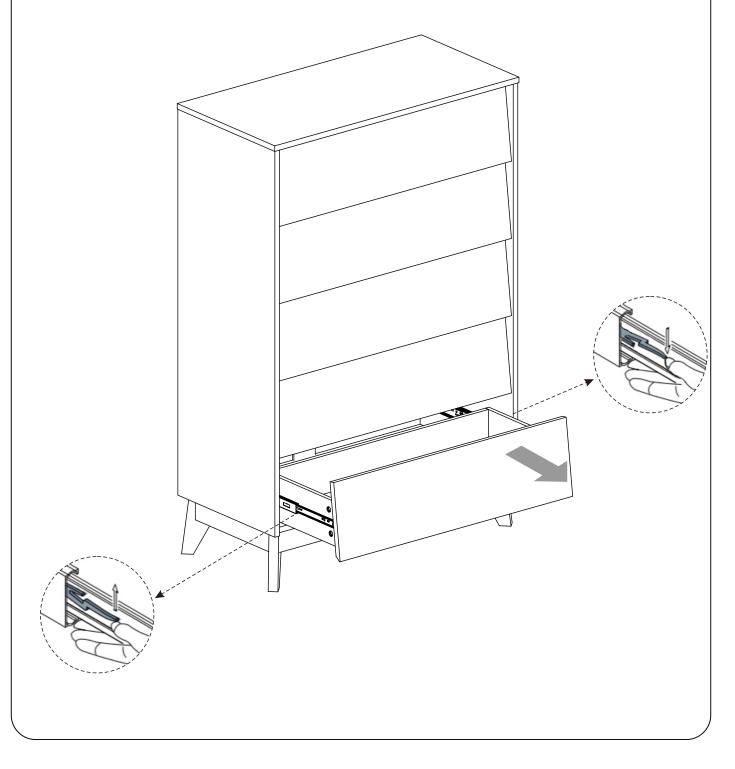

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



-these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for **supporting your unit. Consult a qualified tradesperson if you** are unsure.

 
Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick breeze block, concrete, stone or wood.

No.1"General Purpose" wall plug




Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For lightloads, general purpose wall plugs can be used.

 No.2 "Plasterboard" wall plug




For use when attaching light loads onto plasterboard partitions.

 No.3 "Cavity Fixing" wall plug



For use with plasterboard partitions or hollow wooden doors.

 
No.4"Cavity Fixing - Heavy Duty" wall plug



For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.


Safety: always check the fitting and location to ensure your safety in and around the home

 No.5"Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6"Shield Anchor" wall plug - heavy loads



For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose



Care & Maintenance