
### TV Stand

### Assembly Instructions - Please keep for future reference

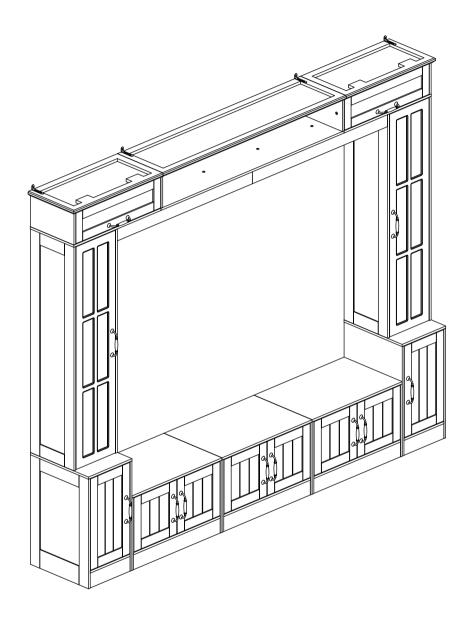

#### **Dimensions**

Width - 98 inch Depth - 15.7 inch Height - 79 inch

Any question please feel free to contact us: support@amer-life.com TEL:(901) 347-2181 We will provide further assistance within 24 hours.

Important – Please read these instructions fully before starting assembly



#### **IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.





#### **AVOID SCRATCHES!**


In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.



#### **IMPROVE EFFICIENCY!**

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



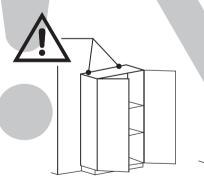



#### ANTI-TOPPLE WARNING!

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.



### Safety and Care Advice

#### Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

#### Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
   Take to your local authority waste disposal centre.

### **Handy Hints**

- Assemble all parts and bolts loosely during assembly, only once the product is comKlete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

# WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-


Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


### Componets - Panels

### Please check you have all the panels listed below

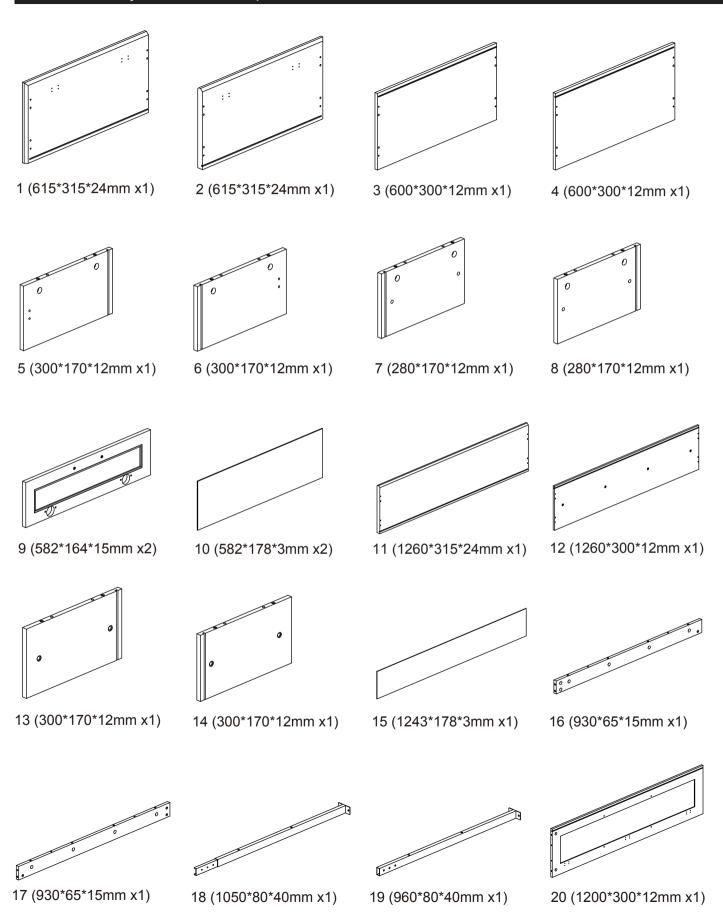


### Componets - Panels

#### Please check you have all the panels listed below

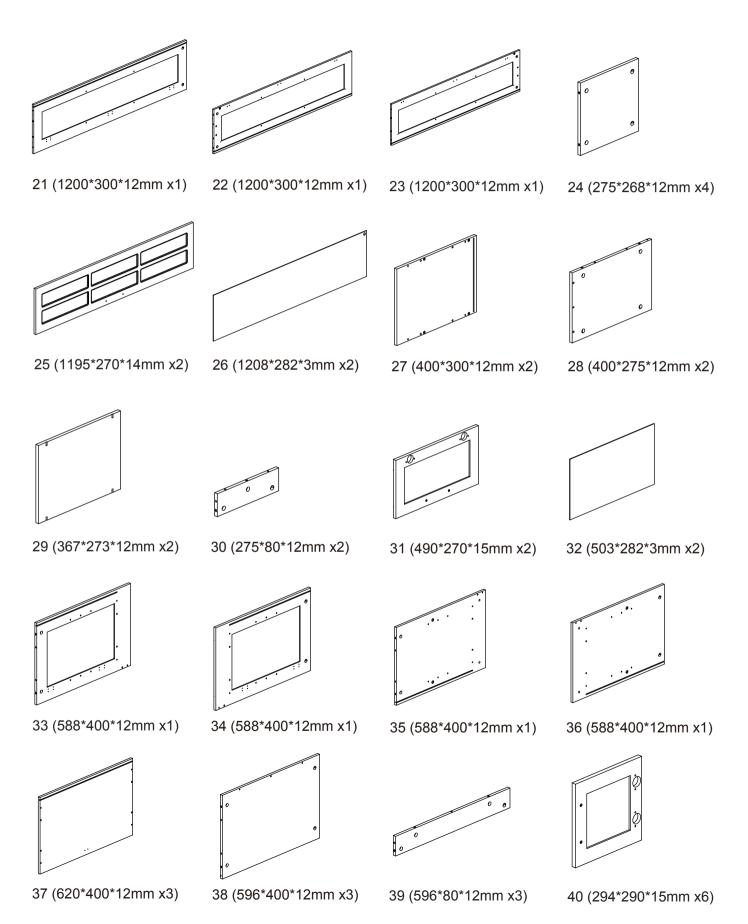


# Componets - Panels

 
### Please check you have all the panels listed below

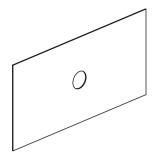





42 (388\*400\*12mm x3)

 

43 (388\*400\*12mm x3)


### Componets - Fittings
 
### Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

<b>A</b>	B ***		
6*30mm Wooden Dowel x 1	03 6*35mm Cam E	30lt x 102	Cam Lock x 104
		•	
6.5*60mm Cam Bolt x 2	3.5*12mm Scre	w x 174 2	2.5*10mm Screw x 8
<b>6</b>		•	
4*40mm Screw x 20	4*16mm bolt x	24 X	12
X 4	x 32	A TOTAL A	
	_		
M			
x 1	x 26	X	8
<b>P</b>	0	•	<b>B</b> ()
x 9	x 8	Х	<b>c</b> 8
		•	
6*45mm Bolt x 6	6*12 mm Bolt x	20 N	lut x 4
		•	
7.8*18mm Bolt x 20 7.8*12mm Bol		6	*10 mm Bolt x 7
•	2	a #pp	6
x 2	x 2	3*12mm Screw x 8	x 1

#### Tools required



Phllips screwdriver (medium & large)

#### Ruler - Use this ruler to help correctly identify the screws


0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

The screws length is measured from the head to the point (30mm screw shown).

### **Using Camlocks**


### Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

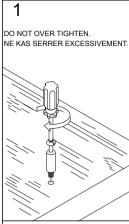

### Step 2


Push the male camlock into the entry hole.

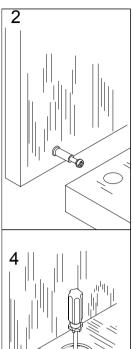

### Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

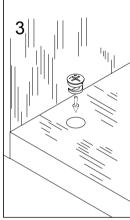


### Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.




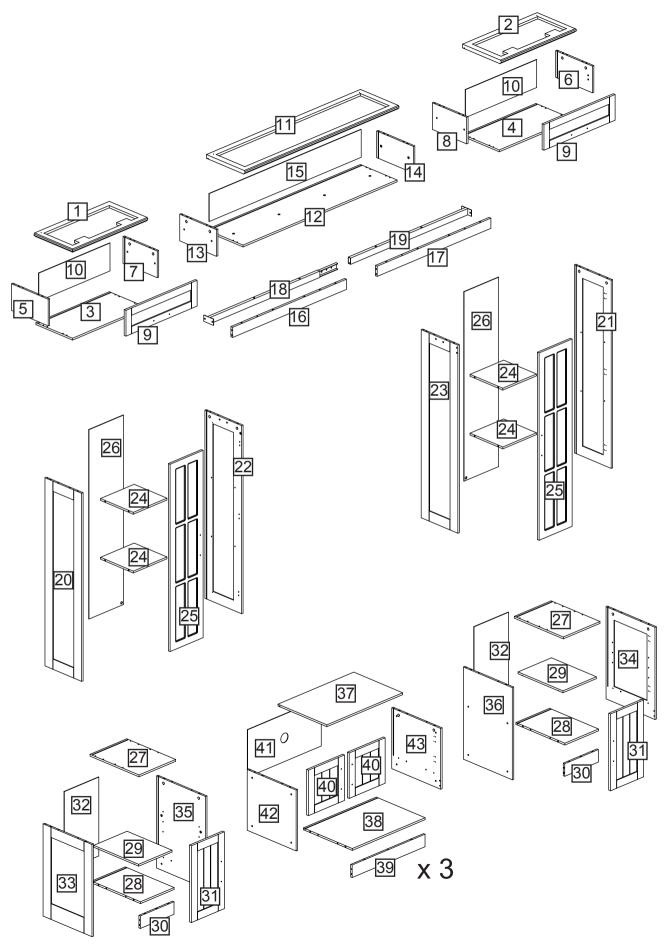


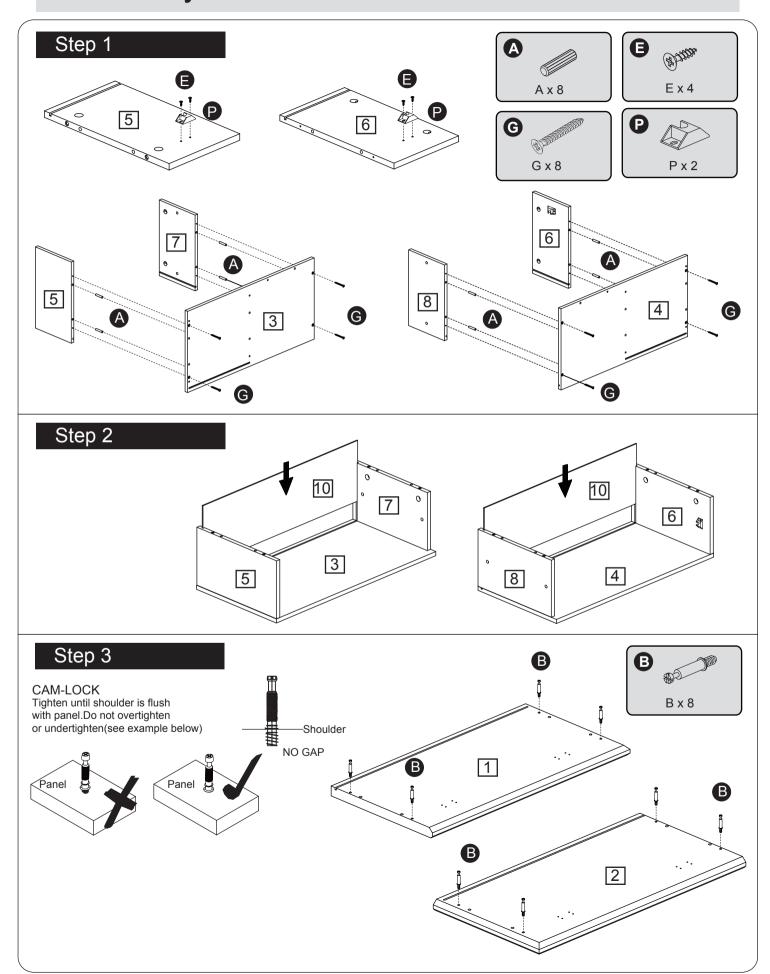



### Step 4 A C x 8 A x 8 2 A A A A **G 1**6 5 3 8 Step 5 CAM-LOCK Tighten until shoulder is flush B x 10 with panel.Do not overtighten or undertighten(see example below) -Shoulder NO GAP Panel Panel B 4 3

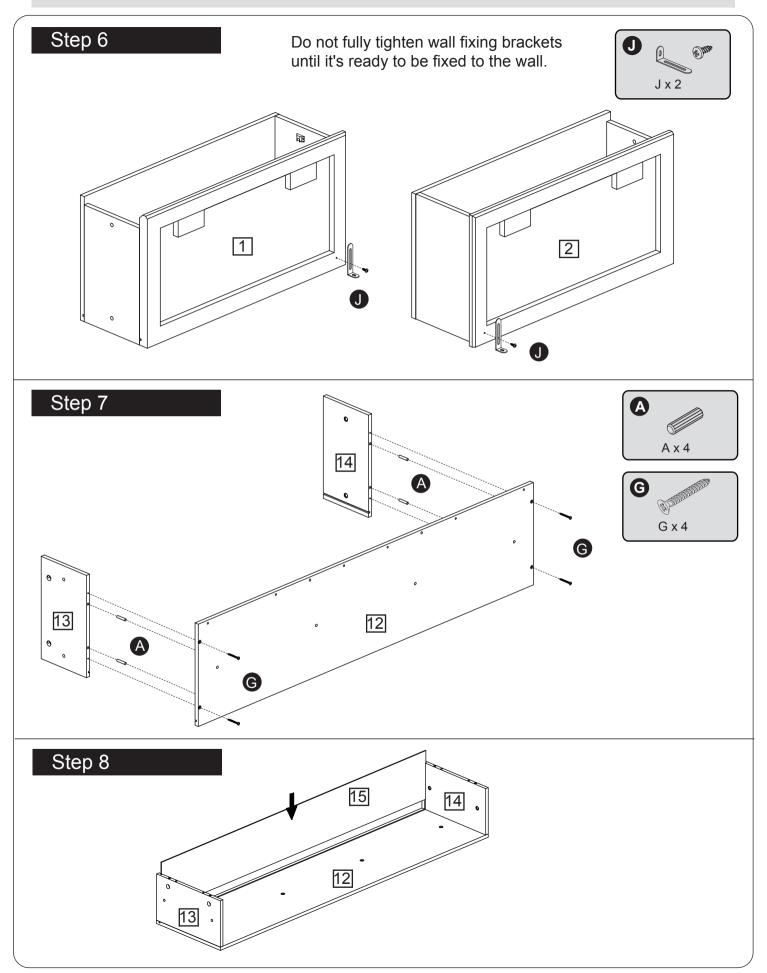


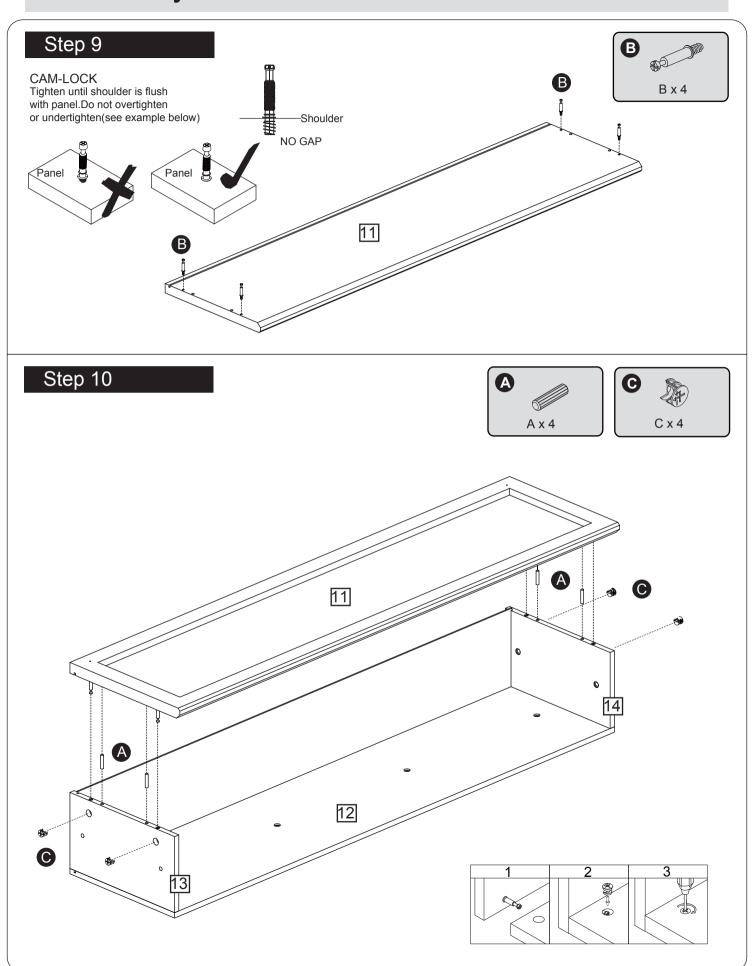


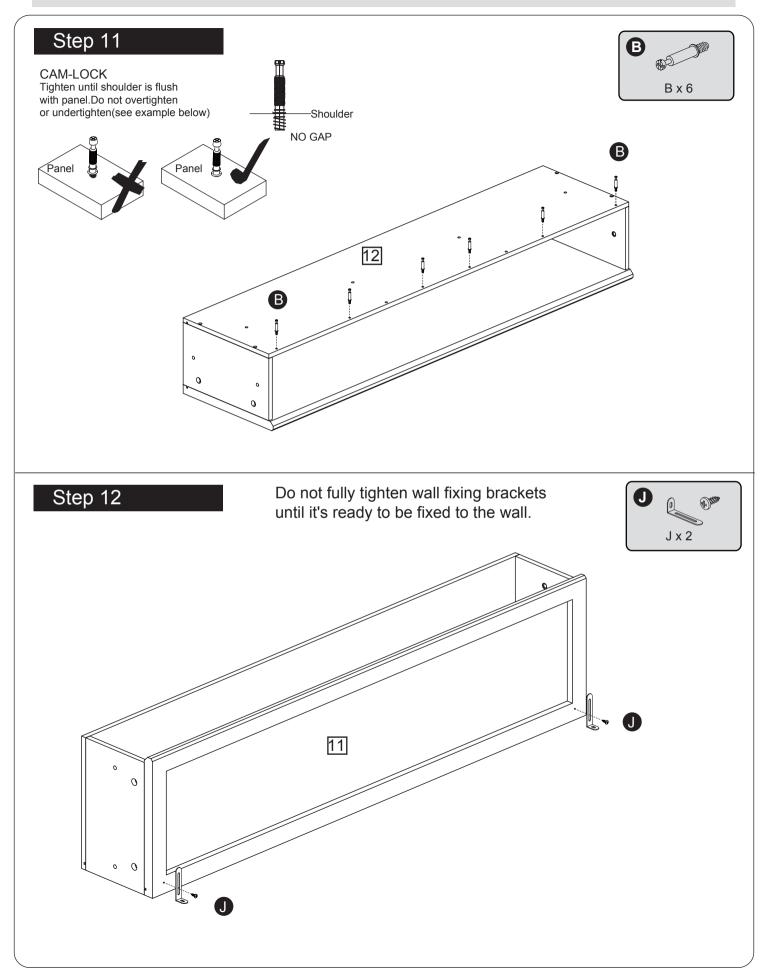


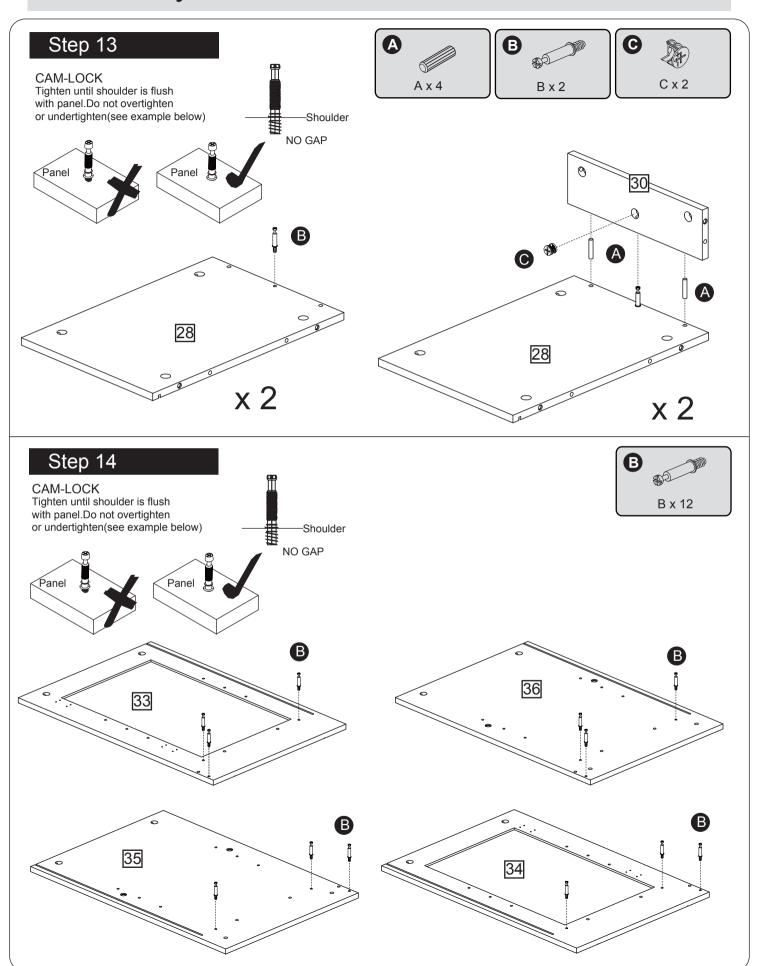


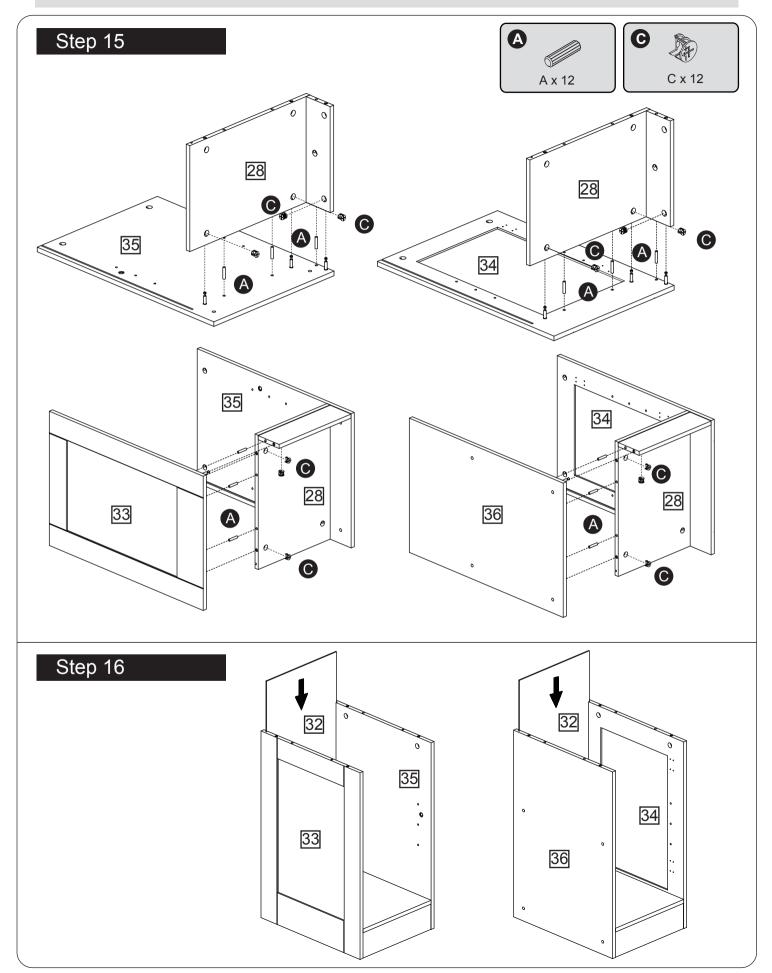


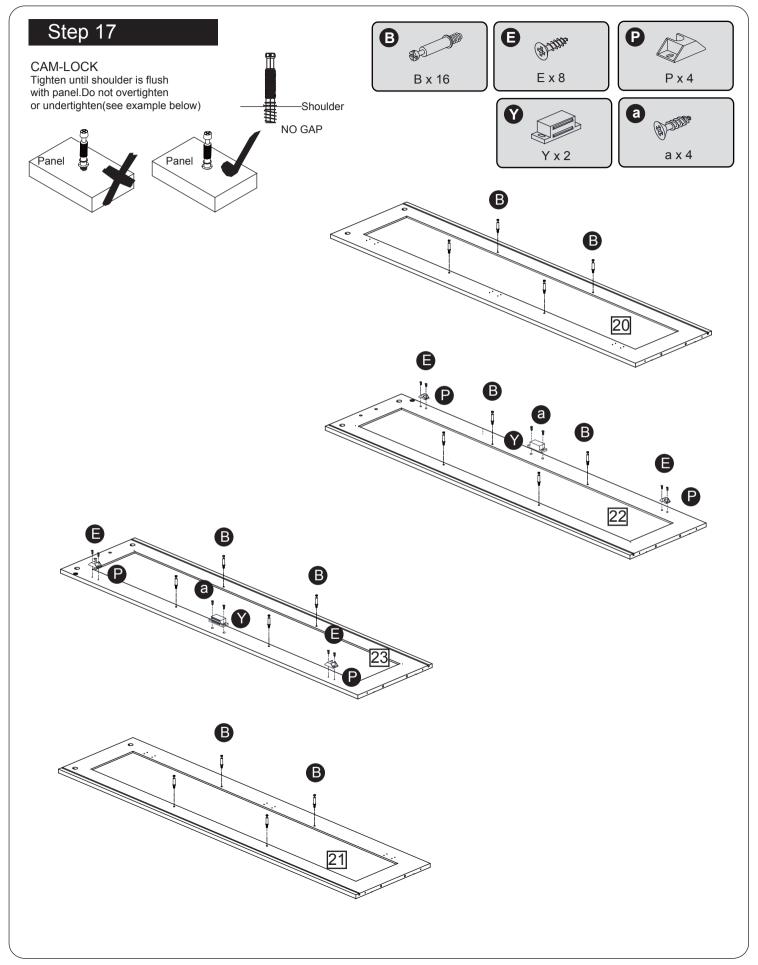


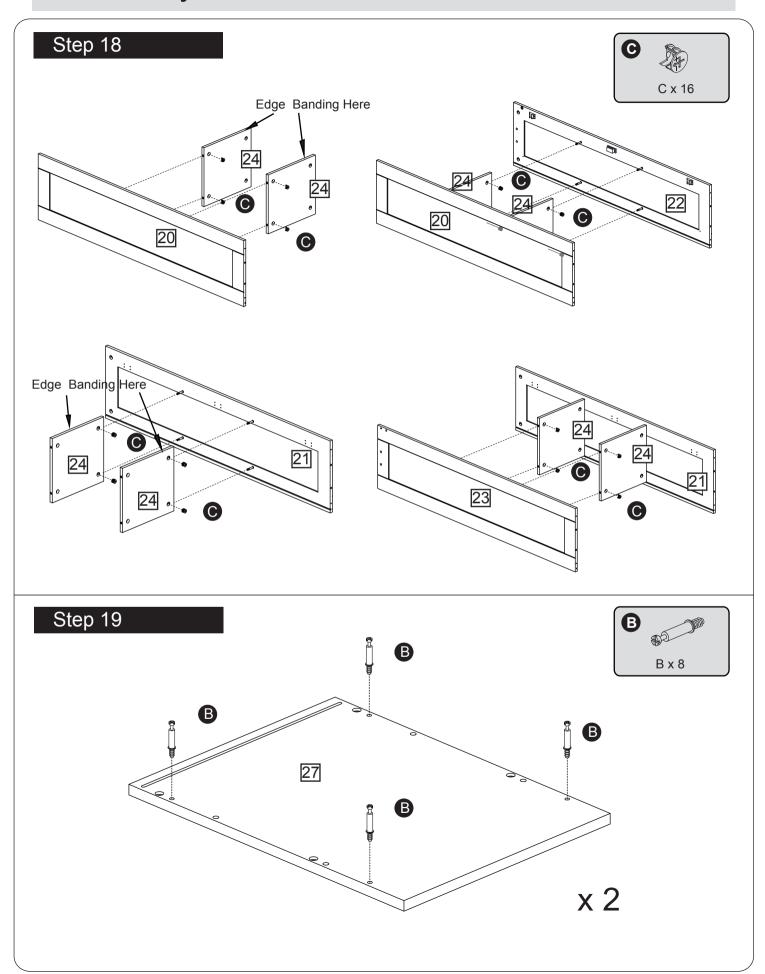


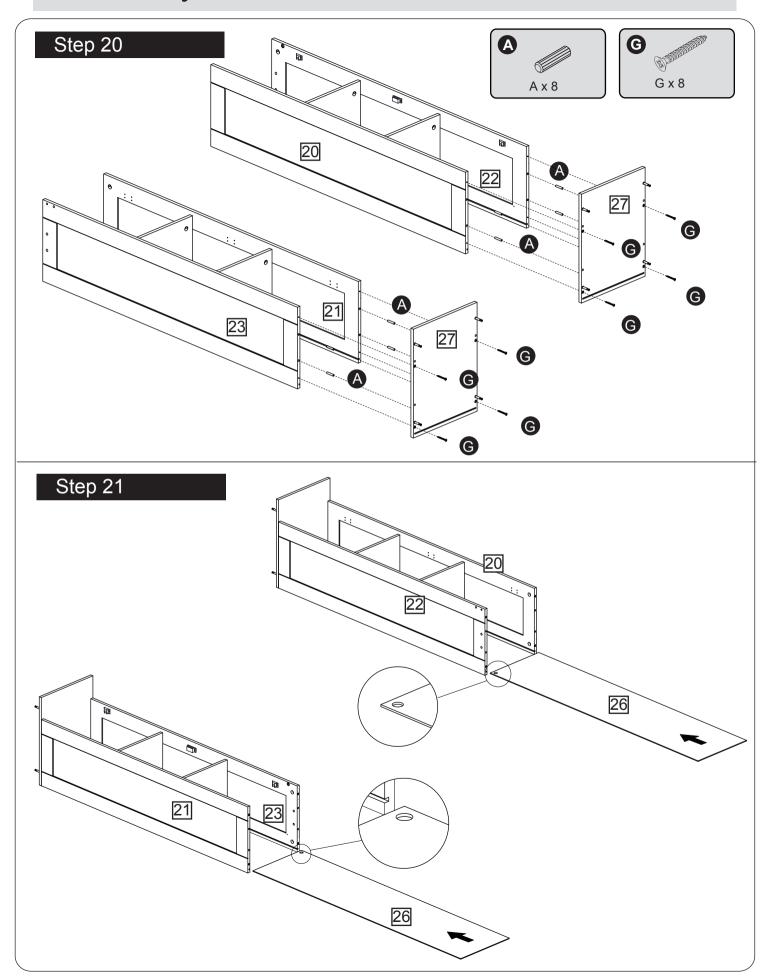


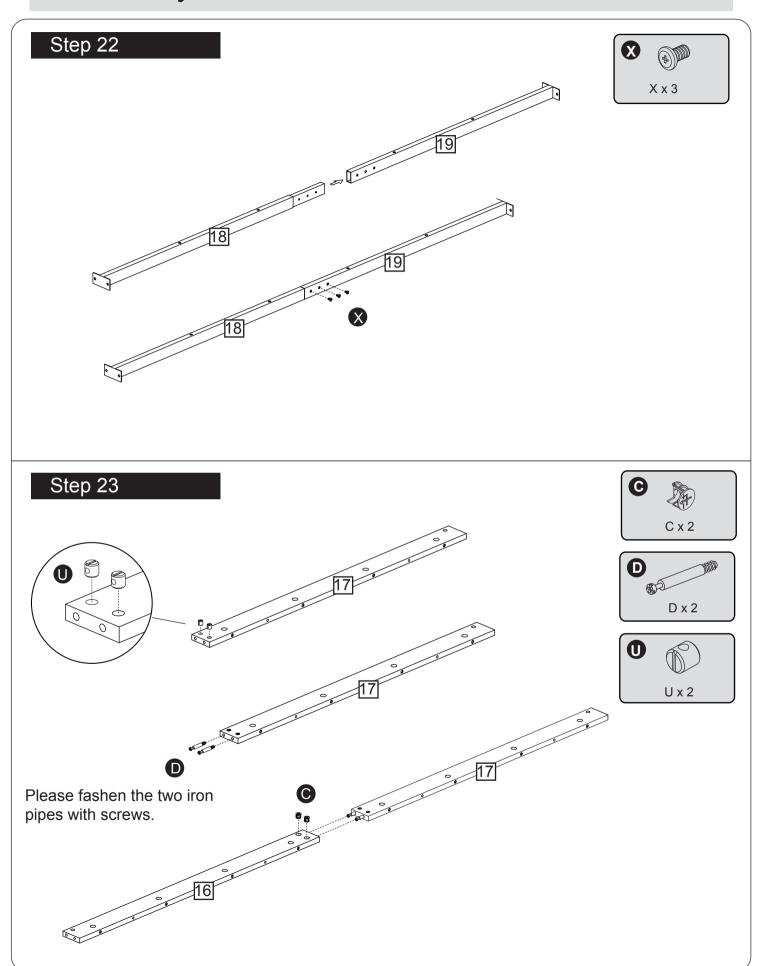


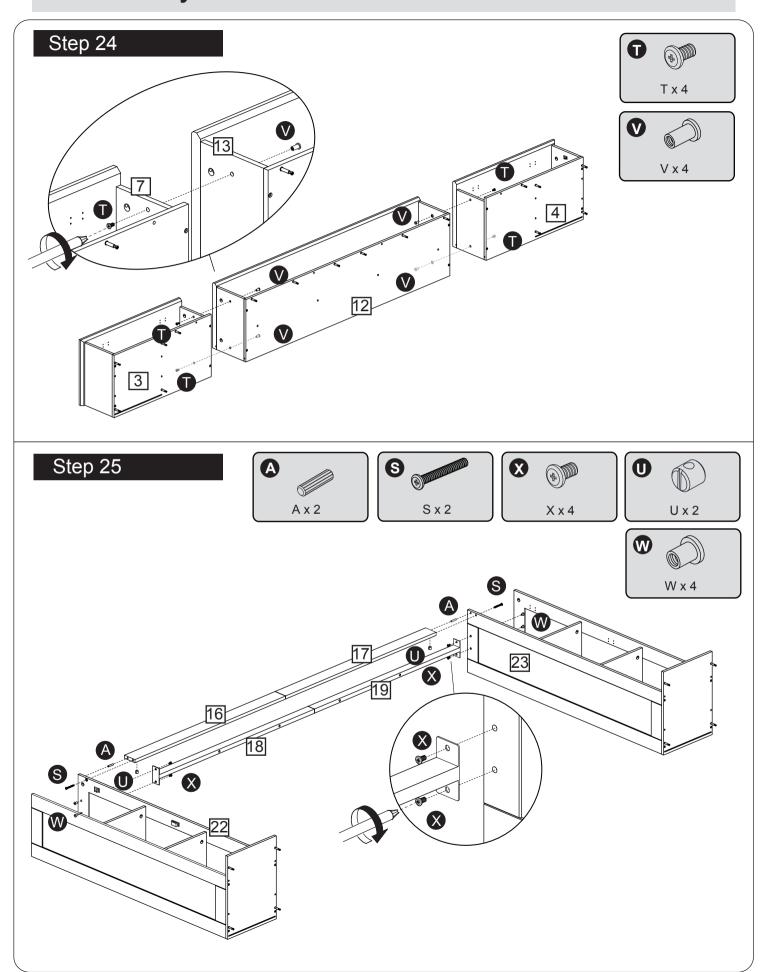


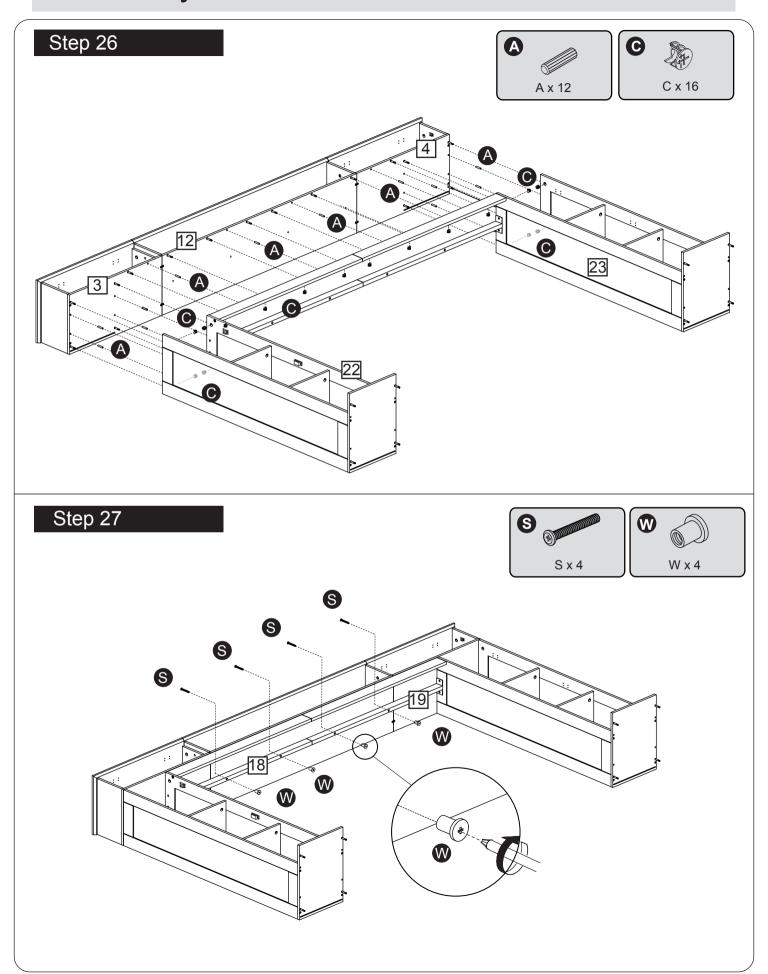


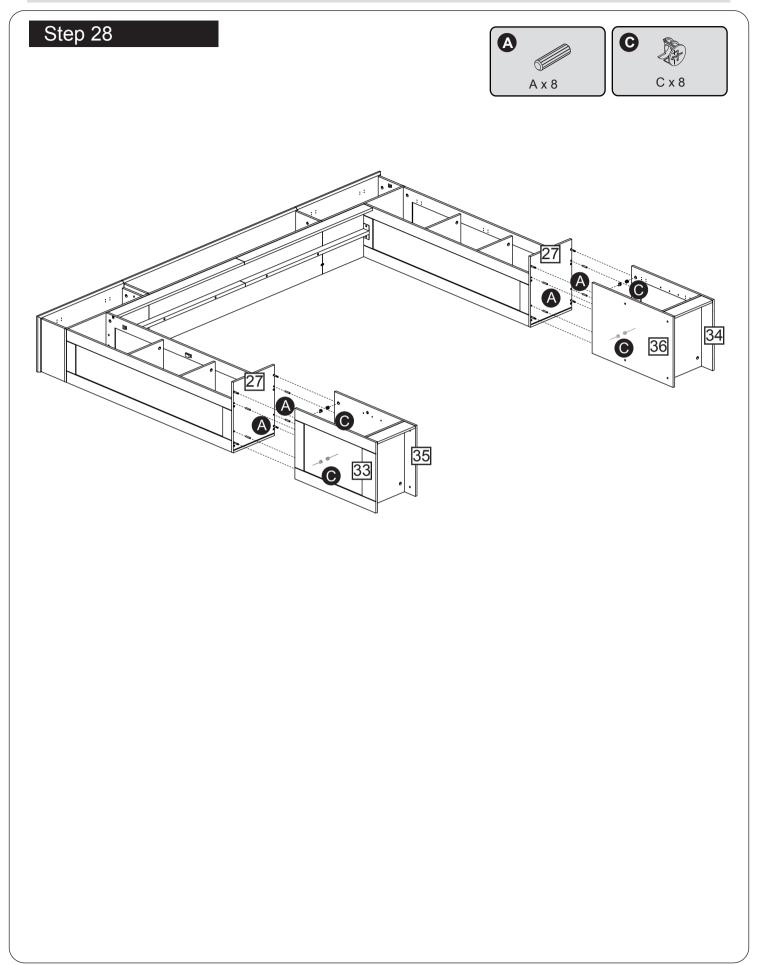


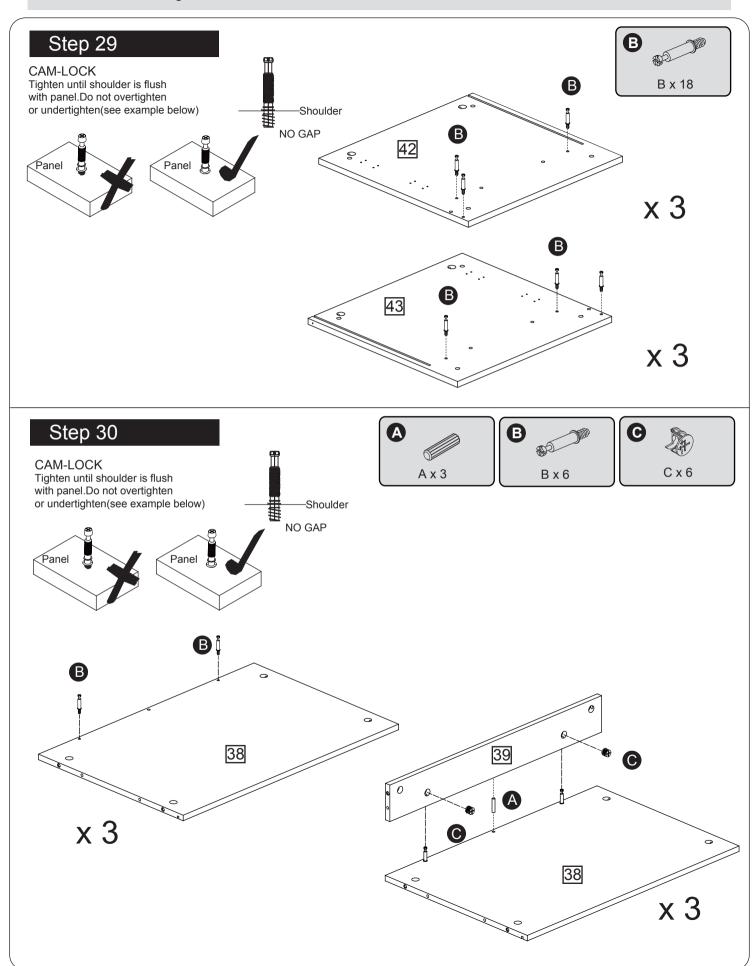


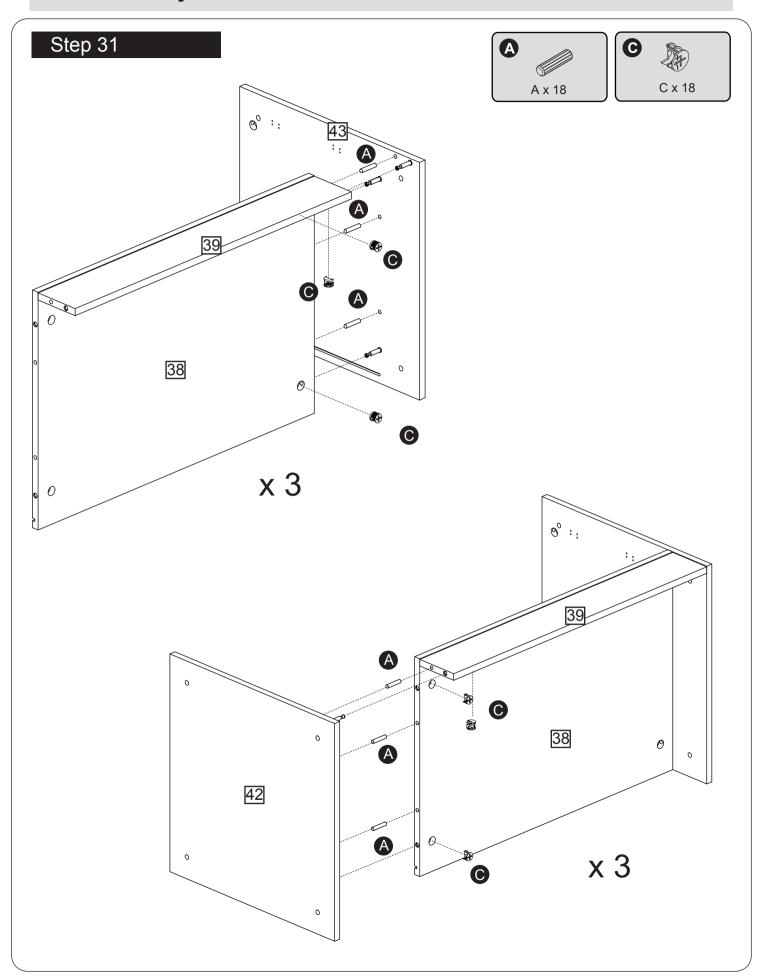


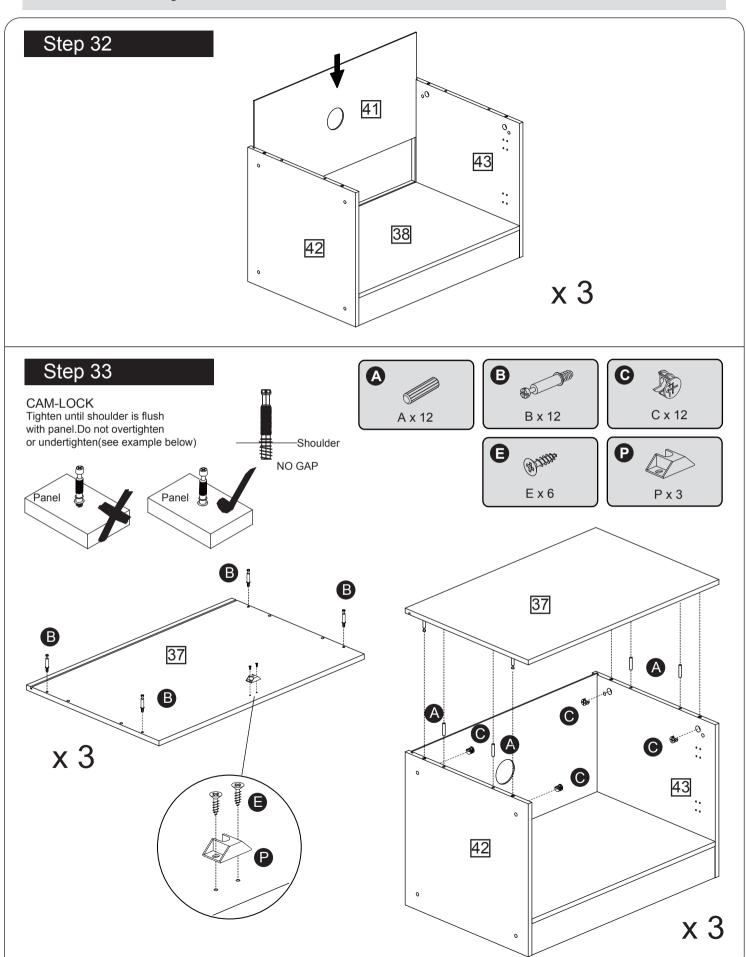

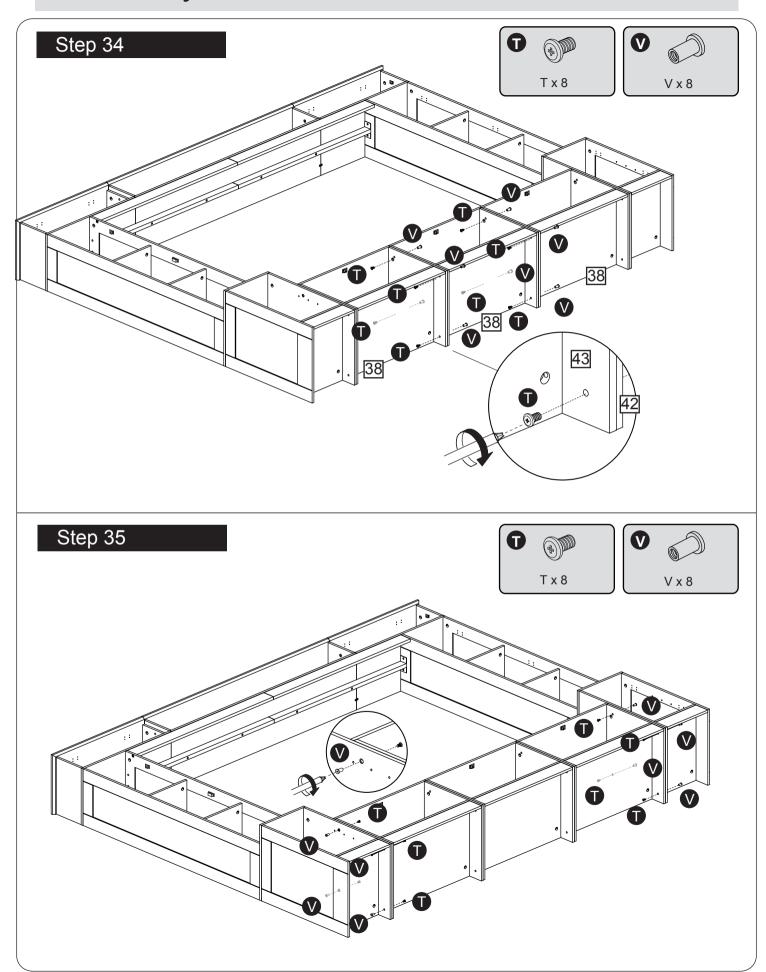

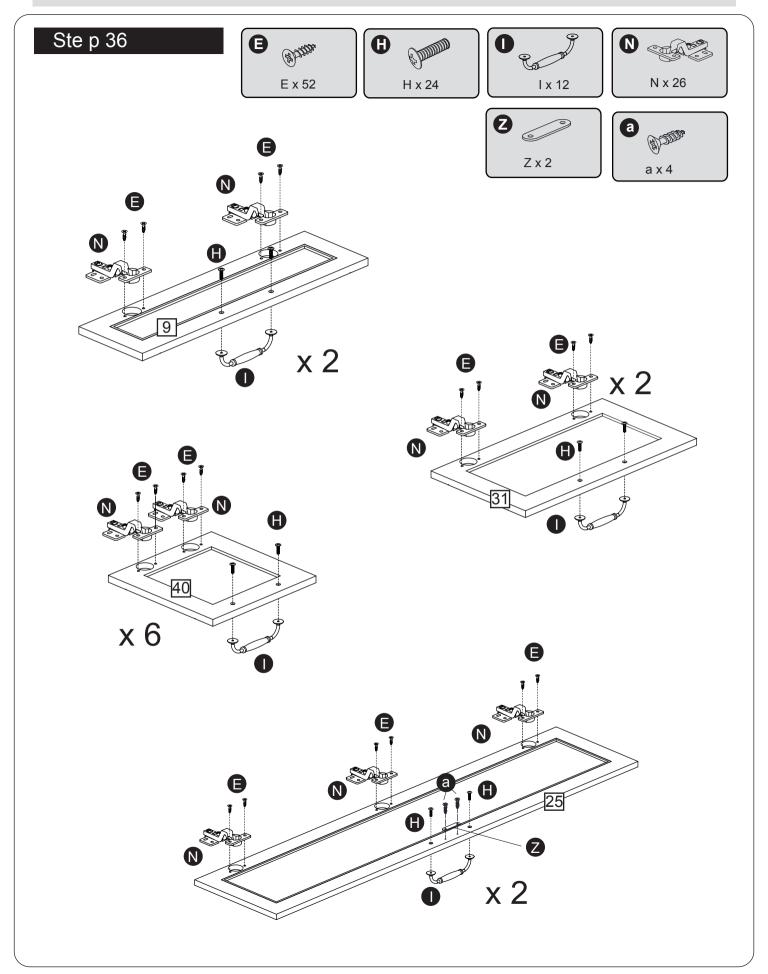


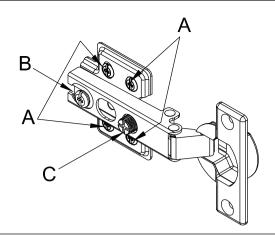

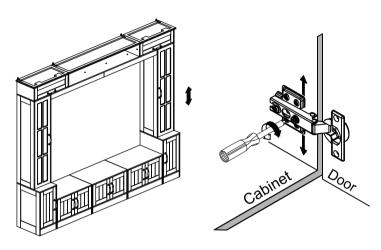


#### To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

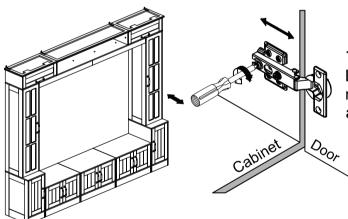

### To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

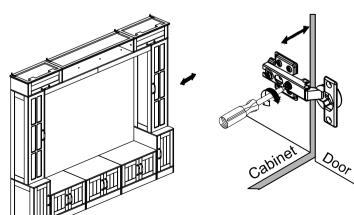

#### To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.

