

|TV Stand

 
SKU:
C001054010
C001054020

V1.0

TV Stand

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

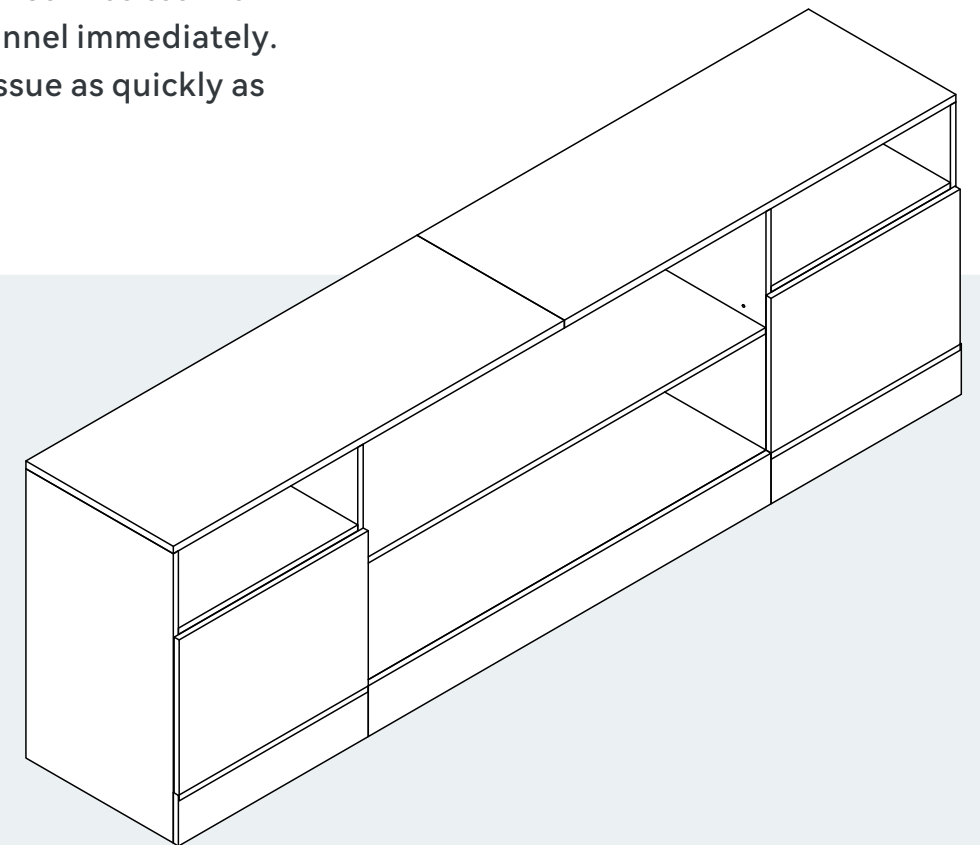

CONTACT US

- **Email:** service@grandtunnel.com
In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

Important – Please read these instructions carefully before starting the installation.

EN

Before Assembly



Thank you for choosing our product!

To ensure a smooth installation process, please read this guide carefully to familiarize yourself with the required tools, materials, and installation steps.

Follow the relevant sections to avoid any damage caused by improper installation, and make sure to review all operation and safety guidelines for correct installation procedures.

Packaging Notice:

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

Safety and Care Advice



Important :

Please read these instructions fully before starting assembly.

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.

Warning

In order to help prevent overturning, please follow these instructions.

- Use the anti tip strap or wall fixing method provided (if applicable).
- Do not allow children to climb or hang on the furniture.
- Do not open more than one drawer at a time.
- Do not place heavy items in the top drawers.
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose.
- Please note that only the anti tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type.

Customer Service Guide



Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6×30mm screws.”

Contact Us:

By Email:

Send an email to **service@grandtunnel.com**, with the subject line “Missing Parts Issue.” Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with order details to **service@grandtunnel.com**, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: **service@grandtunnel.com**).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

Customer Service Email: **service@grandtunnel.com**

Helpful Tips

To process your issue efficiently, please prepare the following information:

 
 
 
 
 
 
 
 
 
 
 
- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.






Thank you for your trust and support!
We hope you enjoy using our product!

Parts List - Panels



Please check you have all the panels listed below.

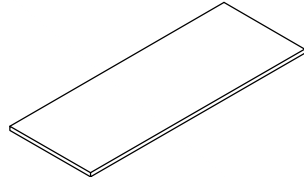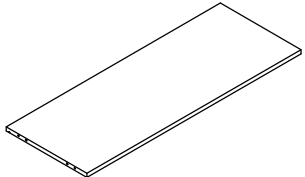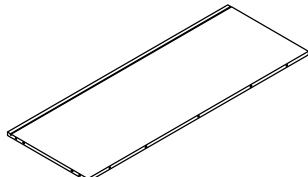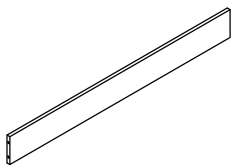		
1 890x337x15mm x1	2 890x337x15mm x1	3 569x336x12mm x1
		
4 569x336x12mm x1	5 569x336x12mm x1	6 569x336x12mm x1
		
7 914x336x12mm x1	8 408x336x12mm x2	10 431x99x12mm x1
		
11 913x99x12mm x1	12 431x99x12mm x1	13 415x157x3mm x2


 
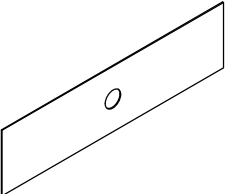 
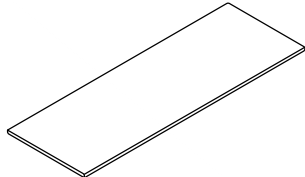 
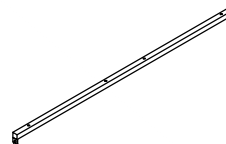 
 
		
14 415x315x3mm x2	15 922x238x3mm x2	16 913mm x1
		
17 430x317x12mm x2	18 912x317x12mm x1	19 915mm x1
		
20 408x336x12mm x2		

Parts List - Fittings



Please check you have all the fittings listed below.

      Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

			
A x37	B x41	C ø6x30mm x38	D x2
			
E ø3x12mm x17	F x4	G ø4x12mm x24	H x9
			
J x10	K ø8x40mm x2	L ø4x30mm x4	M ø4x12mm x2
			
N ø4x12mm x2	O ø4x40mm x2	P ø3x14mm x20	Q x1
			
R ø5x22mm x4	S ø20mm x12	T x2	

 
Tools required



Phillips screwdriver
(medium & large)

Ruler

Use this ruler to help correctly identify the screws

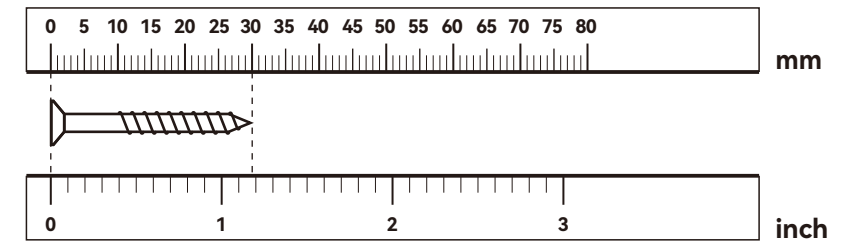

The screws length is measured from the head to the point (30mm screw shown).

 
Using Camlocks



Step 1


Connect the male camlock as directed in the assembly instructions using a screwdriver.

DO NOT OVER TIGHTEN.

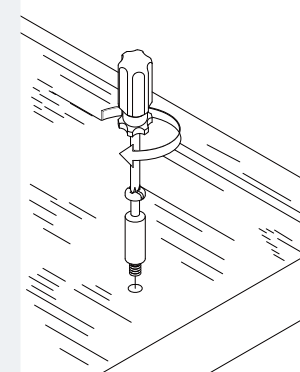

Step 2

 
Push the male camlock into the entry hole.

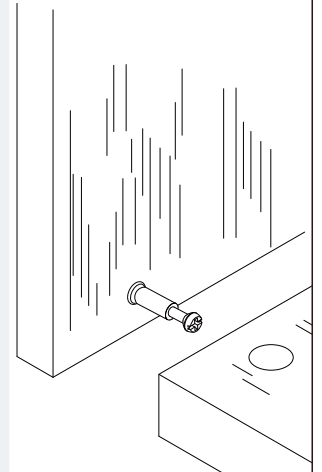

Step 3

Insert the female camlock as shown in the instructions.

 Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

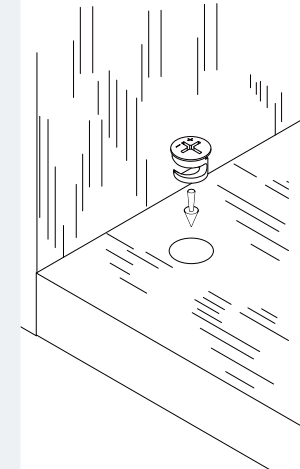


Step 4



Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

 The joint is now secure.

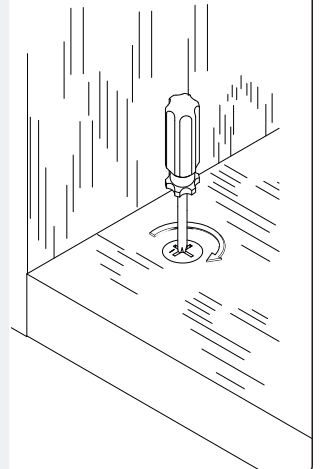

Assembly Instructions

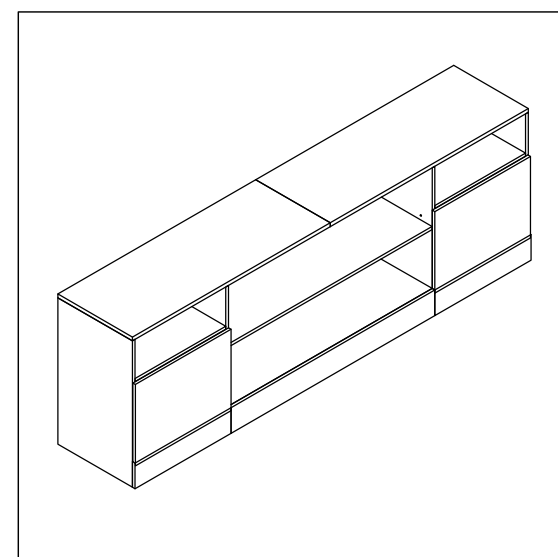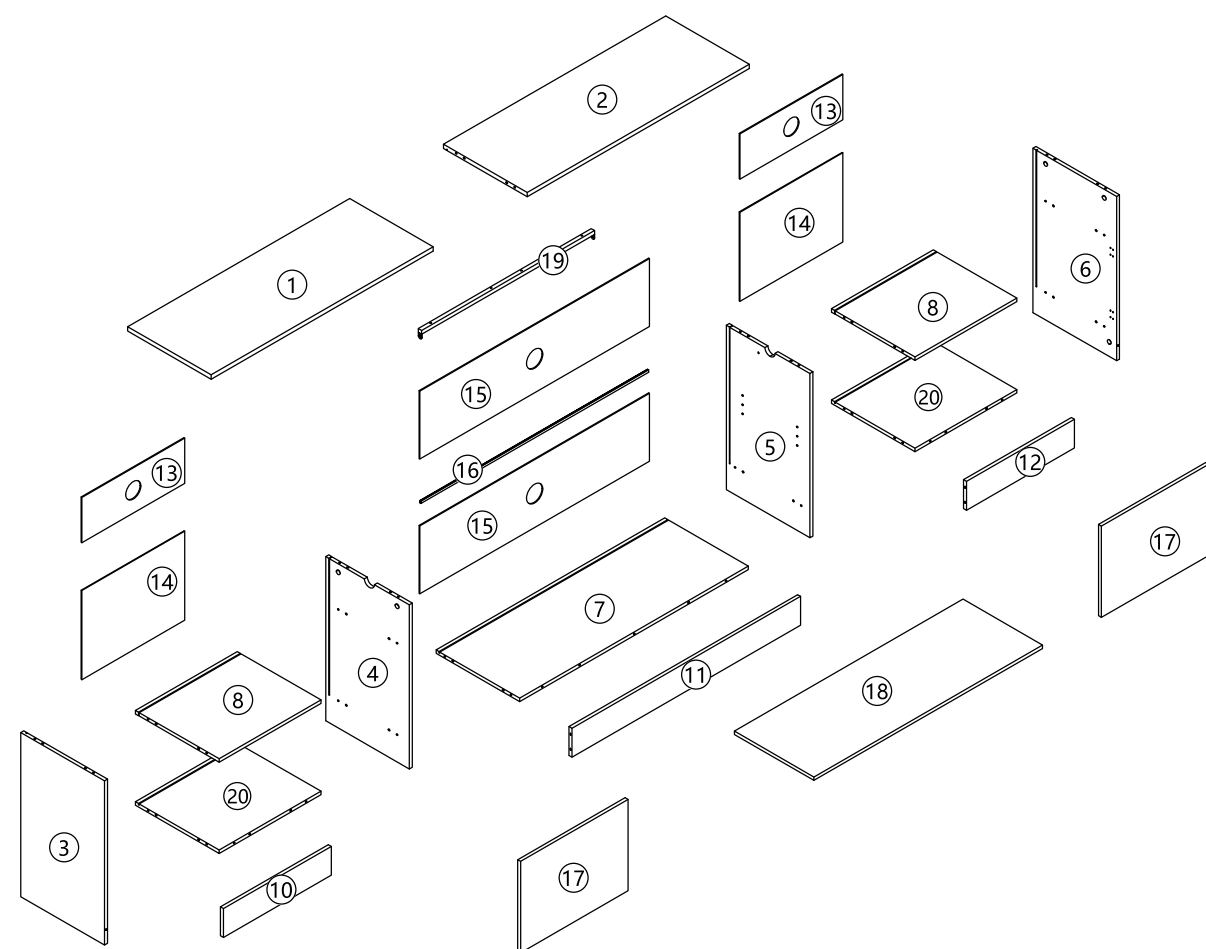  

Step 1

 
A

x4

CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

Shoulder
NO GAP

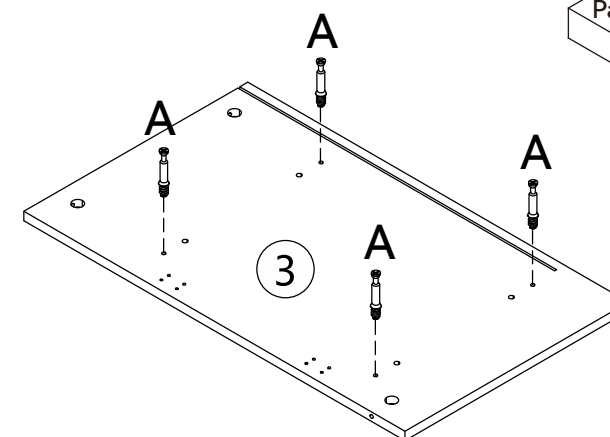

Insert Hardware A into the holes of Panel #3.

 
Step 2

B

x4


C

Ø6x30mm x4

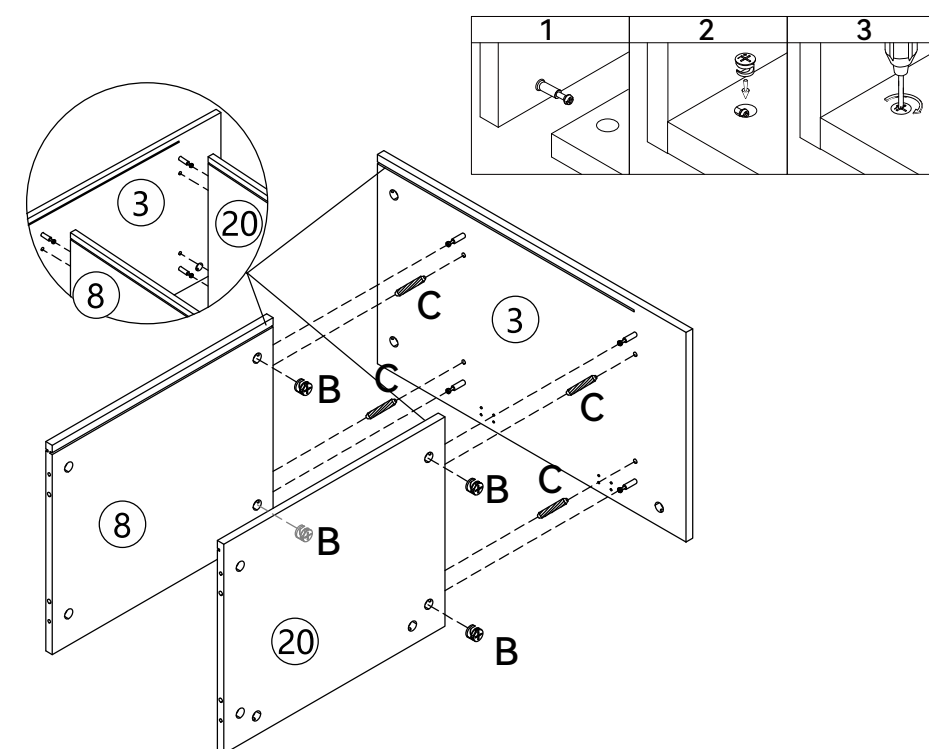


Use Wooden Dowels C to connect Panels #3, #8, and #20, then secure with Hardware B.

 Step 3

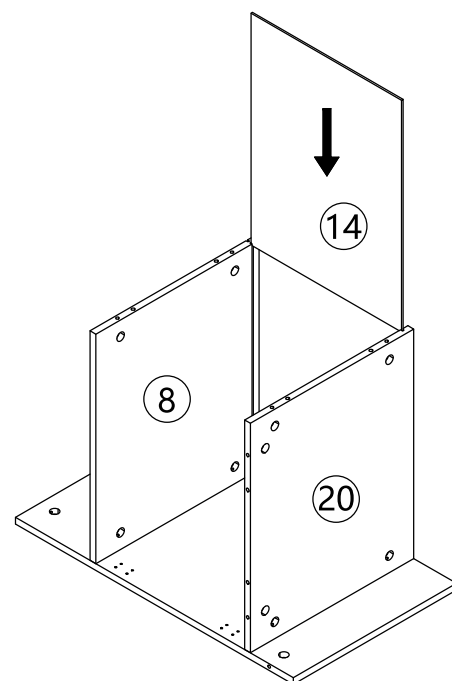


Insert Panel #14 into position.

 Step 4

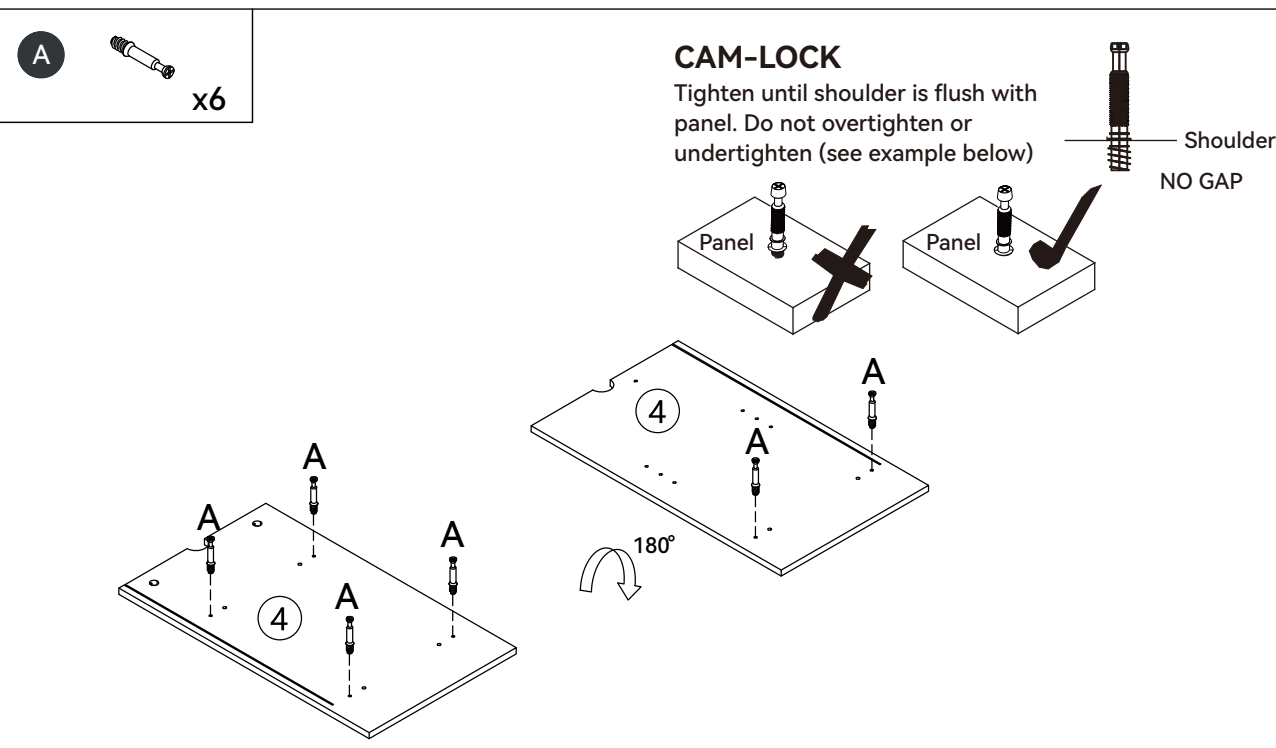


Insert Hardware A into one side of Panel #4. Rotate the panel 180°, then insert Hardware A into the corresponding holes on the opposite side.

 Step 5

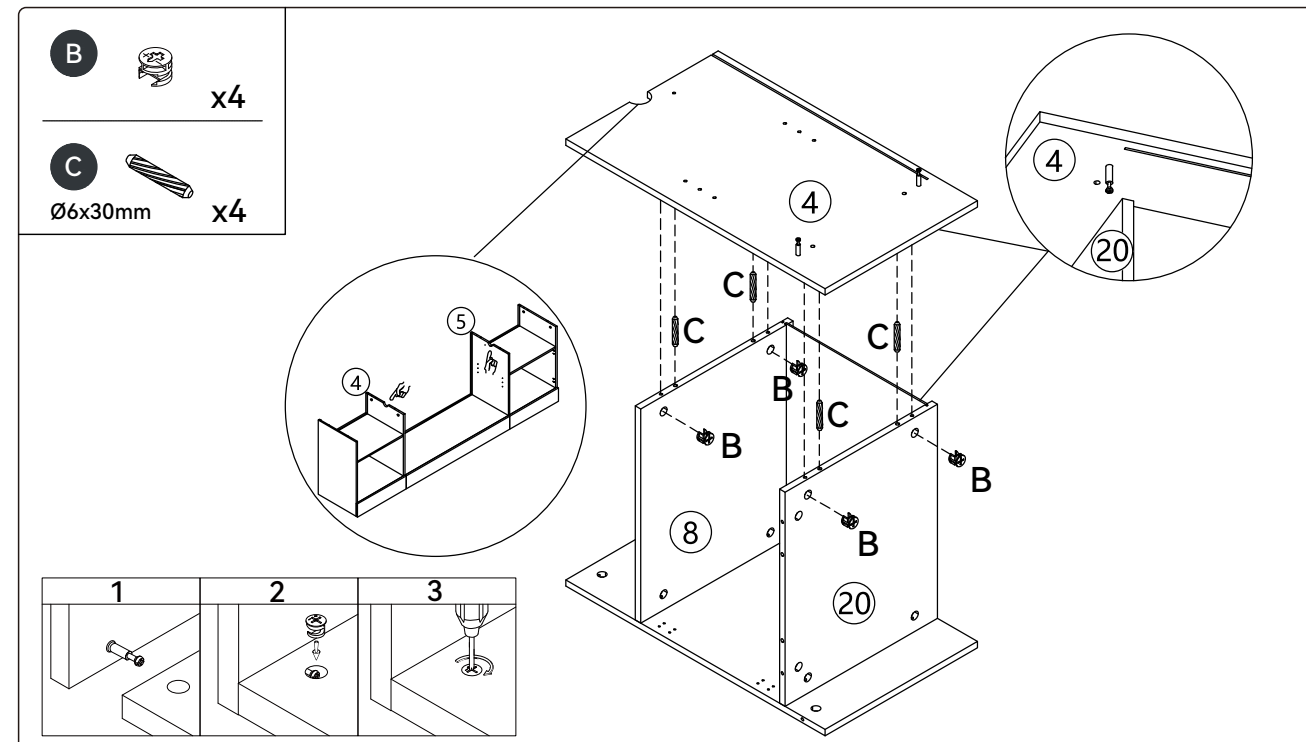


1. Use Wooden Dowels C to connect Panels #4, #8, and #20, then secure with Hardware B.
2. Make sure the groove orientation and the notch directions of Panels #4 and #5 are aligned.

 Step 6

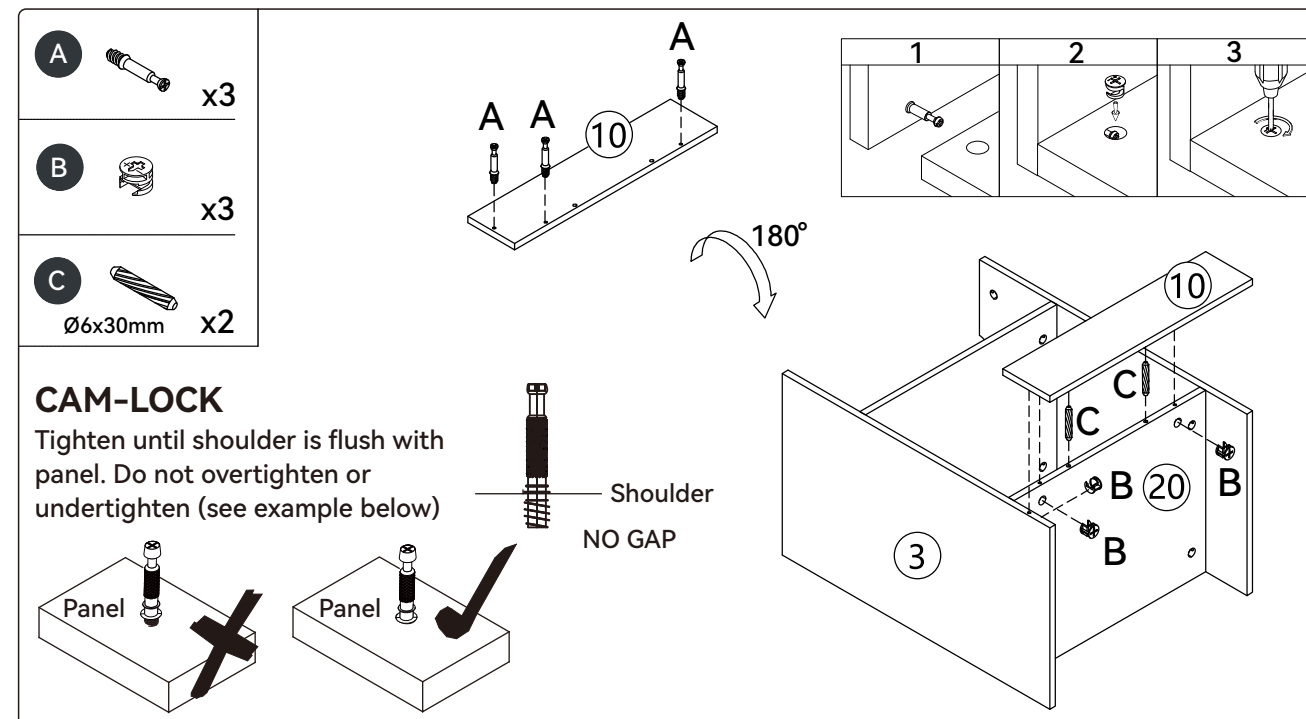


1. Insert Hardware A into the holes of Panel #10, then flip the panel 180°.
2. Use Wooden Dowels C to connect Panels #3, #10, and #20, then secure them with Hardware B.

 Step 7

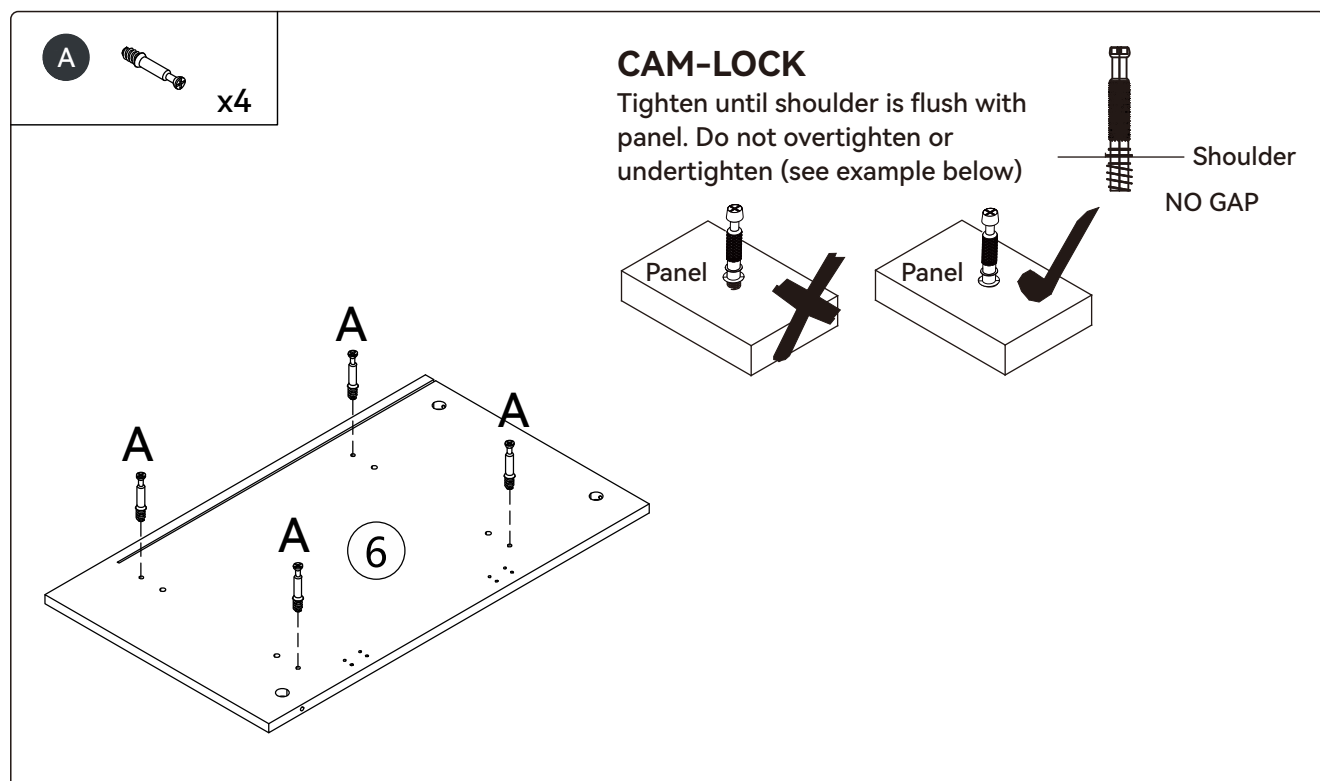


Insert Hardware A into the holes of Panel #6.

 Step 8

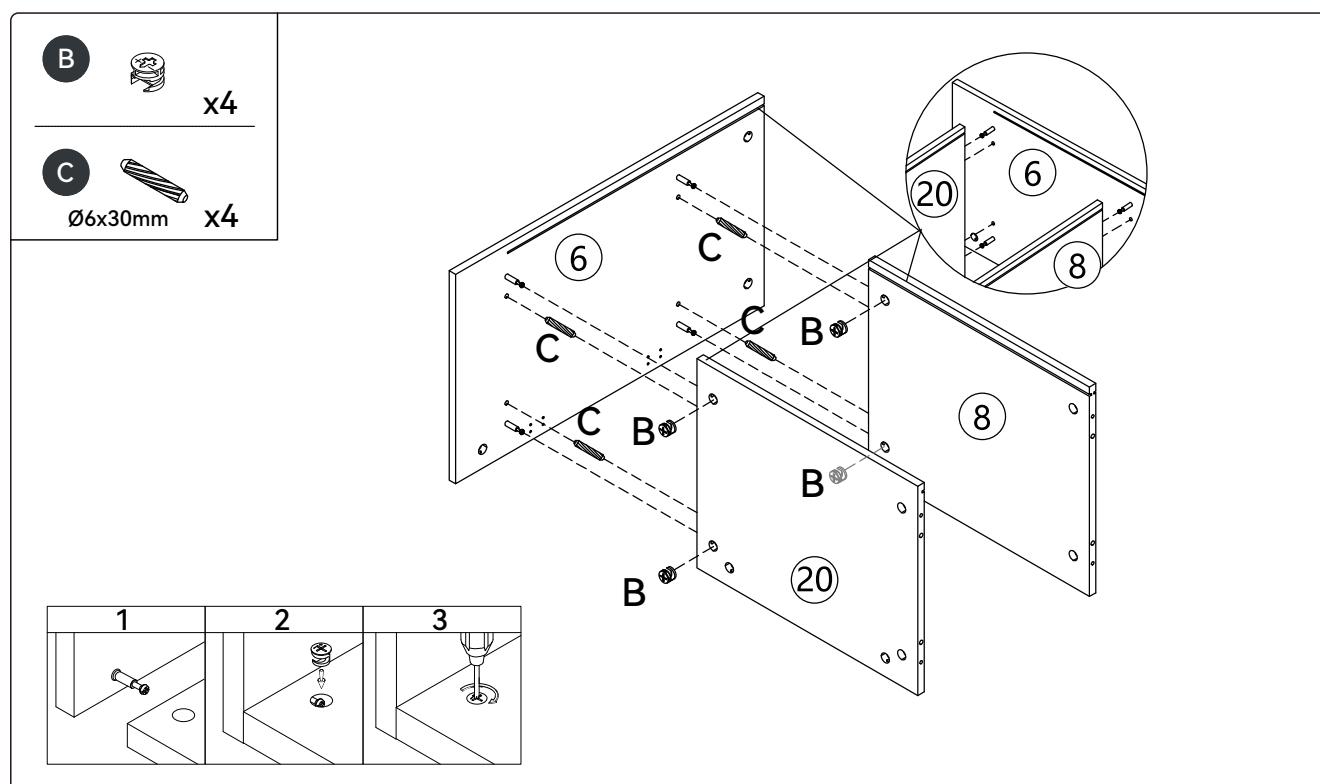


Use Wooden Dowels C to connect Panels #6, #8, and #20, then secure them with Hardware B.

 Step 9

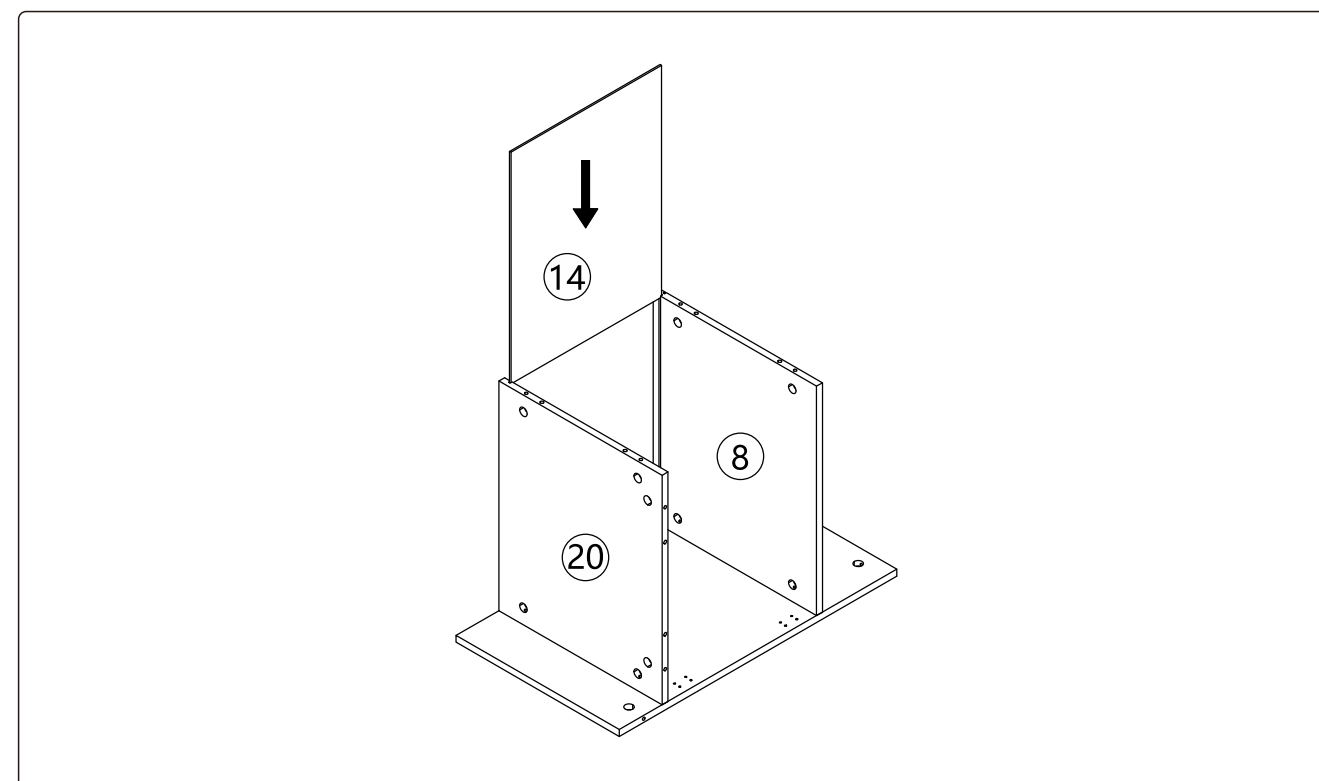


Insert Panel #14.

 Step 10

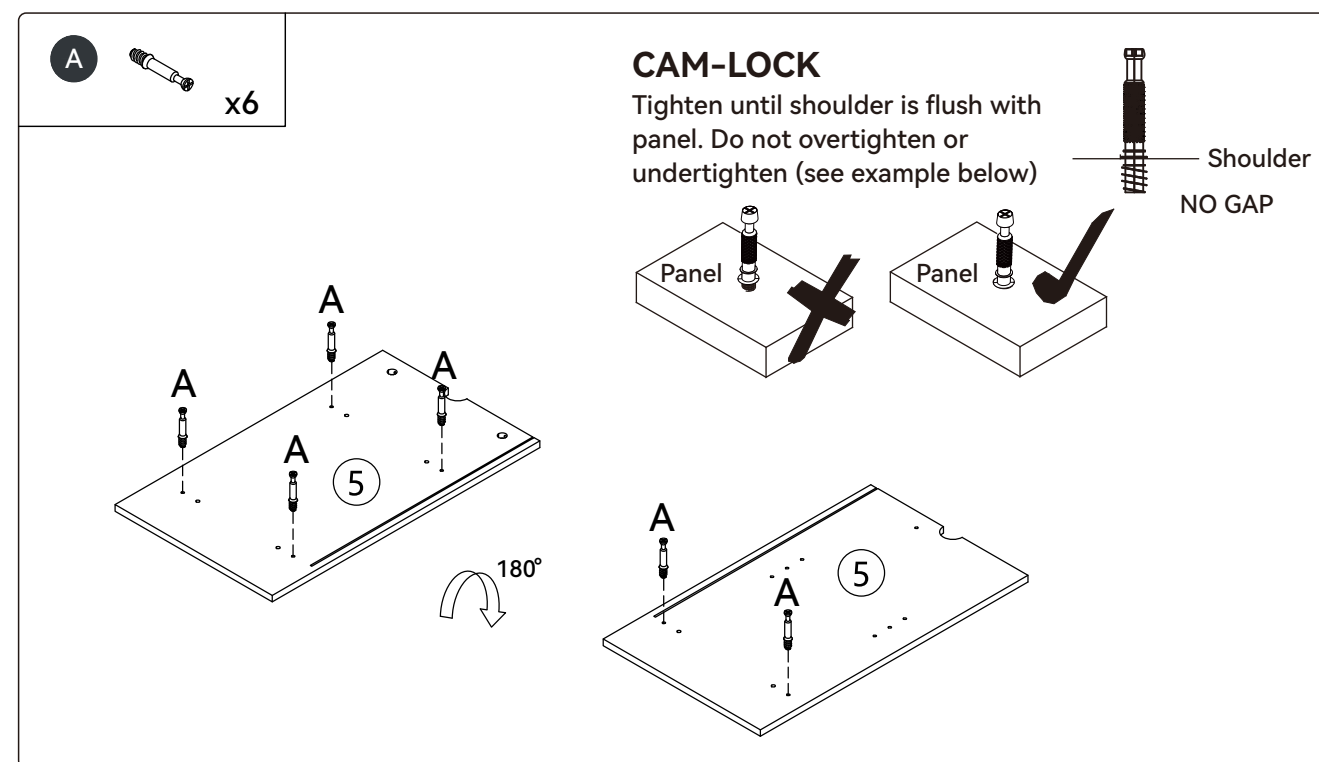


Insert Hardware A into one side of Panel #5. Flip the panel 180°, then insert Hardware A into the corresponding holes on the opposite side.

 Step 11

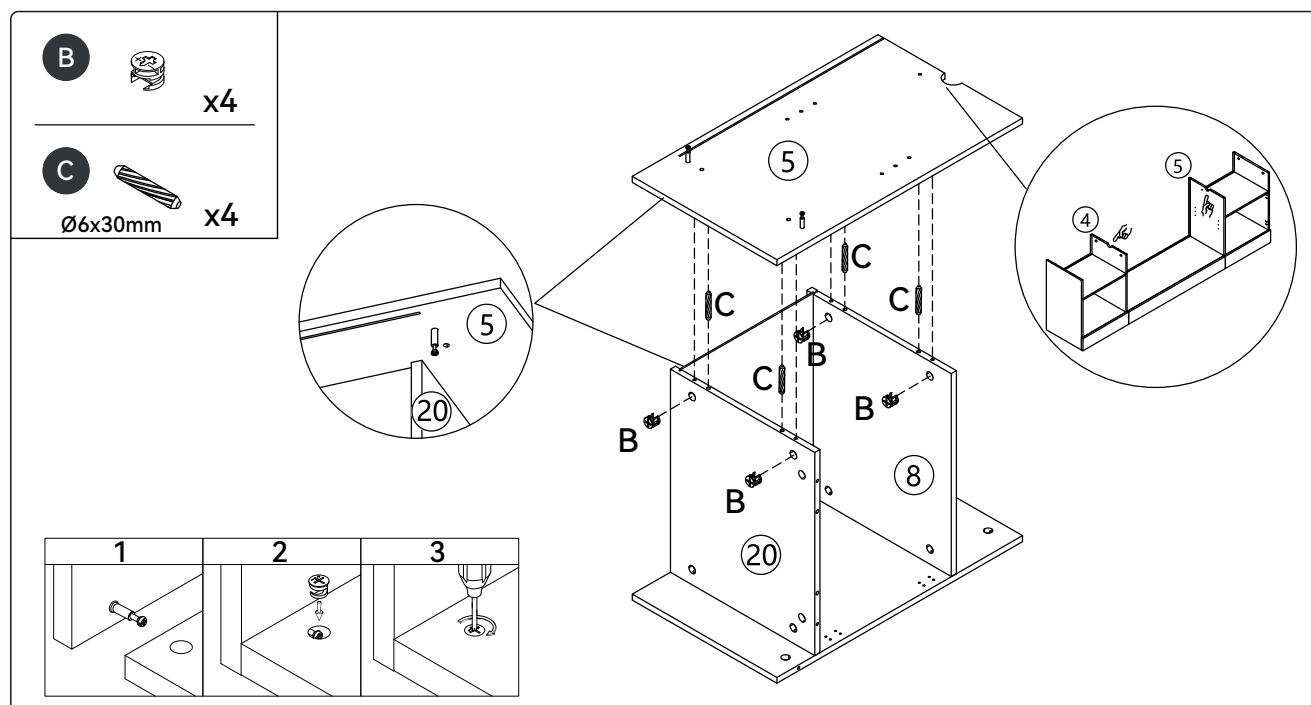


1. Use Wooden Dowels C to connect Panels #5, #8, and #20, then secure them with Hardware B.
2. Make sure the grooves and notches of Panels #4 and #5 are aligned.

 Step 12

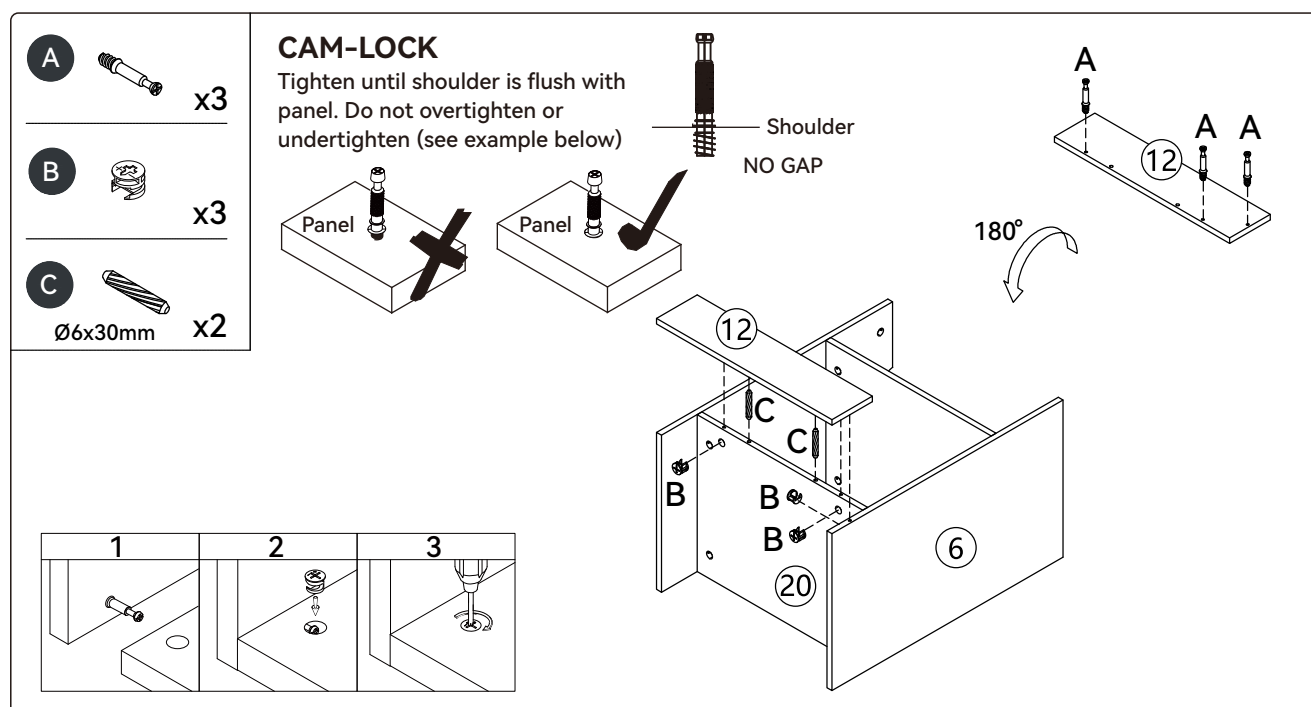


1. Insert Hardware A into the holes of Panel #12, then flip the panel 180°.
2. Use Wooden Dowels C to connect Panels #6, #12, and #20, then secure them with Hardware B.

 Step 13

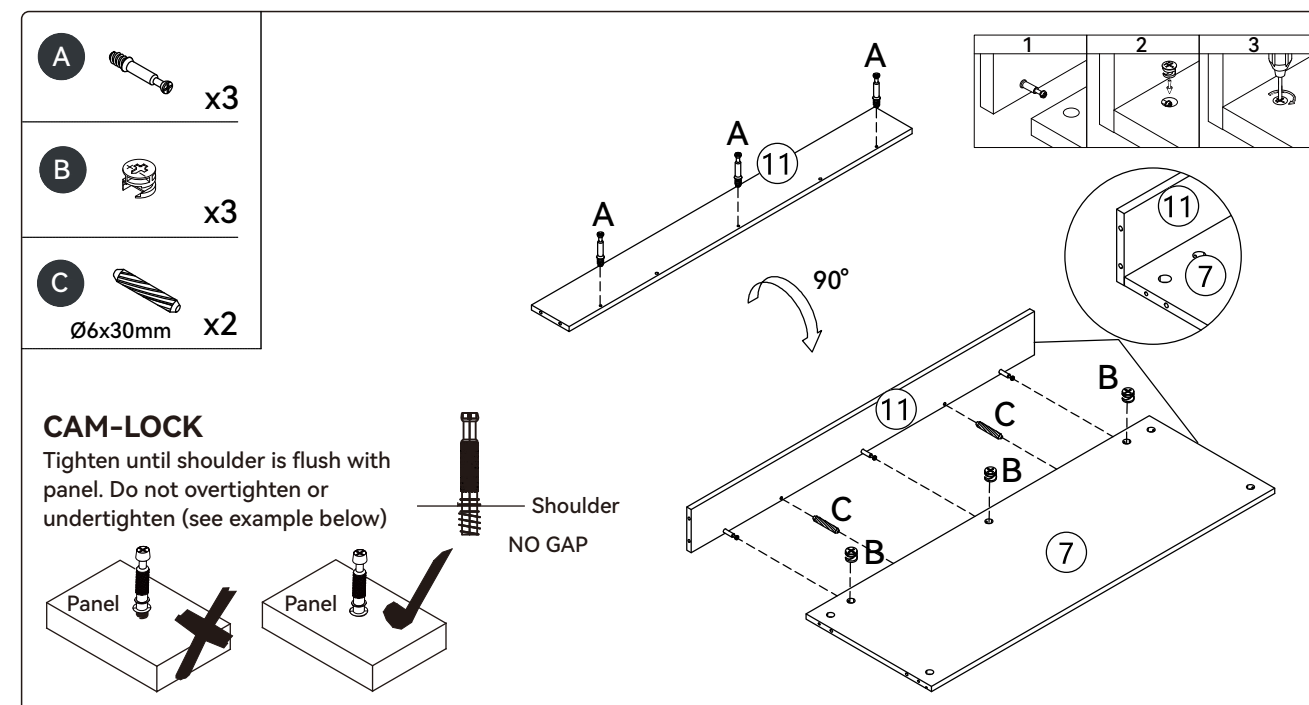

1. Insert Hardware A into the holes of Panel #11, then rotate the panel 90°.
2. Use Wooden Dowels C to connect Panels #7 and #11, then secure them with Hardware B.

 Step 14

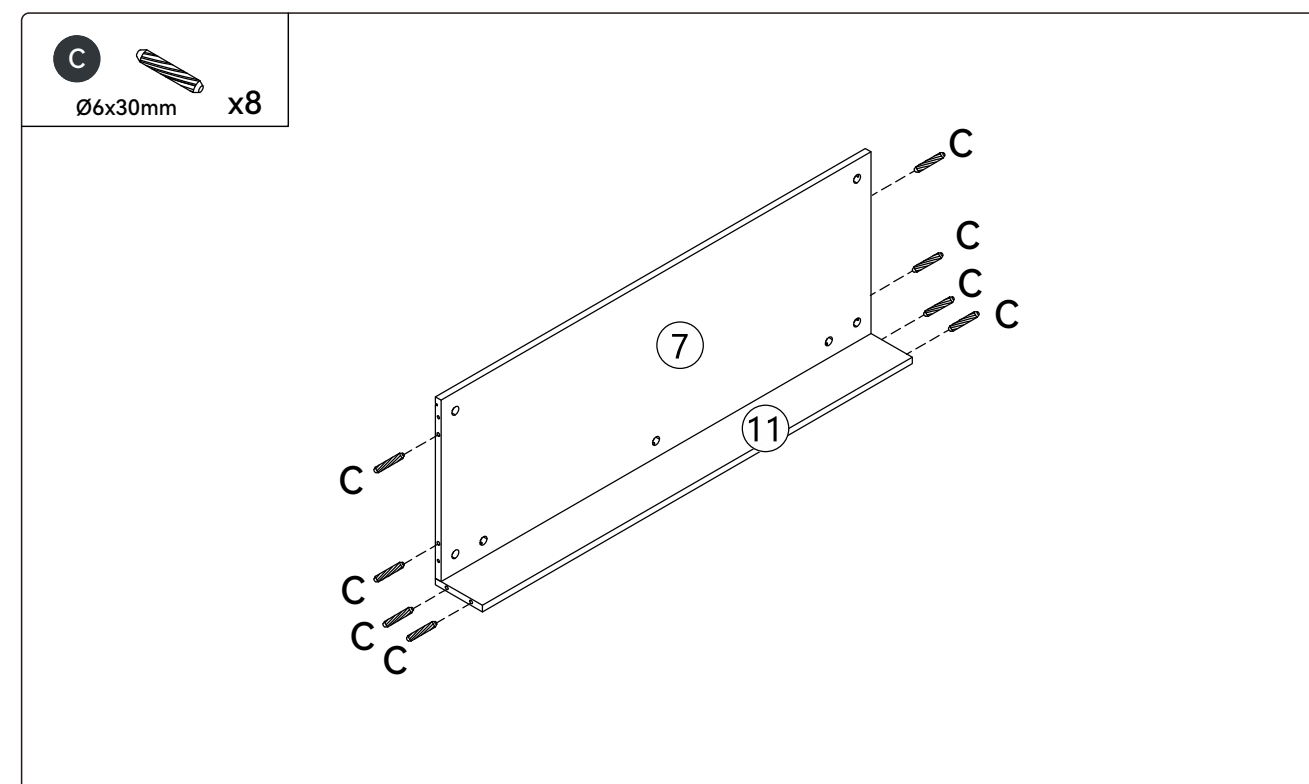



Insert Wooden Dowels C into both ends of each Panel #7 and Panel #11.

Step 15

B



  x4

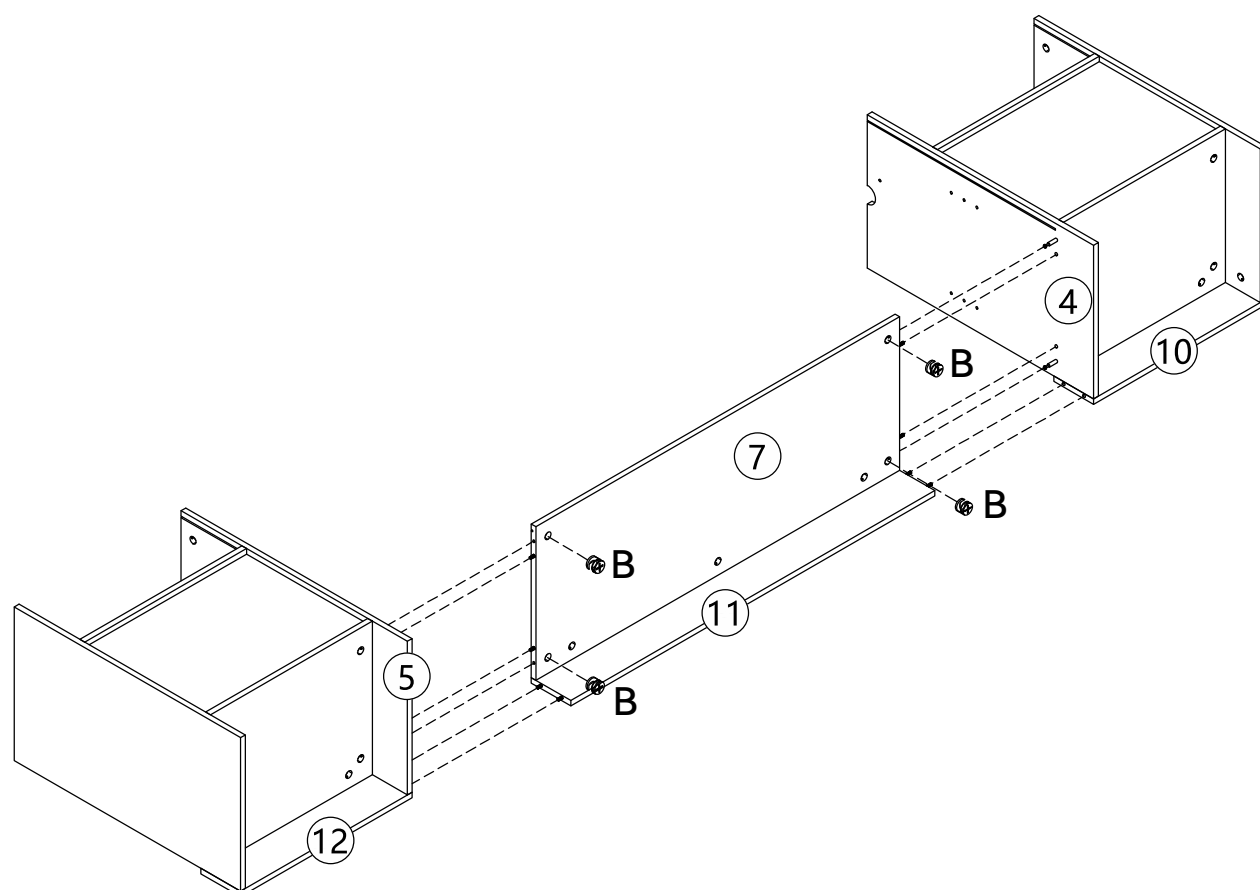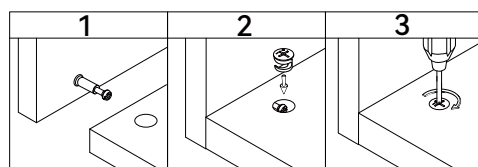



Connect Panels #4, #5, #7, #10, #11, and #12, then secure them with Hardware B.

Step 16

J



  
x10

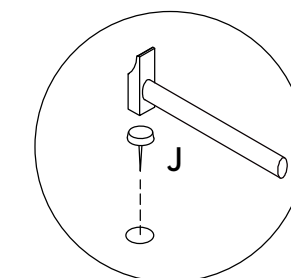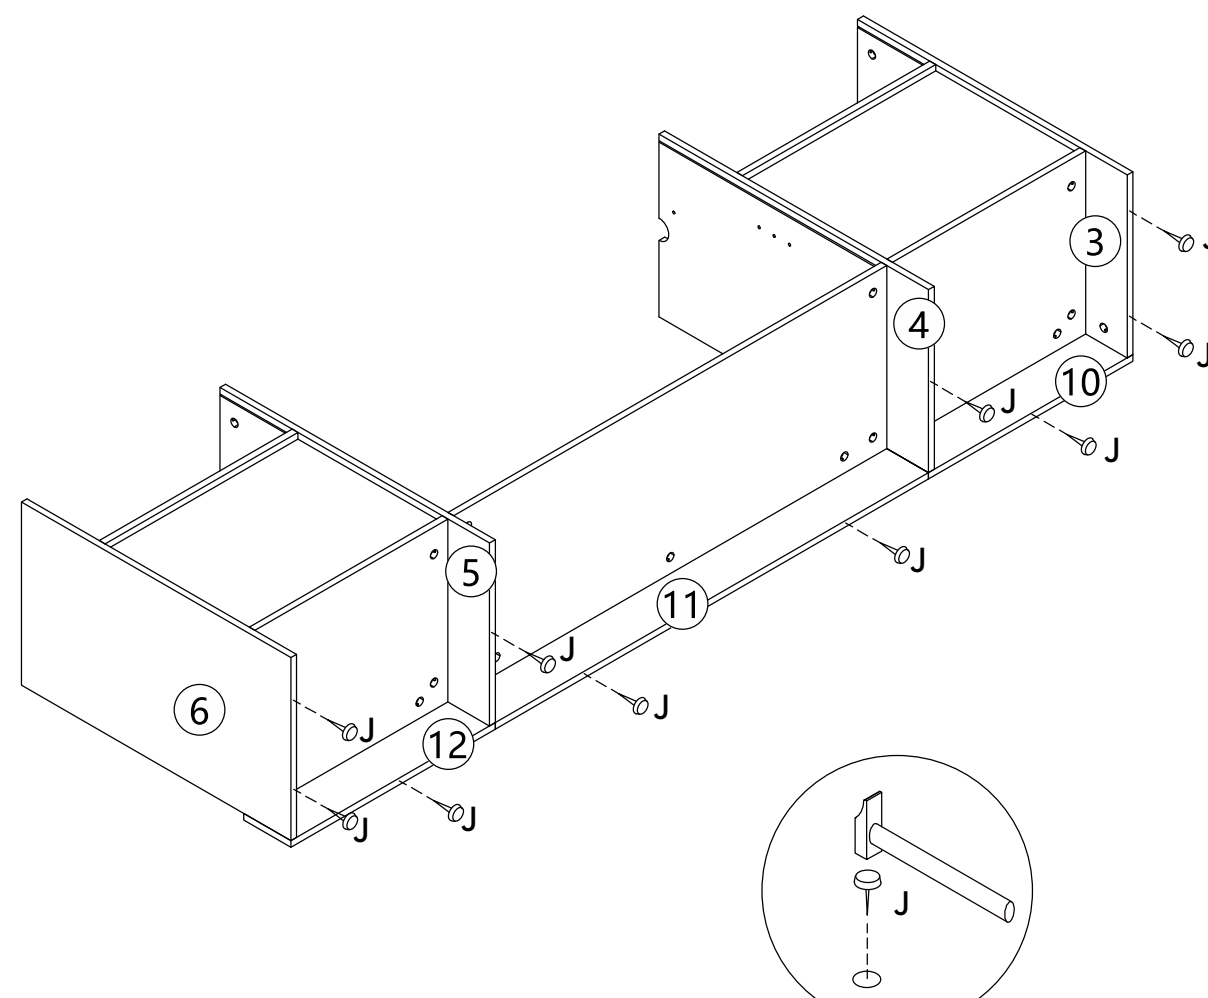

(Hint: use a hammer)



Insert Foot Pads J into the bottom of Panels #3, #4, #5, #6, #10, #11, and #12.

 Step 17

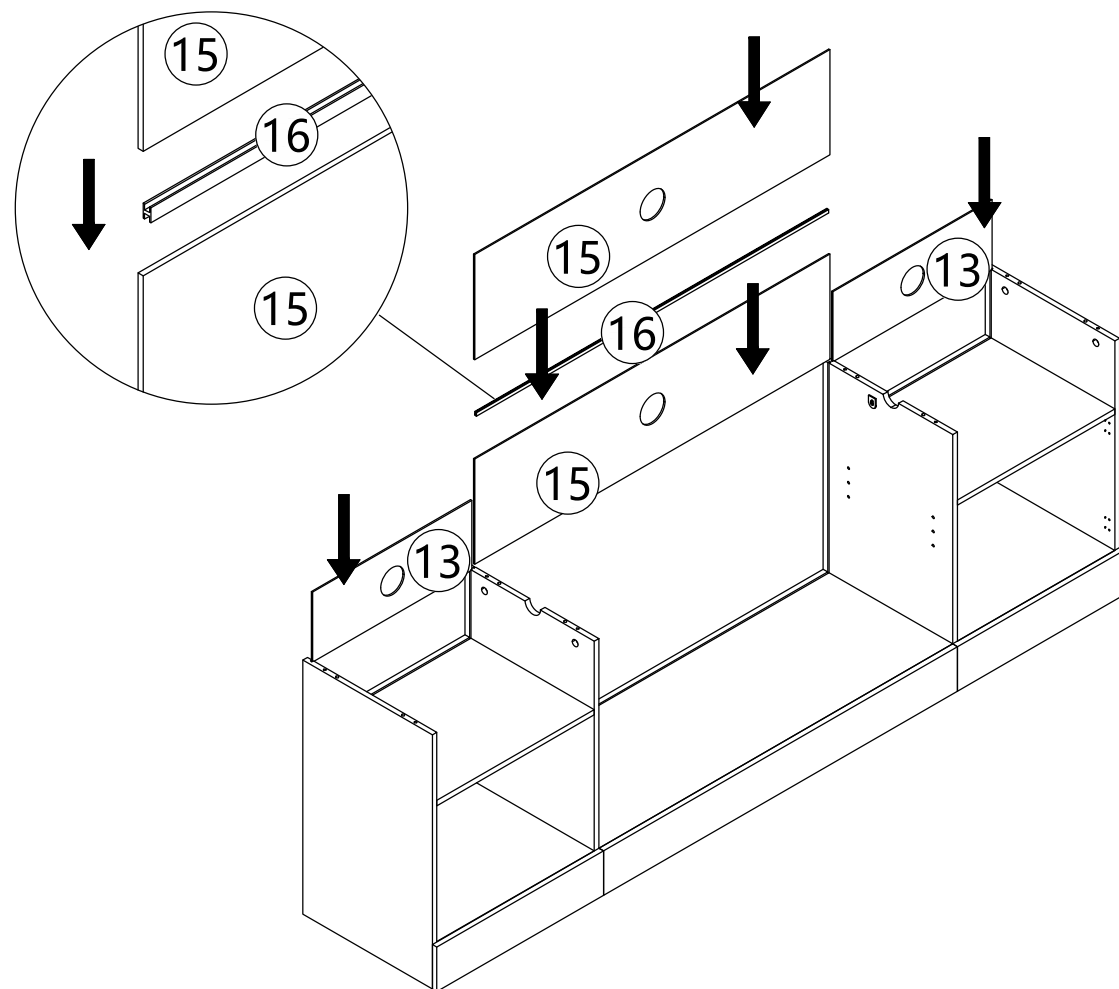


Insert Panels #13, #15, and #16.

  Step 18

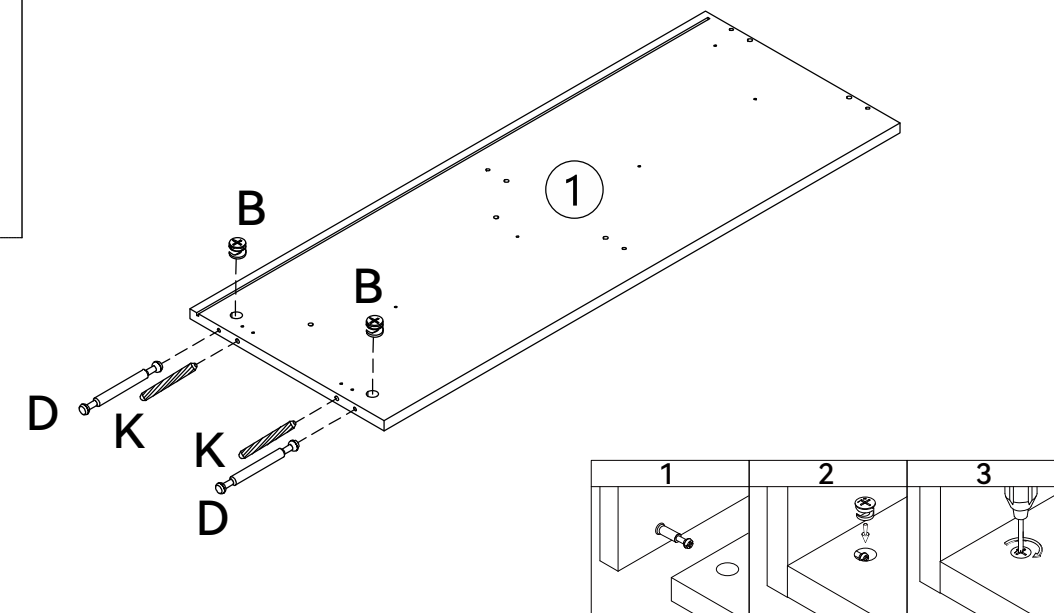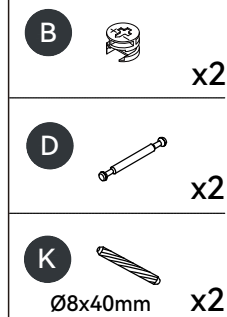



Insert Long Wooden Dowels K and Double-Ended Bolts D into Panel #1, then secure them with Hardware B.

 Step 19

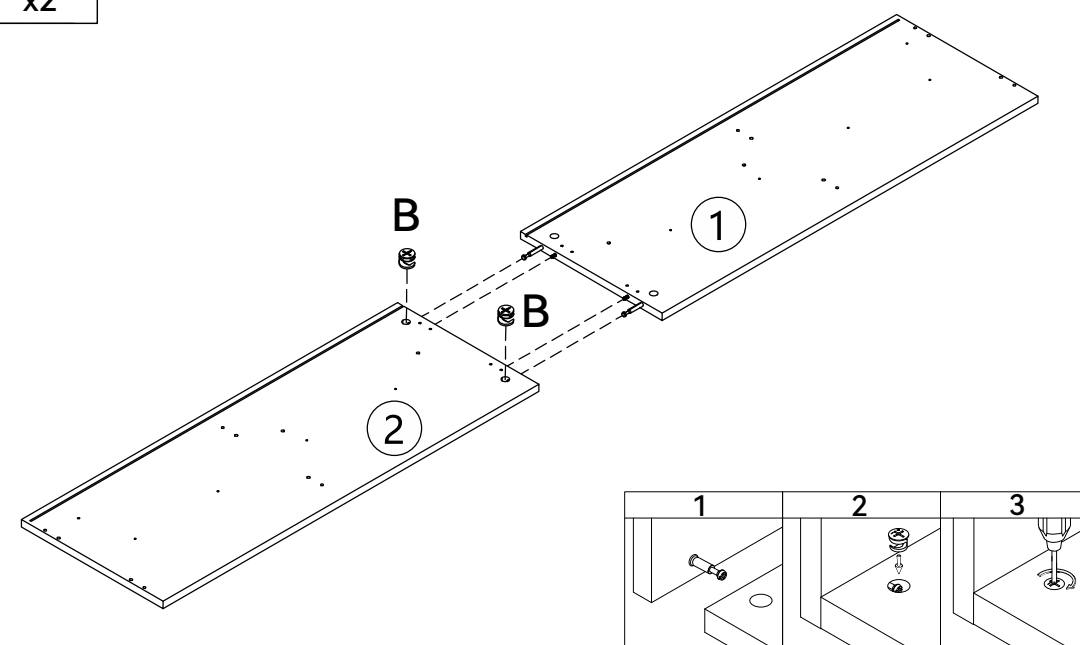


Connect Panels #1 and #2, then secure them with Hardware B.

  Step 20

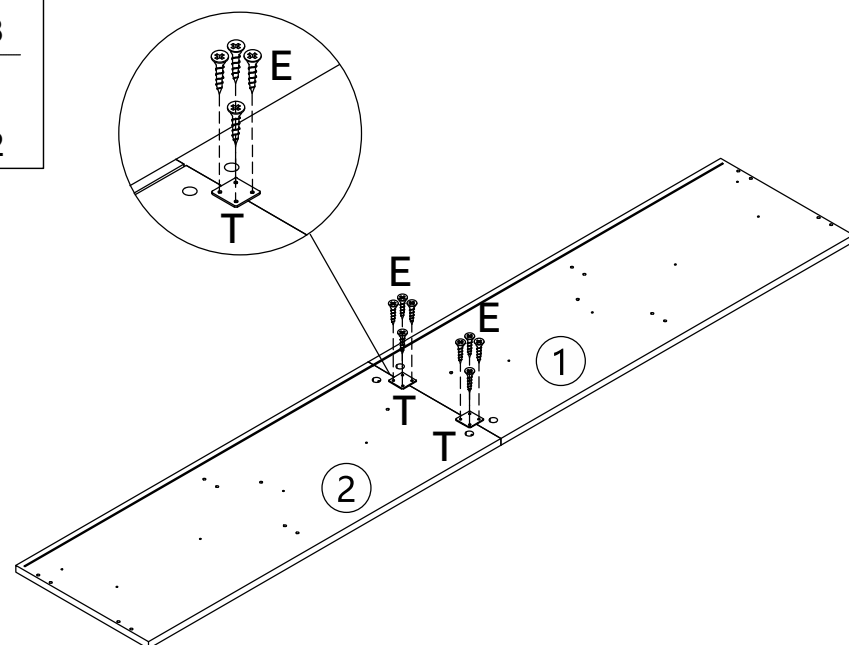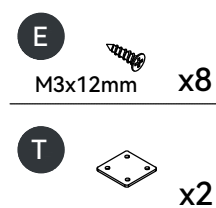


Use Screws E to attach and secure Bracket T to Panels #1 and #2.

 Step 21

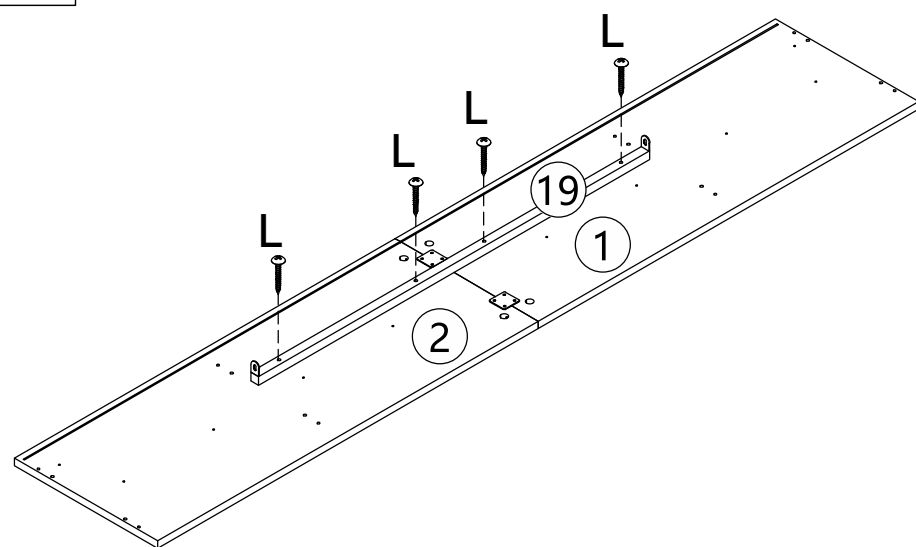


Use Screws L to secure Component #19 to Panels #1 and #2.

 Step 22

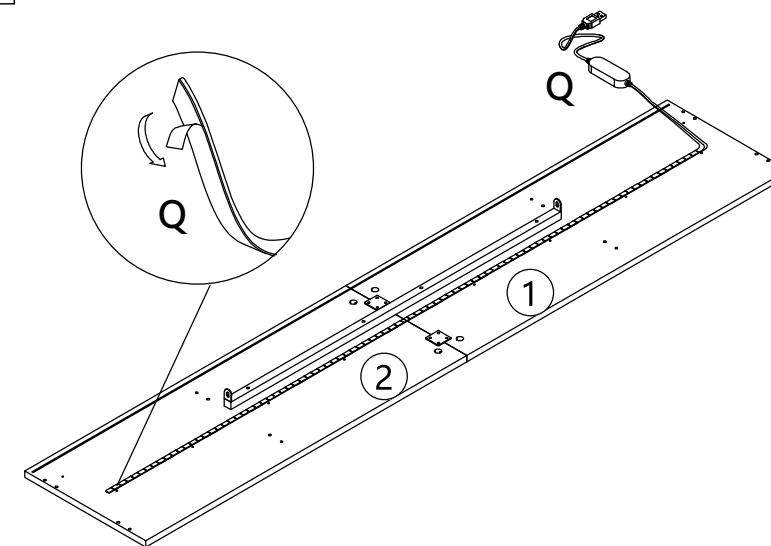

Peel off the backing from the LED Strip Q and apply it to Panels #1 and #2.

 
Step 23

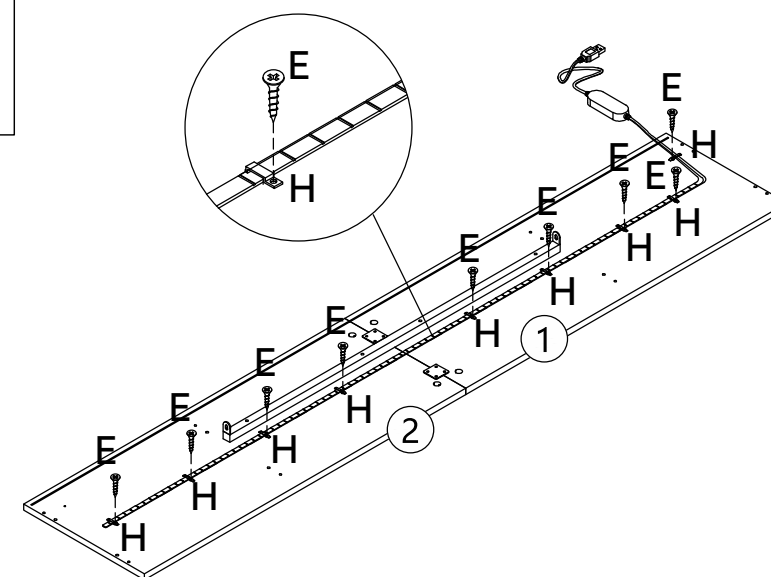

Use Clips H and Screws E to secure LED Strip Q in place.

Step 24

 A  x8

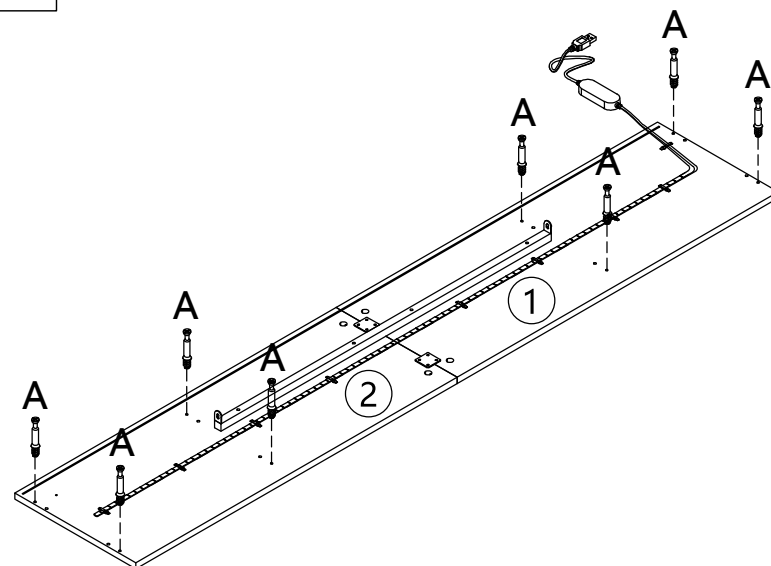


Insert Hardware A into the holes of Panels #1 and #2.

Step 25

B  x8

 
C  Ø6x30mm x8

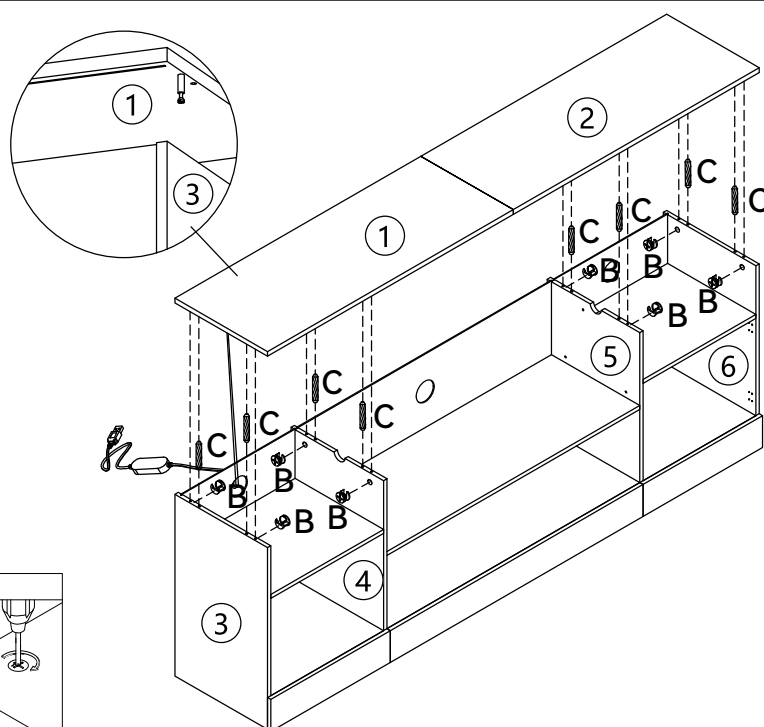

Use Wooden Dowels C to connect Panels #1, #2, #3, #4, #5, and #6, then secure them with Hardware B.

Step 26

 
M  M4x12mm x2

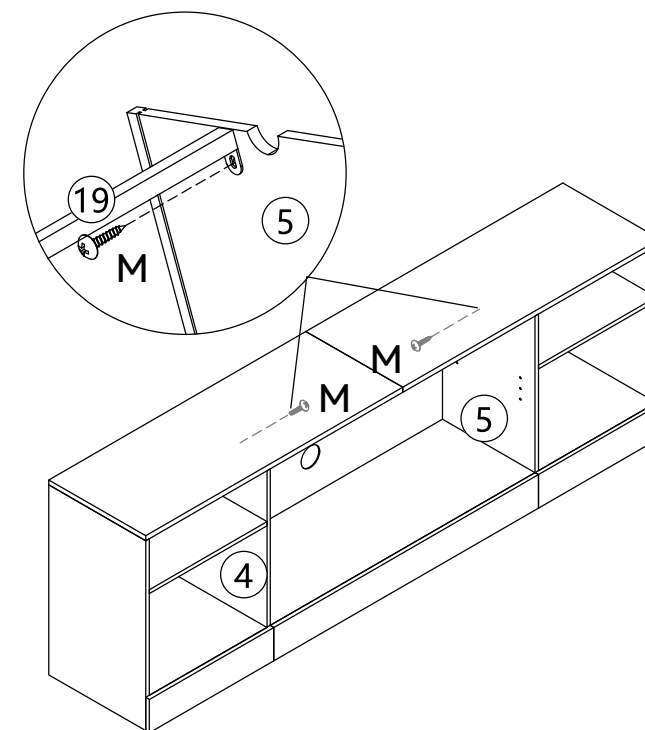

Use Screws M to secure both ends of Component #19 to Panels #4 and #5.


Step 27

 P  M3x14mm x20

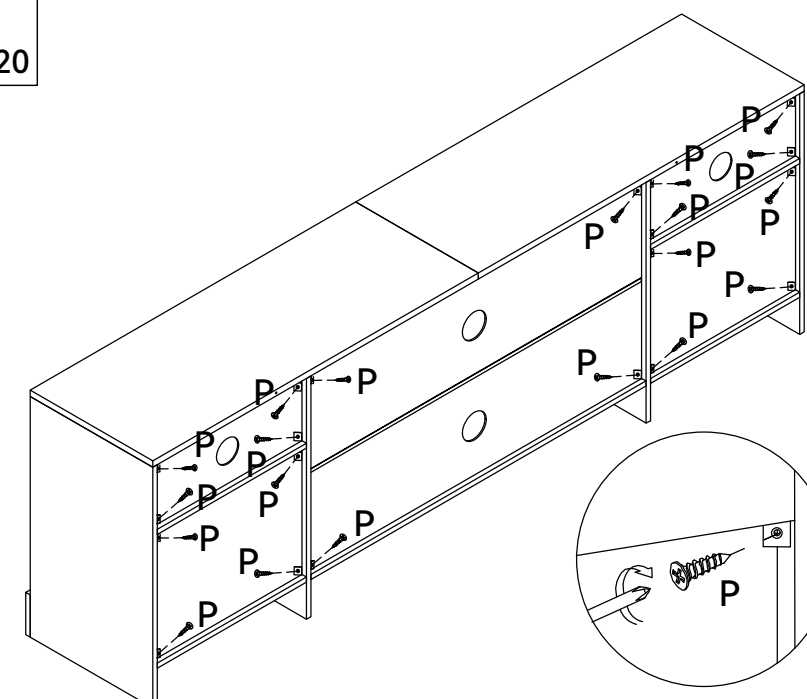


Use Screws P to secure the white clips to fix the back panel.

 Step 28

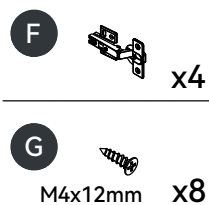


X2

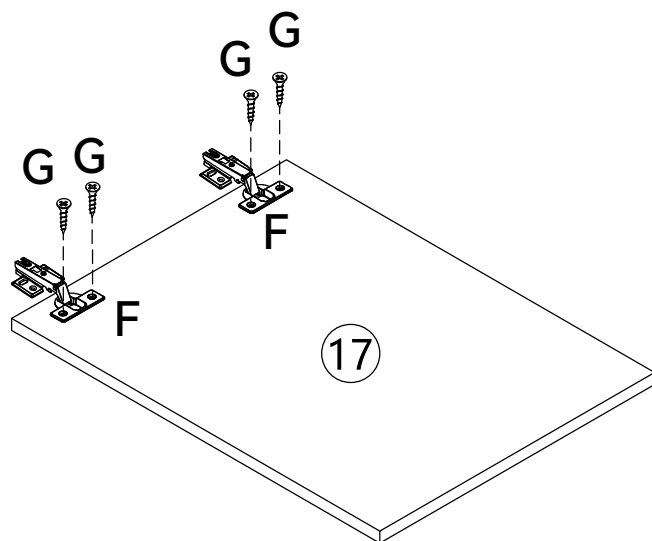 



Use Screws G to attach the hinge to Panel #17. Repeat this step twice.

 Step 29

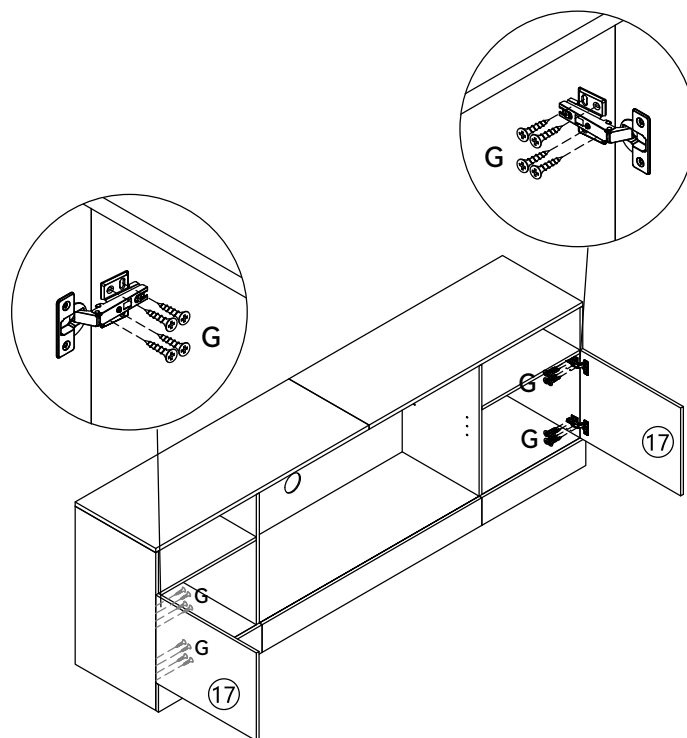


Install Panel #17, then use Screws G to secure the hinges.

  Adjust the hinges

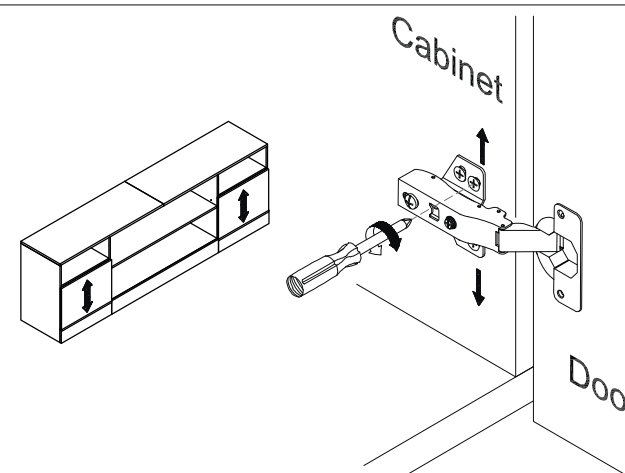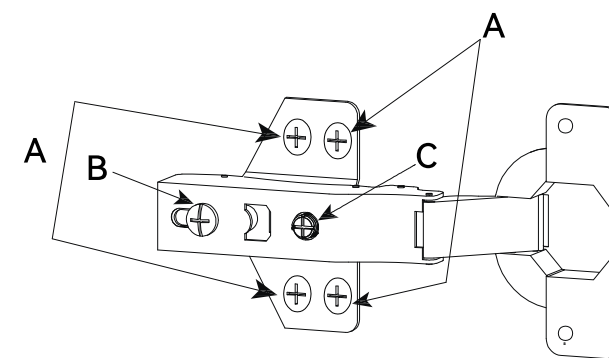


To adjust the vertical height.

 Loosen the two screws "A" on both hinges. They are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

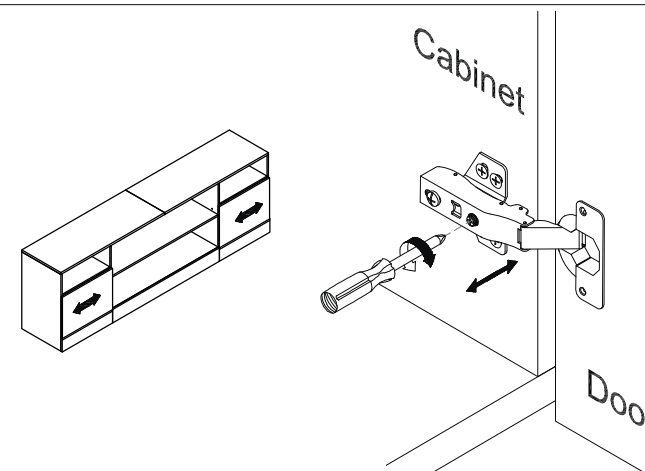

To adjust side ways.

 Turning the screw "C" on BOTH hinges on each door.

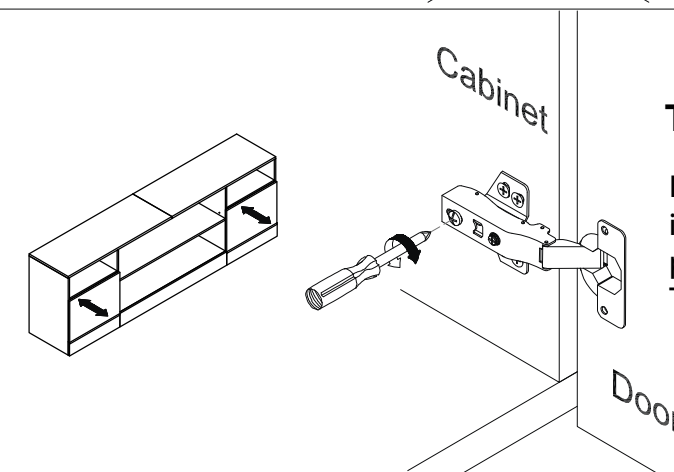


To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

Step 30

 
R  x4

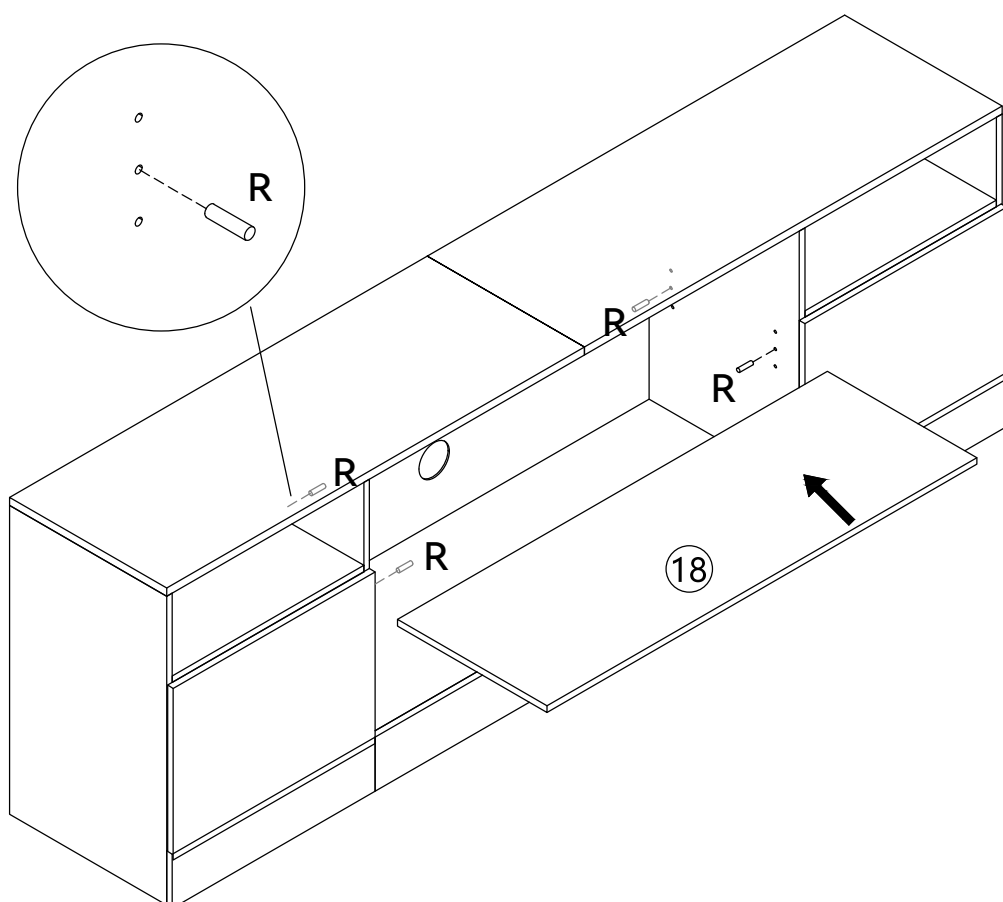

Insert Dowels R into the holes, then install Panel #18.

Step 31

 
N  M4x12mm  x2

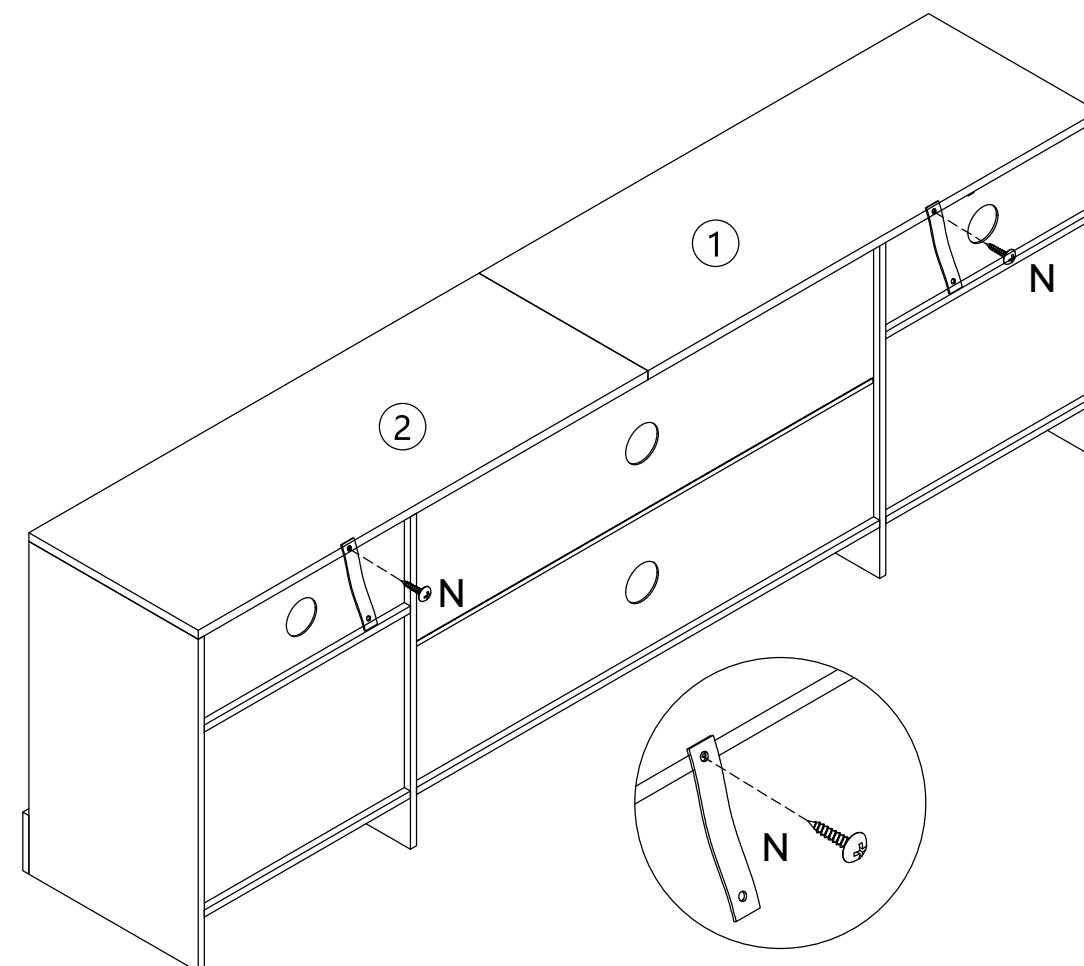

Use Screws N to secure the Anti-Tip Strap to the back of Panels #1 and #2.

Step 32

 
O M4x40mm x2

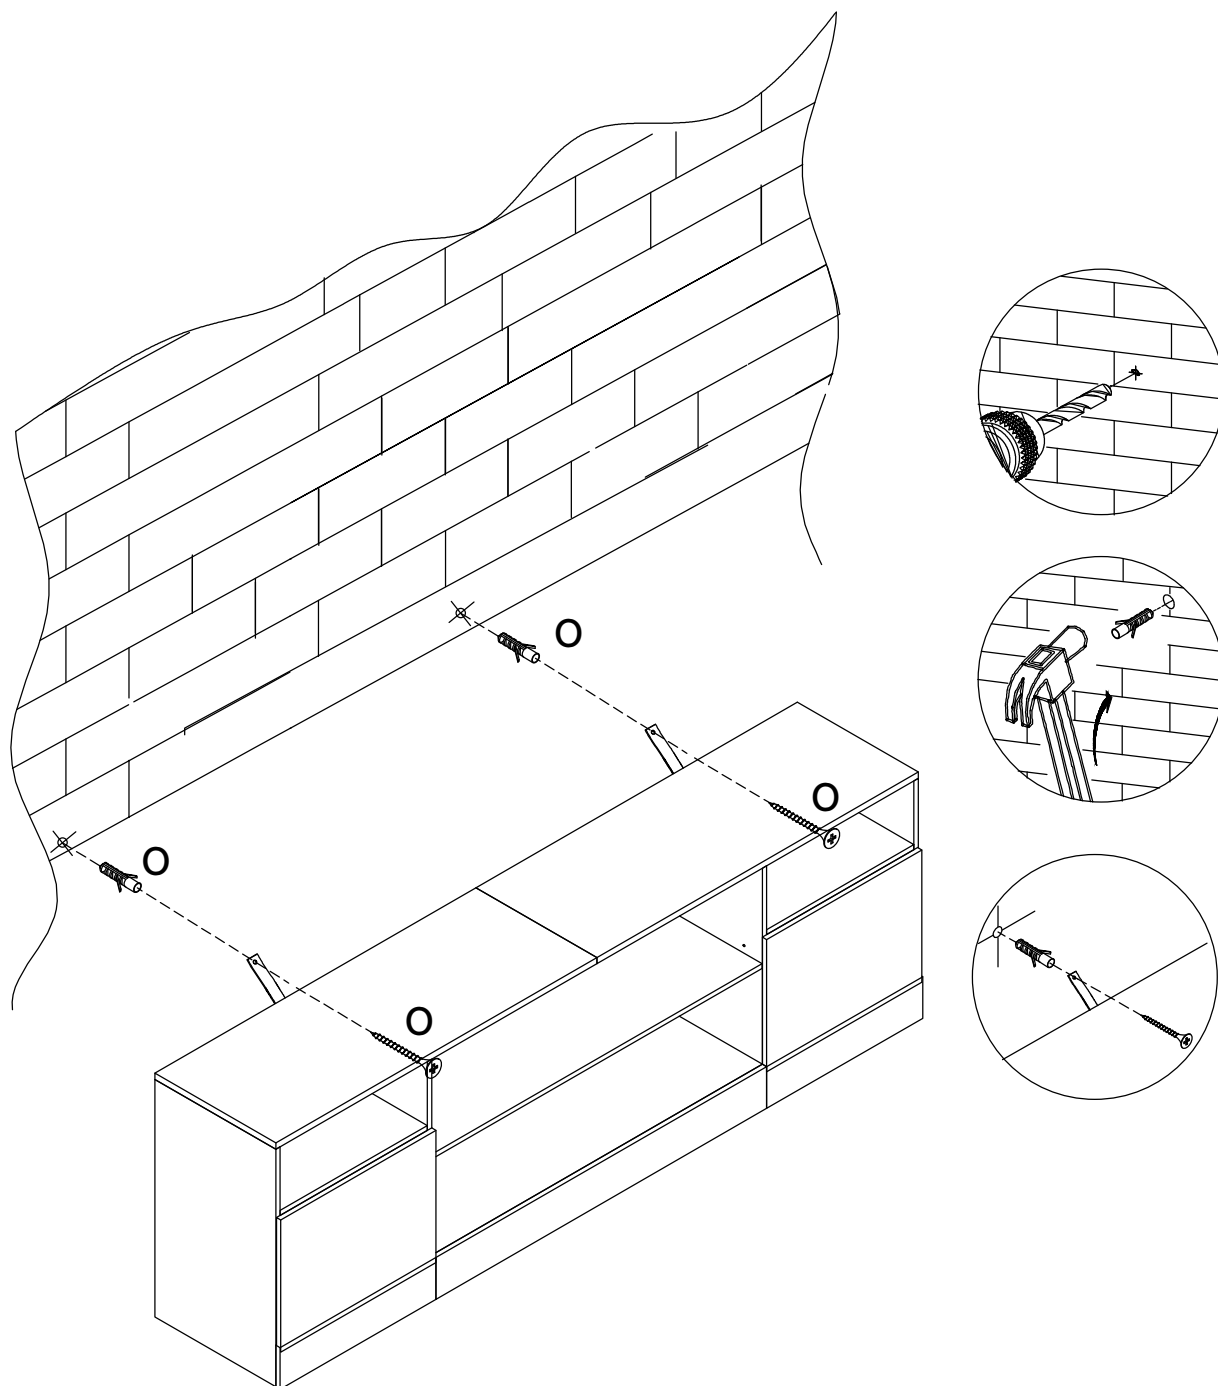

1. Use a power drill to drill holes in the wall.
2. Insert wall anchors into the holes.
3. Use Screws O to secure the anti-tip strap to the wall.


Step 33

 S x12

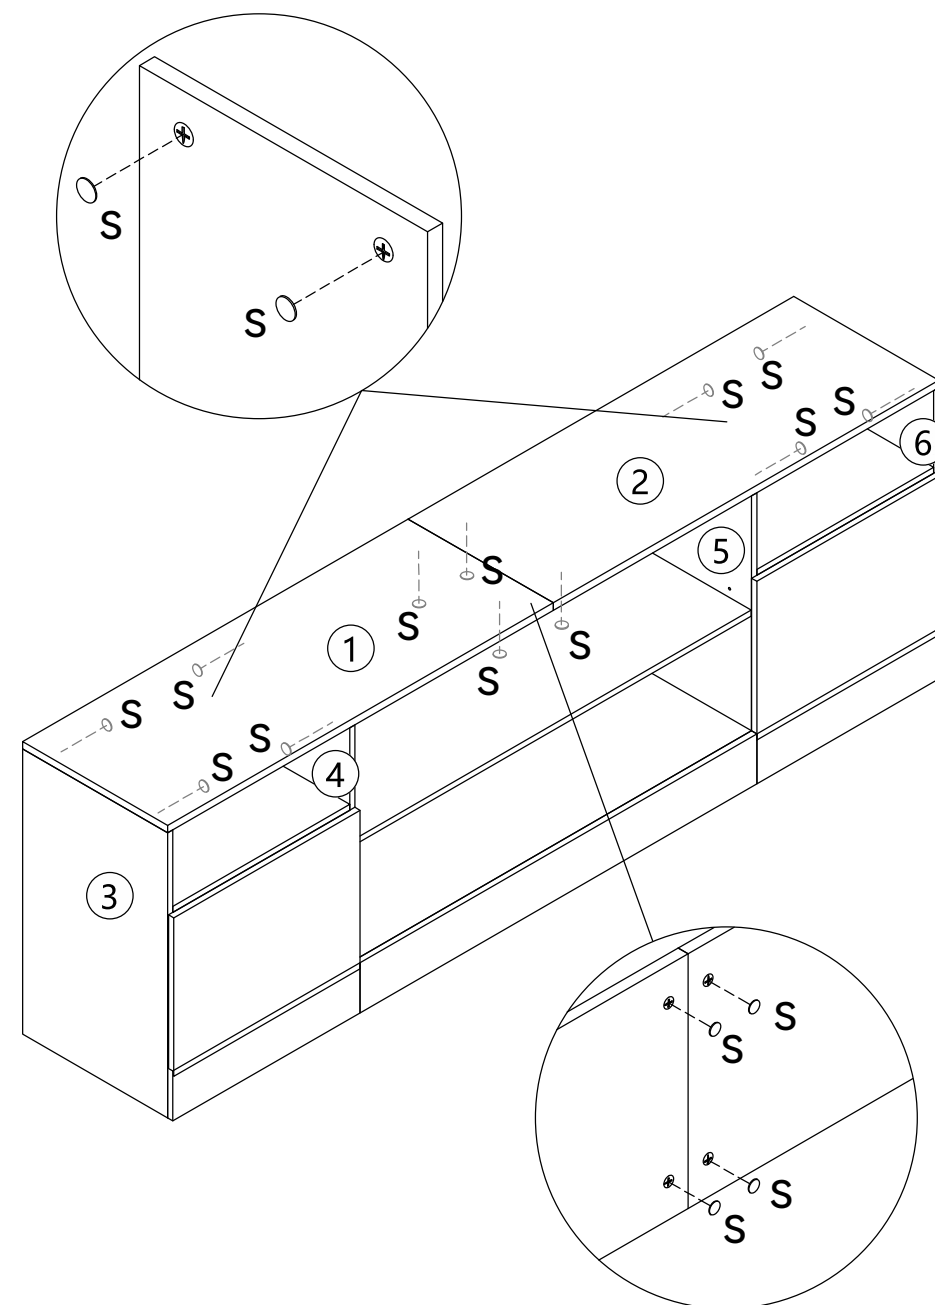


Apply Cover Caps S to conceal the exposed Hardware B on Panels #1, #2, #3, #4, #5, and #6.

 Step 34

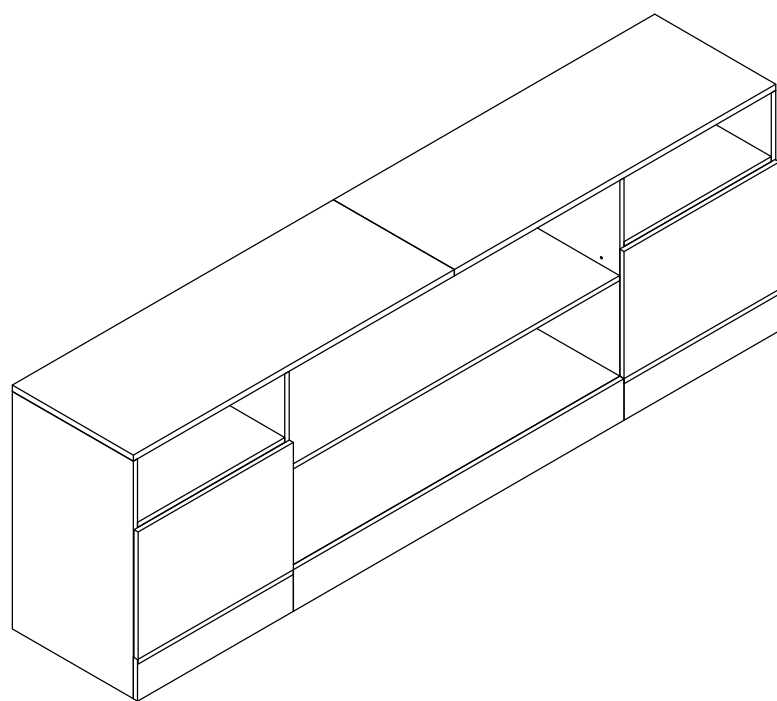


Assembly complete.

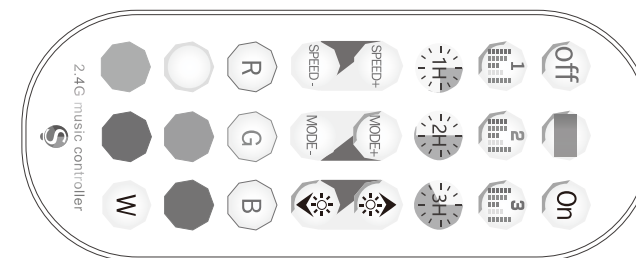 

Remote control

 You can use the remote to control the light. The LED lamp can only be used after the power supply is connected.

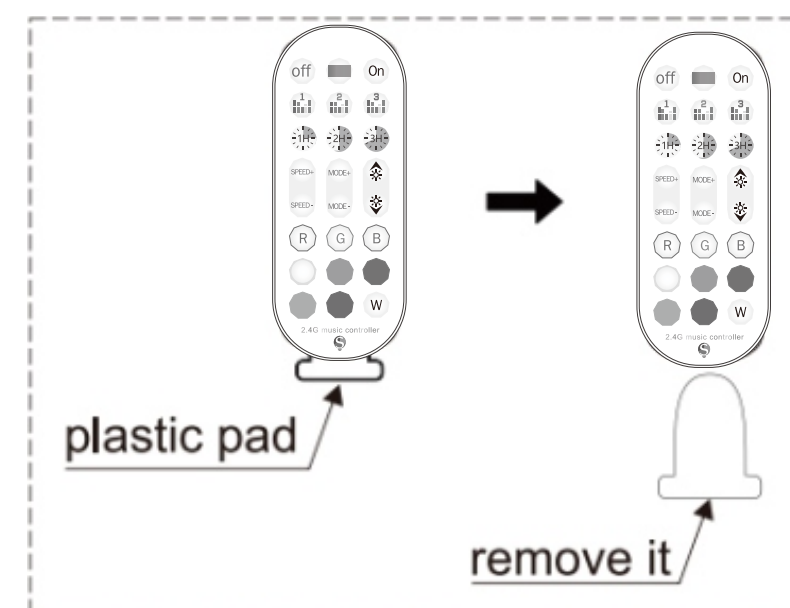

Remove the film before using the remote control