


TV Stand

Assembly Instruction - Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

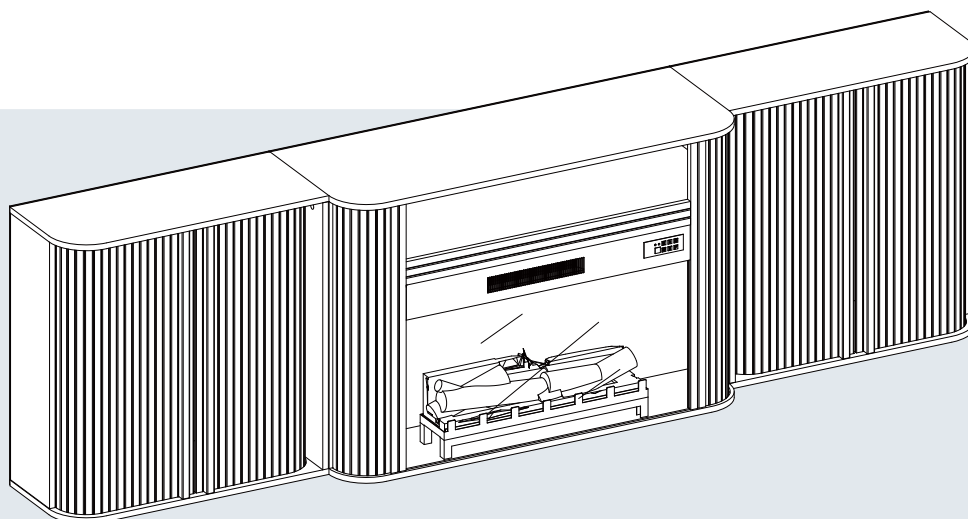

CONTACT US

- **Email: service@grandtunnel.com**
In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

EN

Important – Please read these instructions carefully before starting the installation.

Before Assembly



Thank you for choosing our product!

To ensure a smooth installation process, please read this guide carefully to familiarize yourself with the required tools, materials, and installation steps.

Follow the relevant sections to avoid any damage caused by improper installation, and make sure to review all operation and safety guidelines for correct installation procedures.

Packaging Notice:

1. Multi-Box Shipping Notice

This product is packaged in 2 separate boxes for shipping and may arrive in batches at different times. To ensure a smooth assembly process, please make sure all boxes are received before unpacking and starting the installation.

2. Box and Packaging Verification

Each box is labeled with a corresponding number. Please refer to the packing list on the next page of this manual to verify that all boxes have been received.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

Safety and Care Advice



Important :

Please read these instructions fully before starting assembly.

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.

Warning

In order to help prevent overturning, please follow these instructions.

- Use the anti tip strap or wall fixing method provided (if applicable).
- Do not allow children to climb or hang on the furniture.
- Do not open more than one drawer at a time.
- Do not place heavy items in the top drawers.
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose.
- Please note that only the anti tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type.

Customer Service Guide



Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6×30mm screws.”

Contact Us:

By Email:

Send an email to **service@grandtunnel.com**, with the subject line “Missing Parts Issue.” Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with order details to **service@grandtunnel.com**, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:**Steps:**

1. Contact our customer service team (by email: service@grandtunnel.com).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

Customer Service Email: service@grandtunnel.com

Helpful Tips**To process your issue efficiently, please prepare the following information:**

- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.
















Thank you for your trust and support!
We hope you enjoy using our product!


Parts List - Panels



Please check you have all the panels listed below.

Box 1

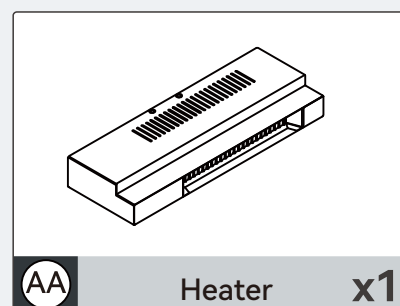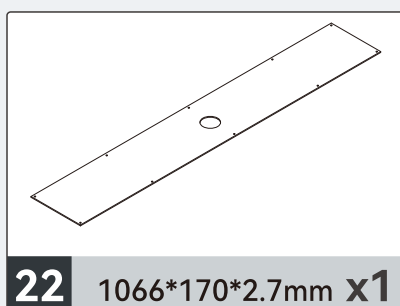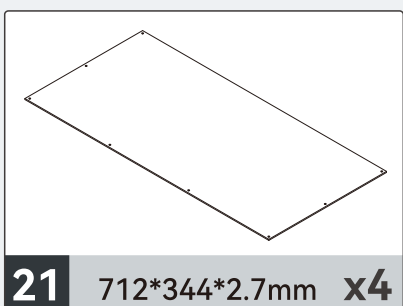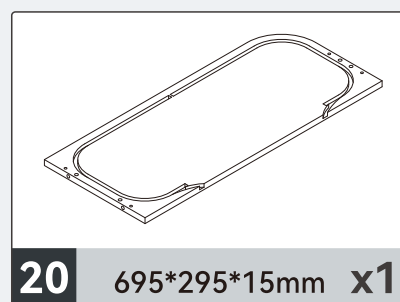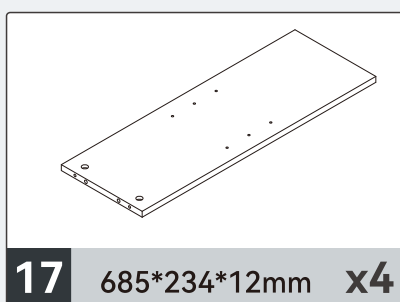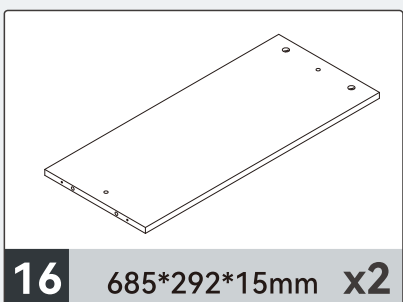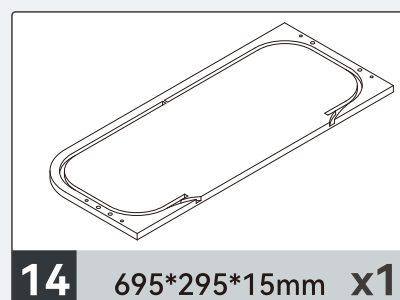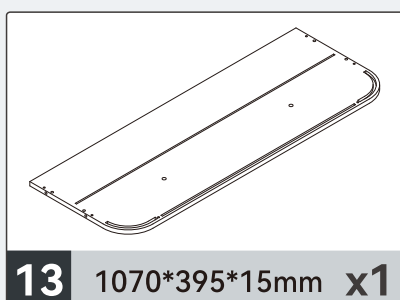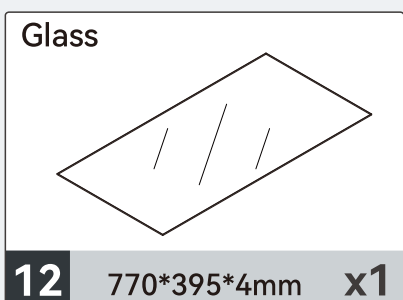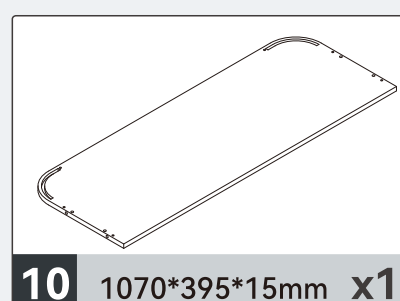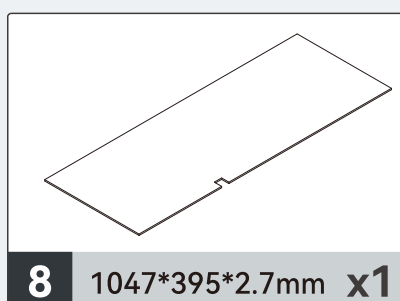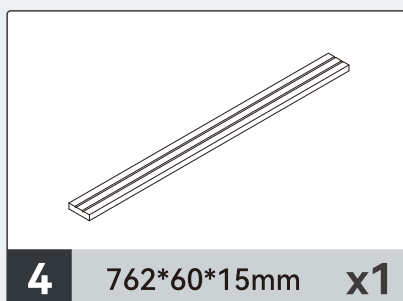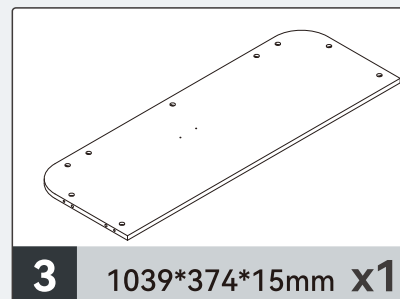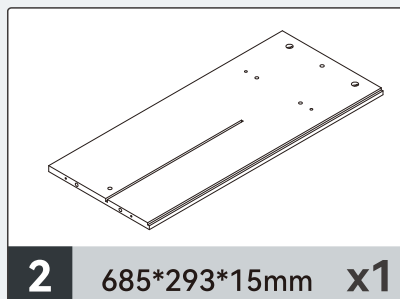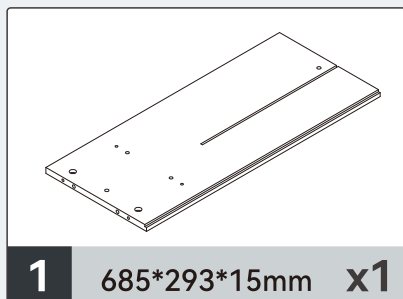

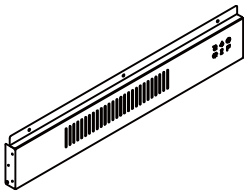

HH

Panel

x1



GG

Self-Tapping Screws
4*8mm


x7



IMPORTANT

Accessories (AA, HH, GG) are packed inside a separate inner box. Do not discard packaging materials until all parts and hardware have been located.


Box 2

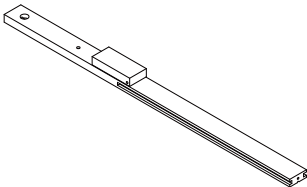

5

685*40*30mm


x1

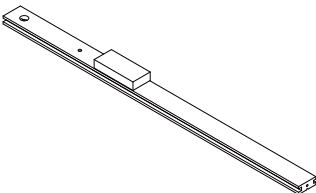

6

685*40*30mm


x1

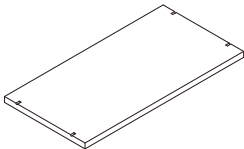

7

478*230*12mm


x2

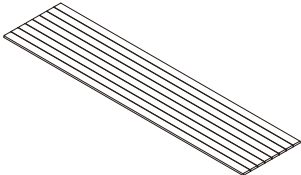

11

695*160*4.7mm


x2

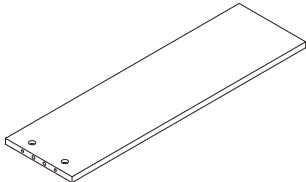

15

685*196*15mm


x2

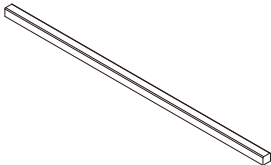

18

681*20*15mm


x4

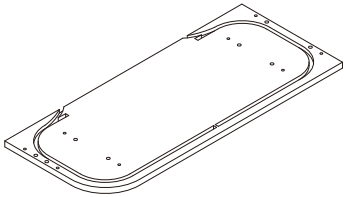

19

695*295*15mm


x1

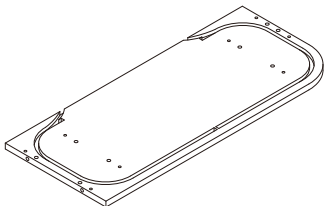

23

695*295*15mm


x1

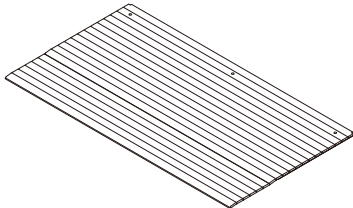

24

695*408*4.7mm


x2

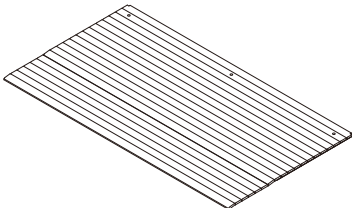

25

695*408*4.7mm


x2

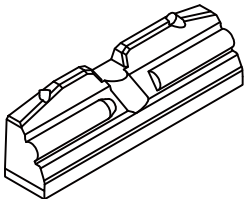

BB

Faux Logs





x1

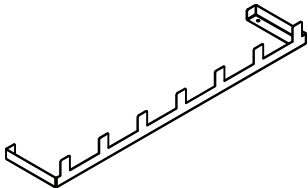

CC

Support Plate

x1

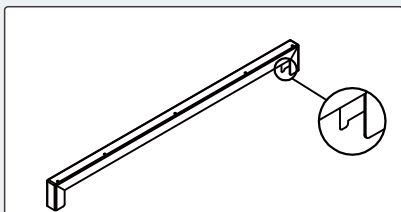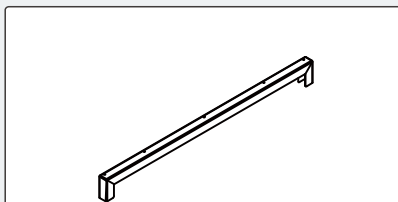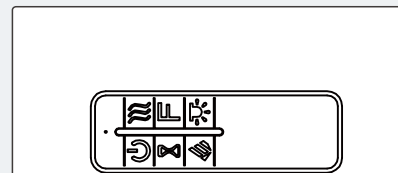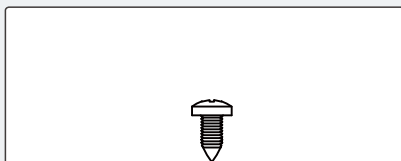**DD** Rear Support Legs **x1****EE** Front Support Legs **x1****FF** remote control **x1****GG** Self-Tapping Screws
4*8mm **x8****IMPORTANT**

 
 
Accessories (BB, CC, DD, EE, FF, GG) are packed inside a separate inner box. Do not discard packaging materials until all parts and hardware have been located.



Parts List - Fittings

Please check you have all the fittings listed below.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.



 A Ø7x39mm x31	 B Ø15x9.6mm x31	 C Short Dowel Ø6x30mm x46
 D Shelf Support Pin x8	 E Ø5x40mm x22	 F Ø4x14mm x14
 G Long Dowel Ø6x50mm x8	 H Protective Foot x12	 I Wall Fixing Pack x2
 J Ø2x14mm x34+8	 K Allen Key x1	 L Ø6x25mm x4
 M Ø4x8mm x2	 N Z Shaped Corner Bracket x1	 O H Bar x2
 P Wax x1		

Tools required

Phillips screwdriver
(medium & large)

Ruler

 Use this ruler to
help correctly
identify the screws

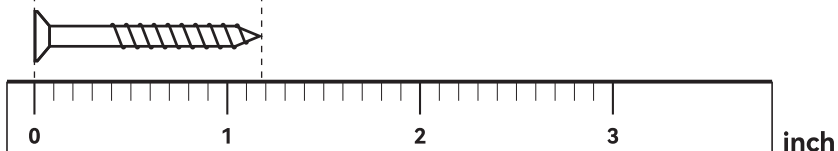

The screws length is measured from the head to the point
(30mm screw shown).

Using Camlocks




EN

Step 1


Connect the male camlock as directed in the assembly instructions using a screwdriver.

DO NOT OVER TIGHTEN.

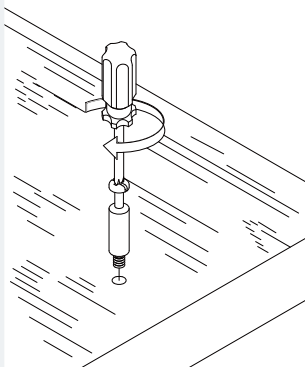

Step 2


Push the male camlock into the entry hole.

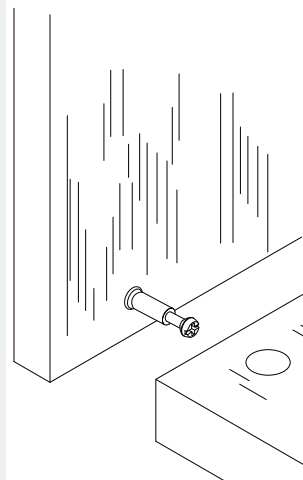

Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

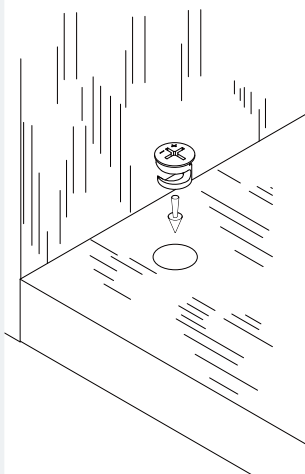


Step 4



Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

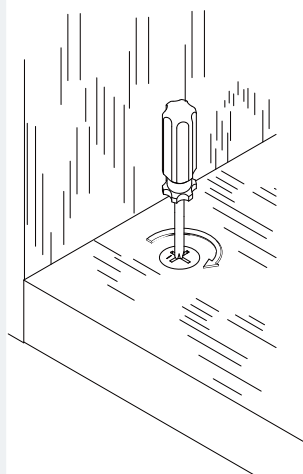

Assembly Instructions

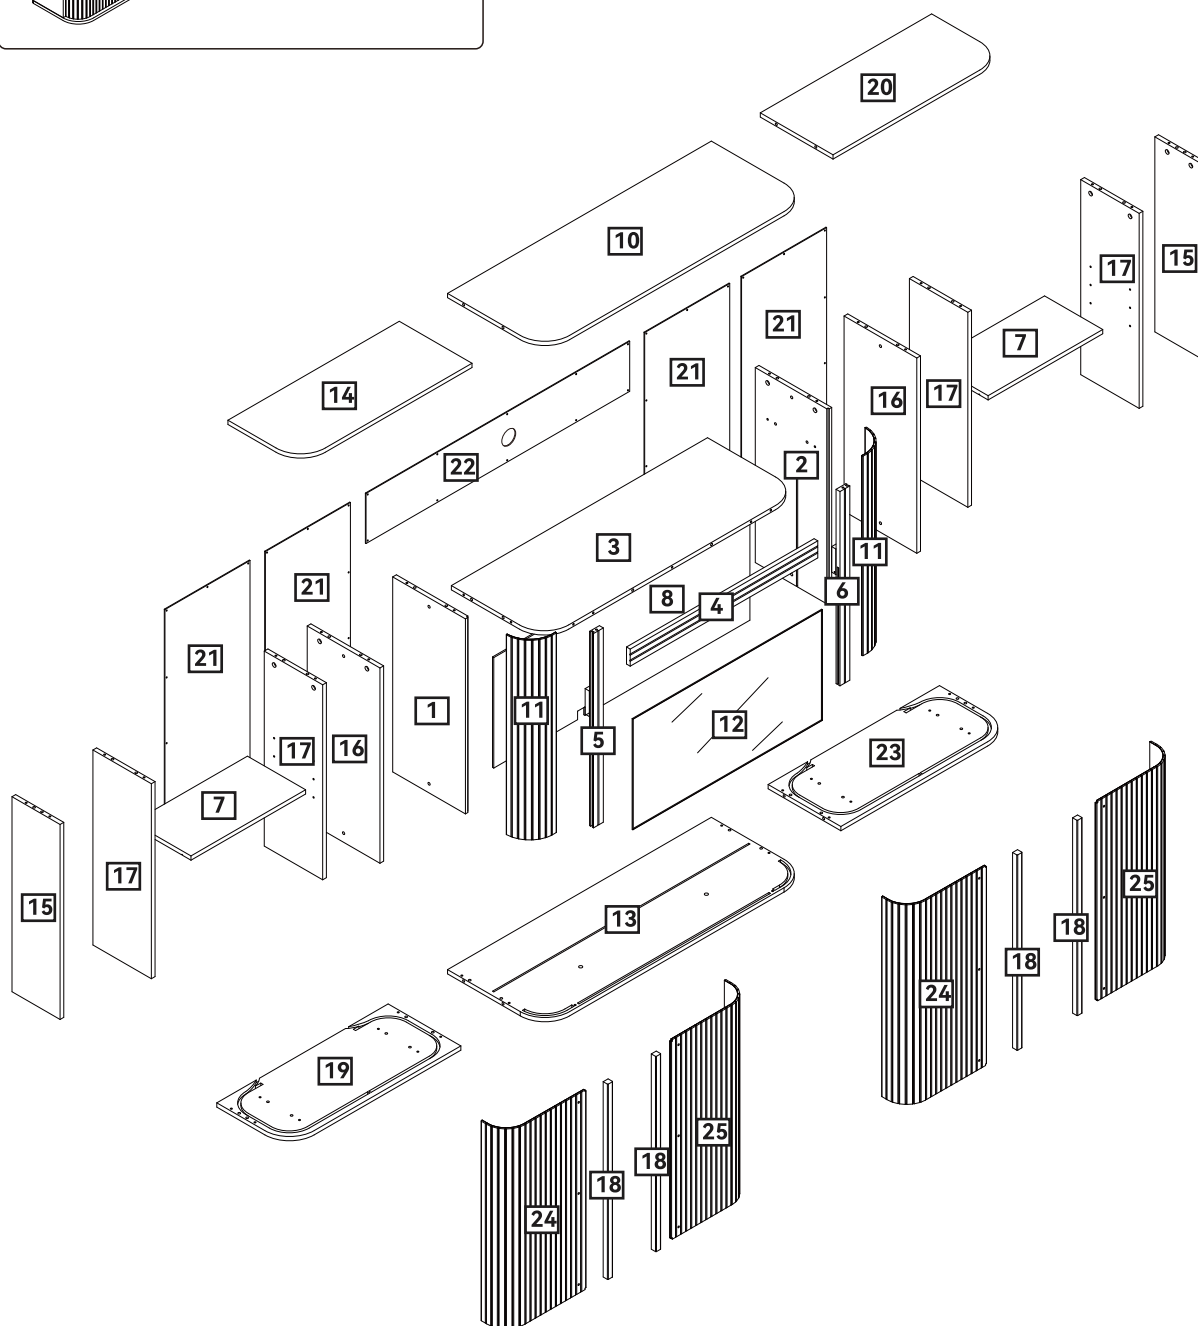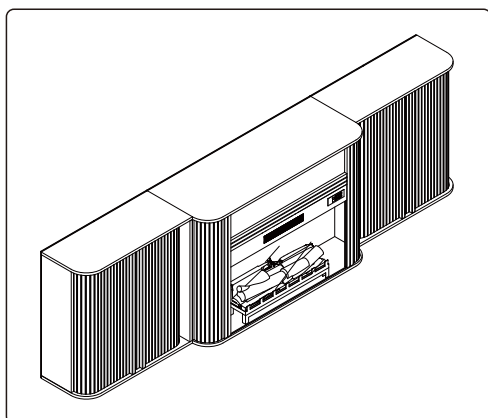


Step 1

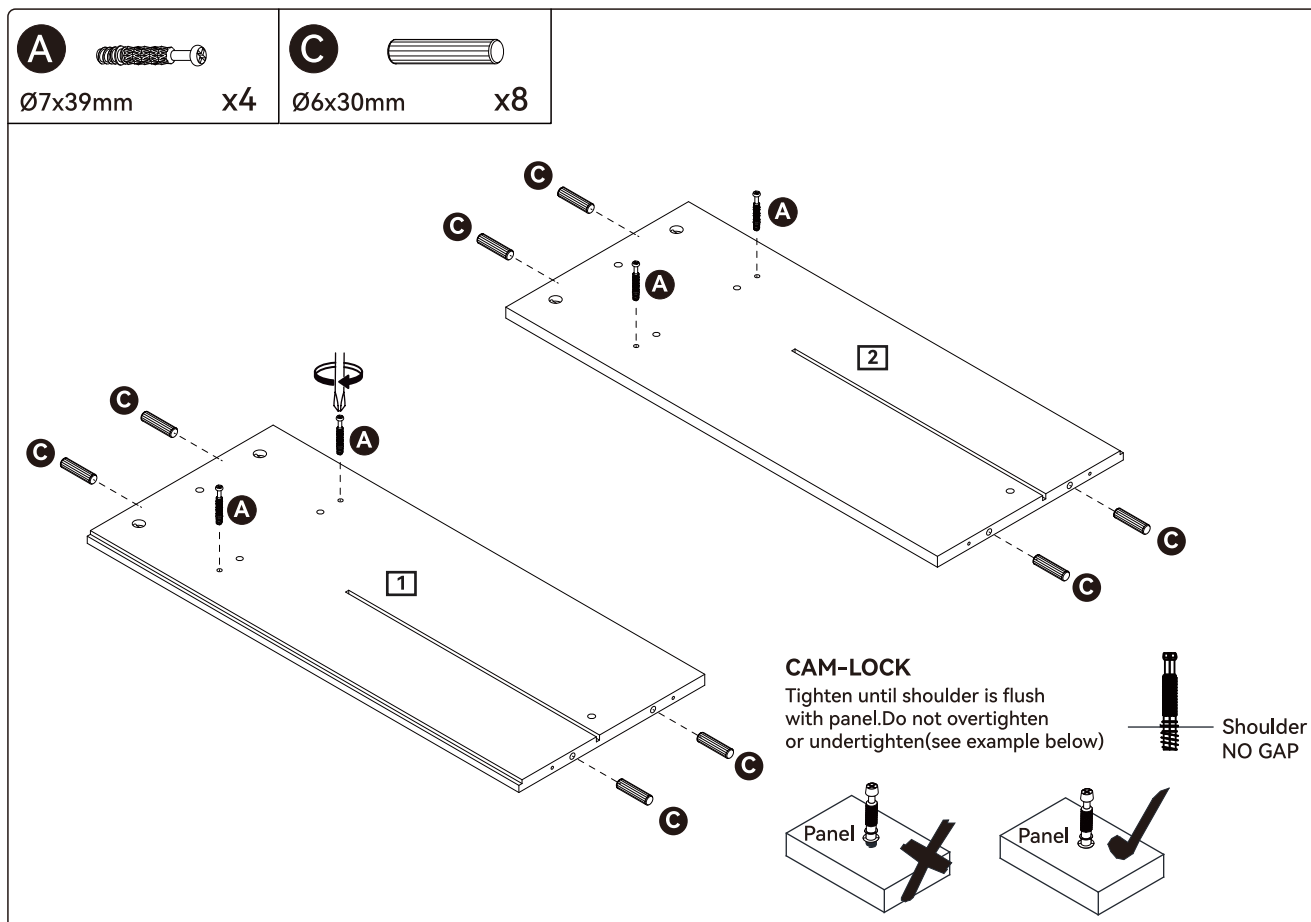


Insert wooden dowels C into panels 1 and 2.
 Install cam bolts A into panels 1 and 2.

Step 2

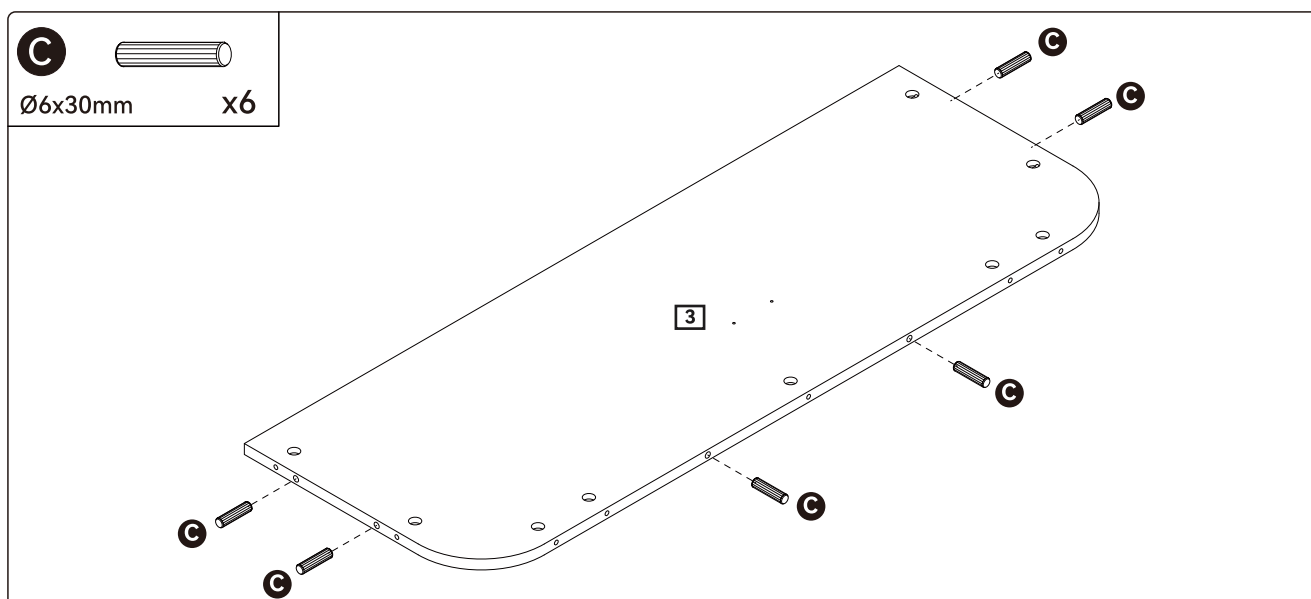


Insert wooden dowels C into panel 3.

Step 3

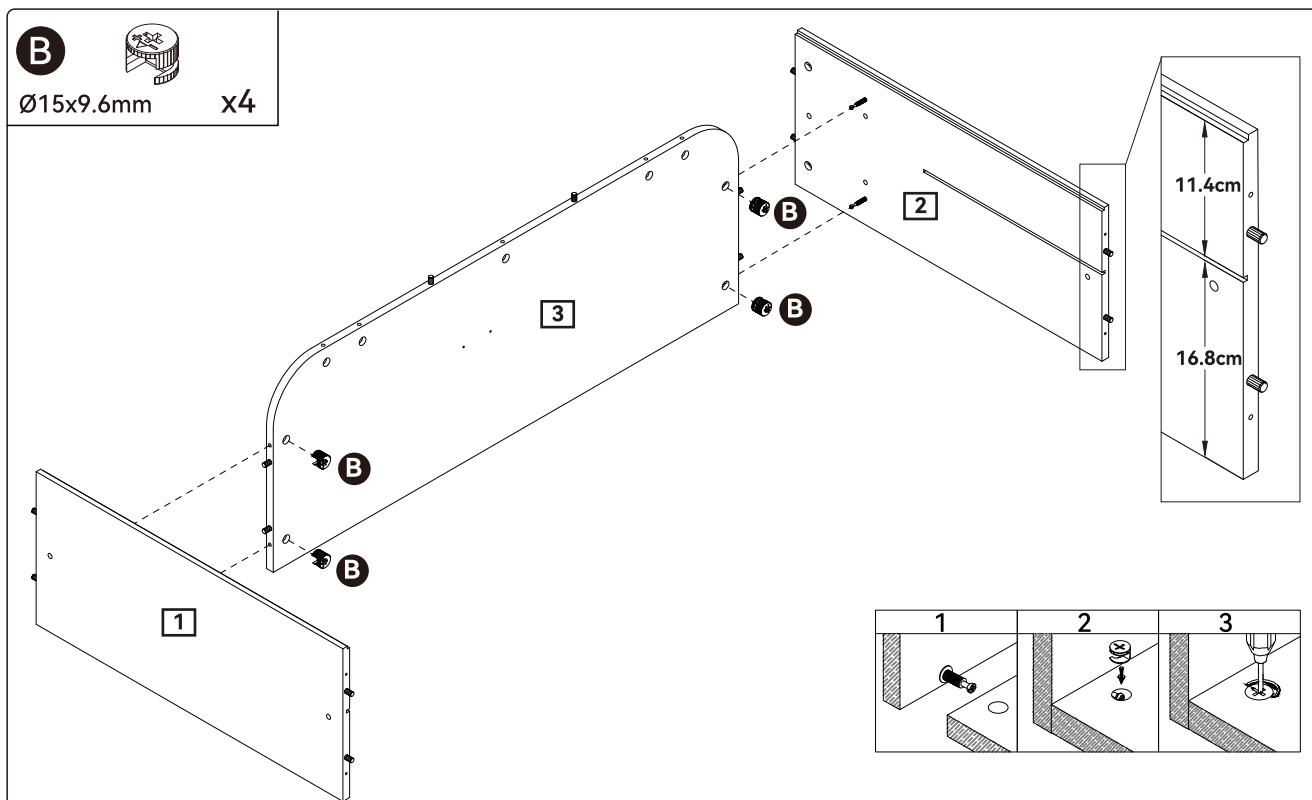


Connect panels 1, 2, and 3. Insert cam locks B into panel 3 and tighten.

Step 4

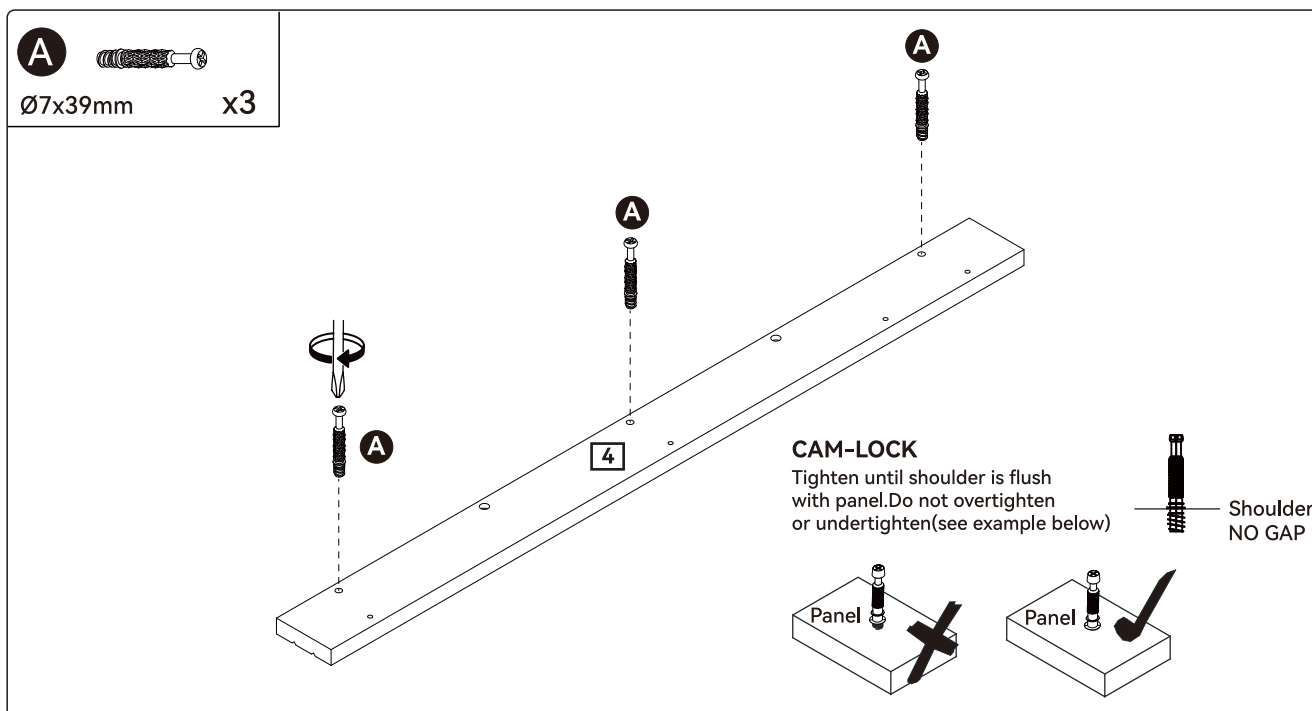


Install cam bolts A into panel 4.

Step 5

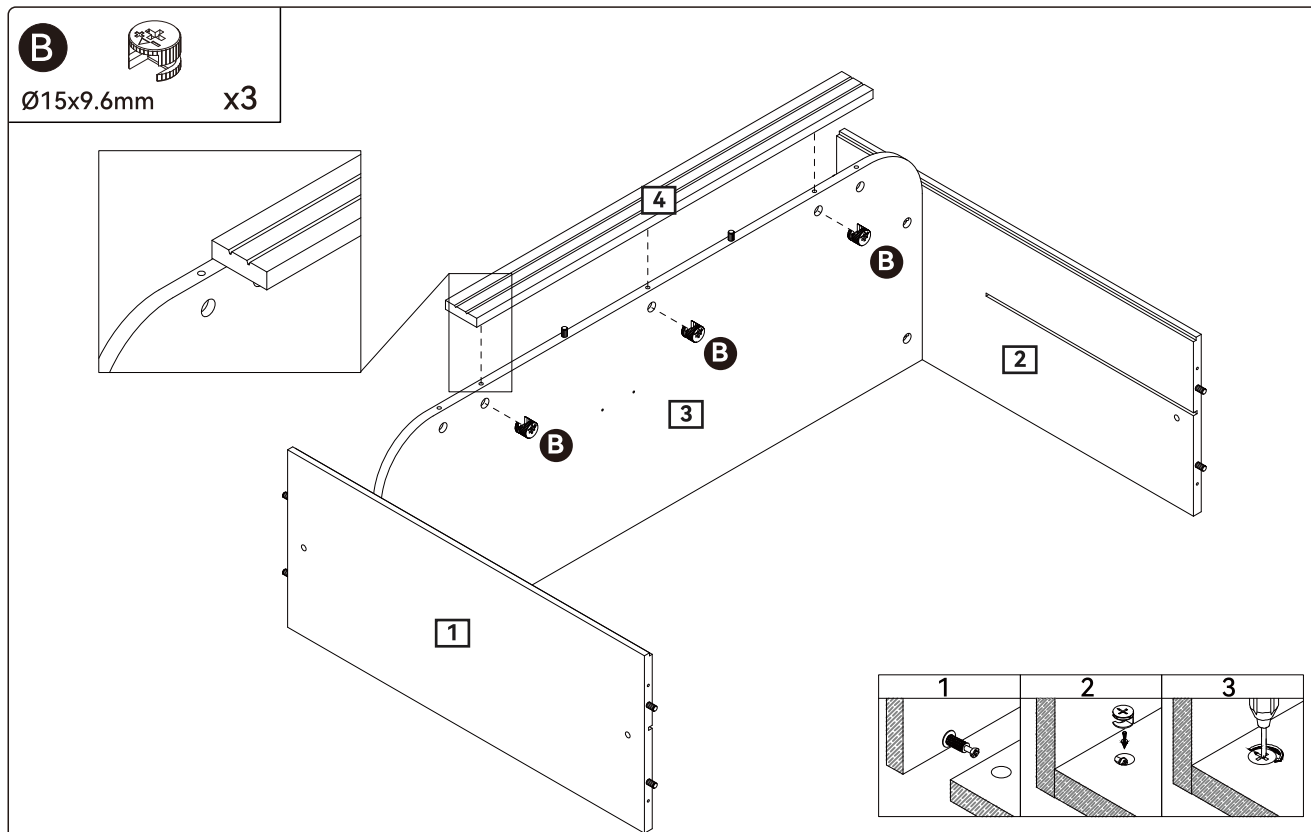

Connect panel 4 to panel 3. Insert cam locks B into panel 3 and tighten.

Step 6

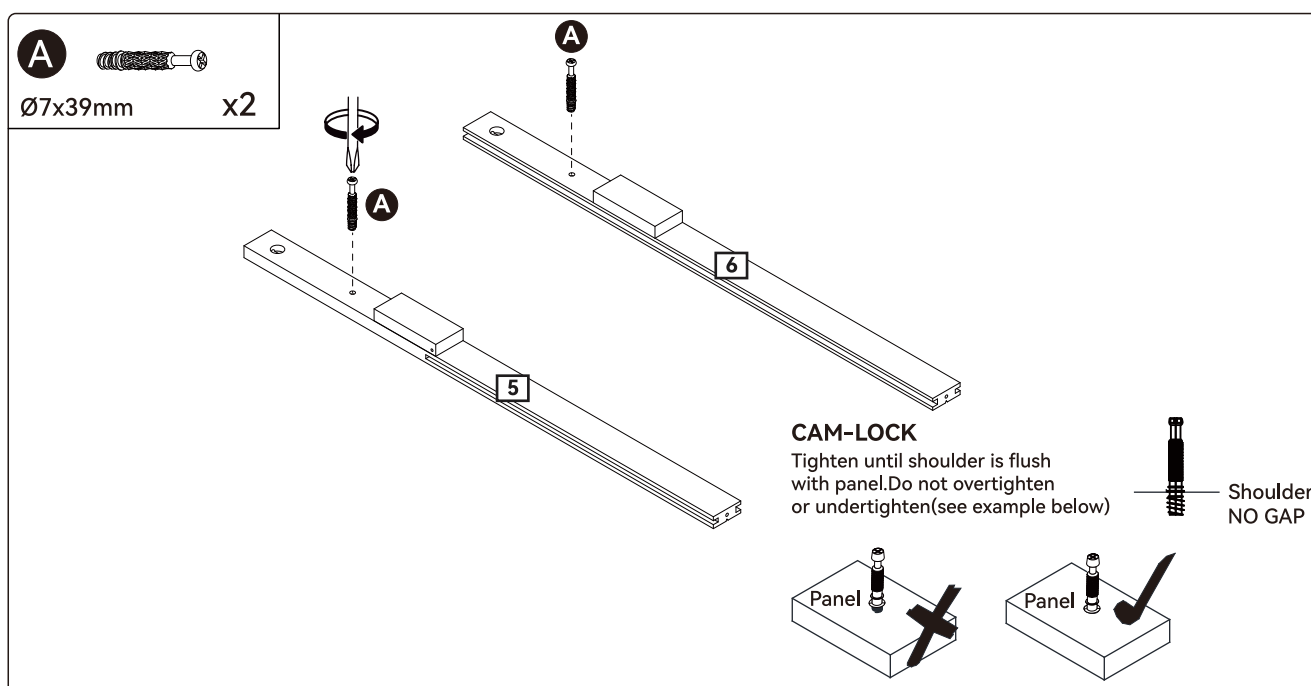


Install cam bolts A into panels 5 and 6.

Step 7

B 
 Ø15x9.6mm x2


Install the full-length groove facing the outside.

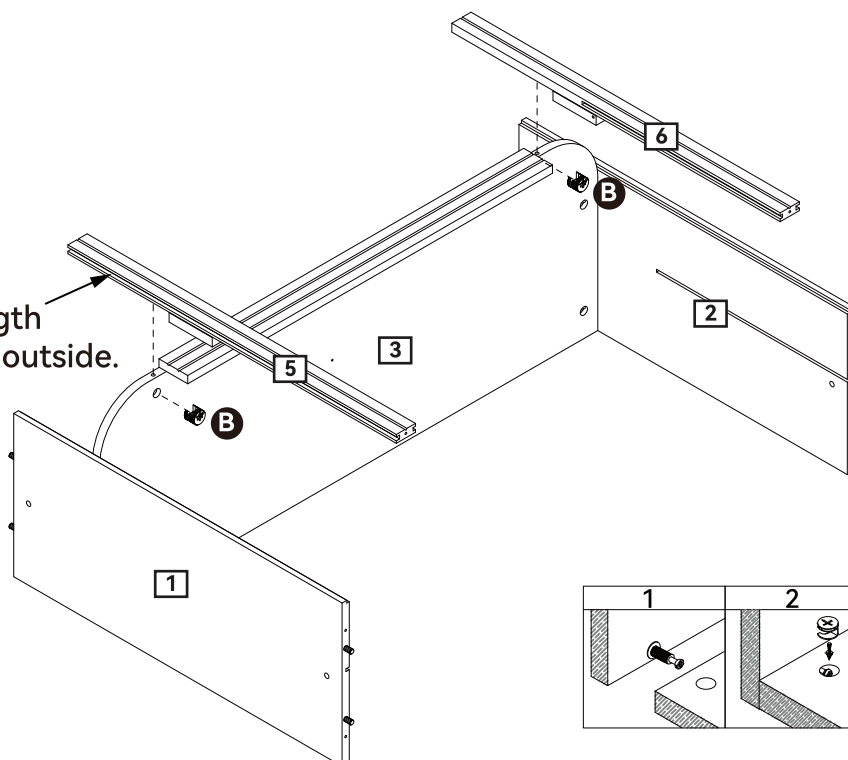

Connect panels 5 and 6 to panel 3. Insert cam locks B into panel 3 and tighten.

Step 8

A 
 Ø7x39mm x6

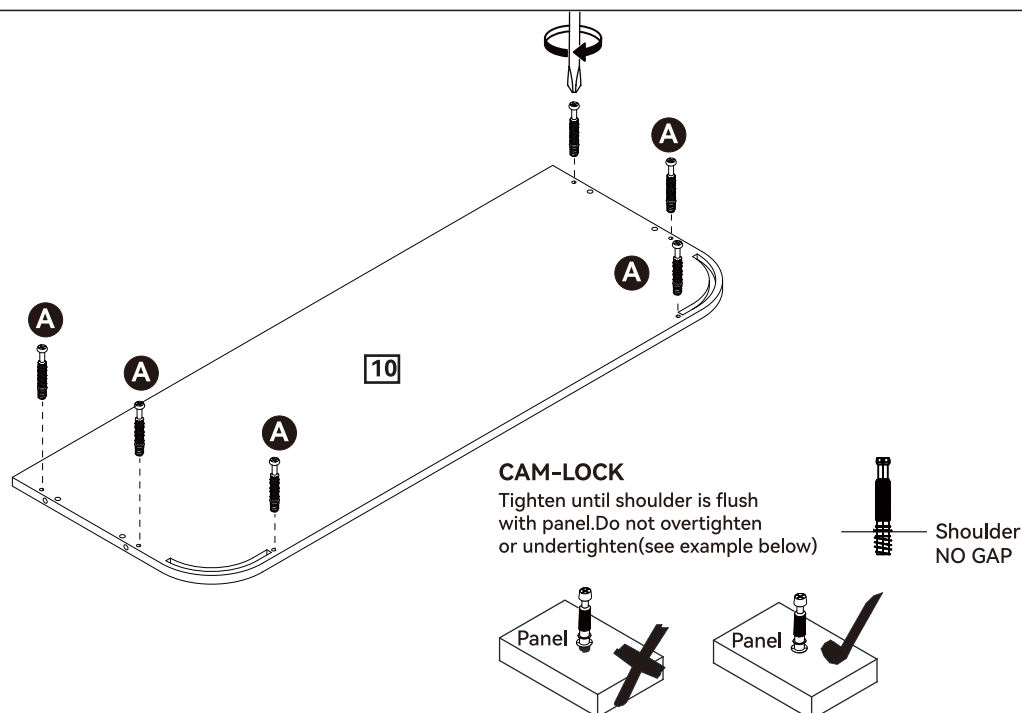

Install cam bolts A into panel 10.

Step 9



EN

B




Ø15x9.6mm

x6

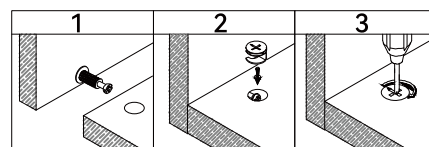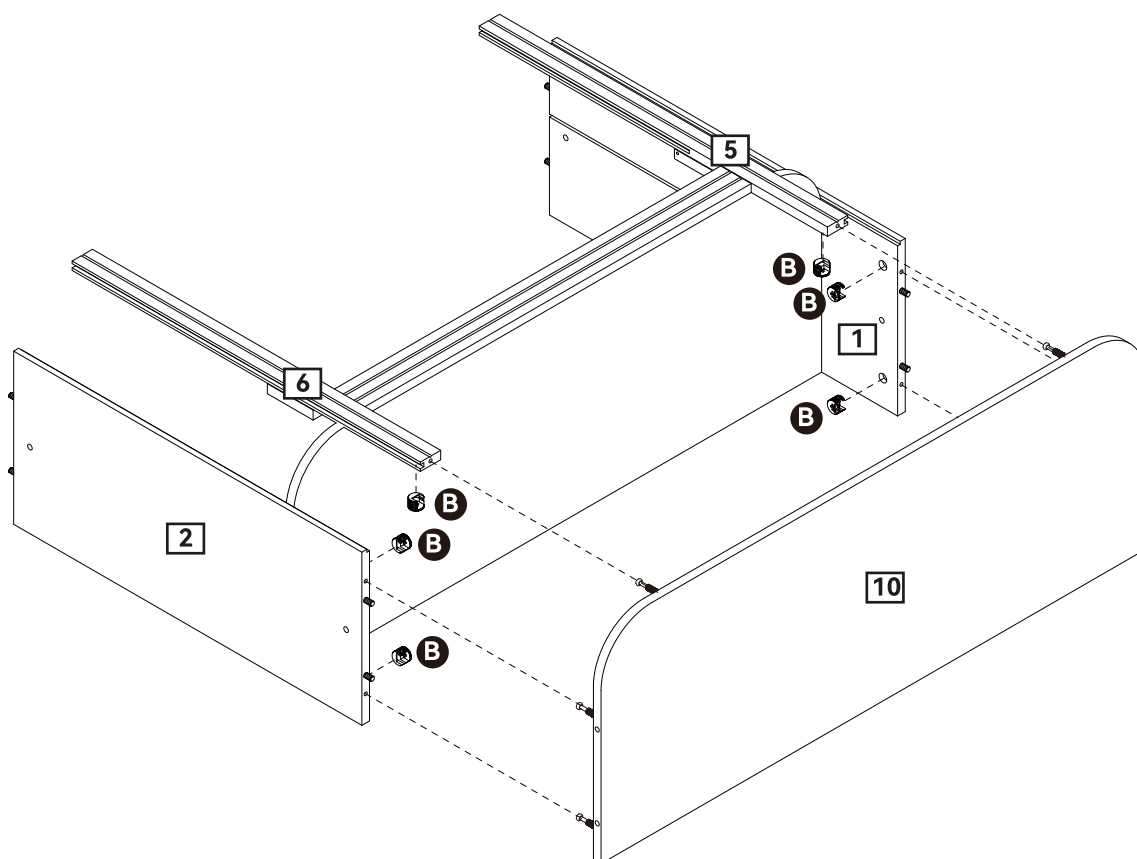

Connect panel 10 to panels 1, 2, 5, and 6.
Insert cam locks B into panels 1, 2, 5, and 6, then tighten.


Step 10

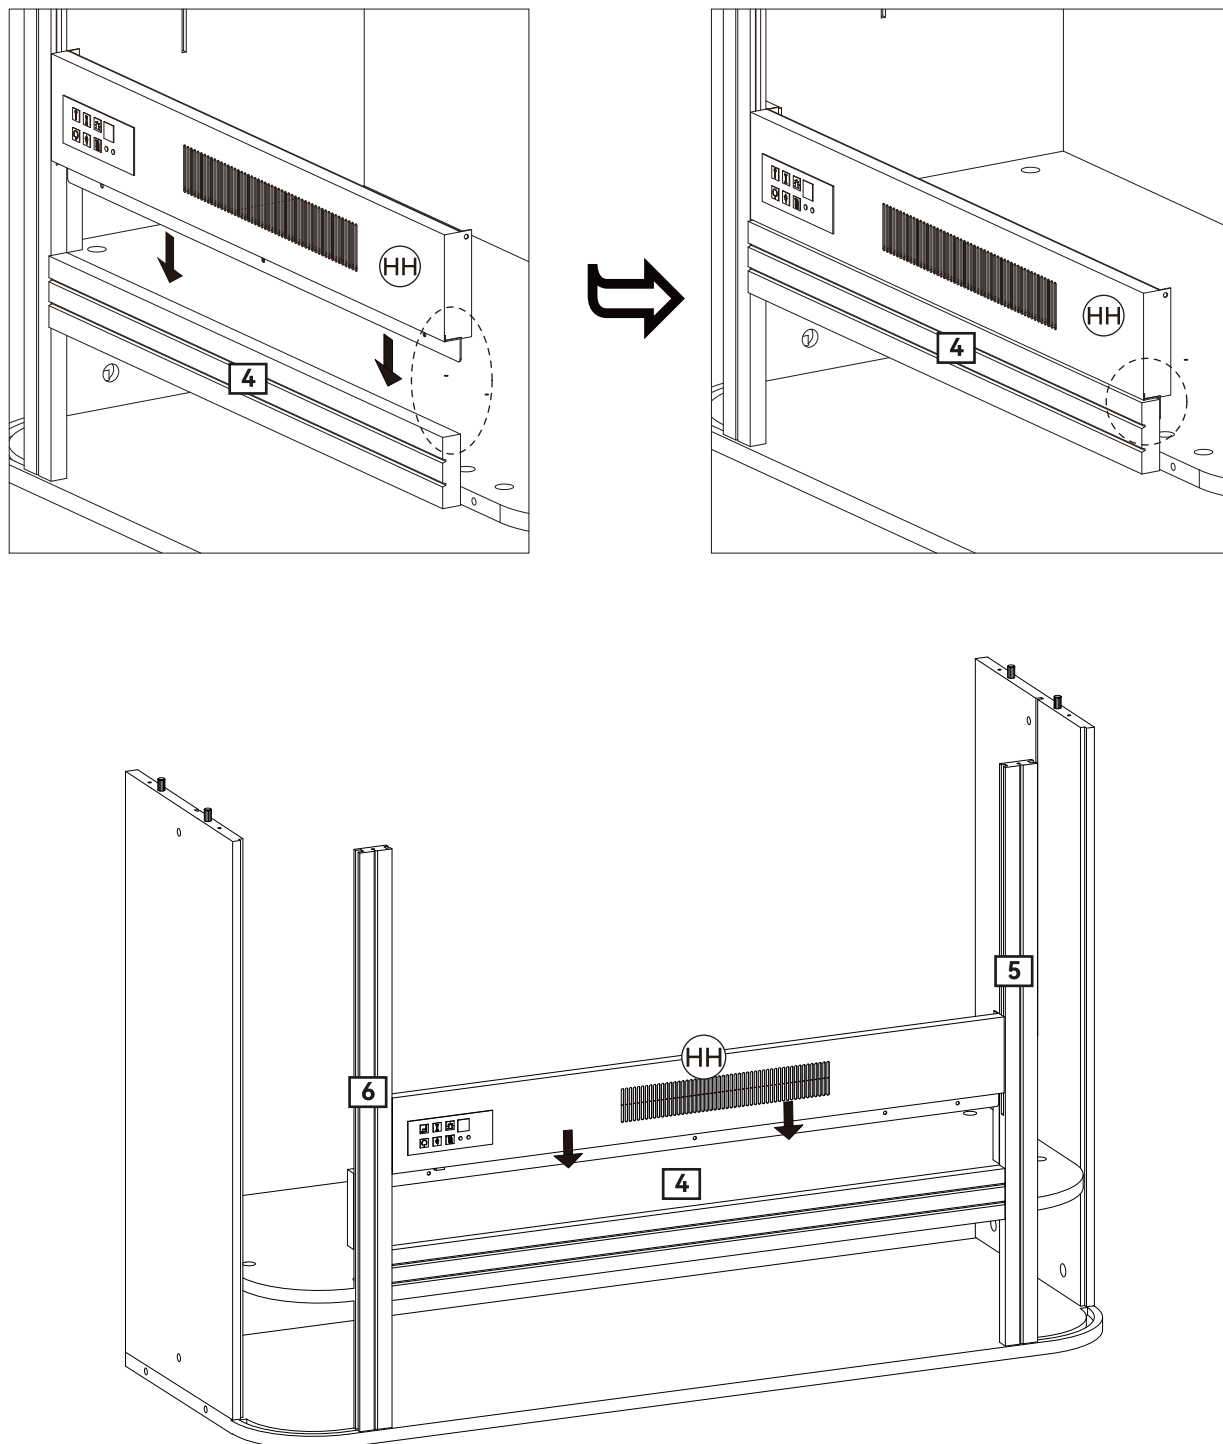

Place panel HH on panel 4.

Step 11

GG  **Self-Tapping Screws 4*8mm x4**

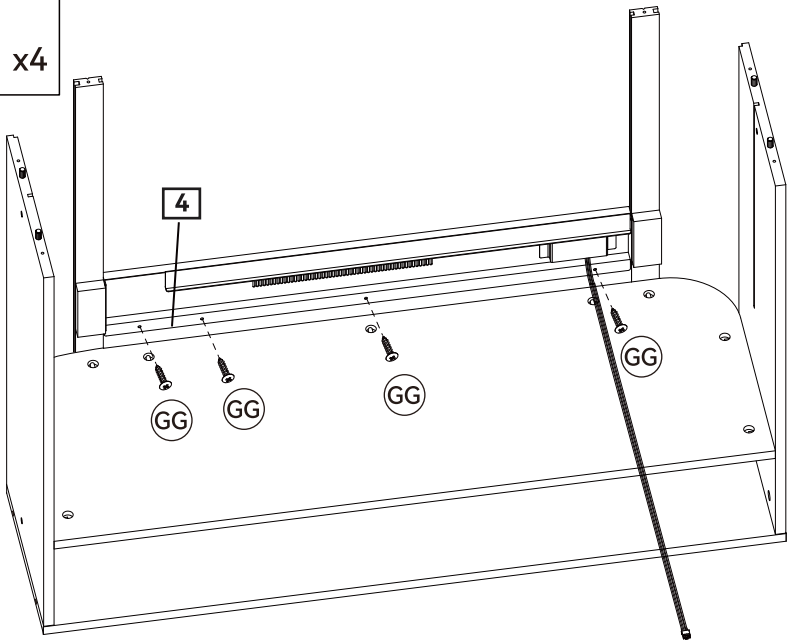


Note: pull the wire out.

Fasten panel HH to panel 4 with screws GG.

Step 12


GG  **Self-Tapping Screws 4*8mm x2**

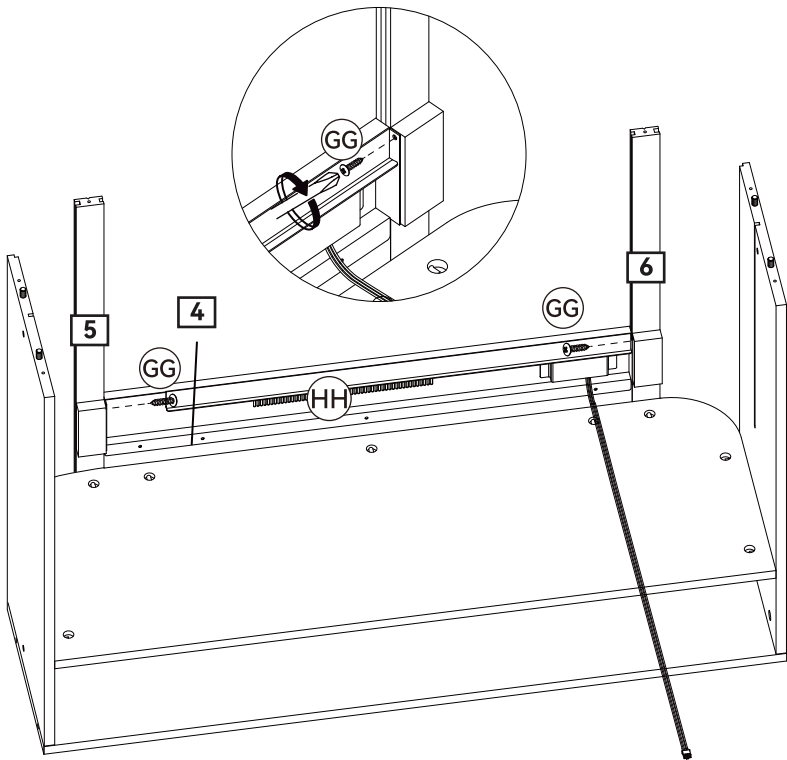

Fasten panel HH to panels 5 and 6 with screws GG.


Step 13

- M**  $\varnothing 4 \times 8 \text{ mm}$ x2
- N**  Z Shaped Corner Bracket x1

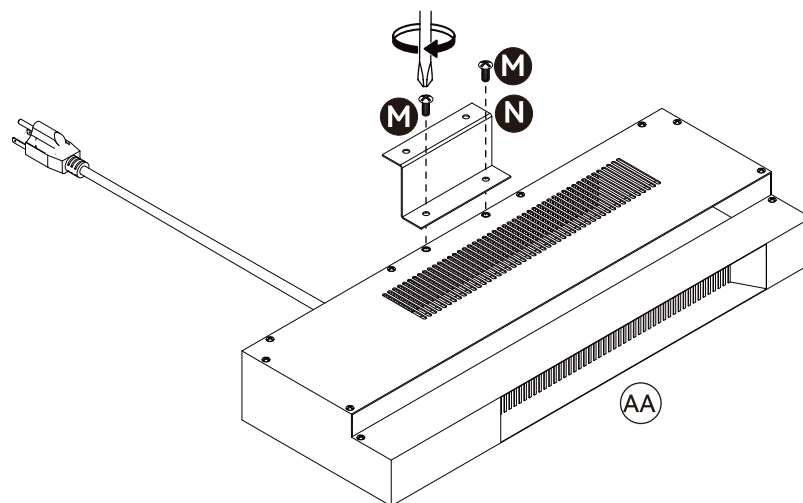

Attach bracket N to heater unit AA with screws M.

Step 14

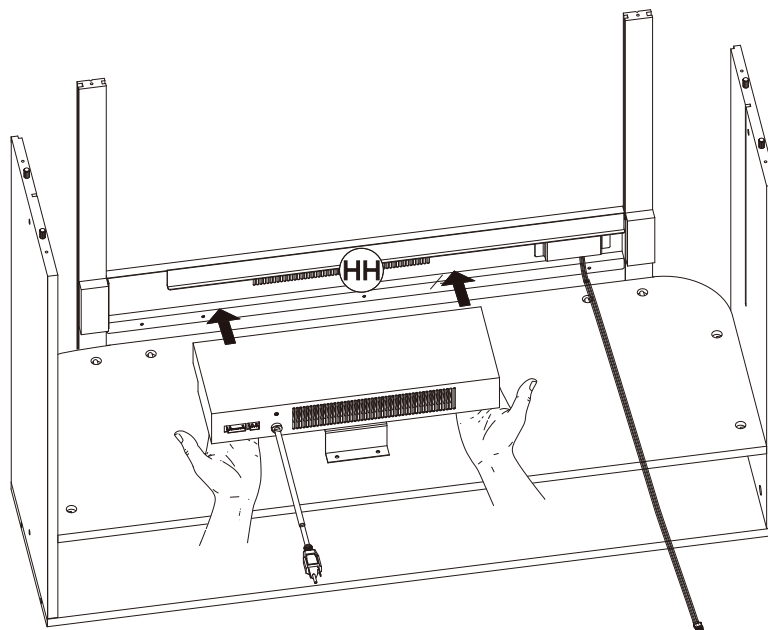


From the back of the cabinet, slide heater unit AA into the panel groove.

Step 15

F 

Ø4x14mm


x2

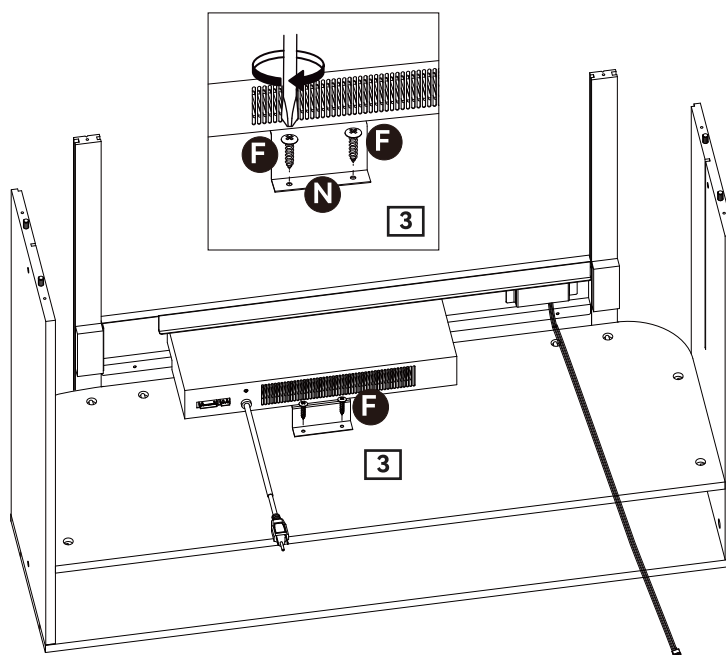

Attach bracket N to panel 3 with screws F.

Step 16


Tamboured side should face outward.

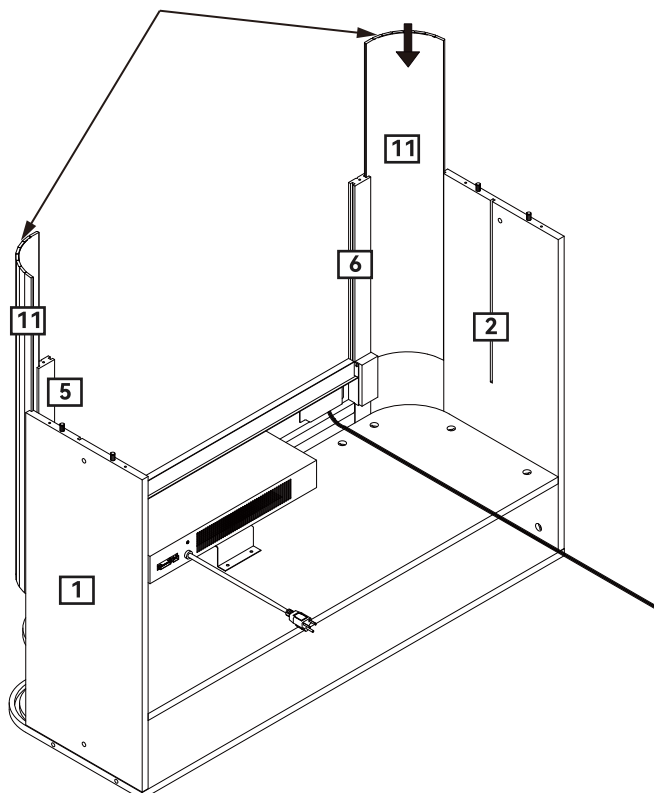

Slide panel 11 into the groove as shown.

Step 17

The glass is packed inside the cardboard box.

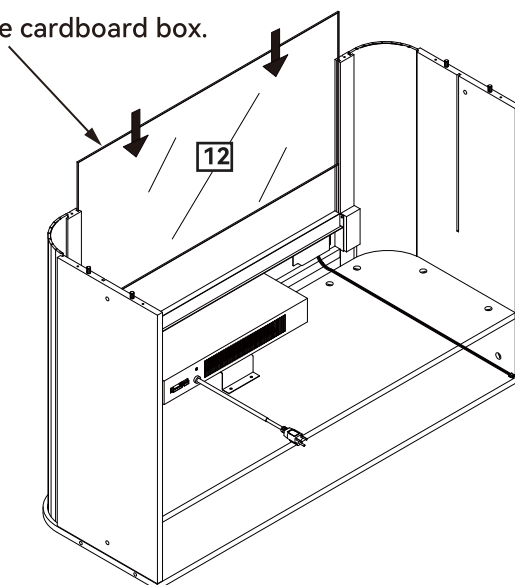


Slide glass panel 12 into the grooves between panels 5 and 6 as shown.

Step 18

E 
 Ø5x40mm x6

Ensure the glass and
tamboured panels are
properly seated in the
groove.

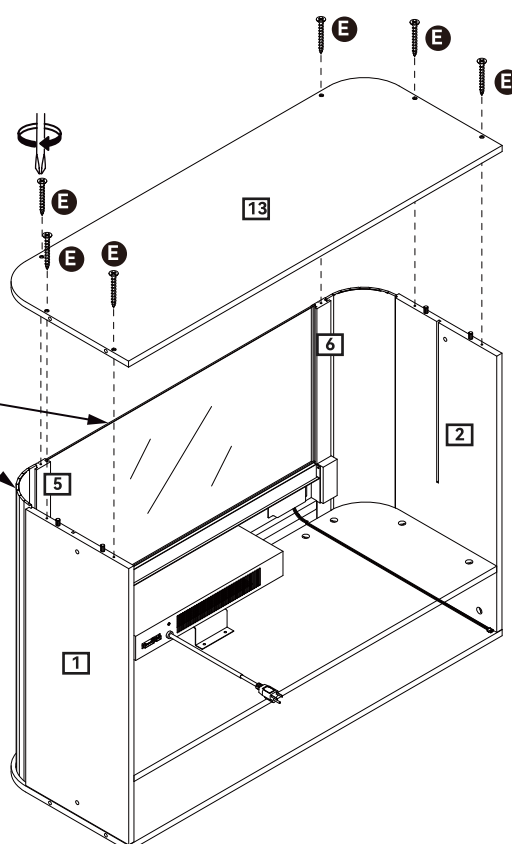


Attach panel 13 to panels 1, 2, 5, and 6 with screws E.

Step 19

H



Protective Foot x4

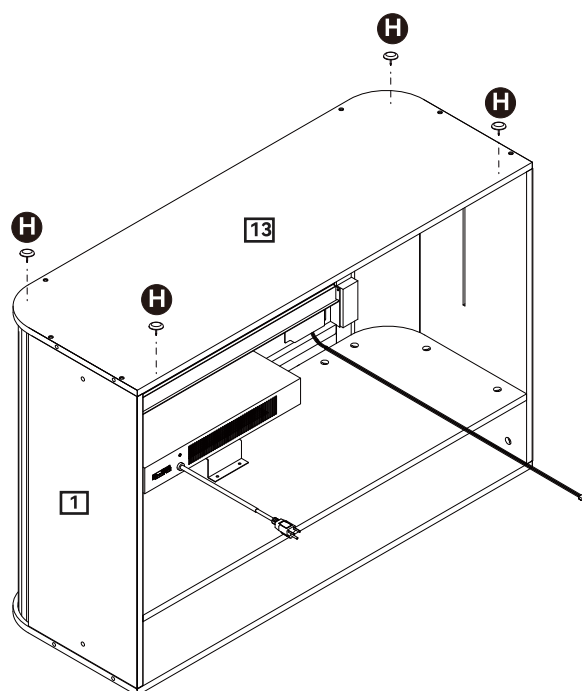

Insert foot pins H into panel 13.


Step 20

A



Ø7x39mm

x8


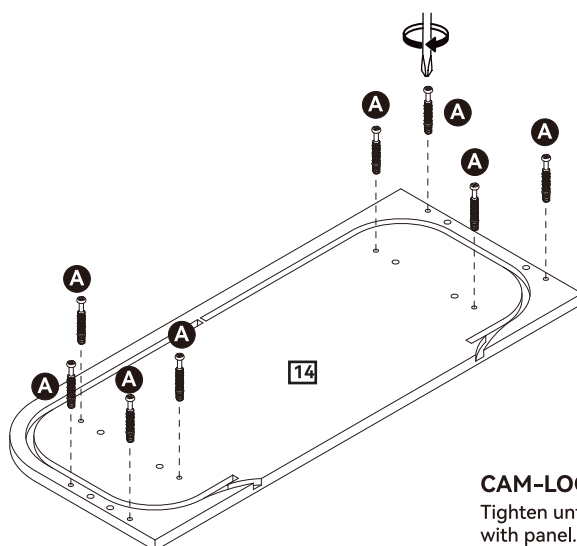


CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)





Shoulder
NO GAP

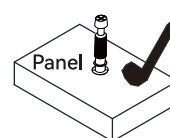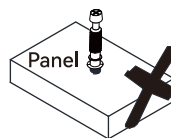



Install cam bolts A into panel 14.

 Step 21

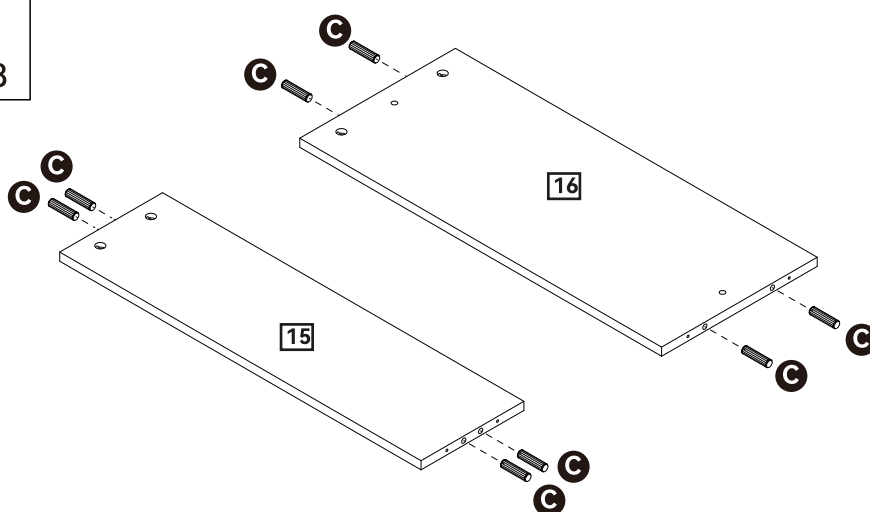

Insert wooden dowels C into panels 15 and 16.


Step 22

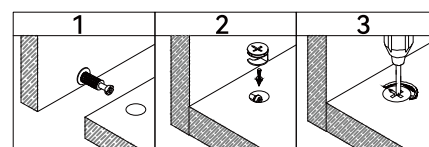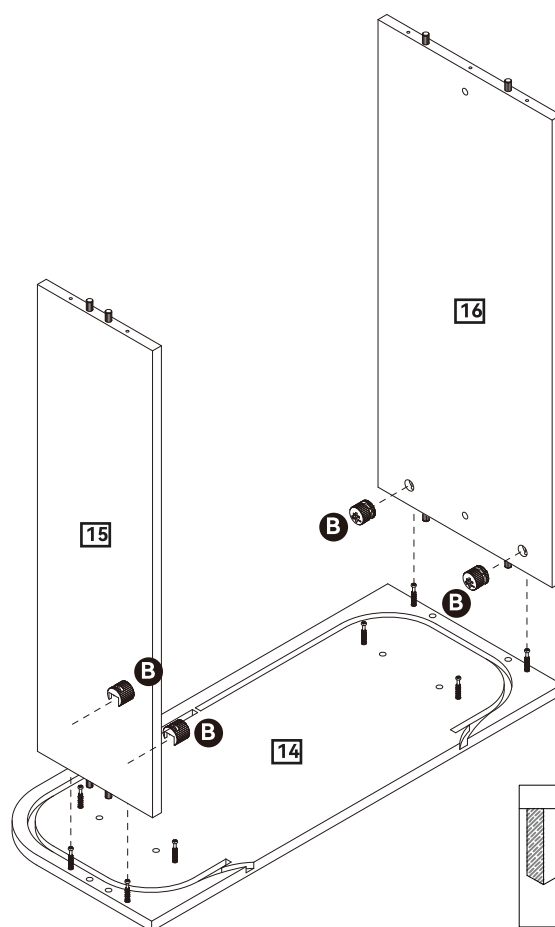

Connect panels 15 and 16 to panel 14.
 Insert cam locks B into panels 15 and 16 and tighten.


Step 23

 C



Ø6x30mm

x8

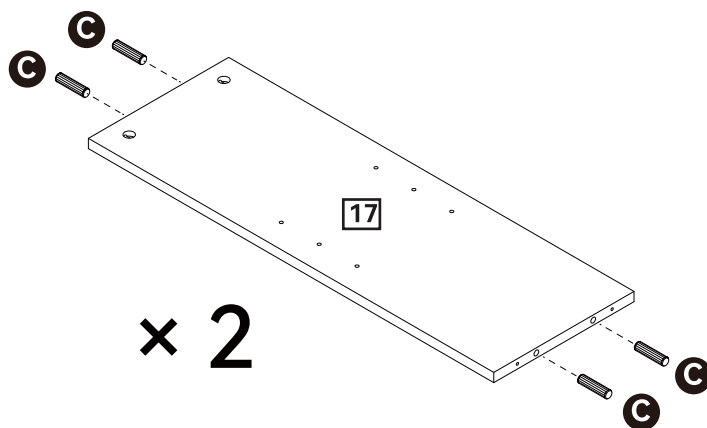

Insert wooden dowels C into panel 17.



Step 24

B



Ø15x9.6mm


x4

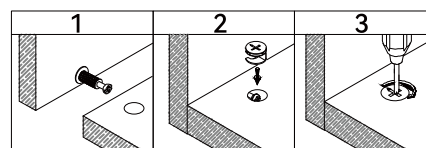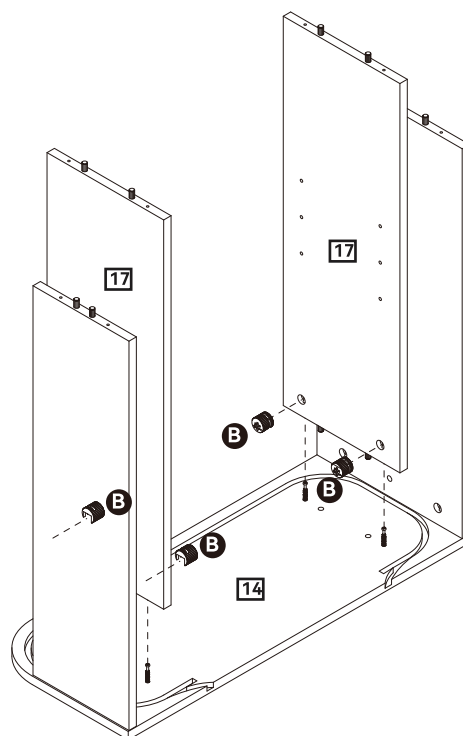

Connect panel 17 to panel 14.
Insert cam locks B into panel 17 and tighten.

Step 25


E 
 Ø5x40mm x8

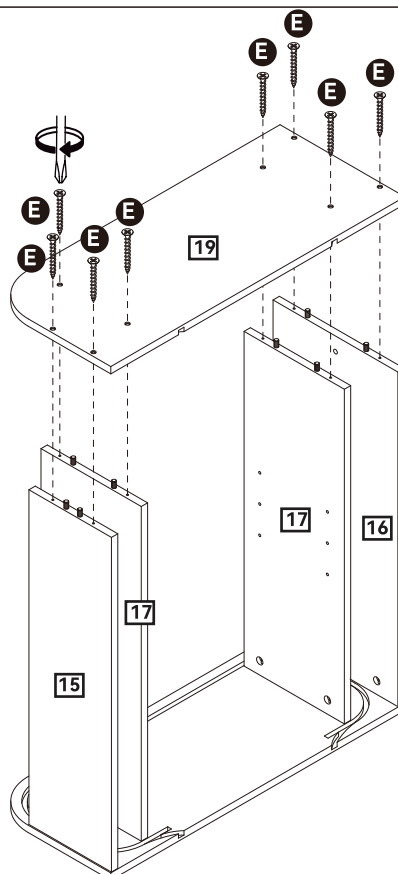

Attach panel 19 to panels 15, 16, and 17 with screws E.

Step 26


H 
 Protective Foot x4

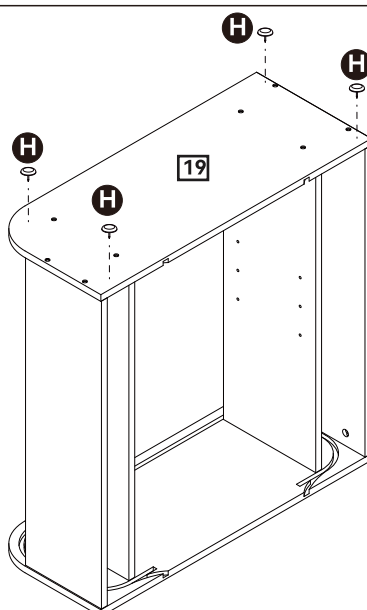

Insert foot pins H into panel 19.



Step 27

A 
 Ø7x39mm x8

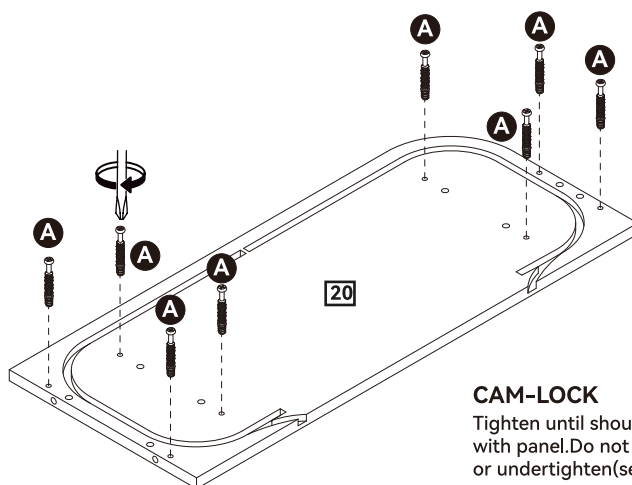

CAM-LOCK


Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

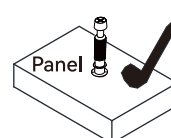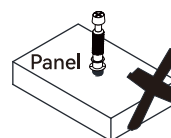

Install cam bolts A into panel 20.


Step 28

C 
 Ø6x30mm x8

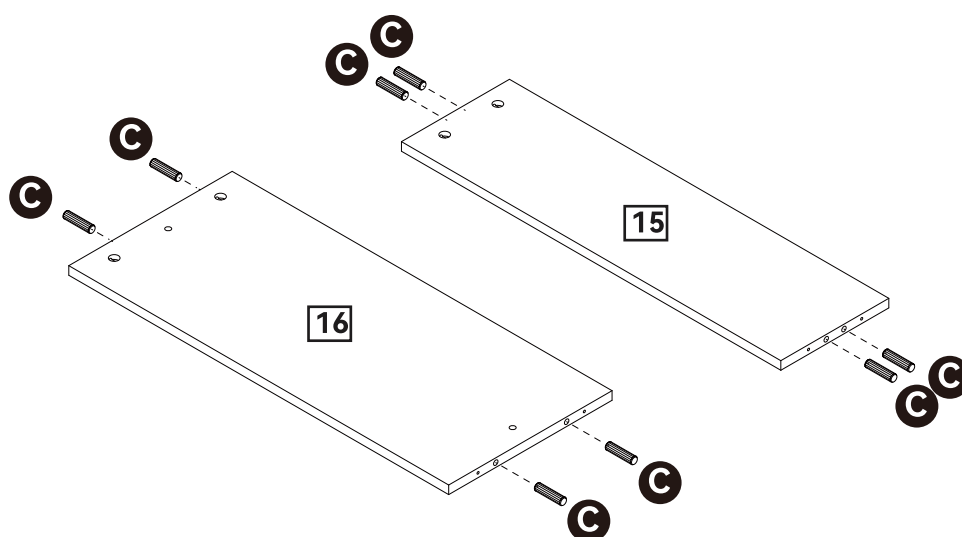



Insert wooden dowels C into panels 15 and 16.

Step 29

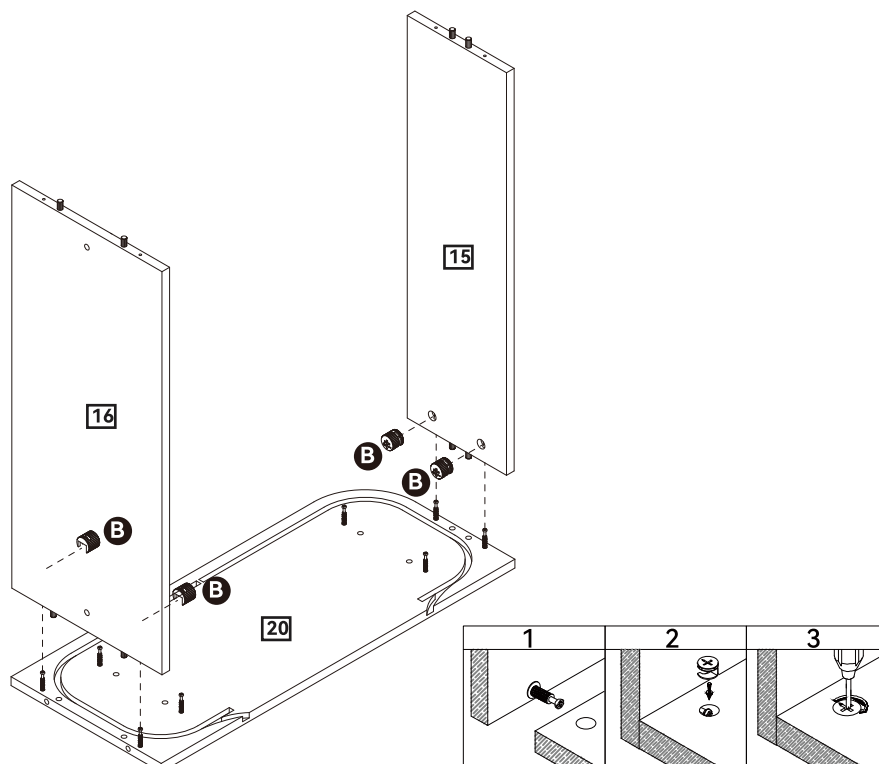

Connect panels 15 and 16 to panel 20.
 Insert cam locks B into panels 15 and 16 and tighten.

 Step 30

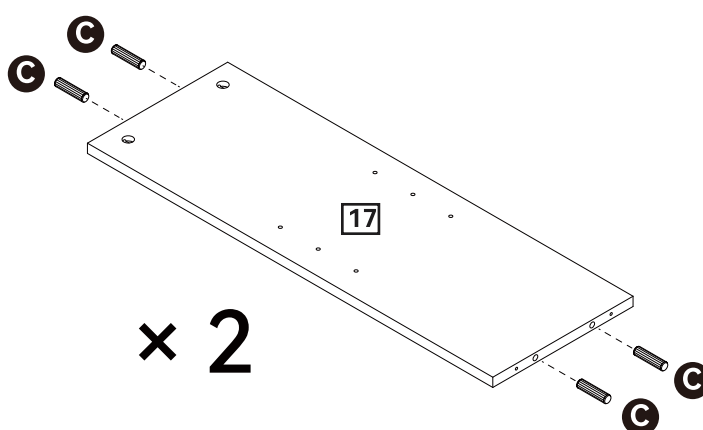

Insert wooden dowels C into panel 17.



Step 31

B



Ø15x9.6mm

x4

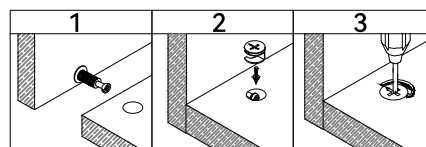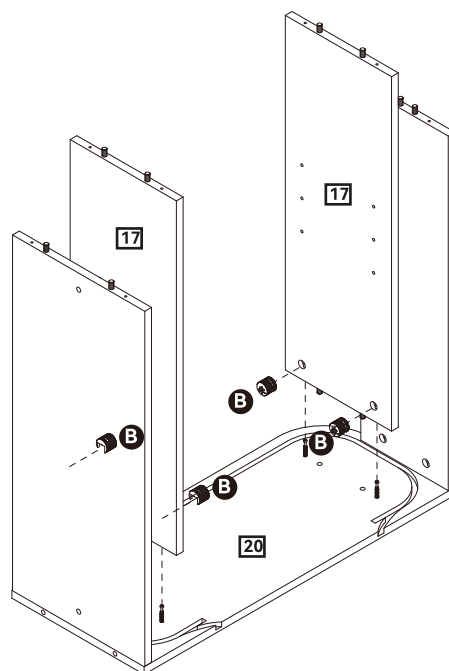

Connect panel 17 to panel 20.
Insert cam locks B into panel 17 and tighten.


Step 32

E



Ø5x40mm

x8

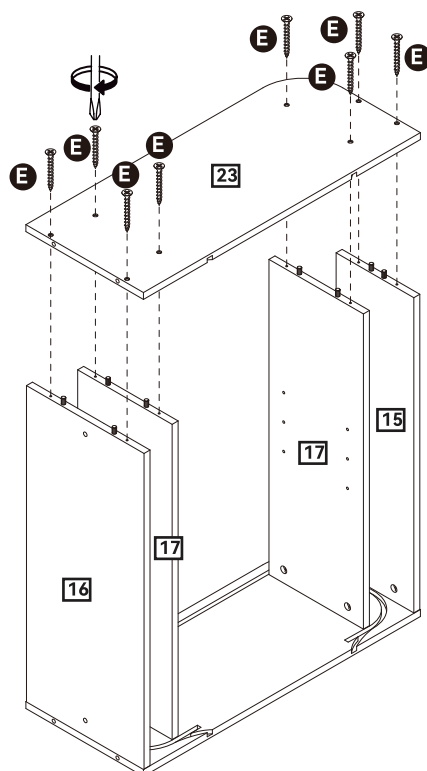


Attach panel 23 to panels 15, 16, and 17 with screws E.

Step 33


H

Protective Foot x4

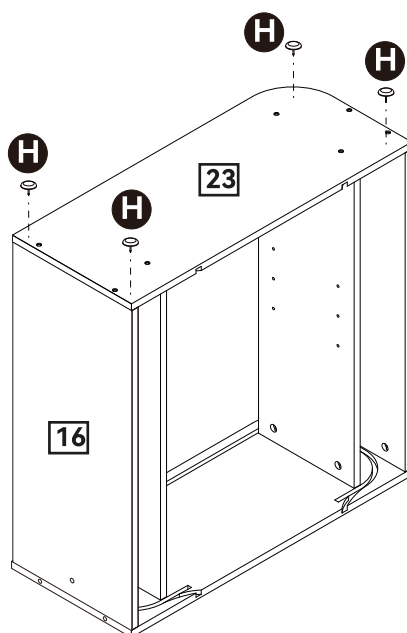


Insert foot pins H into panel 23.

Step 34

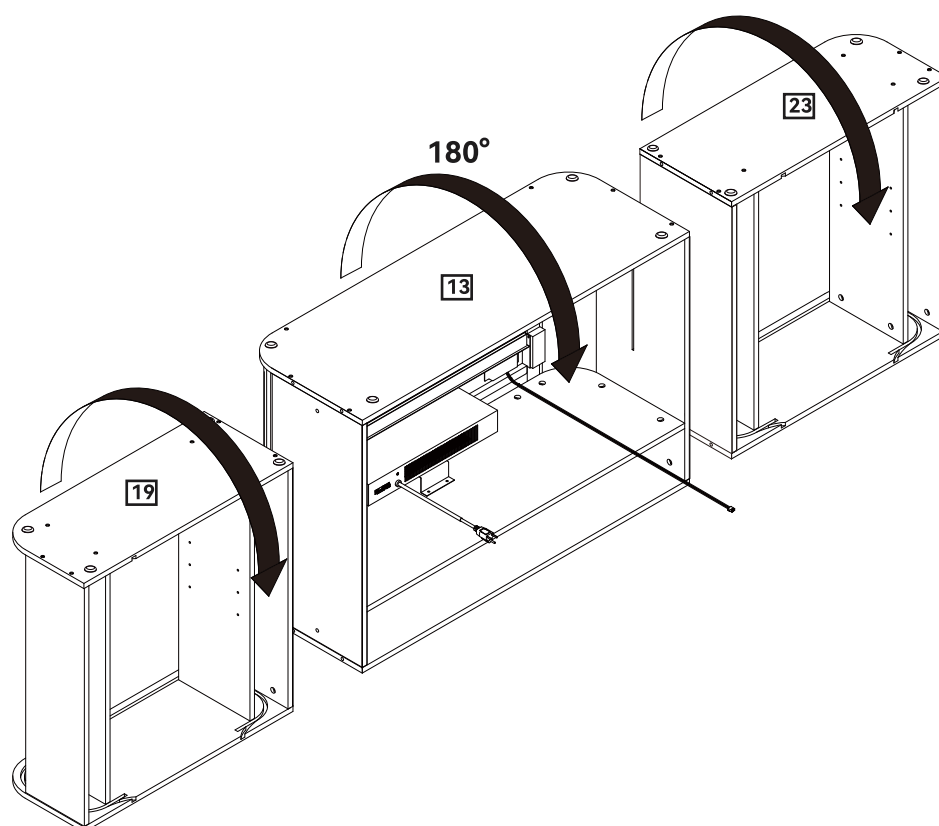


Turn all three cabinet bodies over 180 degrees.

Step 35

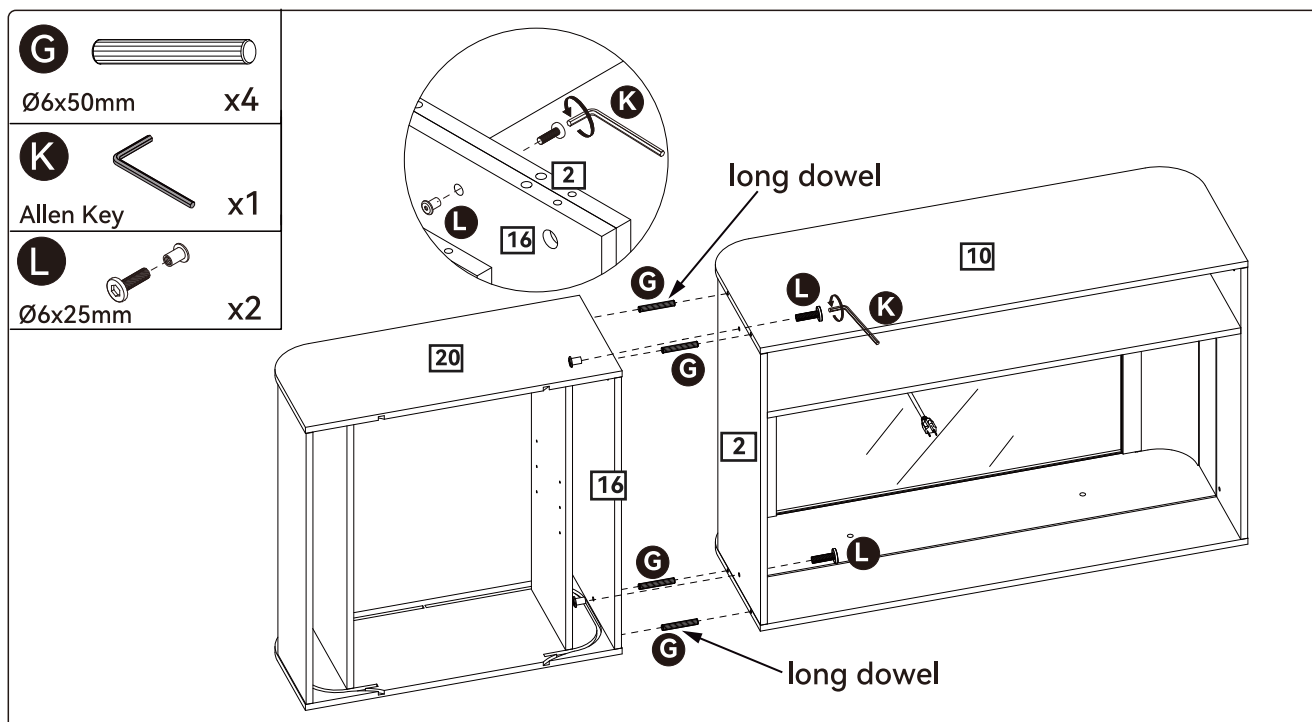

Connect panels 10 and 13 to panels 20 and 23 with long wooden dowels.
Use threaded rods and nuts L to connect panel 2 to panel 16, then tighten with wrench K.

Step 36

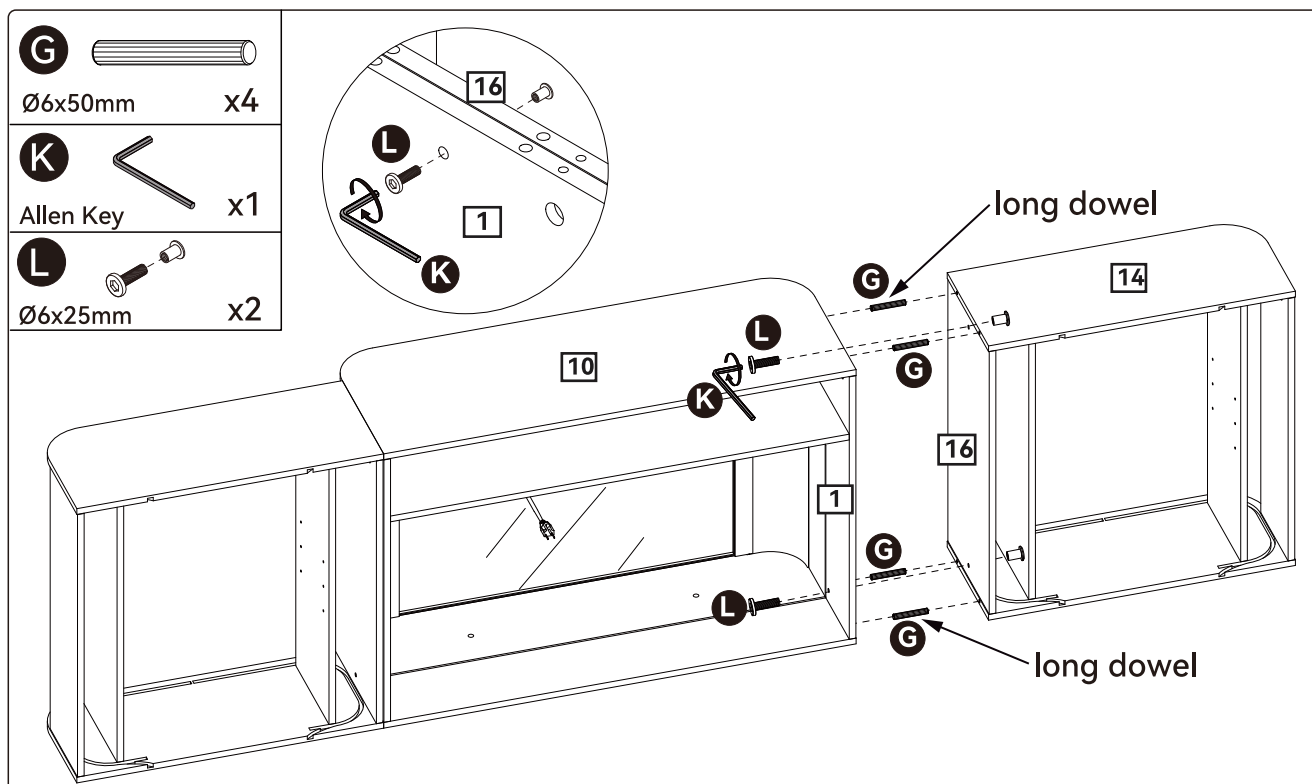

Connect panels 10 and 13 to panels 14 and 19 with long wooden dowels.
Use threaded rods and nuts L to connect panel 1 to panel 16, then tighten with wrench K.


Step 37

P


Wax



x1

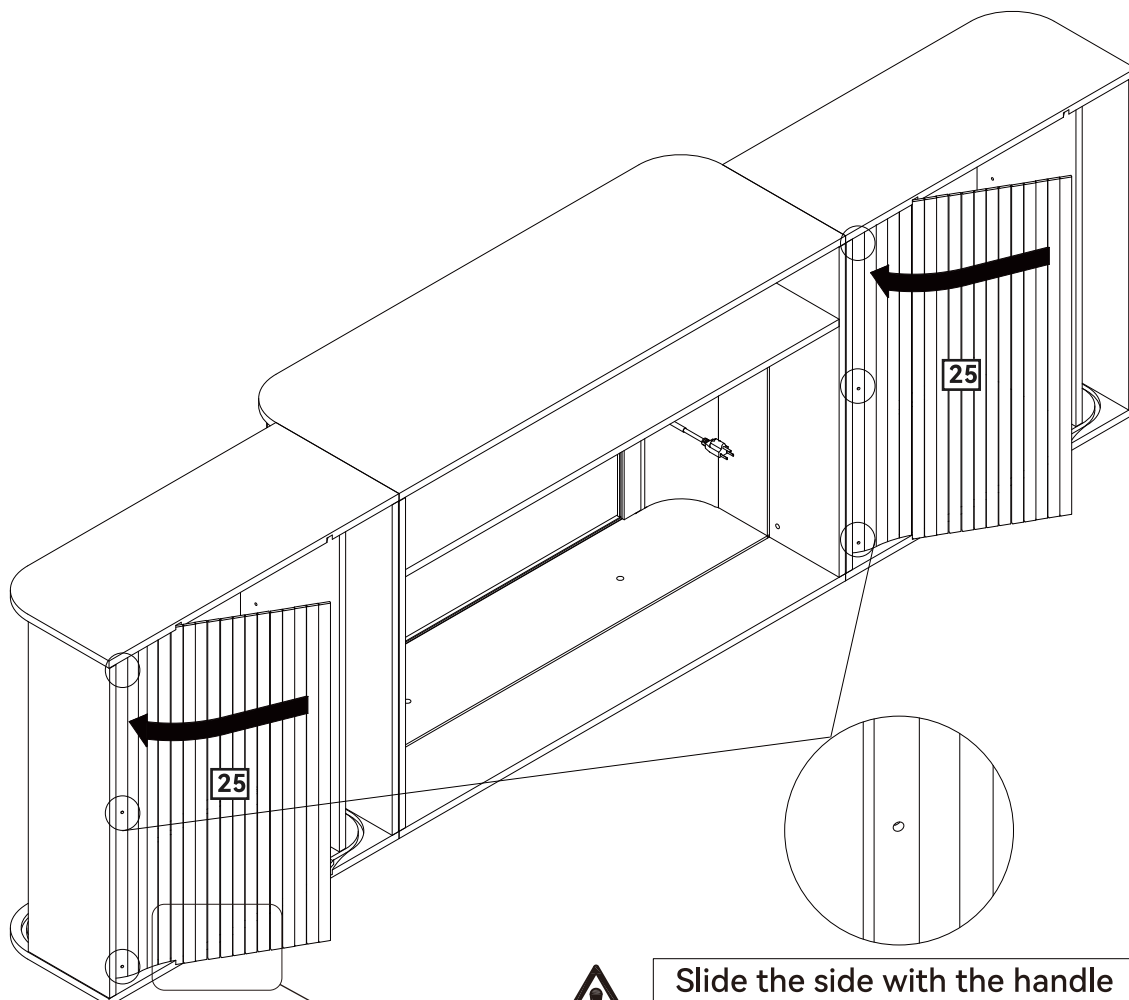

Slide the side with the handle mounting hole into the track first.

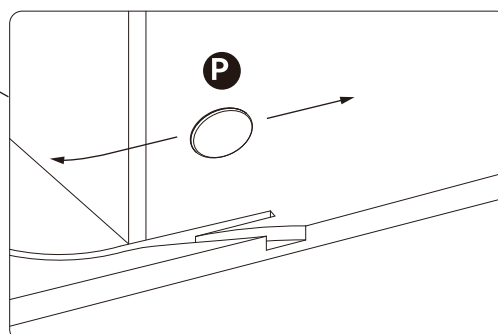

If the roller shutter is hard to push or pull, apply wax to the track.

Slide panel 25 into the groove.

Step 38


EN

P


Wax



x1

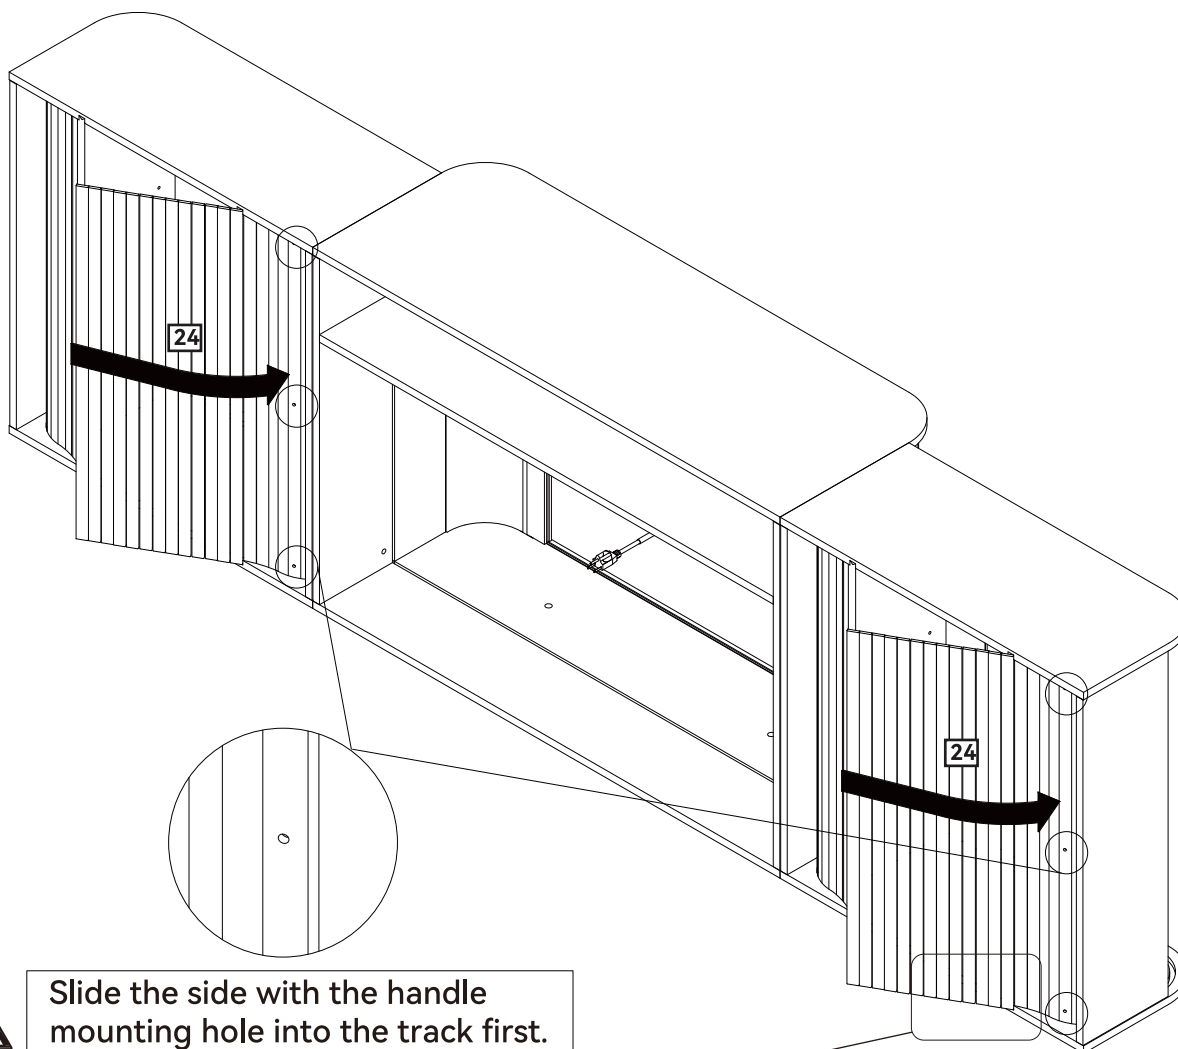

Slide the side with the handle mounting hole into the track first.

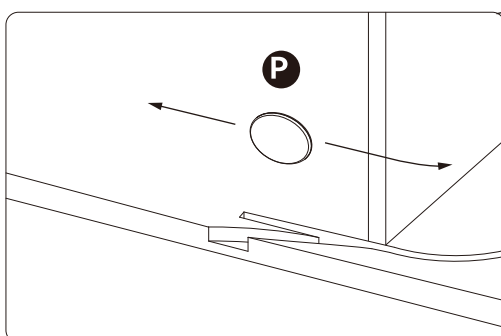


If the roller shutter is hard to push or pull, apply wax to the track.

Slide panel 24 into the groove.

Step 39

F 
Ø4x14mm x12

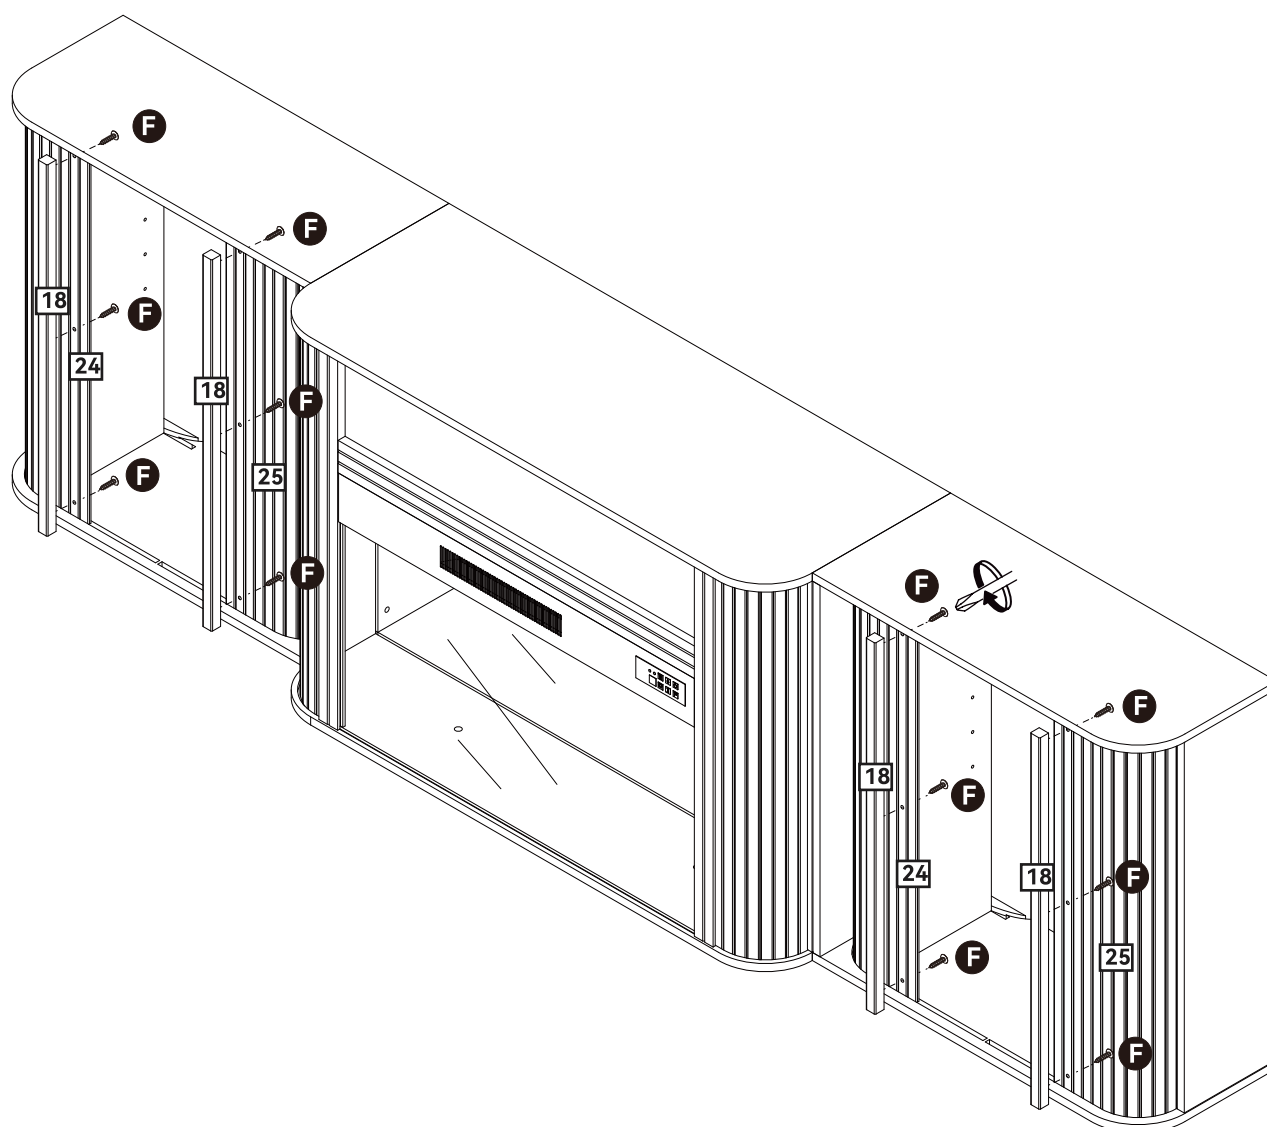


Attach panel 18 to panels 24 and 25 with screws F.

Step 40

EN

J 
 Ø2x14mm x34+8

O 
 H Bar x2

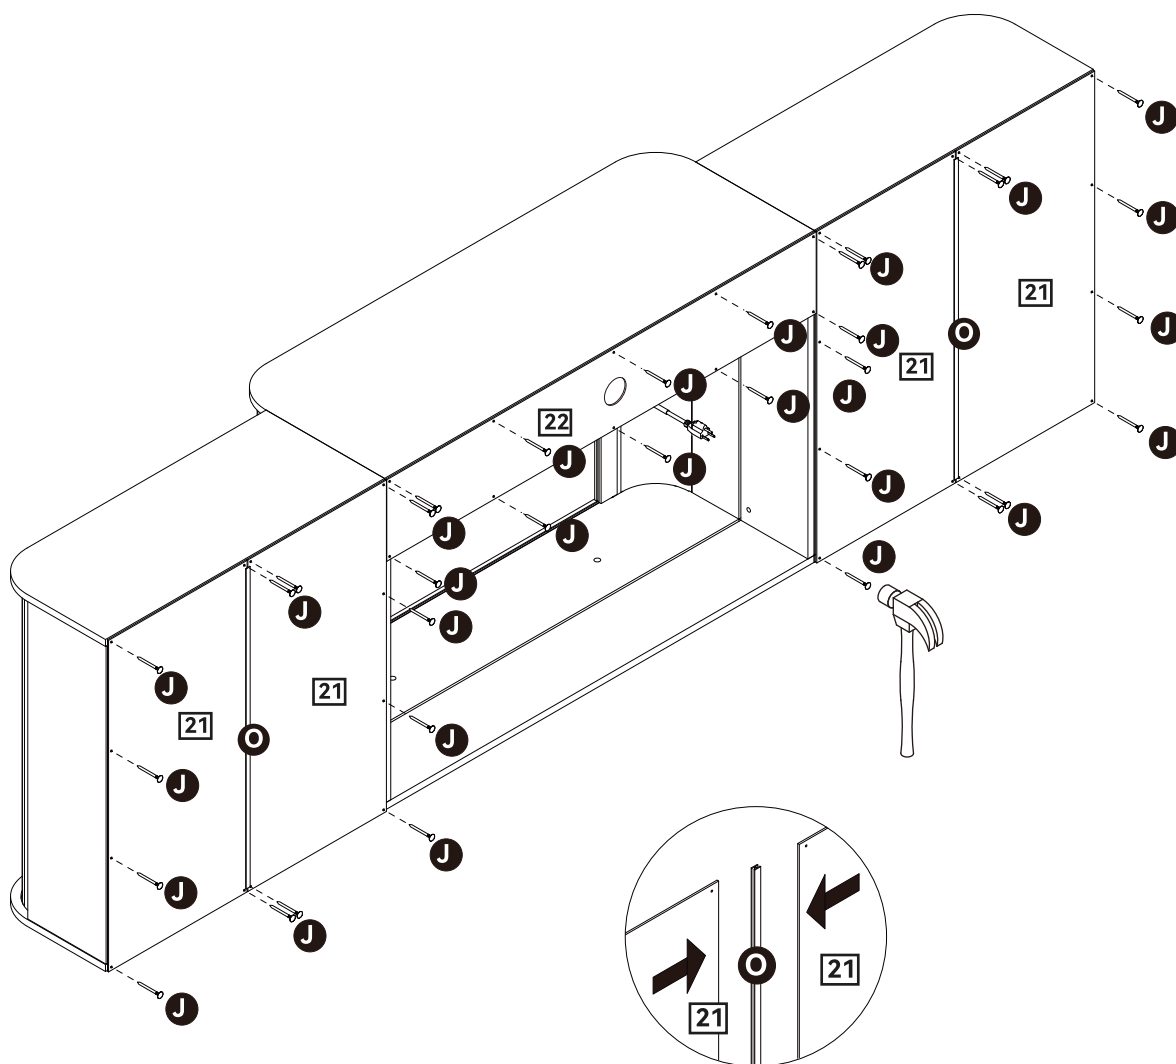


Connect panel 21 to back panel connector strip O.
 Secure panels 21 and 22 to the back of the cabinet with back panel nails J.

Step 41

D



Shelf Support Pin x8

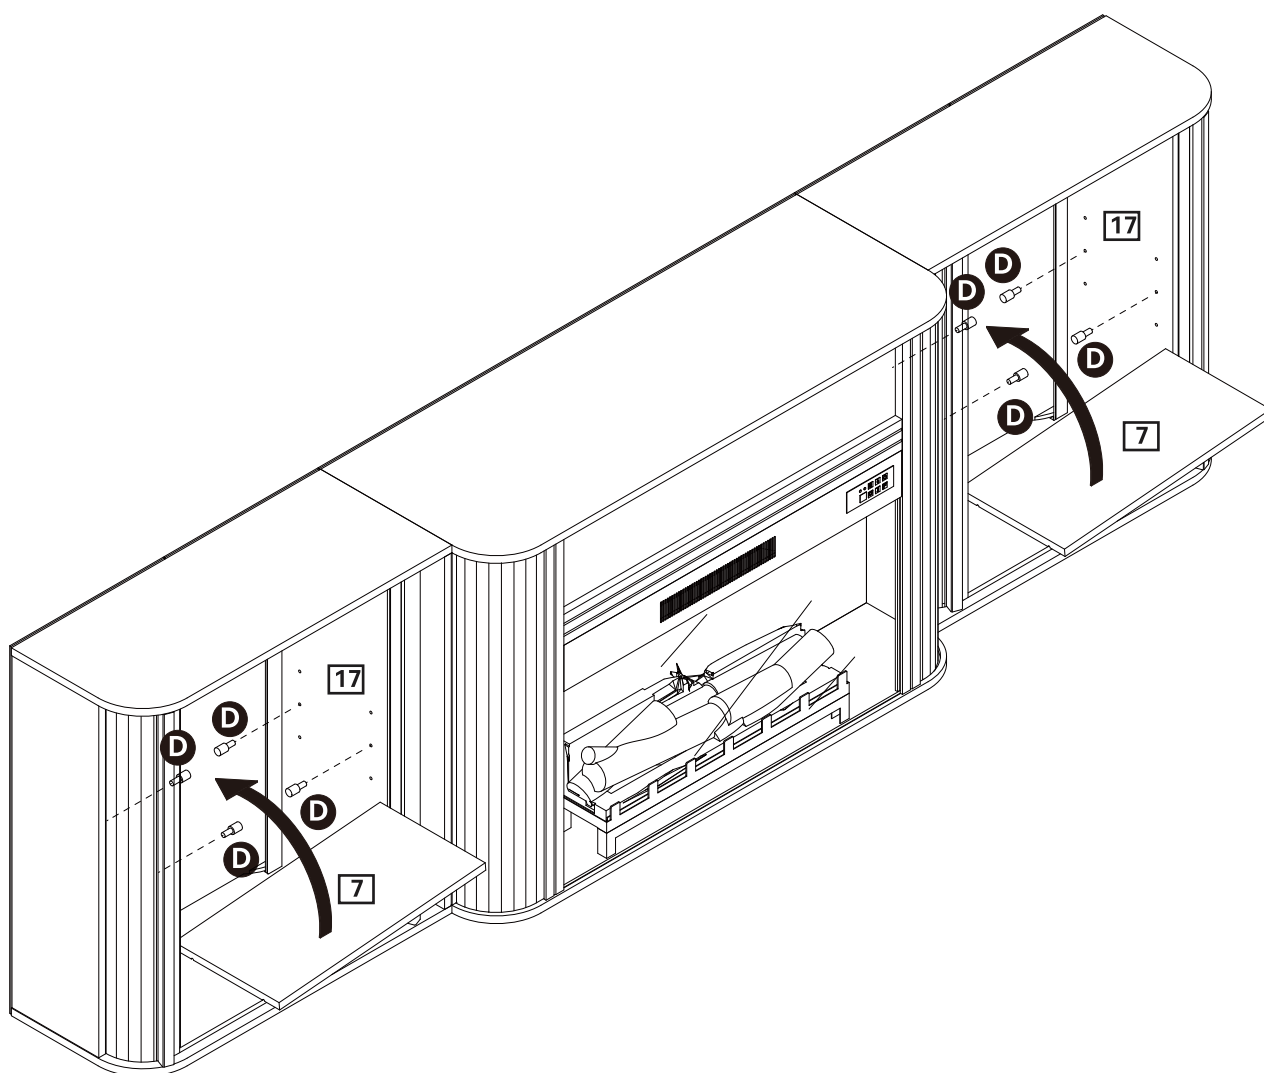

Insert shelf supports D into panel 17, then place panel 7 in position.

Step 42

EN

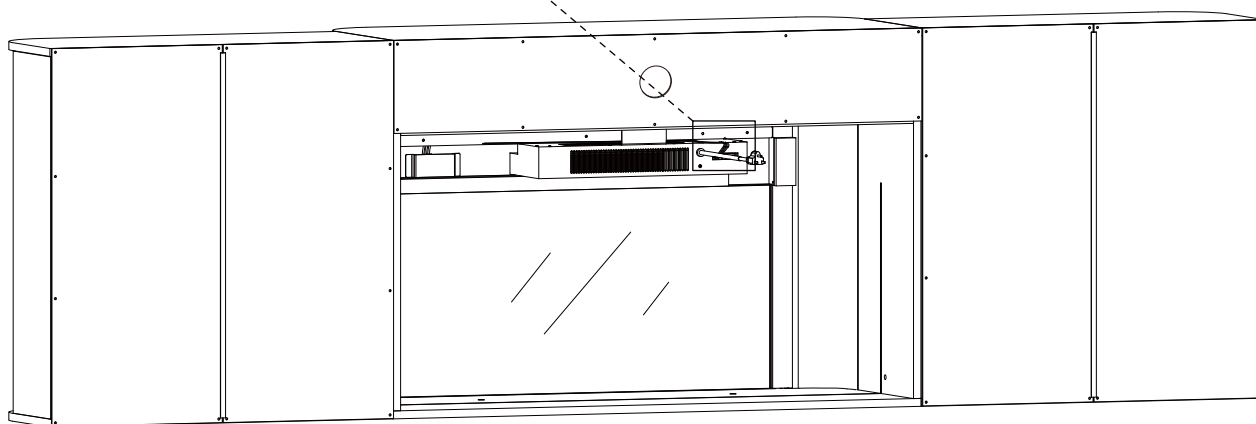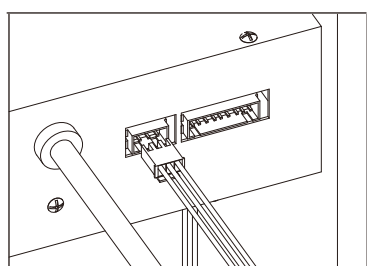


Connect the wires on the panel to the corresponding connectors on the heater.

Step 43

GG




Self-Tapping
Screws 4*8mm x7

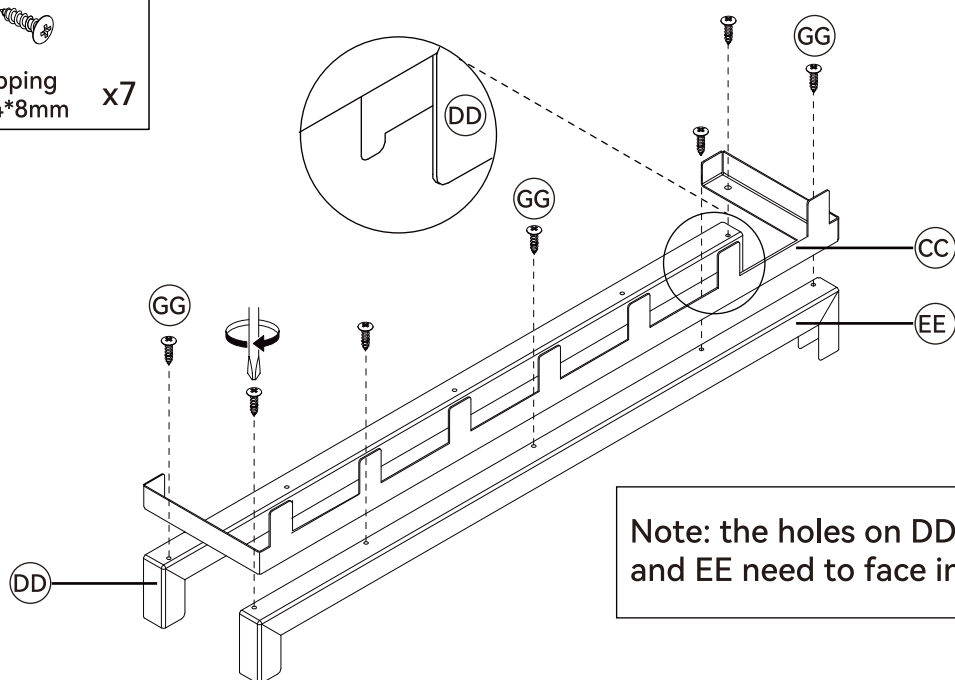

Fasten support panel CC to the front metal support legs EE and rear metal support legs DD with screws GG.


Step 44

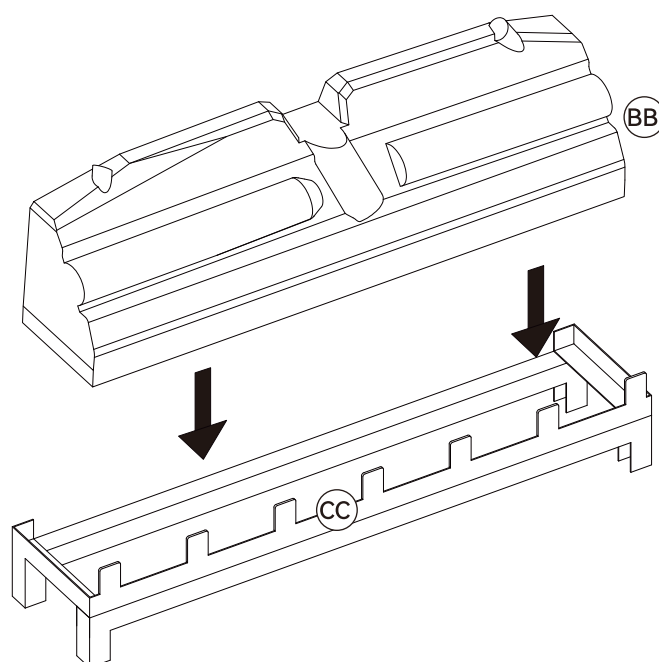

Place the faux logs on the support panel.

Step 45


EN

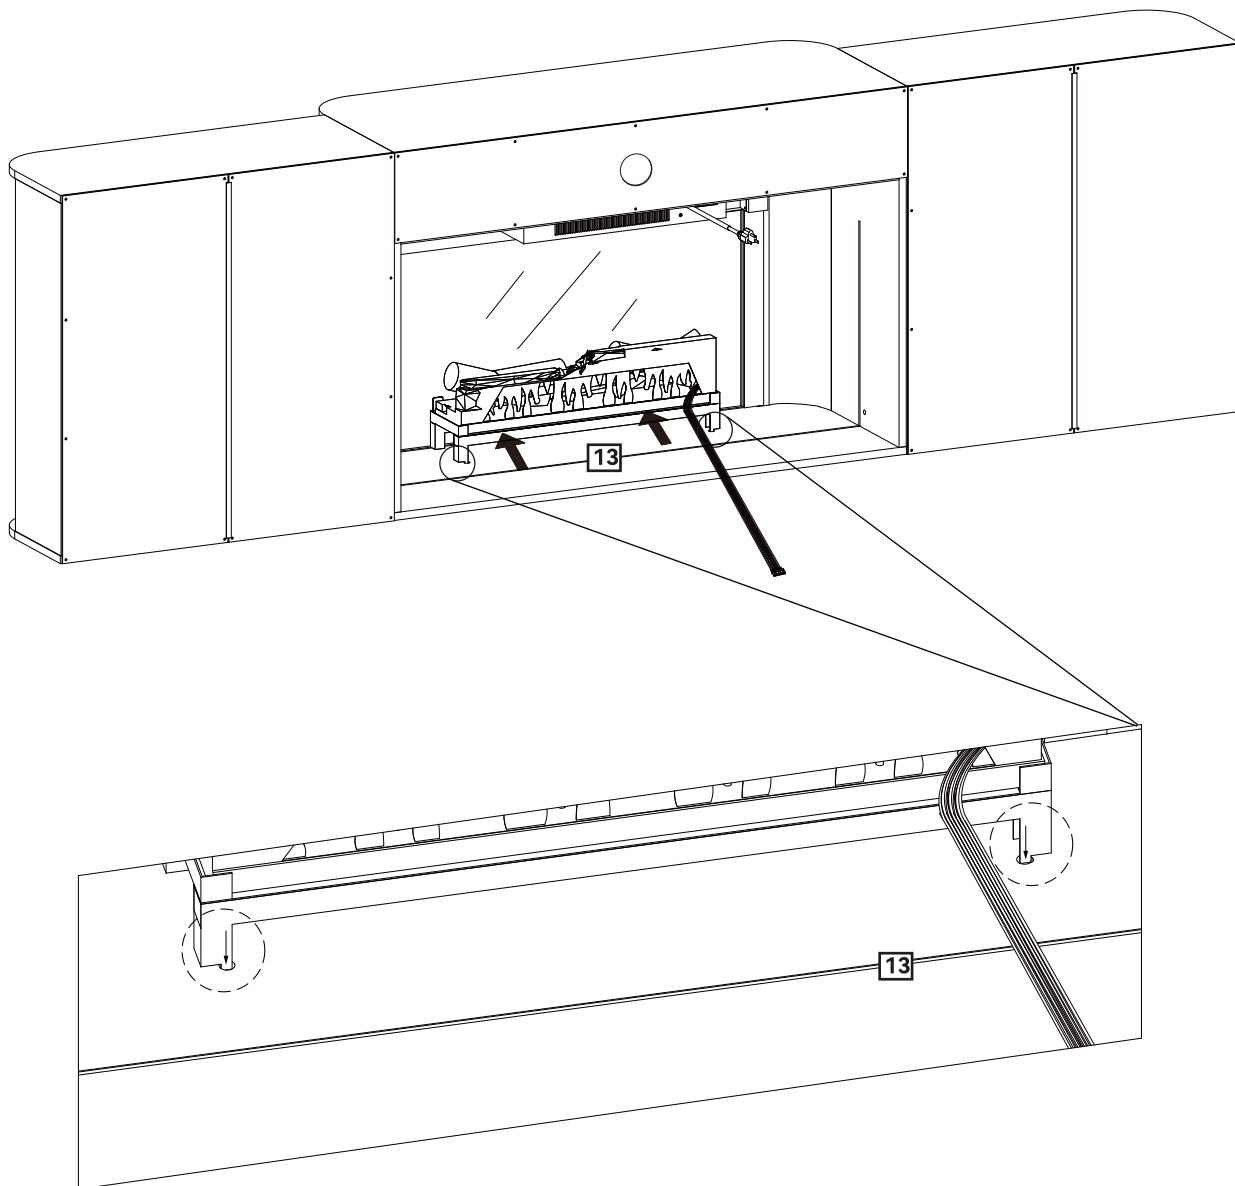

Place the assembled faux log module behind the glass, making sure it sits firmly against the glass.

Note: Insert the bottom feet of the faux log module into the holes in panel 13.


Step 46

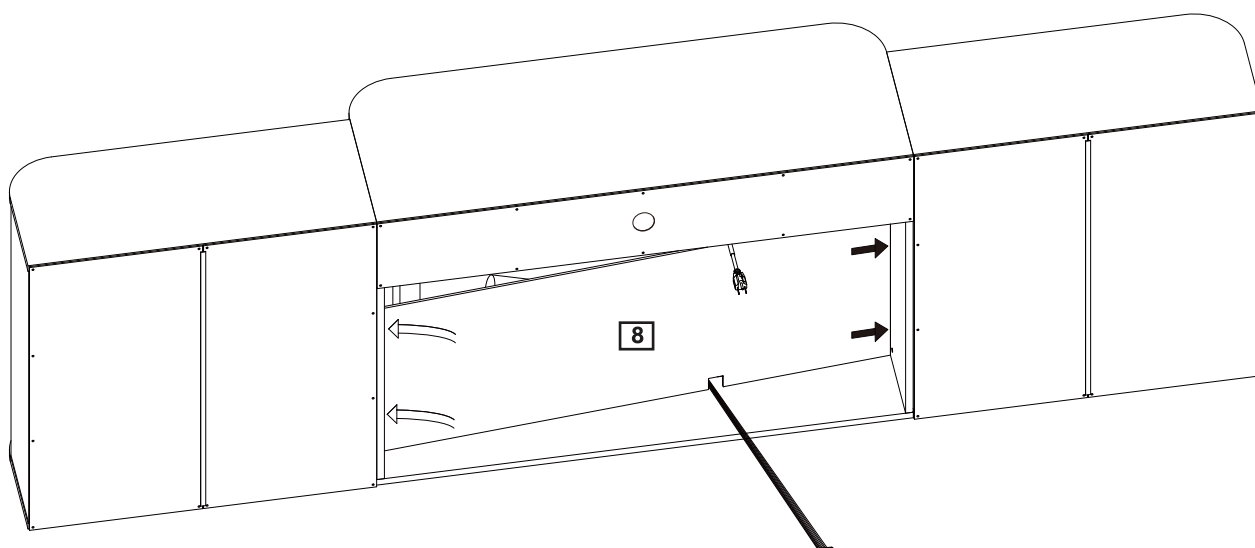


Insert panel 8 into the groove as shown.

Step 47





EN

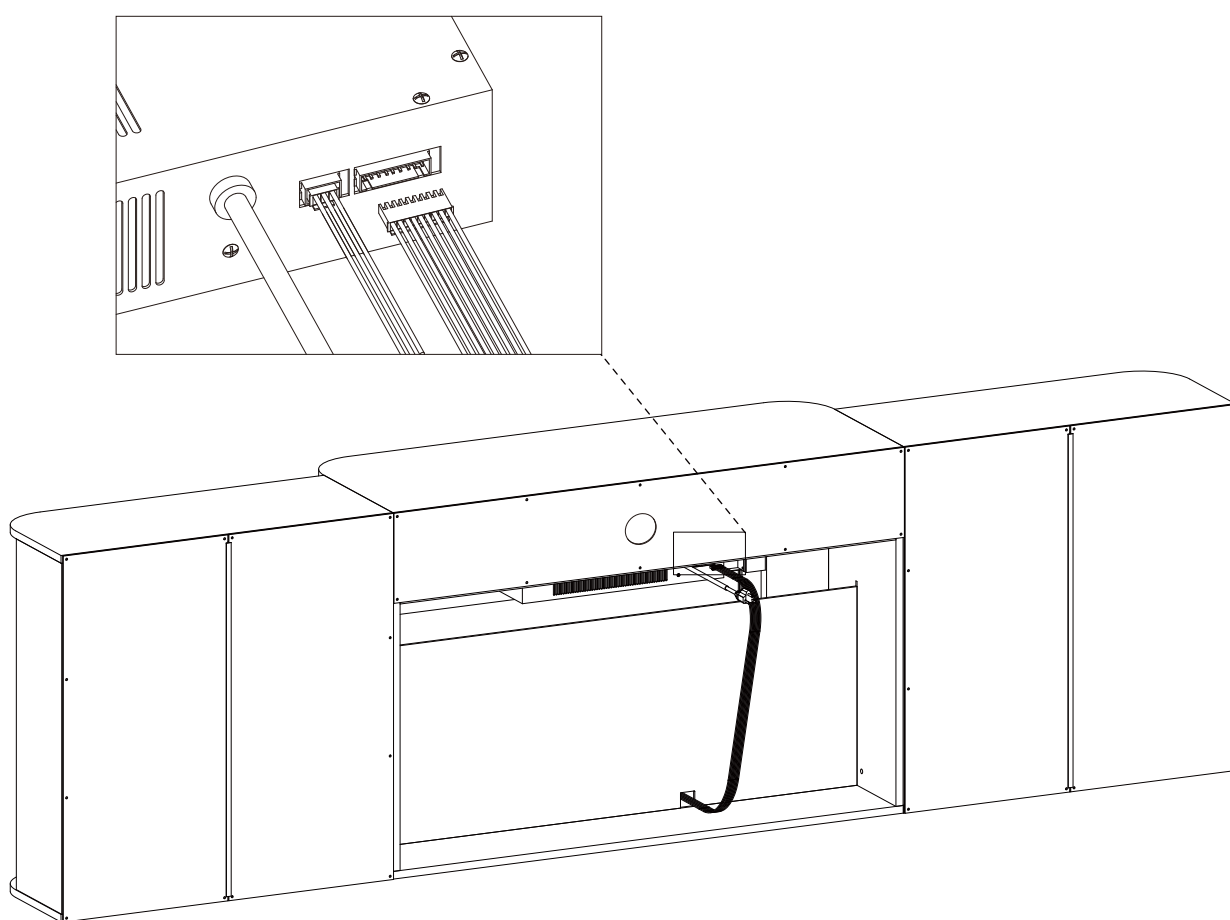

Connect the wires from the faux logs to the corresponding connectors on the heater.

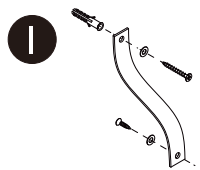Step 48


Wall Fixing Pack x2

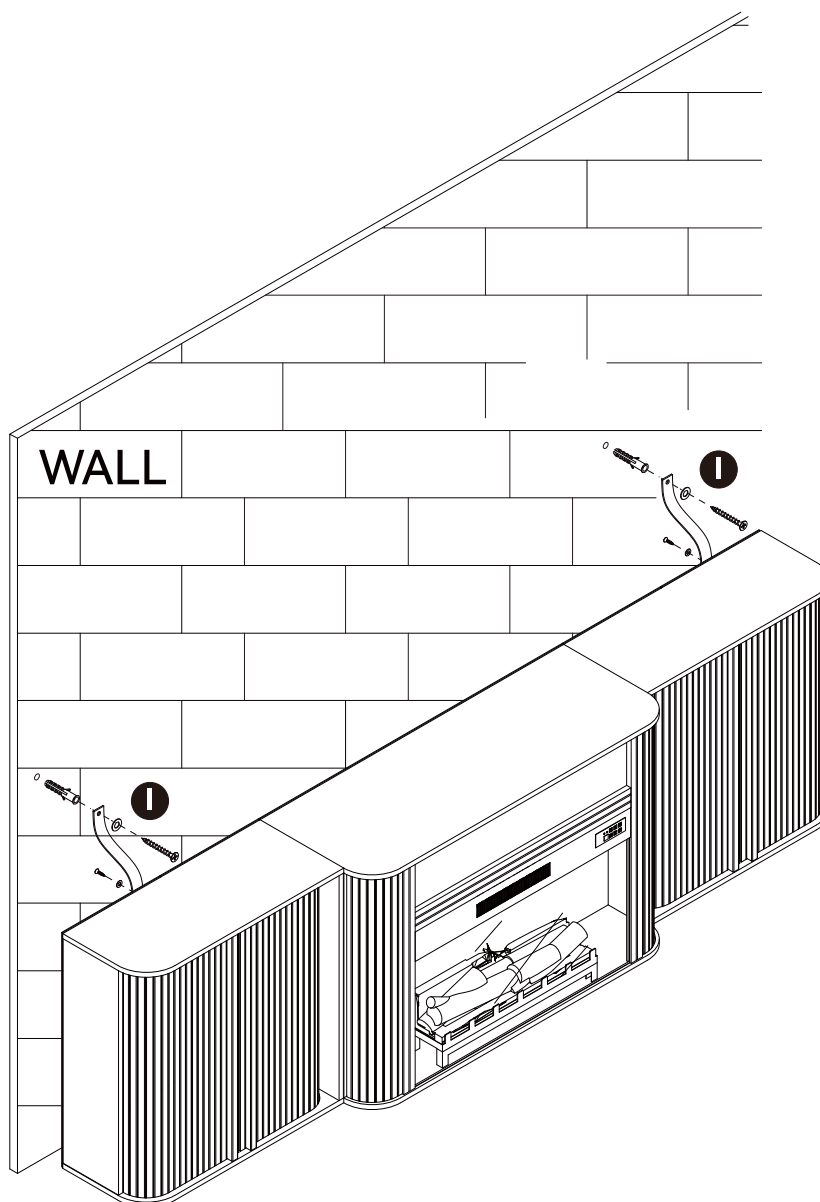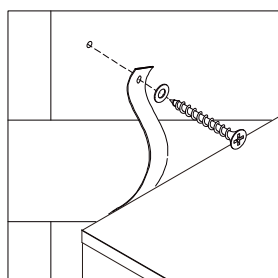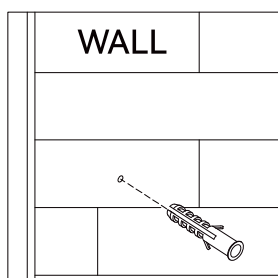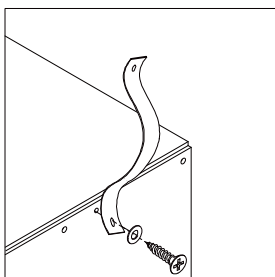

User Manual

Electric Fireplace

Model SDF-23A10K

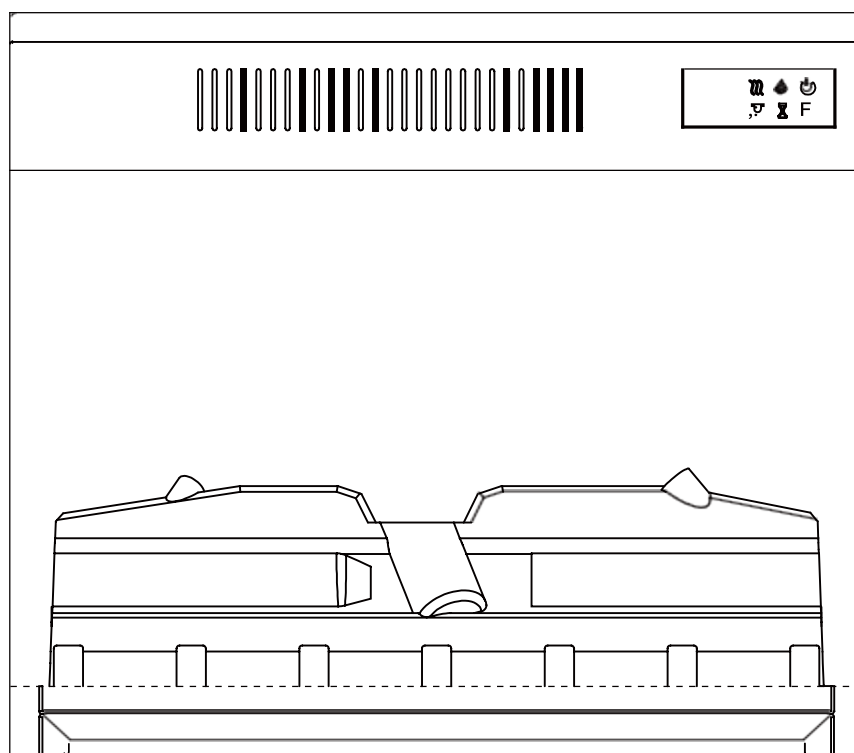

**This manual contains important safety information.
Please read it carefully and keep it for future reference.**

Safety Information



Important Safety Information

Please read all information in this operation manual, including all safety, operating, and maintenance instructions. To reduce the risk of fire, electric shock, or personal injury, follow all instructions and warnings provided in this manual.

- Read all instructions before using this heater.
- Do not use this heater outdoors.
- This heater is not intended for use in bathrooms, laundry areas, or similar indoor locations. Do not place the heater where it may fall into a bathtub or any other container filled with water.
- Do not run the power cord under carpeting. Do not cover the power cord with throw rugs, runners, or similar coverings.
- Keep the power cord away from traffic areas and places where it may pose a tripping hazard.
- To disconnect the heater, turn the controls off first, then unplug the power cord from the outlet.
- Connect the heater only to a properly grounded outlet. Always plug the heater directly into a wall outlet. Do not use an extension cord or relocatable power tap (power strip).
- To prevent a possible fire, do not block the air intake or exhaust openings of the firebox in any manner. Do not operate the fireplace on soft surfaces, such as a bed, where the openings may become blocked.
- This heater contains a thermal limiter. If the unit overheats or experiences abnormal heating, the thermal safety device will shut off power to prevent damage to the fireplace and reduce the risk of fire.
- Use this heater only as described in this manual. Any use not recommended by the manufacturer may result in fire, electric shock, or personal injury.

Save These Instructions

WARNING

There are no user-serviceable parts inside the fireplace/heater. If the unit appears to be malfunctioning, turn it off immediately, unplug it from the wall outlet, and contact customer service.

WARNING

The heater becomes hot during operation. To avoid burns, do not let bare skin come into contact with hot surfaces. Always use the handle when moving the heater. Keep combustible materials—such as furniture, pillows, bedding, papers, clothing, and curtains—at least 3 feet (0.9 m) away from the front of the heater, and keep them away from the sides and rear as well.

WARNING

Extreme caution is required whenever the heater is used by or near children, individuals with reduced mobility, or whenever the heater is operating and left unattended.

WARNING

Always unplug the heater when it is not in use.

WARNING

Do not operate the heater if the power cord or plug is damaged, or if the heater has malfunctioned, been dropped, or otherwise damaged. Have the heater inspected, adjusted, or repaired by an authorized service facility.

WARNING

Do not insert or allow any foreign objects to enter the ventilation or exhaust openings, as this may cause electric shock, fire, or damage to the heater.

WARNING

This heater contains parts that may produce high temperatures, arcs, or sparks. Do not use it in areas where gasoline, paint, or other flammable liquids are used or stored.

WARNING

The top center area of the fireplace may become hot during heater operation and can cause serious injury or burns. Always supervise young children around the fireplace/heater. Do not place any fabric, decorations, or other items above the heater outlet of the fireplace, and do not block the heater outlet in any way, as this may cause a fire and result in serious injury.


SAFETY INFORMATION

GROUNDING INSTRUCTIONS



Improper connection of the equipment-grounding conductor may result in a risk of electric shock. If you are unsure whether the product is properly grounded, consult a qualified electrician or service technician. Do not modify the plug provided with the product. If the plug does not fit the outlet, have a qualified electrician install the proper outlet.

- This product must be grounded. In the event of a malfunction, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a power cord containing an equipment-grounding conductor and a grounding plug. The plug must be connected to an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
- This heater is intended for use on a 120-volt circuit and is equipped with a grounding plug. An adapter for connecting a three-prong grounding plug to a two-slot outlet can be purchased from local electronics retailers or online suppliers. The green grounding tab or wire extending from the adapter must be connected to a permanent ground, such as a properly grounded outlet box.
- **If a properly grounded three-slot outlet is available, the adapter should not be used.**

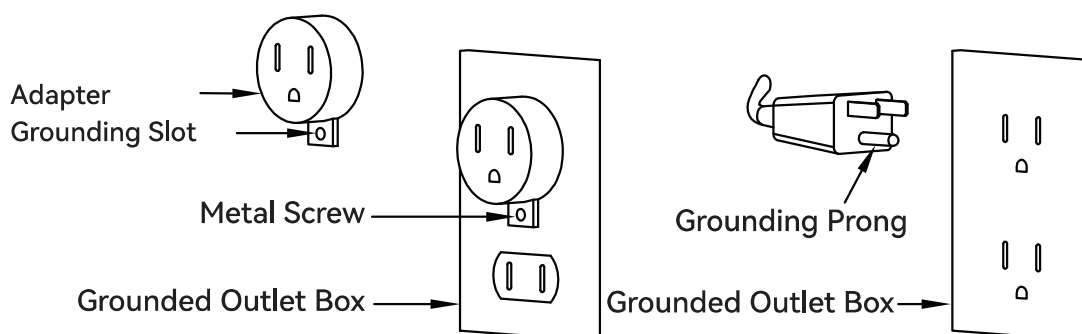

TECHNICAL SPECIFICATION

Power Rating	1400W
Voltage	120V
Frequency	60Hz


Operation Instructions



Identifying The Control Panel


The control panel is located at the top right corner of the fireplace or heater. The control panel includes the following buttons and indicators: Power On/Off Button (①), Flame Control (②), Heater Control (③), Brightness Adjustment (④), Timer Function (⑤), Temperature Setting (⑥), Display Area (⑦), Indicator Light (⑧)

The Display Area (⑦) shows the heating level, flame level, brightness level, timer settings, and temperature. The Indicator Light (⑧): The red light stays on when the power is connected, indicating the unit is powered on. The blue light remains on when the unit is operating. The Temperature Setting (⑥): Press and hold to switch between Celsius and Fahrenheit.

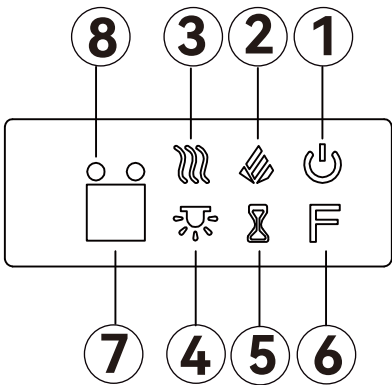

Using the Power On/Off Function

Press the Power On/Off button (①). The indicator light will turn blue, indicating the fireplace is on. Press the button again, and the indicator light will turn red, indicating the fireplace is off.

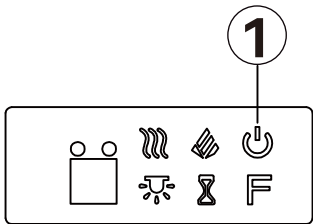


Using the Flame Control Function

Press the Flame Control button (②) to manually adjust the flame color. The available flame color settings are:

Gradient, Mixed Color, Orange, Green, Blue, Orange + Green, Orange + Blue, Green + Blue

Button Press Count	Display Area Values	Flame Color
1	C1	Gradient
2	C2	Mixed Color
3	C3	Orange
4	C4	Green
5	C5	Blue
6	C6	Orange+Green
7	C7	Orange + Blue
8	C8	Green+Blue

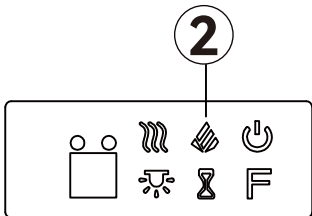


Operation Instructions



Using the Heating Function

After powering on, the heater will default to its set temperature, which is 62°F. The heater will only start operating if the room temperature is below 62°F. If the heating function (③) is manually turned on, the heater will no longer recognize the set temperature and will continue to operate until manually turned off.

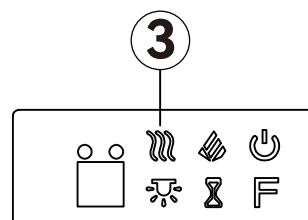


Using the Brightness Adjustment Function

The brightness adjustment function cannot be used when the flame setting is on C1.

Press the Brightness Adjustment button (④) to adjust the flame brightness. The default flame brightness is set to L5.


Button Press Count	Display Area Values	Flame Brightness
1	L5	100%
2	L4	80%
3	L3	60%
4	L2	40%
5	L1	20%

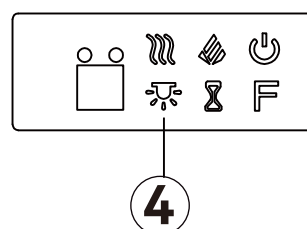

Using the Timer function

Press the Timer button (⑤) to set the fireplace's runtime. The minimum time is 1 hour, and the maximum is 8 hours. Once the set time is reached, both the heater and the flame will stop, and the fireplace will turn off. If the heater is not on, the flame will stop, and the fireplace will turn off once the set time is reached.


Button Press Count	Display Area Values
1	0H
2	1H
3	2H
4	3H
5	4H
6	5H
7	6H
8	7H
9	8H

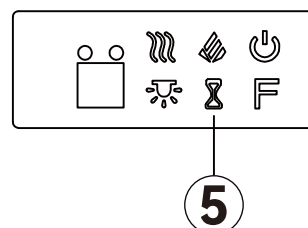

Using the Temperature Setting Function


Press the Temperature Setting button (⑥) to set the temperature in Fahrenheit. Press and hold the button to switch to Celsius.

Button Press Count	Fahrenheit Temperature	Button Press Count	Fahrenheit Temperature
1	62	1	18
2	64	2	19
3	66	3	20
4	68	4	21
5	70	5	22
6	72	6	23
7	74	7	24
8	76	8	25
9	78	9	26
10	80	10	27
11	82	11	28

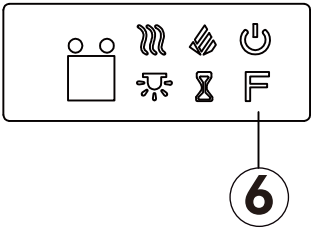

Using the Remote Control

The functions on the remote control are the same as those on the control panel

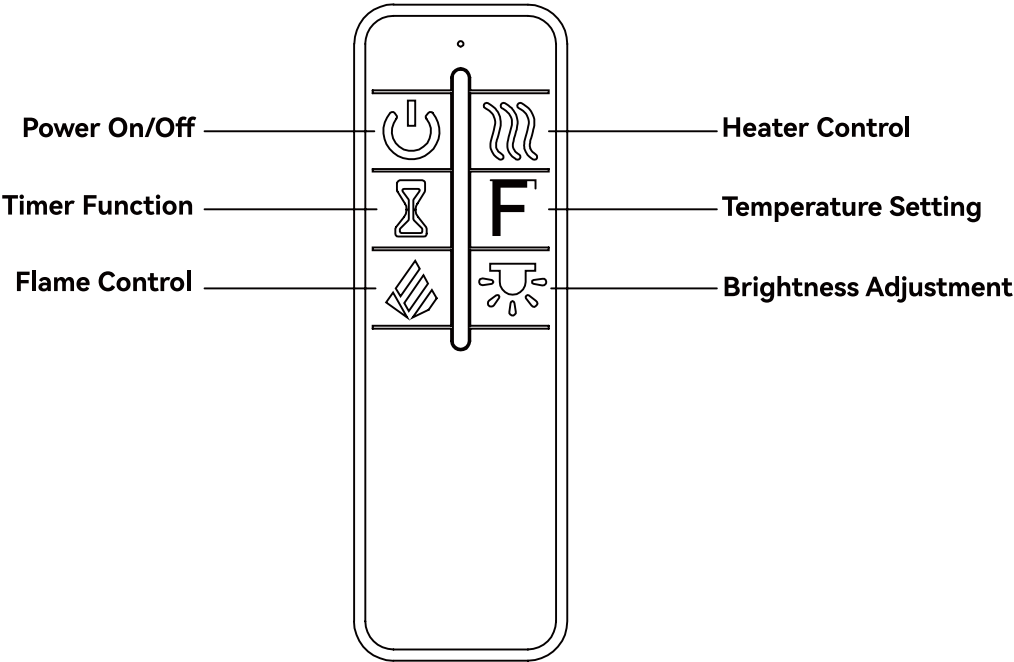


Battery Replacement



The battery compartment is located at the back of the remote control.

1. Press and slide the battery cover to open it.
2. Insert two 1.5V (AAA) batteries, ensuring they are installed correctly with the proper polarity (+ and -) as indicated inside the battery compartment.

Note: If the product is not going to be used for an extended period, remove the batteries.

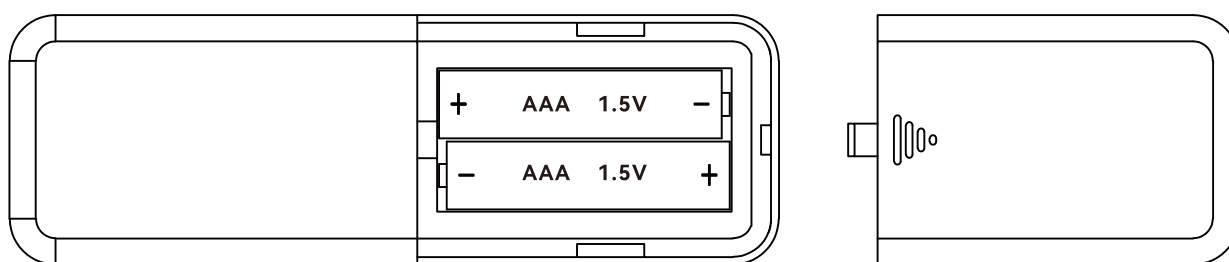

Do not mix new and old batteries.

Do not use rechargeable silver oxide batteries with the remote control.

Batteries

Improper handling of batteries may result in leakage or explosion.

Important Safety Instructions

When using this appliance, basic precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including:

- This heater is intended for use with AC power only, and the voltage marked on the heater must match the power supply voltage.
- Do not turn on the device until it has been properly installed according to the instructions in this manual.
- Do not leave the device unattended while in use.
- Do not leave the device unattended when it is connected to the power supply.
- Place the device out of reach of children, and do not allow children to operate it.
- Periodically check the power cord for damage. If the cord is damaged in any way, do not use the device.
- Do not operate the device if the plug or power cord is damaged, or if the device is malfunctioning.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try one or more of the following measures to correct the interference:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Repairs to the appliance should only be performed by a qualified electrician. Improper repairs may expose the user to serious danger.

- Do not run the power cord under carpets or rugs.
- Do not allow the power cord to hang over sharp edges or come into contact with hot surfaces.
- Warning: To prevent overheating, do not cover or block the heater's air vents. Accidental covering may cause overheating.
- Never immerse this product in water or any other liquids.

Replacing the LED Bulbs

Note: The flame effect of this electric fireplace is produced by LED bulbs.

These LED bulbs are designed to last up to 100,000 hours. It is not recommended that users replace the LED bulbs themselves. If the bulbs do not function properly for any reason, please contact a qualified technician.

Cleaning:

- Before performing any cleaning or maintenance, turn off the heater and plug it from the power outlet. Wait at least 10 minutes for all parts to cool down properly.
- Use a vacuum cleaner or dusting tool to keep the heater and ventilation areas clean, preventing dust and dirt buildup.
- Clean the exterior of the fireplace with a damp cloth or wipe. Do not use abrasive cleaners or liquid sprays.

Warning: To prevent electric shock, do not open the back panel of the fireplace unless the power is turned off and the plug is unplugged. Only qualified technicians should perform repairs.

Warning: Any repair work on wiring should only be done by professional technicians and must comply with local building codes.

Warning: Stop using this electric fireplace immediately if any of the following occur: any part of the unit comes into contact with water, the fireplace is damaged or dented, the power cord is damaged or frayed, the power cord becomes hot to the touch, or the device emits smoke or smells like smoke.

Note: When using the heating function for the first time, a slight odor may occur. This is normal unless the heater has not been used for an extended period and has dust or debris covering it.


● **This appliance is equipped with a safety cutoff device that will activate if the fireplace overheats (e.g., due to a blocked vent). For safety reasons, the fireplace will not automatically restart. You must wait at least 15 minutes before unplugging and plugging the power cord back in.**

Meaning of the Strikethrough Wheelie Bin:

Do not dispose of the appliance as unsorted waste; it must be disposed of using separate collection facilities. Contact your local government for information regarding the collection system.

If the appliance is discarded in a landfill or waste site, harmful substances can seep into the groundwater, enter the food chain, and harm your health and well-being.

When replacing old appliances with new ones, retailers are legally obligated to take back your old appliance for disposal, at least free of charge.

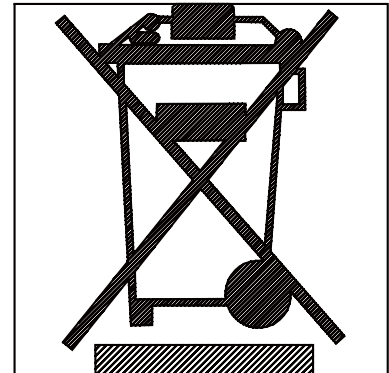

Troubleshooting



EN

Problem	Solution
Device Won't Start	Check if the outlet is supplying power and ensure the plug is fully inserted into a 120V outlet.
Heater Not Working	Check the set temperature and ensure it is higher than the room temperature.
No Flame Effect	Contact a qualified technician for inspection.
Remote Control Not Working	Use the remote control close to the device or replace the batteries.

|TV Stand

SKU:

K100000901

K100000912

K100000931

K100000942

V1.0