 


Children's Wooden Playhouse

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

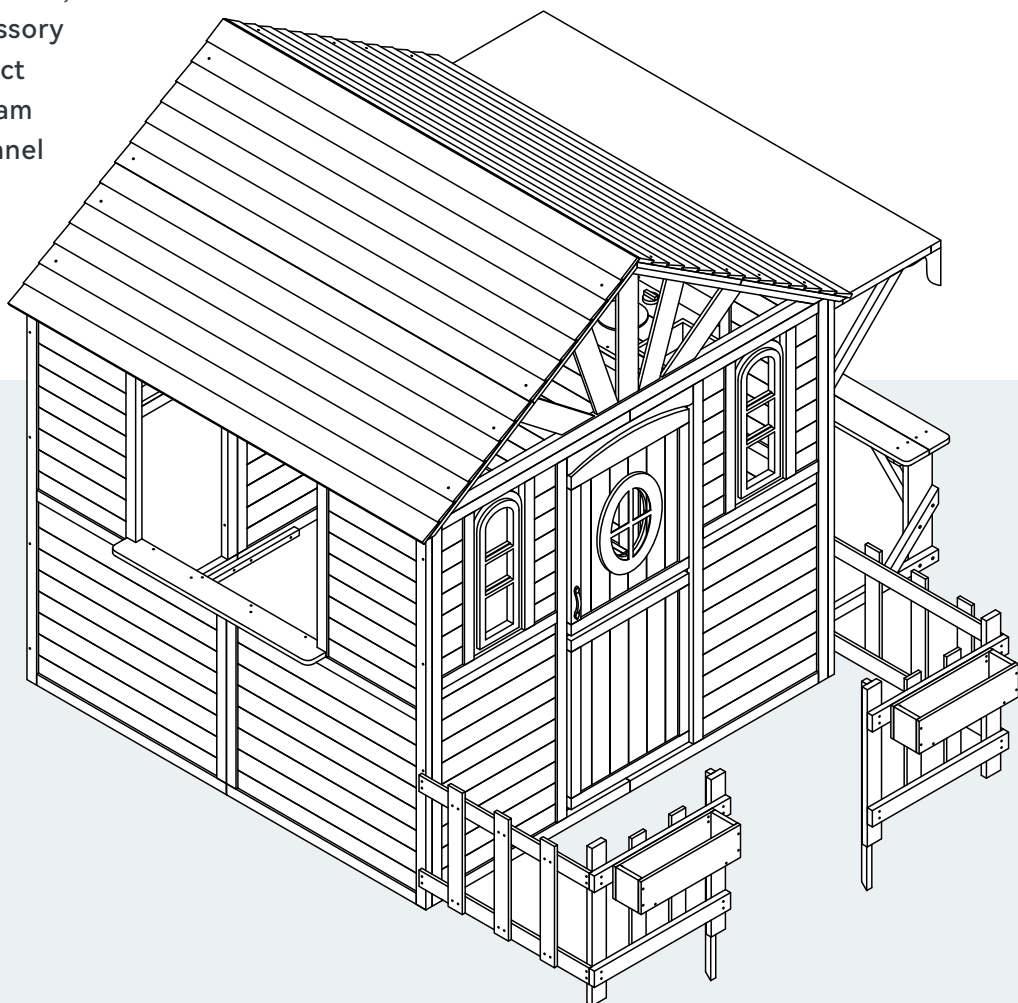

CONTACT US

6.7X6.6 FT

- **Email:** service@grandtunnel.com

In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

EN

Important – Please read these instructions carefully before starting the installation.

CUSTOMER SERVICE GUIDE

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “**Parts List**” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6X30mm screws.”

Contact Us:

· By Email:

Send an email to **service@grandtunnel.com**, with the subject line “Missing Parts Issue.” Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multiangle shots are recommended).
2. Email the photos/videos along with order details to **service@grandtunnel.com**, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: **service@grandtunnel.com**).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

- Customer Service Email: **service@grandtunnel.com**

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
Helpful Tips

To process your issue efficiently, please prepare the following information:
















- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

Thank you for your trust and support! We hope you enjoy using our product!












Parts List

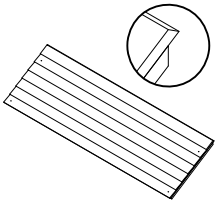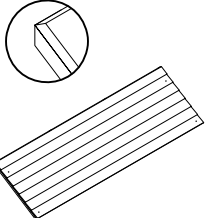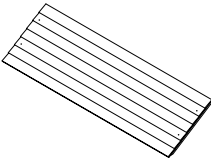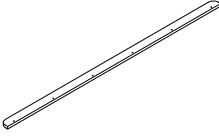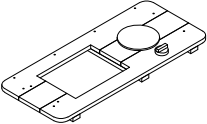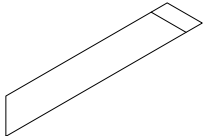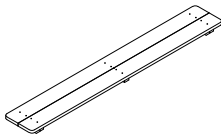1	2	3	4	5	7
					
1165X698MM	1165X698MM	1165X703MM	1165X703MM	1165X698MM	1165X703MM
X1	X1	X1	X1	X1	X1
8	10	11	12	13	14
					
1165X703MM	1460X459MM	1460X447MM	1460X454MM	1325X45MM	515X415MM
X1	X1	X1	X2	X1	X1
15	16	17	18	19	20
					
515X415MM	700X85MM	640X270MM	324X248MM	332X34MM	332X34MM
X1	X1	X1	X2	X2	X2
21	22	23	24	25	26
					
1406X34MM	1406X34MM	300X34MM	1100X160MM	350X85MM	270X34MM
X1	X1	X4	X1	X2	X2

               
Parts List

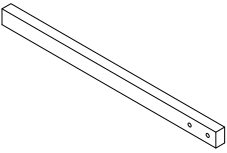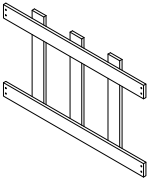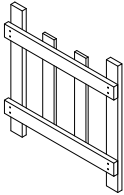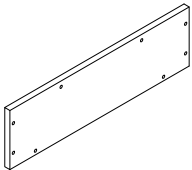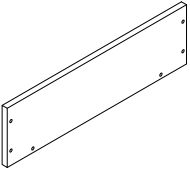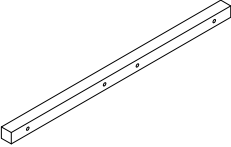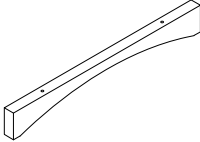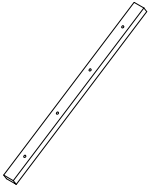27	28	29	30	31	32
					
530X34MM	337X34MM	660X370MM	480X480MM	480X480MM	350X100MM
X2	X1	X2	X1	X1	X2
33	34	35	36	37	38
					
350X100MM	400X18MM	100X80MM	445X55MM	322X80MM	400X25MM
X2	X6	X4	X1	X2	X4
39	40	41	42	43	
					
200X70MM	638X22MM	630X18MM	1165X698MM	1440X465MM	
X1	X1	X2	X1	X2	

          
Parts List

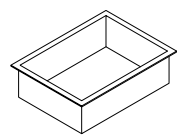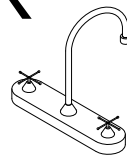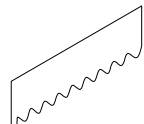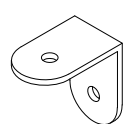A	B	C	D	E	F
					
3.5*60	3.5*40	3.5*35	3.5*30	3*28	3*18
X22+2	X34+2	X46+2	X62+3	X28+2	X56+2
G	H	I	J	K	L
					
Ø6*30	3*15	Ø6*20			
X12+1	X4+1	X10+1	X1	X1	X3
M	N	O	P	Q	R
					
X1	X2	X1	X2	X1	X1
S	T				
					
X4	X2				

 
1




1 X1

 

2 X1

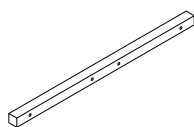 


34 X1

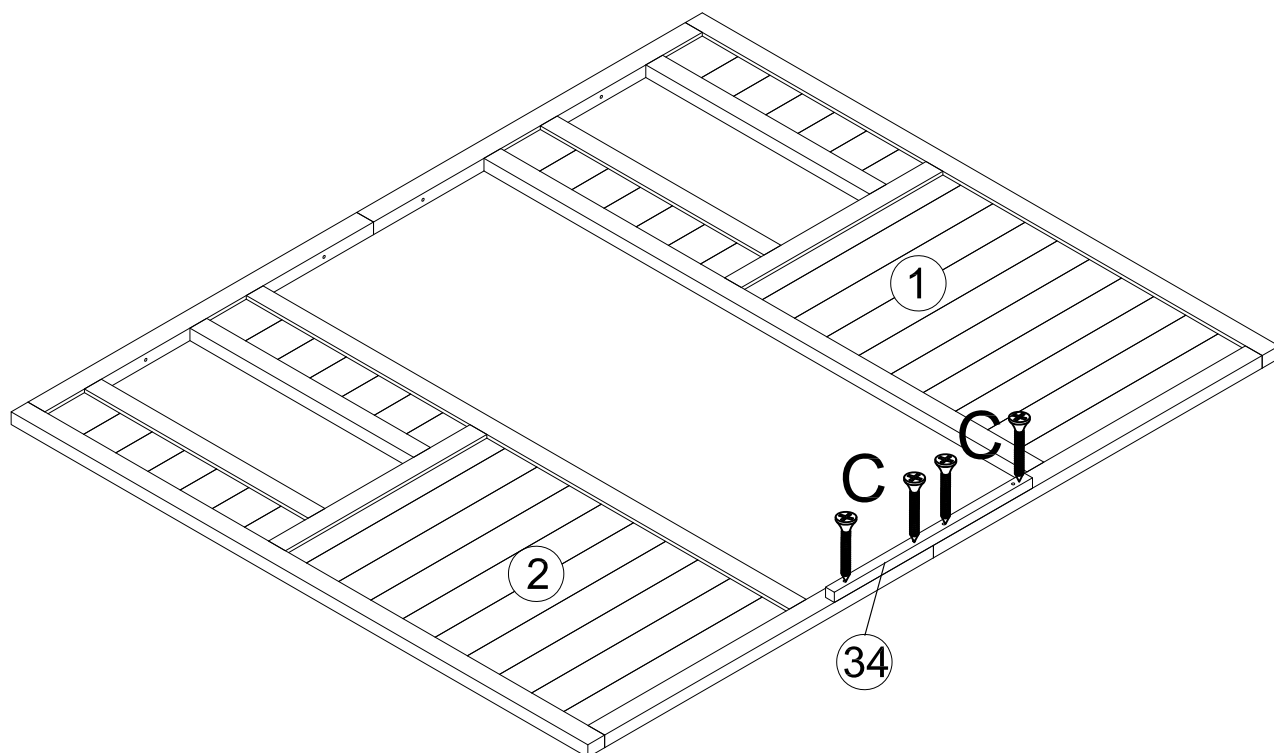 


Attach Part (34) to Parts (2) and (1) using Screws (C).

 CX4




3.5*35

 2




43 X1

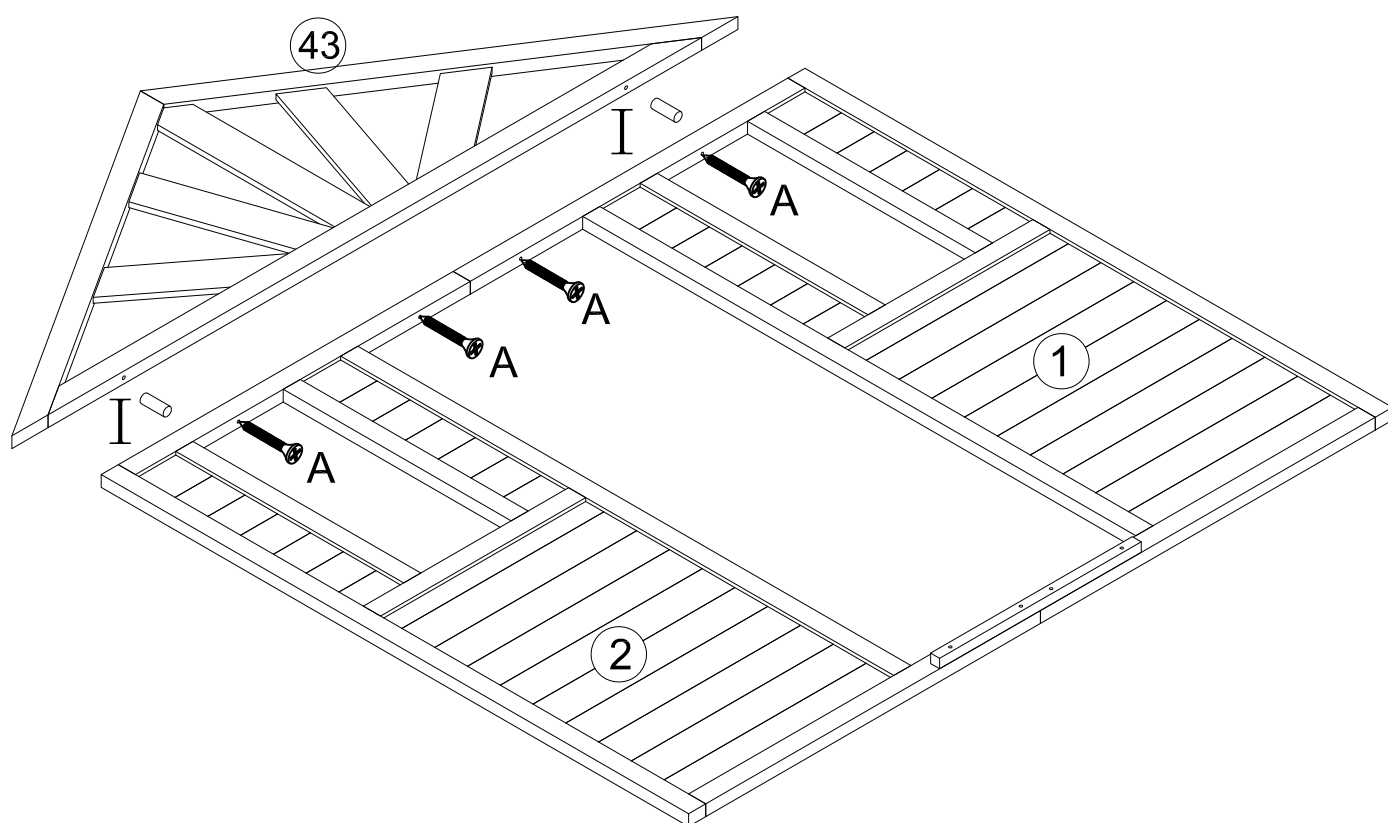 

Use Wooden Dowels (I) to join Part (2), Part (1), and Part (43) together, then secure them with Screws (A).

 AX4




3.5*60

IX2



Ø6*20

 3

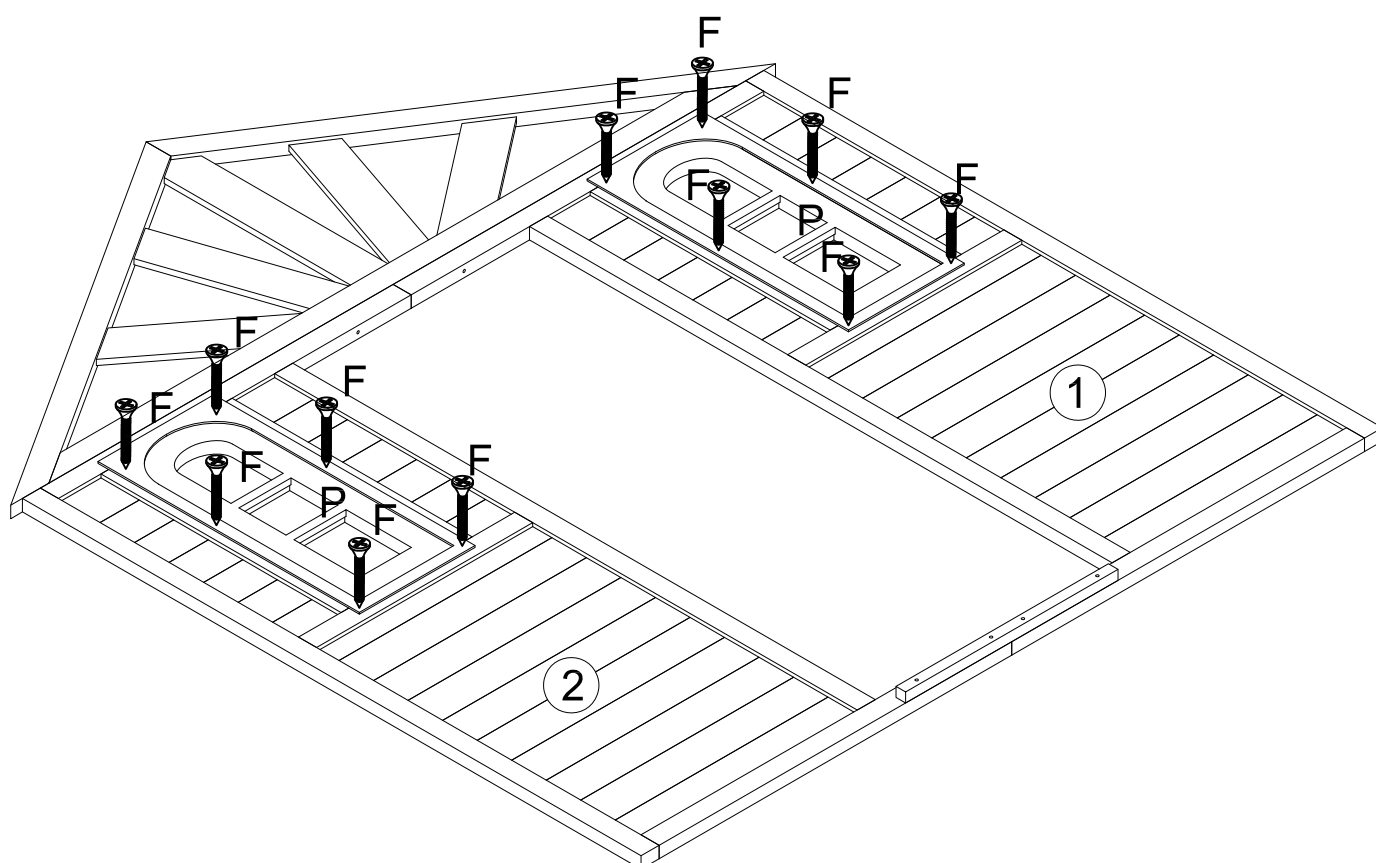


Secure Accessory (P) to Parts (2) and (1) using Screws (F).

FX12




 PX2




3*18

 4

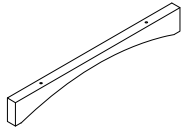

36 X1

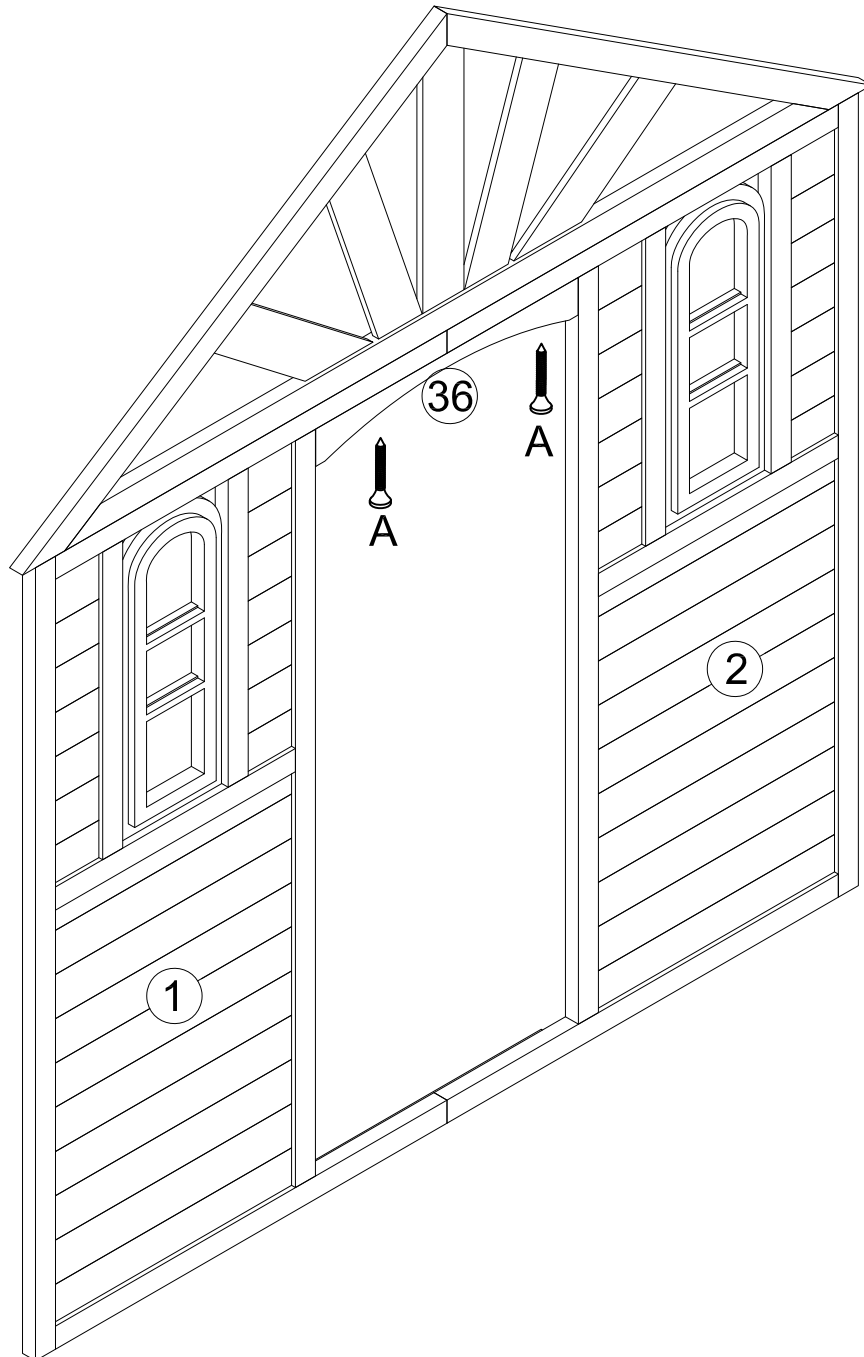 


Secure Part (36) to Parts (1) and (2) using Screws (A).

AX2




3.5*60

 
5



3 X1

 

4 X1

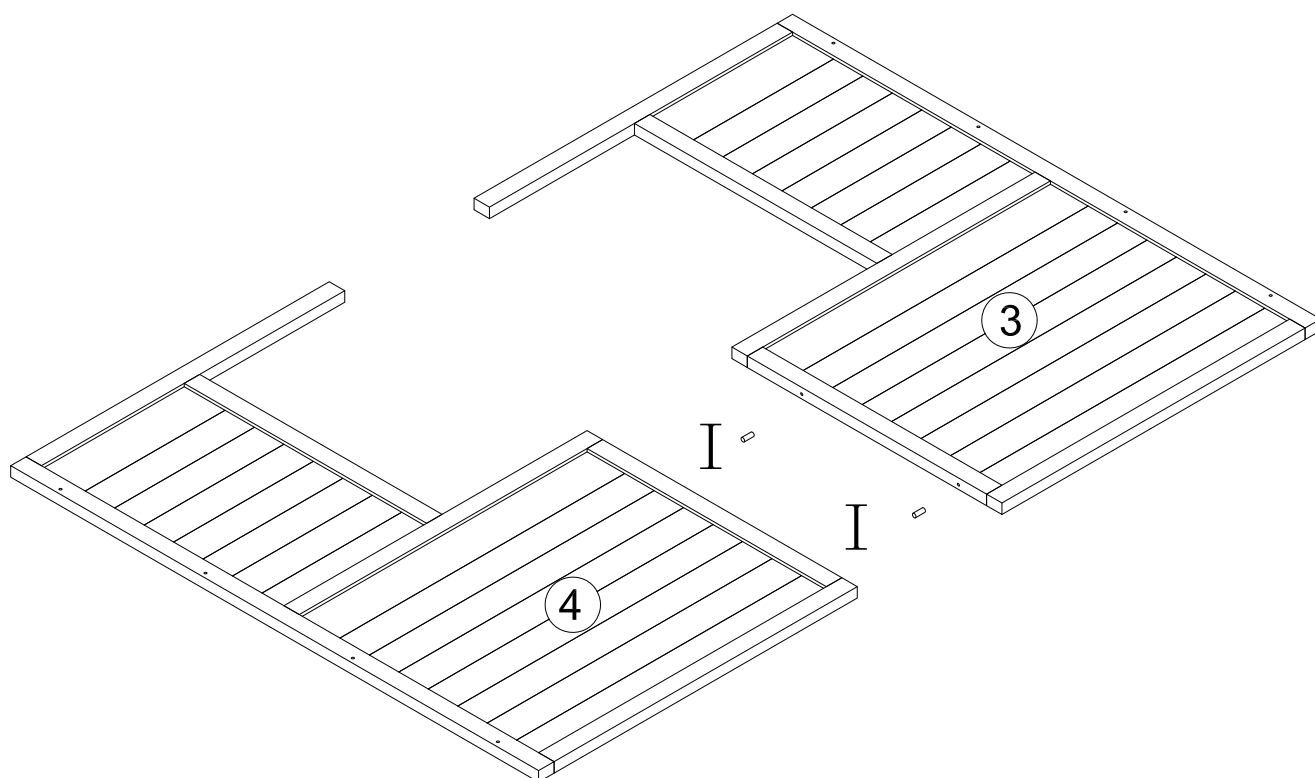 


Use Wooden Dowels (I) to join Part (4) and Part (3) together.

IX2




Ø6*20

 6

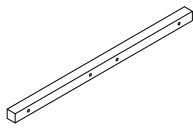

34 X1

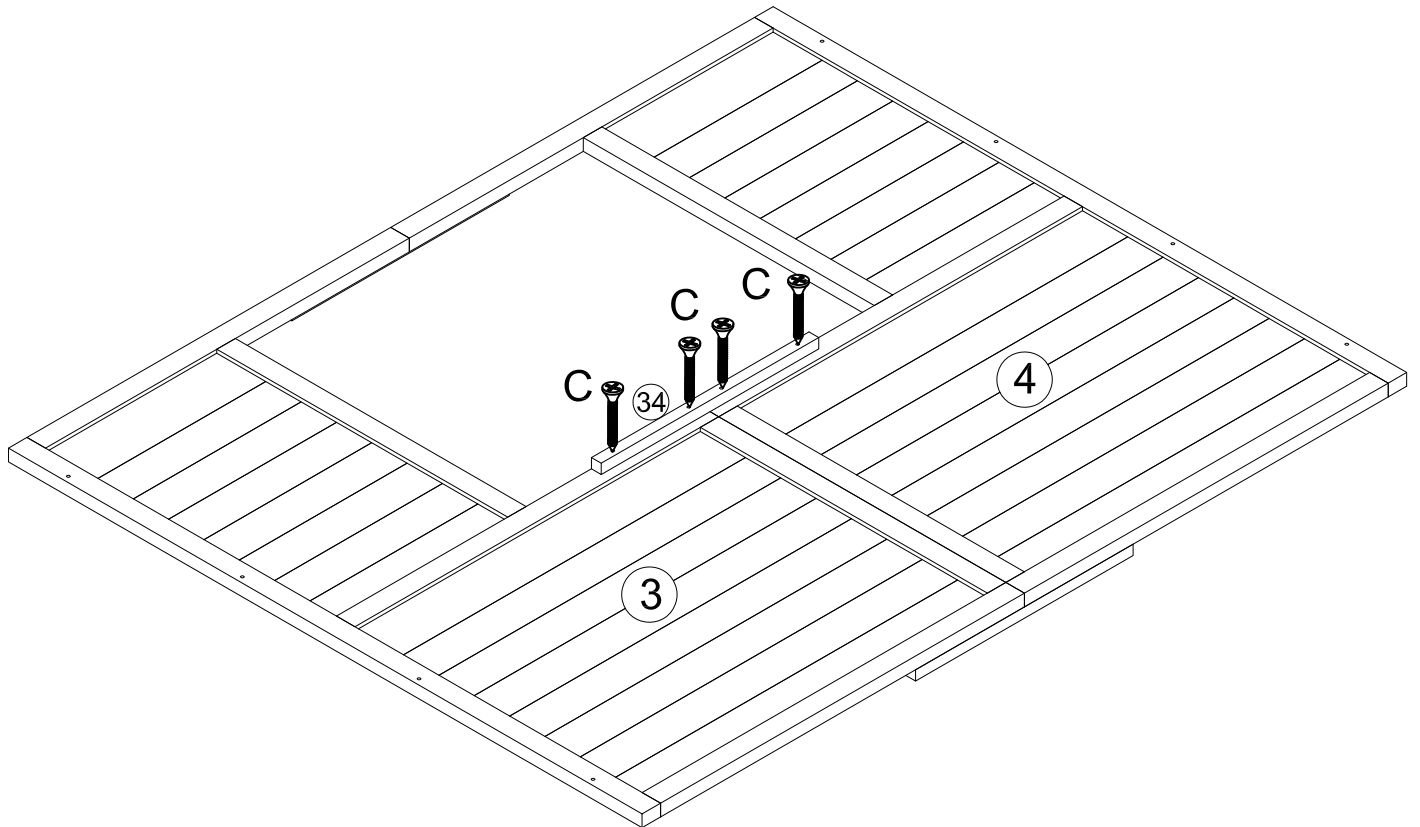 

Attach Part (34) to the outer side of Parts (3) and (4) using Screws (C).


Note: Align the top edges evenly.

CX4




3.5*35

 7

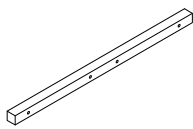


34 X2

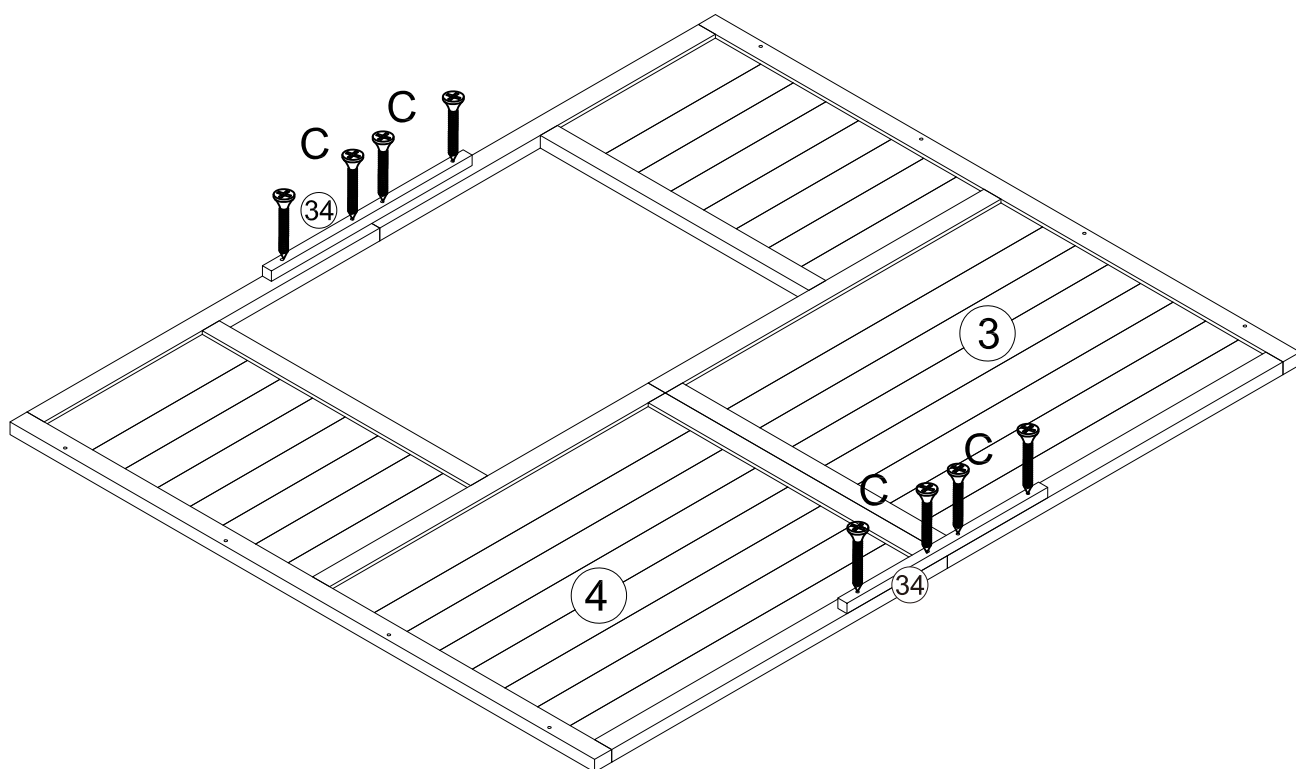 


Attach Part (34) to the inner side of Parts (4) and (3) using Screws (C).

 CX8




3.5*35

 8

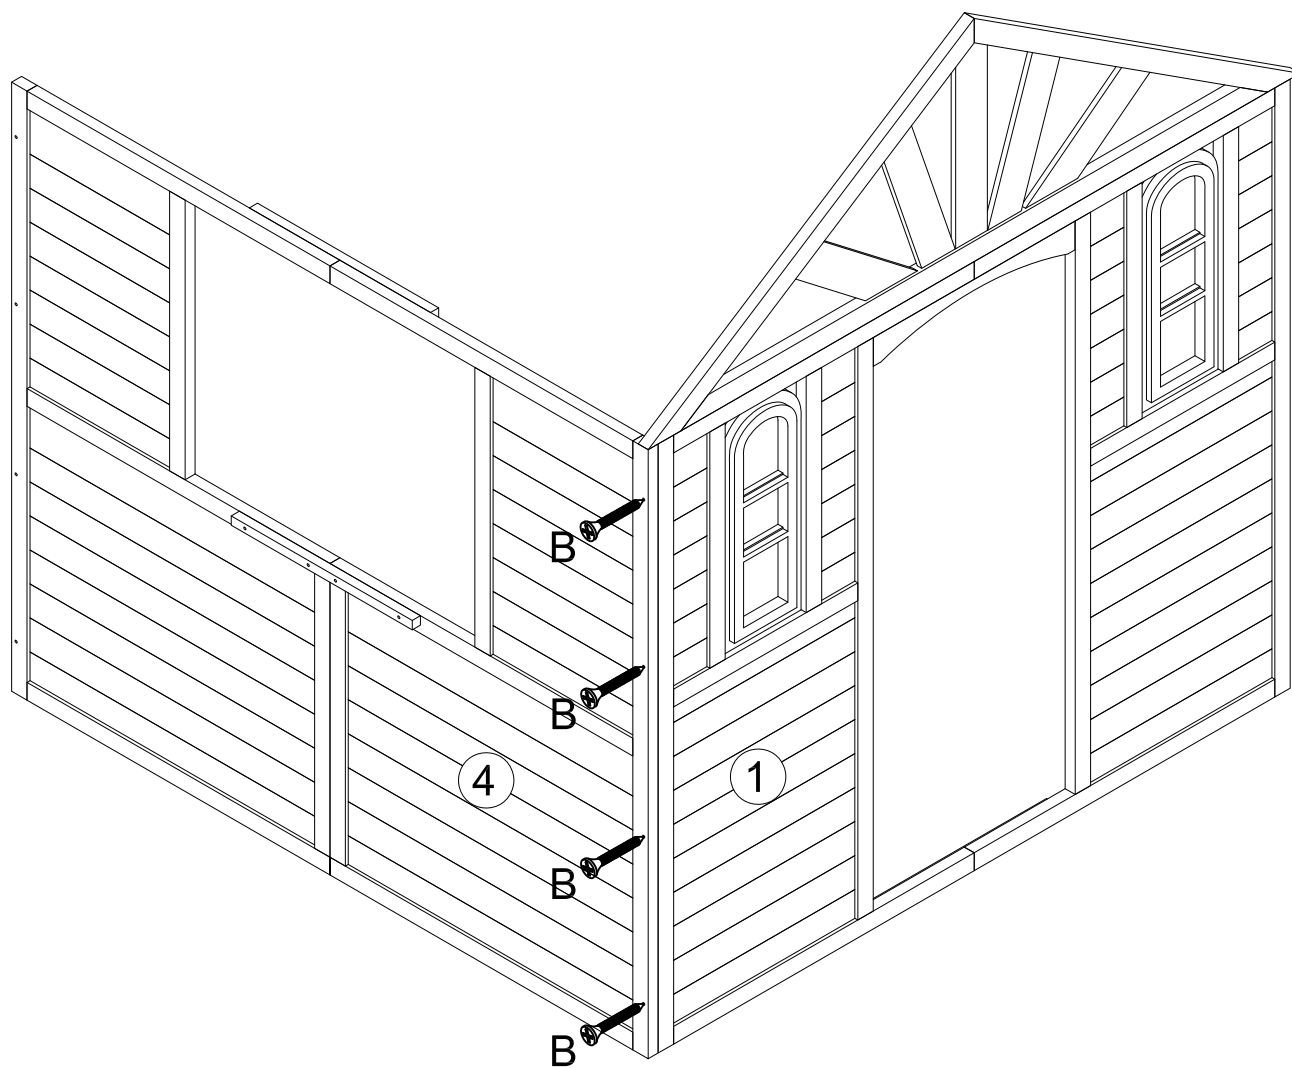


Secure Part (3) to Part (1) using Screws (B).

 BX4




3.5*40

 9

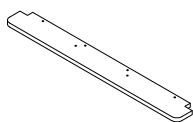

16 X1

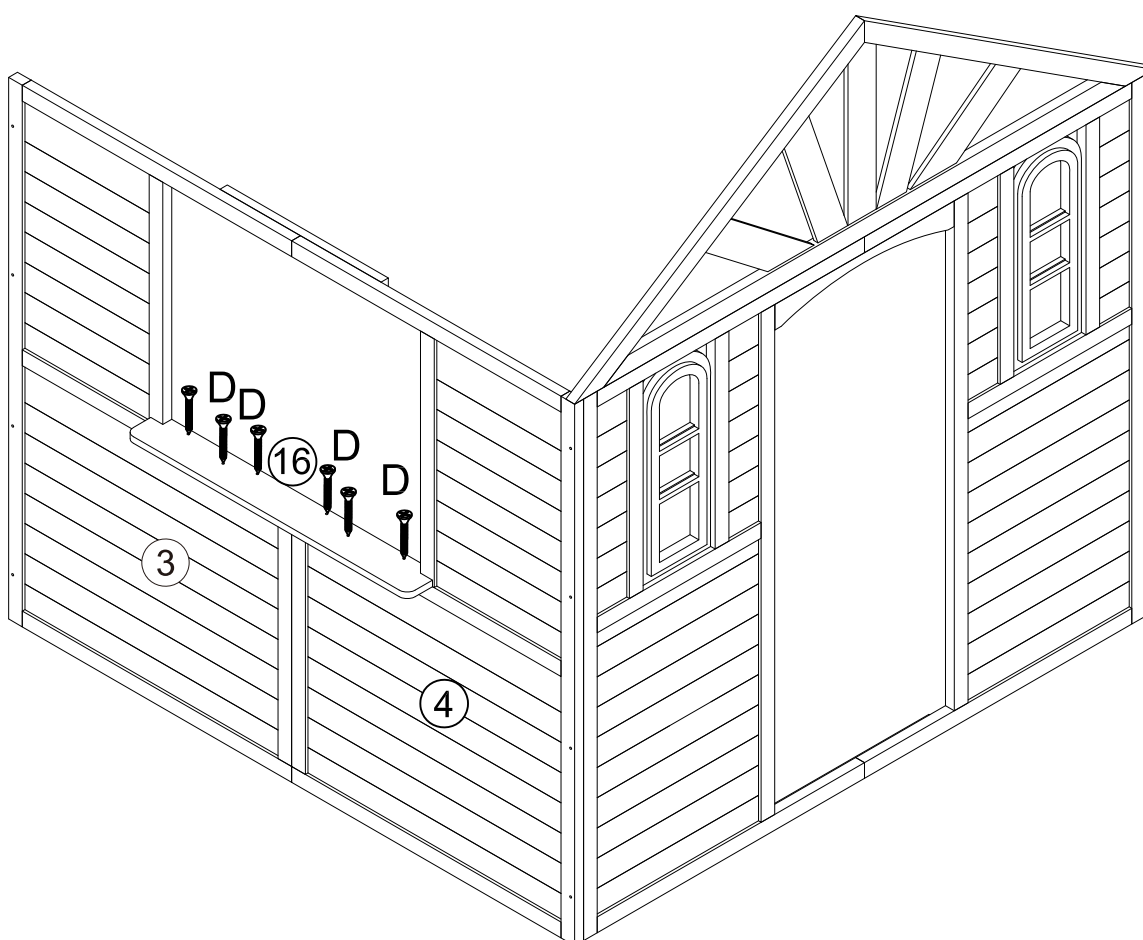 


Secure Part (16) to Parts (3), (4), and (25) using Screws (D).

DX6




3.5*30

 
10



14 X1

 

15 X1

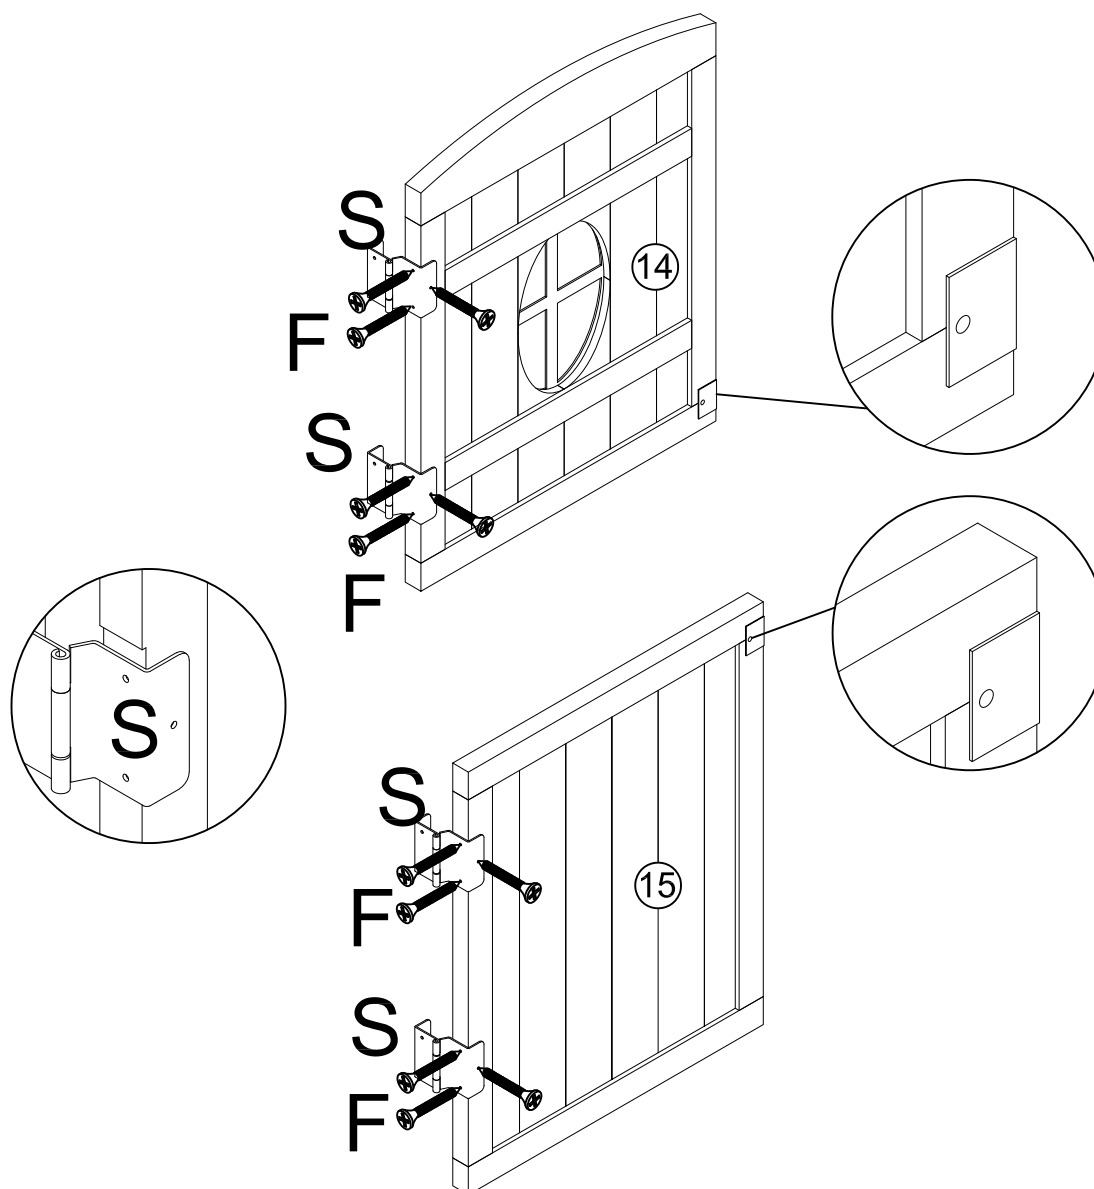 

Secure Accessory (S) to Part (14) and Part (15) separately using Screws (F).

Note: Insert Accessory (S) into the slotted opening as shown.

FX12




SX4



3*18

 11

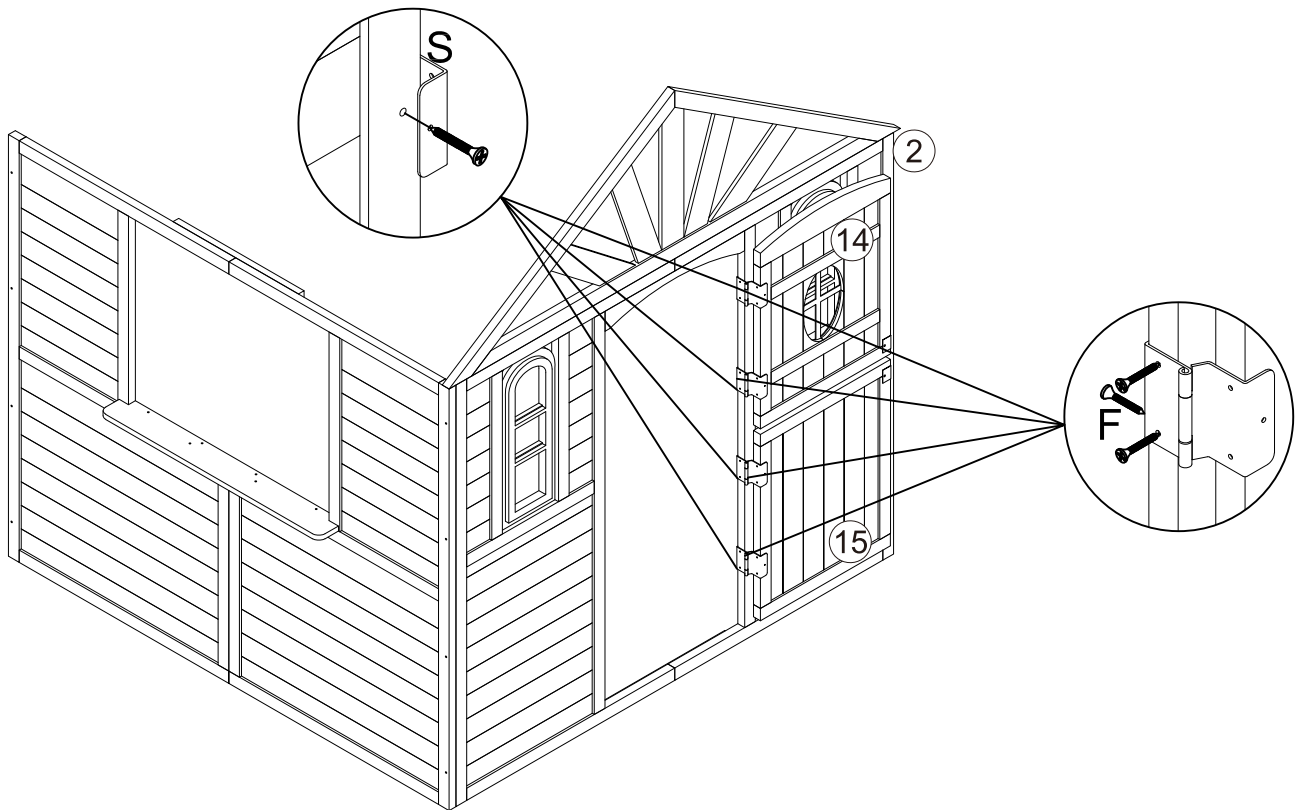

Secure Parts (14) and (15) to Part (2) using Screws (F).


Note: Align Accessory (S) with the pre-drilled holes.

FX12




3*18

 12



39 X1

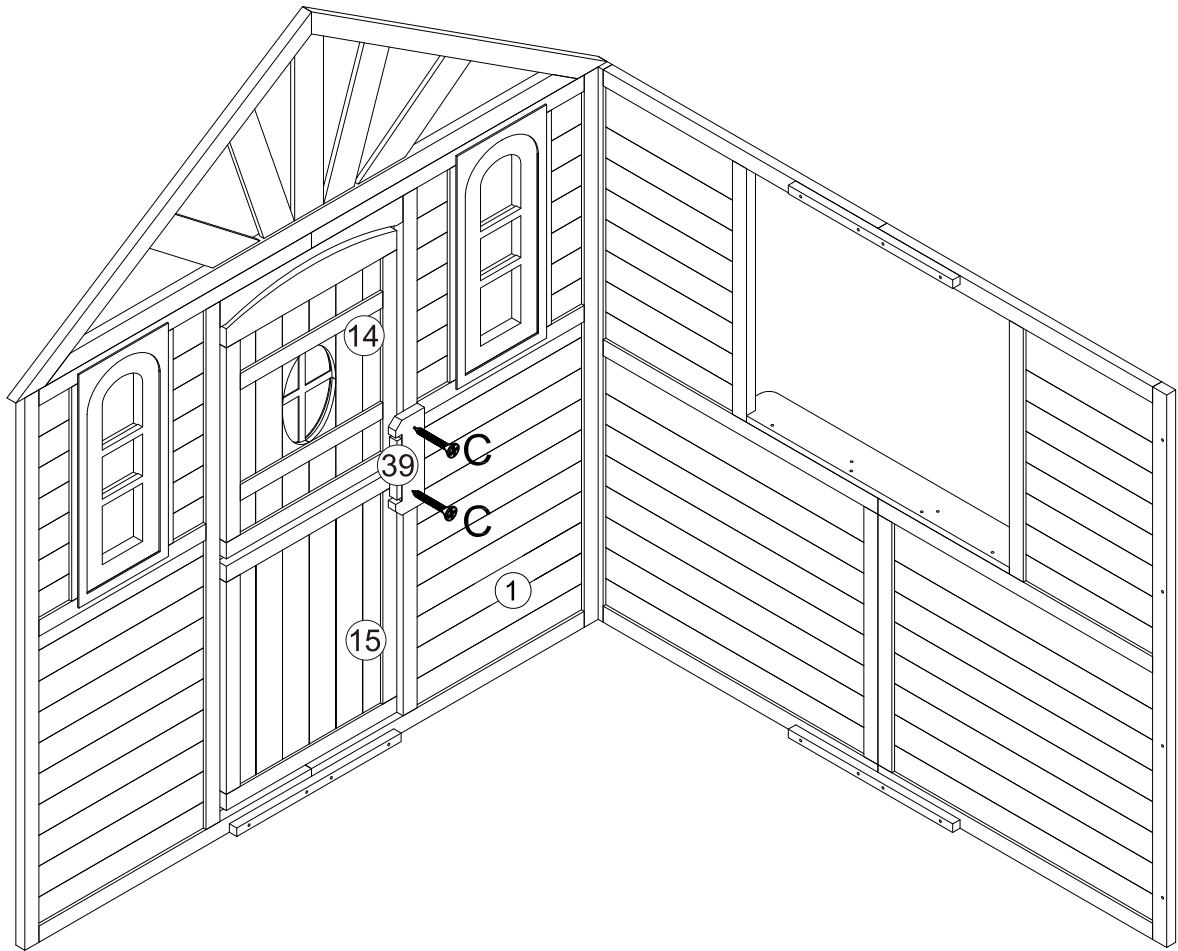 

Secure Part (39) to Part (1) using Screws (C).




Note: Make sure it aligns with the magnetic catch.

CX2



3.5*35

   13

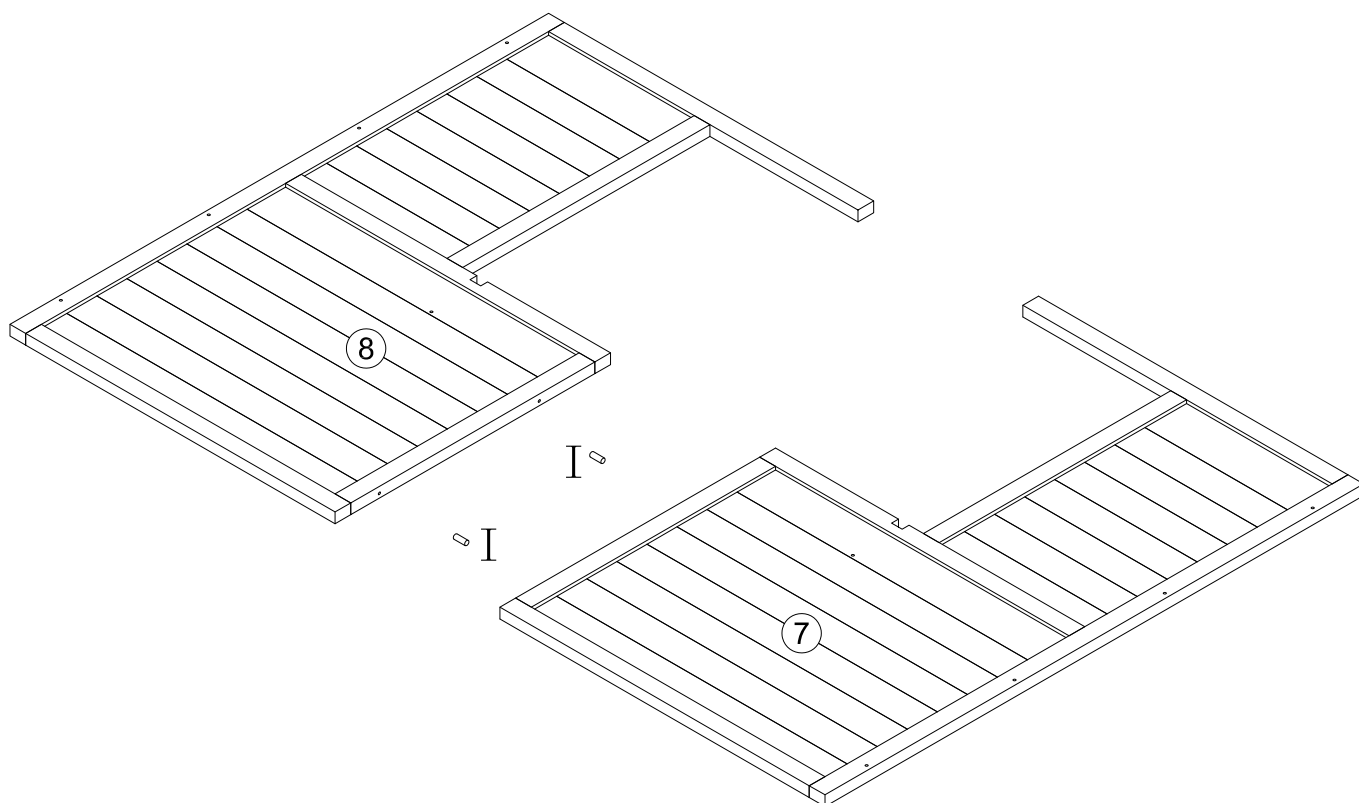


Use Wooden Dowels (I) to join Part (8) and Part (7) together.

IX2




Ø6*20

 
14

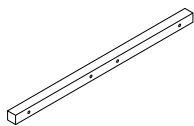

34 X1

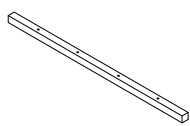 


40 X1

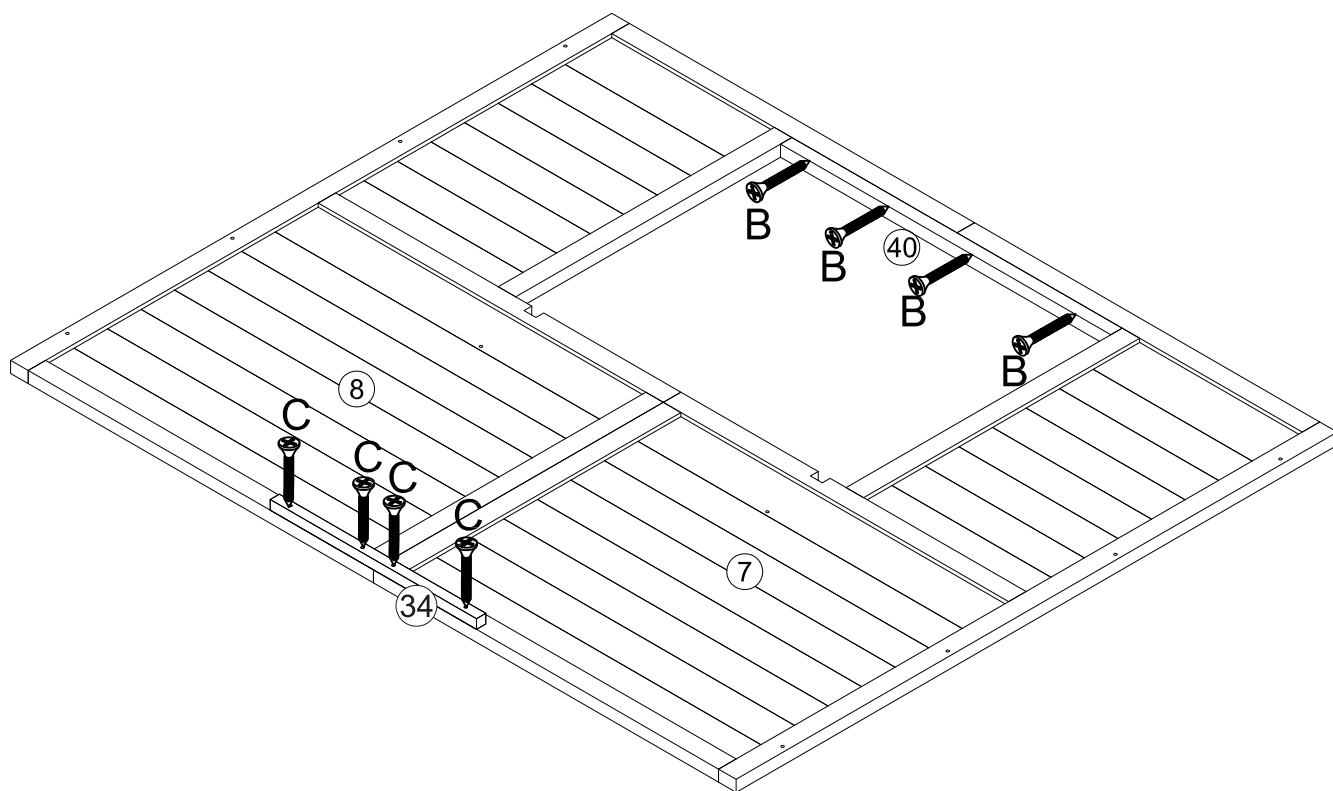 


- a. Attach Part (34) to the lower section of Parts (8) and (7) using Screws (C).
- b. Attach Part (40) to the upper section of Parts (8) and (7) using Screws (B).

 BX4




3.5*40

 CX4





3.5*35

 15




18 X2

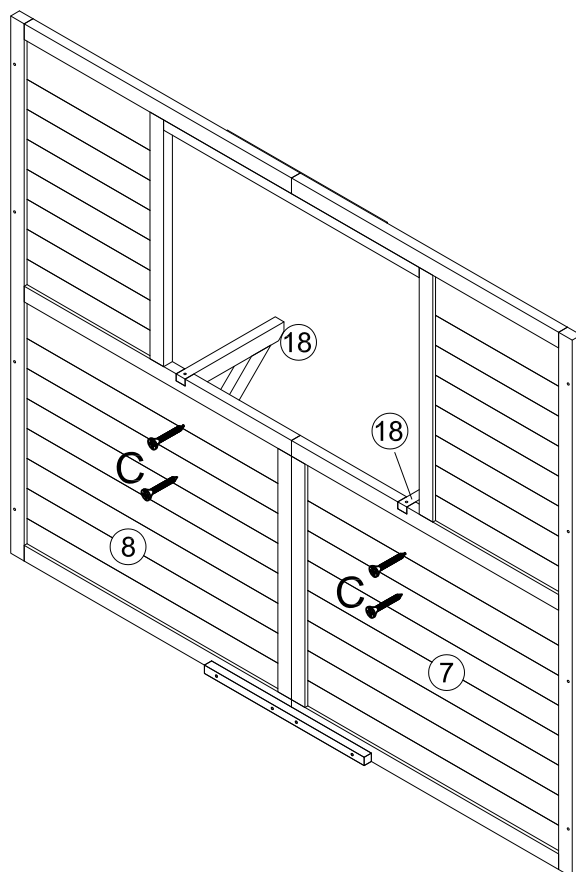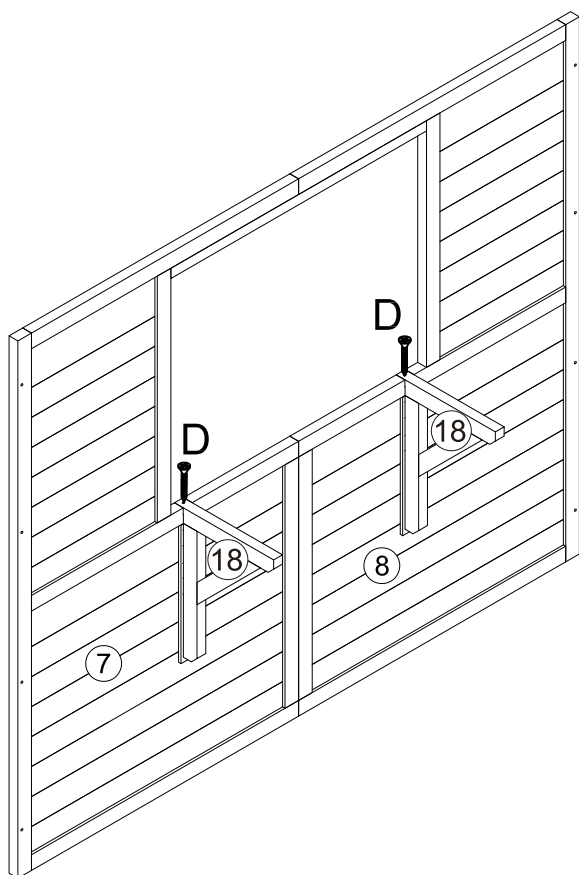  


Secure Part (18) to the outer side of Parts (7) and (8) using Screws (C) and (D).

 CX4




3.5*35

 DX2




3.5*30

 16

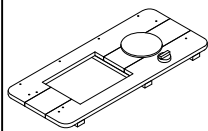

17 X1

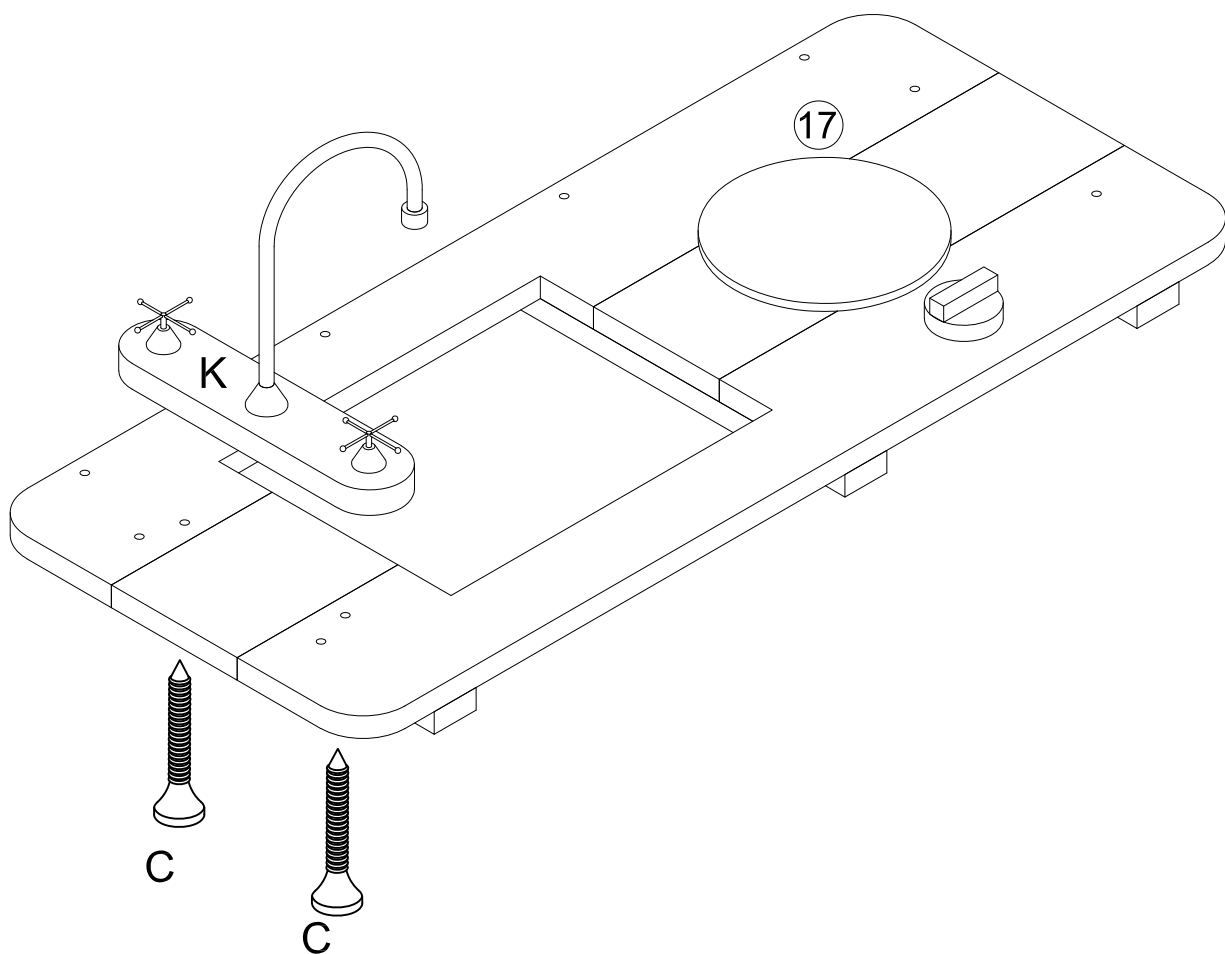 

Secure Accessory (K) to Part (17) using Screws (C).

CX2




3.5*35

KX1



 17

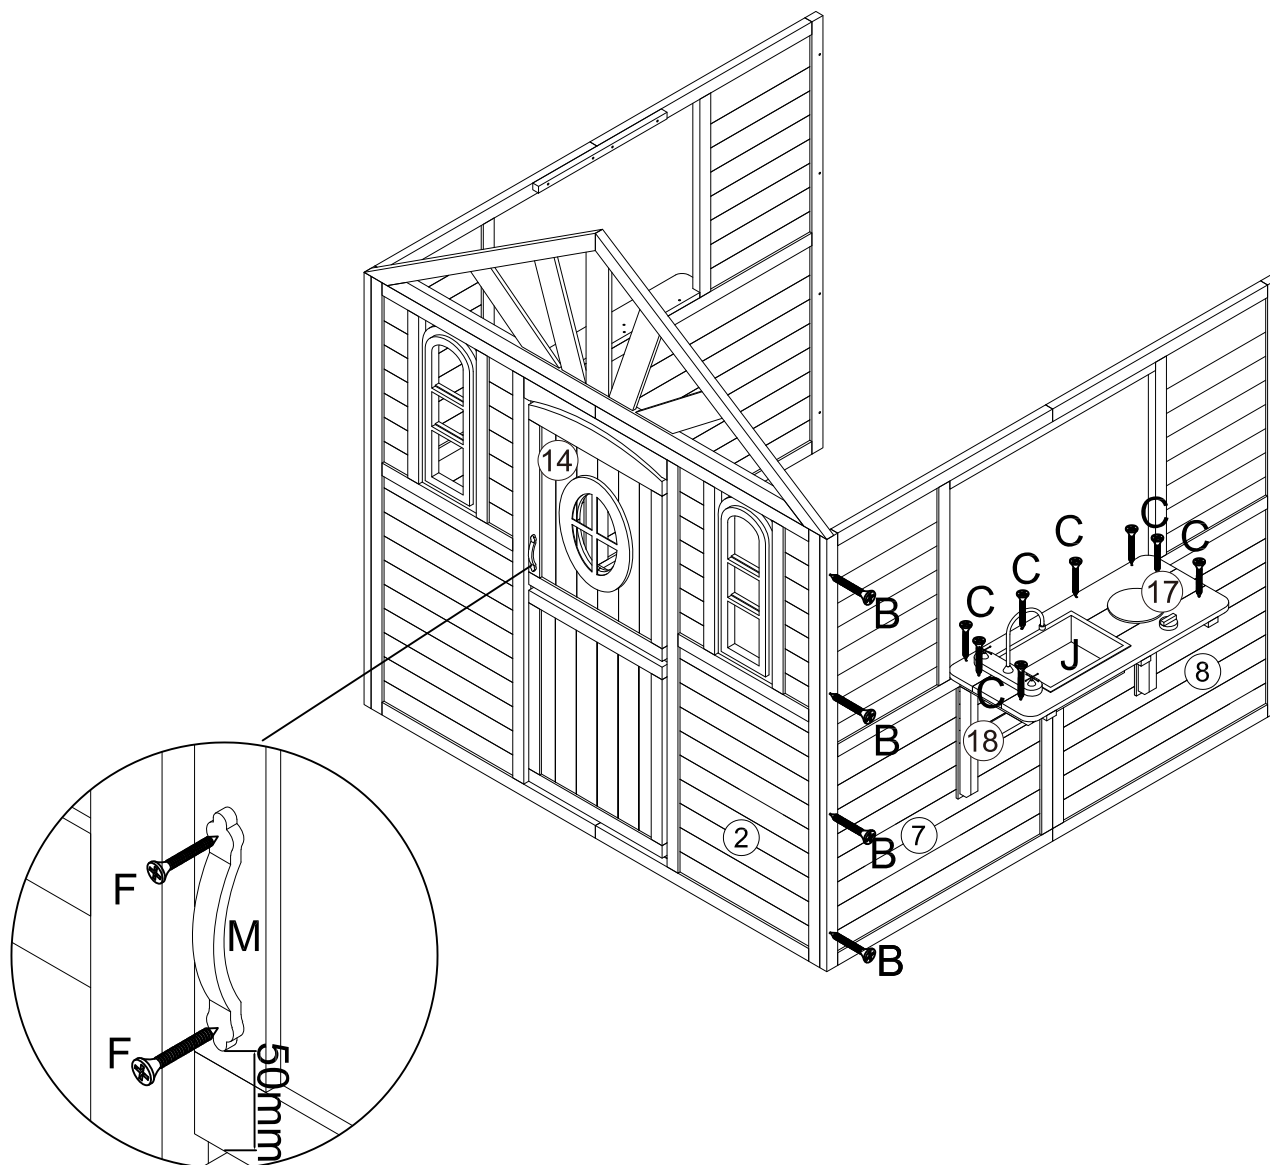

- Secure Part (7) to Part (2) using Screws (B).
- Secure Accessory (M) to Part (14) using Screws (F).
- Secure Part (17) to Parts (7), (8), and (18) using Screws (C).
- Place Accessory (J) onto Part (17).

Note: Position it 50 mm from the lower end.

BX4



3.5*40

CX8




3.5*35

FX2



3*18


 
JX1

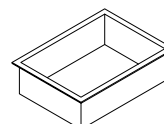

MX1



  18

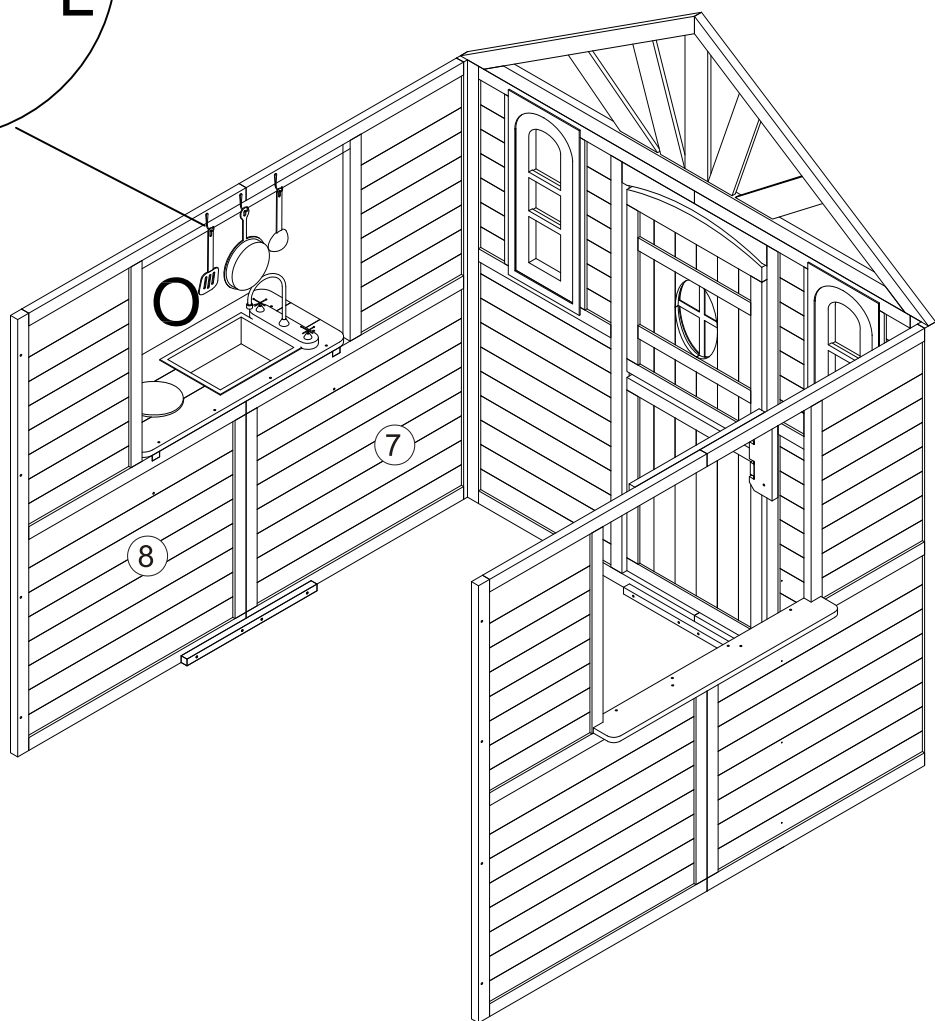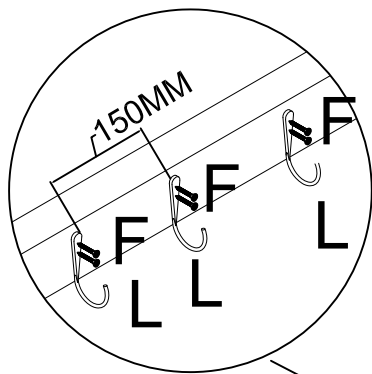

a. Secure Accessory (L) to Parts (8) and (7) using Screws (F).

Note: Keep the spacing approximately 150 mm.

b. Hang Accessory (O) onto Accessory (L).

FX6



3*18




LX3



OX1



   19

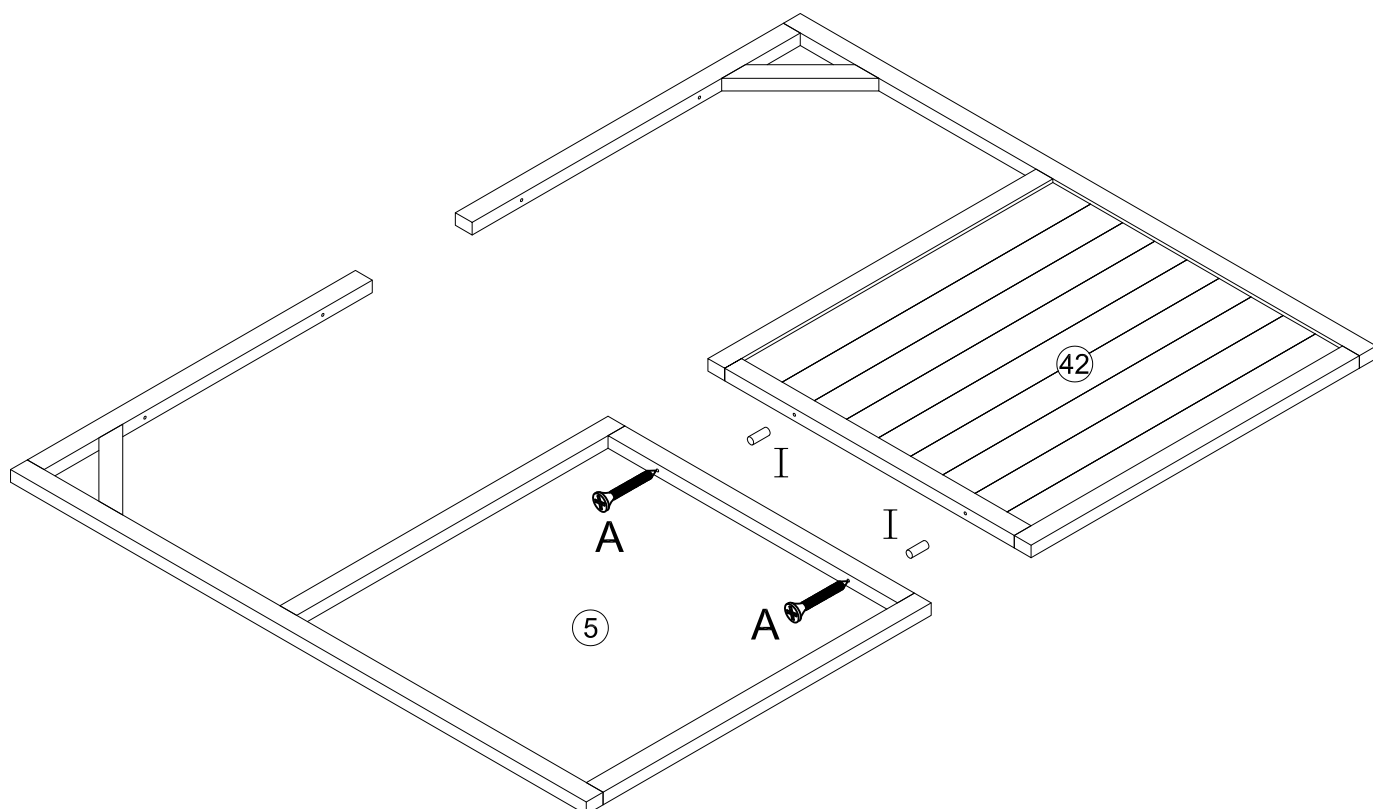

Use Wooden Dowels (I) to join Part (5) and Part (42) together, then reinforce with Screws (A).

AX2




3.5*60

IX2




Ø6*20

 
20

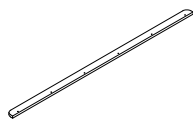

13 X1

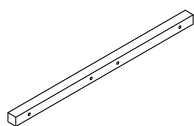 

34 X1

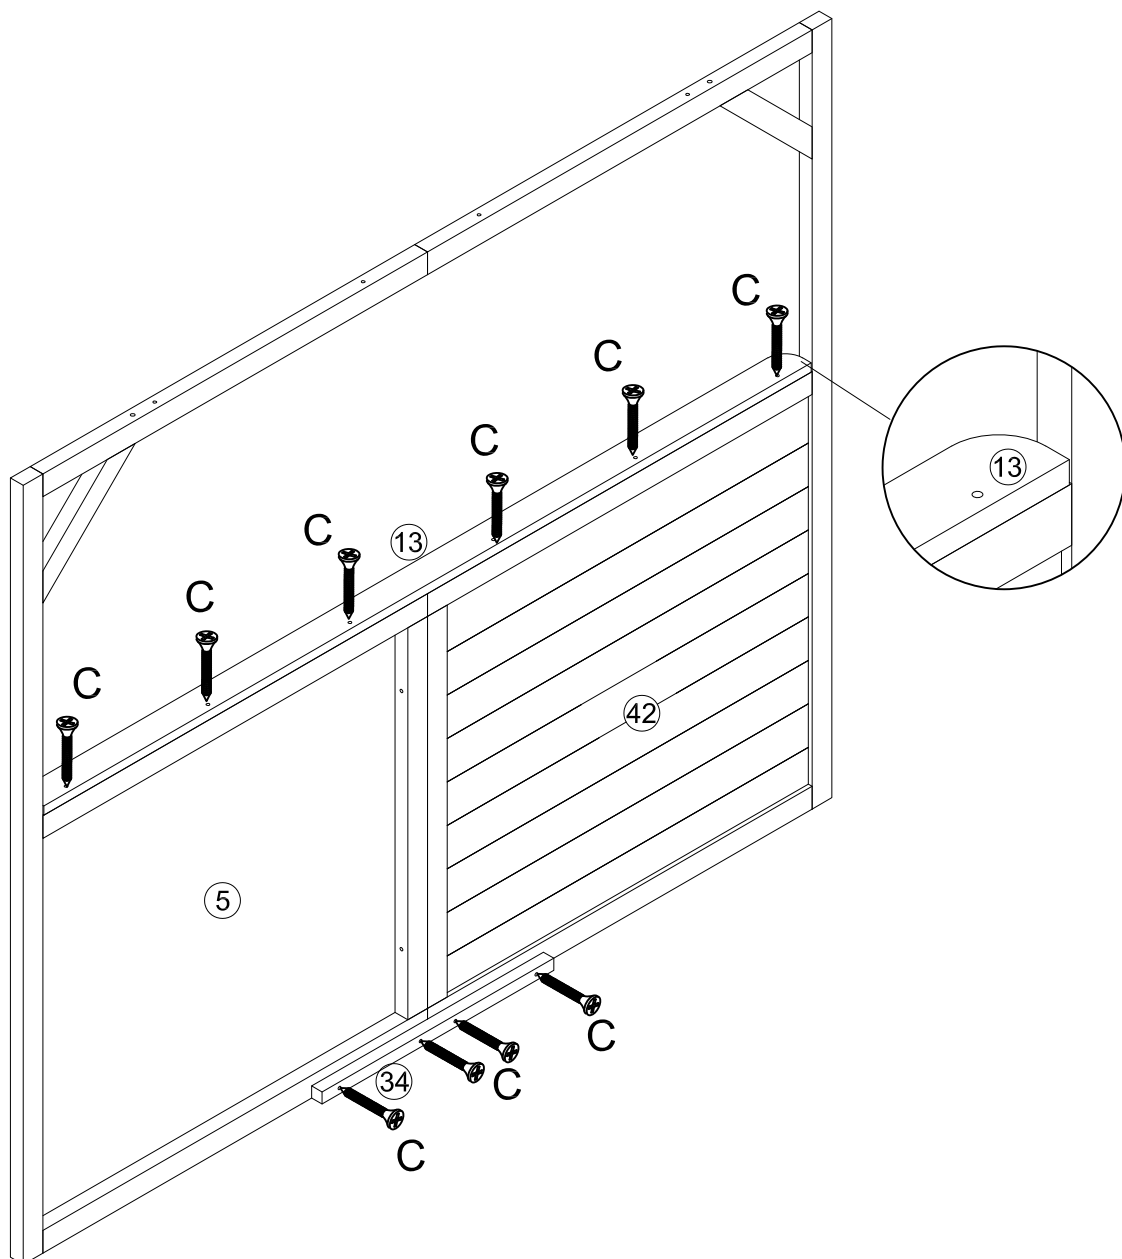 

- a. Secure Part (34) to Parts (5) and (42) using Screws (C).
- b. Secure Part (13) to Parts (5) and (42) using Screws (C).


Note: Make sure the inner sides are flush.

CX10




3.5*35

 21



43 X1

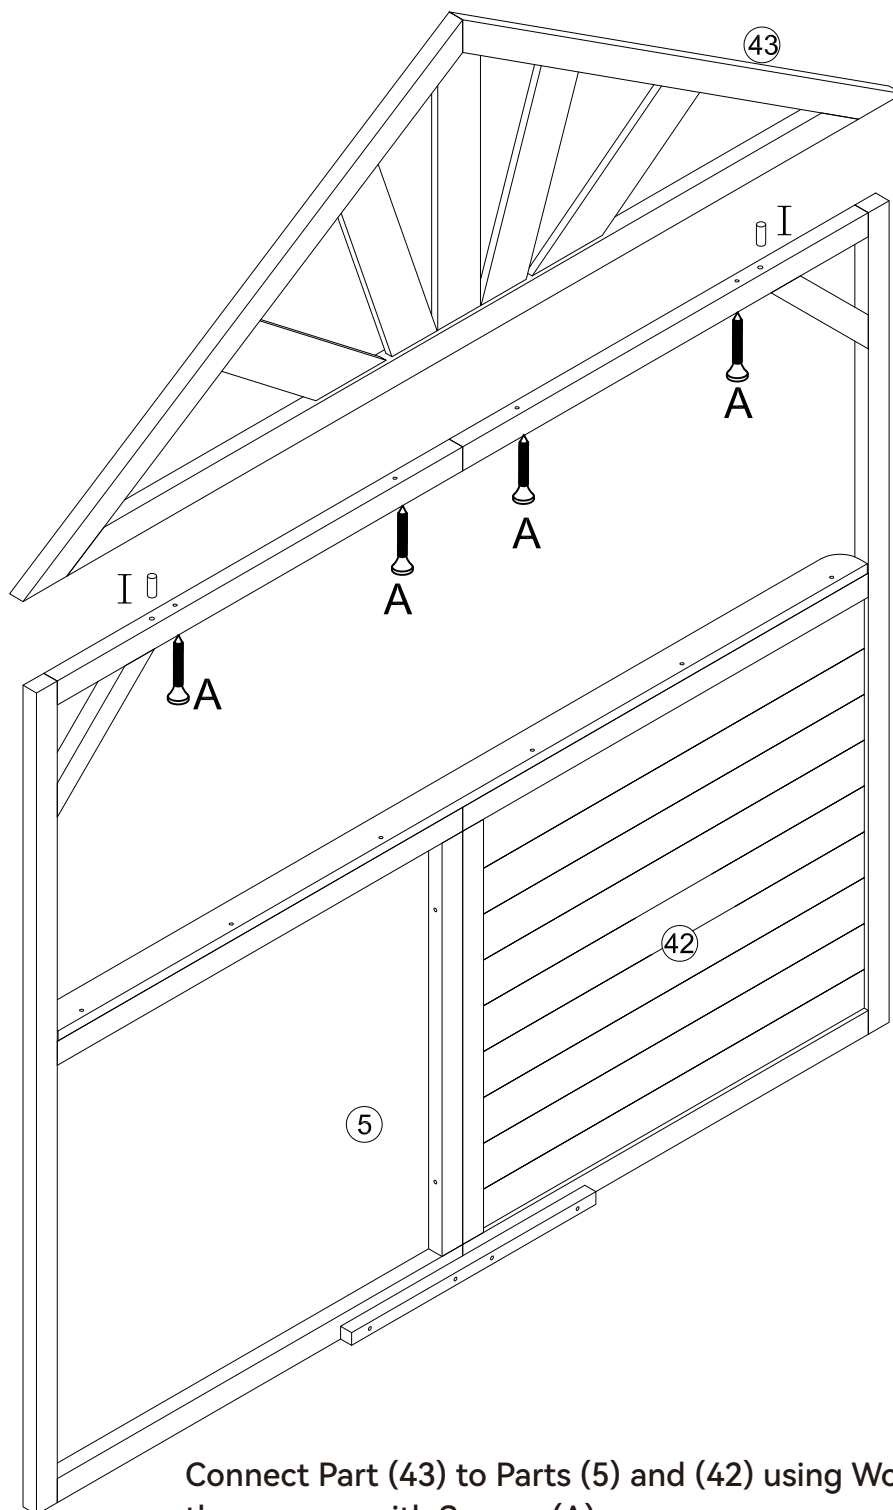 

Connect Part (43) to Parts (5) and (42) using Wooden Dowels (I), then secure with Screws (A).

AX4




3.5*60

IX2



 Ø6*20

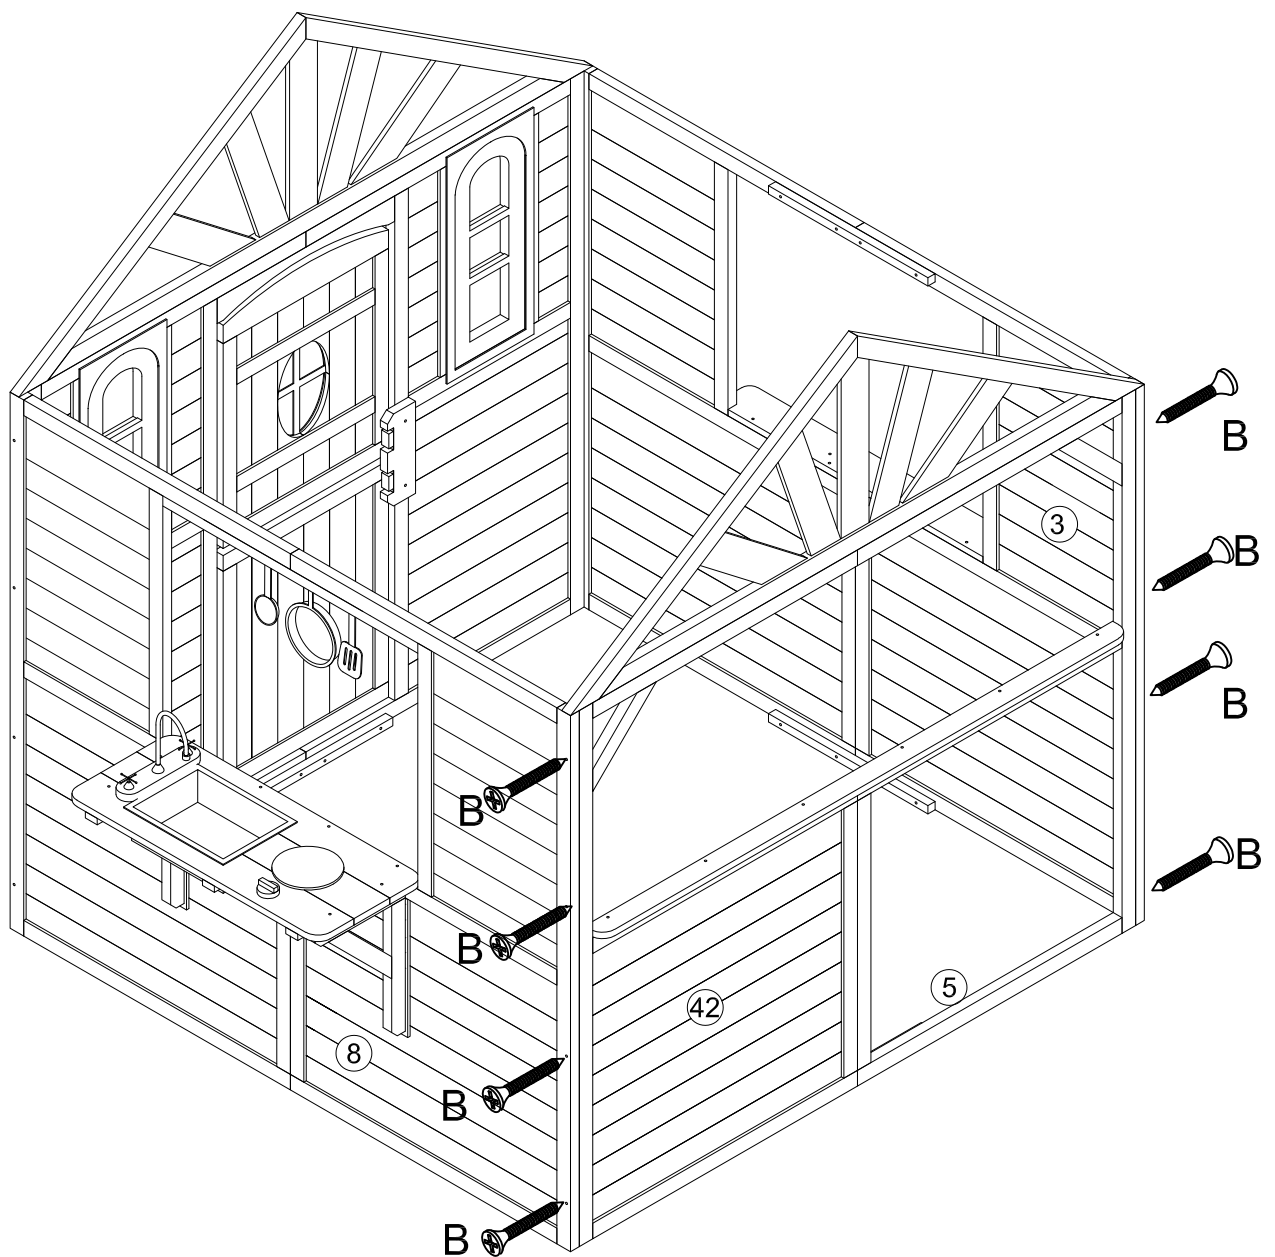







Secure Part (8) and Part (42) to Part (3) and Part (5) using Screws (B).

BX8



3.5*40

      23

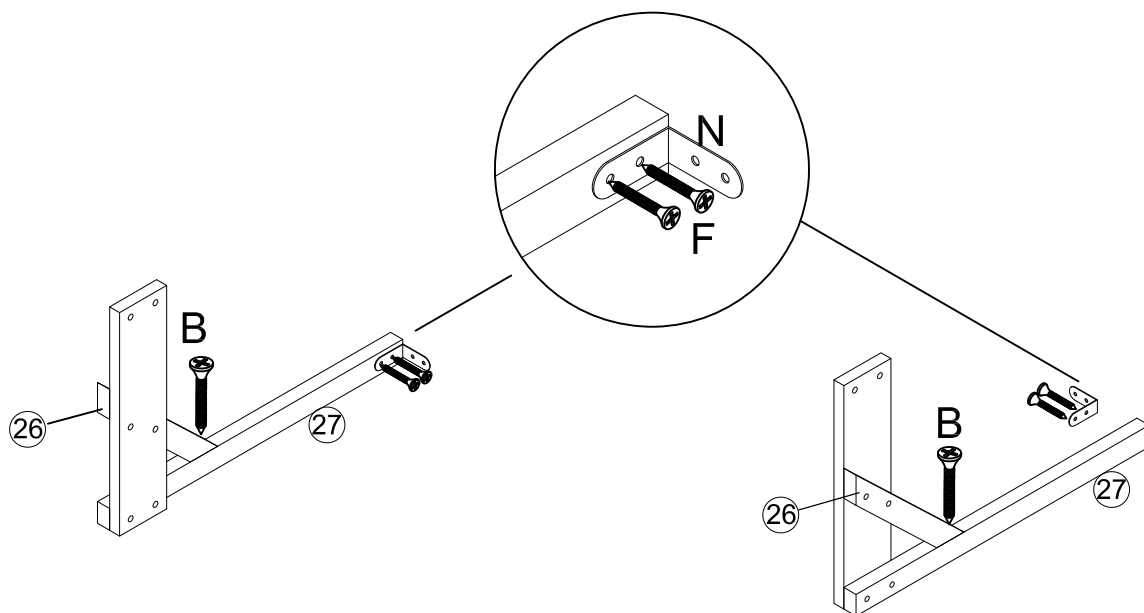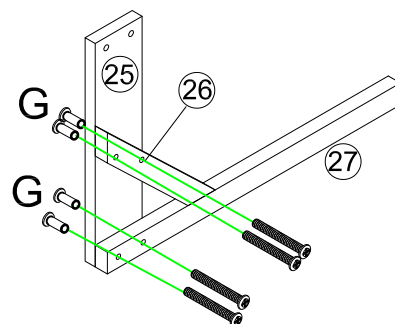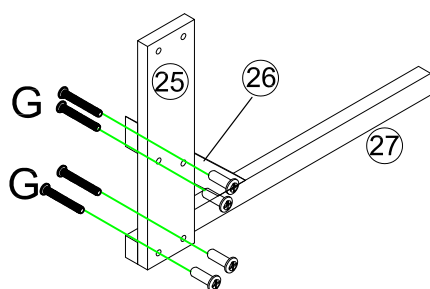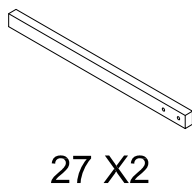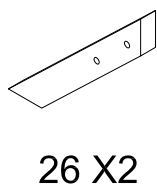

- Secure Parts (25), (26), and (27) with Bolts (G) as shown.
- Reinforce Part (27) to Part (26) using Screws (B).
- Secure Accessory (N) to Part (27) using Screws (F).

BX2




3.5*40

FX4




3*18

 GX8




Ø6*30

 
NX2



24

 


23 X2

 

24 X1



 28 X1

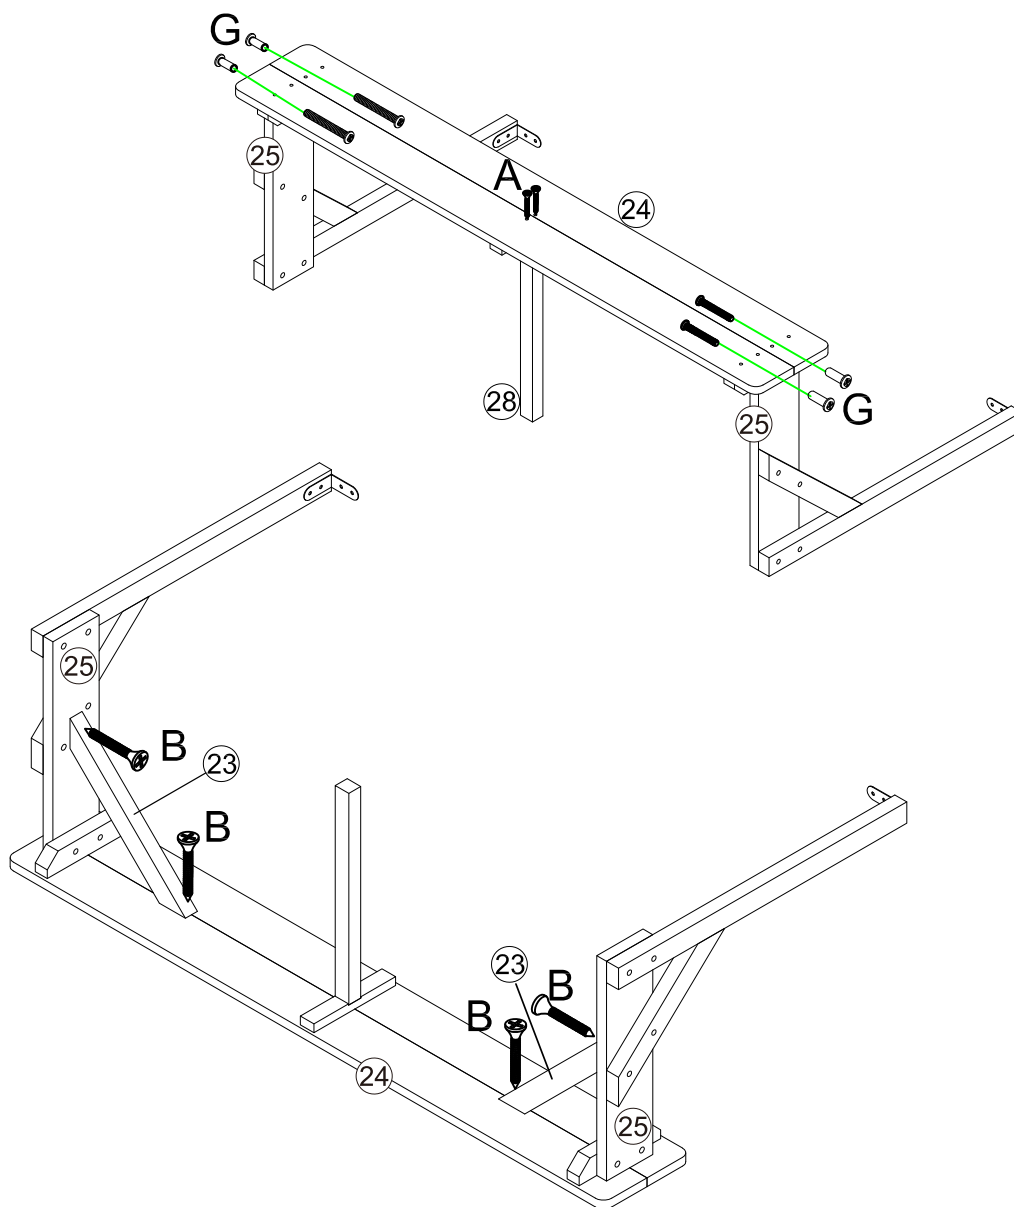

- Secure Parts (24) and (25) with Bolts (G) as shown.
- Secure Part (28) to the top of Part (24) using Screws (A).
- Secure Part (23) to Parts (24) and (25) using Screws (B).

AX2




3.5*60

BX4






3.5*40

 GX4



Ø6*30

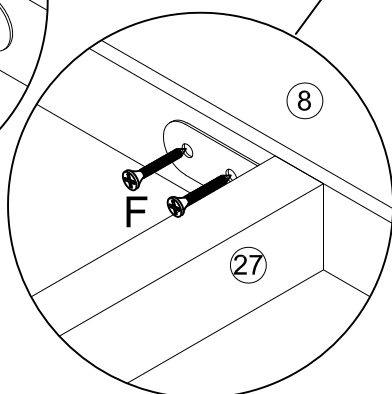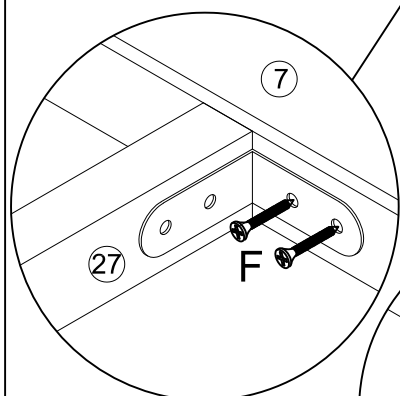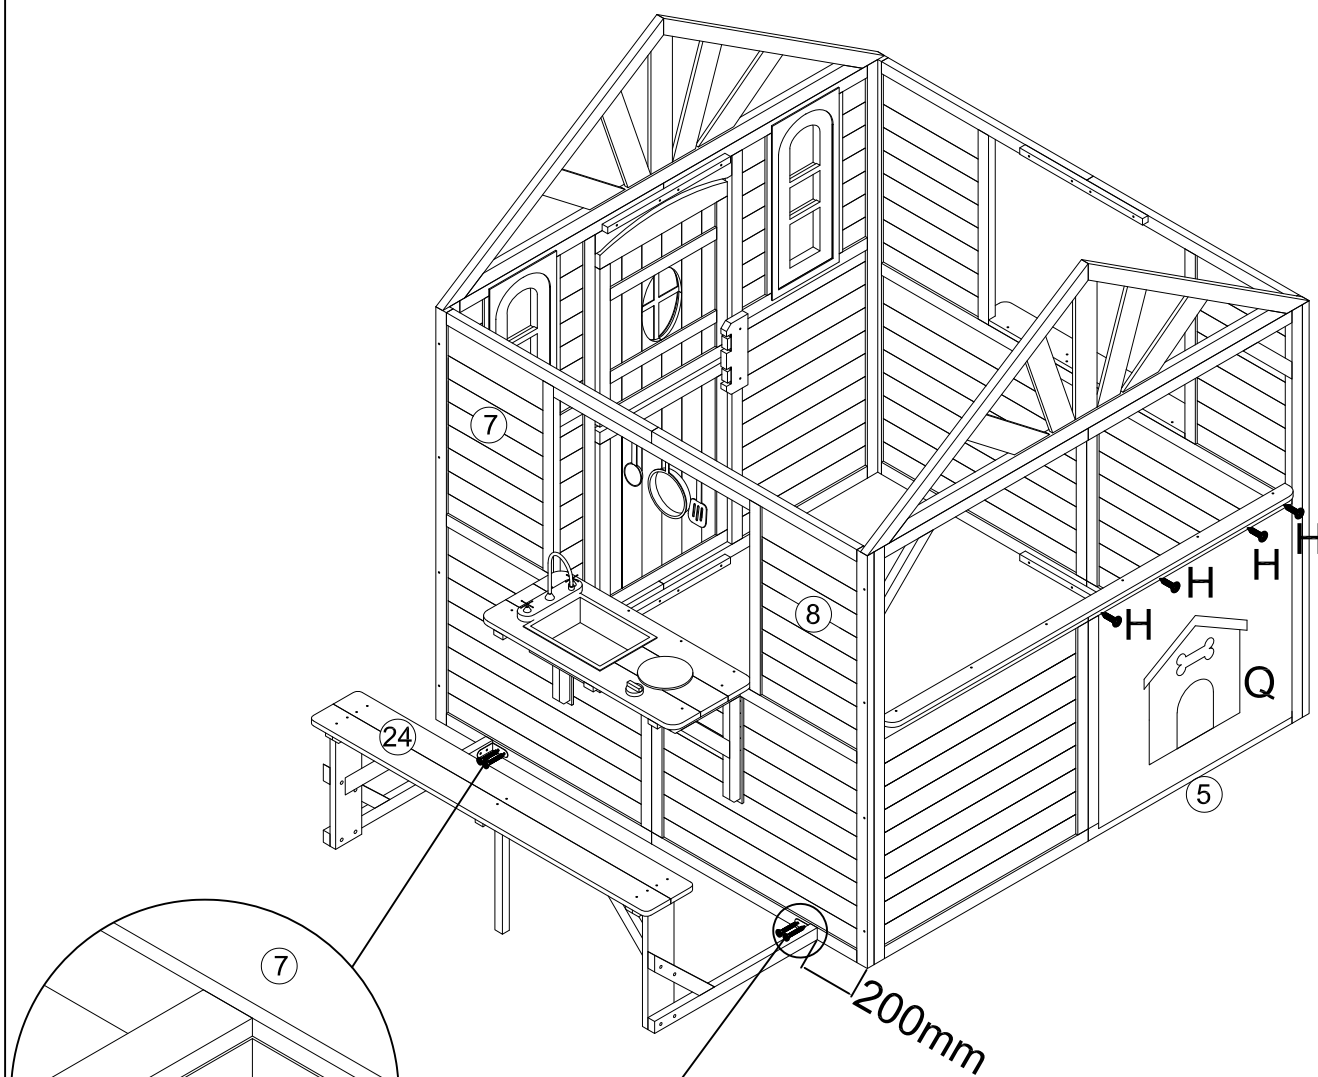   

- a. Secure Part (27), Part (7), and Part (8) using Screws (F).
Note: Leave 200 mm from the edge.
- b. Secure Accessory (Q) to Part (5) using Screws (H).

FX4



3*18

HX4




3*15


QX1



 26



19 X2

 


20 X2



21 X1



 
22 X1

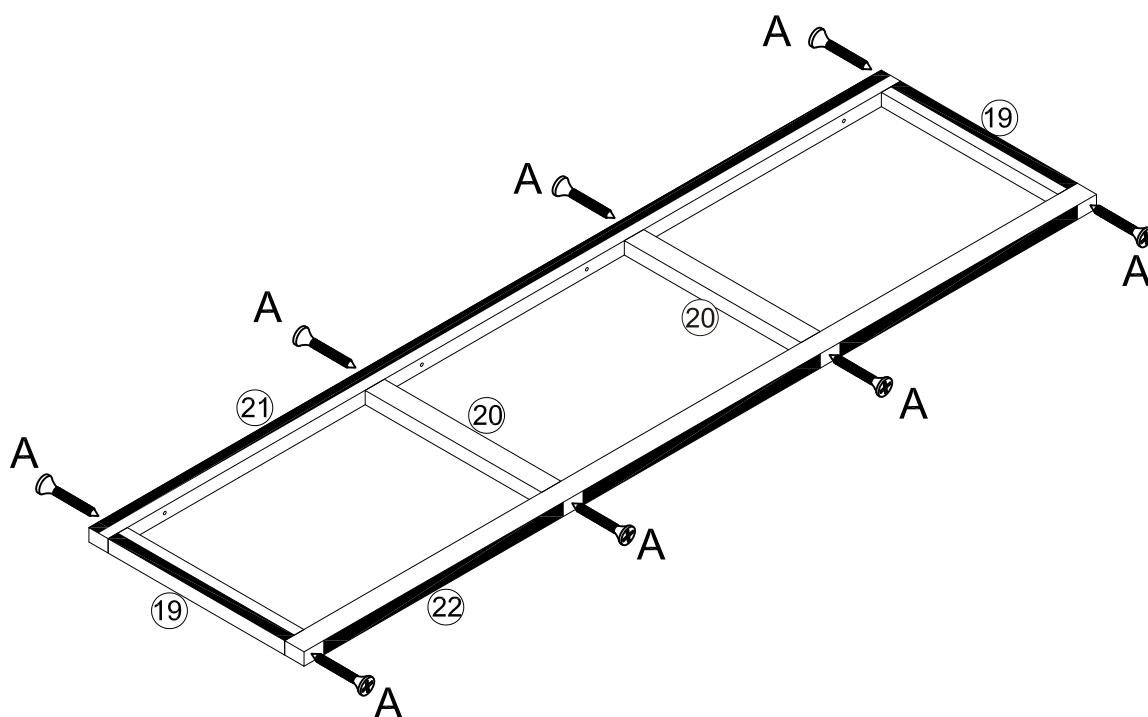


Assemble Parts (19), (20), (21), and (22) as shown, then secure with Screws (A).

Note: The black pieces are self-adhesive strips.

 AX8



 3.5*60

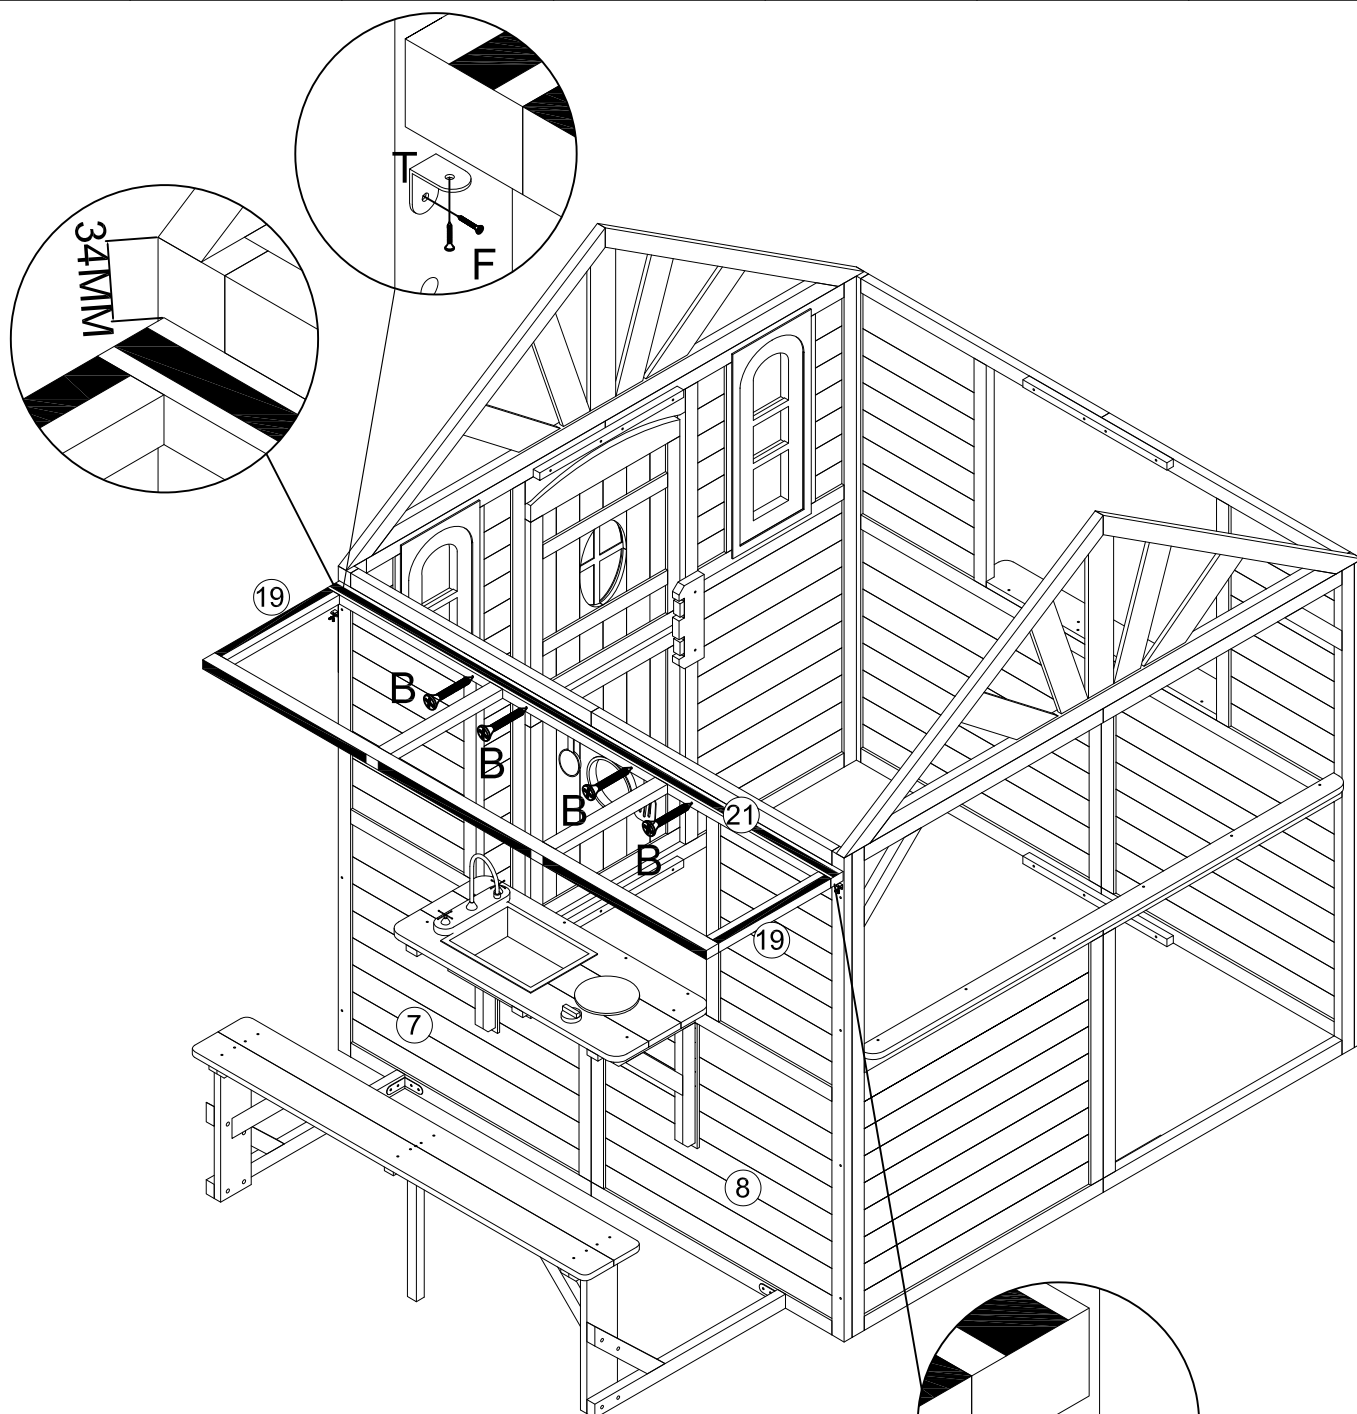

- a. Secure Part (21) to Parts (7) and (8) using Screws (B).

Note: Leave 34 mm at the top.


- b. Secure Accessory (T) to Parts (7), (8), and (21) using Screws (F) as shown.

BX4



3.5*40

 FX4




3*18


TX2



 28



23 X2

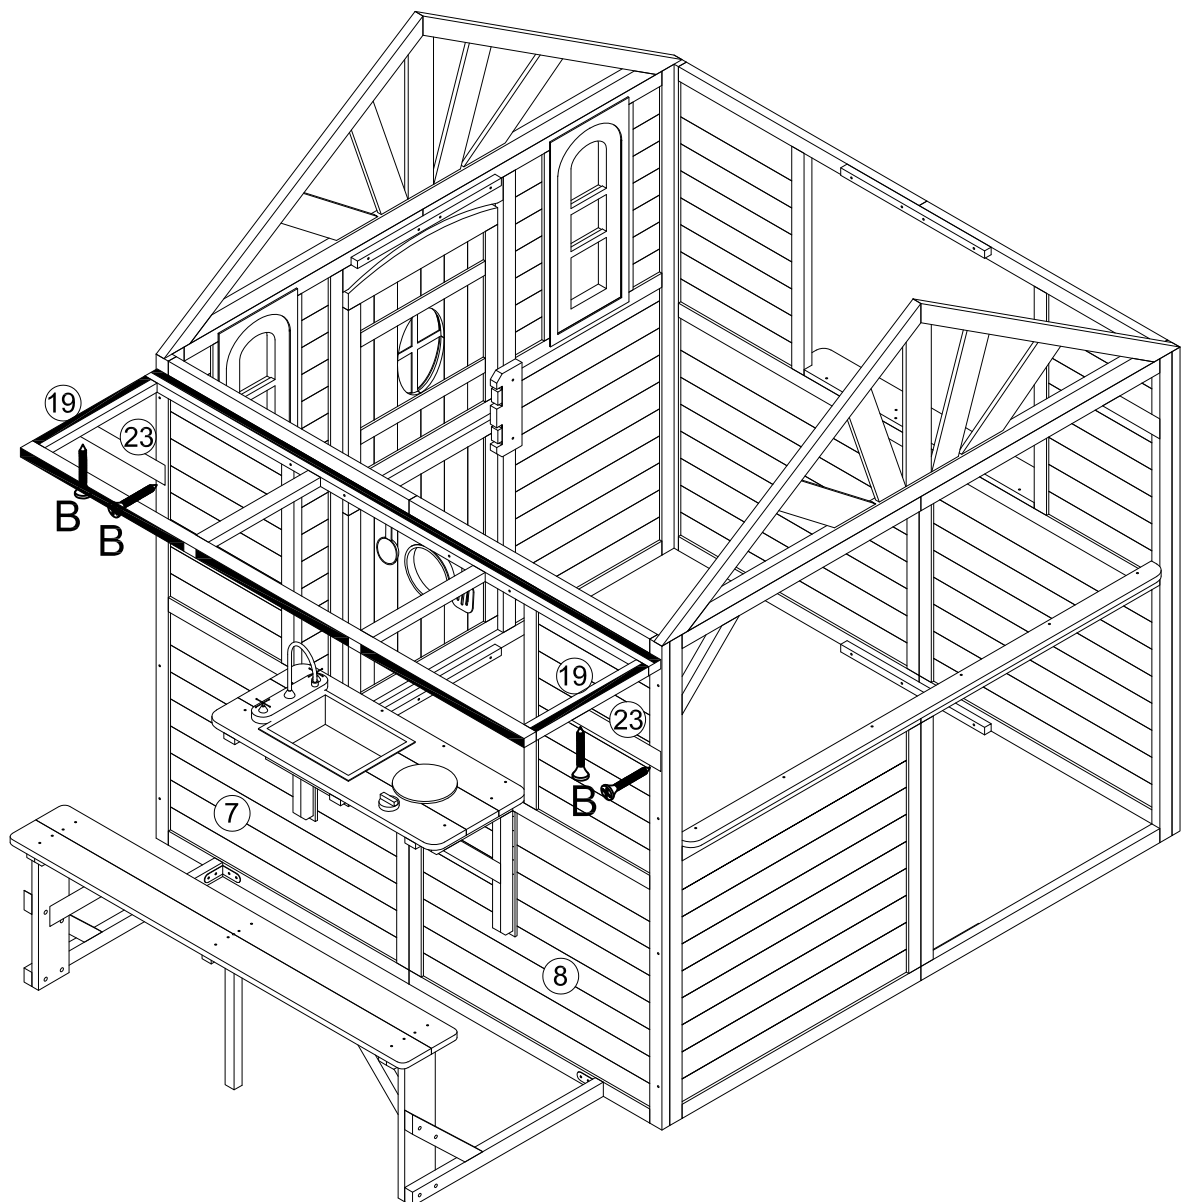 


Secure Part (23) to Parts (7), (8), and (19) using Screws (B).

BX4




3.5*40

 
29

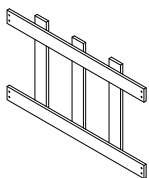

29 X1

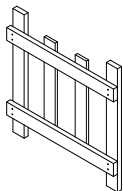 

30 X1

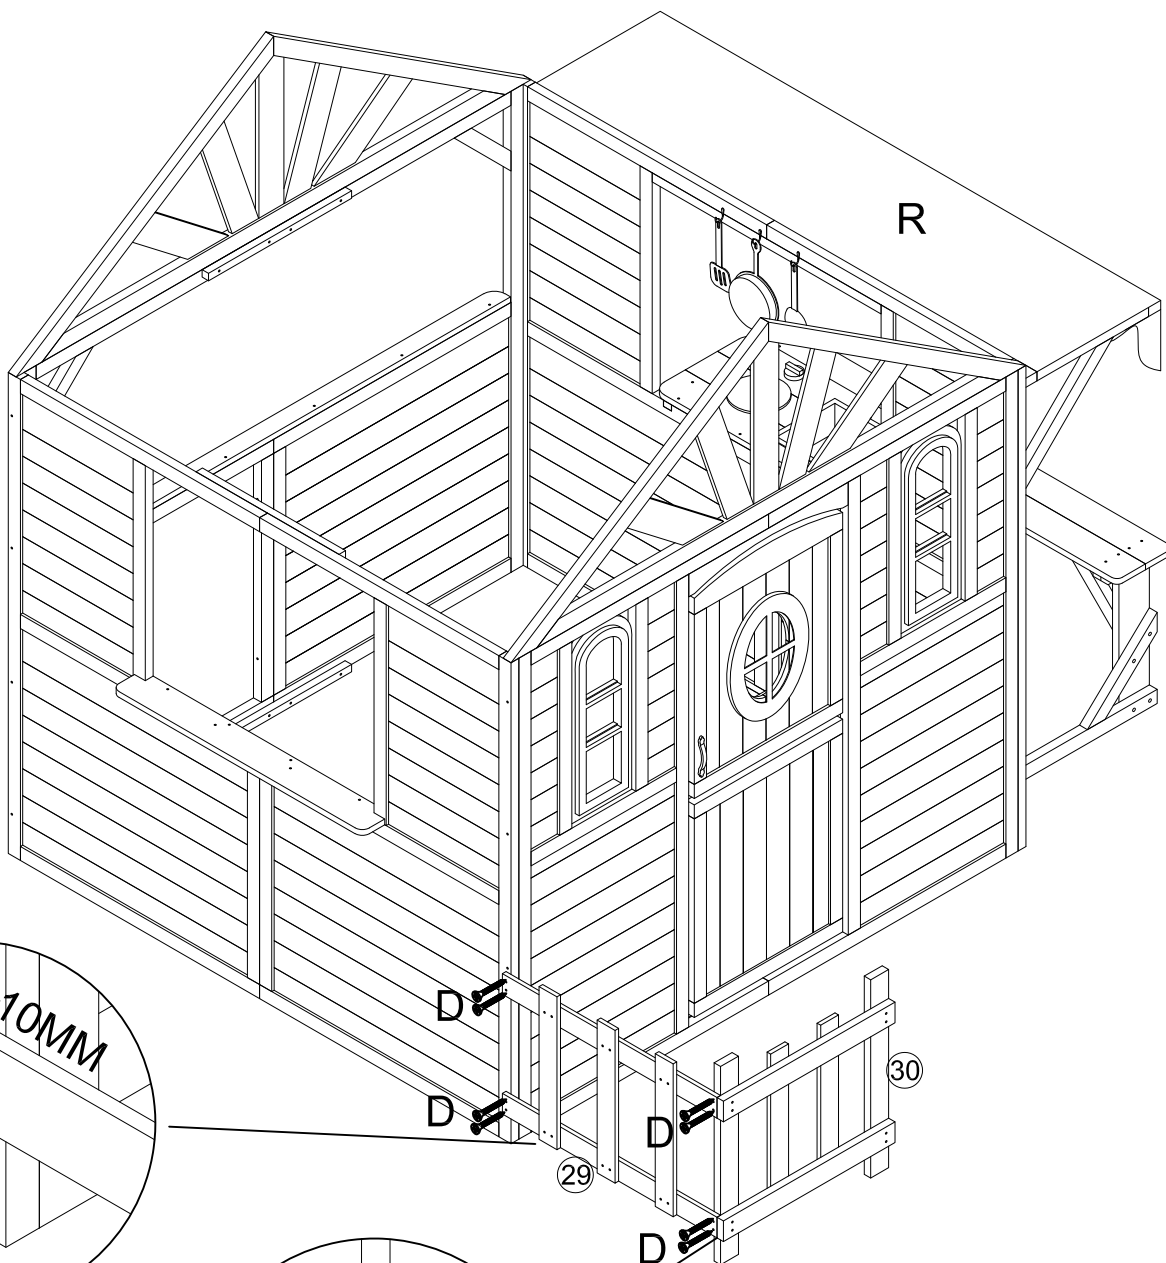 

a. Secure Part (29) to Part (30) using Screws (D).


Note: Leave 70 mm at the bottom and 10 mm at the end.

b. Apply and stick Accessory (R) in place as shown.

DX8




 RX1

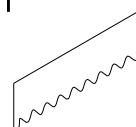


3.5*30

 
30

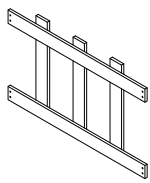

29 X1

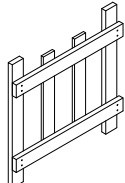 

31 X1

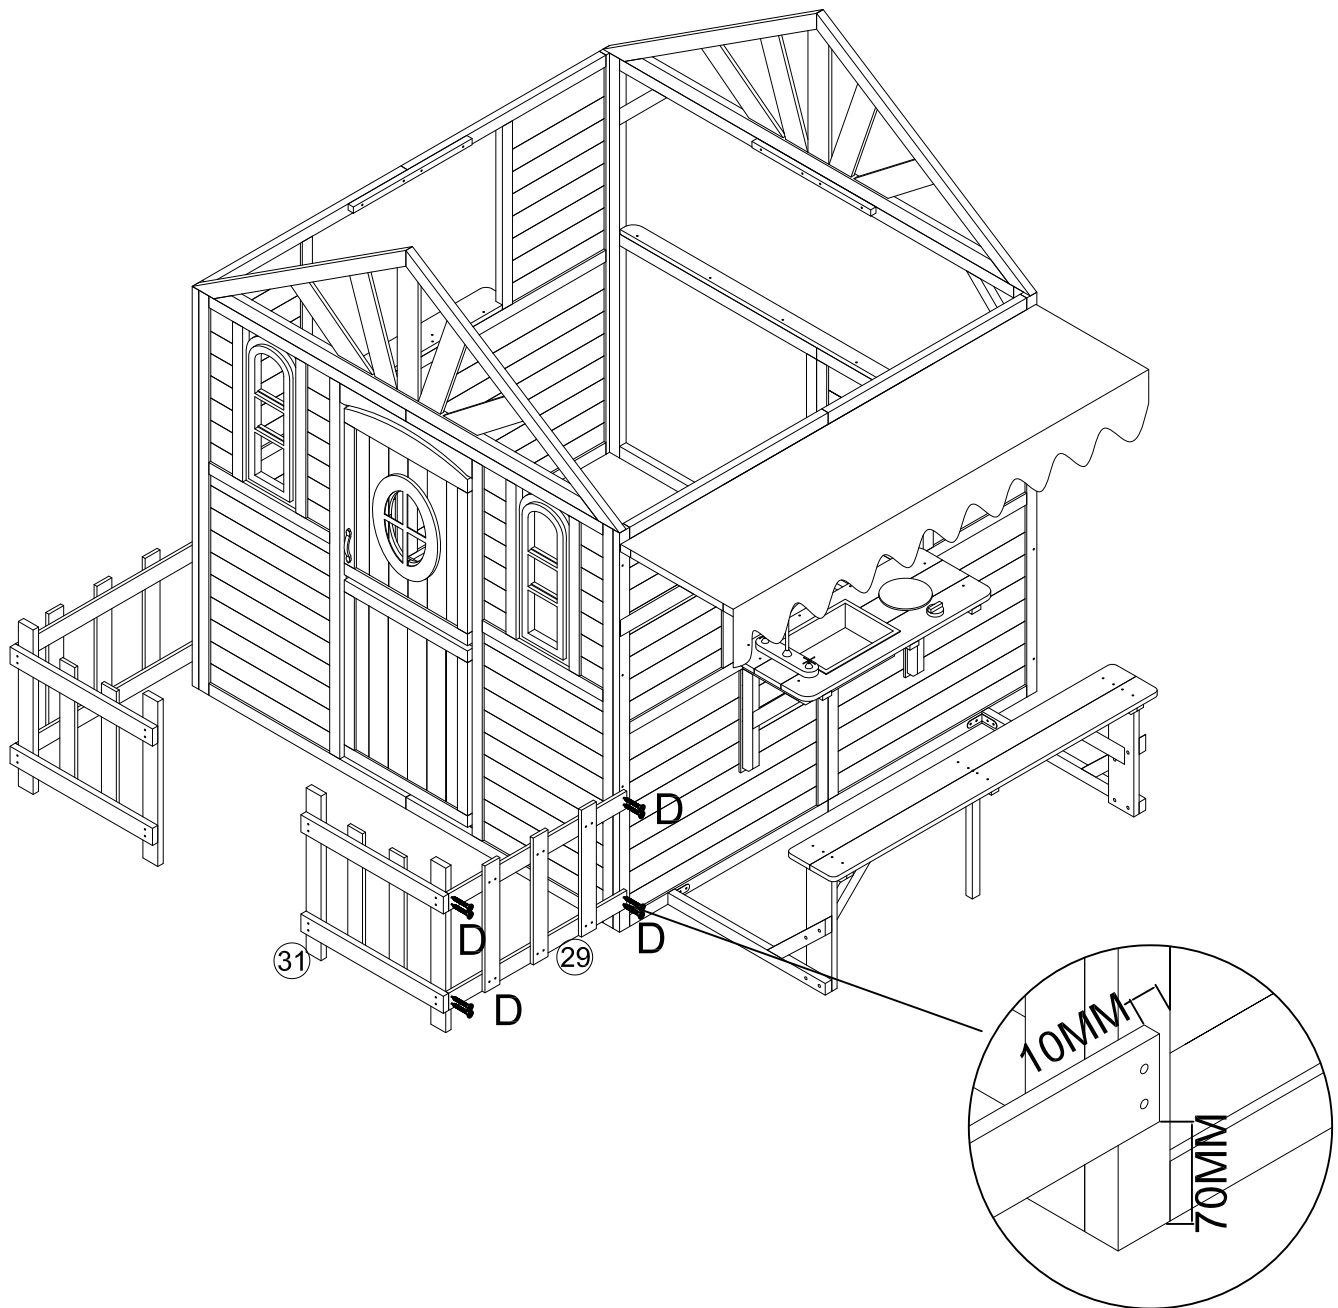 

Secure Part (29) to Part (31) using Screws (D).


Note: Leave 70 mm at the bottom and 10 mm at the end.

DX8




3.5*30

 
31

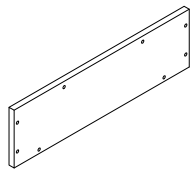



32 X2

 

35 X4

 

37 X2

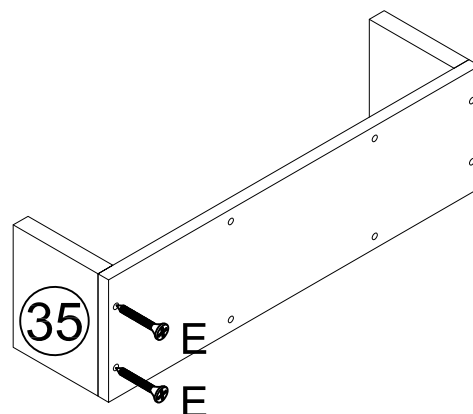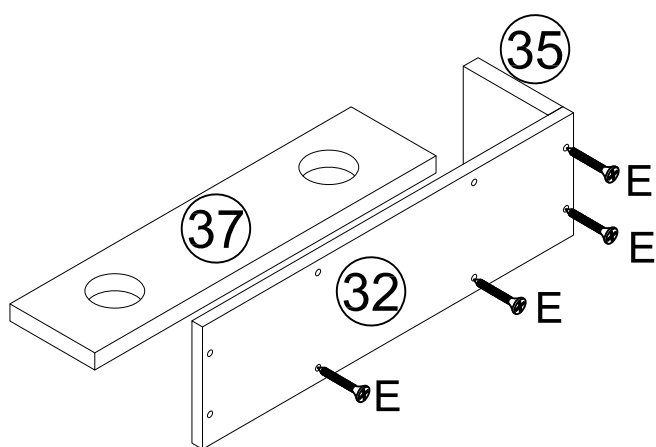  


X2

Secure Parts (32), (35), and (37) using Screws (E).


Note: Repeat this assembly twice.

 EX12



3*28

 32

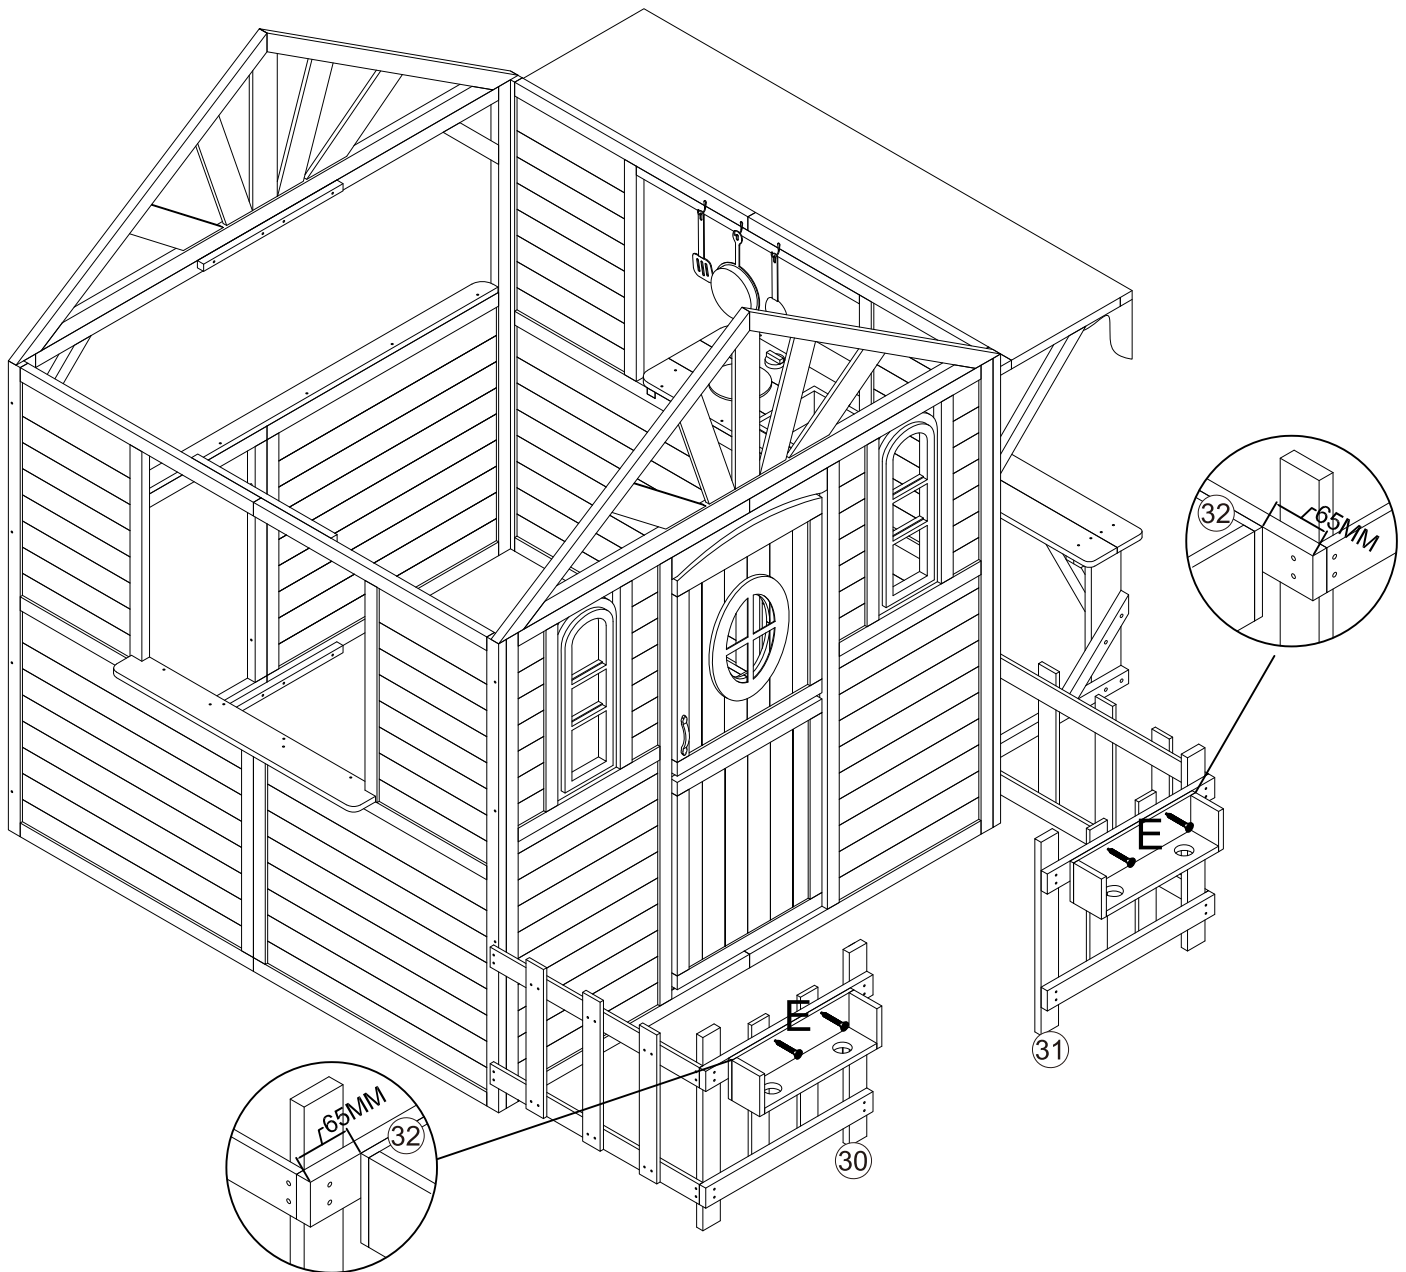

Secure Part (32) to Parts (30) and (31) using Screws (E).


Note: Leave 65 mm exposed on the outside.

EX4




3*28

 33

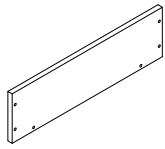


33 X2

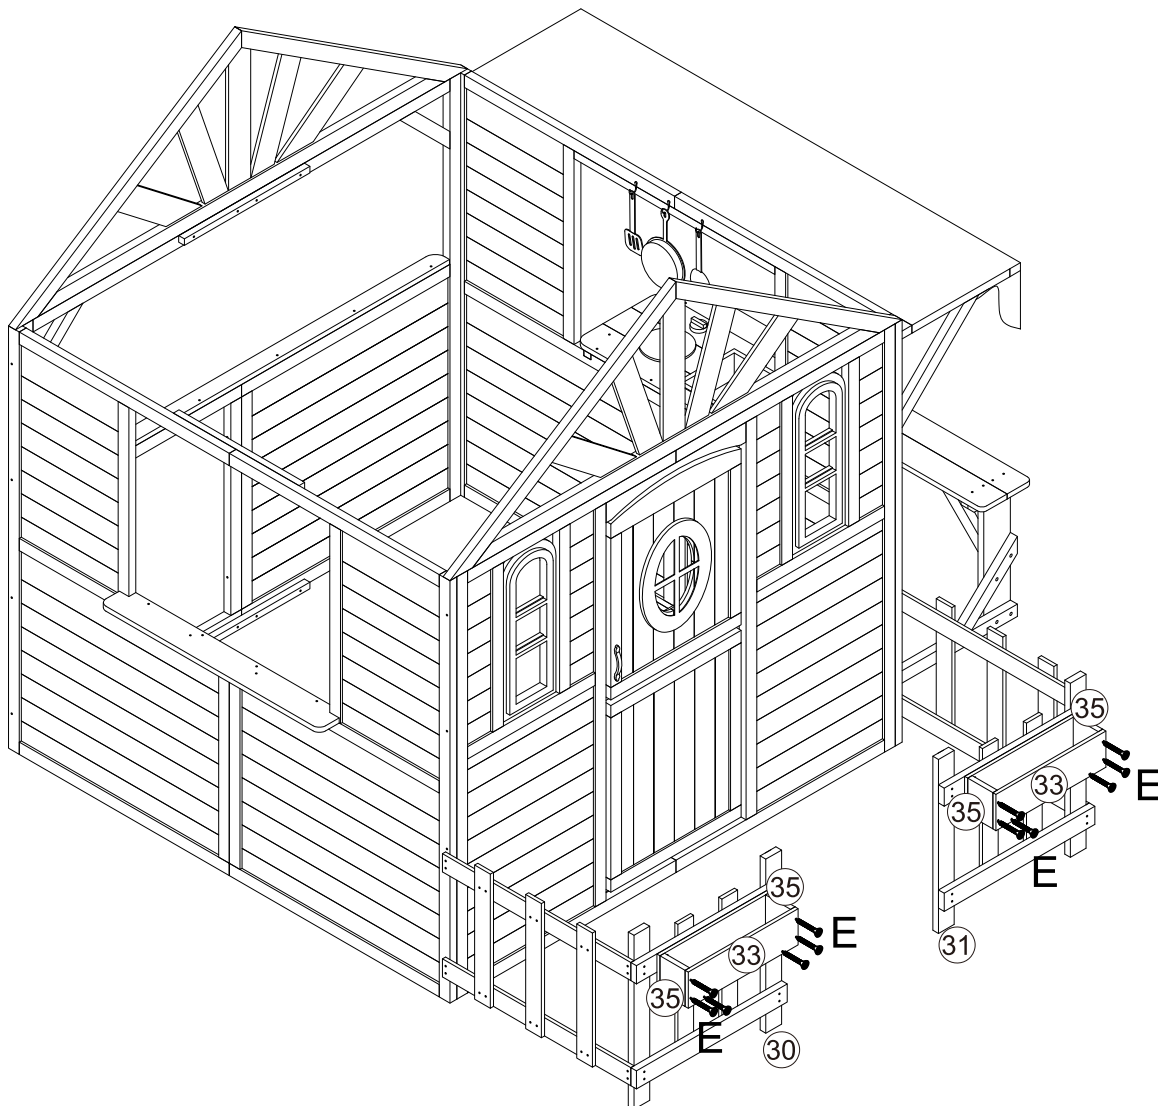 


Secure Part (33) to Part (35) using Screws (E).

 EX12




3*28

 
34

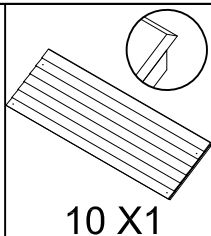


10 X1

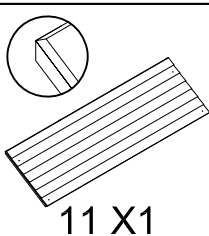 


11 X1

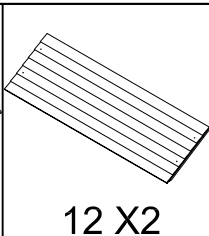 

12 X2

 


38 X4

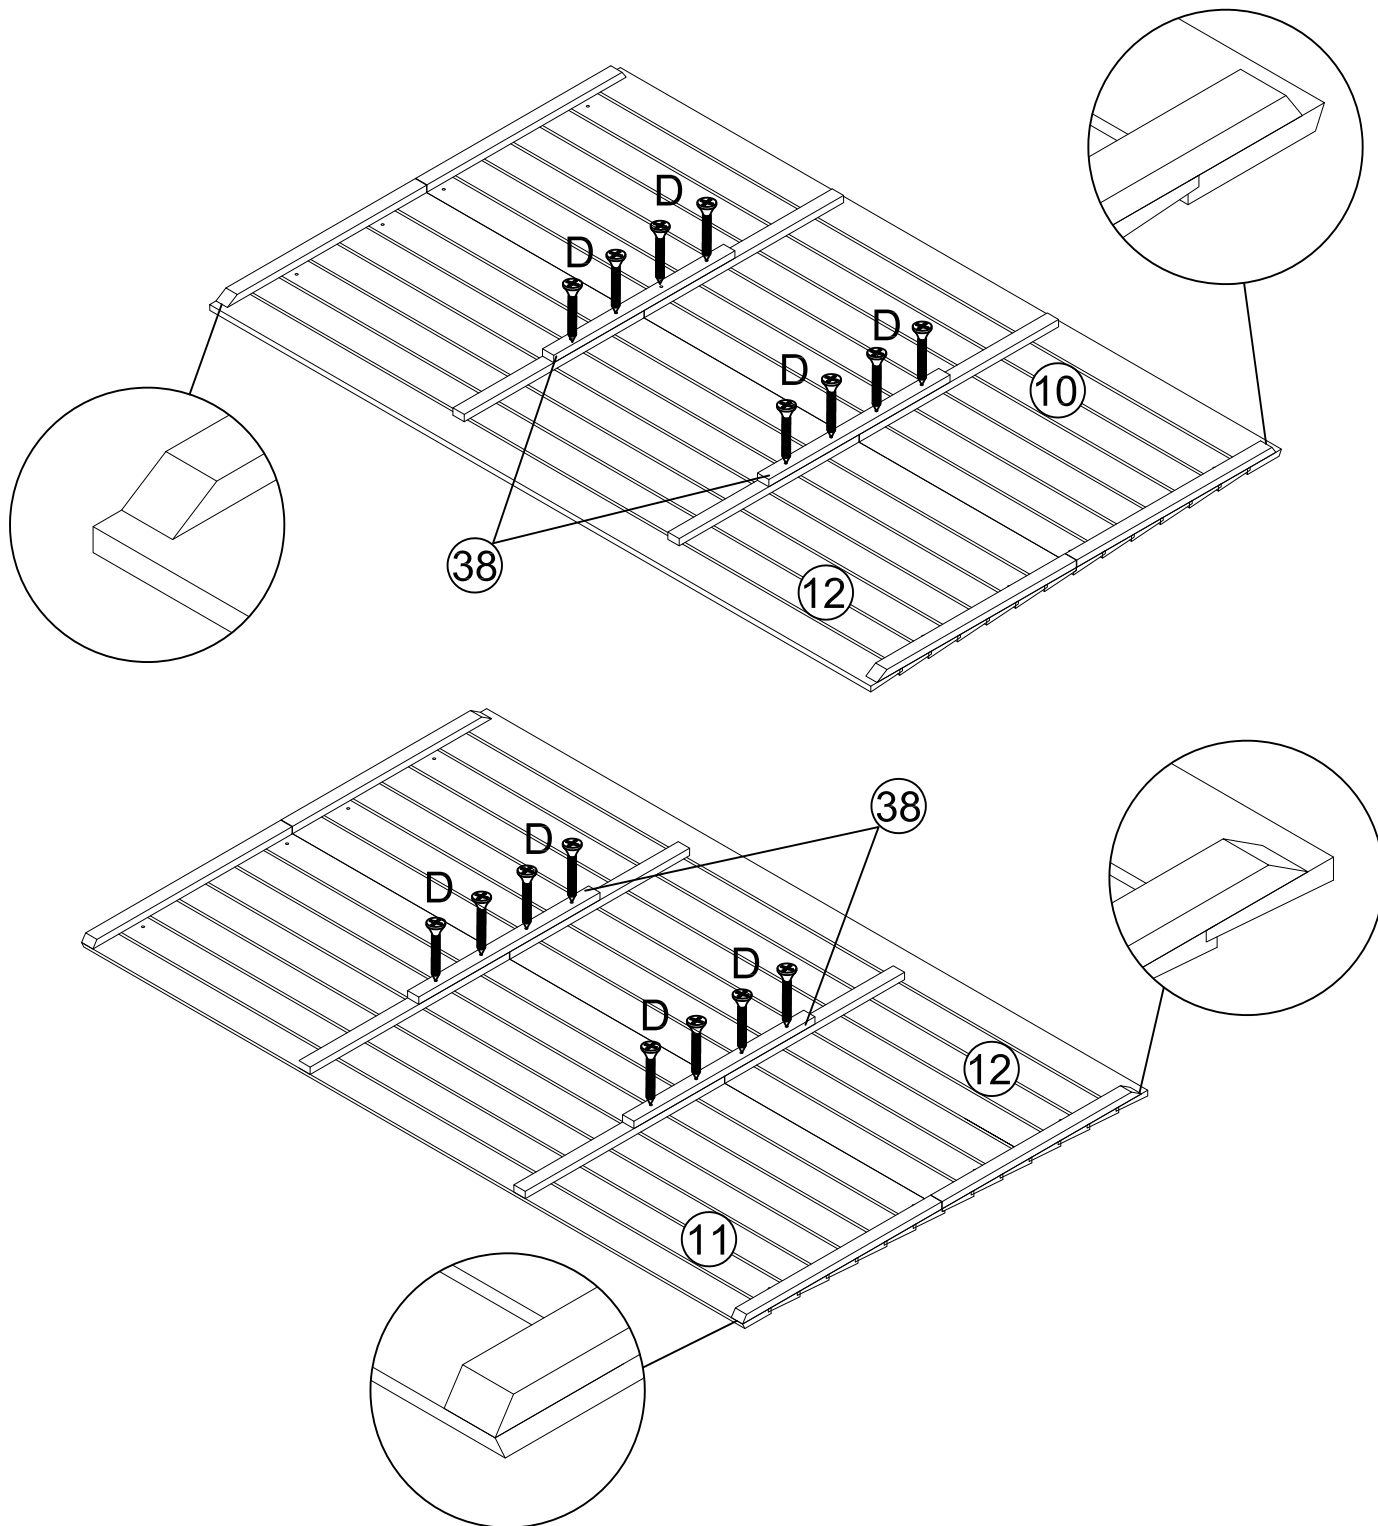 

Secure Part (38) to the retaining strips of Part (10) and Part (12), and Part (11) and Part (12), using Screws (D), as shown.

 
DX16



3.5*30

35

 
41 X2

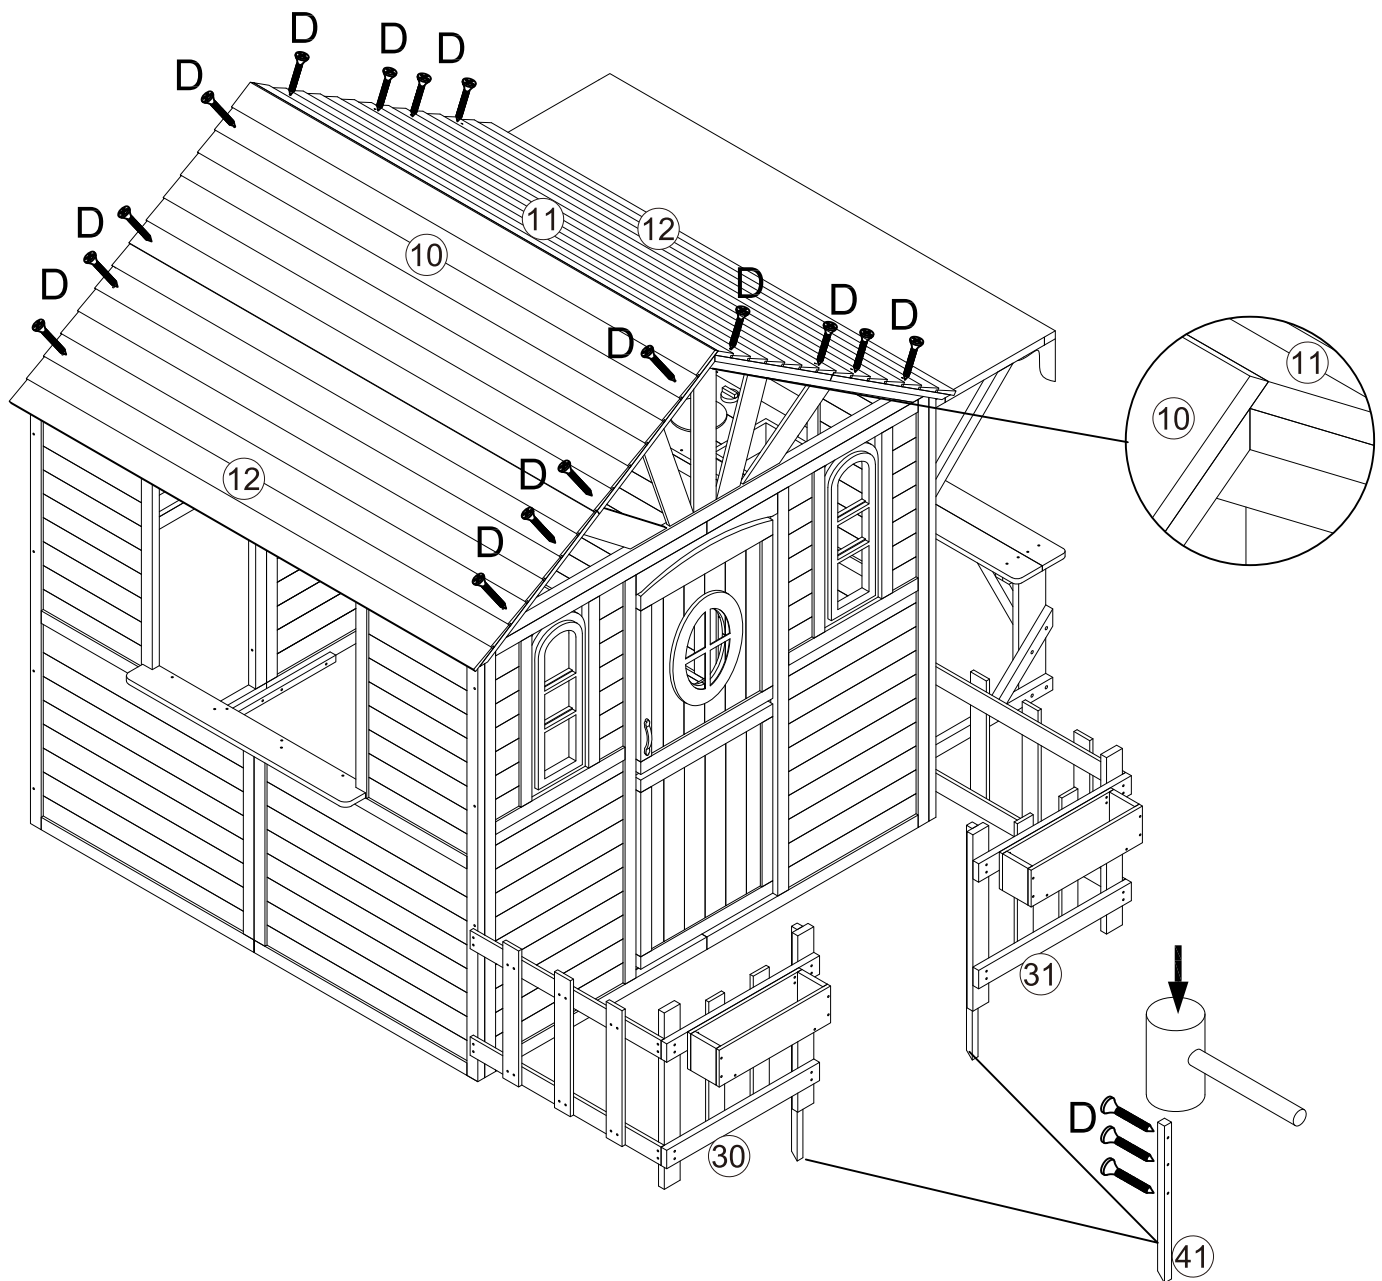

- Secure Parts (10), (11), and (12) using Screws (D), as shown.
- Secure Part (41) to Parts (30) and (31) using Screws (D).

Note: For grass surfaces, use a hammer. For hard ground, drill suitable pilot holes first.

 DX22



3.5*30

| Children's Wooden Playhouse

SKU:
C001442010

V1.0