 


Children's Wooden Playhouse

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

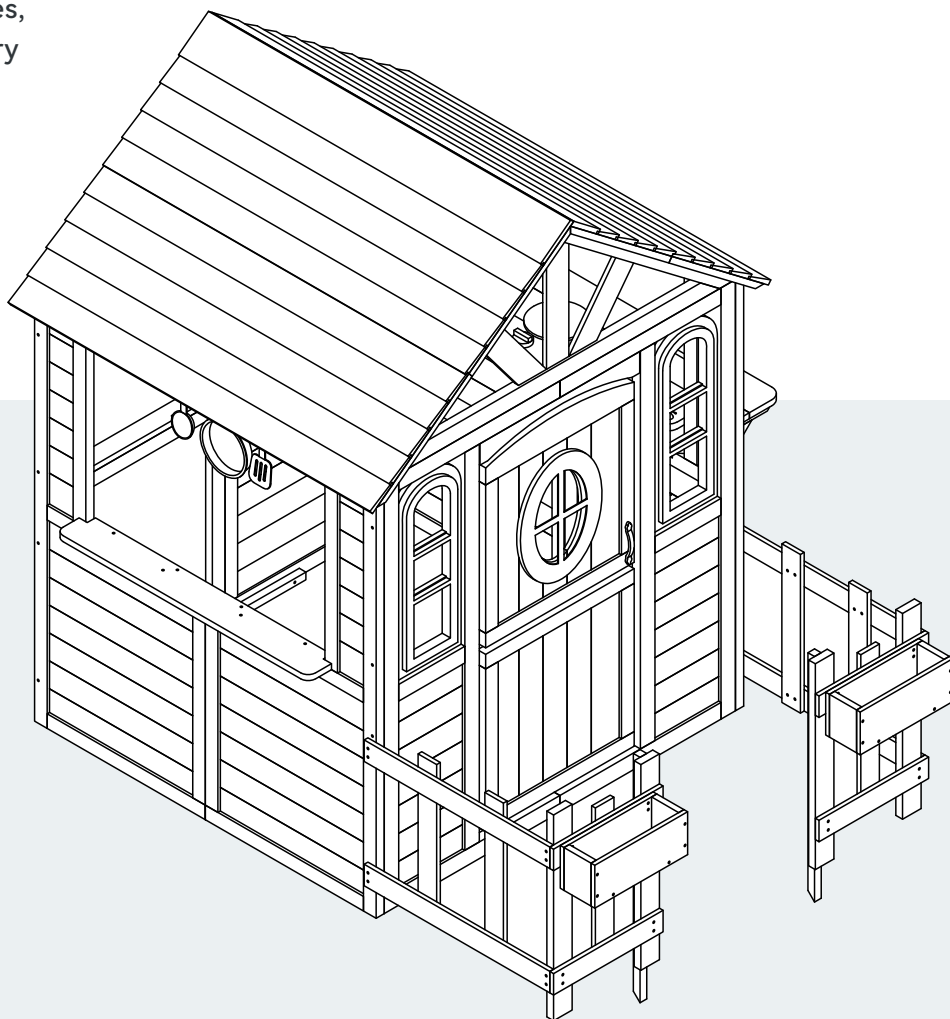

CONTACT US

3.5X4.7 FT

- Email: service@grandtunnel.com

In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

EN

Important – Please read these instructions carefully before starting the installation.

CUSTOMER SERVICE GUIDE

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “**Parts List**” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6X30mm screws.”

Contact Us:

· By Email:

Send an email to **service@grandtunnel.com**, with the subject line “Missing Parts Issue.” Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multiangle shots are recommended).
2. Email the photos/videos along with order details to **service@grandtunnel.com**, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: **service@grandtunnel.com**).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

- Customer Service Email: **service@grandtunnel.com**

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
Helpful Tips

To process your issue efficiently, please prepare the following information:























- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

Thank you for your trust and support! We hope you enjoy using our product!


Parts List

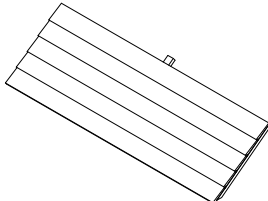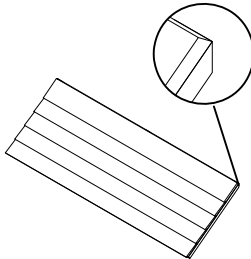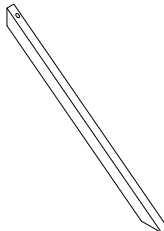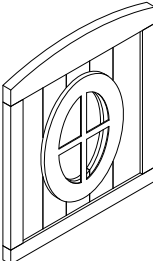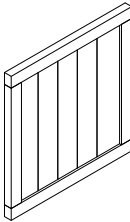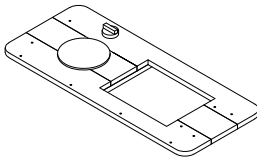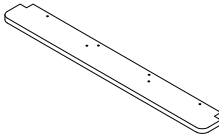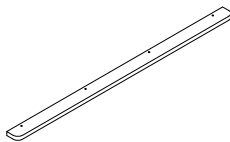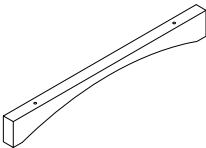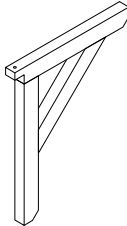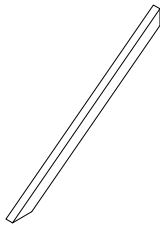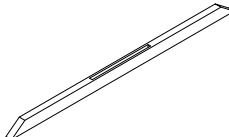1  1006X473MM X1	2  1006X473MM X1	3  1006X460MM X1	4  1006X460MM X1	5  1006X473MM X1	
7  1006X460MM X1	8  1006X460MM X1	10  975X360MM X2	11  975X349MM X1	12  621X39MM X2	
13  450X400MM X1	14  414X400MM X1	15  635X270MM X1	16  680X85MM X1	17  876X45MM X1	
18  430X50MM X1	19  324X270MM X2	20  200X70MM X1	21  621X39MM X2	22  861X39MM X2	23  310X60MM X2

                      
Parts List

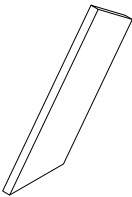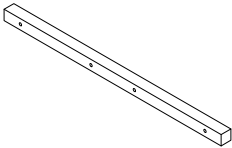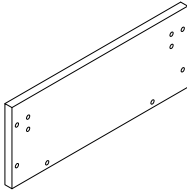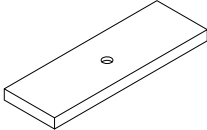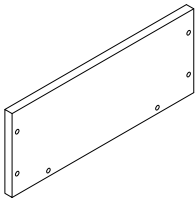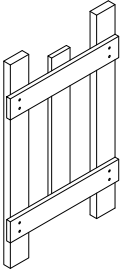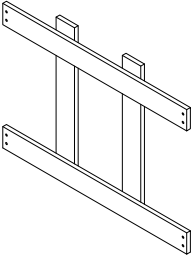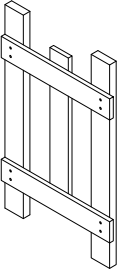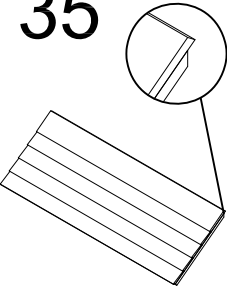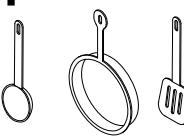24	25	26	27	28	29
					
229X60MM	400X18MM	630X18MM	250X100MM	222X73MM	100X73MM
X4	X7	X2	X2	X2	X4
30	31	32	33	34	35
					
250X100MM	475X295MM	500X370MM	475X295MM	1006X473MM	975X360MM
X2	X1	X2	X1	X1	X1
A	B	C	D	E	F
					
3.5*60	3.5*45	3.5*35	3.5*30	3*22	3*15
X18+1	X18+1	X46+2	X54+3	X26+2	X4+1
G	H	I	J	K	L
					
3*18		Ø6*20			
X44+2	X2	X10+1	X1	X4	X1
M	N	O	P		
					
X1	X1	X3	X1		

 
1

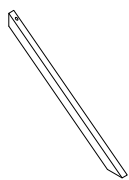

12 X2

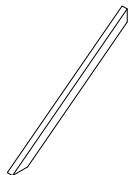 

21 X2

 


22 X2



23 X2




 24 X4

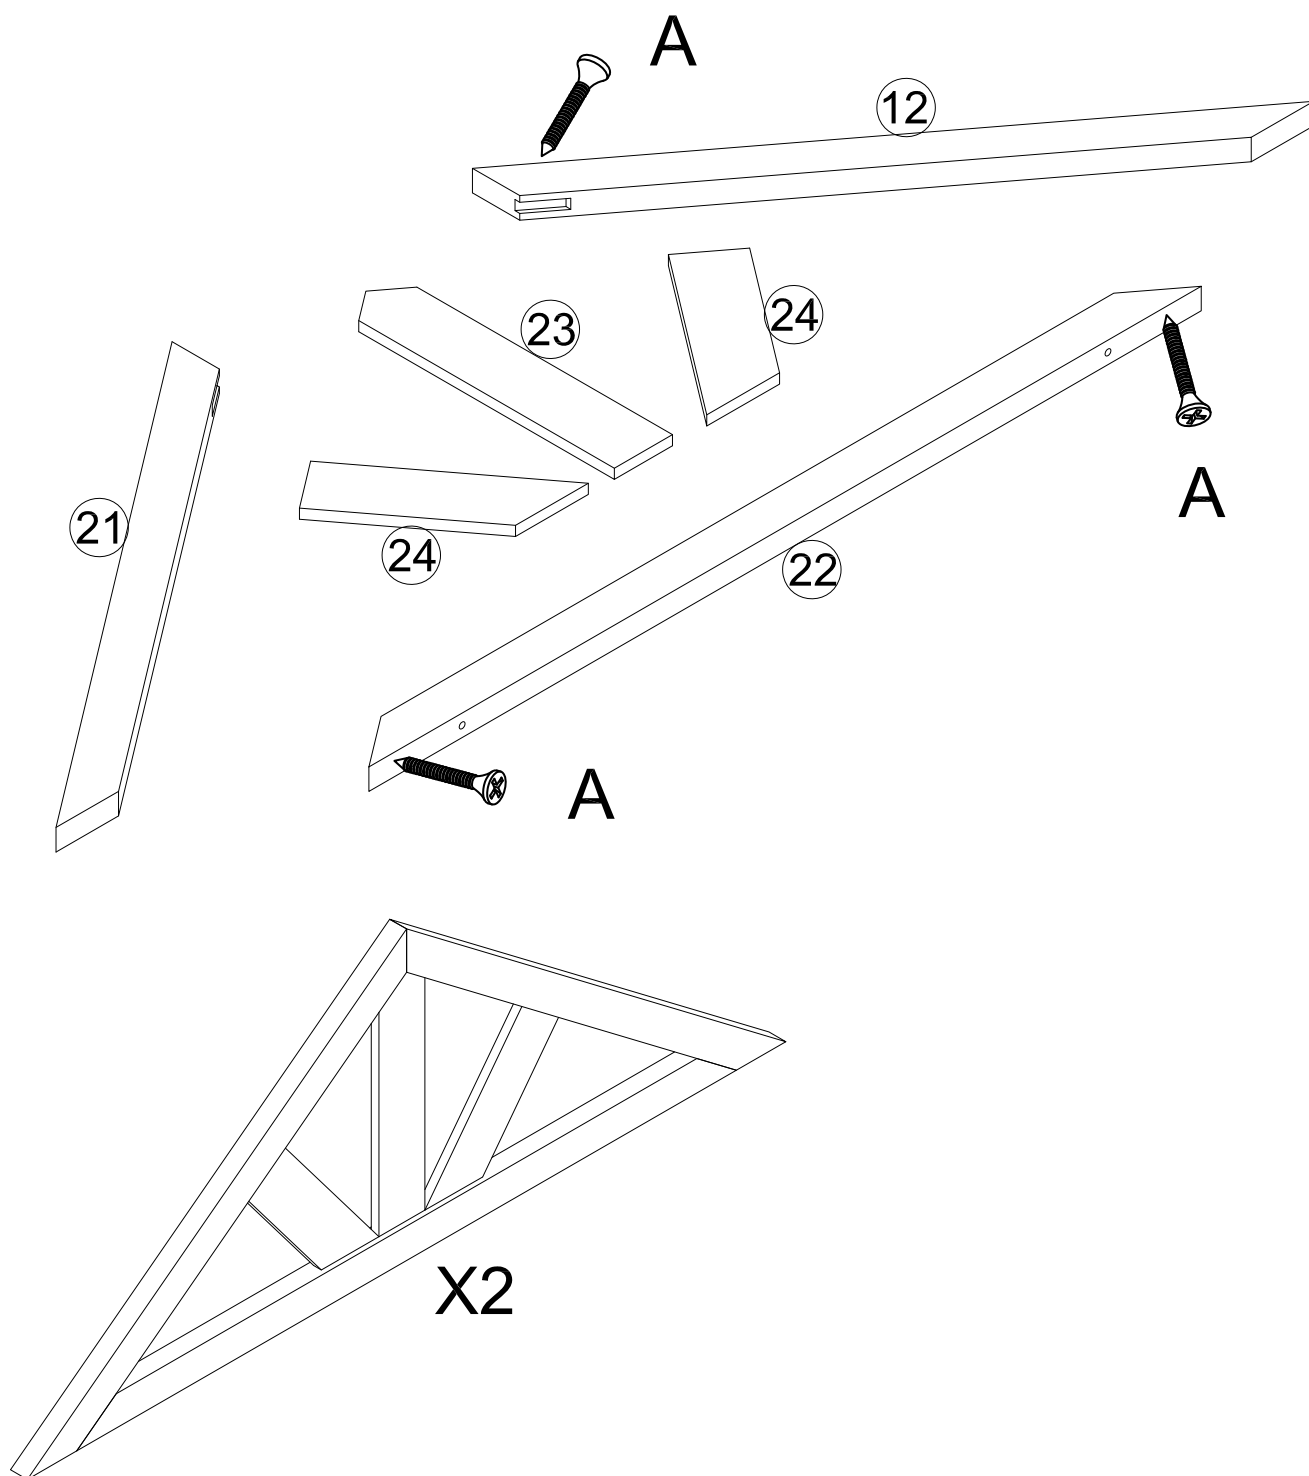


Assemble parts (21), (12), (23), (24), and (22), then secure with screws (A). (Repeat twice)

 AX6




3.5*60

 
2




1X1

 

2 X1

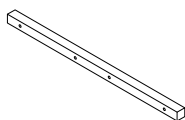 

25 X1

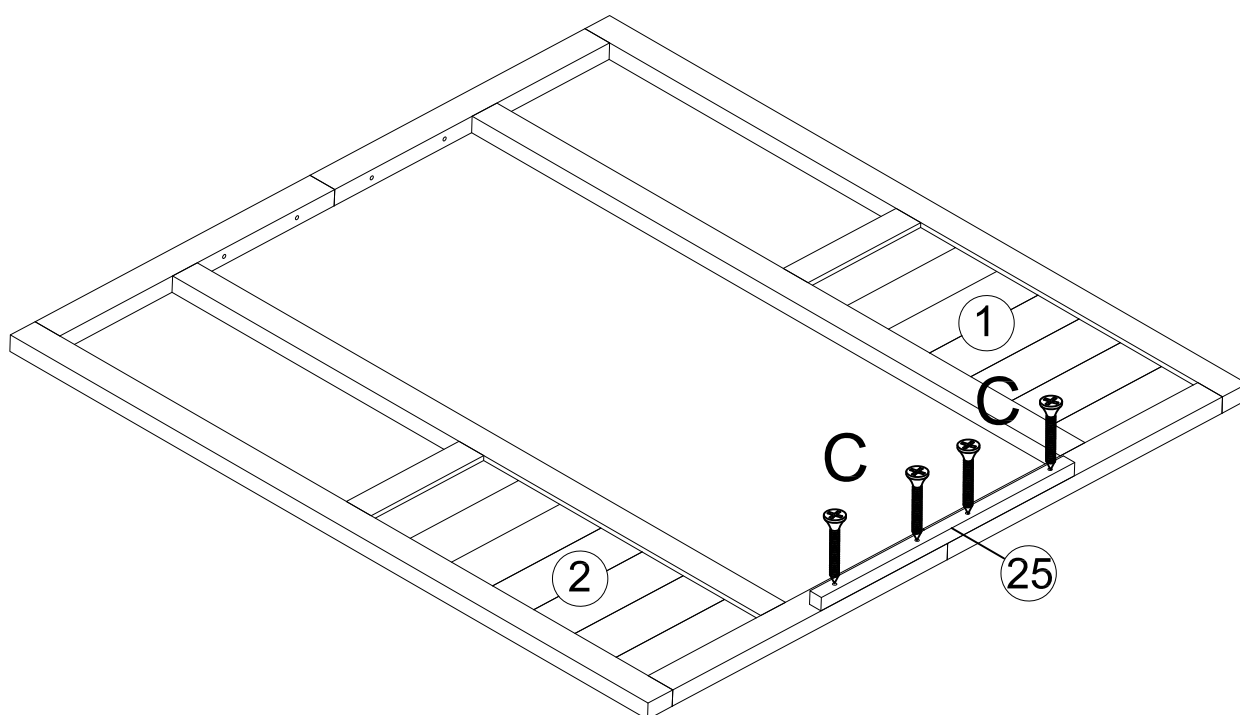 


Use screws (C) to fix part (25) onto parts (2) and (1).

CX4



3.5*35

 3

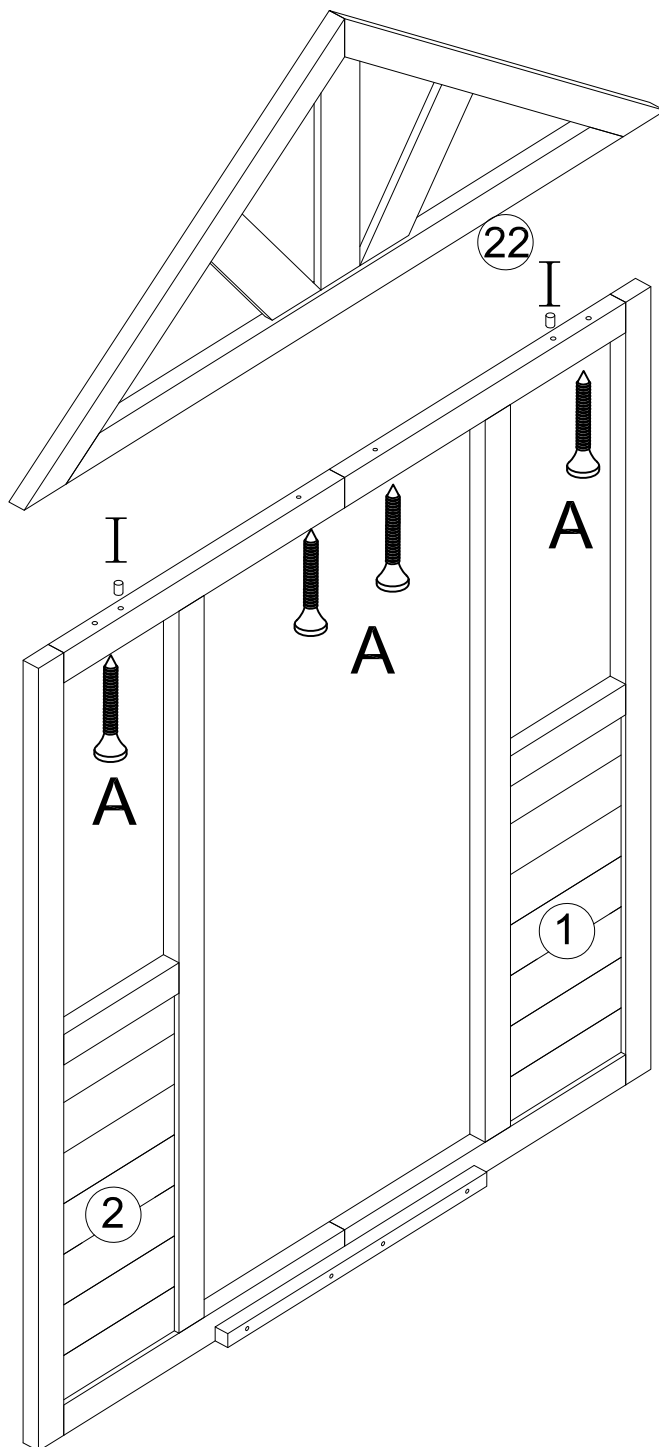

Connect parts (2) and (1) to part (22) using wooden dowels (I), then secure with screws (A).

AX4




3.5*60

IX2



Ø6*20

 4

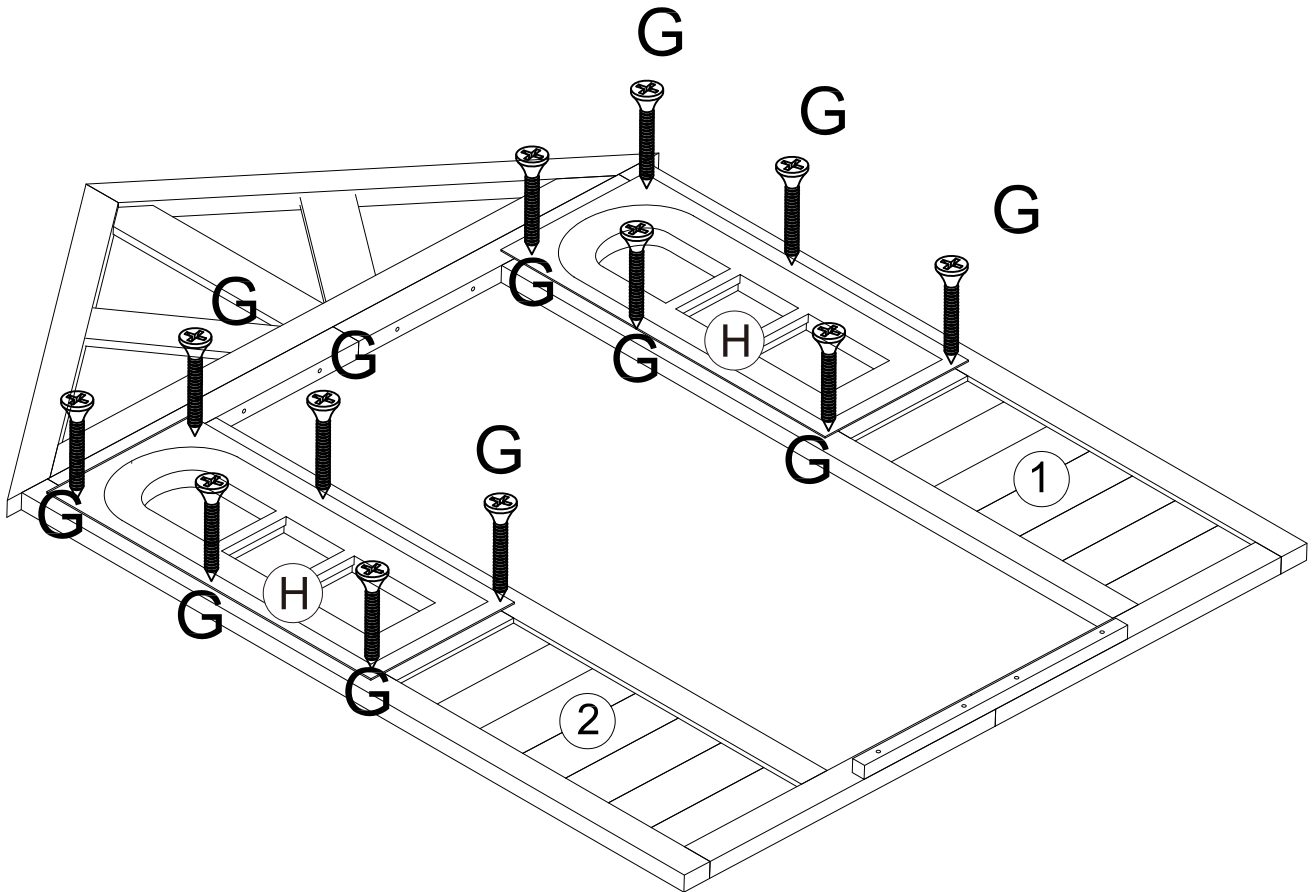


Attach accessory (H) to parts (2) and (1) using screws (G).

GX12




 HX2




3*18

 5

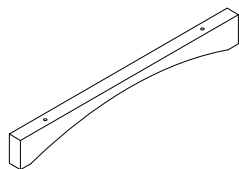


18 X1

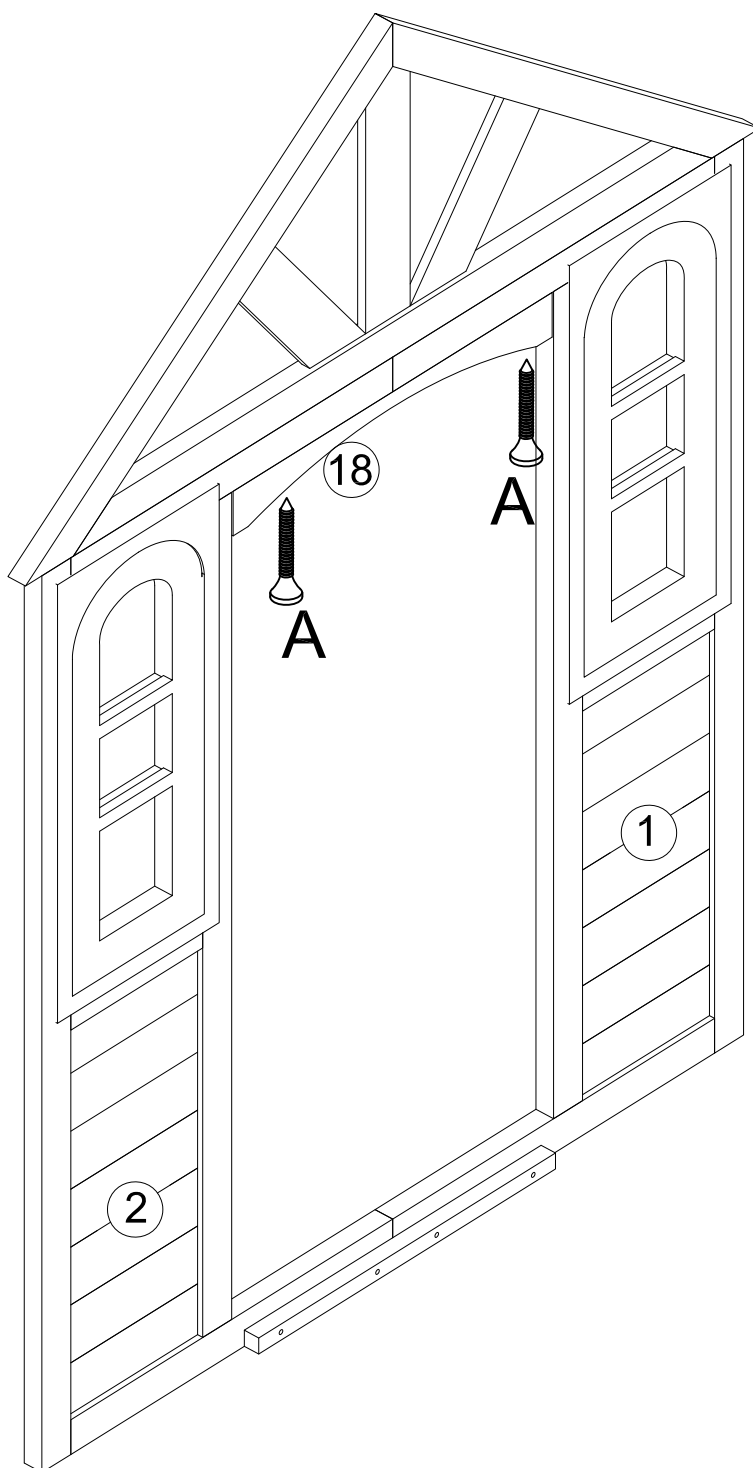 


Fix part (18) onto parts (1) and (2) using screws (A).

 AX2




3.5*60

 
6



3 X1

 

4 X1

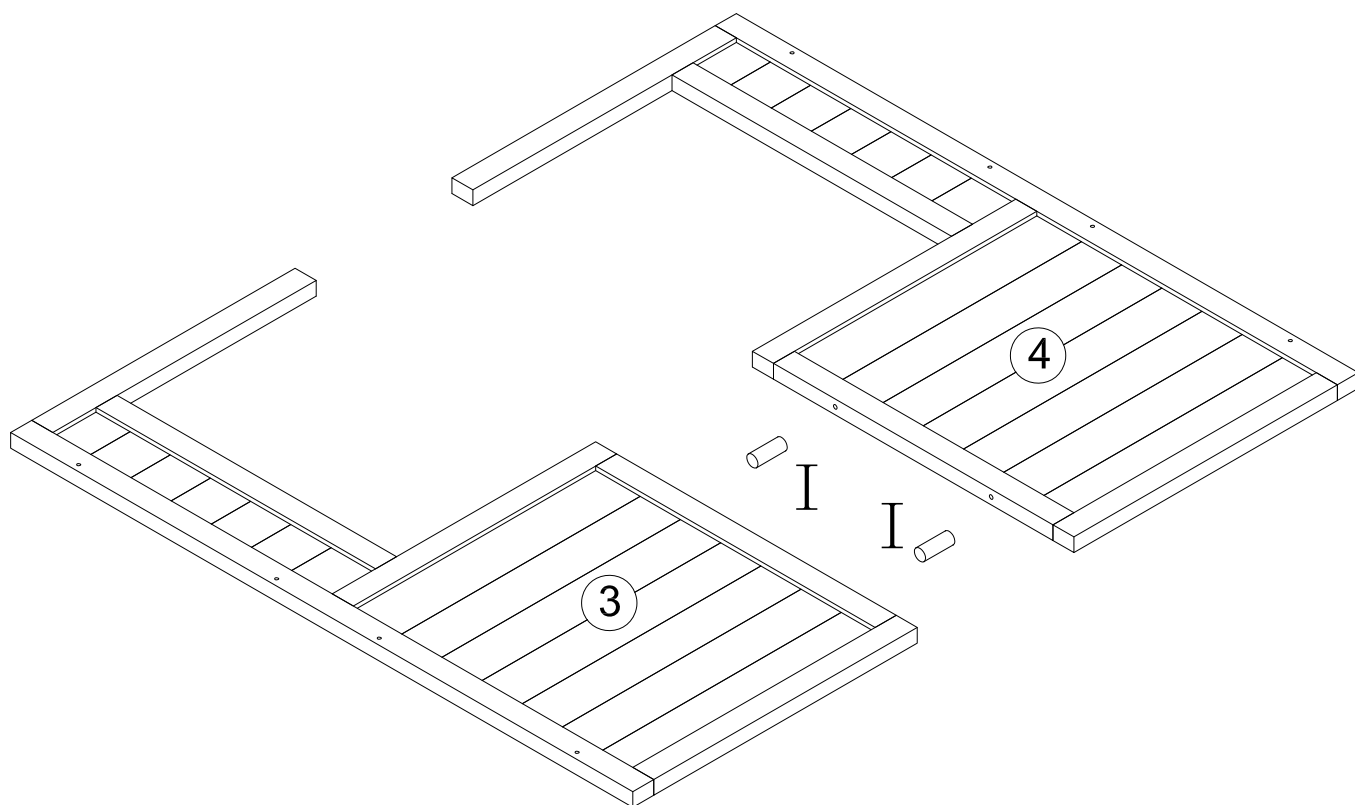 


Use wooden dowels (I) to connect part (3) and part (4).

IX2




Ø6*20

 7

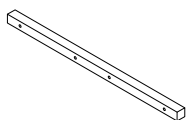

25 X1

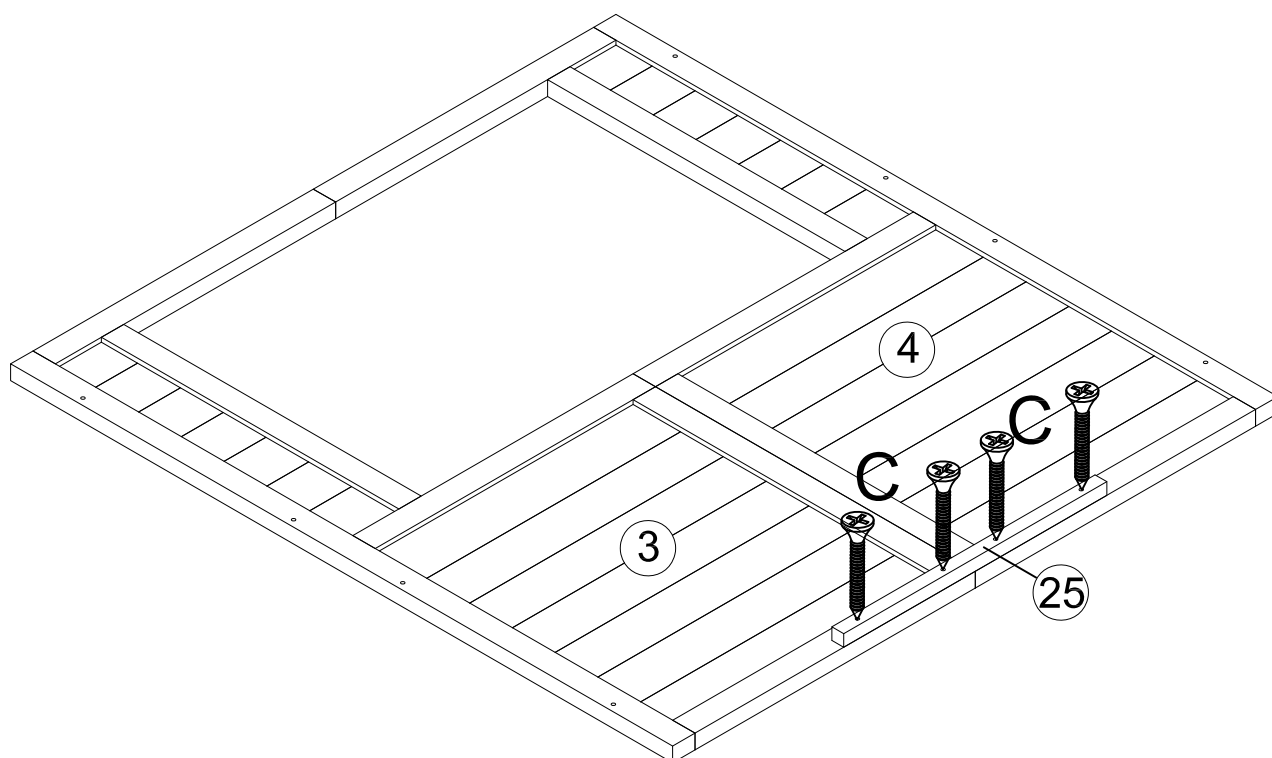 


Use screws (C) to fix part (25) to the inner sides of parts (3) and (4).

CX4




3.5*35

 8

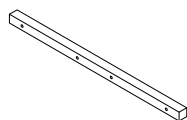

25 X2

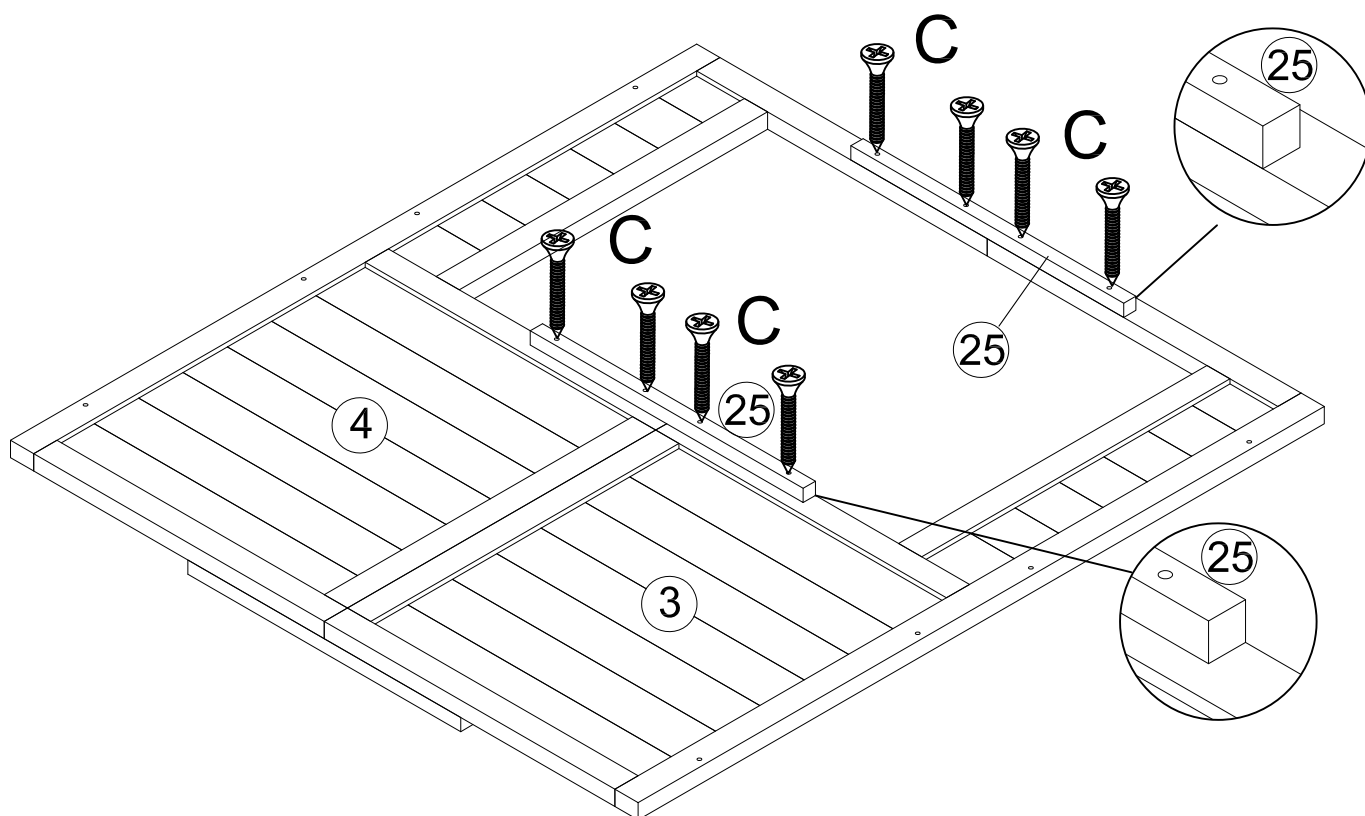 

Use screws (C) to fix part (25) to the outer sides of parts (4) and (3).


Note: Align the bottom edge of the upper piece and the top edge of the middle piece.

CX8




3.5*35

 9

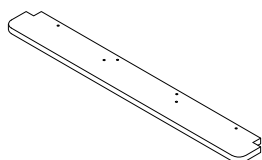

16 X1

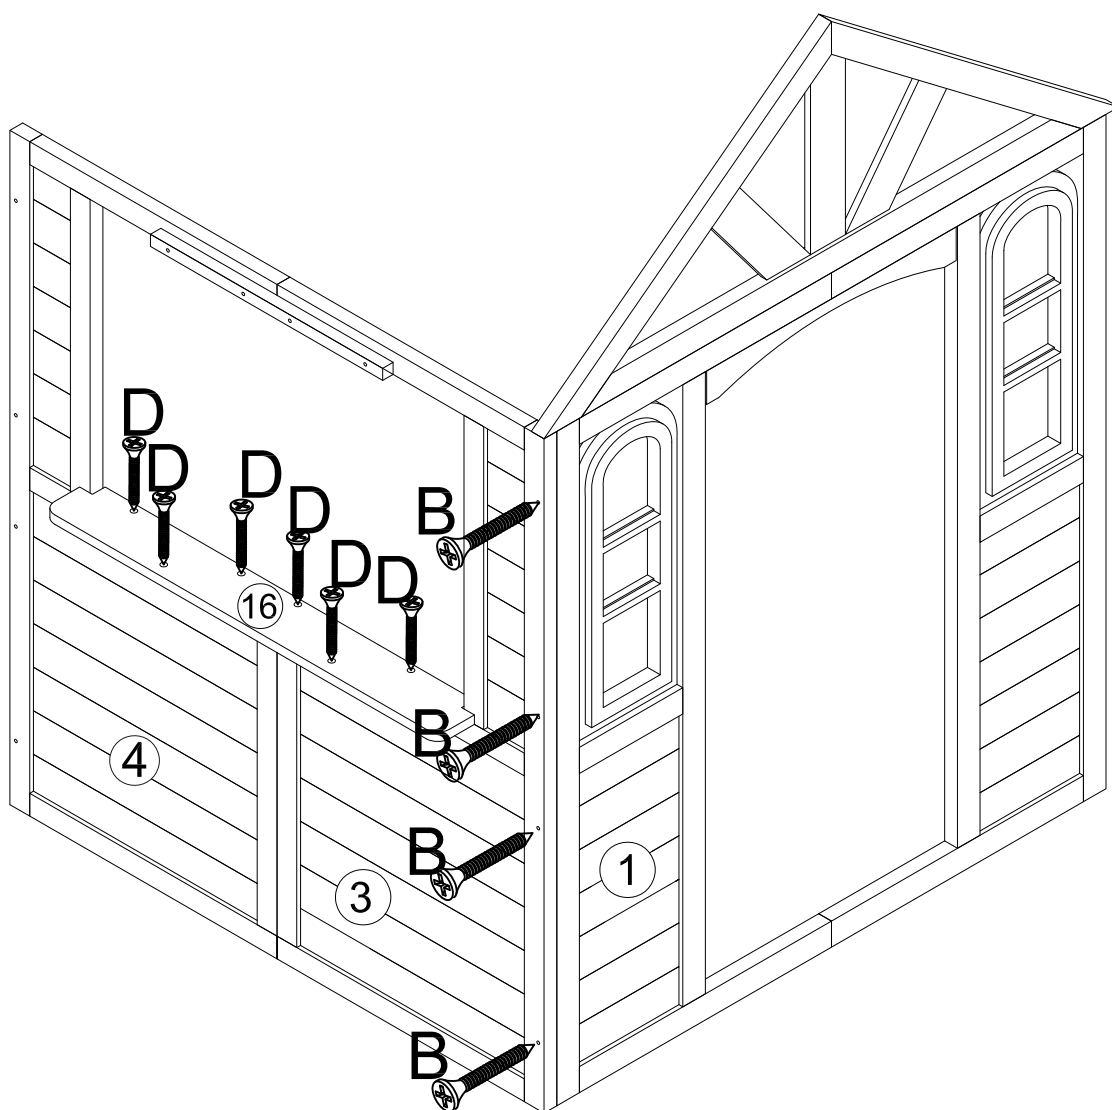 

- a. Use screws (B) to secure part (3) to part (1).
- b. Use screws (D) to fix part (16) onto parts (4), (3), and (25).

BX4




3.5*45

DX6




3.5*30

 
10



13 X1

 

14 X1

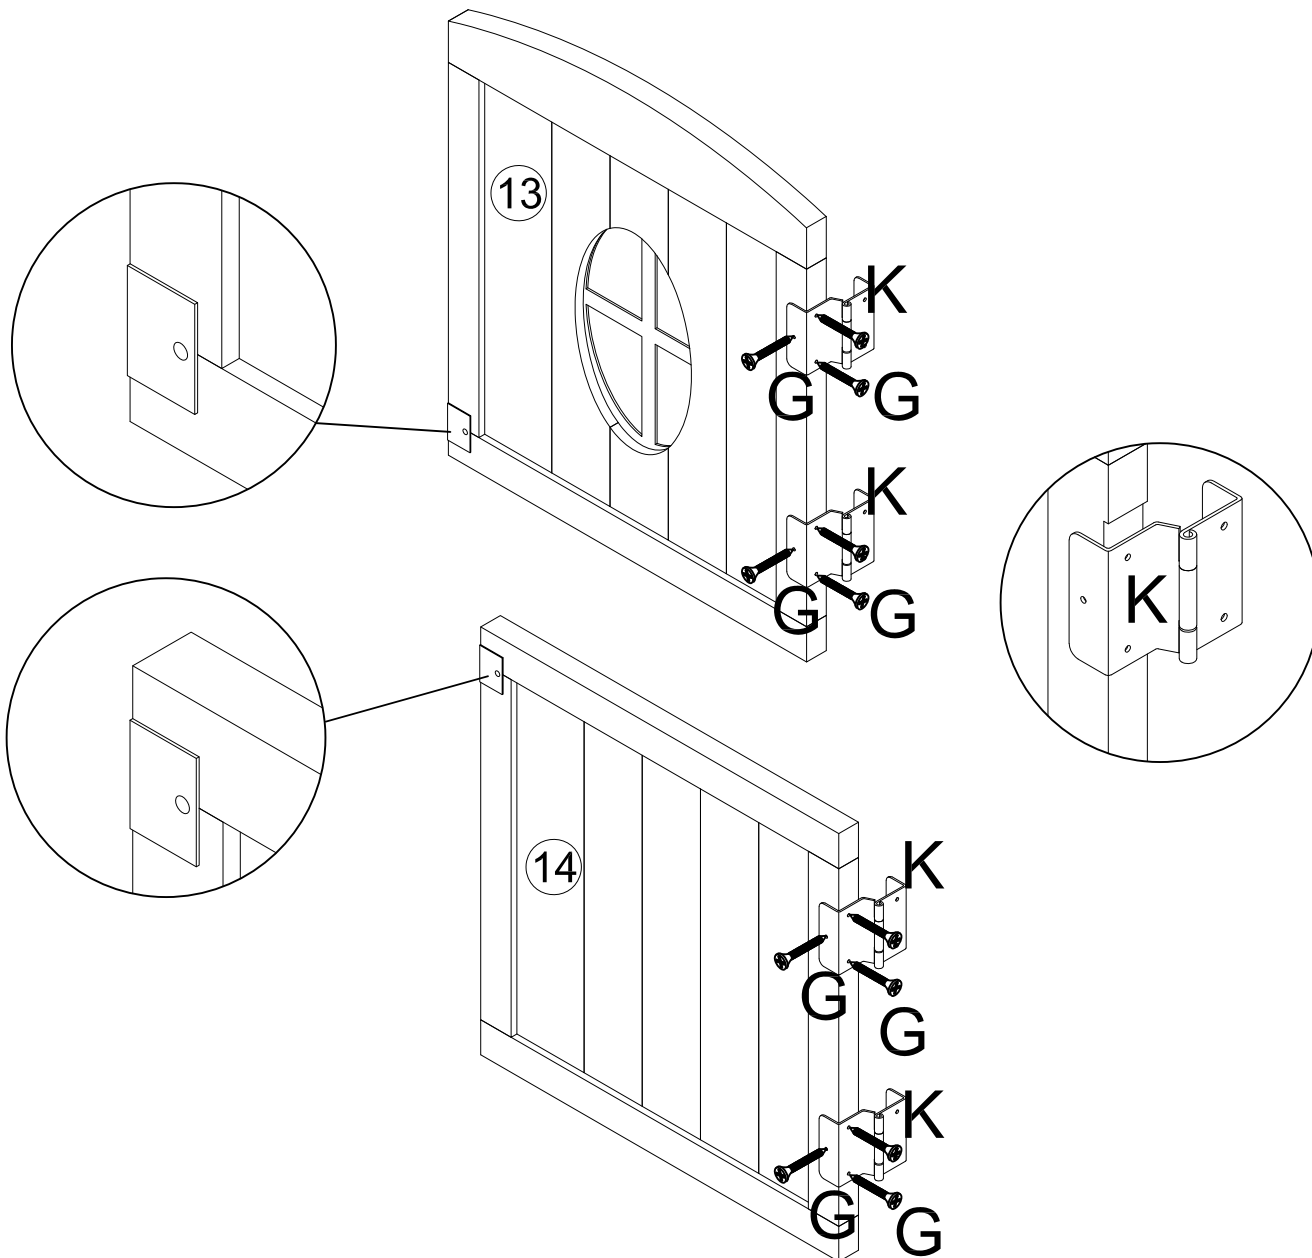 

Attach accessory (K) to parts (13) and (14) respectively using screws (G).


Note: Insert accessory (K) into the slot/opening as shown.

GX12




3*18

 KX4



11

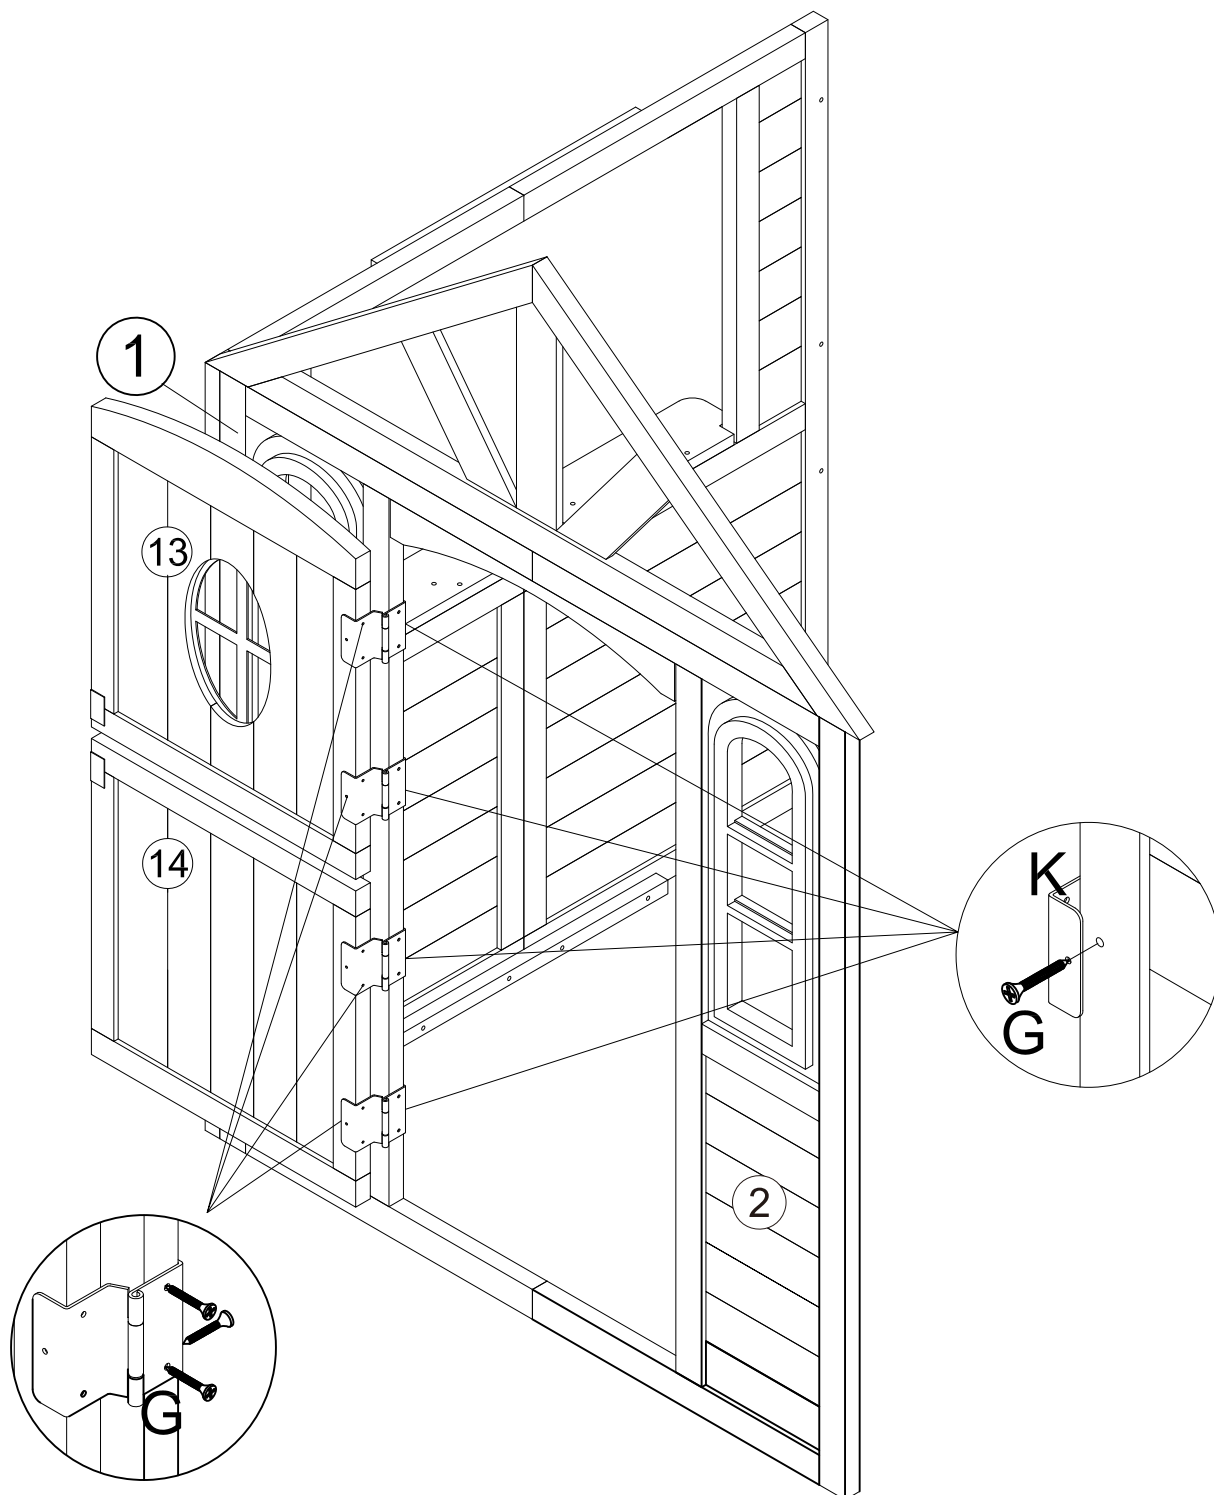 

Secure parts (13) and (14) to part (1) using screws (G).



Note: Ensure accessory (K) aligns with the pre-drilled holes.

GX12



3*18

  12

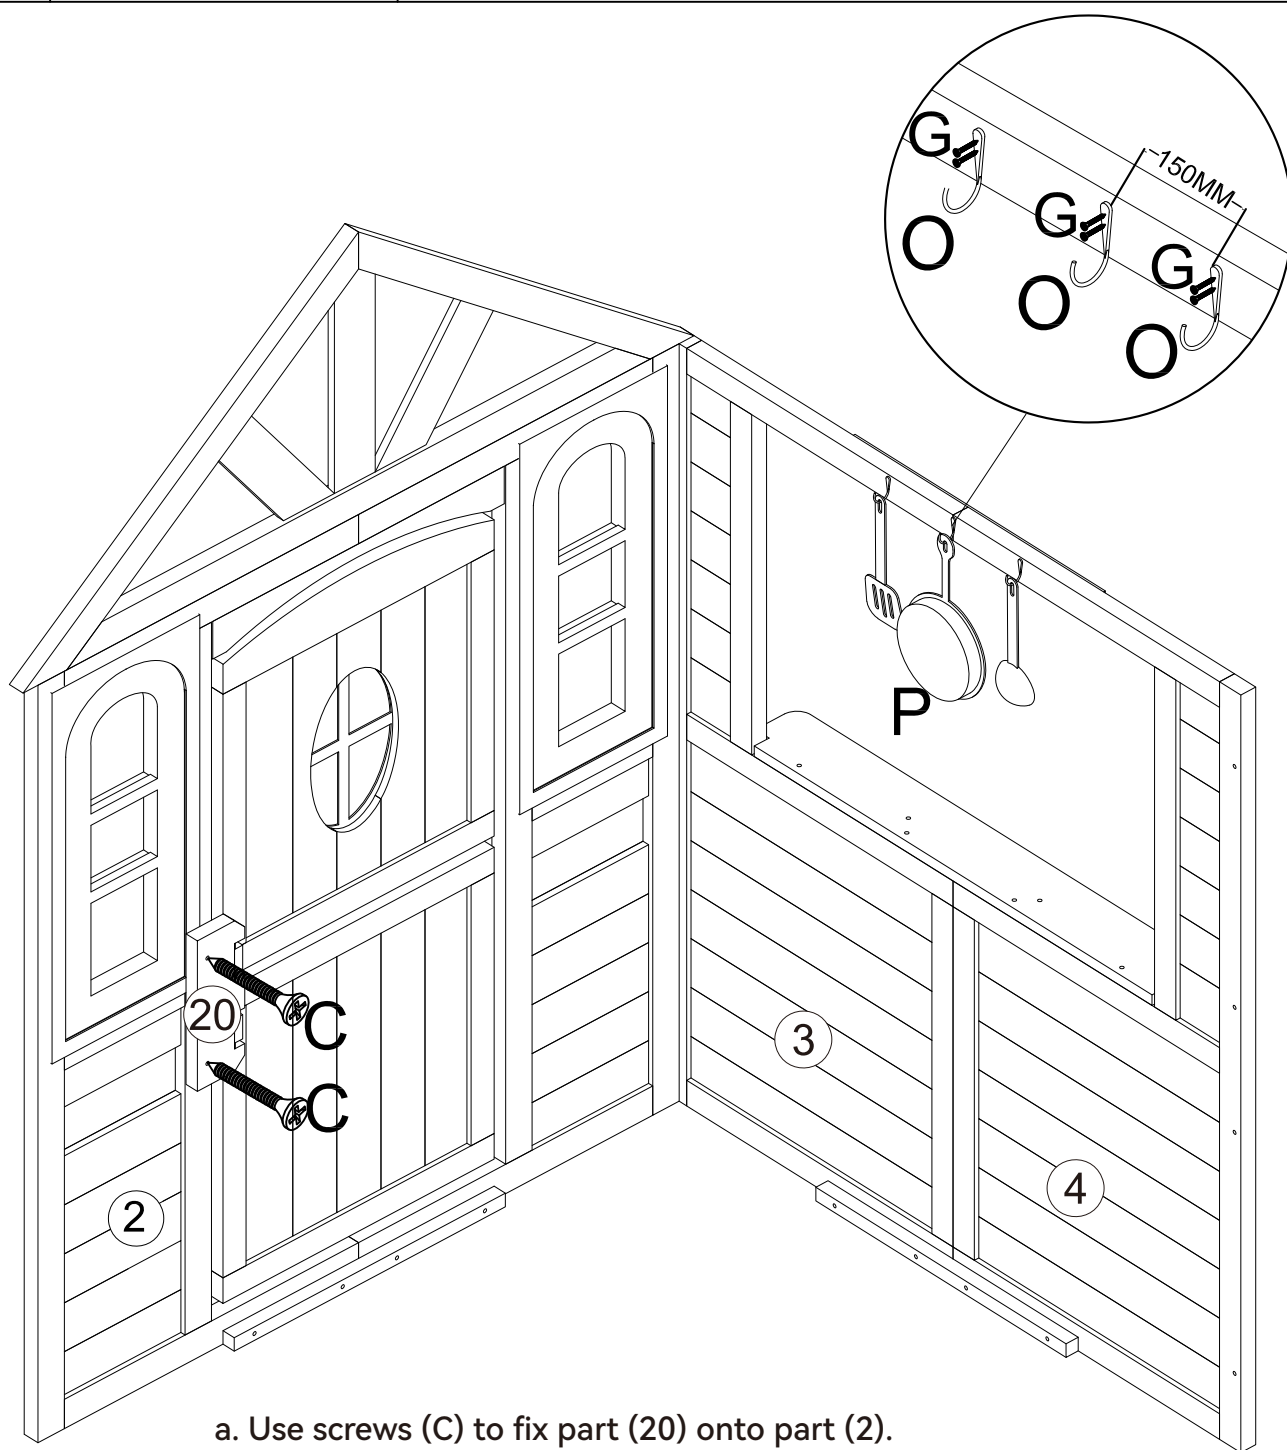

a. Use screws (C) to fix part (20) onto part (2).

Note: Align with the magnetic catch.

b. Attach accessory (O) to parts (3) and (4) using screws (G).

c. Hang accessory (P) onto accessory (O).

CX2



3.5*35

GX6




3*18


OX3



 
PX1

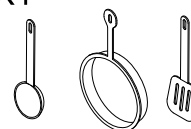


13

 

7 X1

 


8 X1

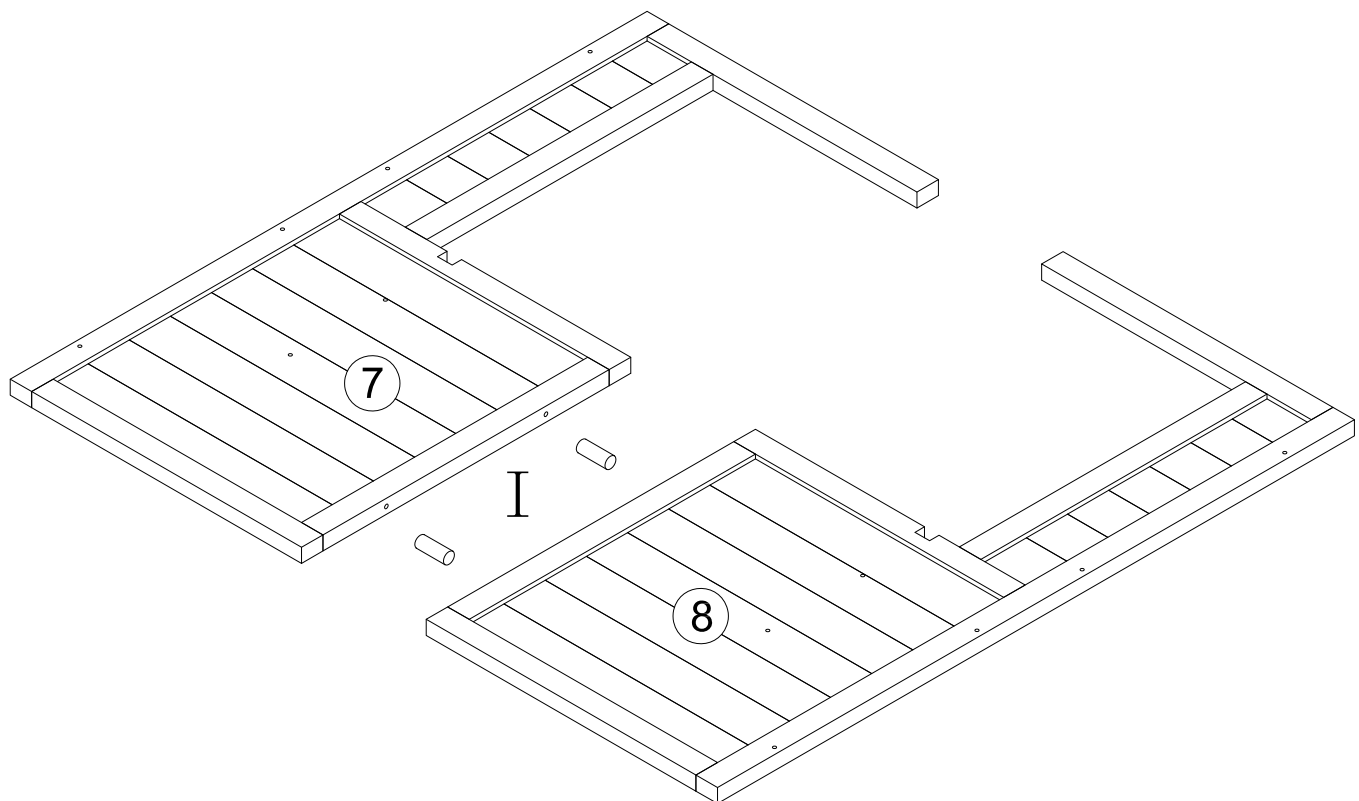 


Use wooden dowels (I) to connect part (7) and part (8).

 IX2




Ø6*20

 14

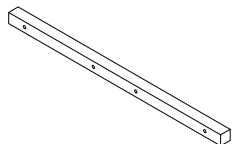

25 X2

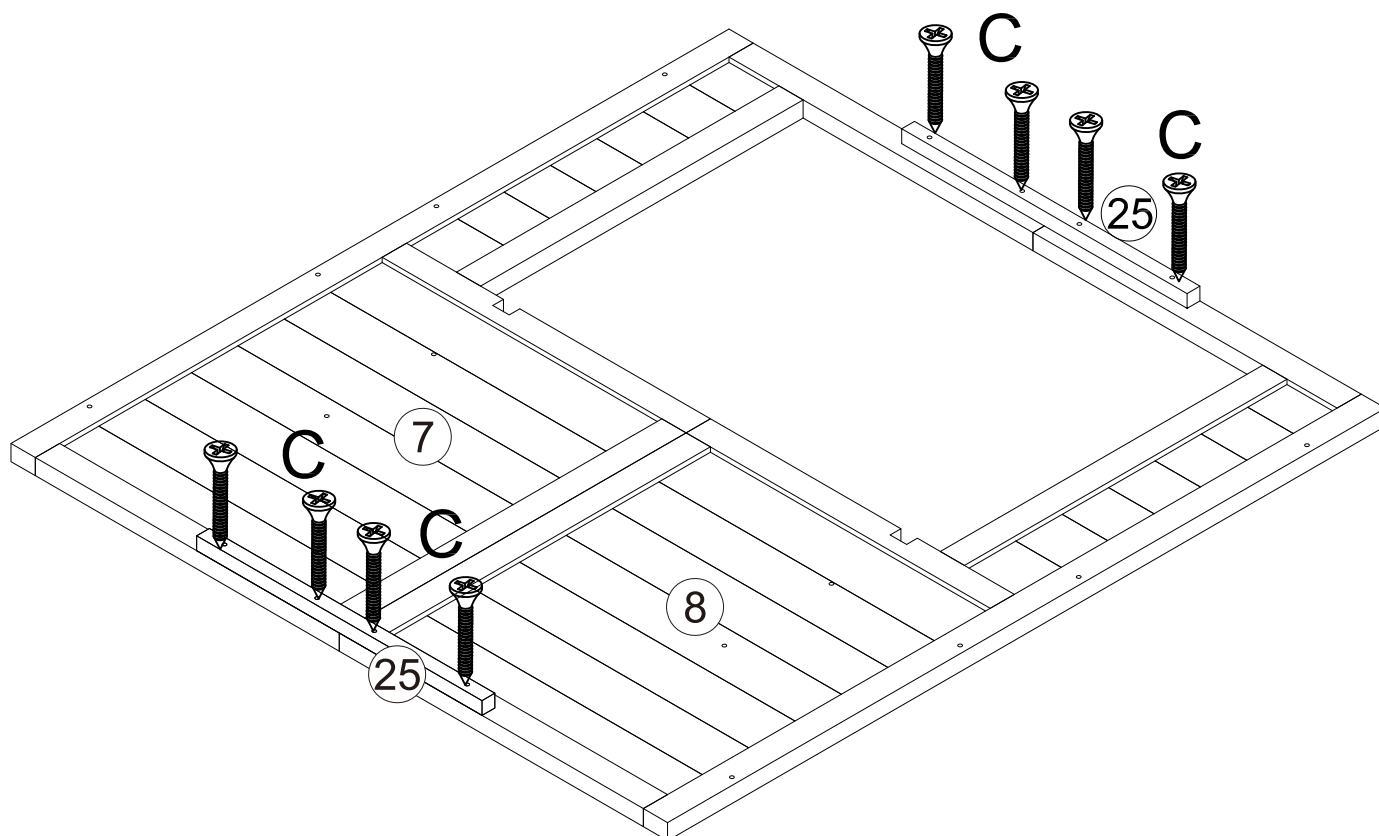 




Use screws (C) to fix part (25) to the inner sides of parts (7) and (8).

CX8



3.5*35

   15

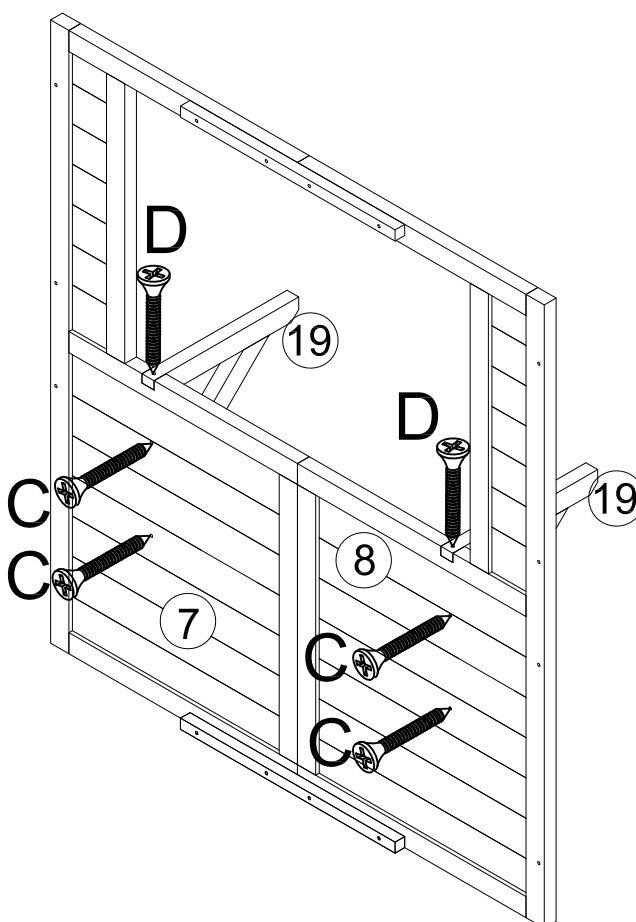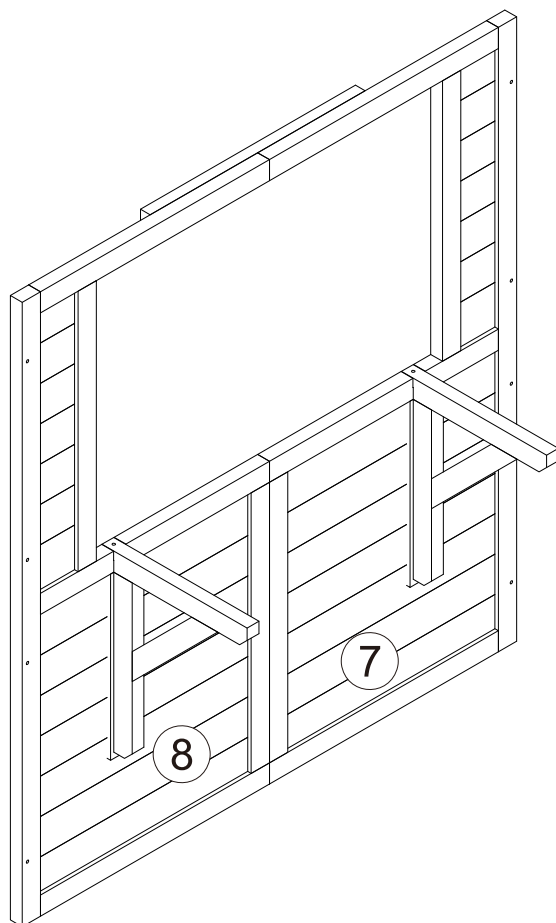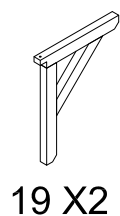


Use screws (C) and (D) to fix part (19) to the outer sides of parts (7) and (8).

CX4




3.5*35

 DX2



3.5*30

 16

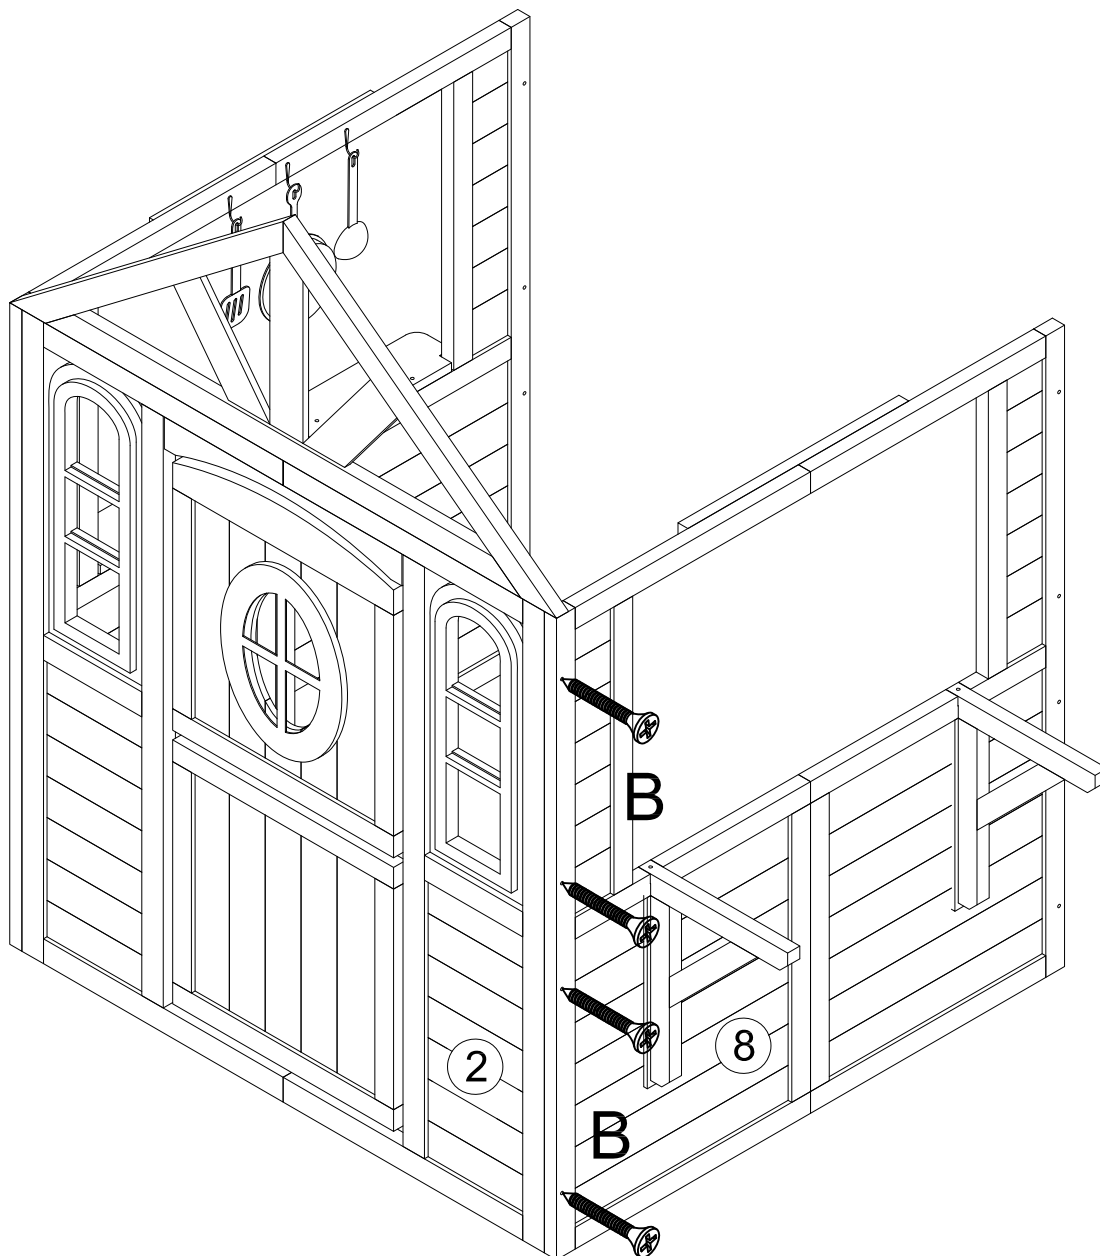


Use screws (B) to secure part (8) to part (2).

BX4




3.5*45

 17

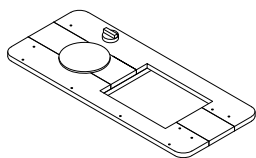

15 X1

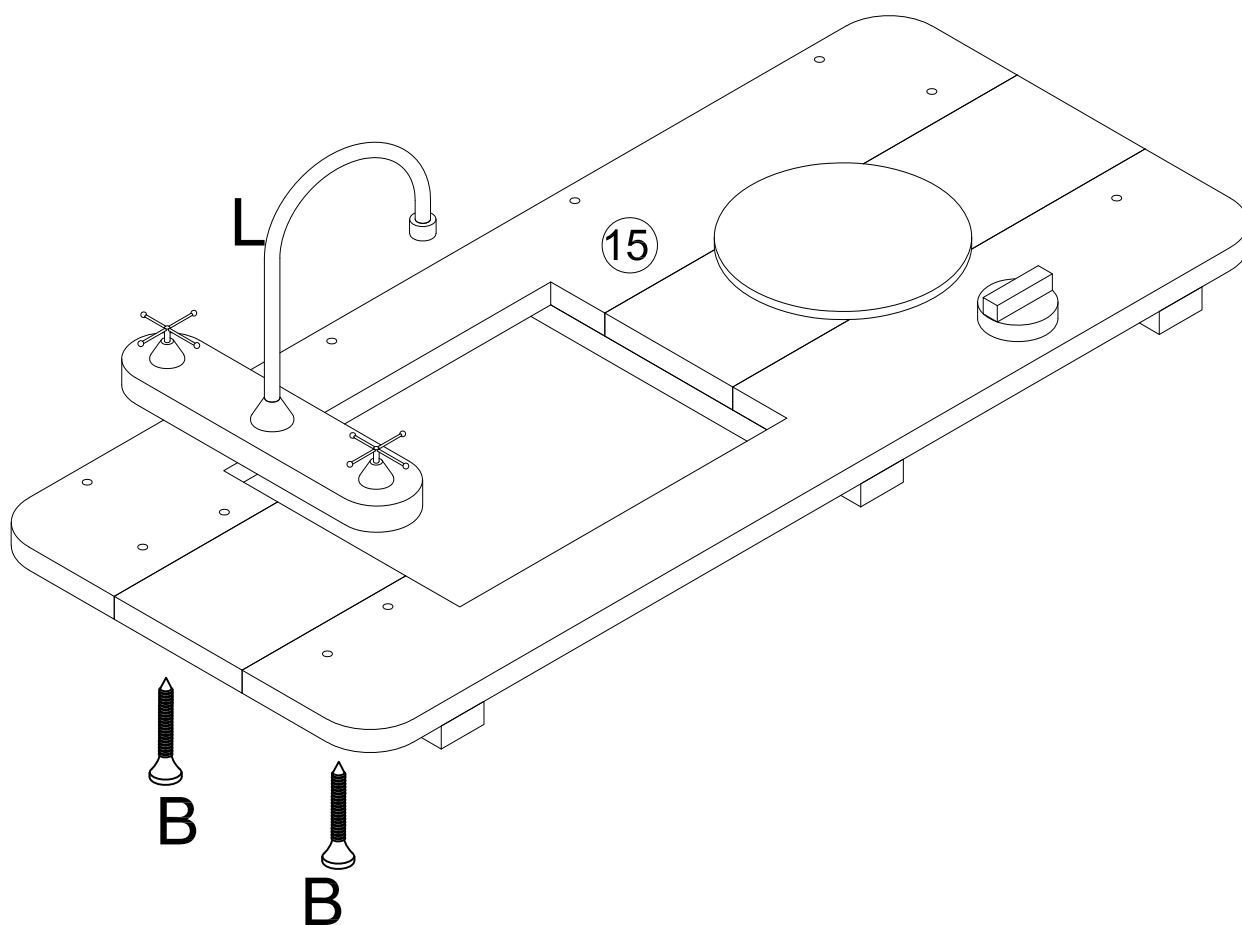 


Attach accessory (L) to part (15) using screws (B).


BX2



3.5*45

  LX1



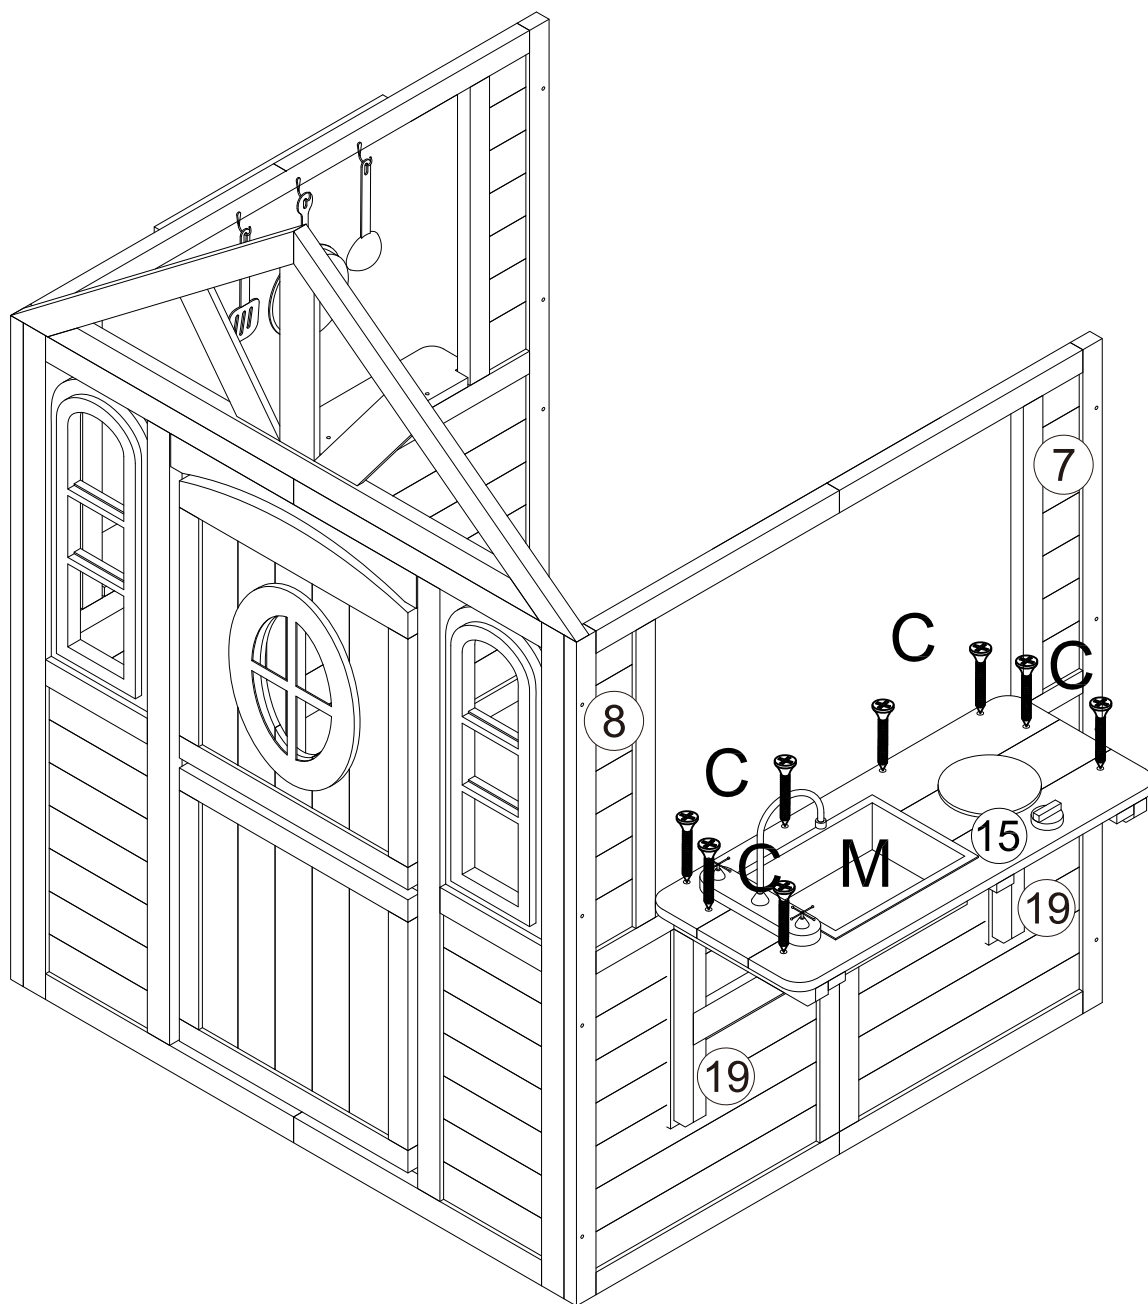


- a. Use screws (C) to fix part (15) onto parts (19), (8), and (7).
- b. Insert accessory (M).

CX8






3.5*35

 MX1



19

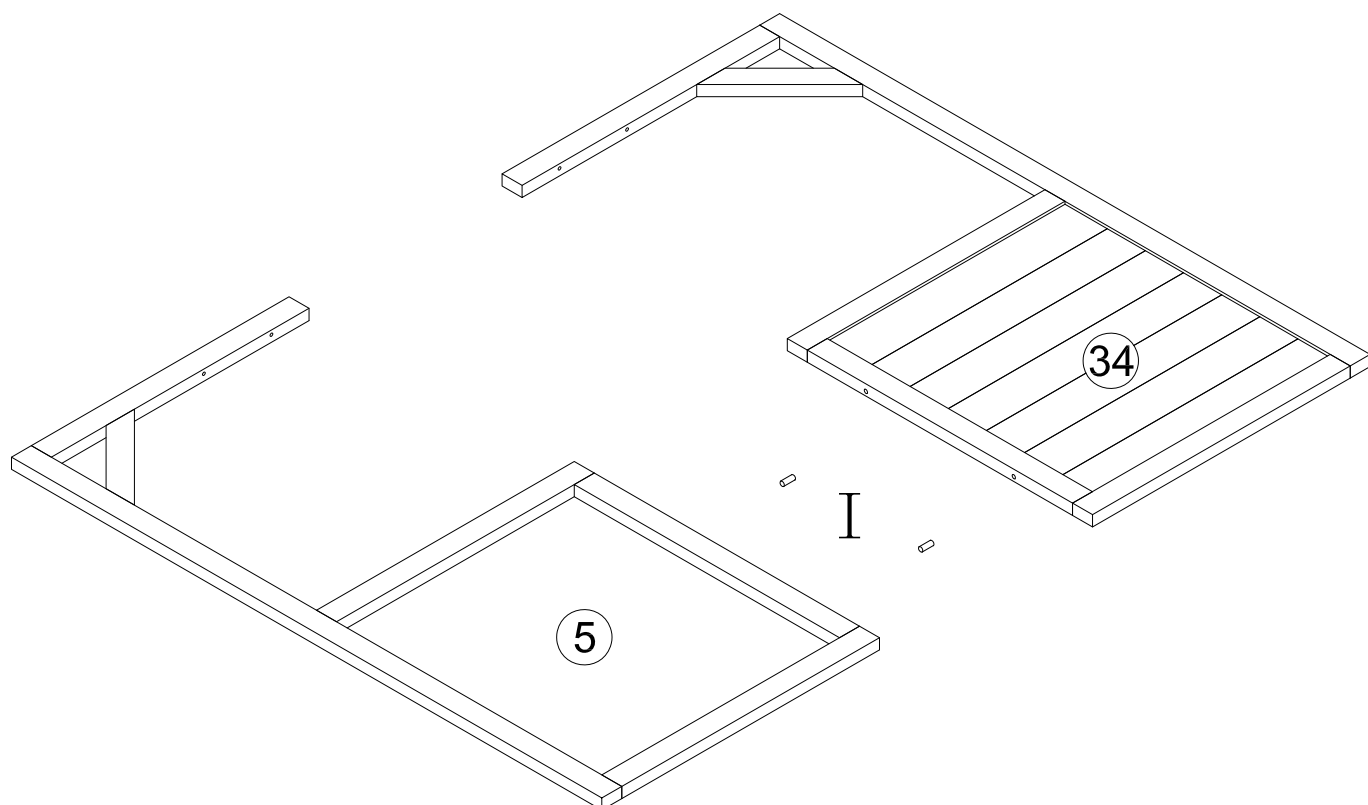   


Use wooden dowels (I) to connect part (5) and part (34).

IX2




Ø6*20

 20

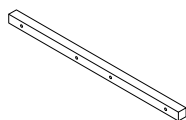

25 X1

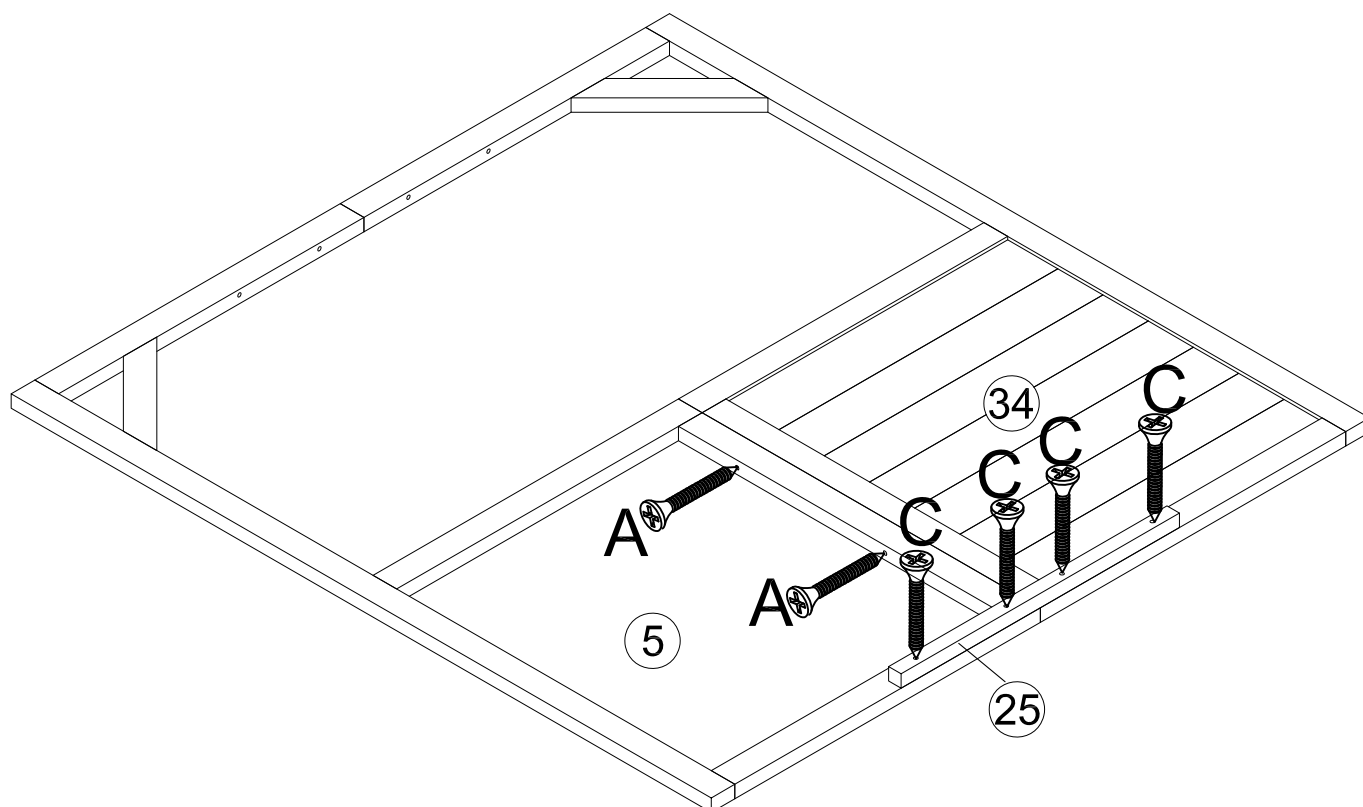 


- a. Use screws (C) to fix part (25) onto parts (5) and (34).
- b. Reinforce parts (5) and (34) using screws (A).

AX2




3.5*60

 CX4




3.5*35

 21

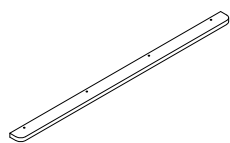

17 X1

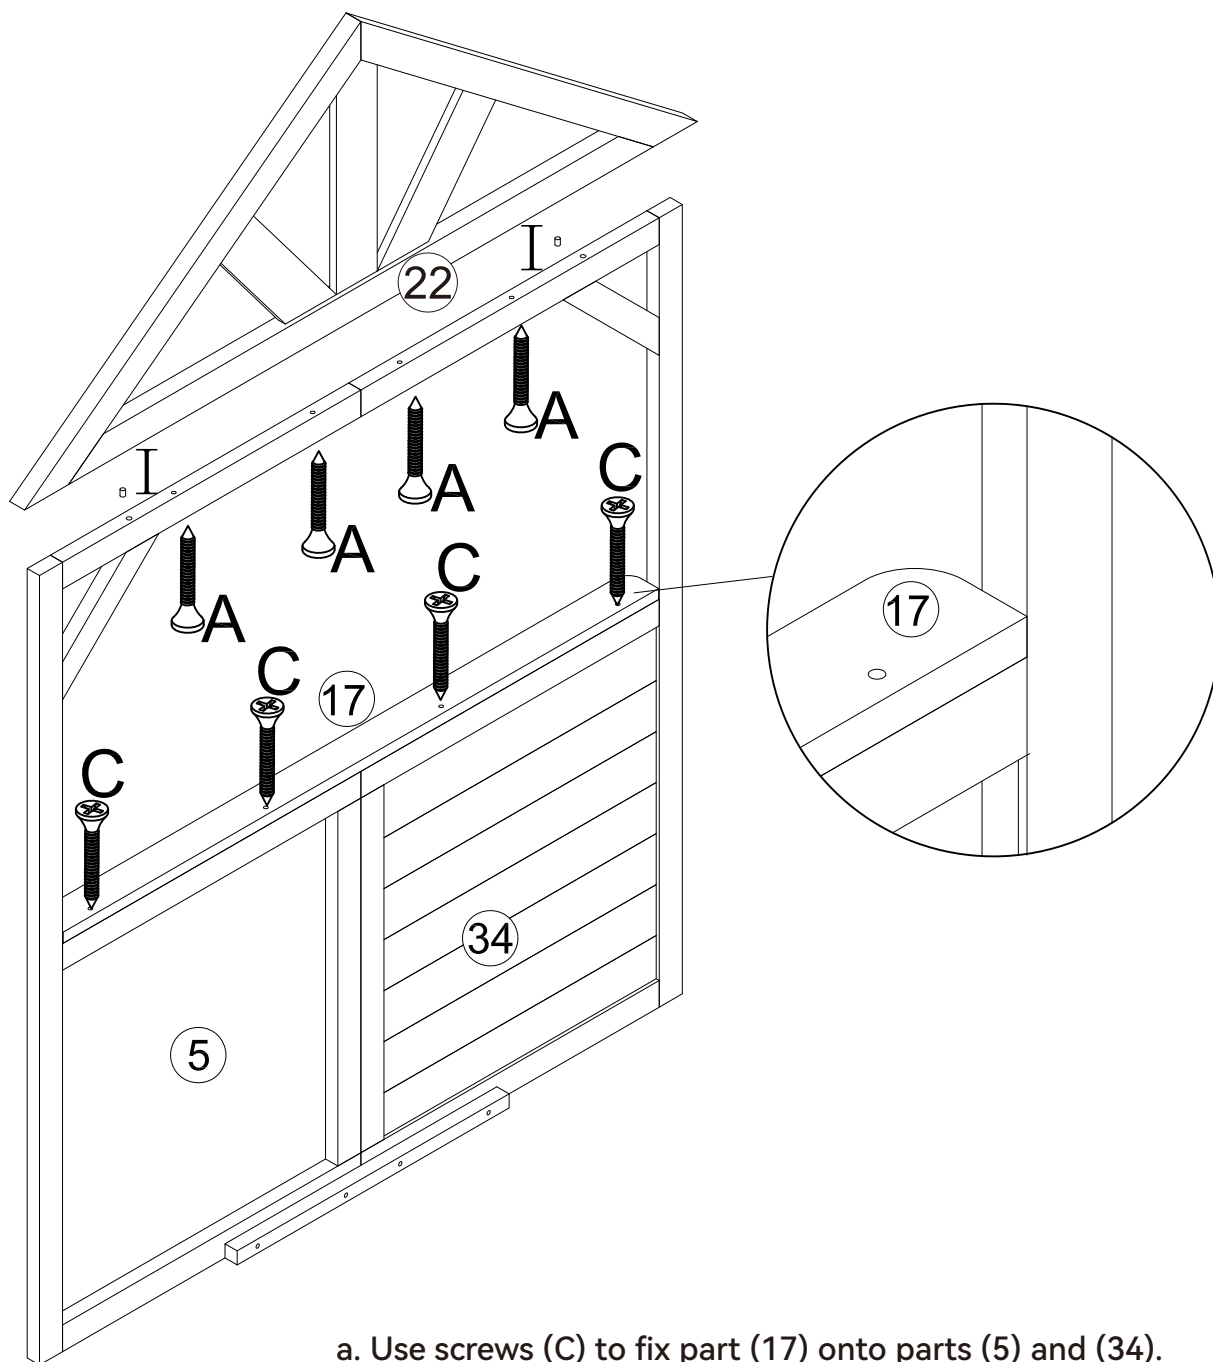 

a. Use screws (C) to fix part (17) onto parts (5) and (34).

Note: Align with the inner side.


b. Connect parts (5) and (34) to part (22) using wooden dowels (I), then secure with screws (A).

AX4



3.5*60

 CX4




3.5*35

IX2



 Ø6*20

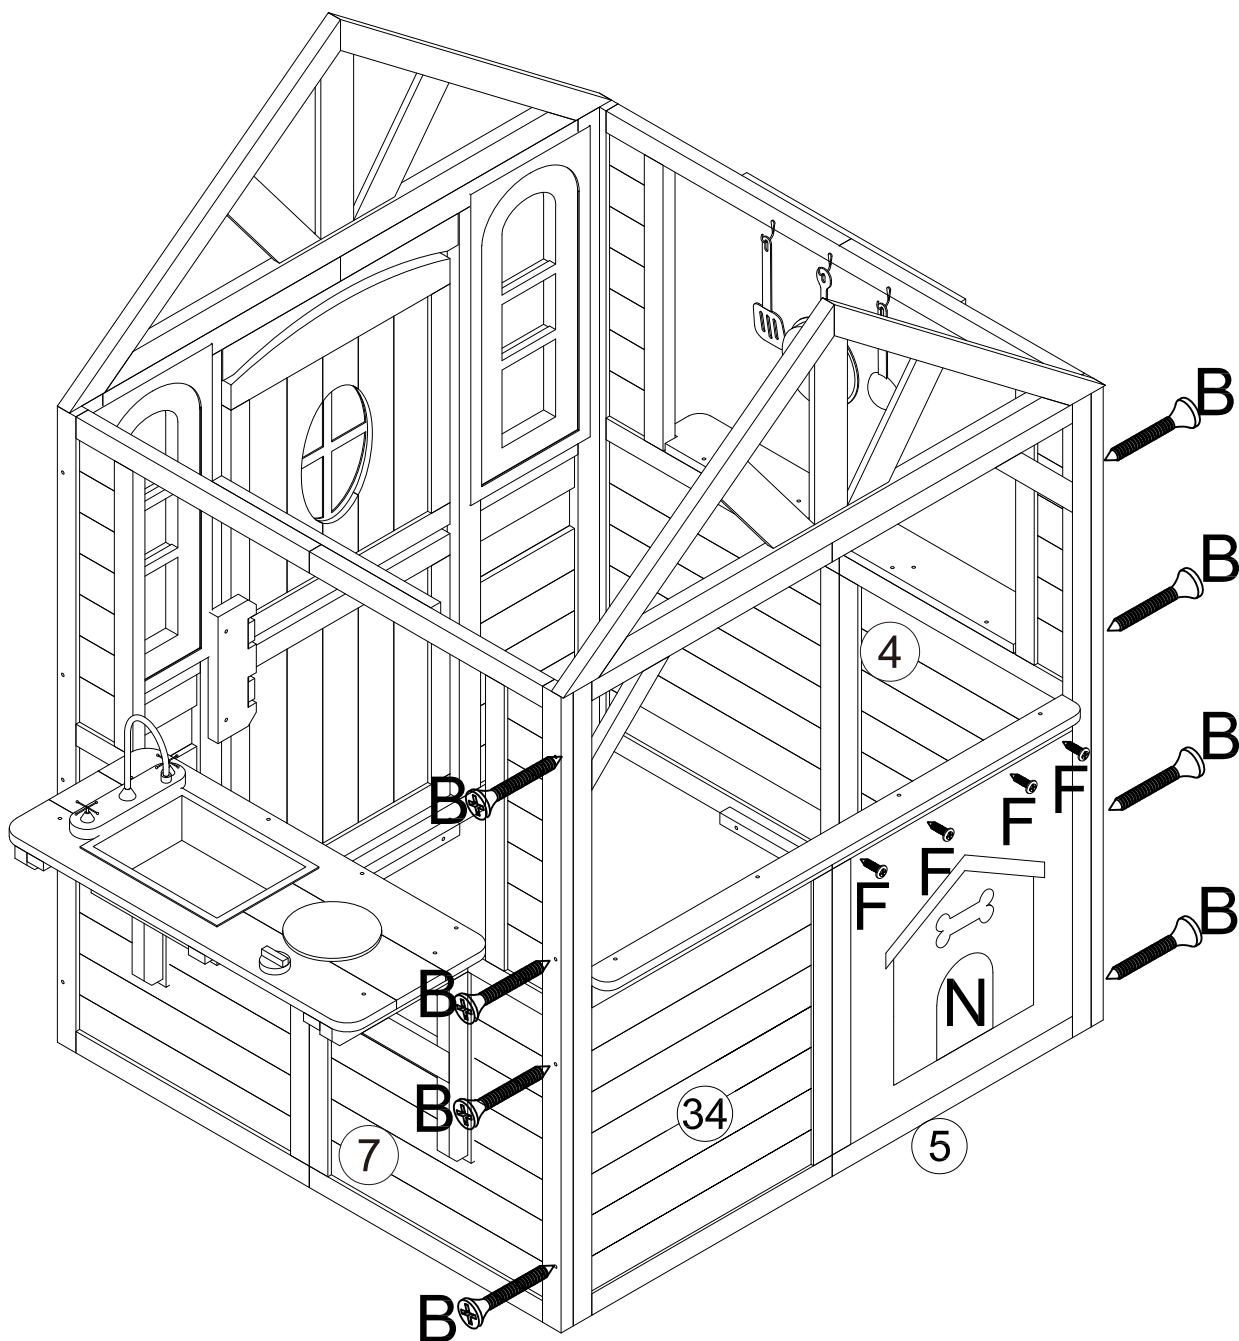

- a. Use screws (B) to fix parts (7) and (34) to parts (4) and (5).
 b. Attach accessory (N) to part (5) using screws (F).

BX8



3.5*45

FX4






3*15

NX1



   23

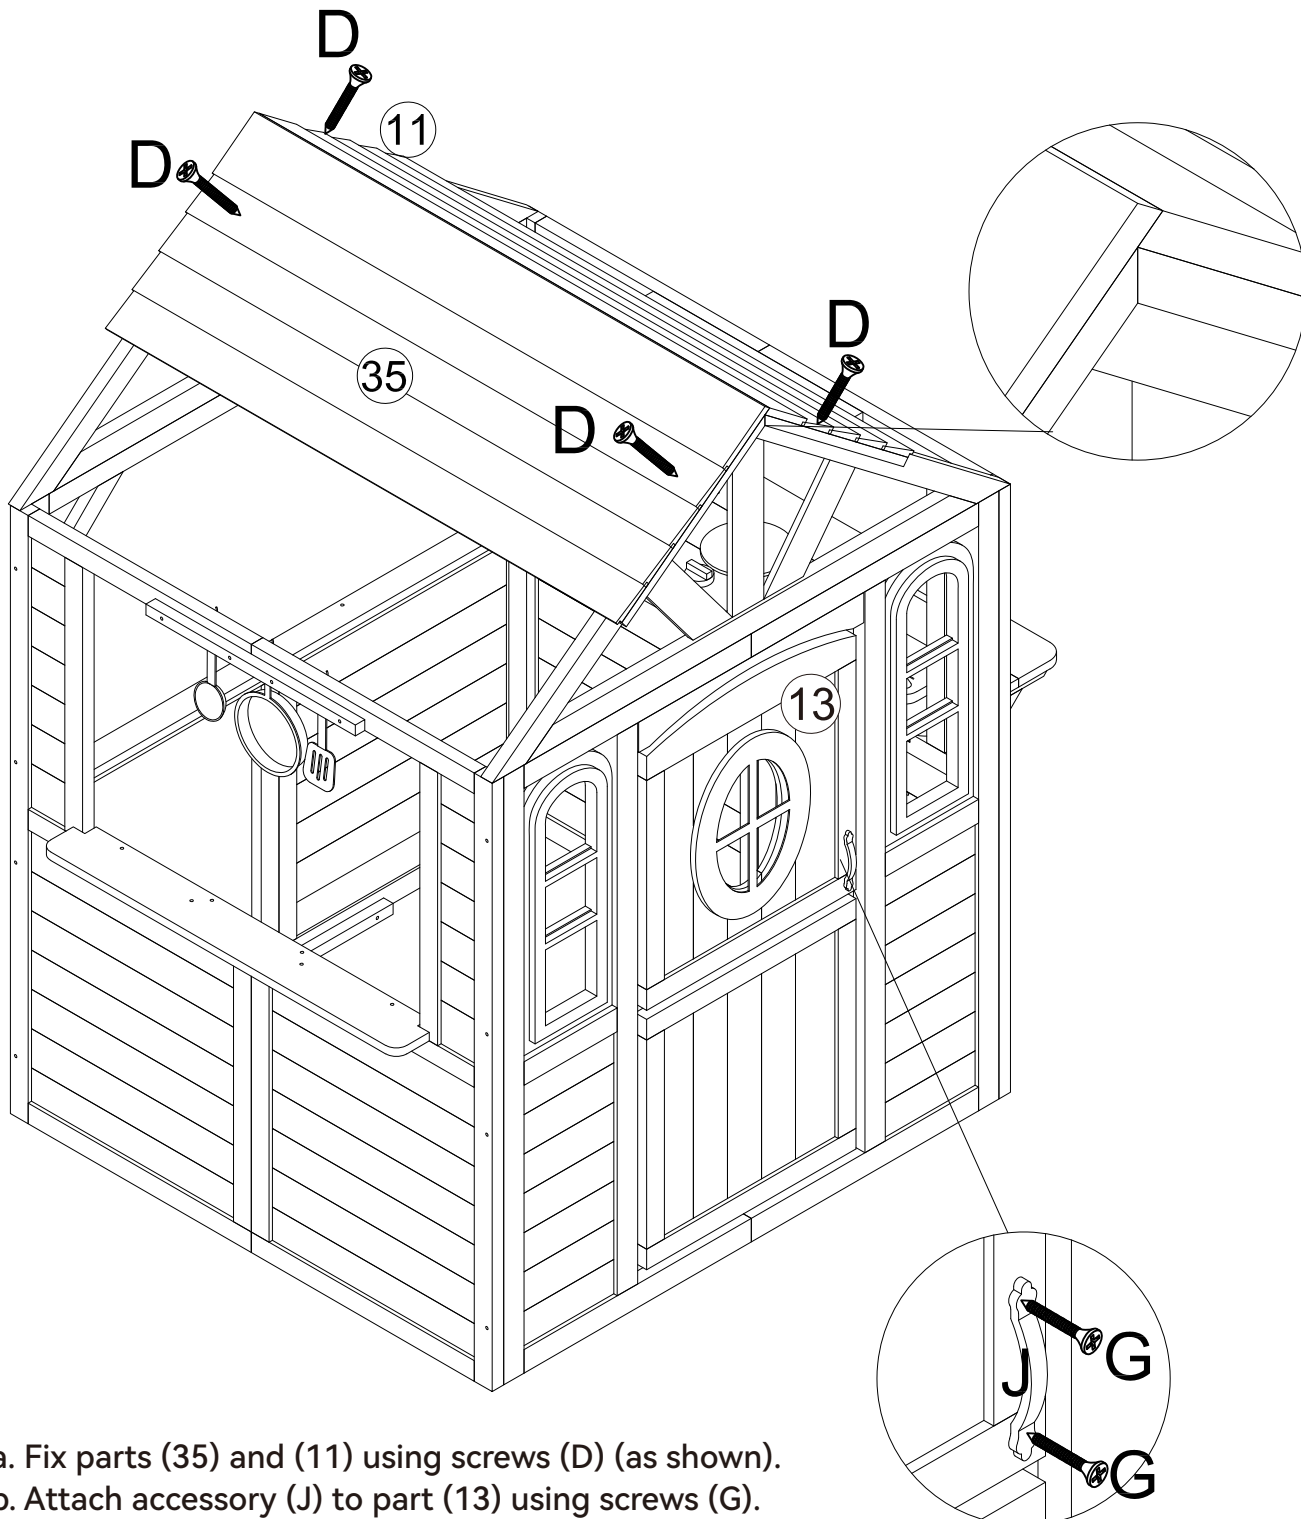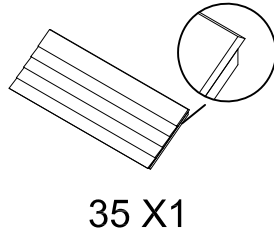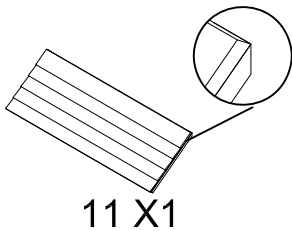

DX4



3.5*30

GX2




3*18


JX1



 24

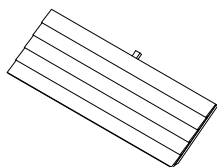

10 X2

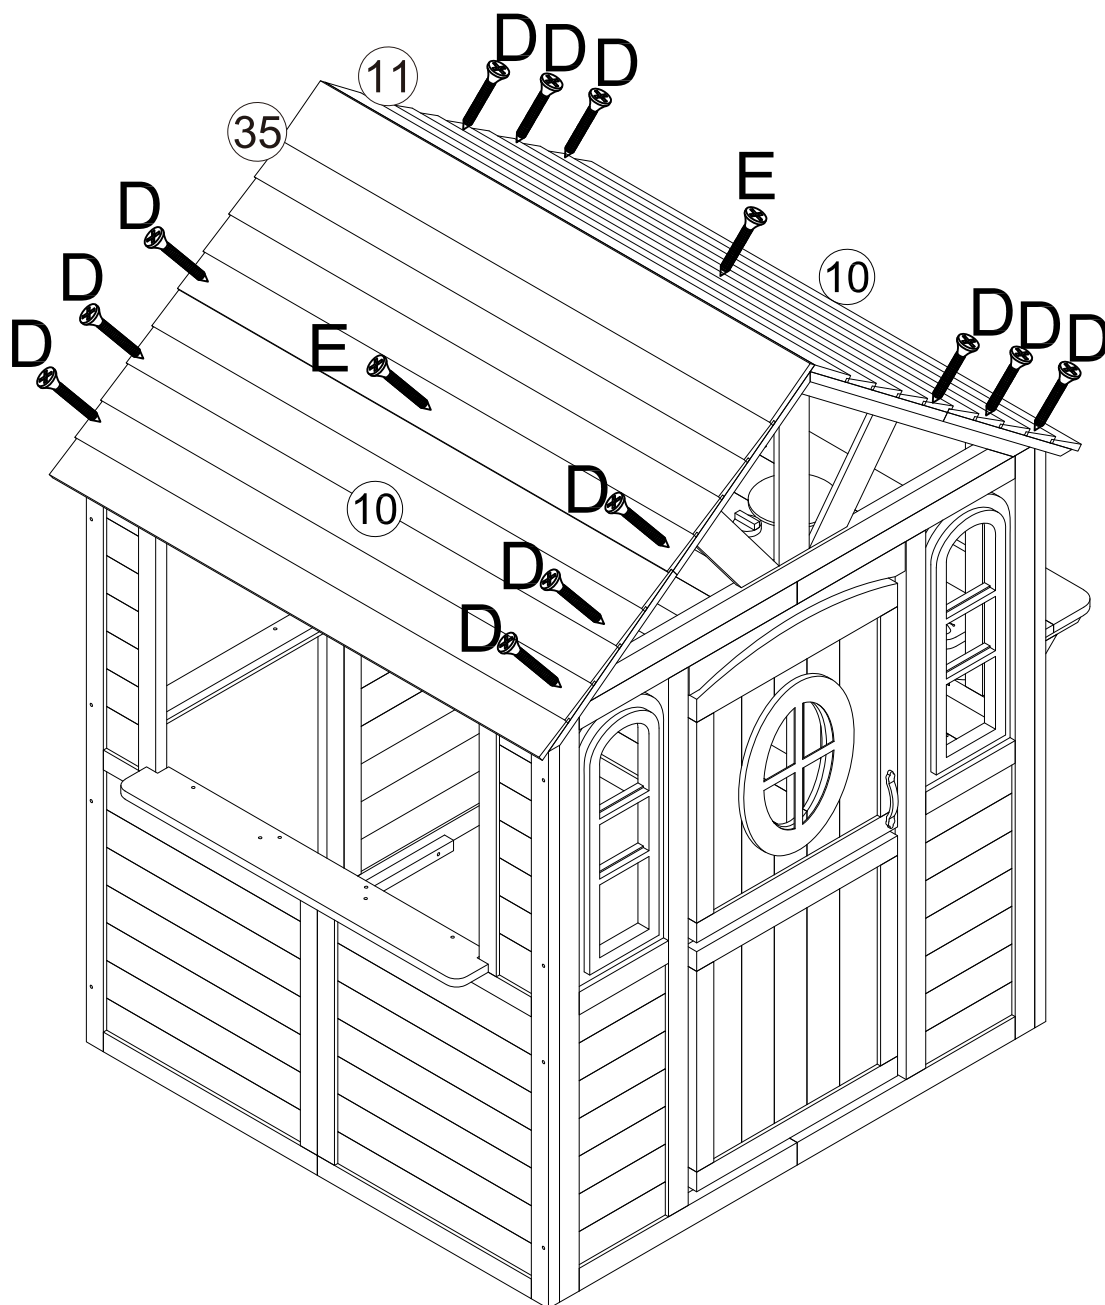 


Fix part (10) using screws (D), then reinforce parts (10), (35), and (11) using screws (E).

DX12







3.5*30

 EX2



3*22

    25

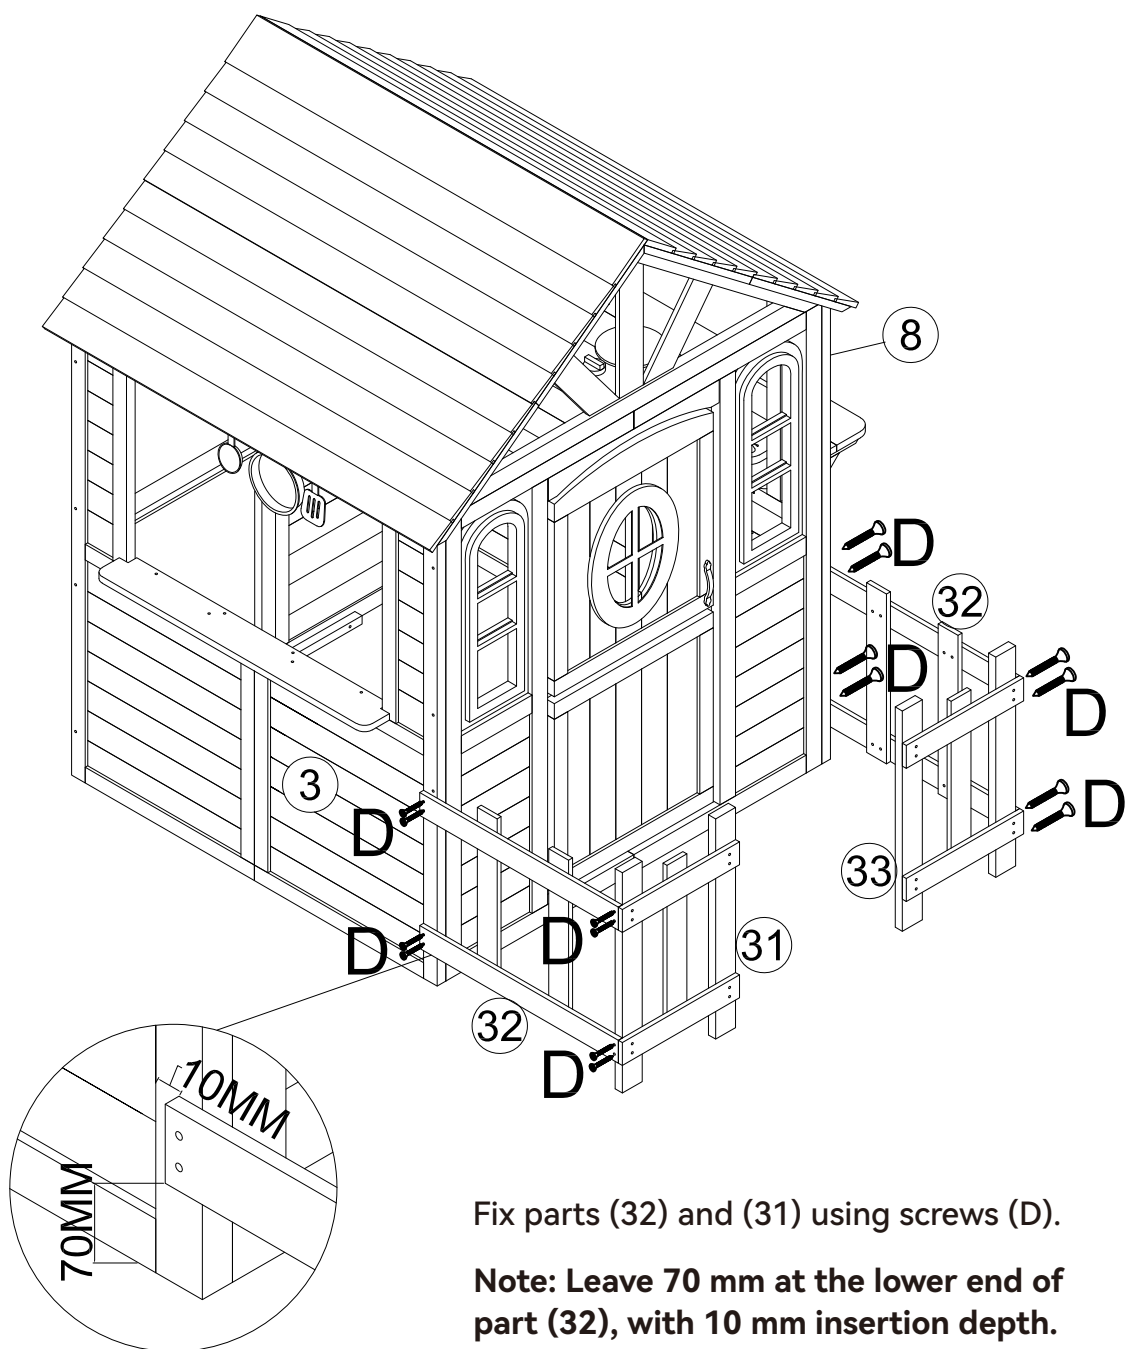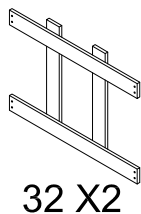

Fix parts (32) and (31) using screws (D).


Note: Leave 70 mm at the lower end of part (32), with 10 mm insertion depth.

DX16




3.5*30

 
26

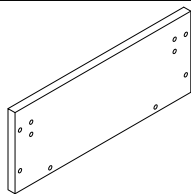



27 X2

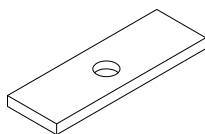 

28 X2

 

29 X4

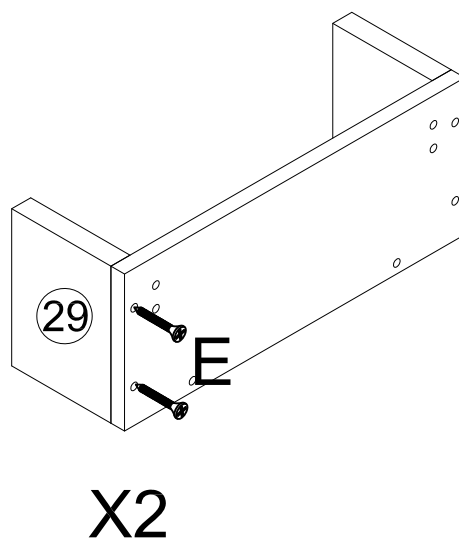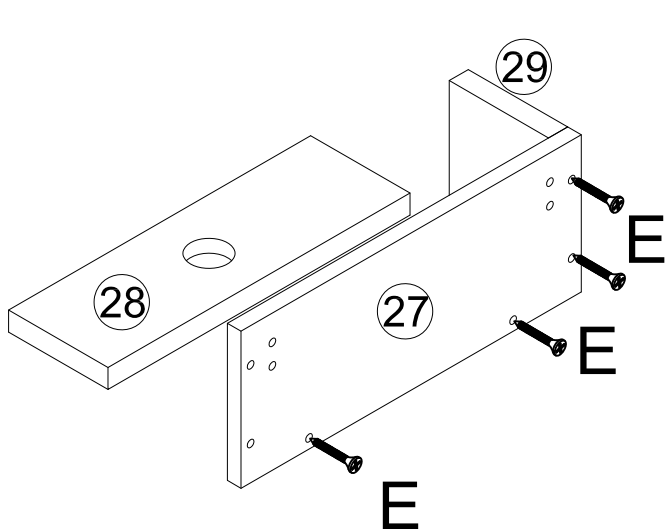  


Fix parts (27), (28), and (29) using screws (E). (Repeat twice)

EX12



3*22

 
27

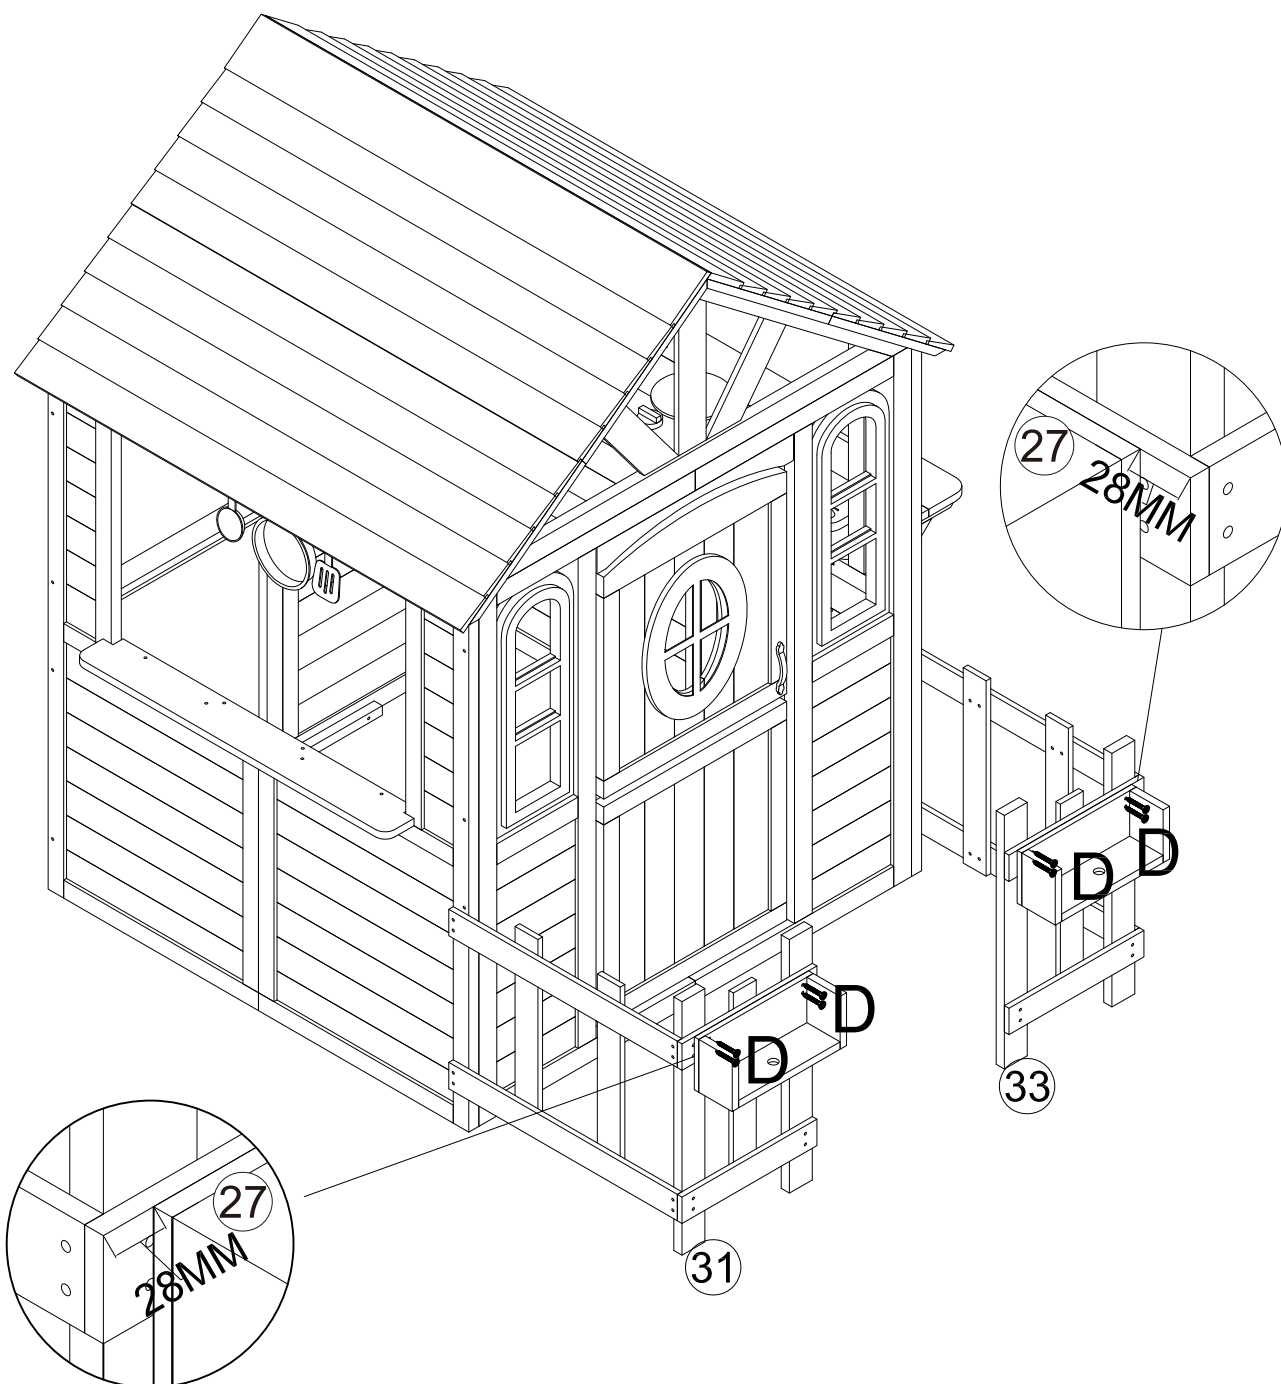

Use screws (D) to fix part (27) onto parts (31) and (33).


Note: Insert depth should be 28 mm.

 DX8




3.5*30

 28

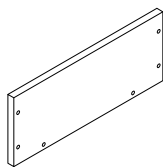


30 X2

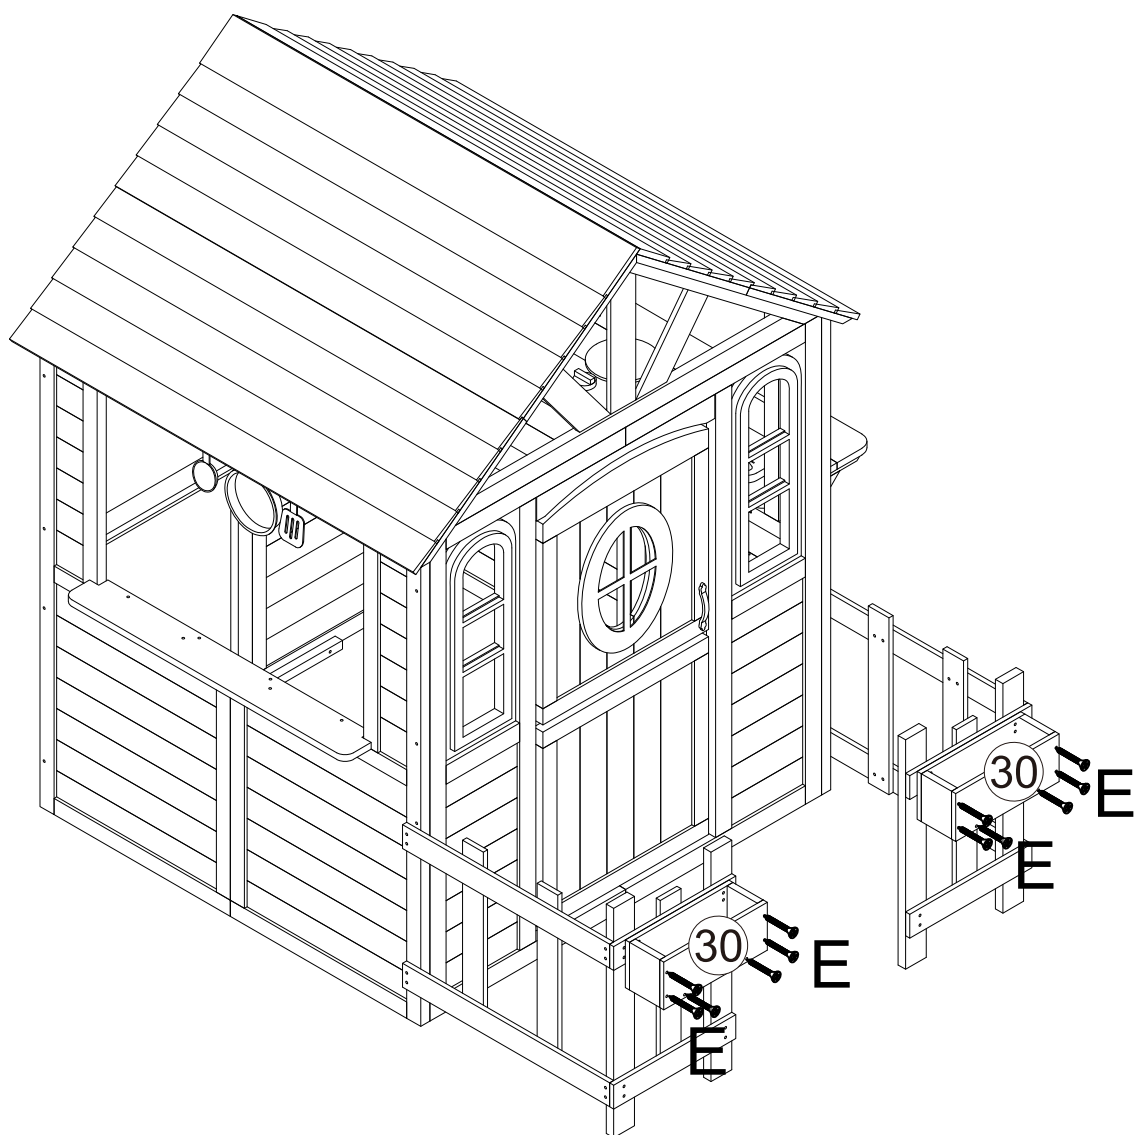 

Fix part (30) using screws (E).

 EX12




3*22

29



 26 X2

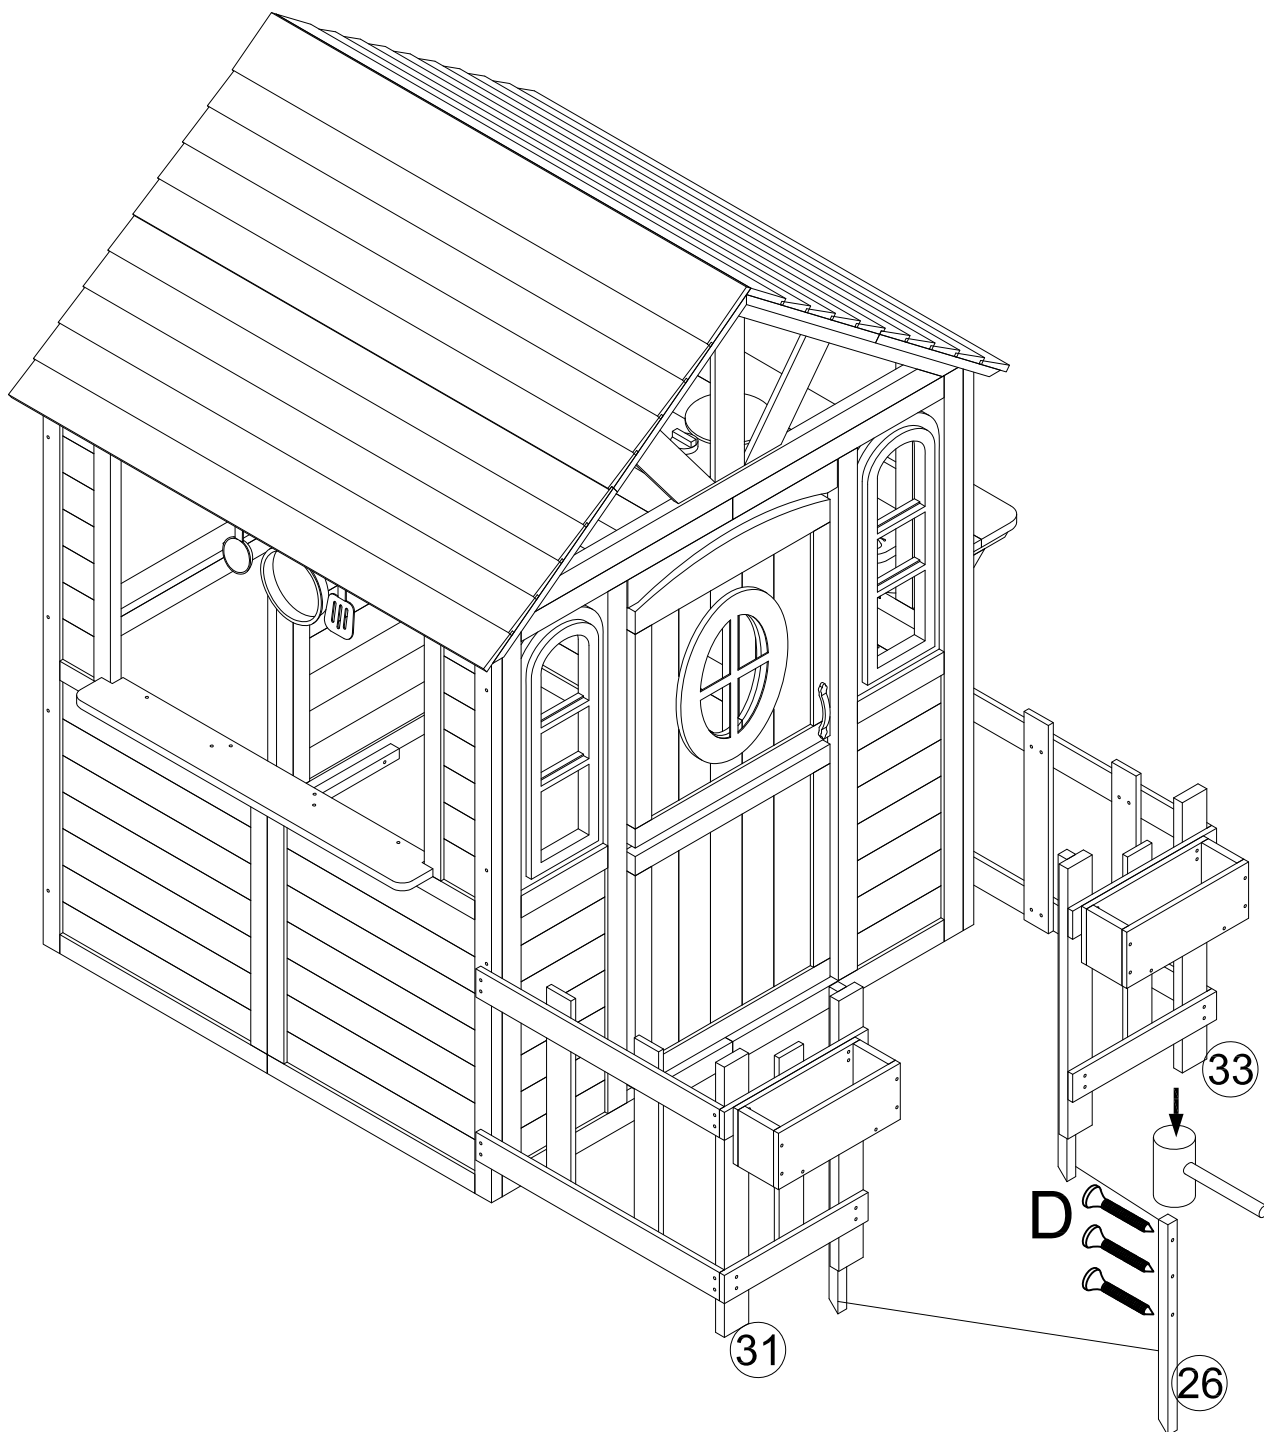

Use screws (D) to fix part (26) to the inner sides of parts (31) and (33).

Note: Use a hammer for soft ground; pre-drill holes for hard ground.

DX6



3.5*30

| Children's Wooden Playhouse

SKU:
C000939010

V2.0