


Children's Wooden Playhouse

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

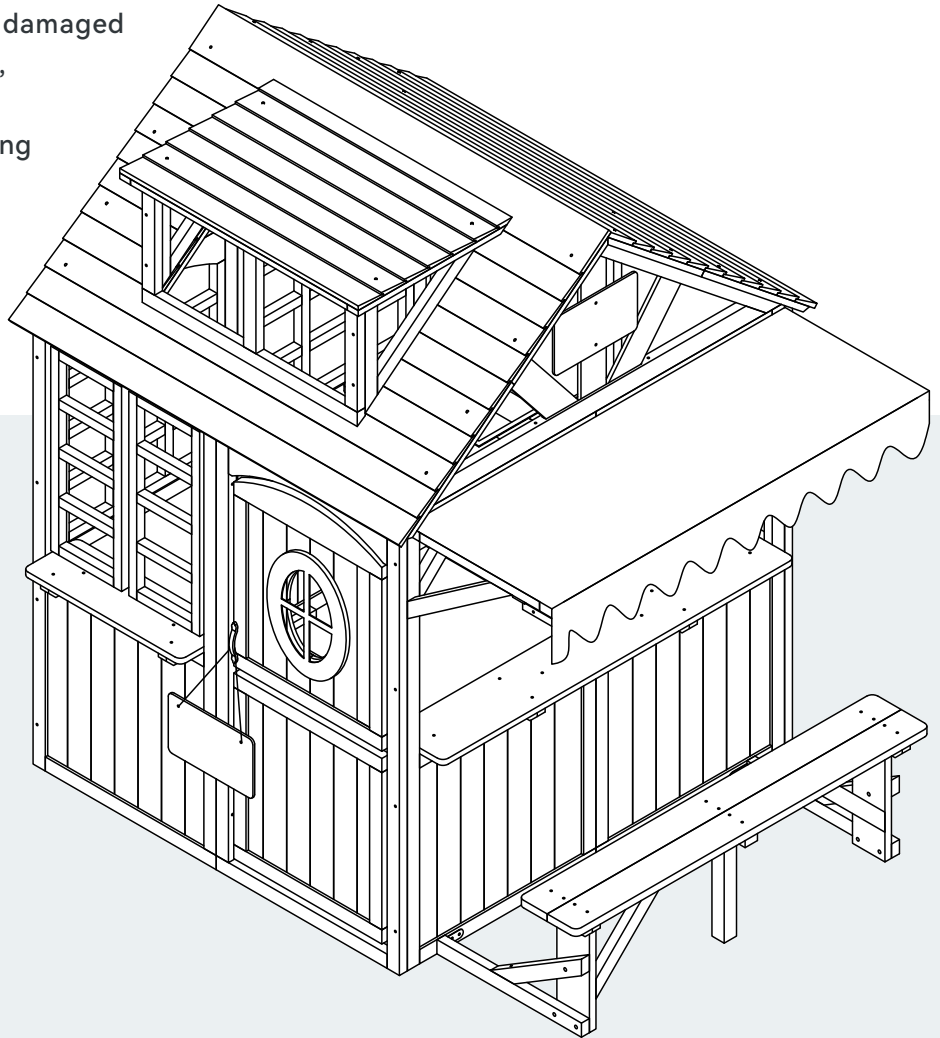

CONTACT US

3.8X5 FT

- **Email:** service@grandtunnel.com

In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

EN

Important – Please read these instructions carefully before starting the installation.

CUSTOMER SERVICE GUIDE

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “**Parts List**” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6X30mm screws.”

Contact Us:

· By Email:

Send an email to **service@grandtunnel.com**, with the subject line “Missing Parts Issue.” Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multiangle shots are recommended).
2. Email the photos/videos along with order details to **service@grandtunnel.com**, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: **service@grandtunnel.com**).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

- Customer Service Email: **service@grandtunnel.com**

 
 
 
 
 
 
 

 
 

 
 
 

 


Helpful Tips

To process your issue efficiently, please prepare the following information:
























- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

Thank you for your trust and support! We hope you enjoy using our product!














Parts List

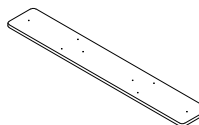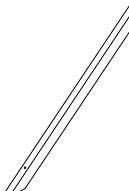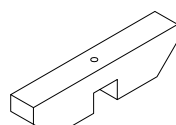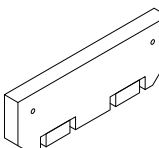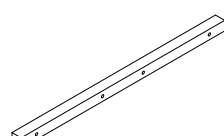1	2	3	4	5	7
					
1080X507MM	1080X507MM	1080X522MM	1080X522MM	1080X522MM	1080X507MM
X1	X1	X1	X1	X1	X1
8	10	11	12	13	14
					
1080X507MM	490X196MM	491X410MM	445X410MM	975X150MM	437X150MM
X1	X1	X1	X1	X1	X1
15	16	17	18	19	20
					
660X270MM	324X240MM	943X45MM	696X45MM	696X45MM	352X70MM
X1	X2	X2	X2	X2	X2
21	22	23	24	25	26
					
253X70MM	230X140MM	140X34MM	485X270MM	200X70MM	400X18MM
X4	X2	X4	X1	X2	X5

            
Parts List

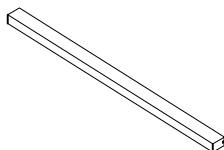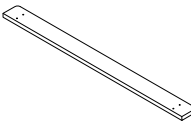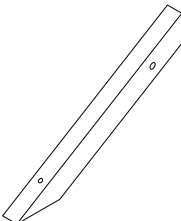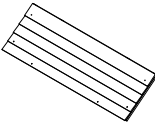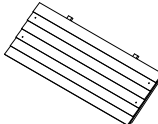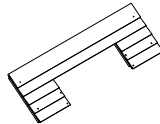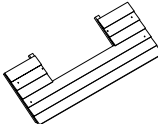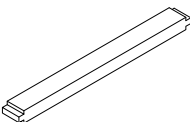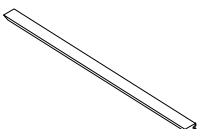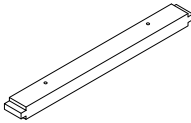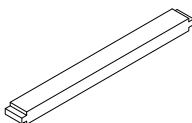Parts List						
27	28	29	30	31	32	
						
286X18MM	595X34MM	361X288MM	259X34MM	980X80MM	150X34MM	
X1	X1	X2	X1	X2	X2	
33	34	35	36	37	38	
						
400X34MM	280X90MM	300X34MM	300X34MM	660X426MM	1080X348MM	
X2	X2	X2	X4	X1	X1	
39	40	41	42	43	44	45
						
1080X410MM	1080X360MM	1080X410MM	1045X34MM	1045X34MM	352X34MM	352X34MM
X1	X1	X1	X1	X1	X2	X1
46	47	48	49	50	51	52
						
150X34MM	230X135MM	595X34MM	261X34MM	261X34MM	1080X522MM	490X196MM
X1	X1	X1	X2	X1	X1	X1

           
Parts List

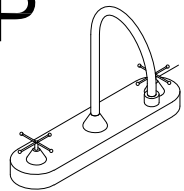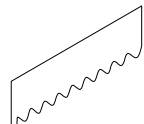A  3.5*60 X33+2	B  3.5*50 X5+1	C  3.5*45 X22+2	D  3.5*40 X20+2	E  3.5*35 X63+2	F  3.5*30 X20+2
G  3*22 X4+1	H  3*18 X68+2	I  3*12 X4+1	J  3*15 X4+1	K  6*30 X10+1	L  Ø6*20 X12+1
M  X8	N  X2	O  X1	P  X1	Q  X1	R  X1
S  X1	T  X1	U  X3			

 
1



3 X1

 

4 X1

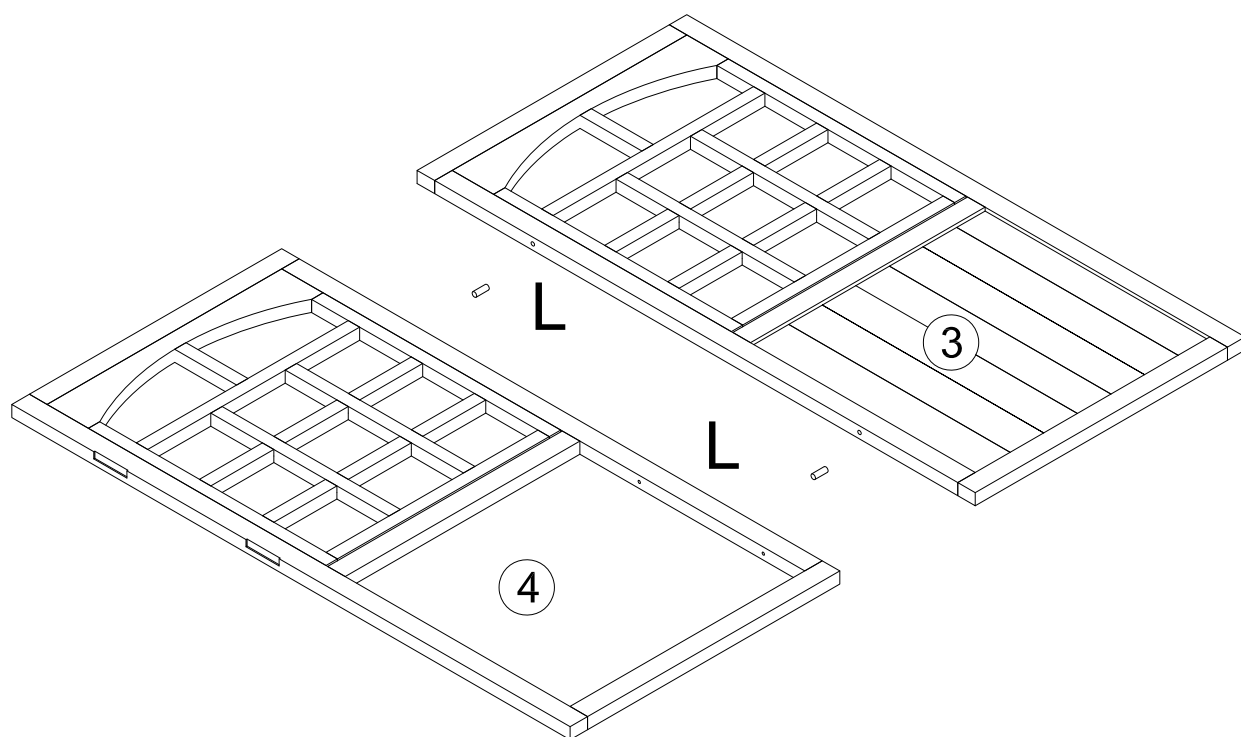


Connect parts (4) and (3) using wooden dowels (L).

LX2




Ø6*20

 2



26 X1

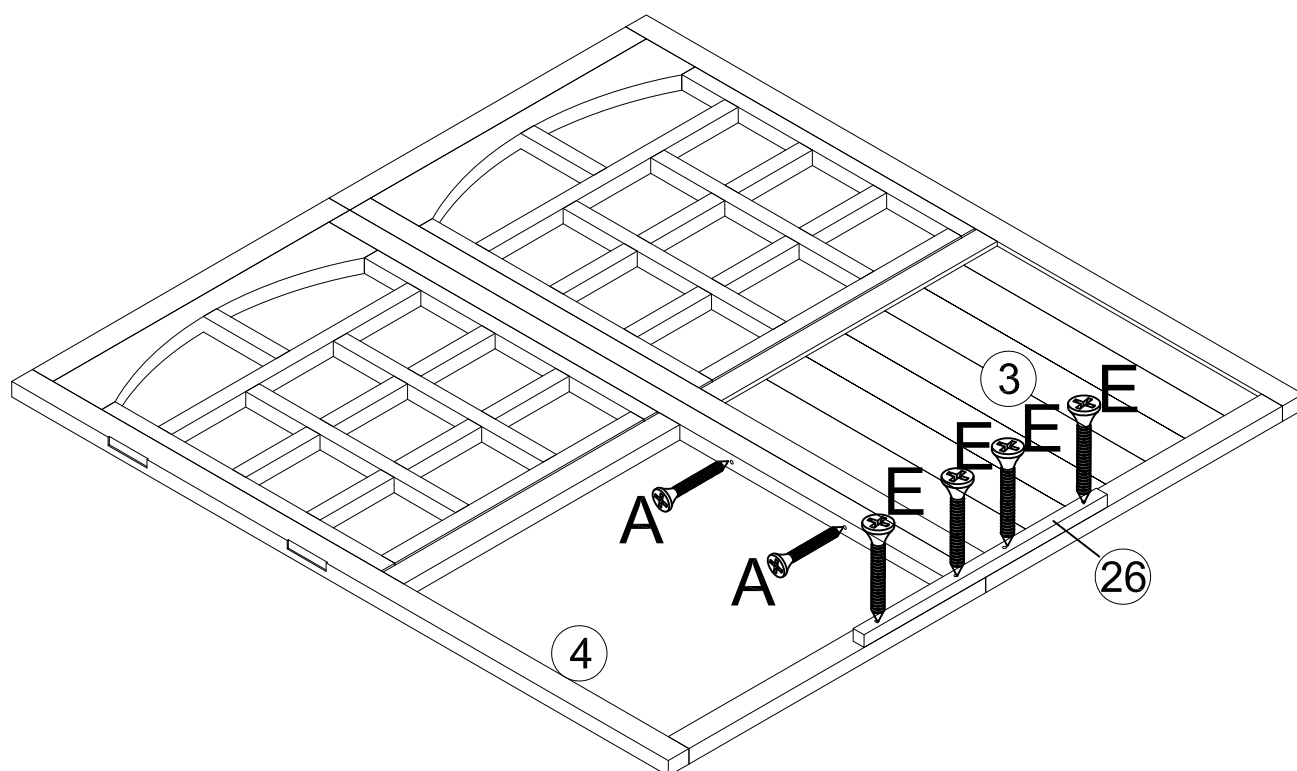


- a. Reinforce part (3) with part (4) using screws (A).
- b. Fix part (26) to parts (4) and (3) using screws (E).

AX2



3.5*60

 EX4




3.5*35

3



17 X1

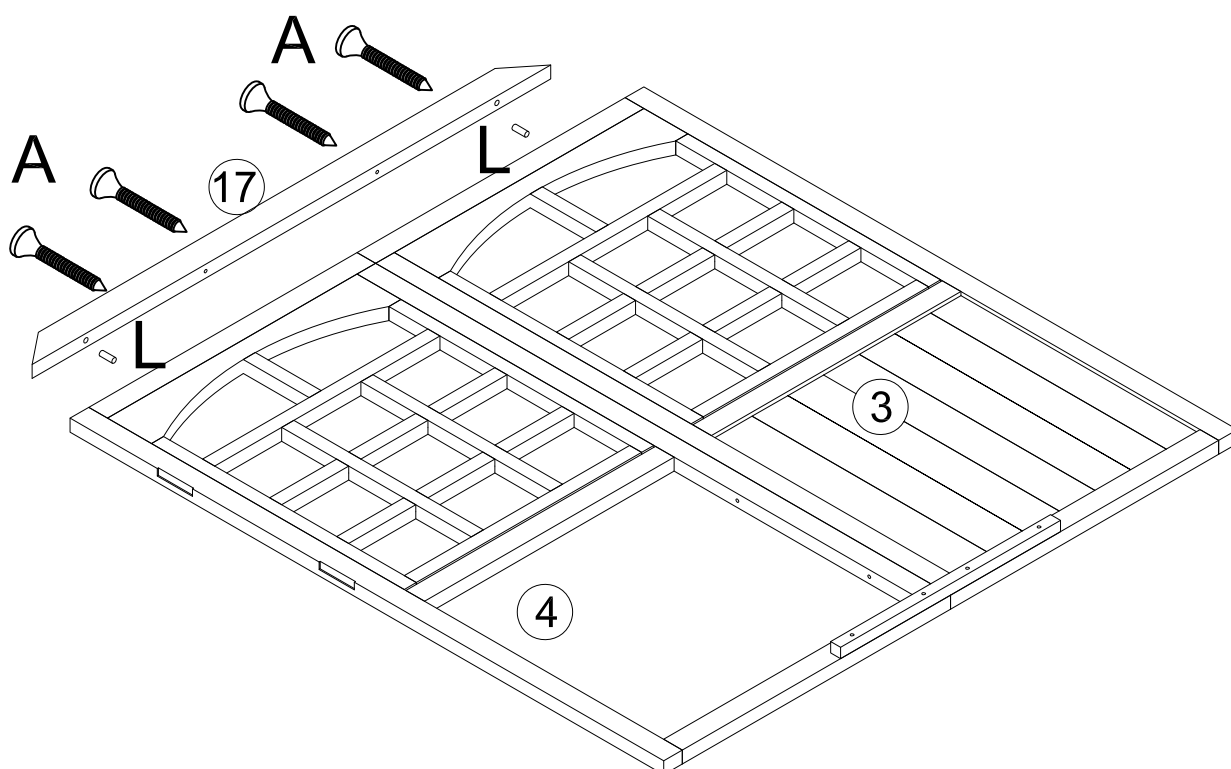

Connect part (17) to parts (4) and (3) using wooden dowels (L), then secure with screws (A).

AX4




3.5*60

LX2




Ø6*20

 4



18 X1

 


19 X1



20 X1



21 X2

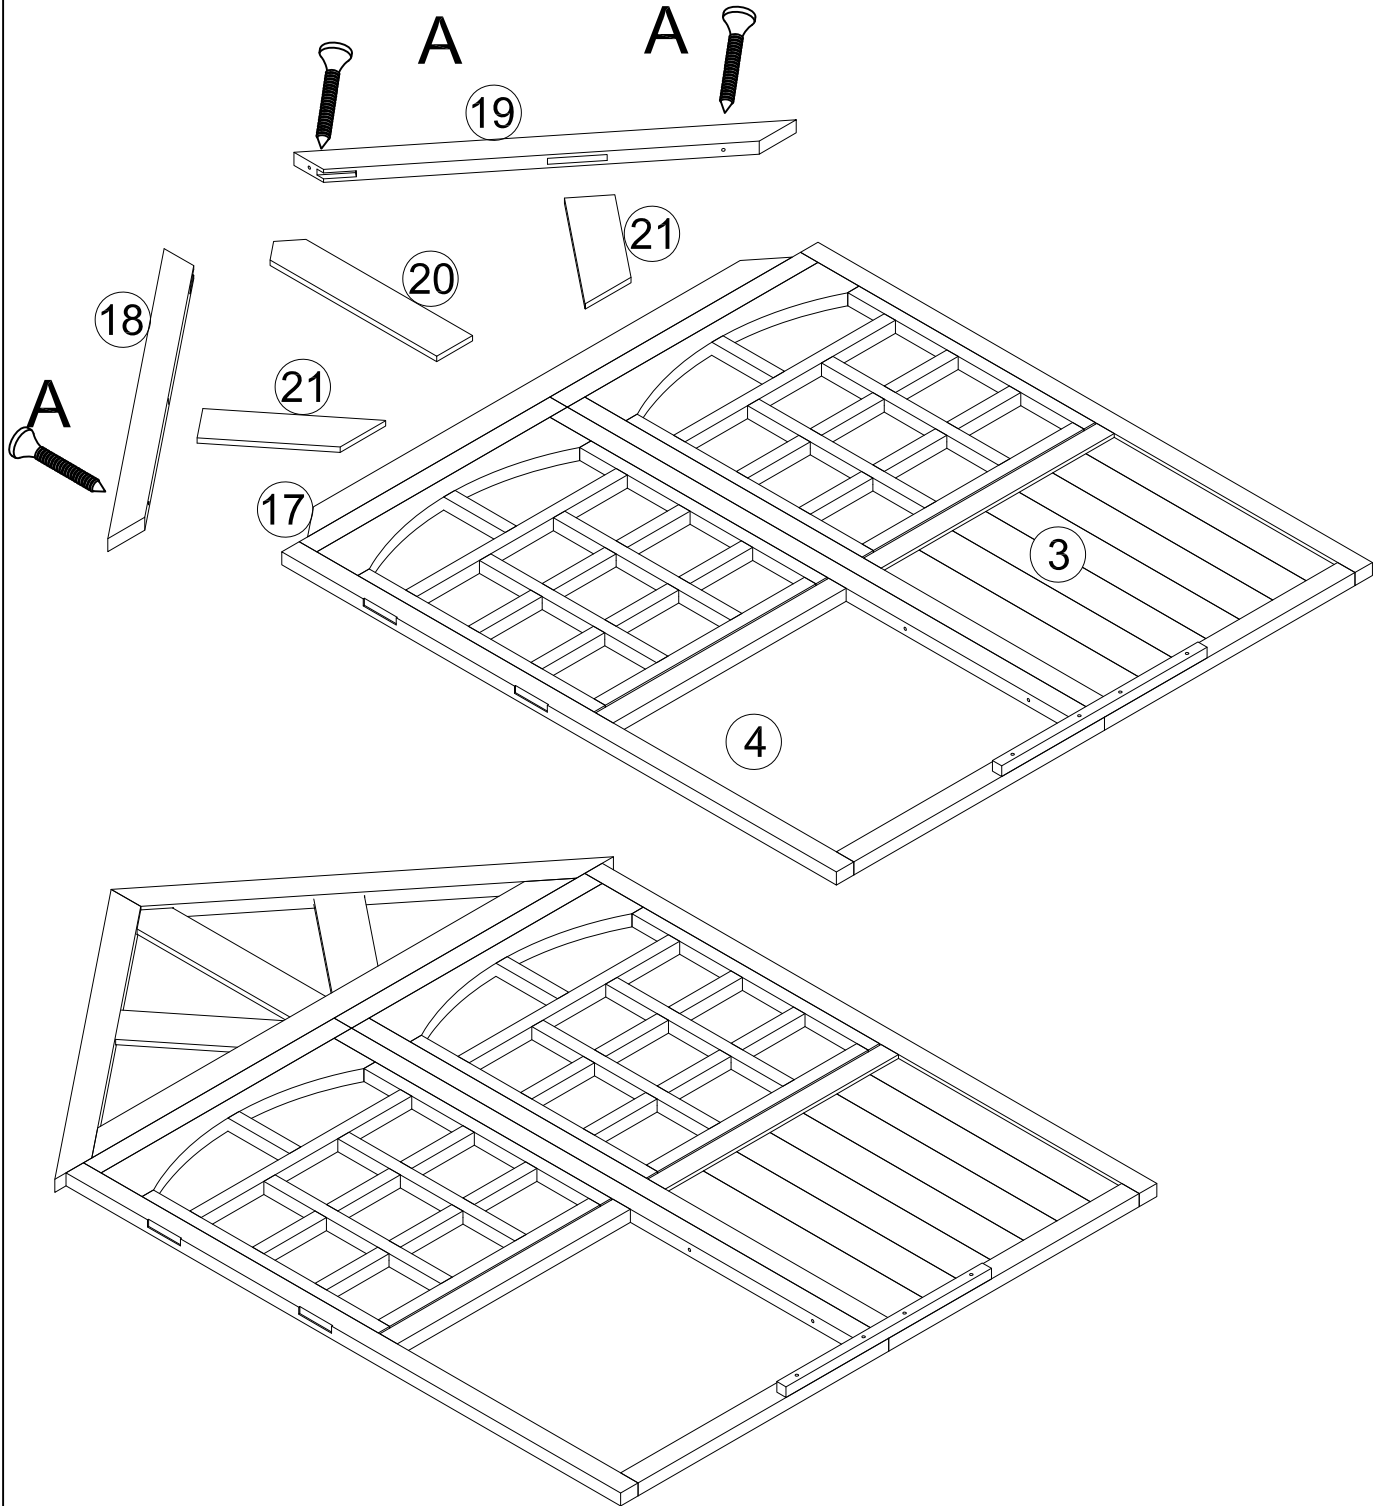


Assemble parts (18), (19), (20), and (21) with part (17), then secure with screws (A).

AX3




3.5*60

 
5



7 X1

 

8 X1

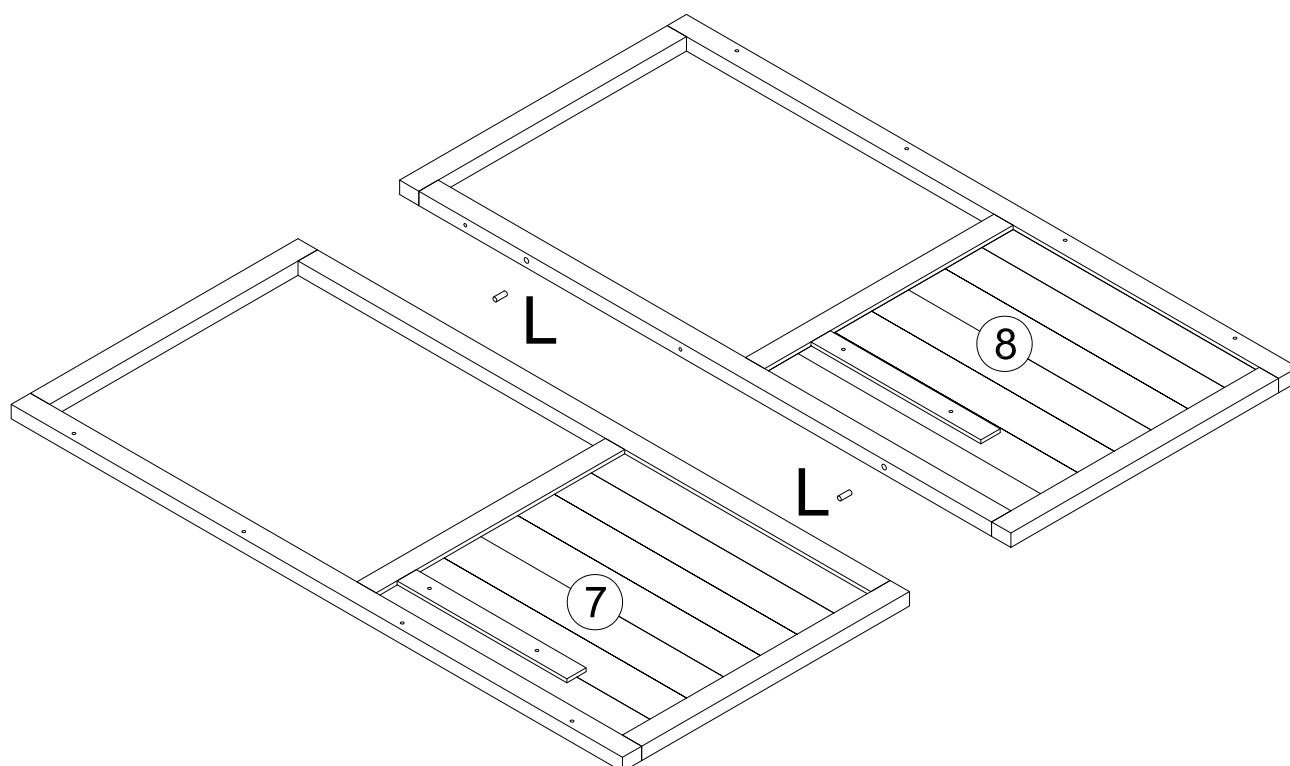


Connect parts (7) and (8) using wooden dowels (L).

LX2




Ø6*20

 6



26 X2

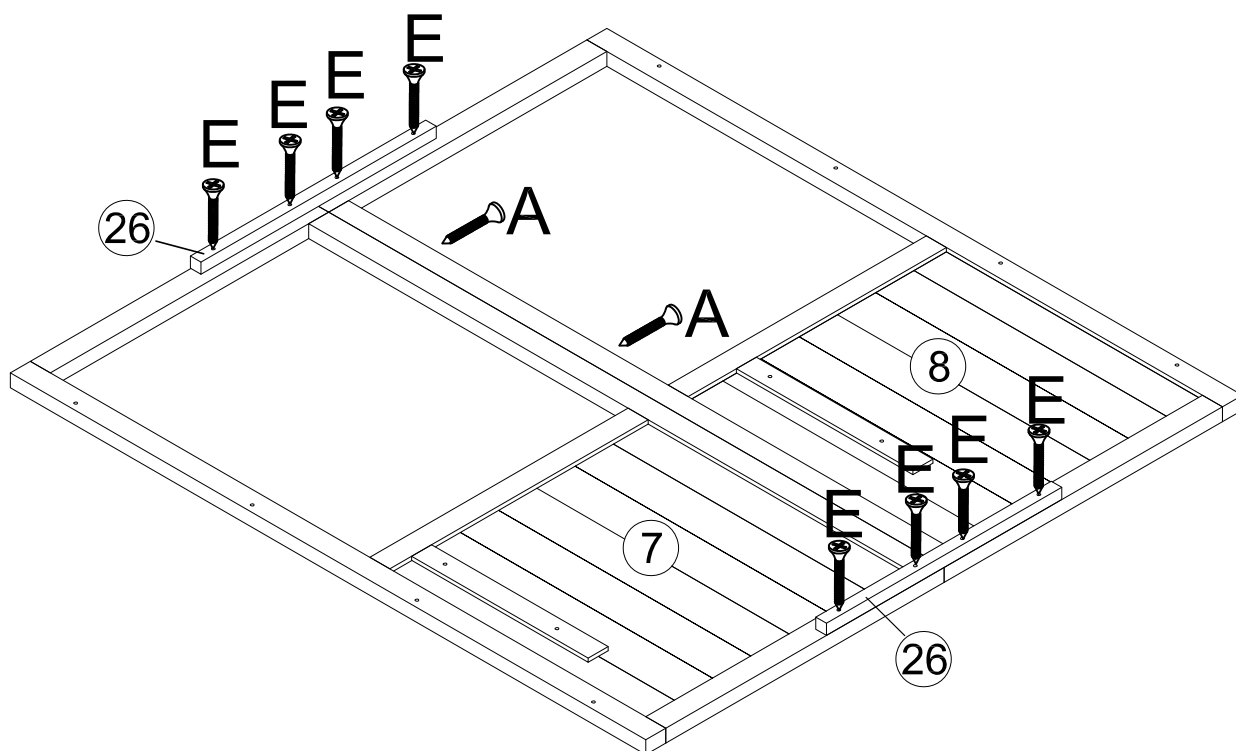

- a. Reinforce part (7) with part (8) using screws (A).
- b. Fix part (26) to parts (7) and (8) using screws (E).

AX2




3.5*60

EX8




3.5*35

 7



22 X1

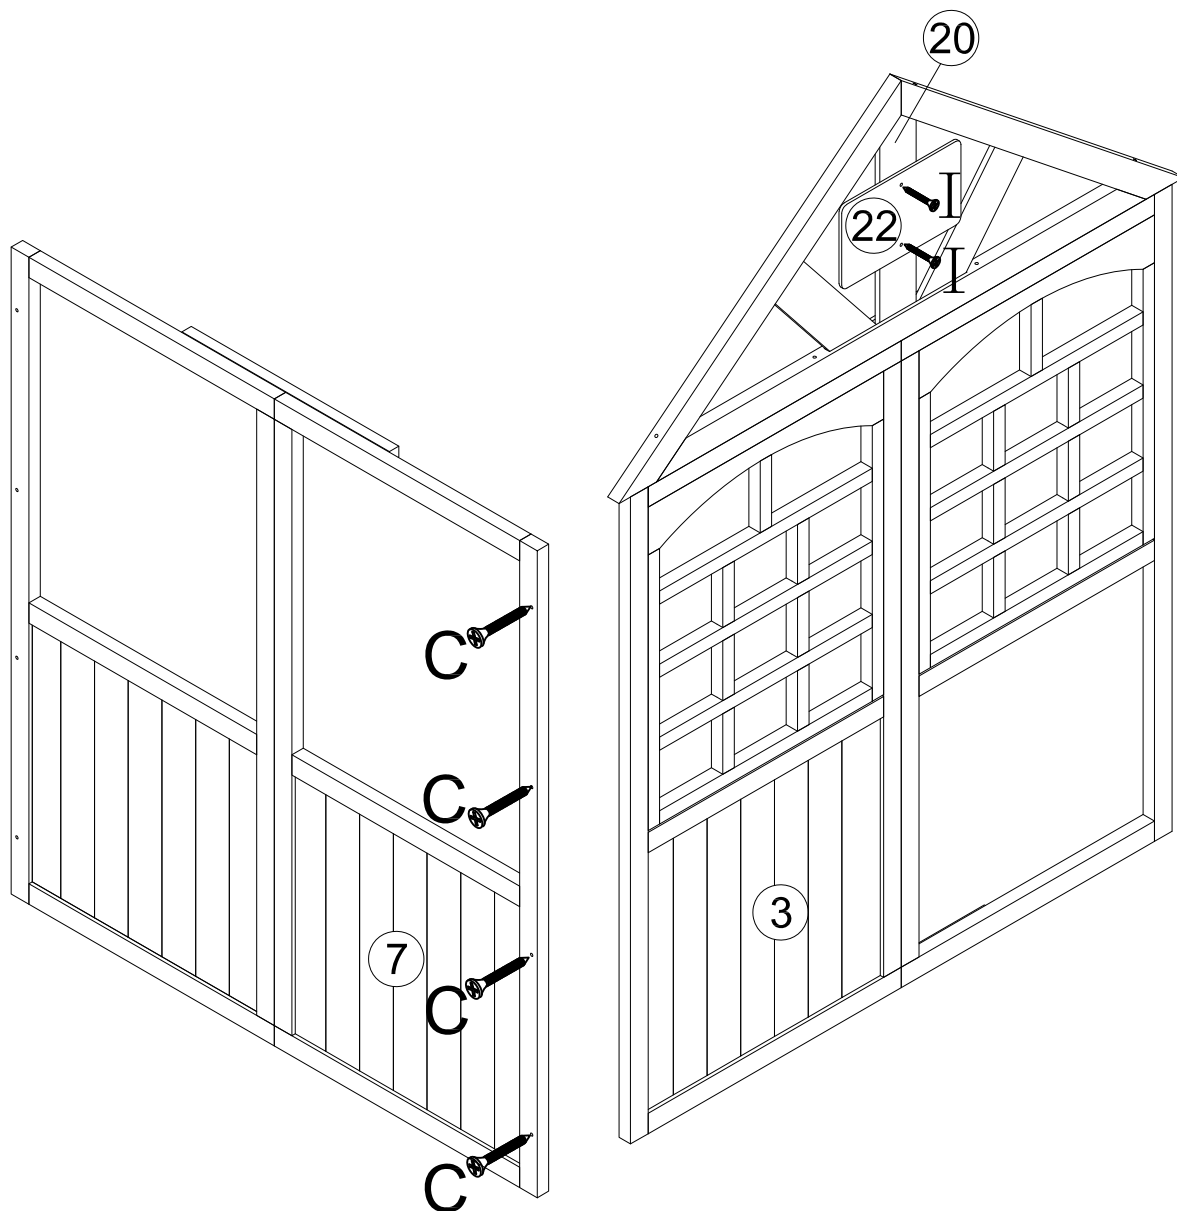

- a. Fix part (7) to part (3) using screws (C).
- b. Fix part (22) to part (20) using screws (I) (as shown).

CX4




3.5*45

IX2



3*12

8

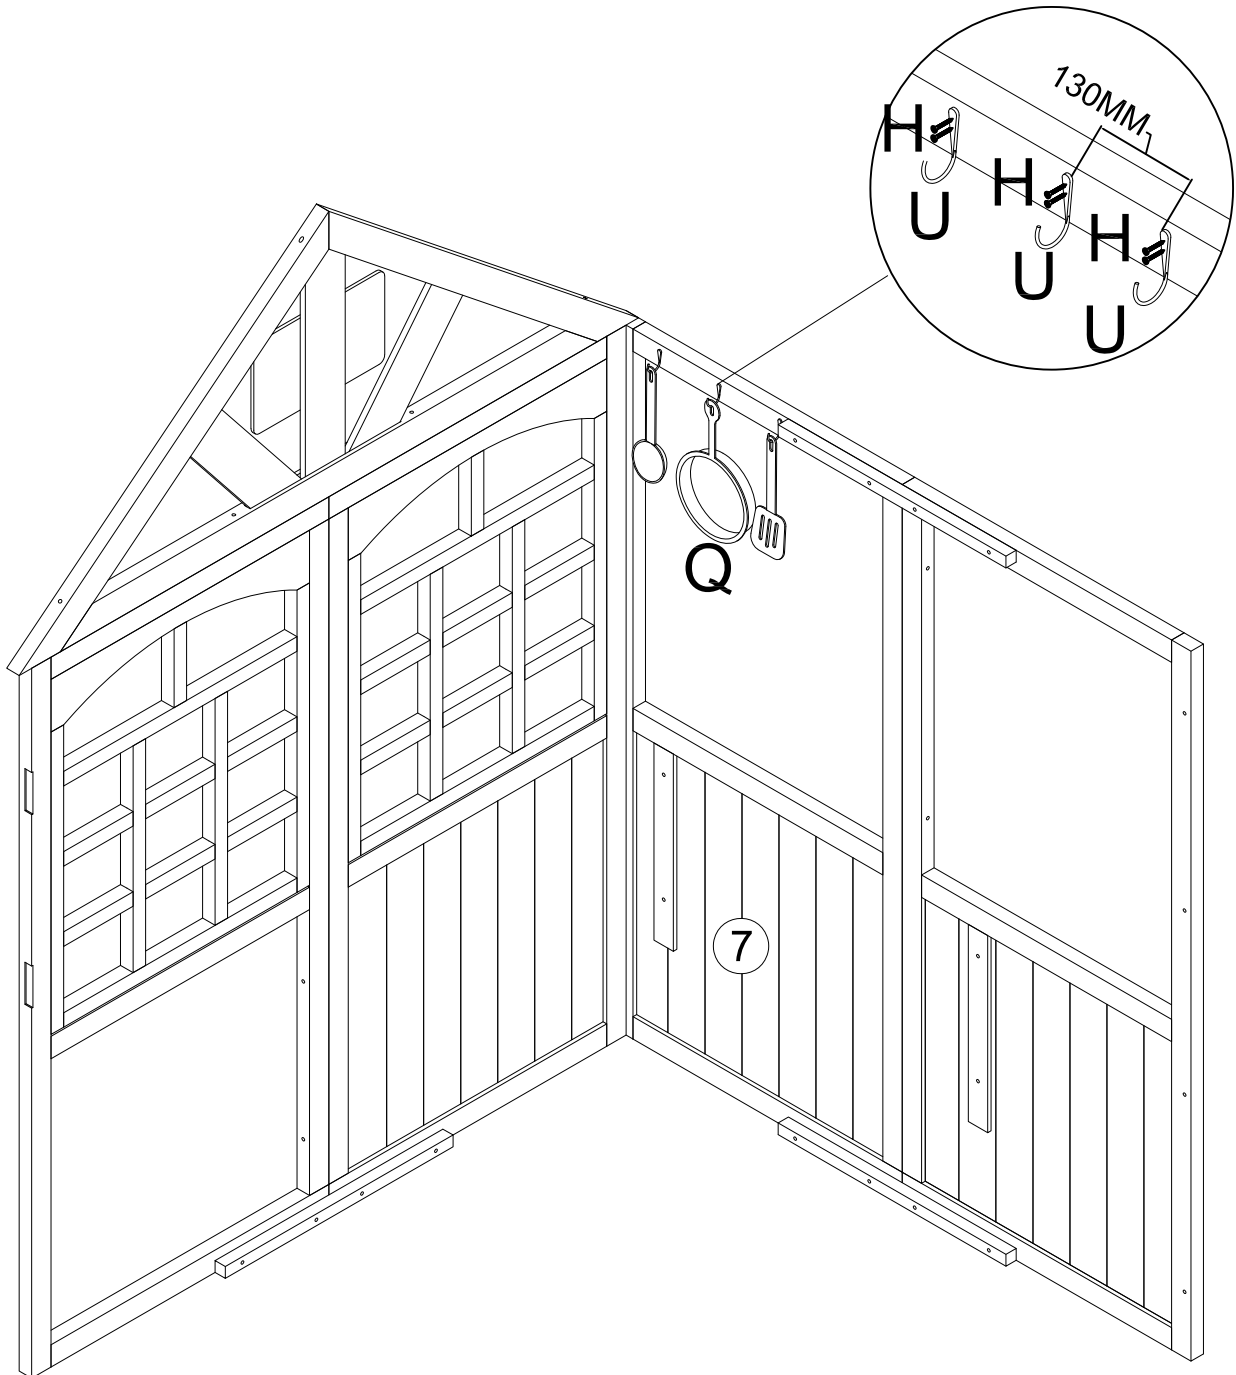

- a. Fix accessory (U) to part (7) using screws (H) (spacing approx. 130 mm).
- b. Hang accessory (Q) onto accessory (U).

HX6




3*18


QX1



 
UX3



9

 


15 X1

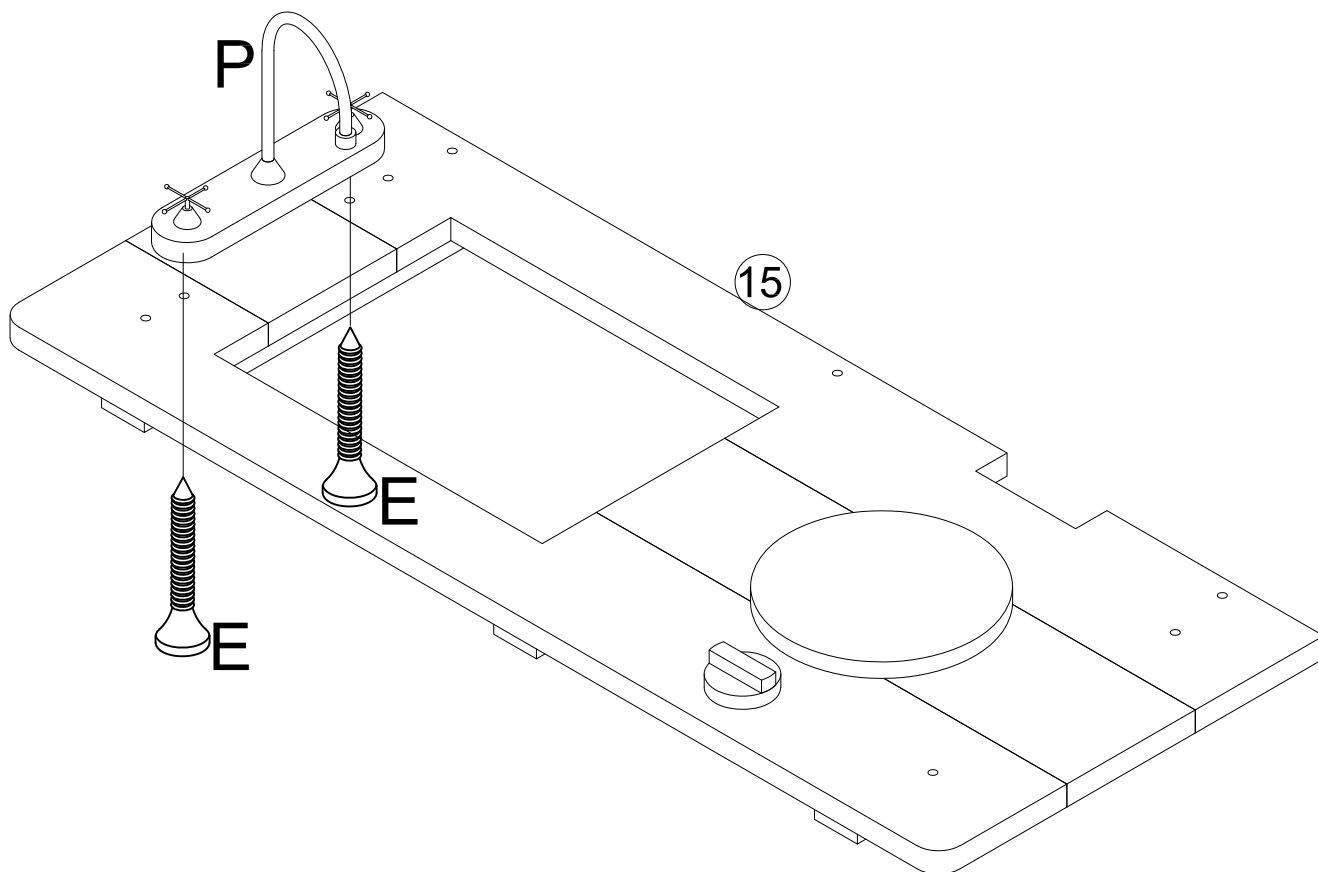


Fix accessory (P) to part (15) using screws (E).

 EX2



3.5*35



PX1

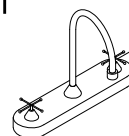

10




16 X2

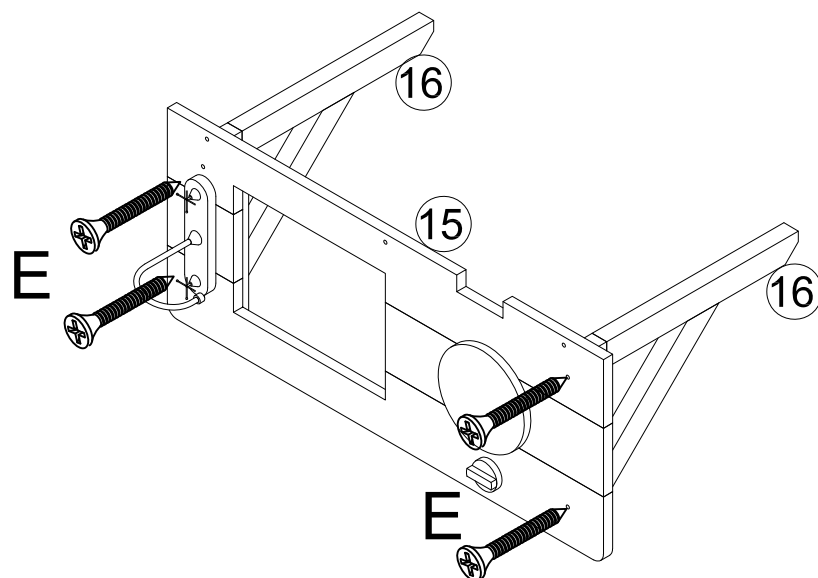
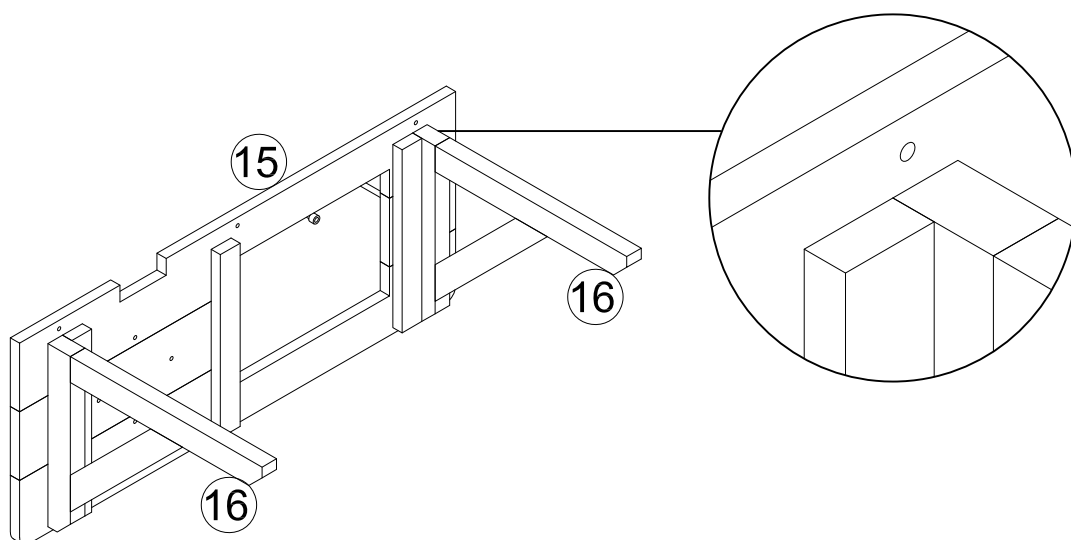


Fix part (15) to part (16) using screws (E) (align as shown).

 EX4



3.5*35

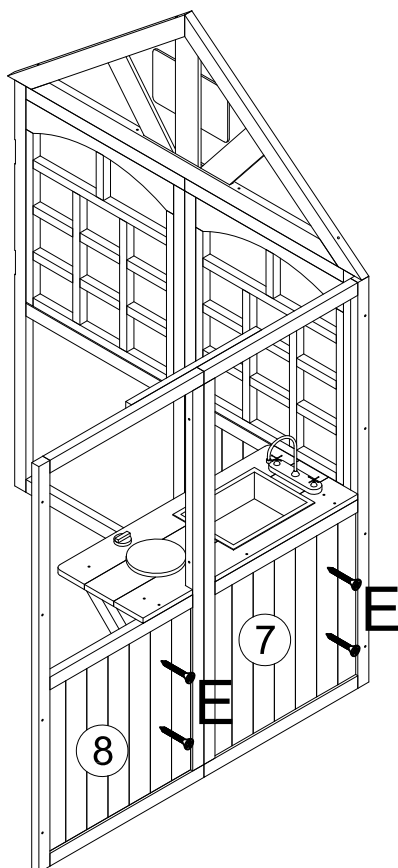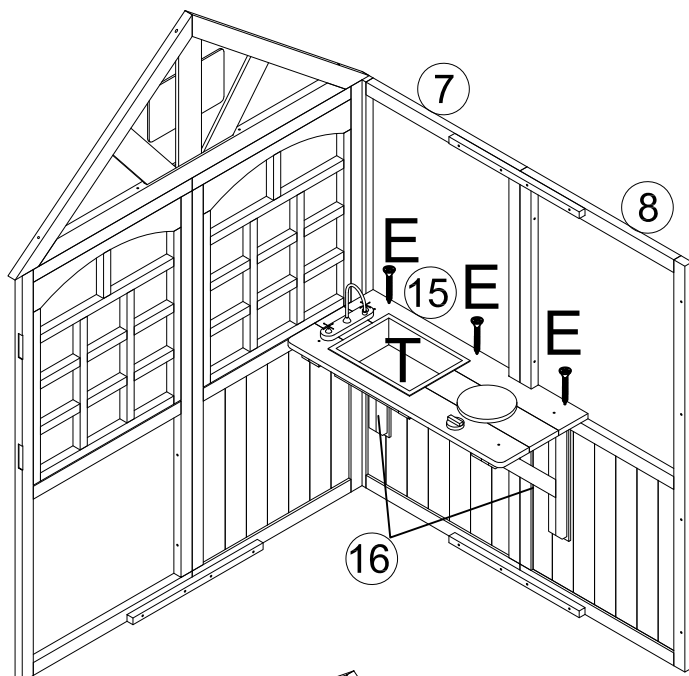


- Place accessory (T) onto part (15).
- Fix part (15) to parts (7) and (8) using screws (E).
- Reinforce part (16) from parts (8) and (7) using screws (E).

EX7




3.5*35

 
TX1




12

 

1 X1

 

2 X1

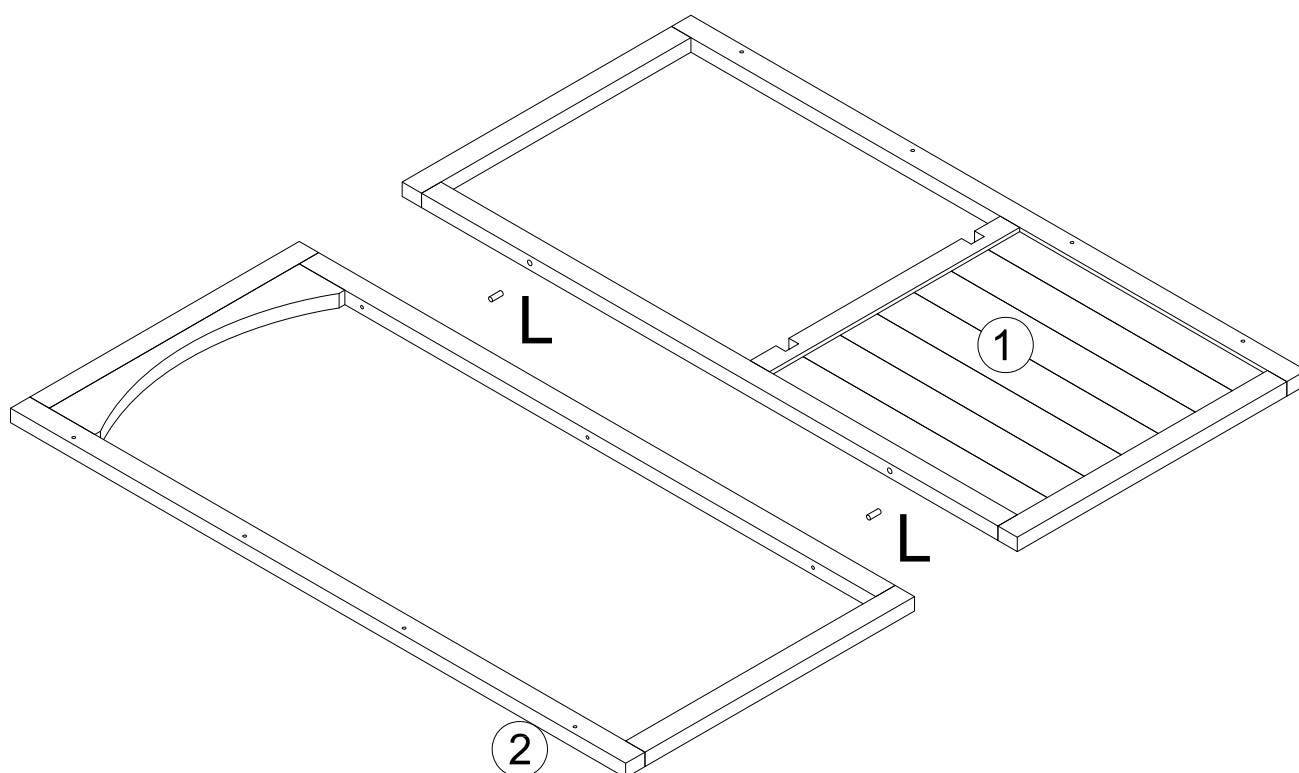


Connect parts (2) and (1) using wooden dowels (L).

LX2




Ø6*20

 13



26 X1

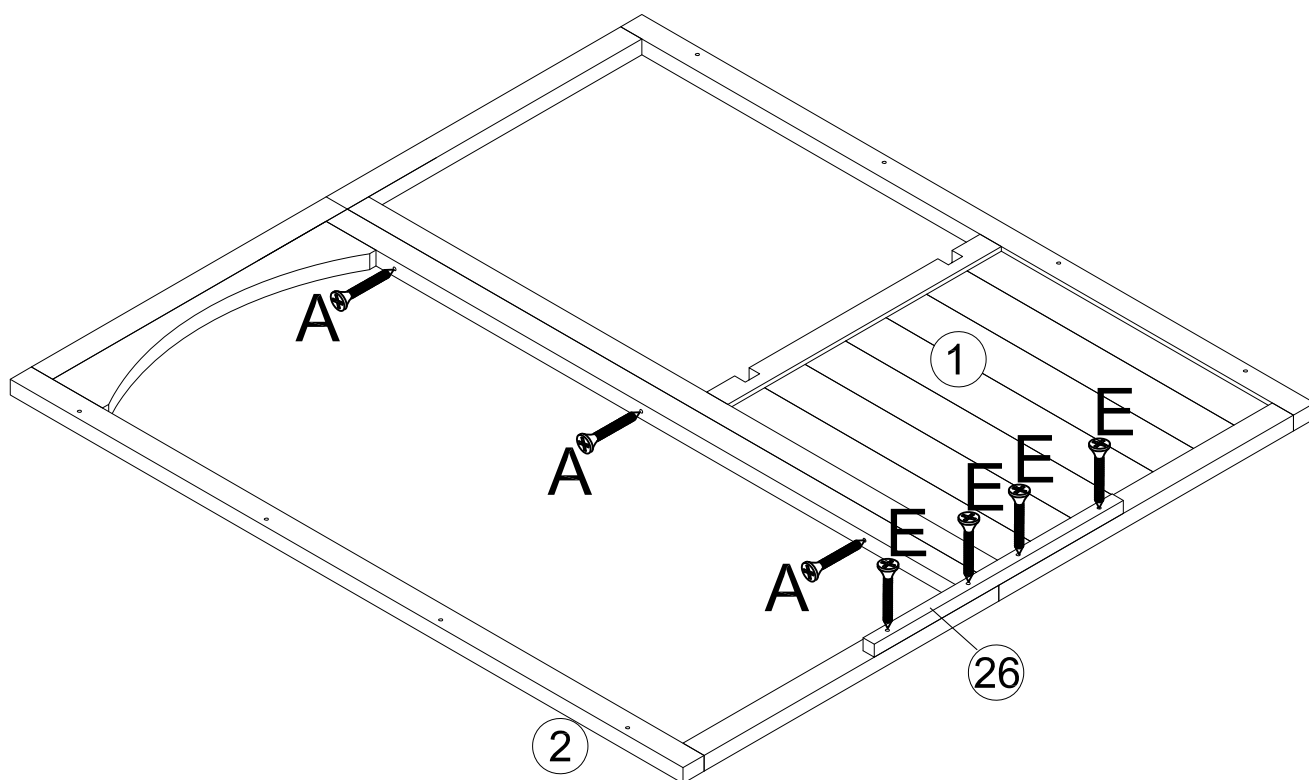

- a. Reinforce part (1) with part (2) using screws (A).
- b. Fix part (26) to parts (2) and (1) using screws (E).

AX3




3.5*60

EX4




3.5*35

 14



23 X2

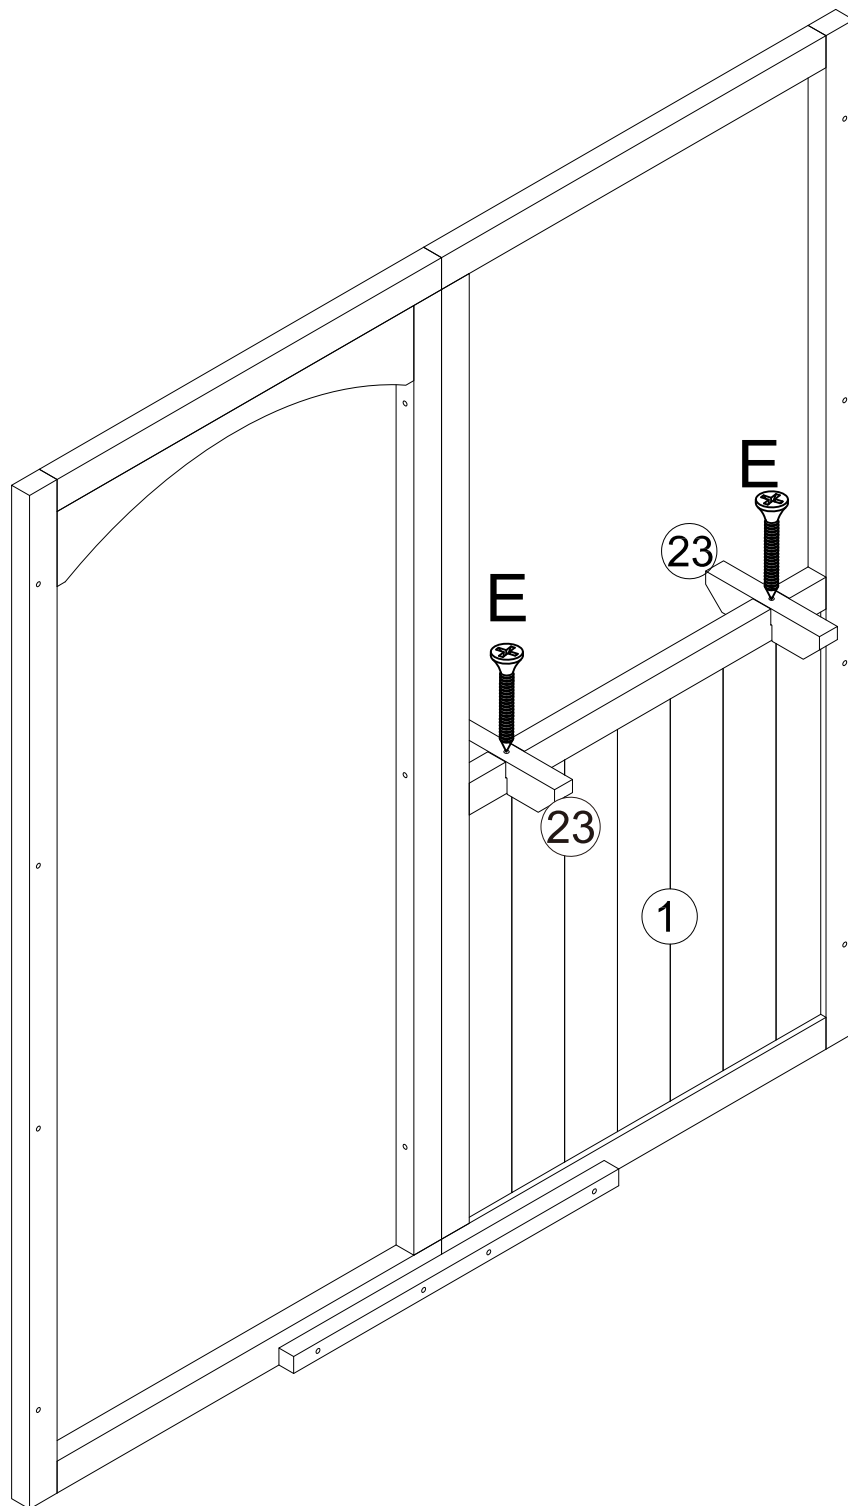


Fix part (23) to part (1) using screws (E).

EX2




3.5*35

 15



14 X1

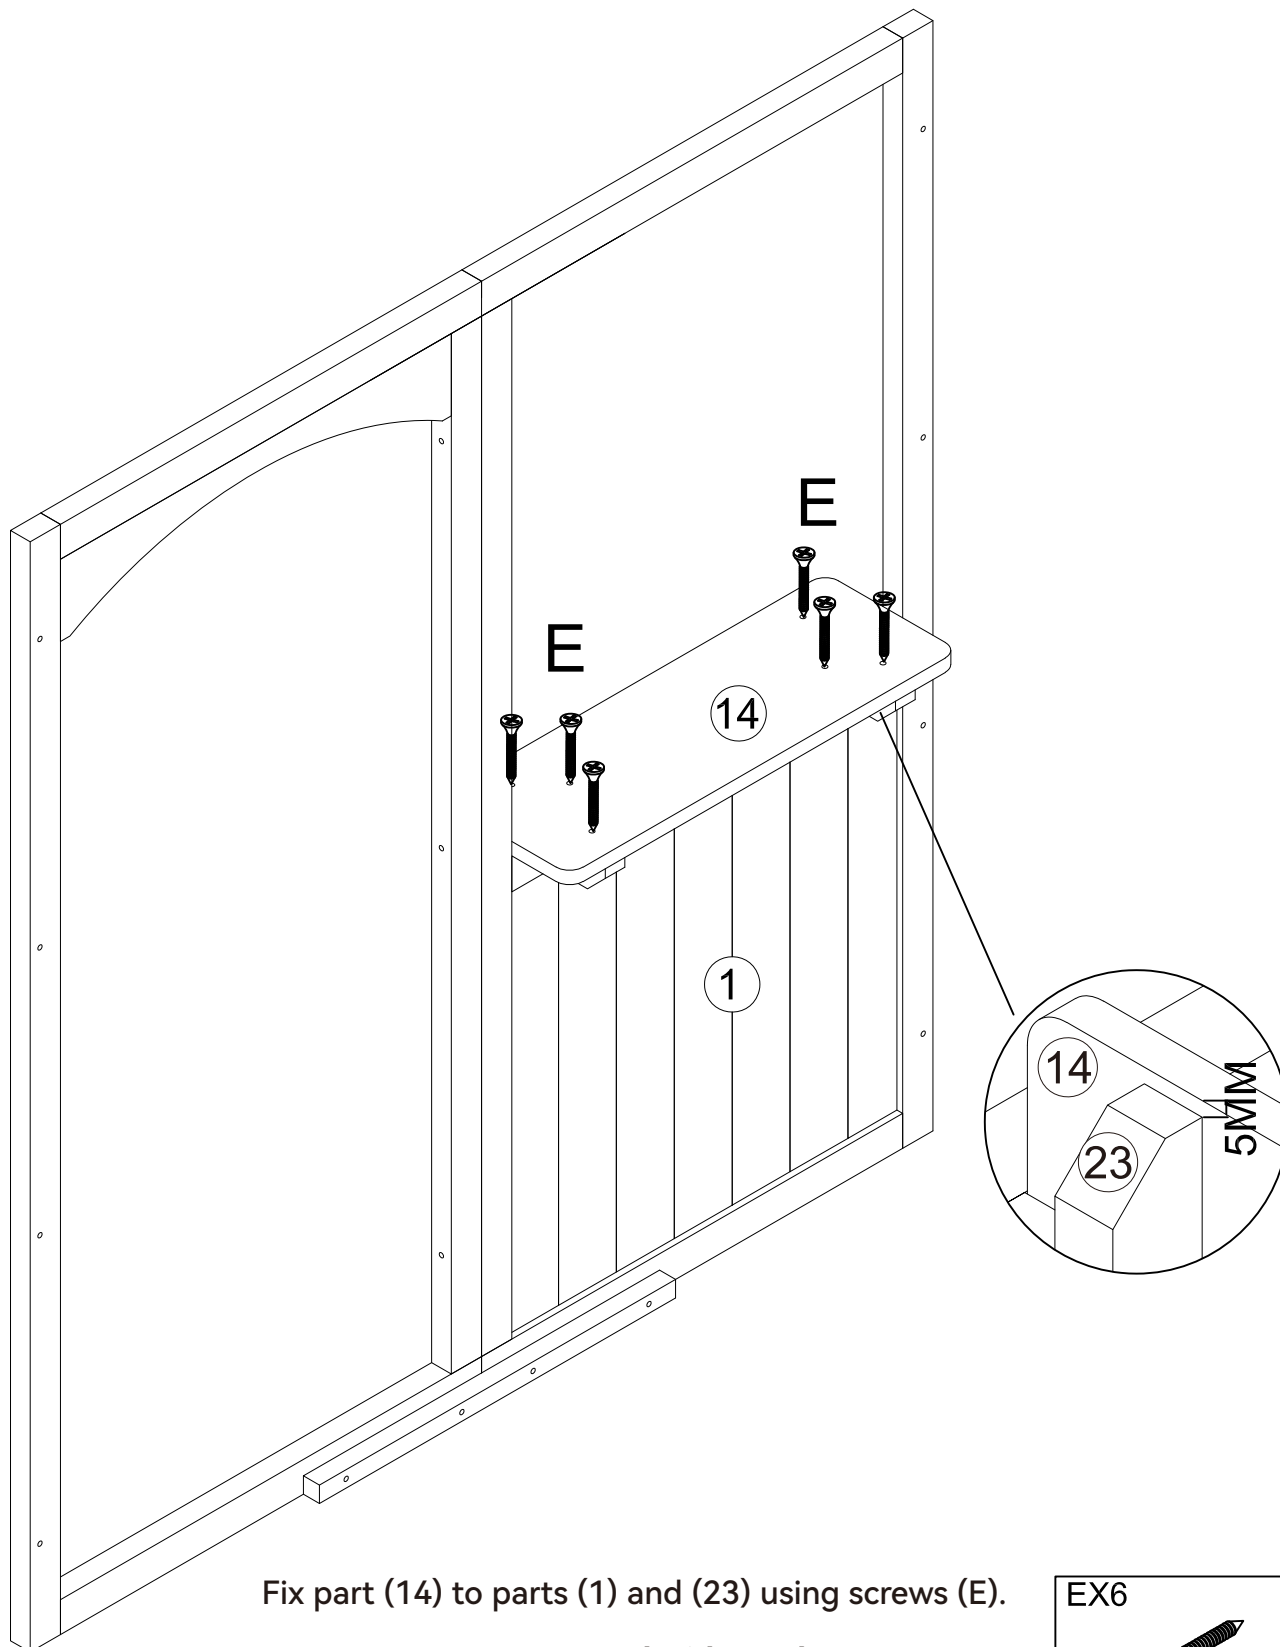

Fix part (14) to parts (1) and (23) using screws (E).


Note: Leave 5 mm on each side as shown.

EX6




3.5*35





 
16



10 X1

 

52 X1

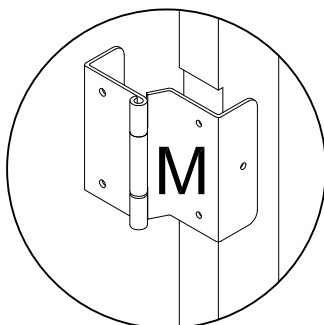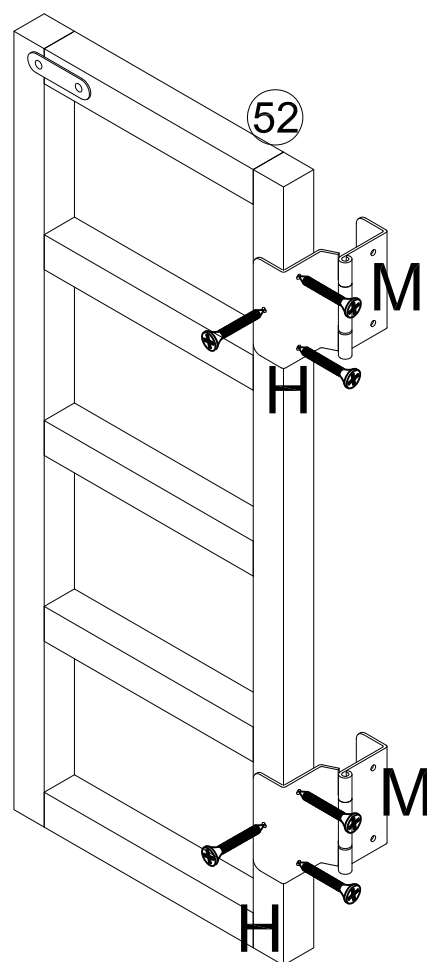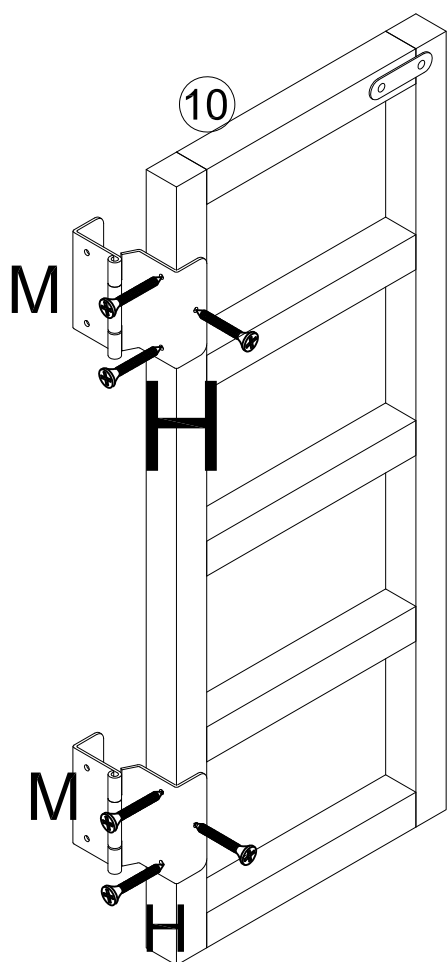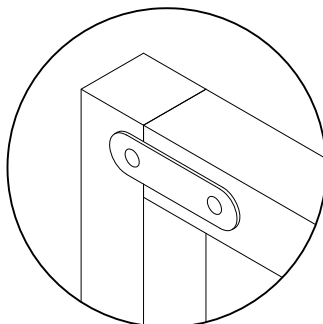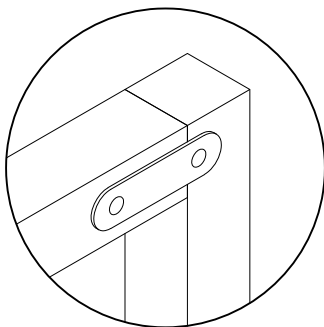

Fix accessory (M) to parts (10) and (52) using screws (H).


Note: Insert accessory (M) into the slot as shown.

HX12




3*18

 MX4



17

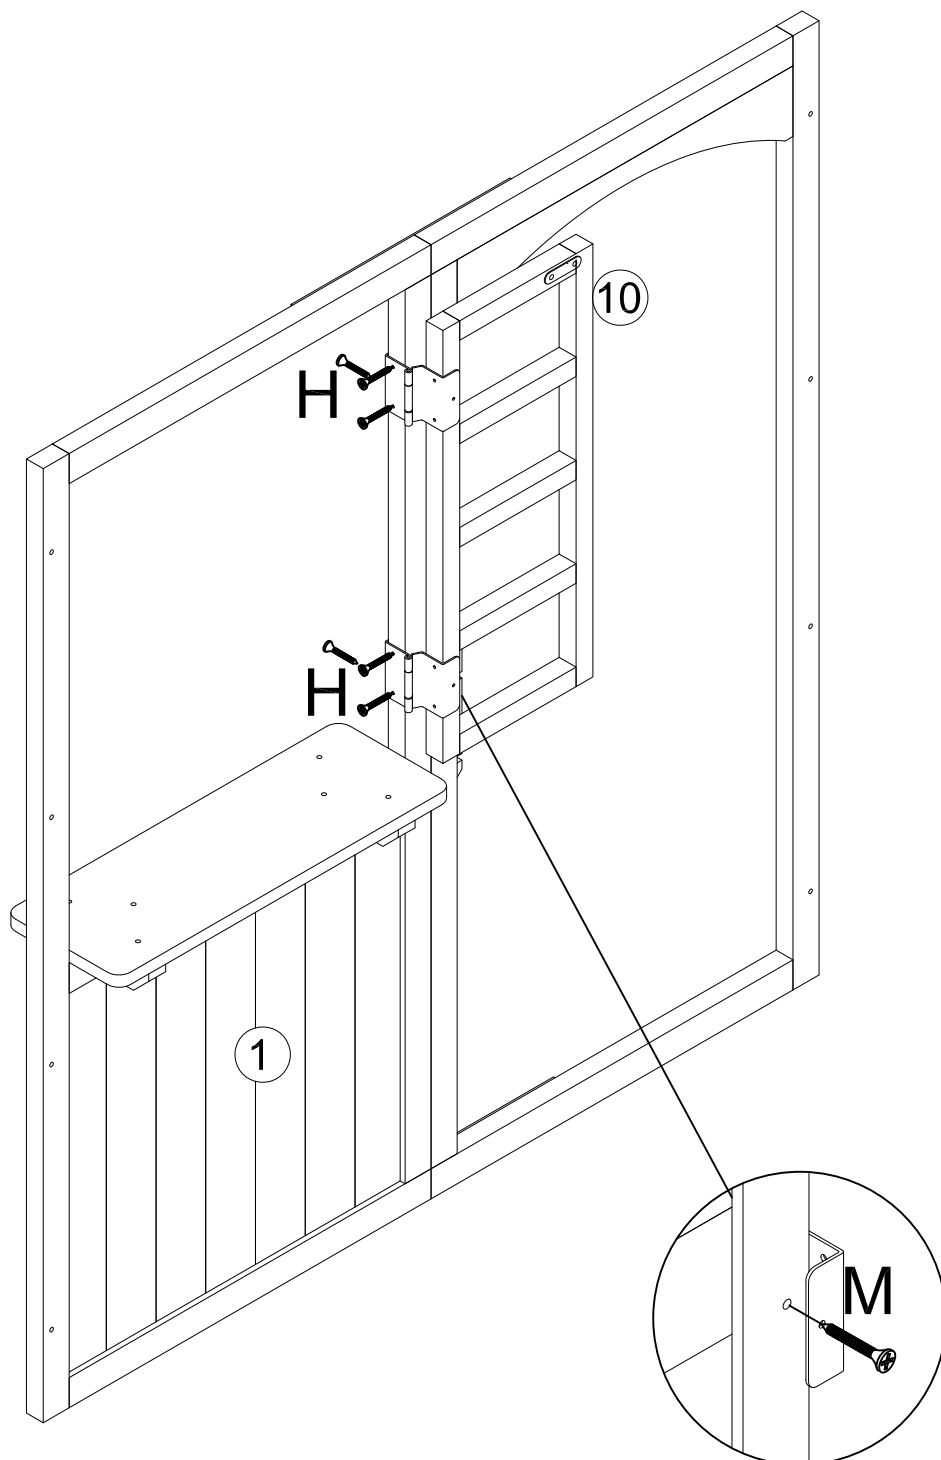

Fix part (10) to part (1) using screws (H).


Note: Align accessory (M) with the pilot holes.

HX6



3*18

18

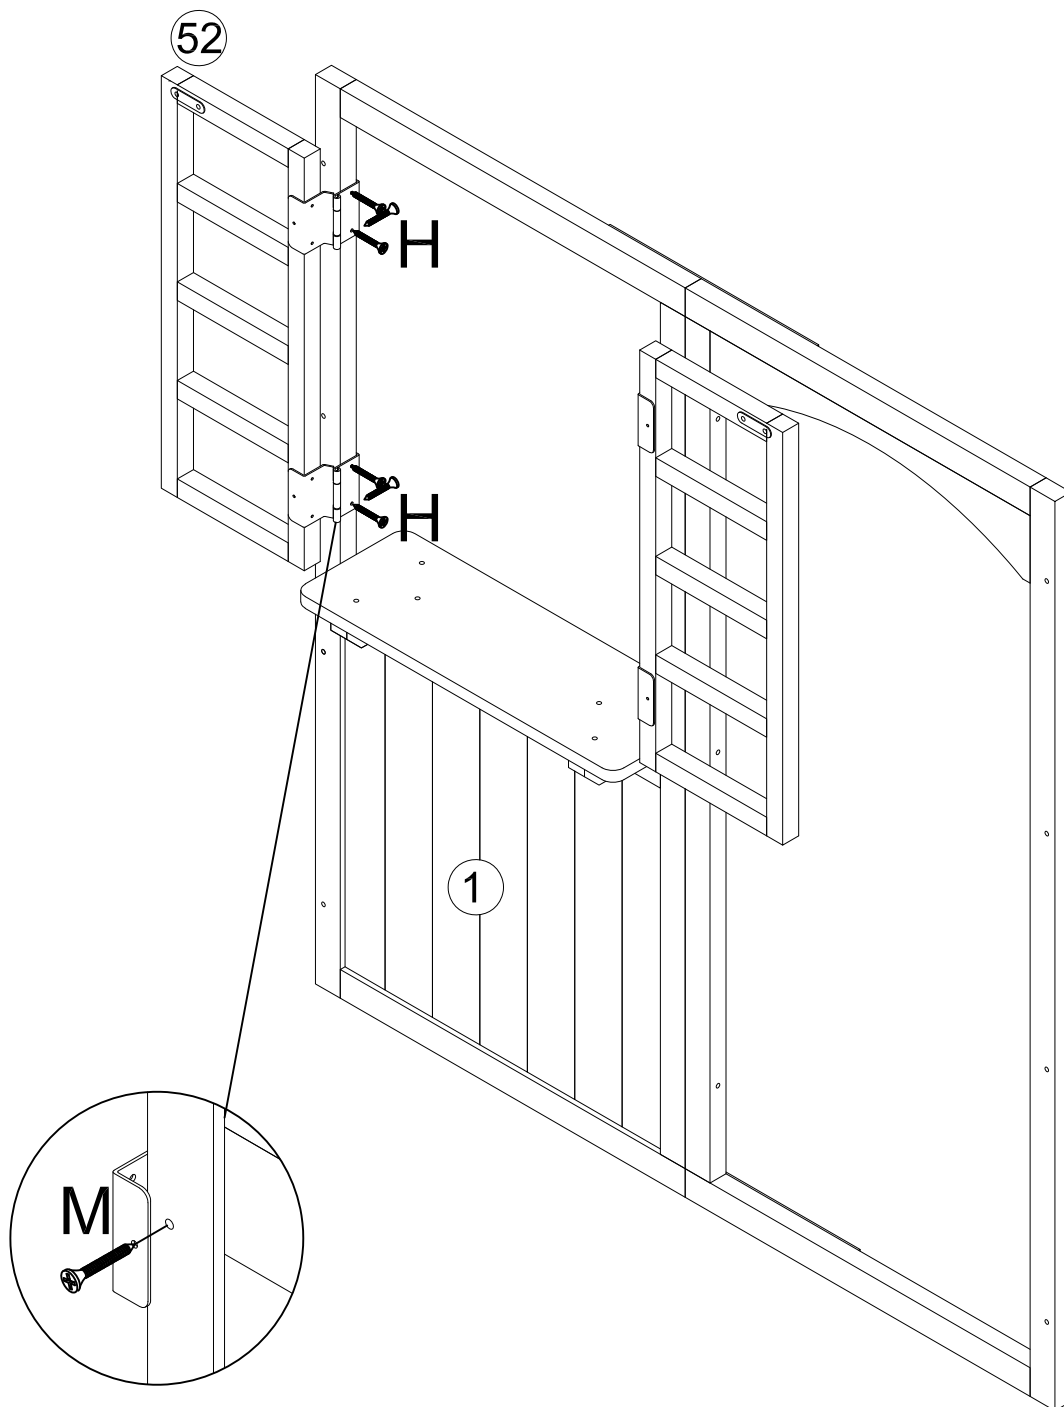

Fix part (52) to part (1) using screws (H).


Note: Align accessory (M) with the pilot holes.

HX6



3*18

19

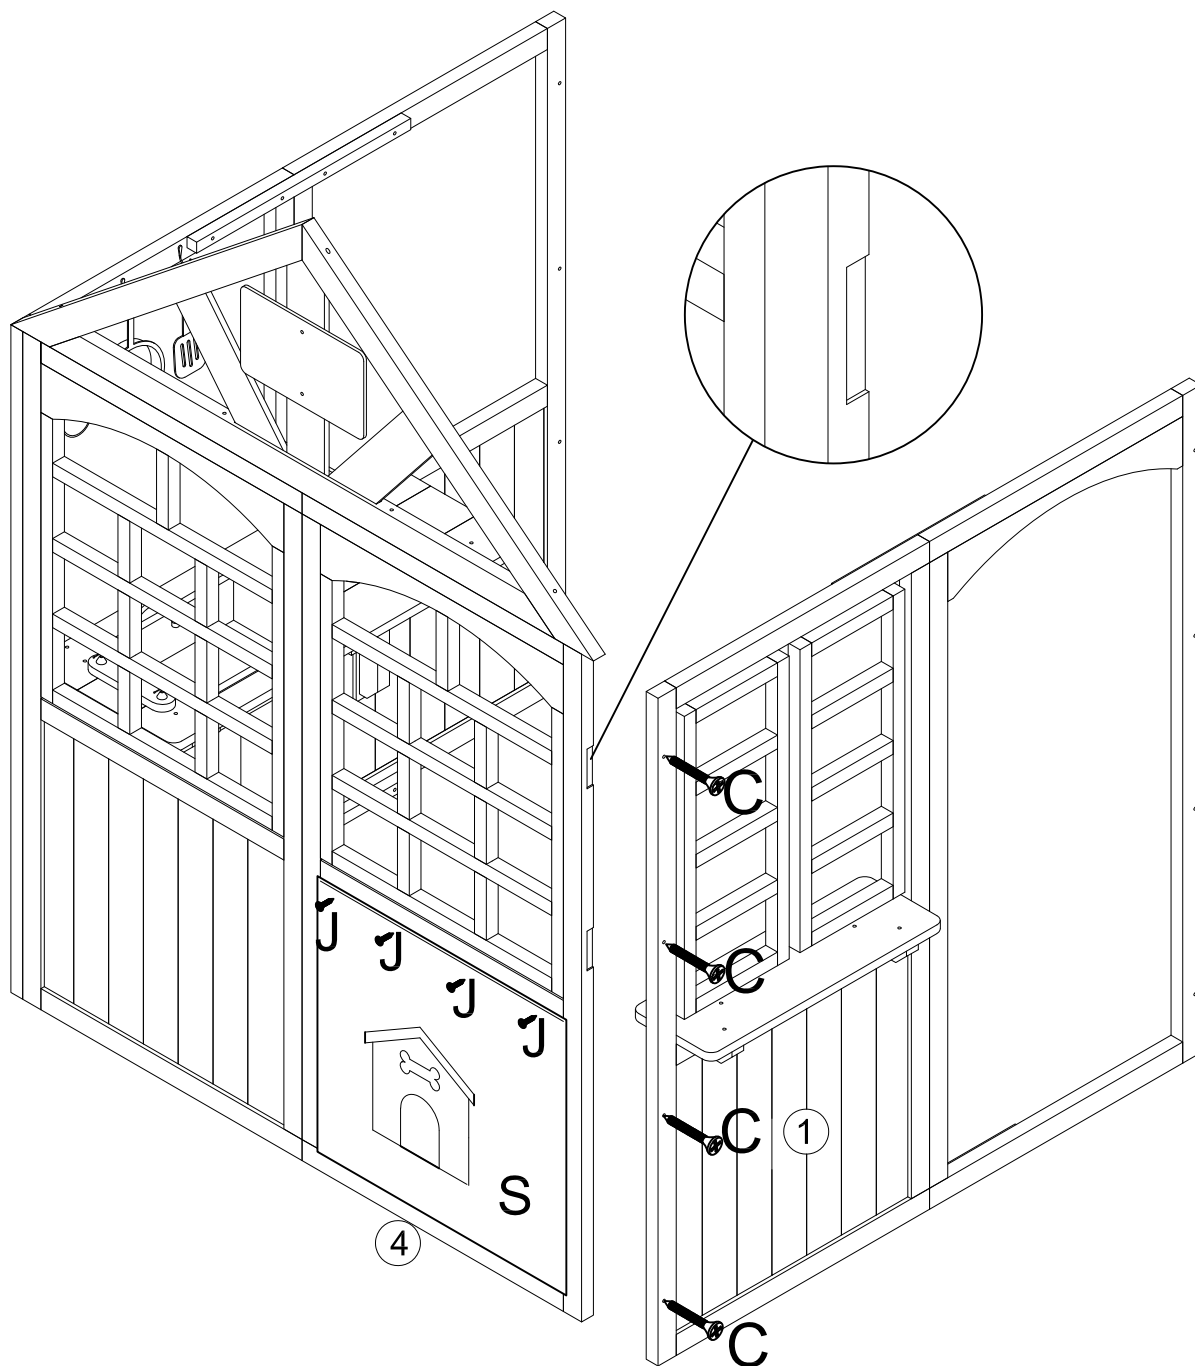

- a. Fix part (1) to part (4) using screws (C).
- b. Fix accessory (S) to part (4) using screws (J).

CX4



3.5*45

JX4




3*15


SX1



 
20



11 X1

 

12 X1

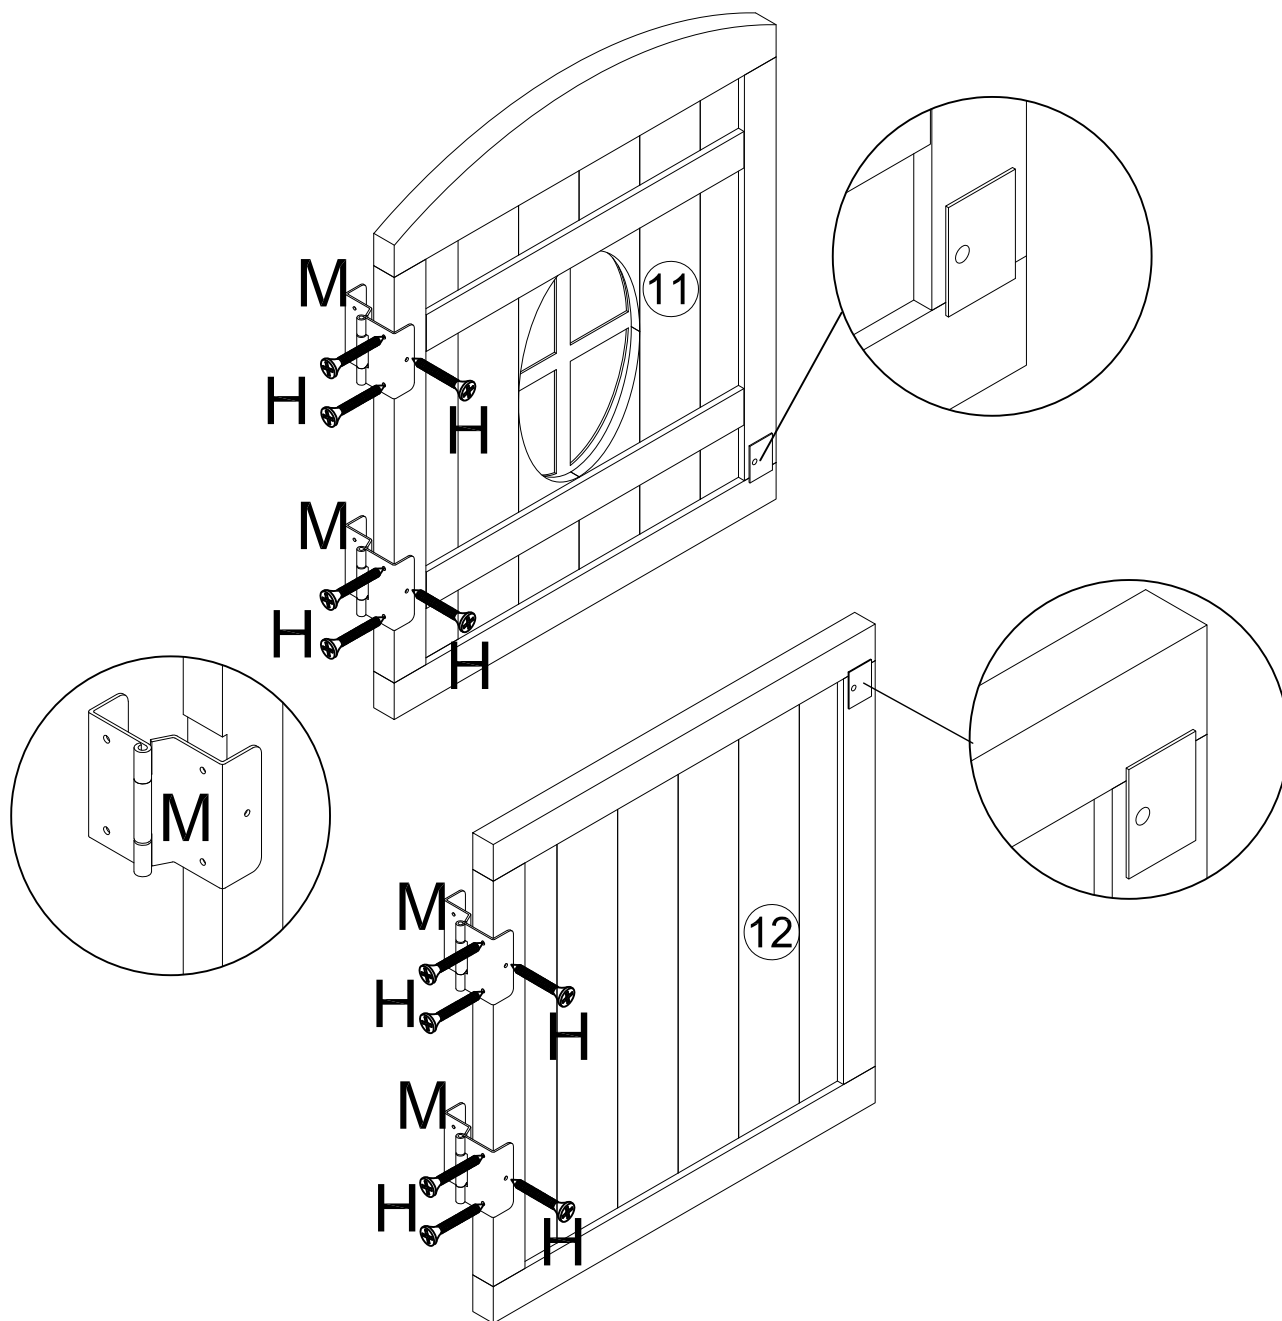

Fix accessory (M) to parts (11) and (12) using screws (H).


Note: Insert into slot as shown.

HX12




3*18

 MX4




21

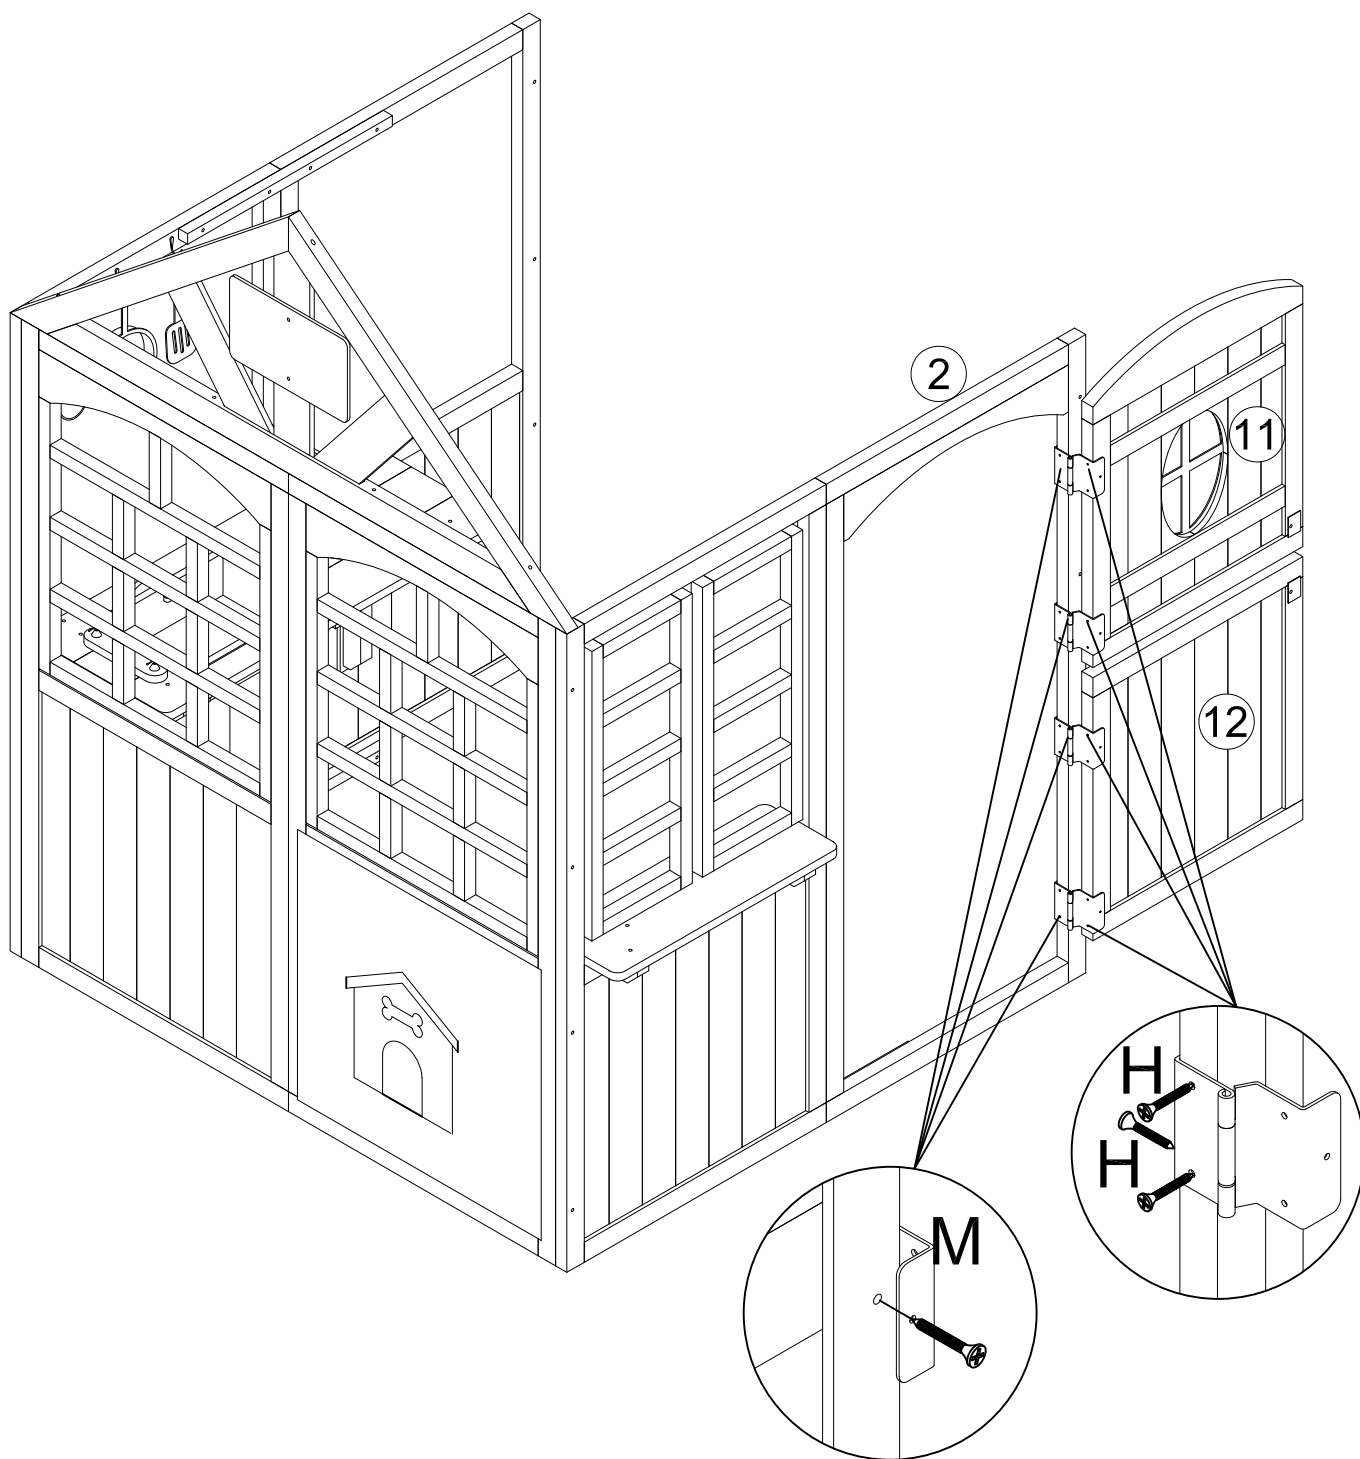

Fix parts (11) and (12) to part (2) using screws (H).

Note: Align with pilot holes.

 HX12




3*18


22



 25 X2



27 X1

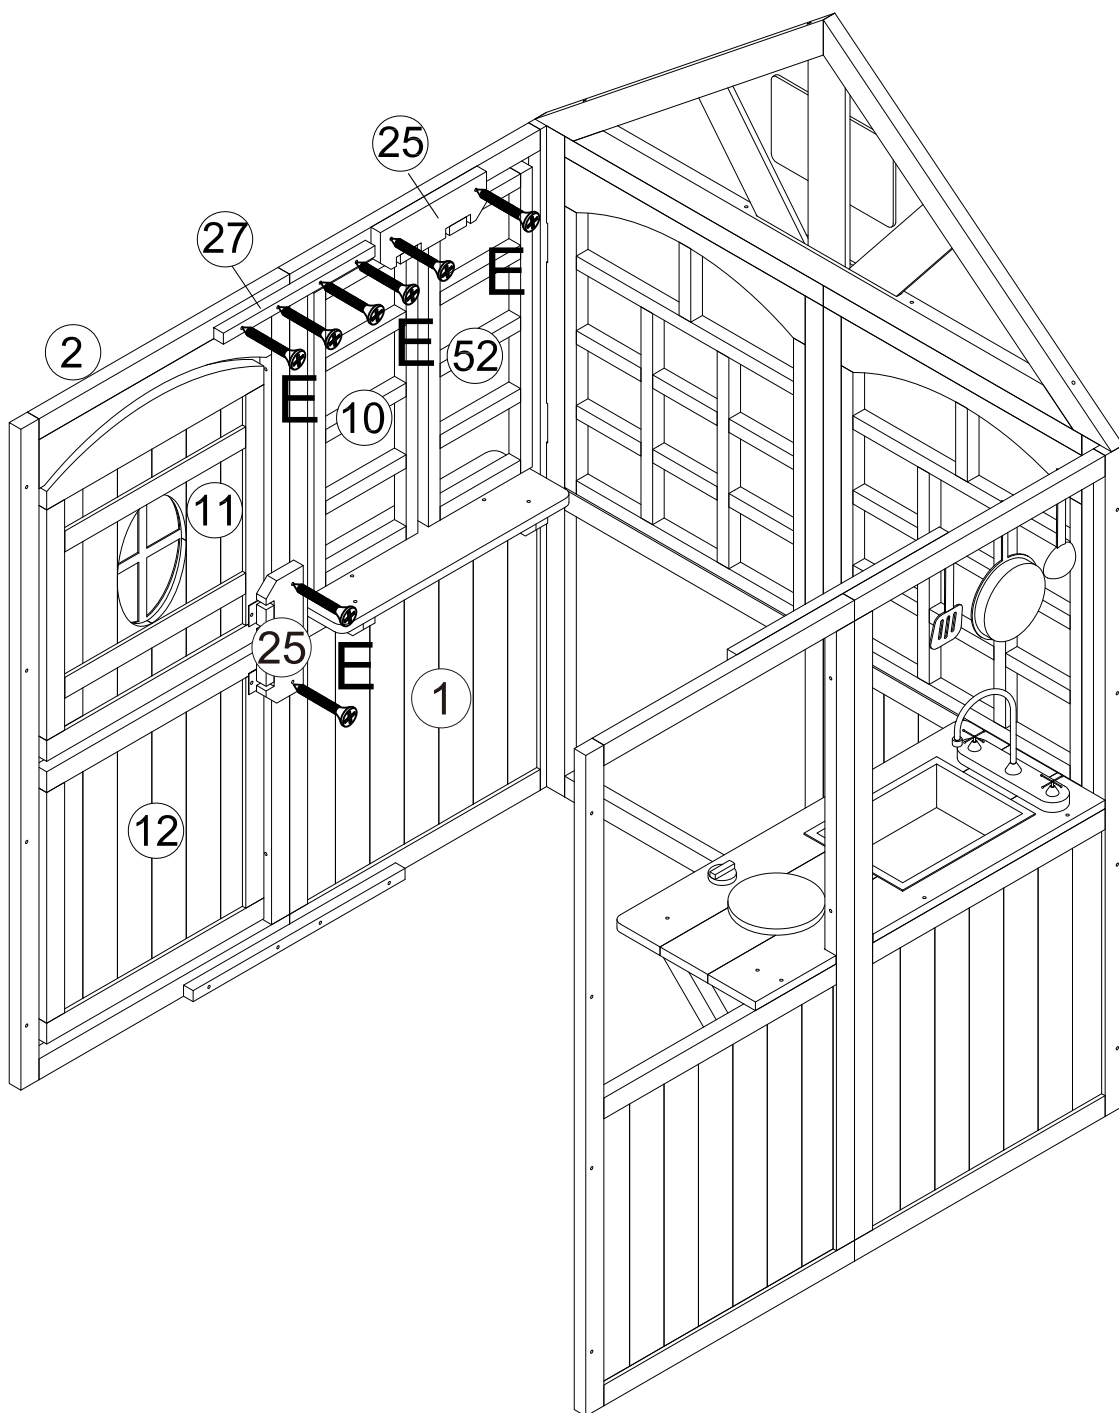

a. Fix part (25) to the inner side of part (1) using screws (E).


Note: Align with magnetic catches on parts (10) and (52).

b. Fix part (27) to parts (2) and (1) using screws (E).

c. Fix part (25) to the inner side of part (2) using screws (E).


Note: Align with magnetic catches on parts (11) and (12).

 EX8




3.5*35

 
23



5 X1

 

51 X1

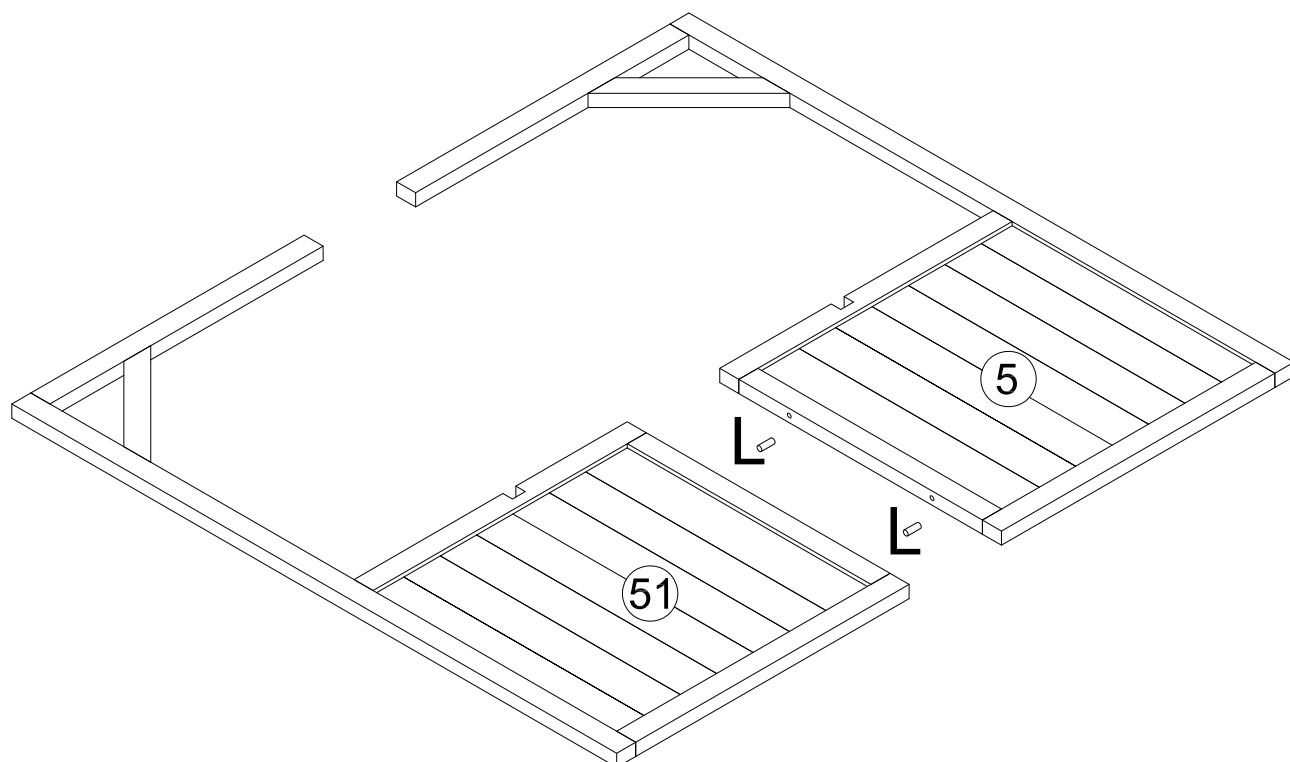


Connect parts (51) and (5) using wooden dowels (L).

LX2




Ø6*20

 
24



17 X1

 

26 X1

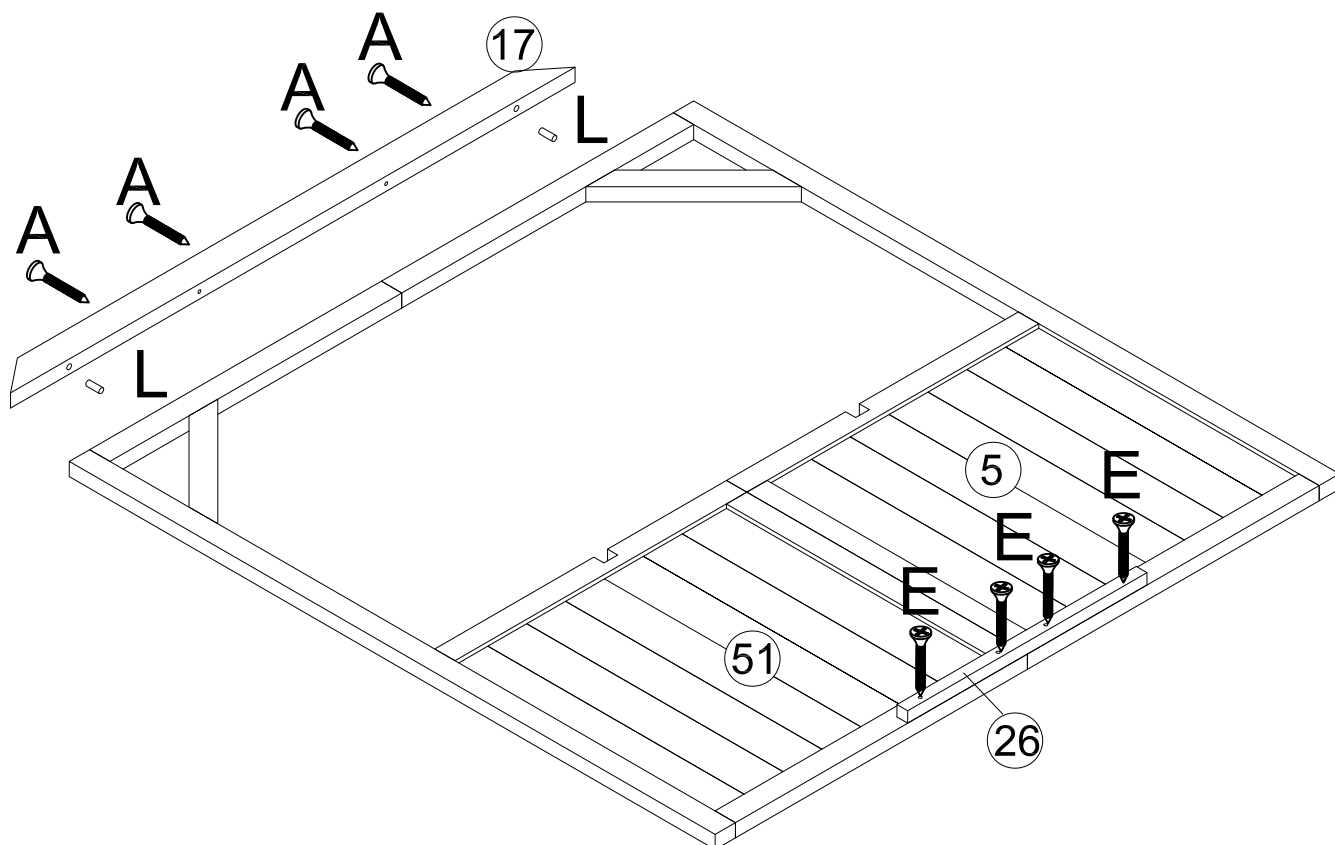

- Fix part (26) to parts (51) and (5) using screws (E).
- Connect part (17) to parts (51) and (5) using wooden dowels (L), then secure with screws (A).

AX4



3.5*60

EX4









3.5*35

LX2




Ø6*20

  25

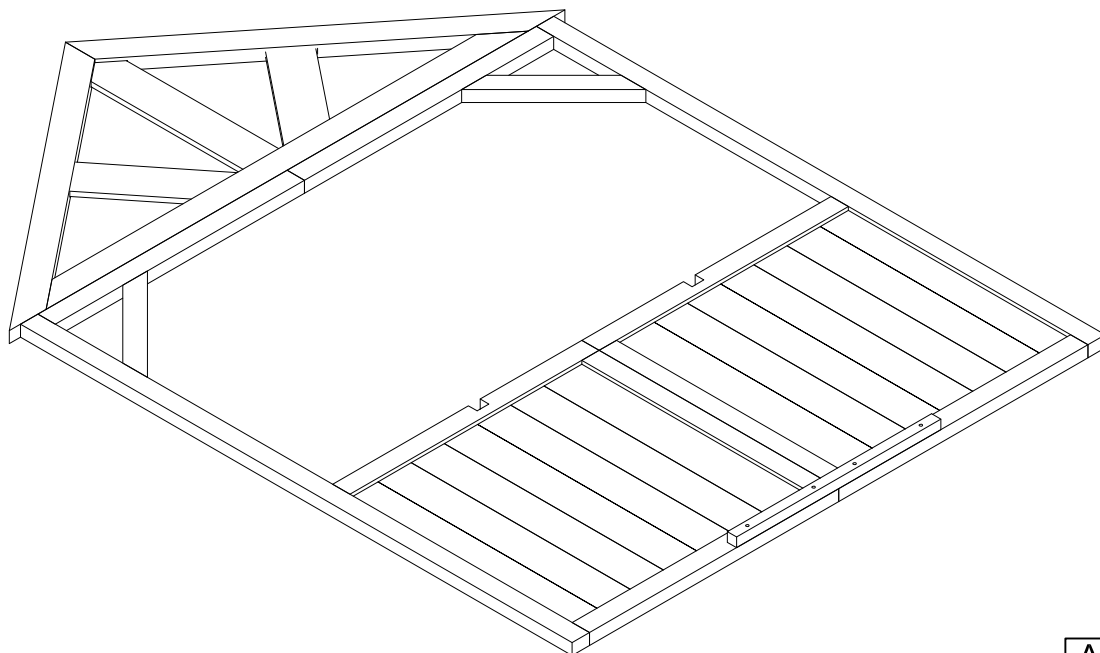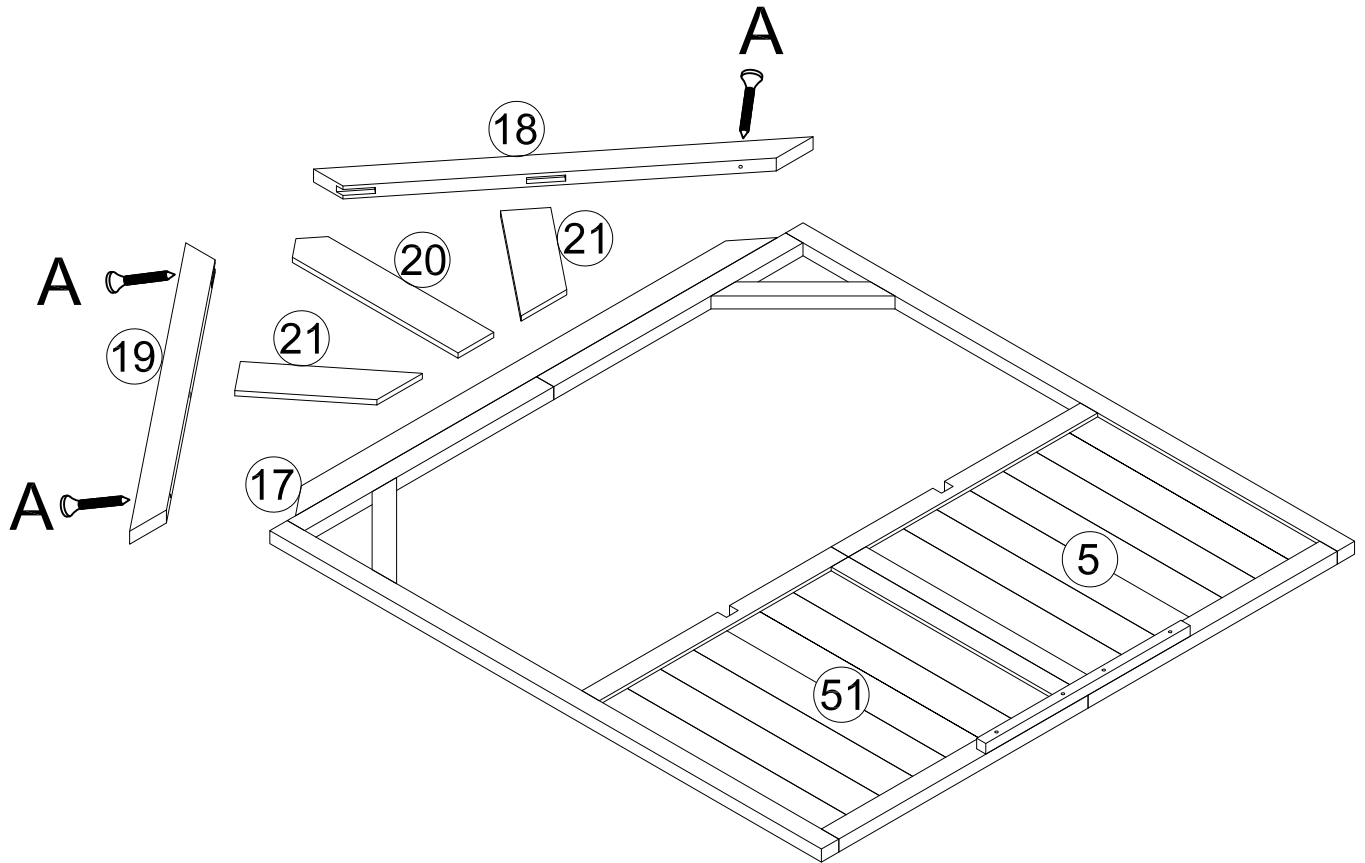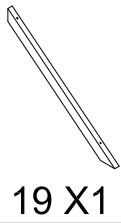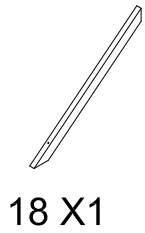


Assemble parts (18), (19), (20), and (21) with part (17), then secure with screws (A).

 AX3



3.5*60

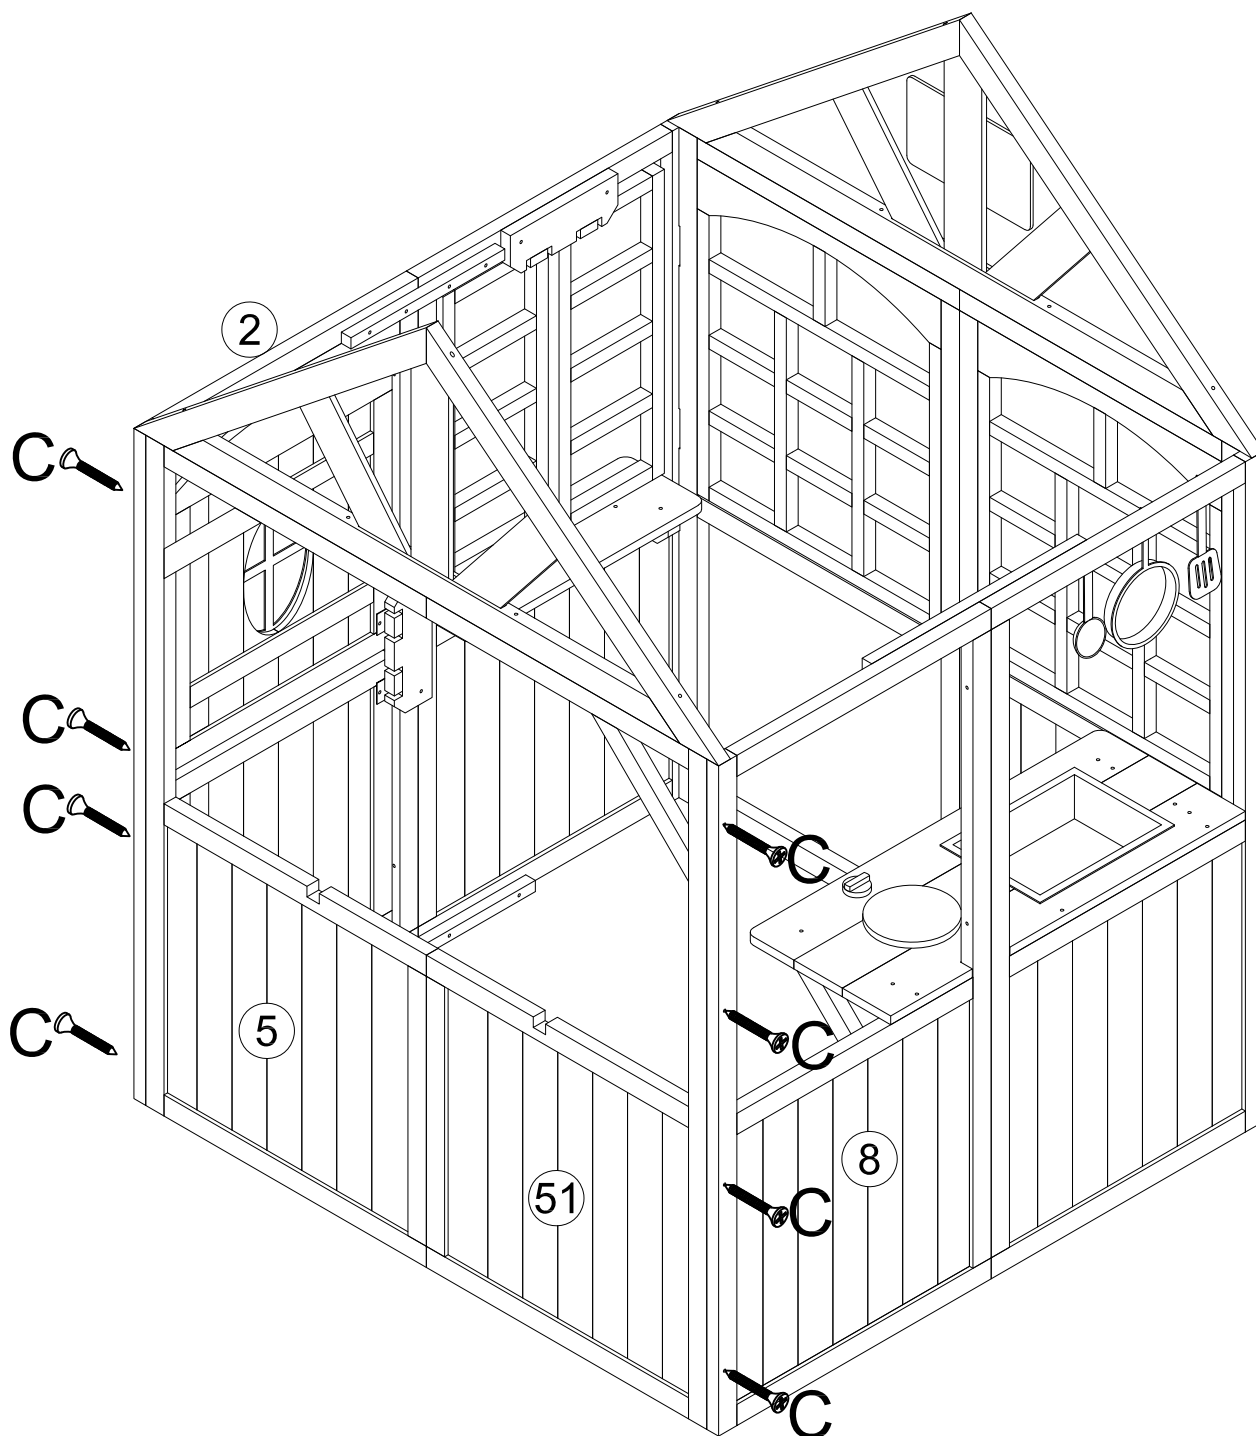


Fix part (2) to part (5) using screws (C),
and fix part (8) to part (51) using screws (C).

CX8




3.5*45

 
27




22 X1

 

23 X2

 

24 X1

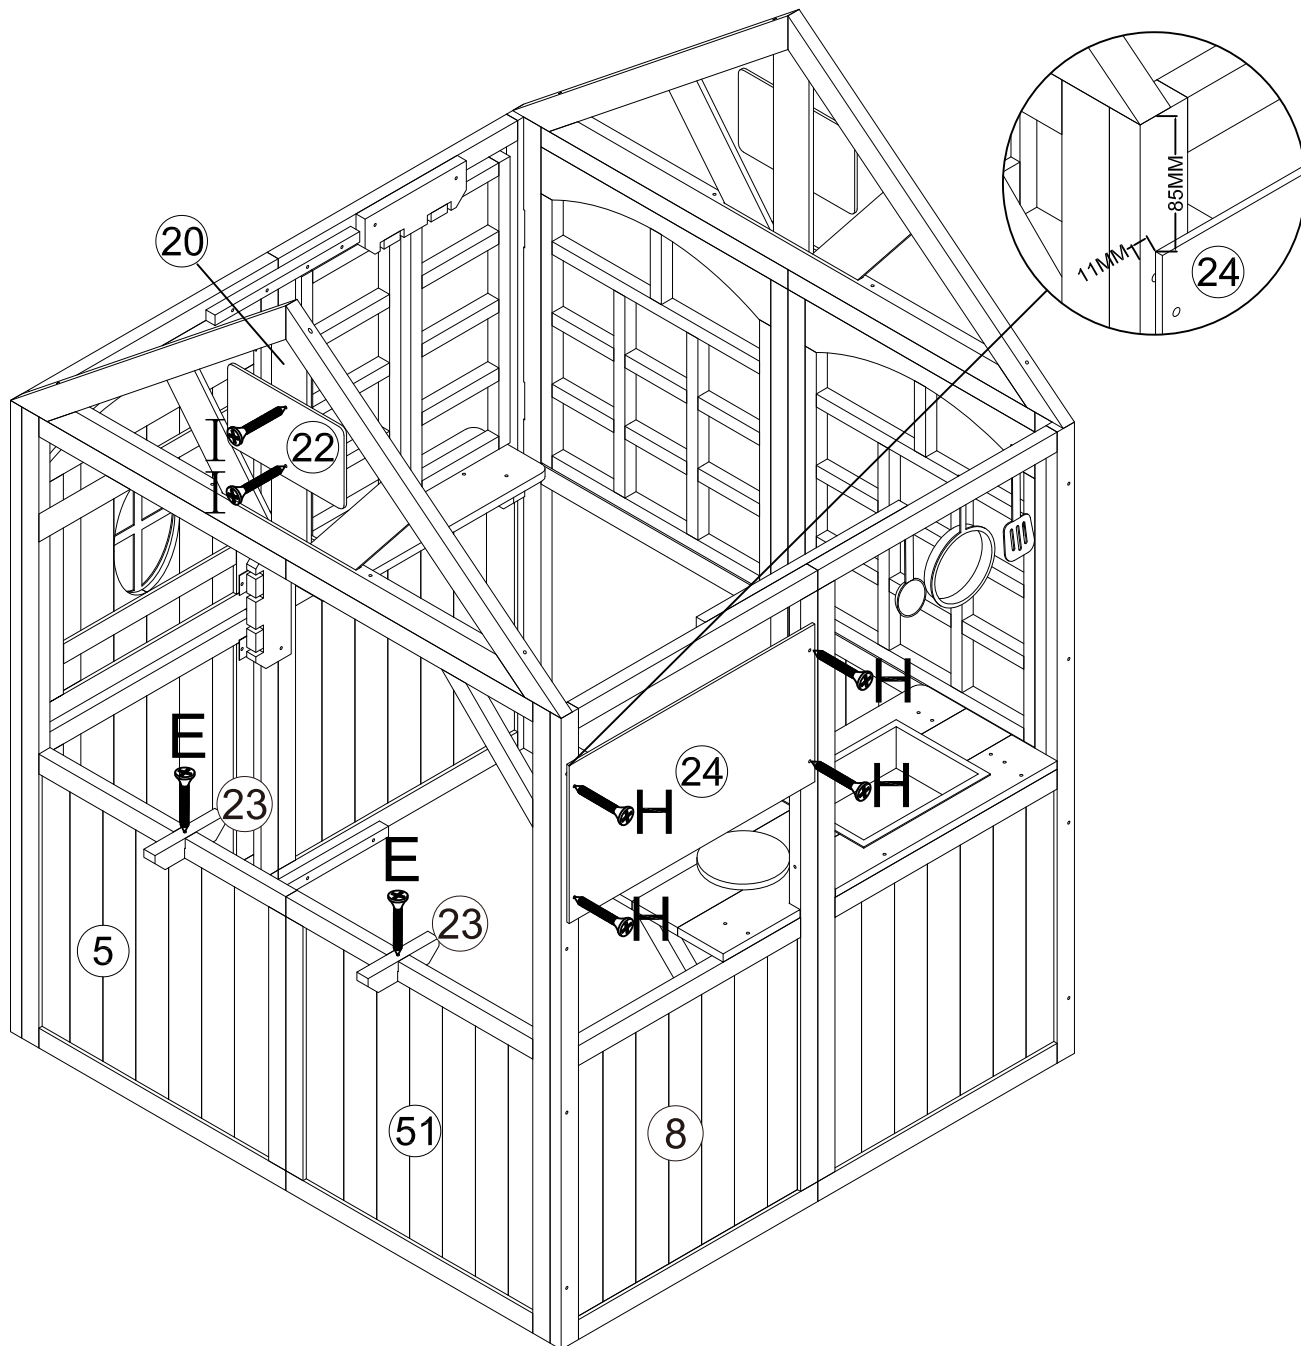

- Fix part (22) to part (20) using screws (I) (as shown).
- Fix part (23) to parts (5) and (51) using screws (E).
- Fix part (24) to part (8) using screws (H).

Note: Leave 85 mm at the top and 11 mm at the side.

EX2



3.5*35

HX4




3*18

IX2




3*12

28

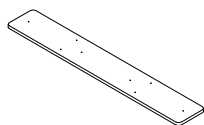

13 X1

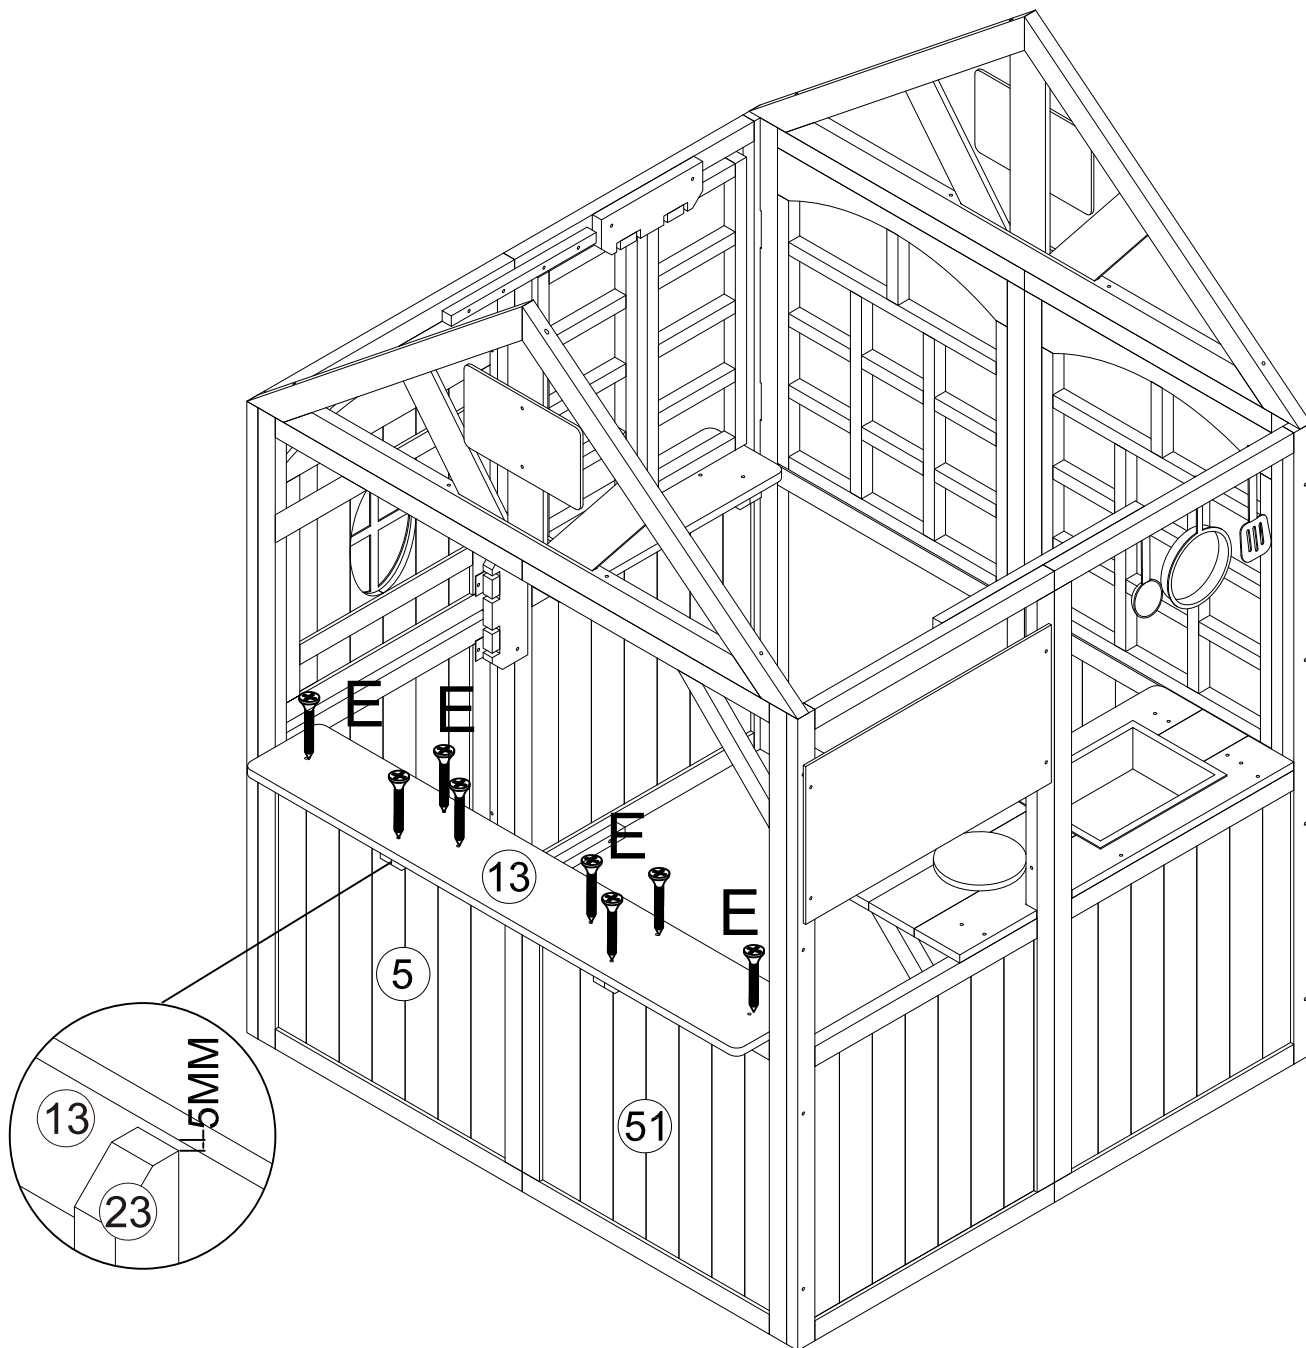

Fix part (13) to parts (5) and (51) using screws (E).

Note: Leave 5 mm on each side as shown.

EX8



3.5*35

 
29




42 X1




43 X1



44 X2

 

45 X1

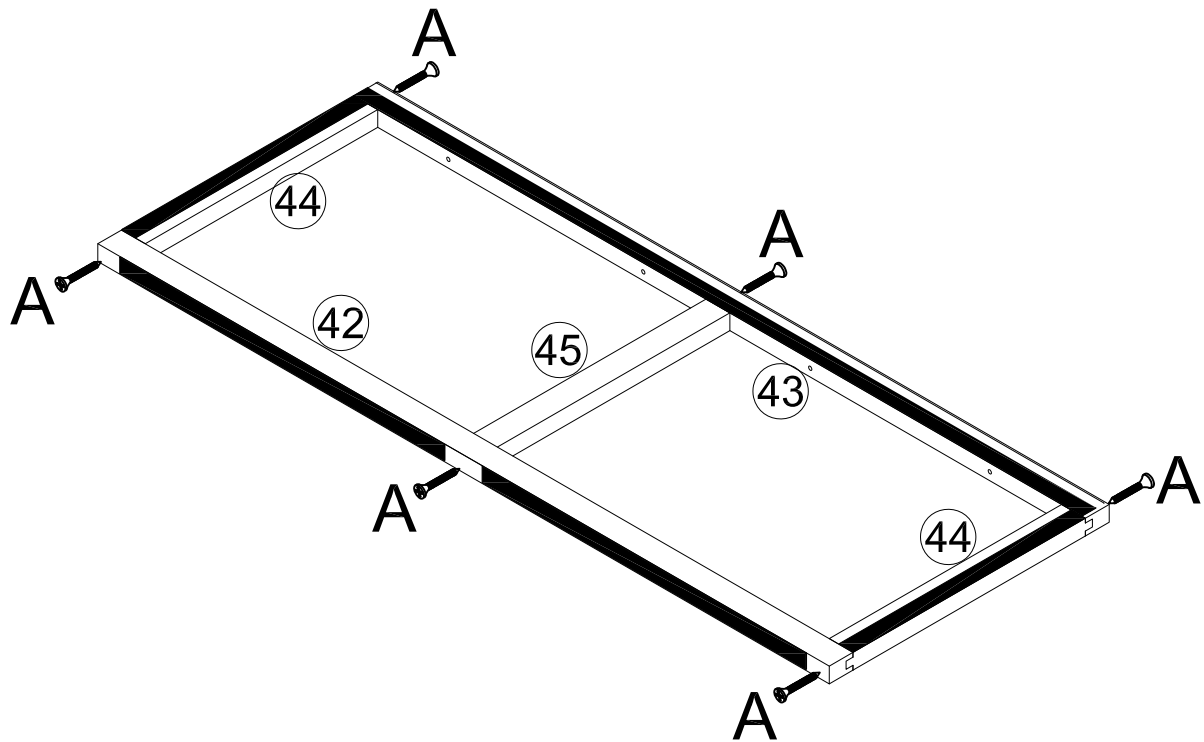


Assemble parts (42), (43), (44), and (45),
then secure with screws (A) (as shown).

AX6





3.5*60

 30



36 X2

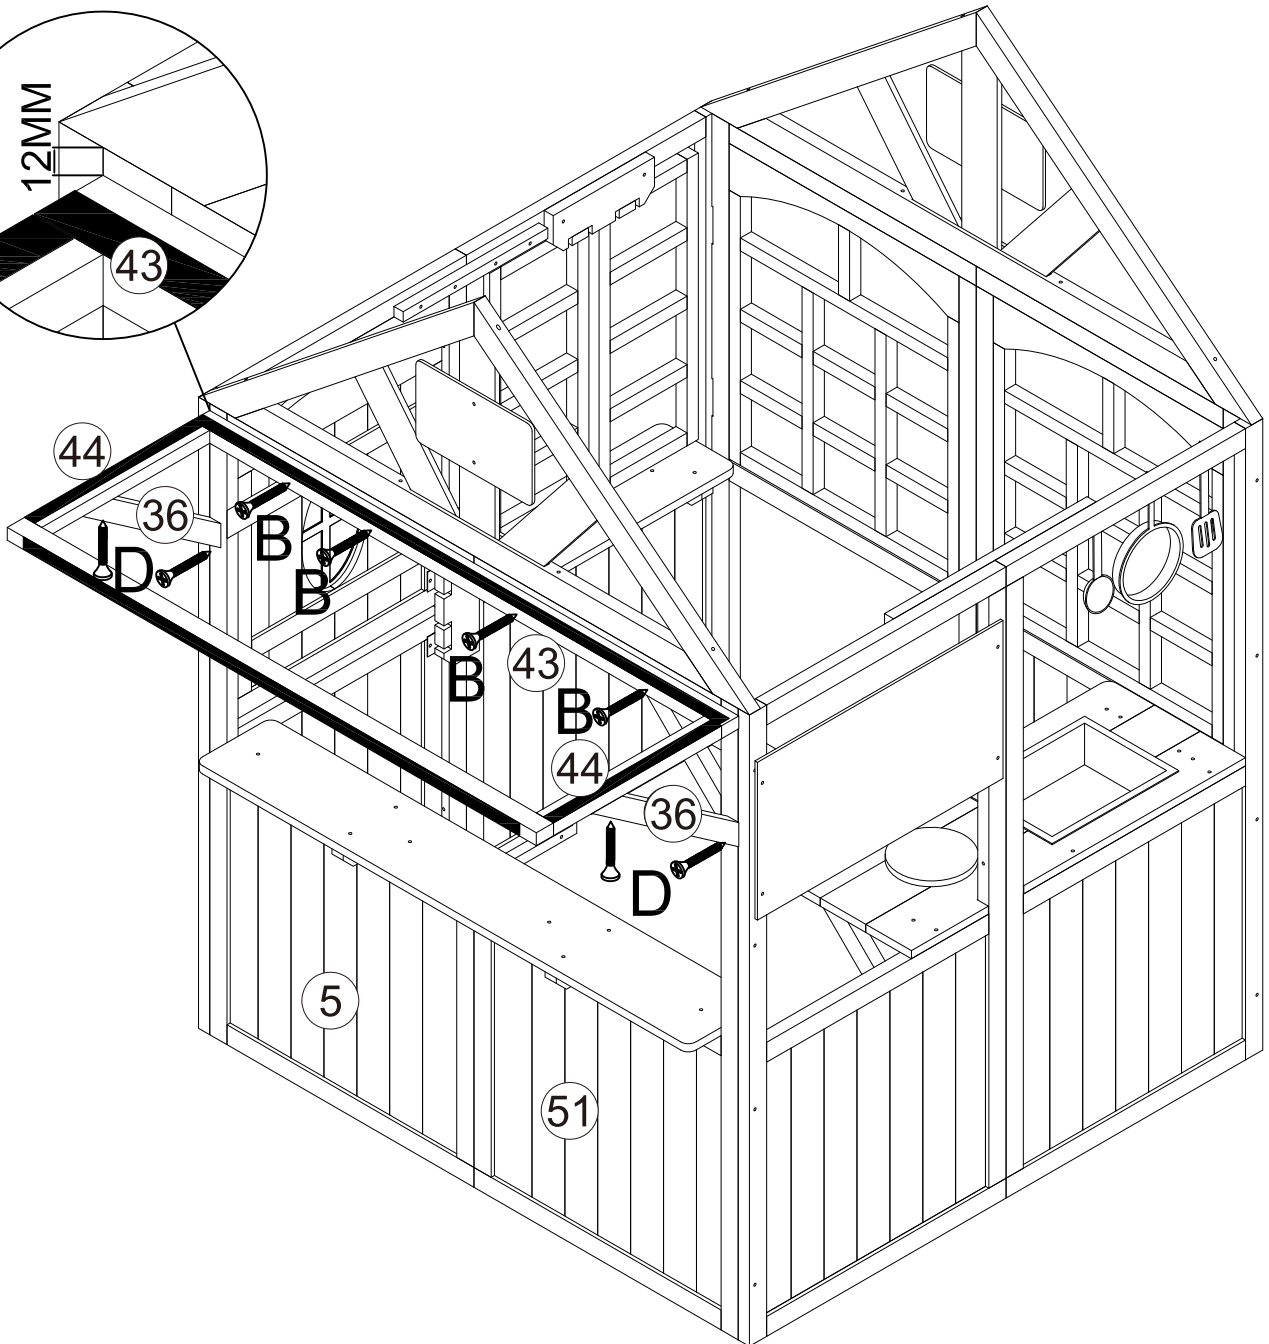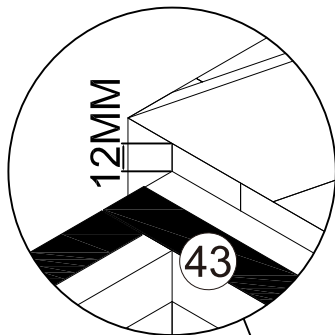

a. Fix part (43) to parts (5) and (51) using screws (B).

Note: Leave 12 mm at the top.

b. Fix part (36) to parts (5), (51), and (44) using screws (D).

BX4




3.5*50

DX4



3.5*40

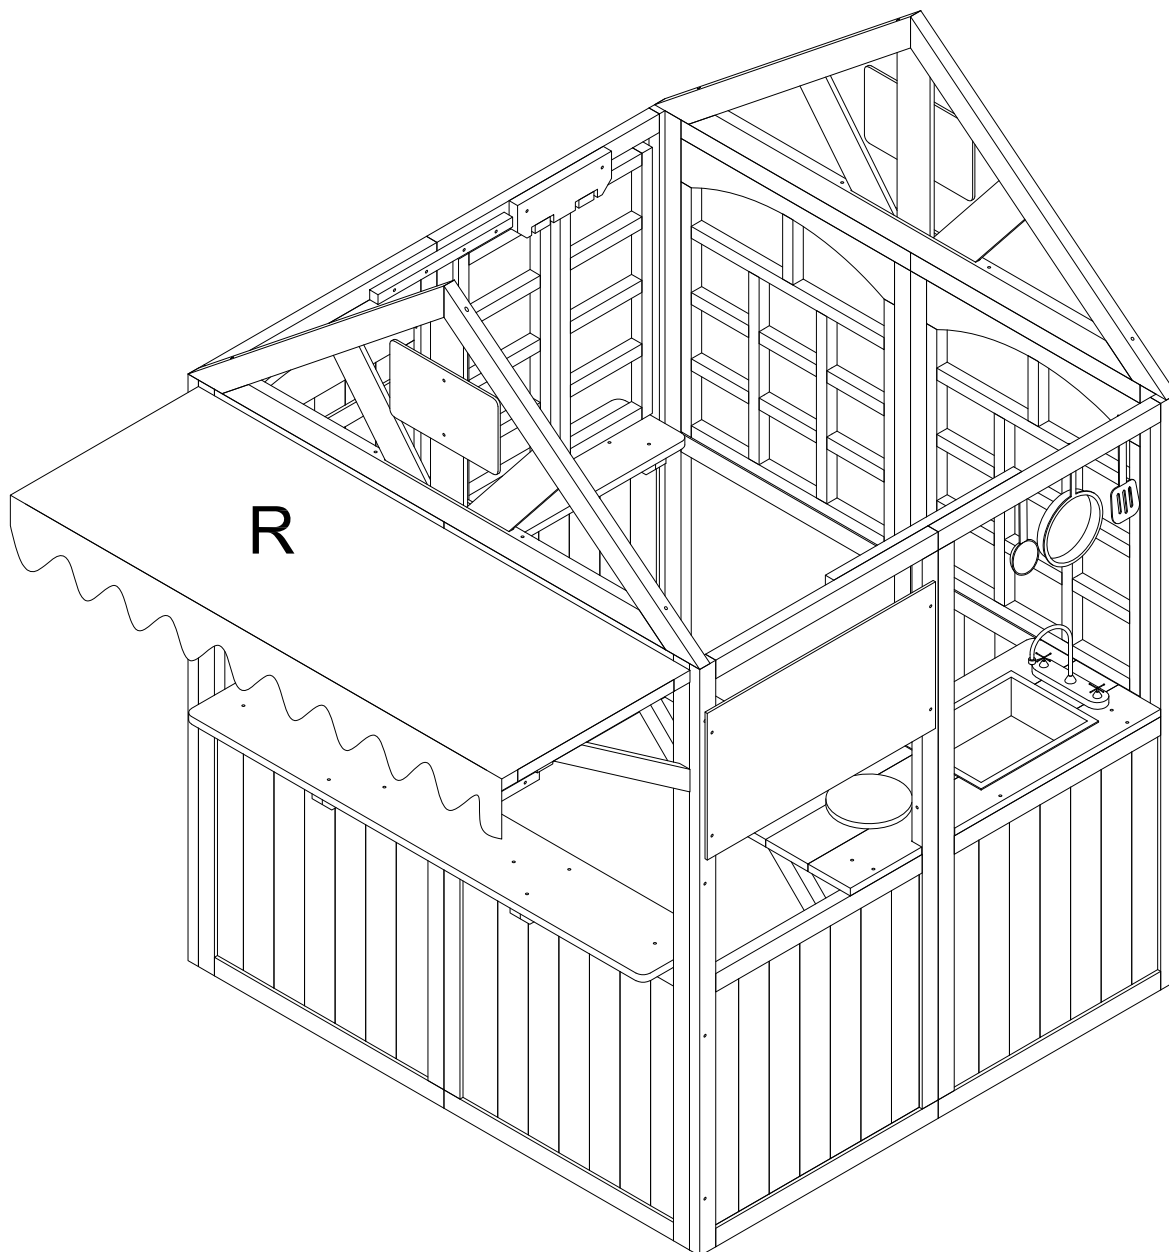


Stick accessory (R) in place (as shown).


RX1




32

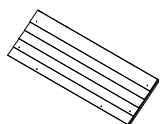

38 X1

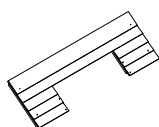

40 X1

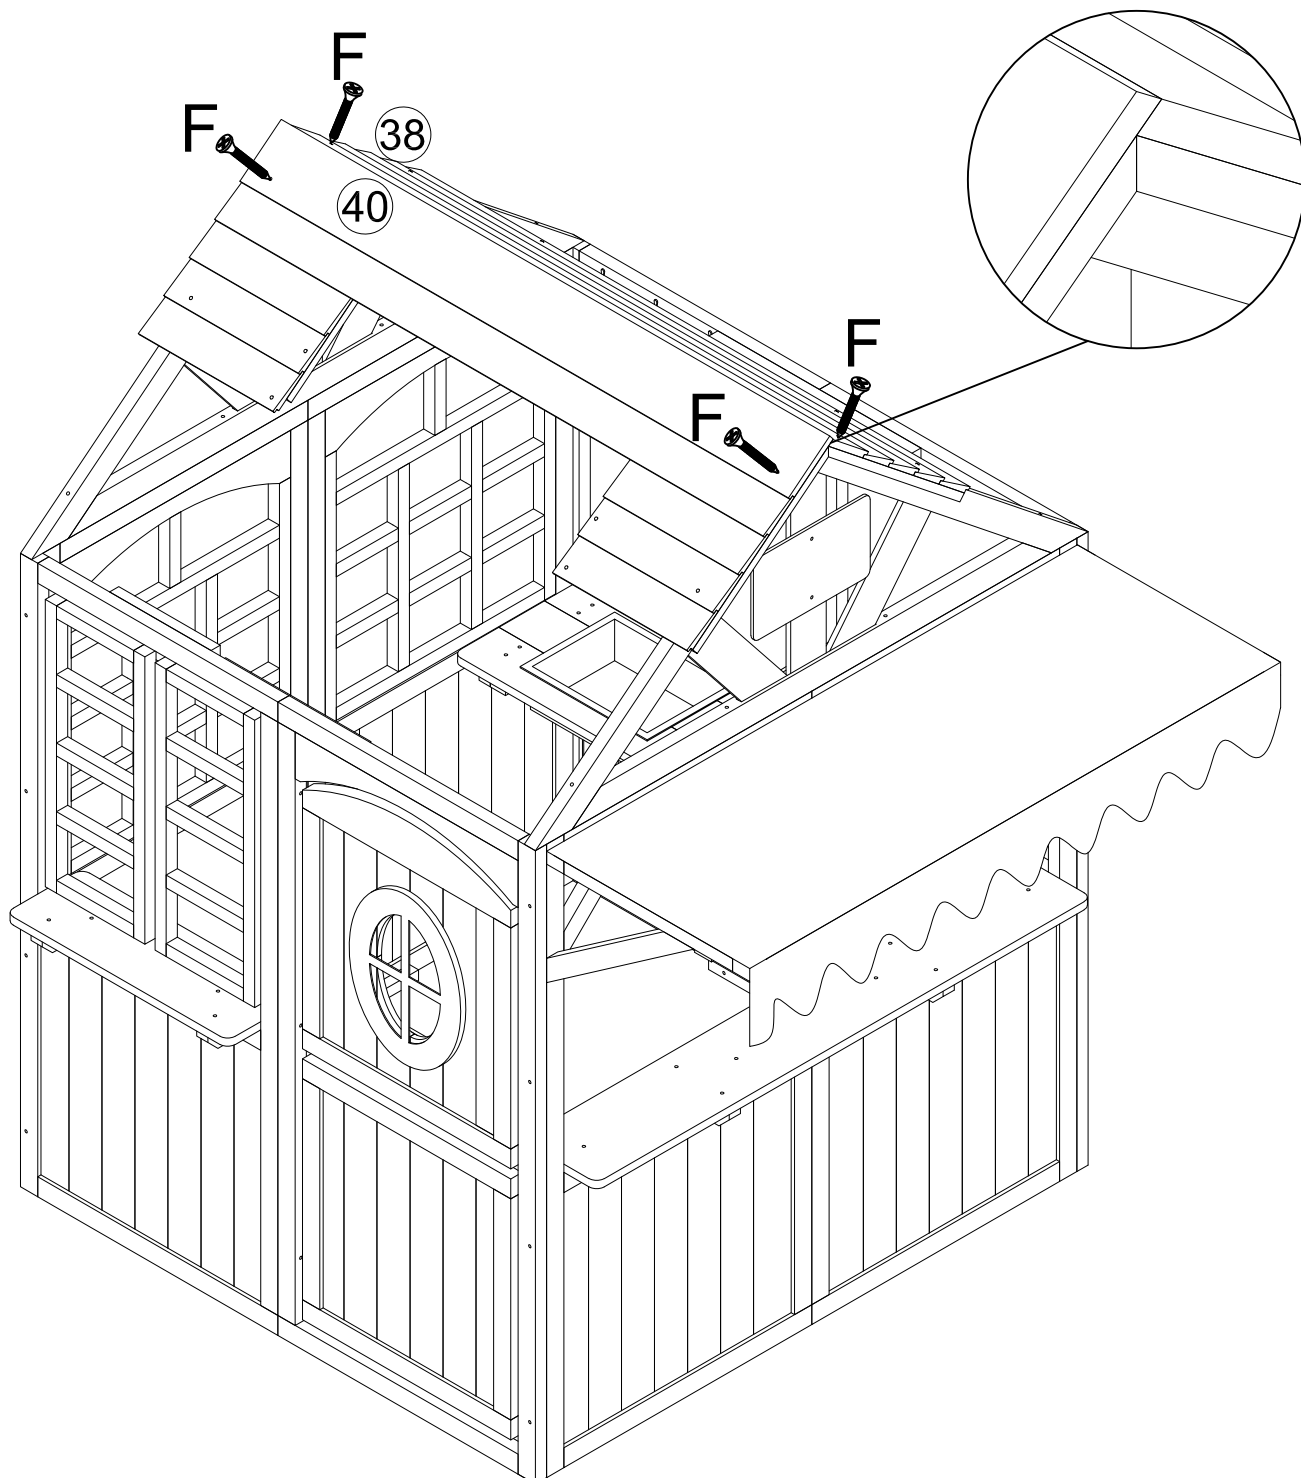


Fix parts (38) and (40) using screws (F) (align as shown).

FX4




3.5*30


33

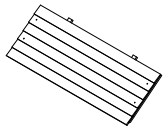

39 X1

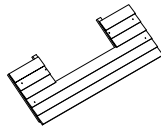

41 X1

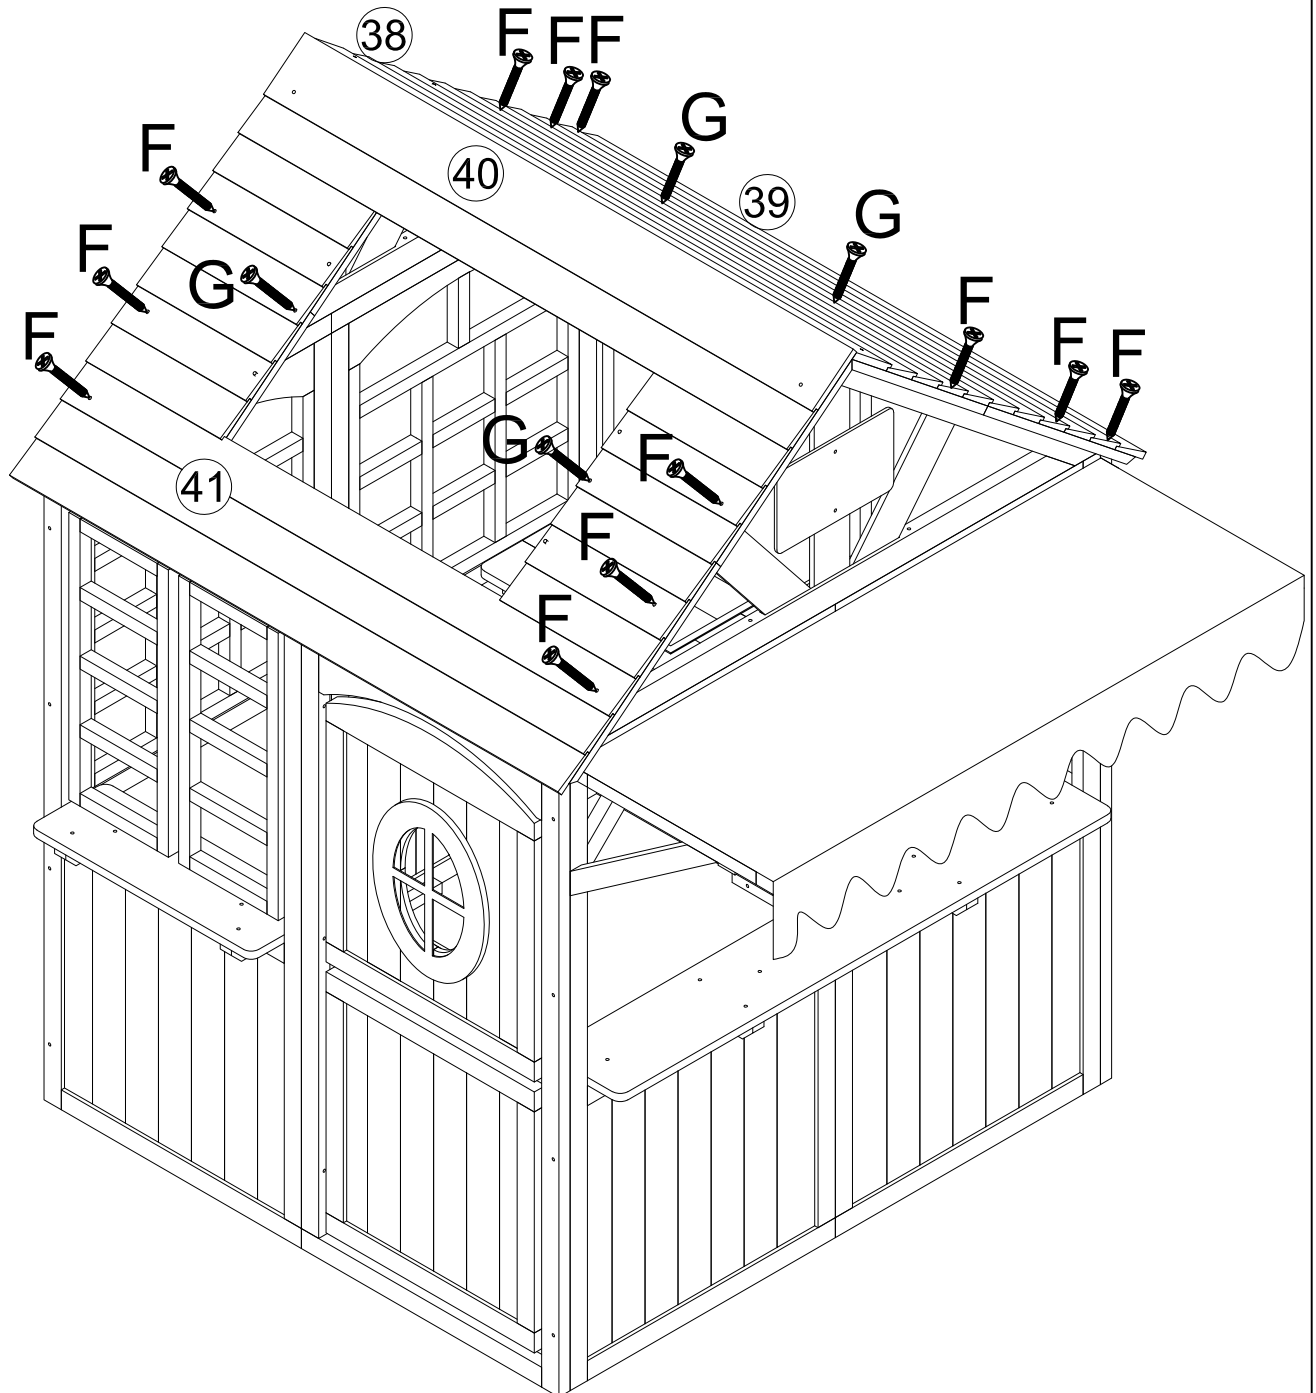

Connect part (39) with part (38), and part (41) with part (40) using screws (G), then secure with screws (F).

FX12




3.5*30

GX4




3*22


34

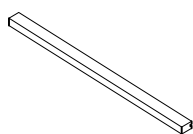


28 X1

 


29 X2

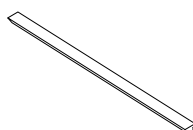




48 X1

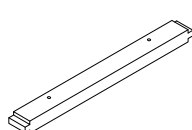

49 X2

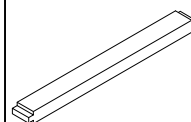

50 X1

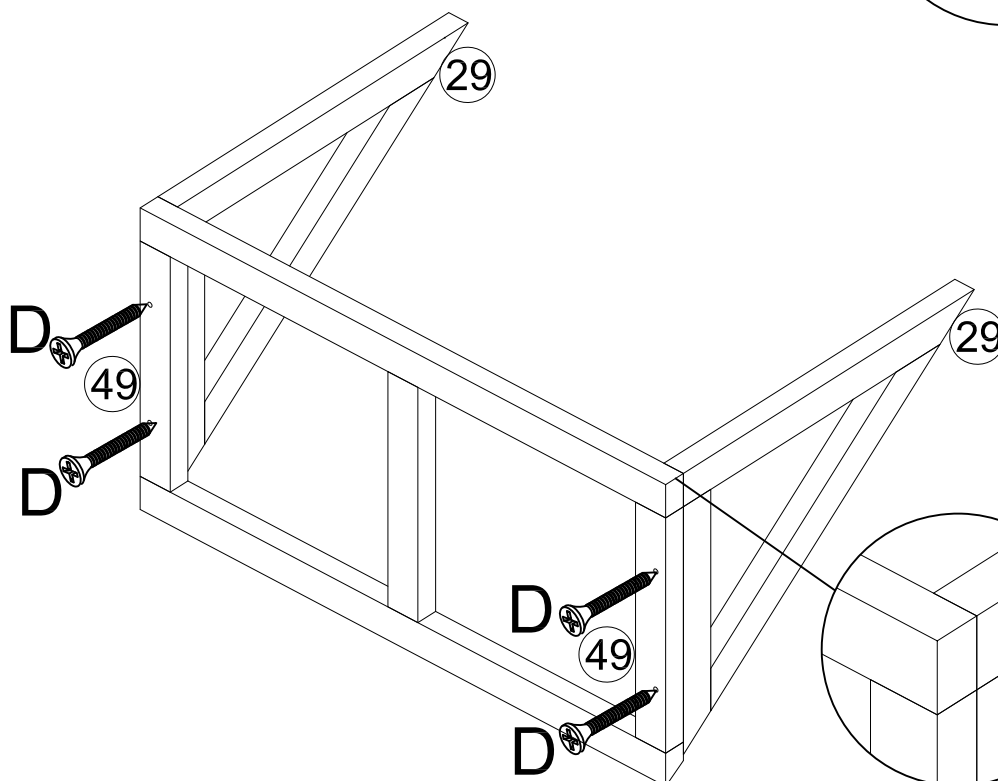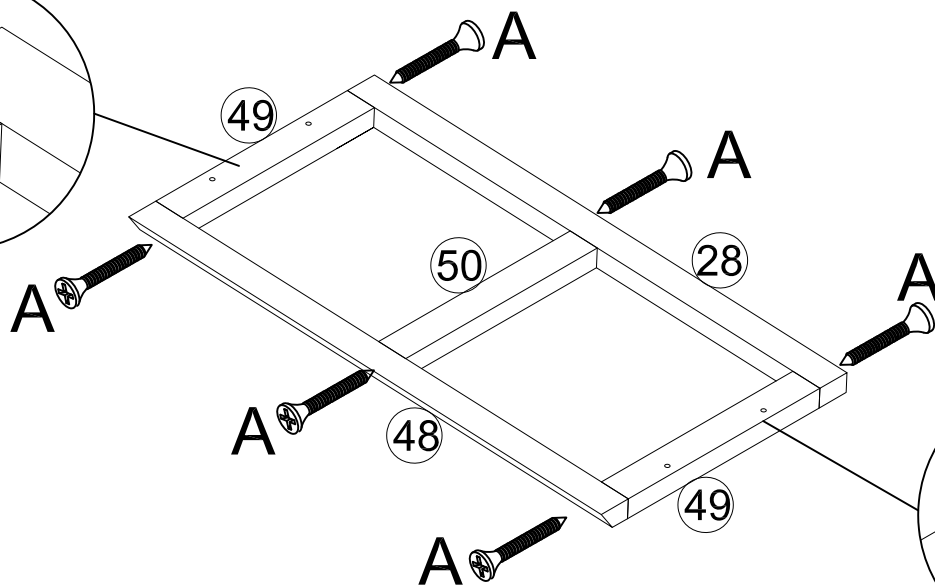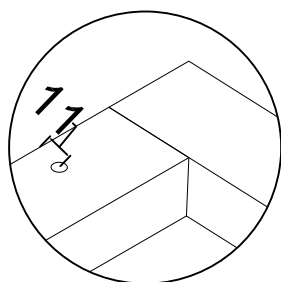

a. Assemble parts (28), (48), (49), and (50), then secure with screws (A).

Note: The hole edge of part (49) should face outward.

b. Fix parts (29) and (49) using screws (D).

Note: Keep the right angle aligned.

AX6




3.5*60

DX4



3.5*40

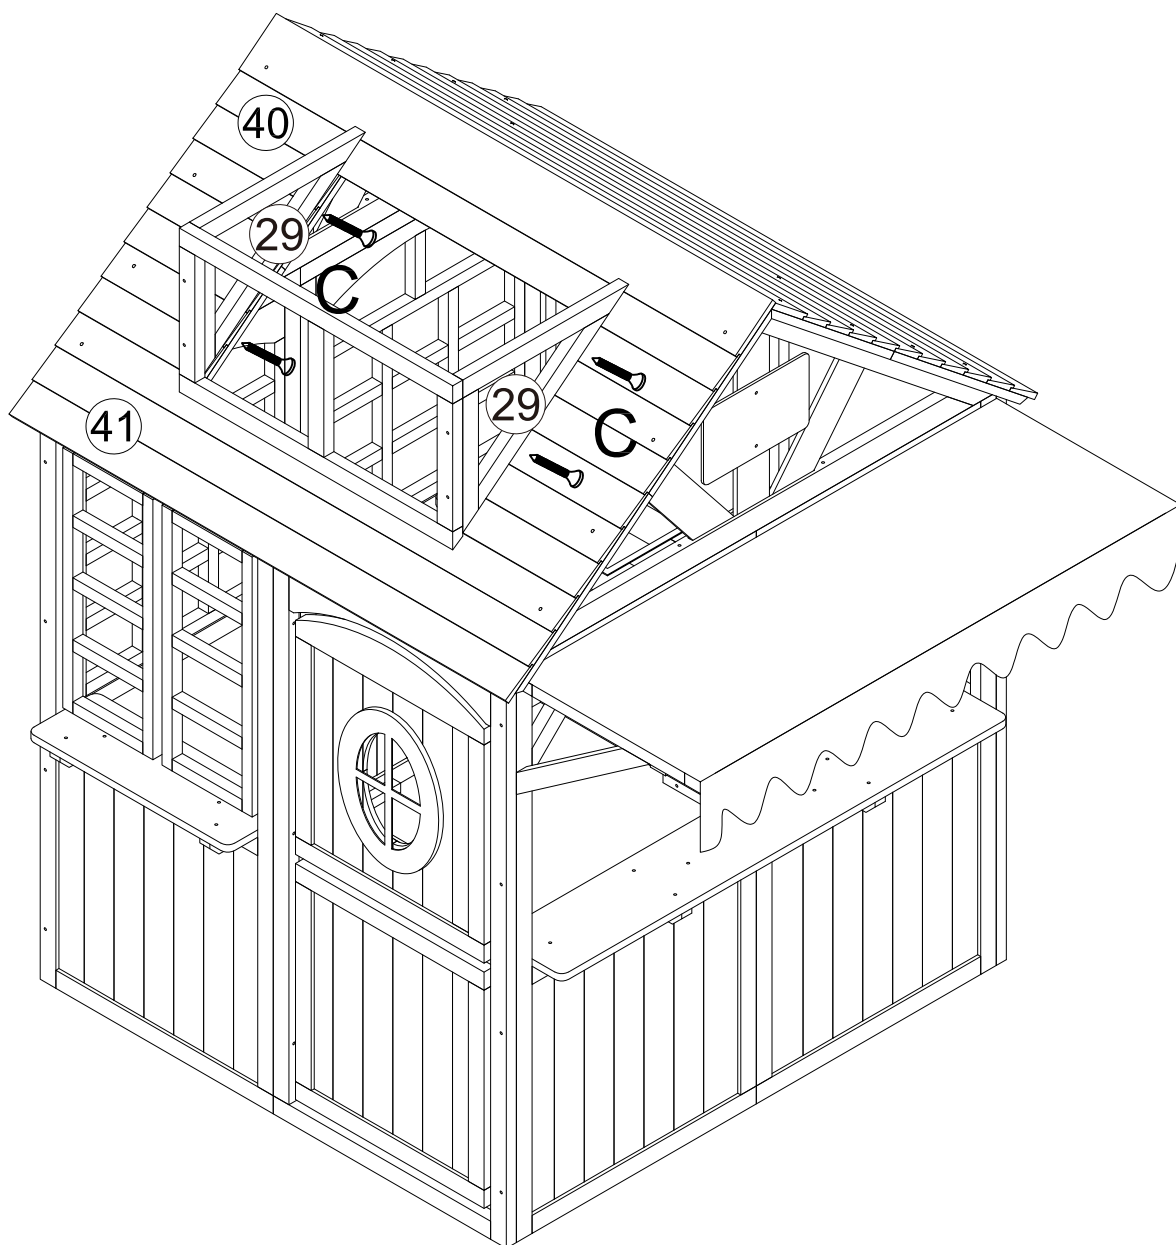


Fix part (29) to parts (40) and (41) using screws (C).

CX4




3.5*45

36

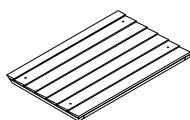

37 X1

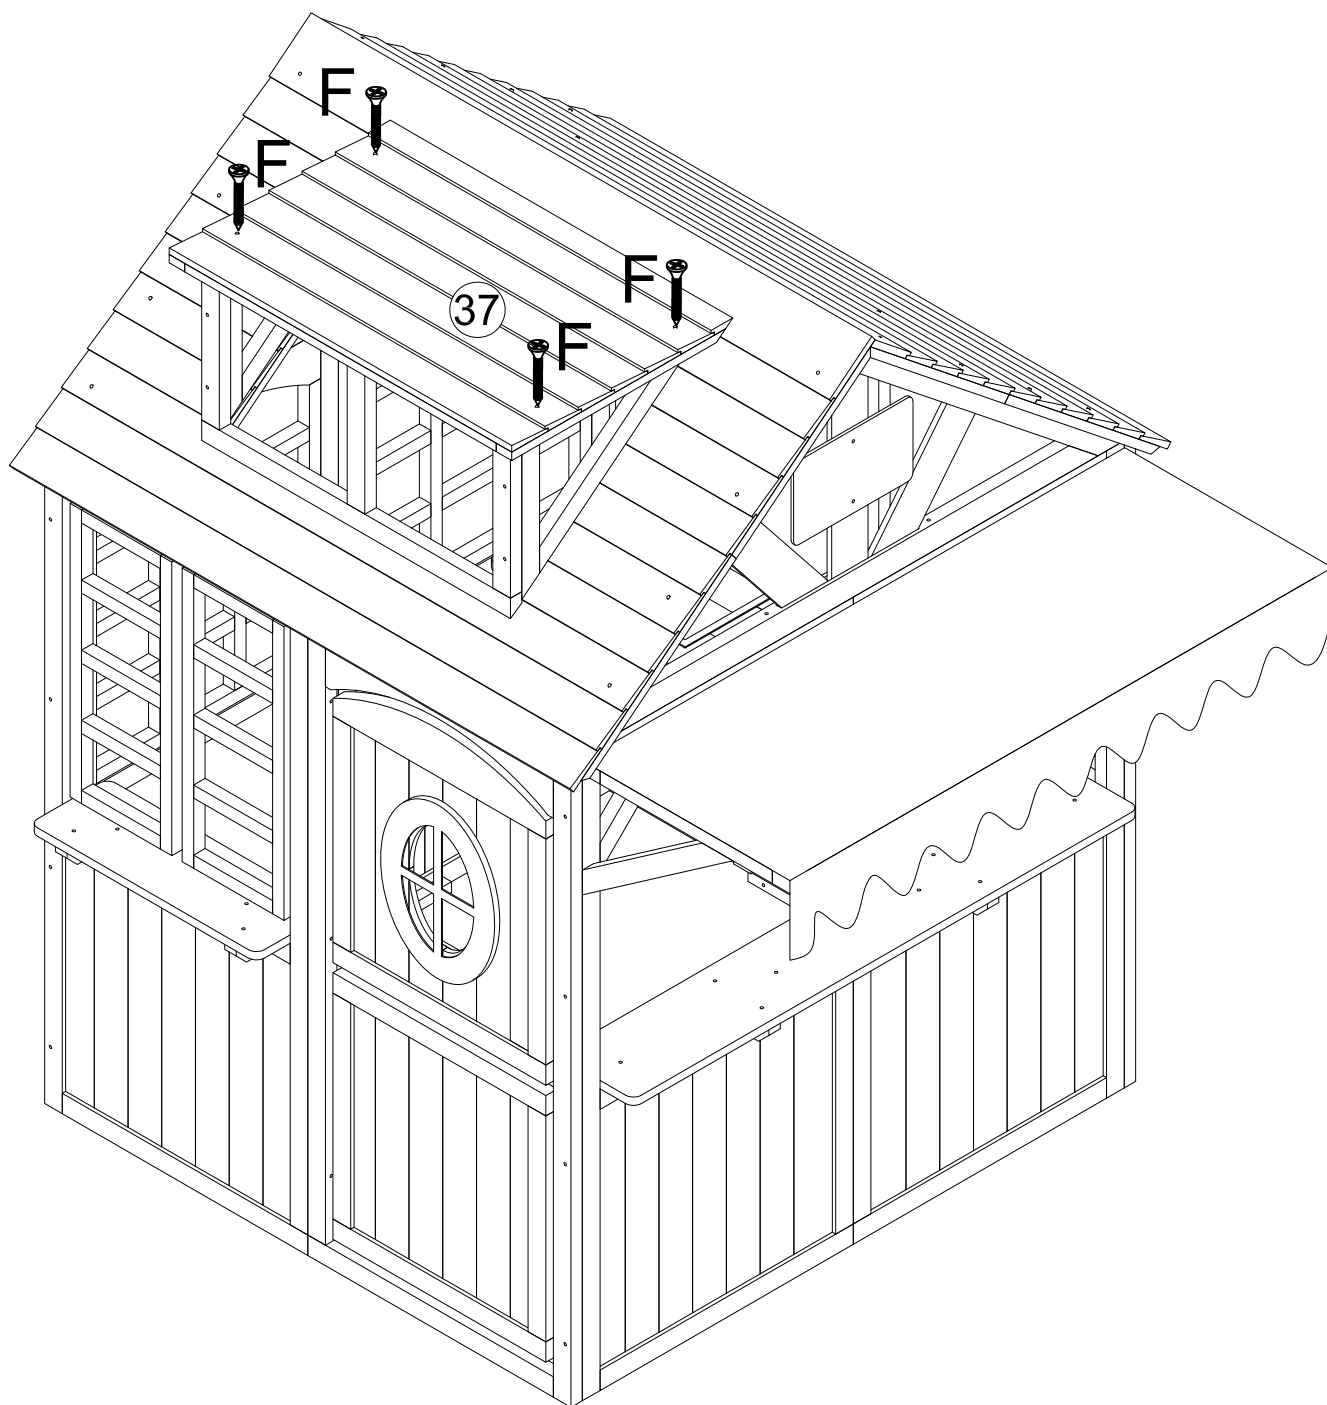


Fix part (37) using screws (F).

FX4




3.5*30

 37



32 X2

 





33 X2



34 X2



35 X2

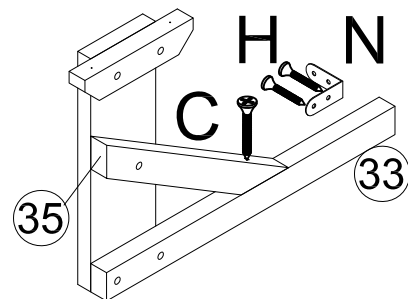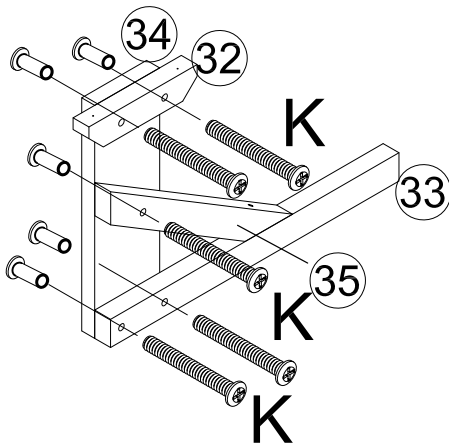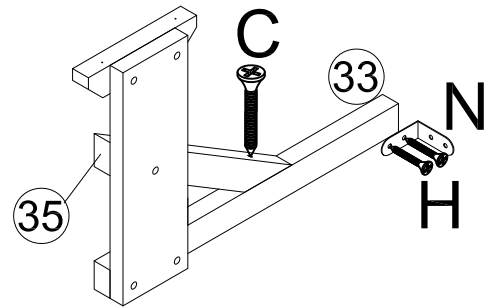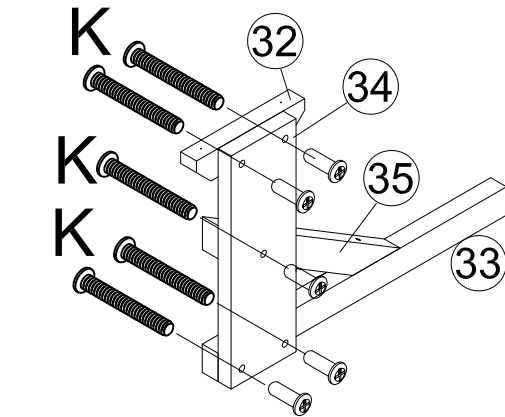

- Fix parts (32), (34), (35), and (33) using bolts (K).
- Reinforce part (33) with part (35) using screws (C).
- Fix part (33) and accessory (N) using screws (H).

CX2




3.5*45

HX4



3*18

 KX10



6*30


NX2




38



 
30 X1



31 X2

 

46 X1

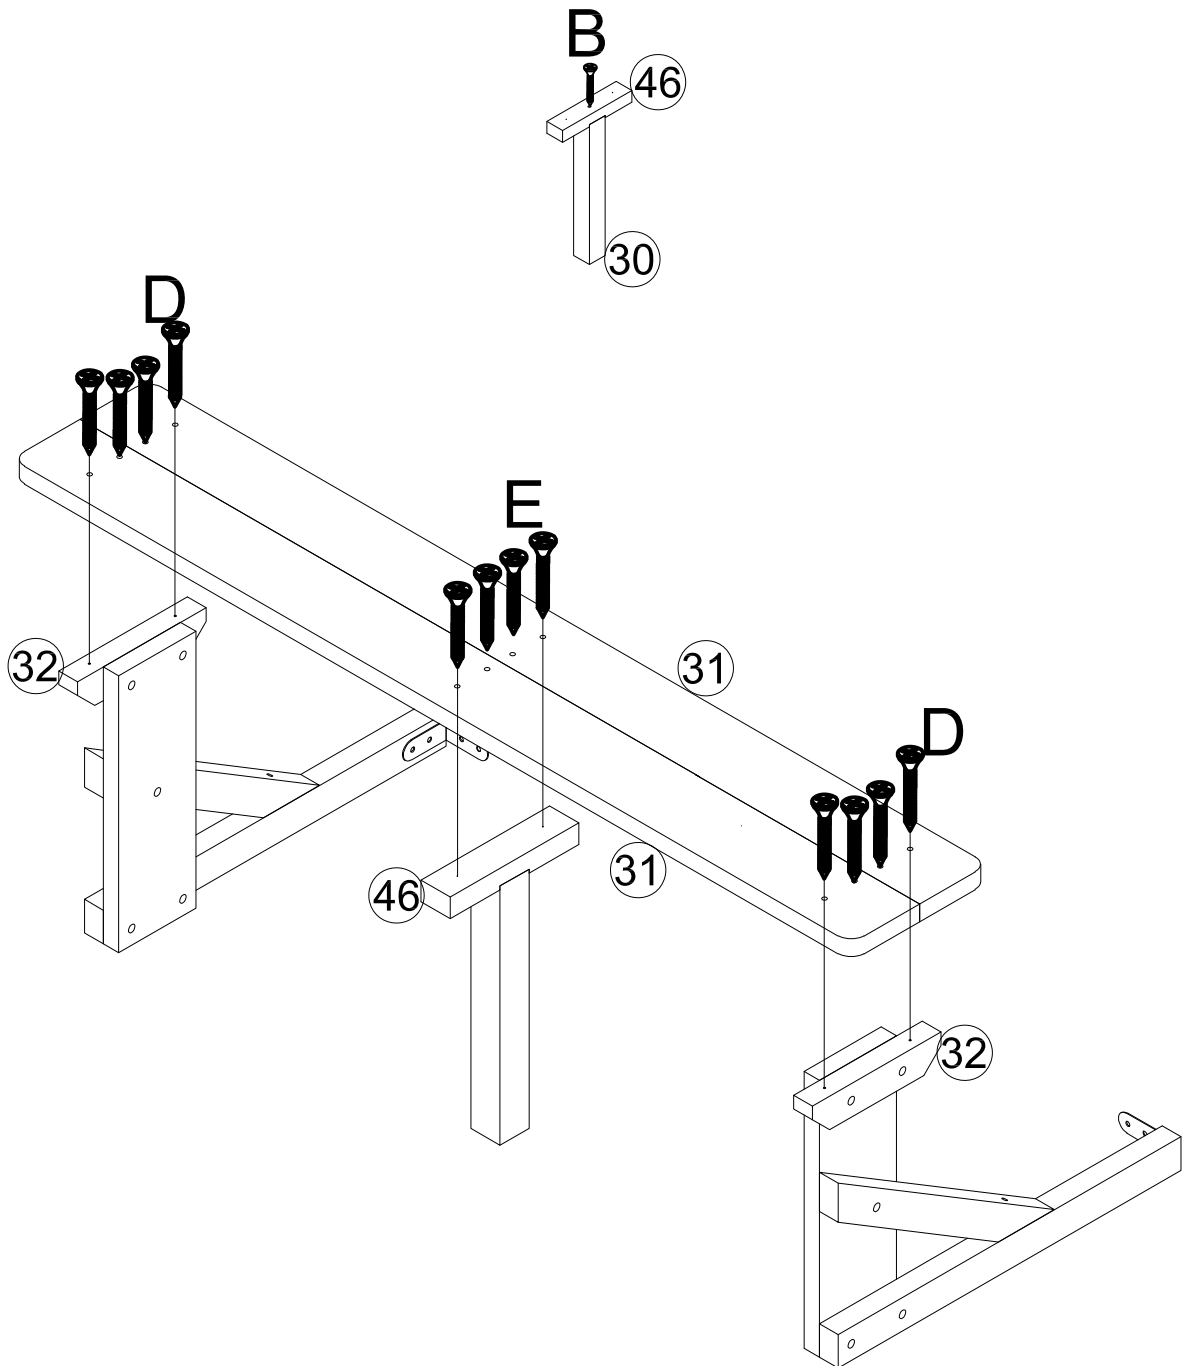

- Fix part (46) to part (30) using screws (B).
- Fix part (31) to part (32) using screws (D), then fix part (31) to part (46) using screws (E) (align with holes).

BX1



3.5*50

DX8




3.5*40

EX4




3.5*35

 39



36 X2

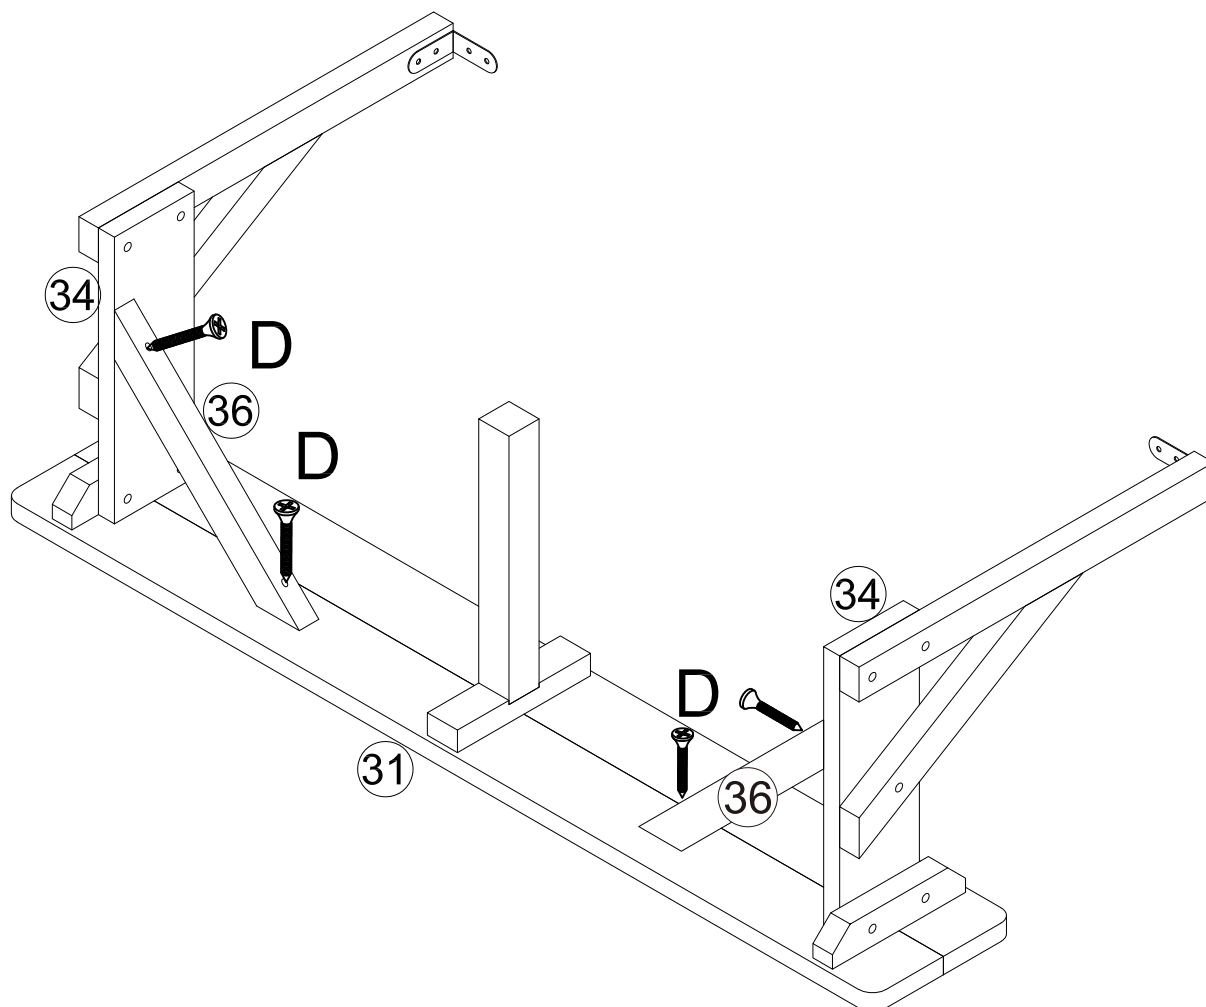


Fix part (36) to parts (31) and (34) using screws (D).

DX4



3.5*40

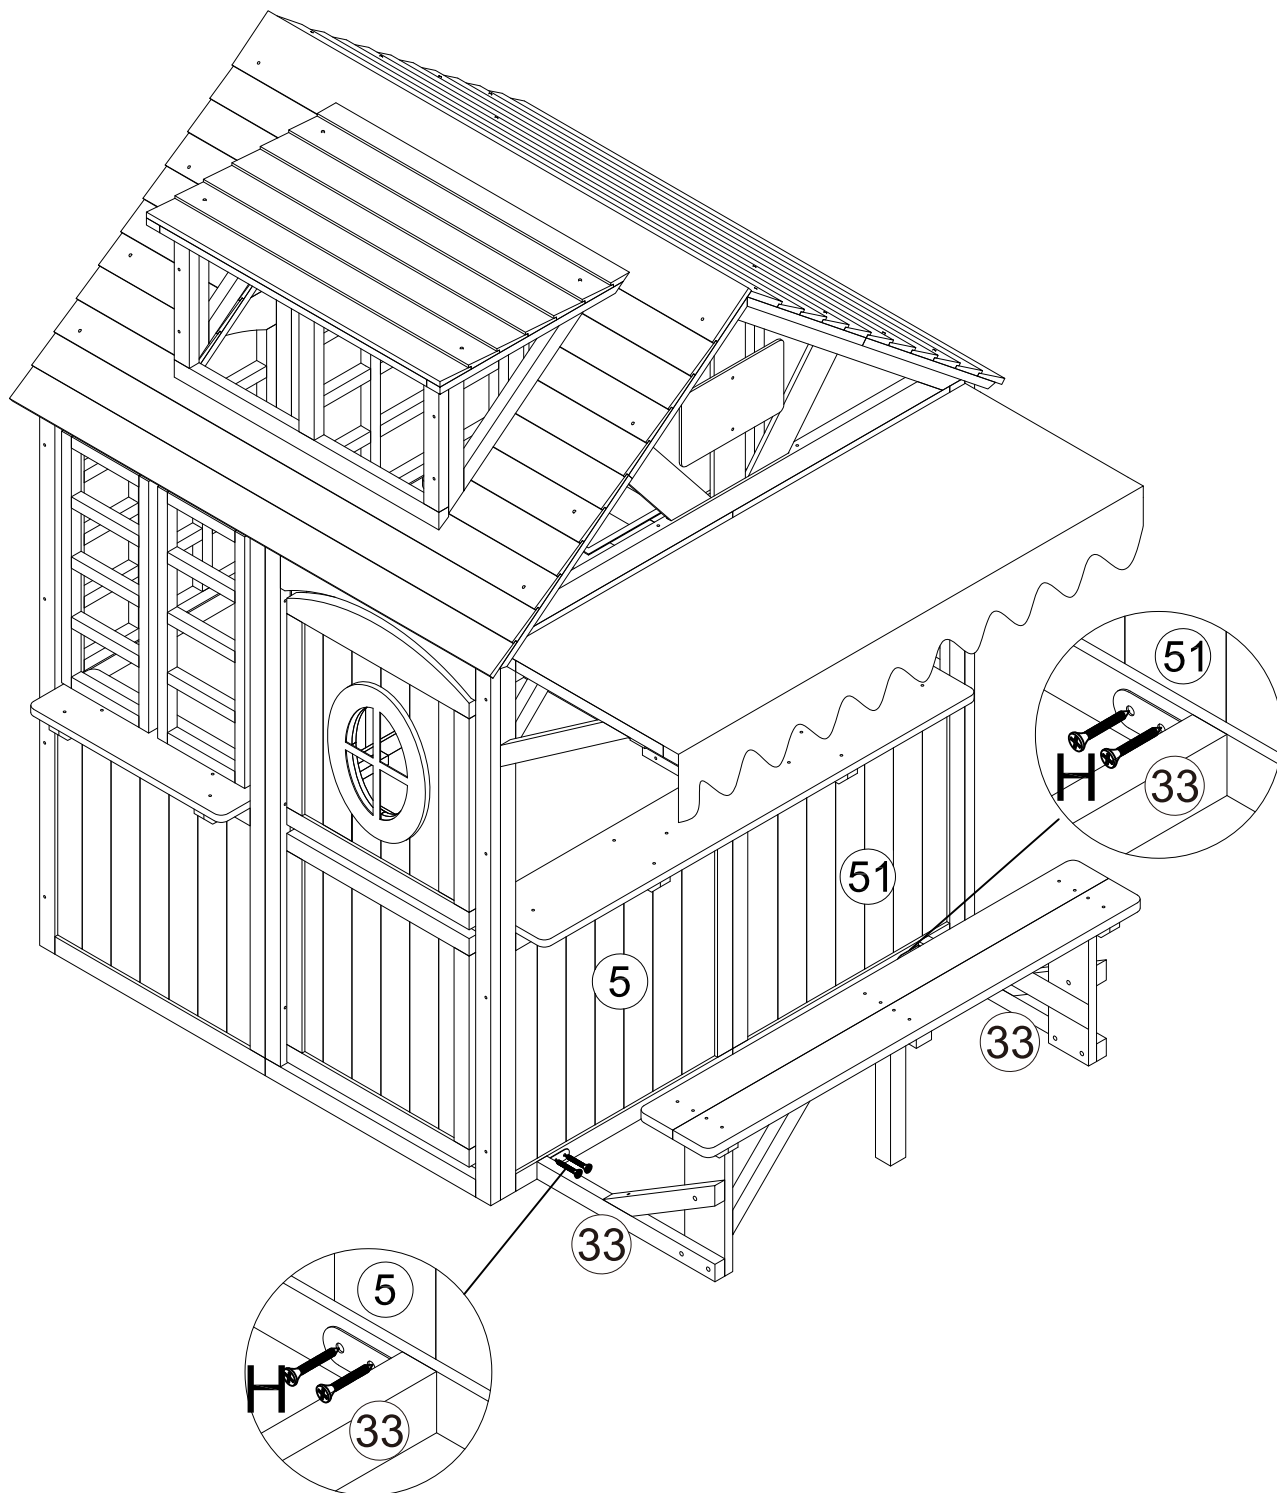


Fix parts (33), (5), and (51) using screws (H).

HX4





3*18

 41



47 X1

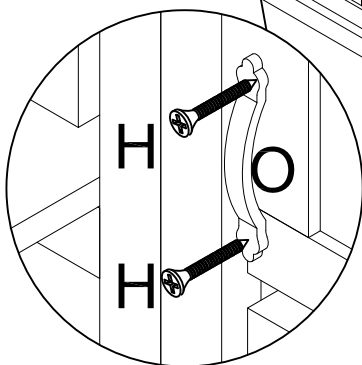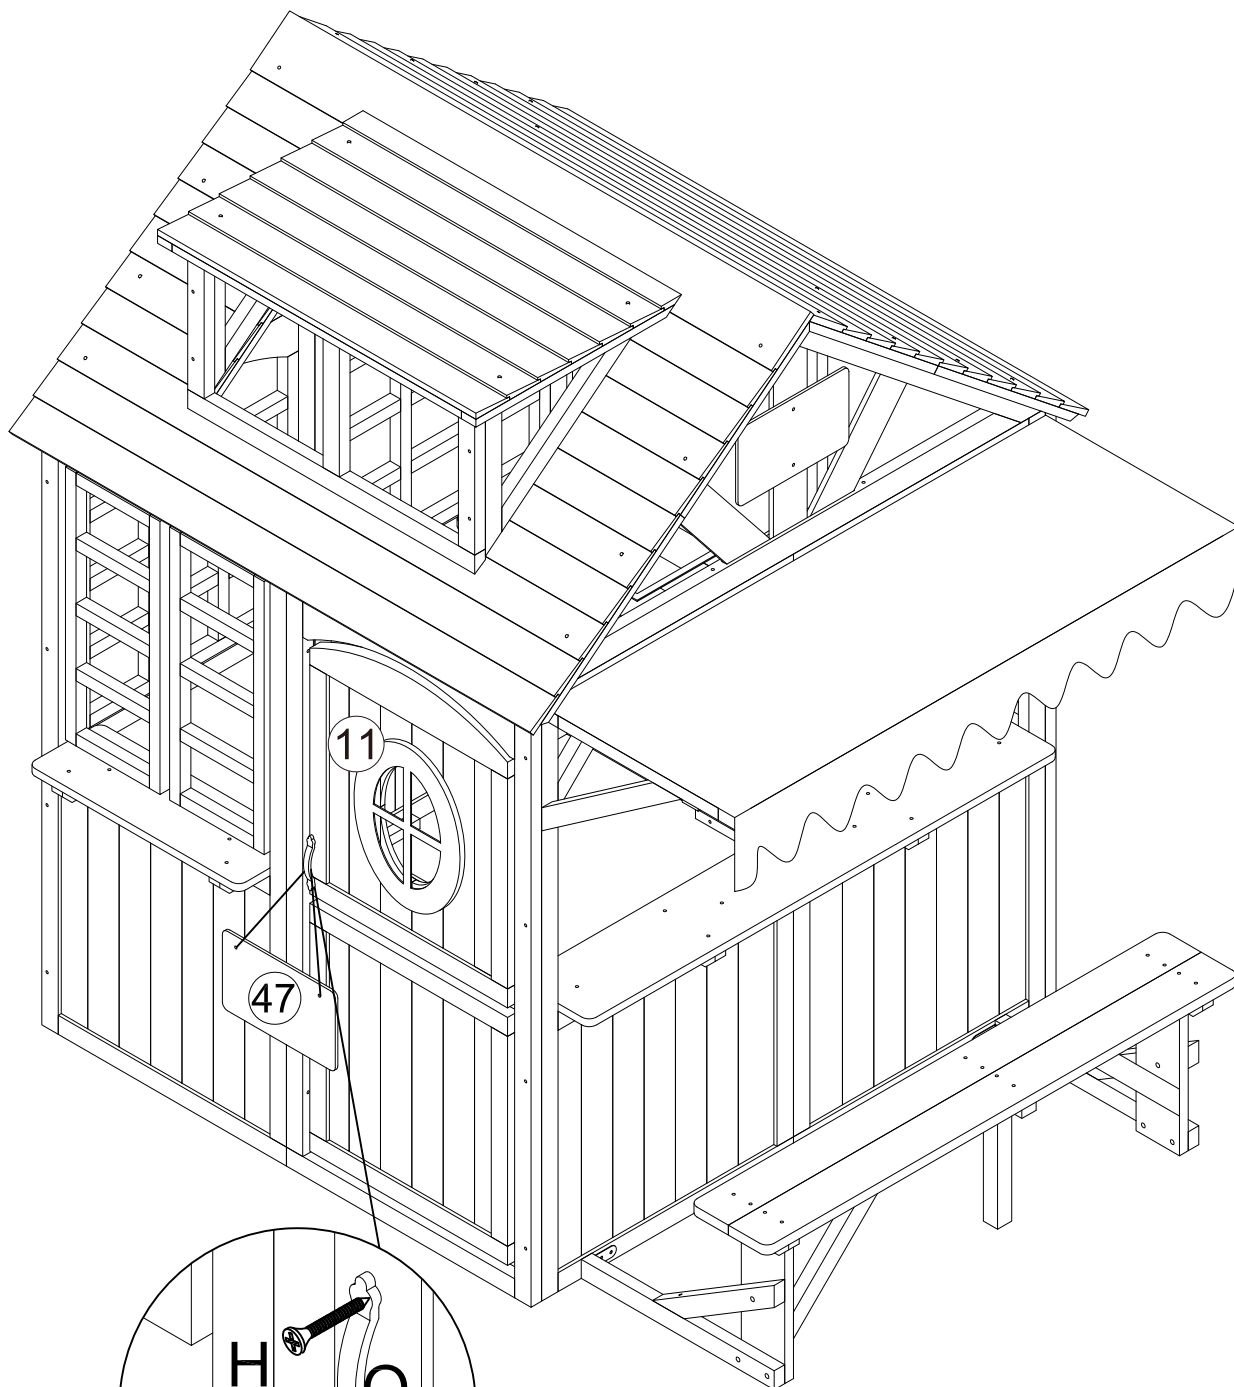

Hang part (47) onto accessory (O),
then secure using screws (H).

HX2



OX1



3*18

| Children's Wooden Playhouse

SKU:
C000939020

V2.0