 


Cabinet

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

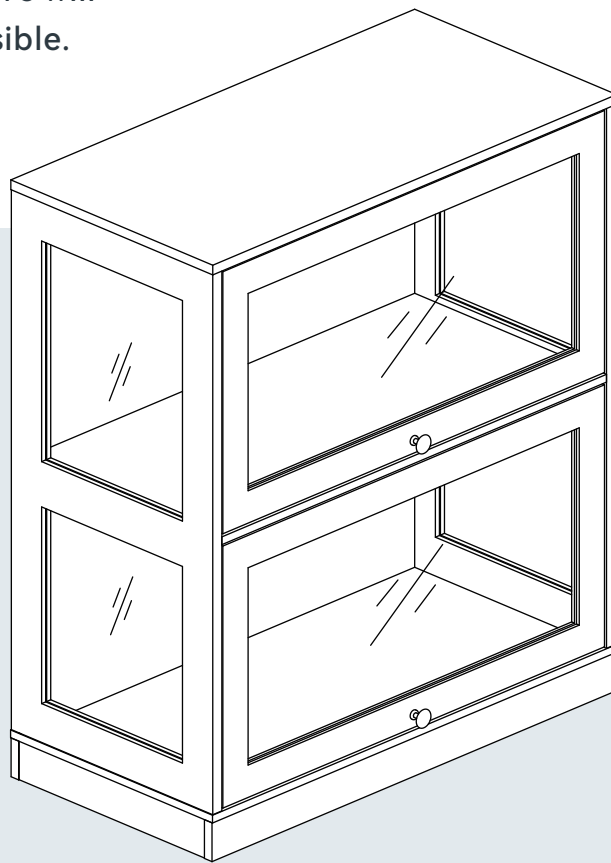

Dimensions

Width-31.5 inch
Depth-15.7 inch
Height-36.3 inch

CONTACT US

- **Email: service@grandtunnel.com**
In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

Important – Please read these instructions carefully before starting the installation.

EN



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)

Do not allow children to climb or hang on the furniture

Do not open more than one drawer at a time

Do not place heavy items in the top drawers

Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type



Safety Instructions / Warnings

Please read and follow all instructions carefully before installation and use.

- **WARNING: Risk of electric shock – Do not open or disassemble electrical parts.**
- Use only the power cord specifically provided for this product. Adaptor Input: 100-240V~, 50/60Hz, 0.5A, 30W. Output: DC 12V, 2.0A.
- Do not use with damaged power cords or plugs.
- Keep power cables away from moving or sharp parts of the furniture.
- Do not use extension cords or power strips unless specifically approved for the load.
- This product is **not a toy**. Do not allow children to play with electrical components or moving parts.
- Children under 8 years old must be kept away from the furniture unless continuously supervised.
- Keep remote controls, control switches, and ports **out of children's reach**.
- Always **disconnect the product from power** before cleaning, maintenance, or relocation.
- Do not attempt to open, modify, or repair electrical components.
- **Repairs must be performed by qualified professionals only.**
- Do not insert any foreign objects into openings or mechanisms.
- Clean with a dry cloth or a slightly damp soft cloth. Do not use solvents.
- This product is intended for **indoor use only** in dry environments.
- Do not expose the furniture to moisture, liquids, or direct sunlight.
- Ensure stability and clearance around any moving parts (e.g., lift mechanisms, recliners).
- Do not overload power outlets or USB ports beyond the specified ratings.

FCC Information

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This product may cause harmful interference.
2. This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

CUSTOMER SERVICE GUIDE

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6x30mm screws.”

Contact Us:

- By Email:

Send an email to service@grandtunnel.com, with the subject line “Missing Parts Issue.” Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with other details to service@grandtunnel.com, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: service@grandtunnel.com).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

- Customer Service Email: service@grandtunnel.com

Helpful Tips

To process your issue efficiently, please prepare the following information:

 
 
 
 
 
 
 
 
- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

Thank you for your trust and support! We hope you enjoy using our product!

Parts List - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

A  6*30mm Wooden Dowel x 16	B  6*35mm Cam Bolt x 22	C  Cam Lock x 22
D  3*12mm Screw x 10	E  4*40mm Screw x 4	F  4*20mm Screw x 8
G  4*18mm Bolt x 2	H  x 2	I  x 6
J  x 2	K  x 2	L  x 12
M  x 4	N  x 2	O  x 2
P  x 1	Q  x 1	R  x 1
S  x 2	T  x 4	

Tools required



Phillips screwdriver
(medium & large)

Ruler - Use this ruler to help correctly identify the screws

mm

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170



The screws length is measured from the head to the point (30mm screw shown).

 
0 1 2 3

inch

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

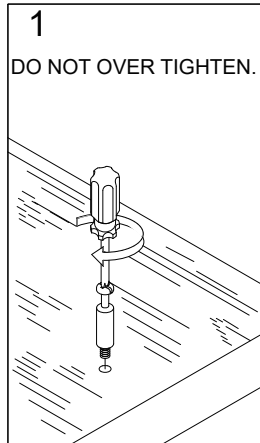

Step 2

 
Push the male camlock into the entry hole.

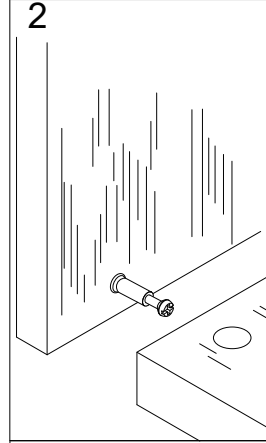

Step 3

Insert the female camlock as shown in the instructions.

 Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

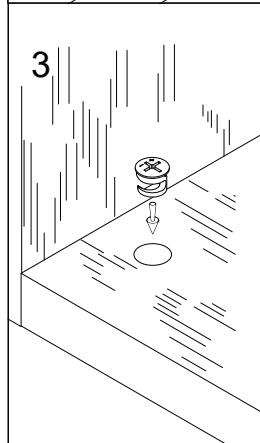


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

 The joint is now secure.

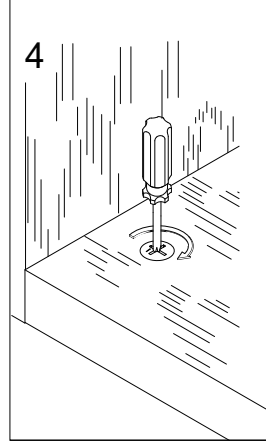


Parts List - Panels

 
Please check you have all the panels listed below

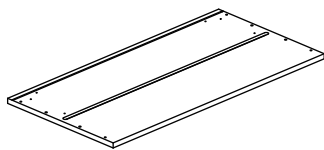


1 (800x400x15mm x1)

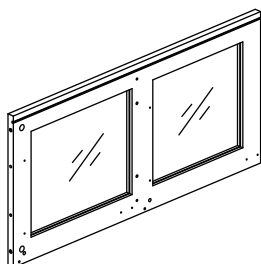 


2 (836x399x18mm x1)

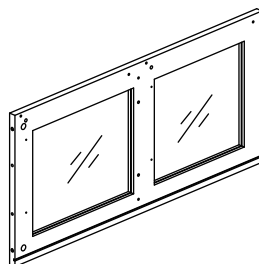 


3 (836x399x18mm x1)

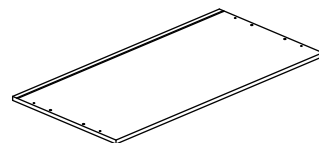 


4 (800x400x12mm x1)

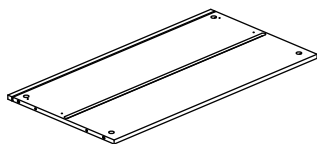 


5 (762x398x12mm x1)

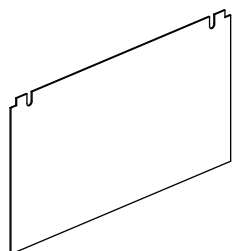 


6 (770x418x3mm x1)

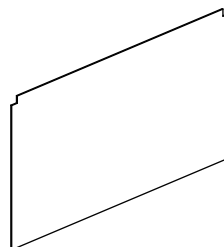 


7 (770x418x3mm x1)

 


8 (250x18x13mm x4)

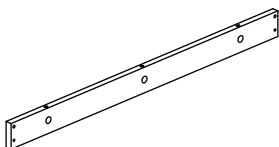 

10 (800x60x15mm x2)

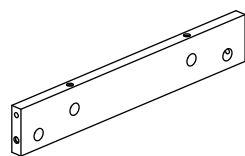 


11 (368x60x15mm x2)

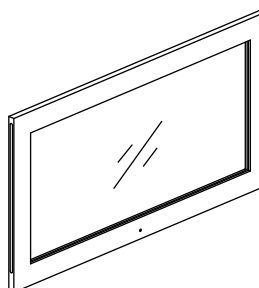 

12 (756x405x15mm x2)

 Assembly Instructions

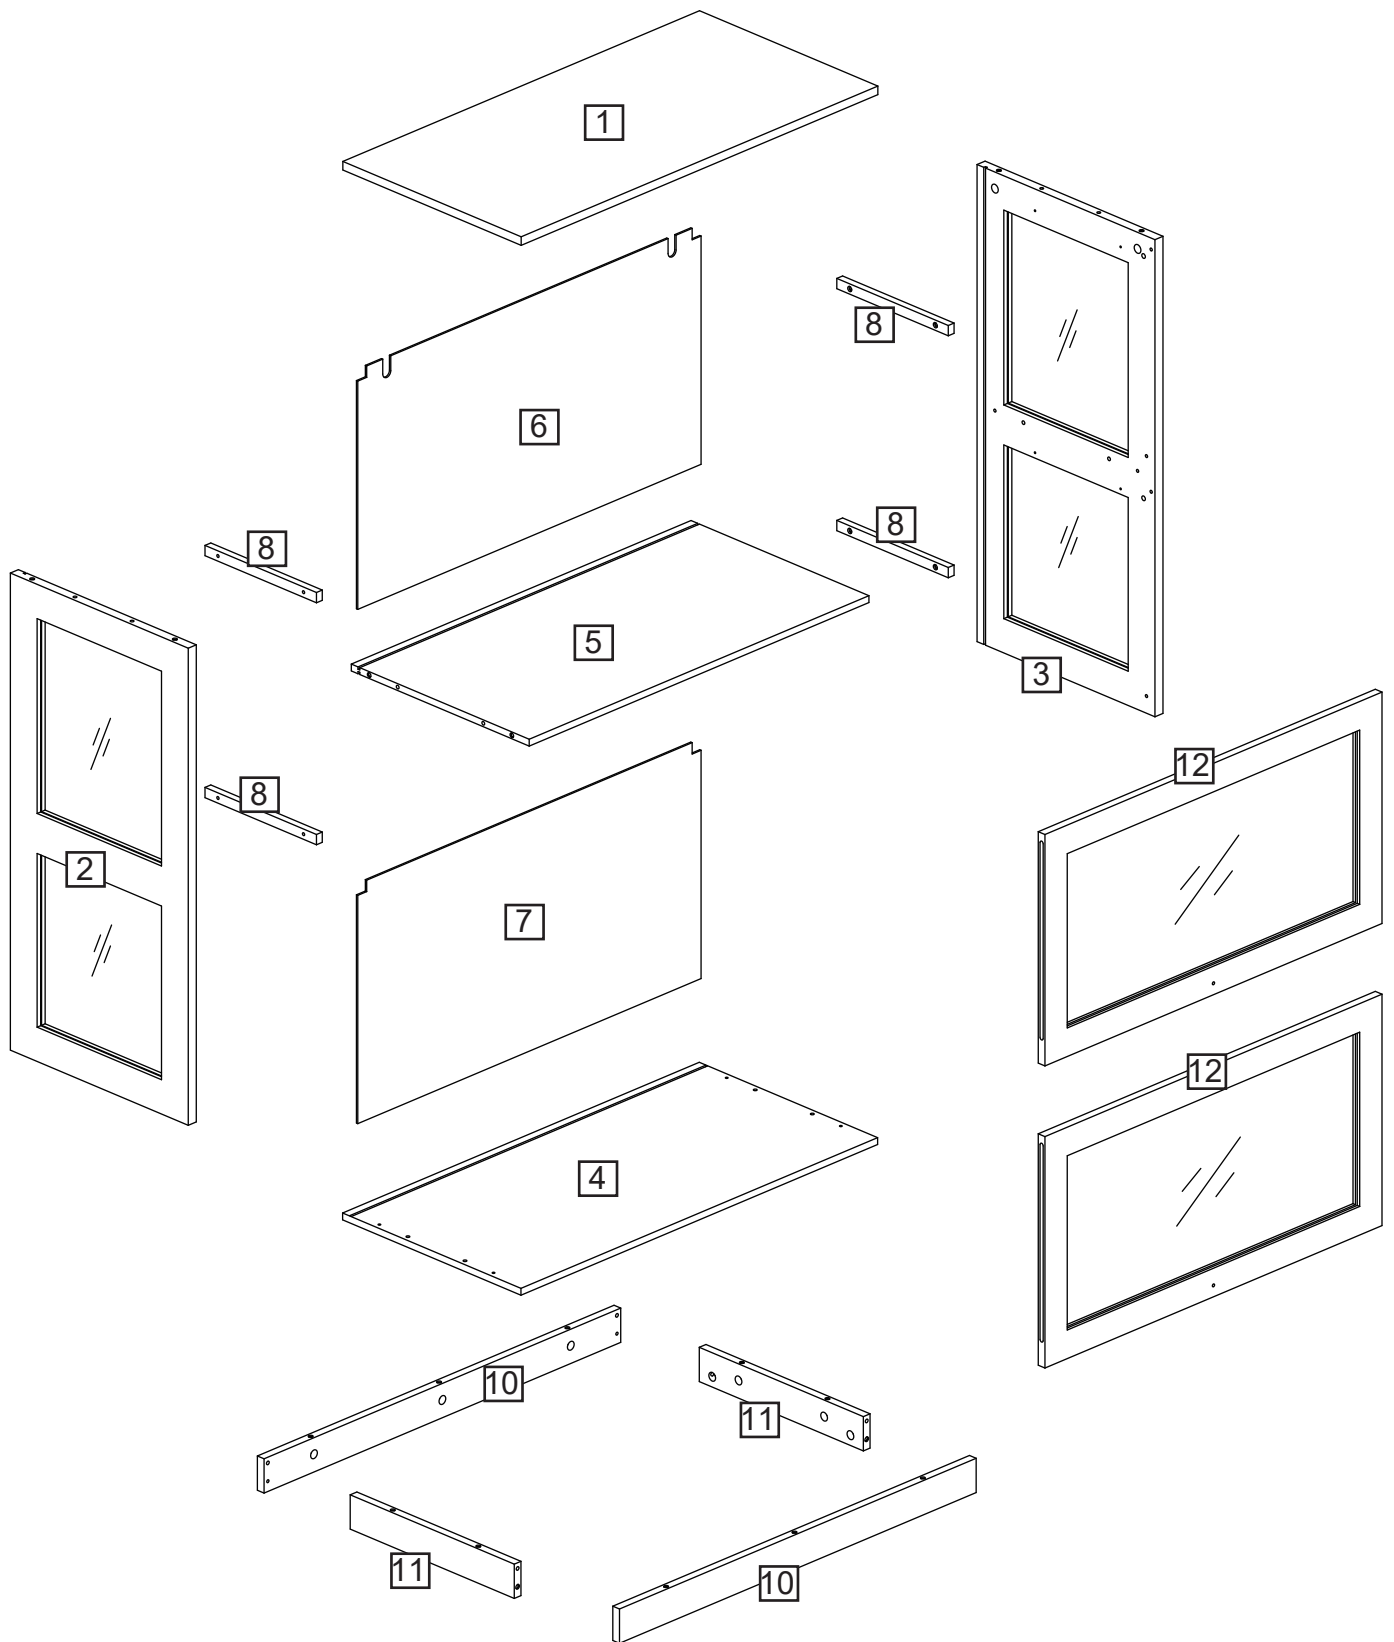


Assembly Instructions


Step 1

CAM-LOCK

 Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

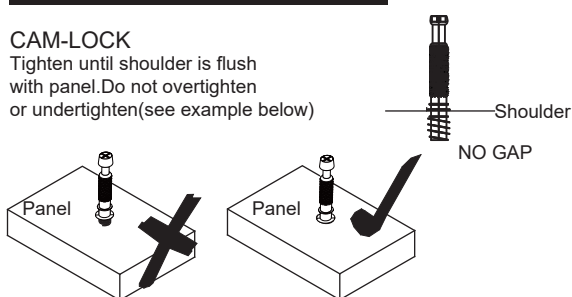

B x2

 

F x4

 


4x20mm

I x2





J x2



3*14mm

  First, use screw (F) to attach panel (8) to panel (2), then attach part (I) to panel (2).

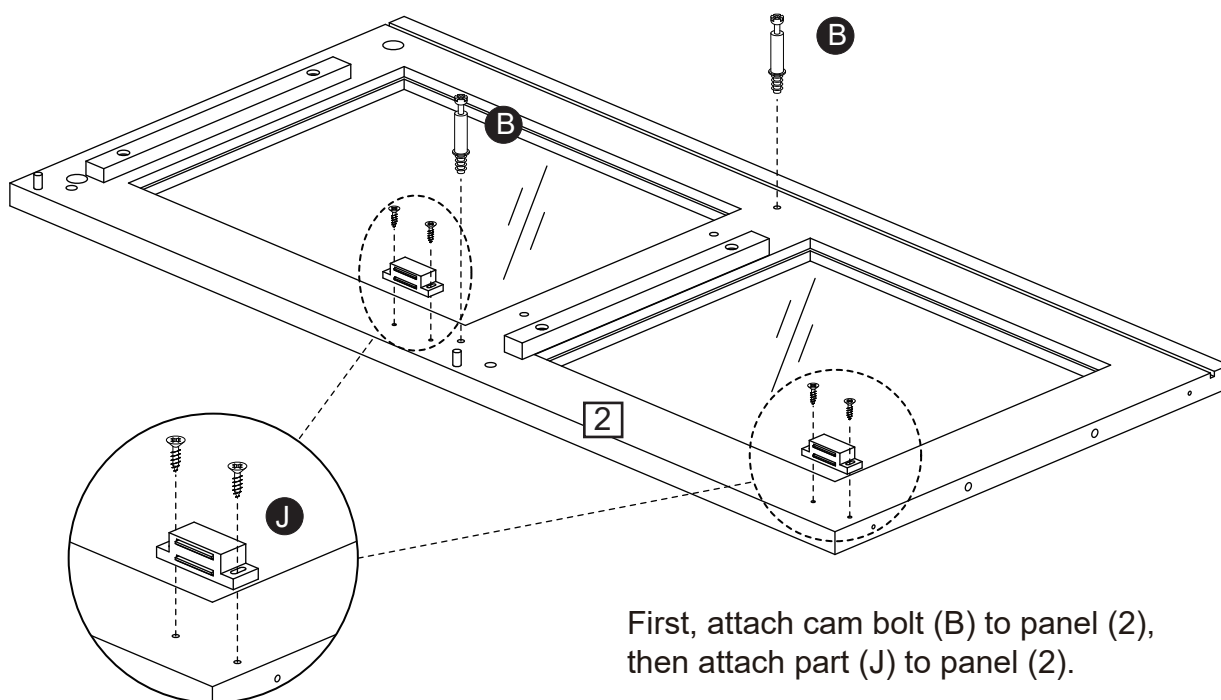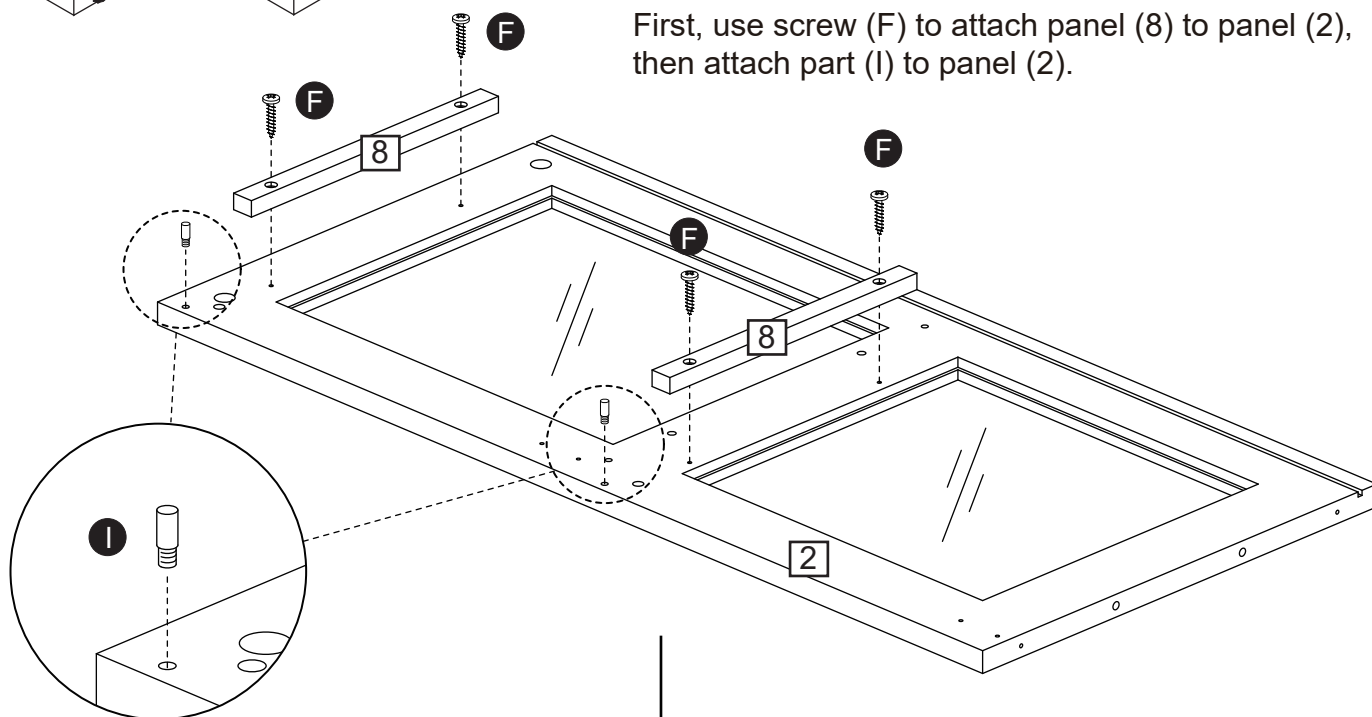




First, attach cam bolt (B) to panel (2), then attach part (J) to panel (2).

Assembly Instructions


Step 2

CAM-LOCK

   Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

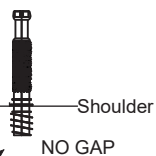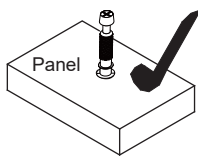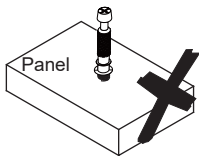



B x2

 


F x4



  I x4

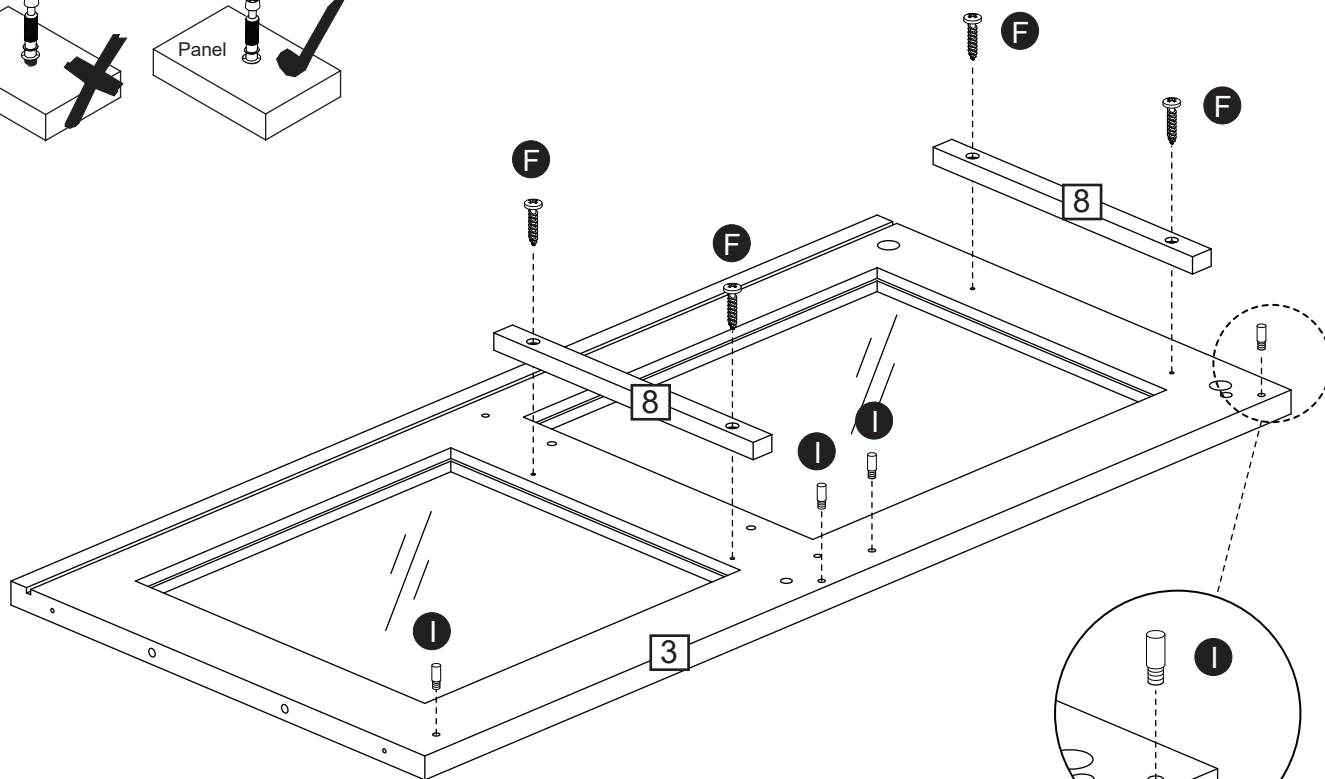

 First, use screw (F) to attach panel (8) to panel (3), then attach part (I) to panel (3).

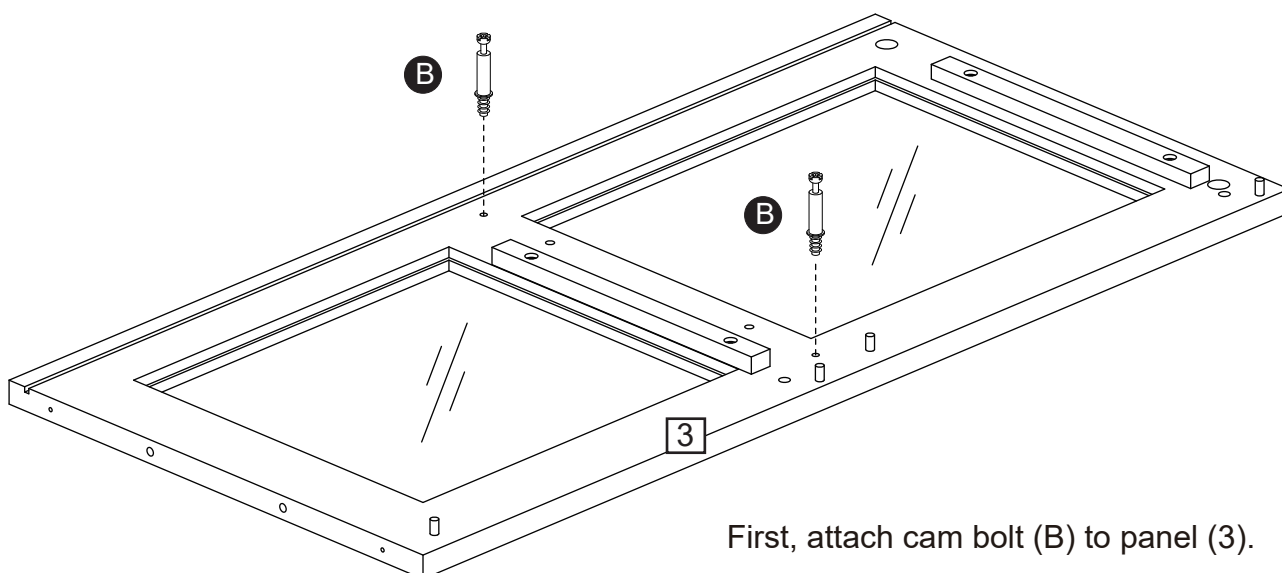

First, attach cam bolt (B) to panel (3).

Assembly Instructions

 
Step 3

A x4





6x30mm

C x4

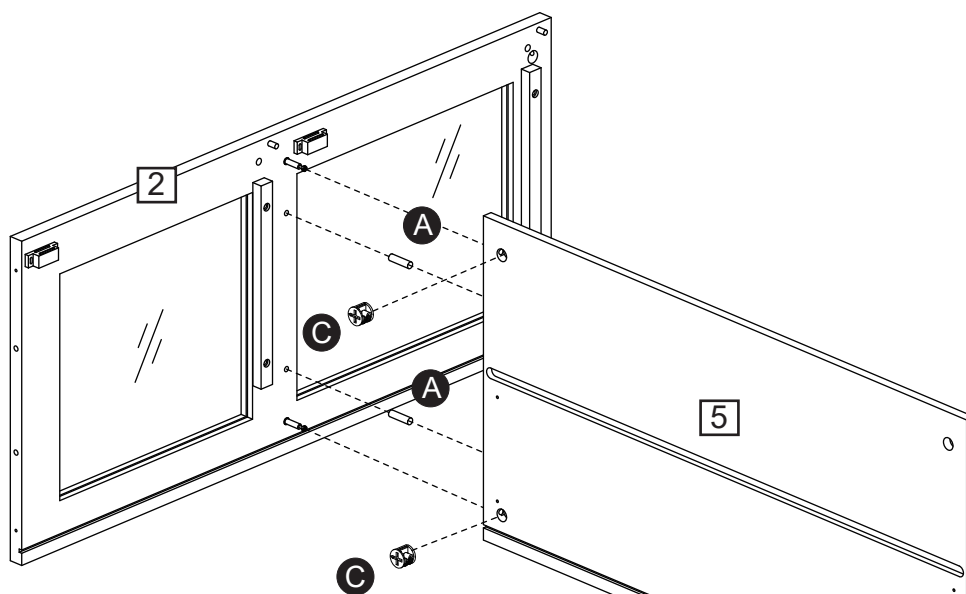

  First, insert wooden dowel (A) into panel (5), attach panel (2) to panel (5), insert cam lock (C), and tighten it.

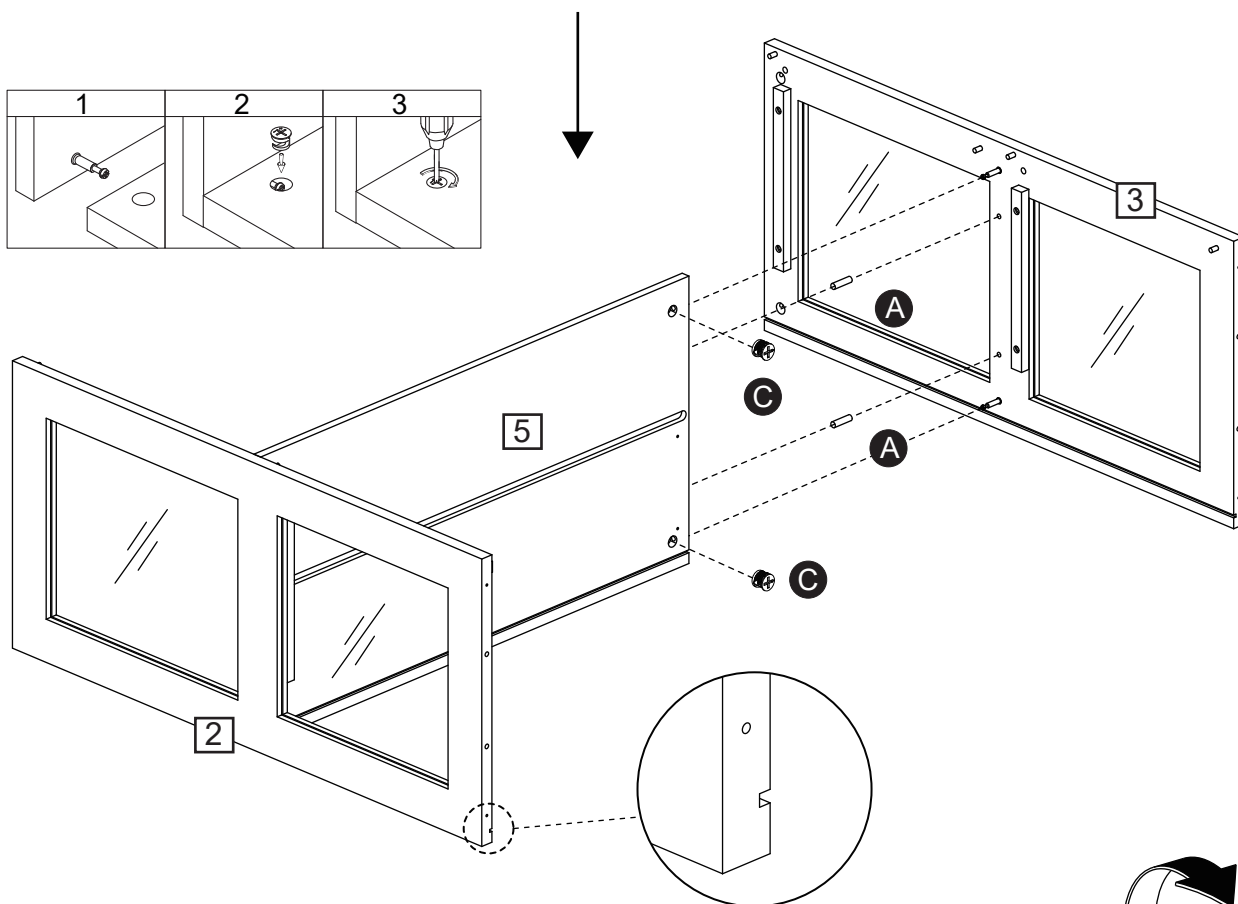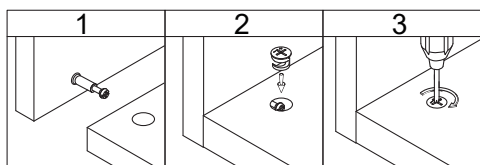


First, insert the wooden dowel (A) into panel (5), attach panel (3) to panel (5), insert the cam lock (C), and tighten it.



Rotate the frame
after this step as next step


Assembly Instructions

 Step 4

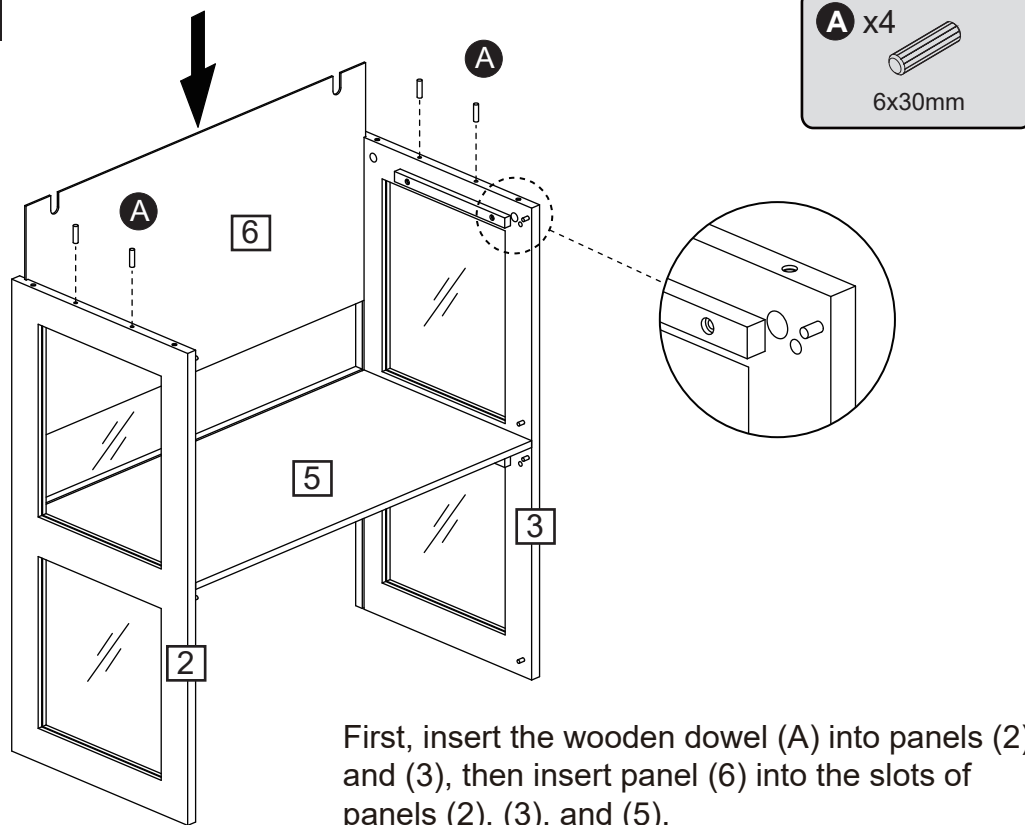

Step 5

 Peel off the adhesive backing from the LED strip (P), then attach it to the slot on panel (1) as shown in the diagram.




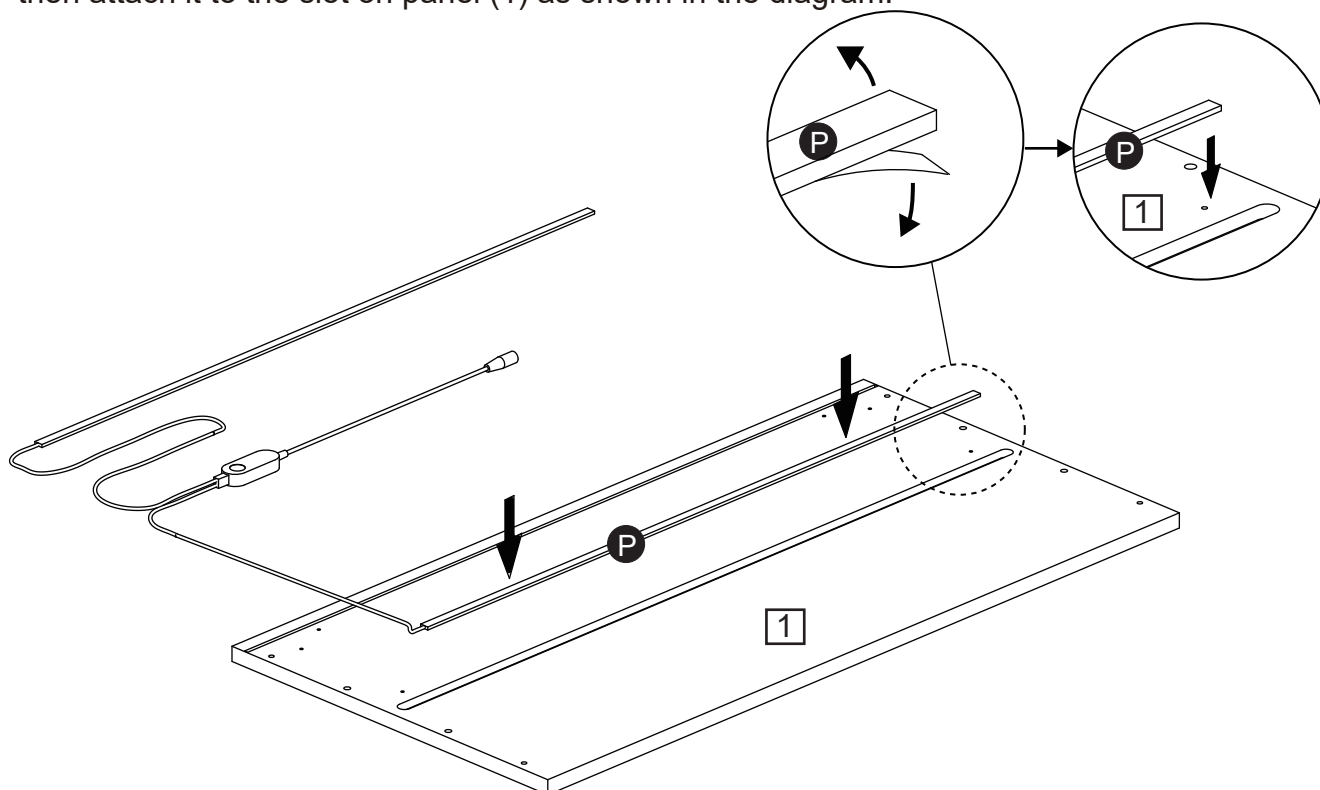


Assembly Instructions

Step 6



CAM-LOCK

    Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

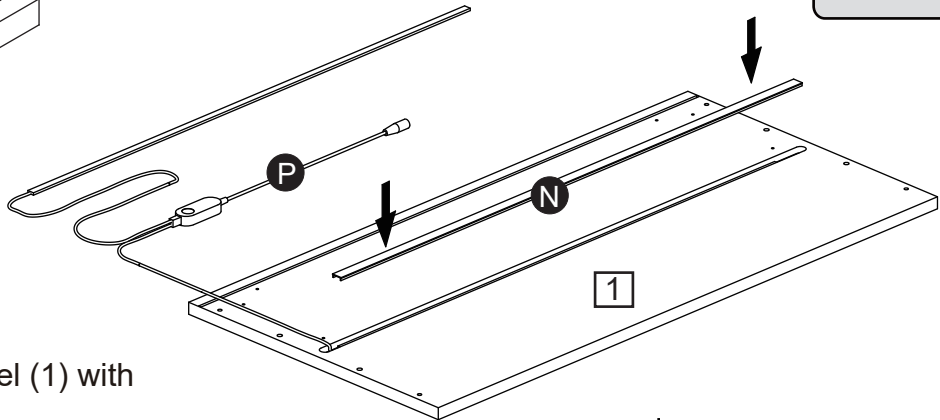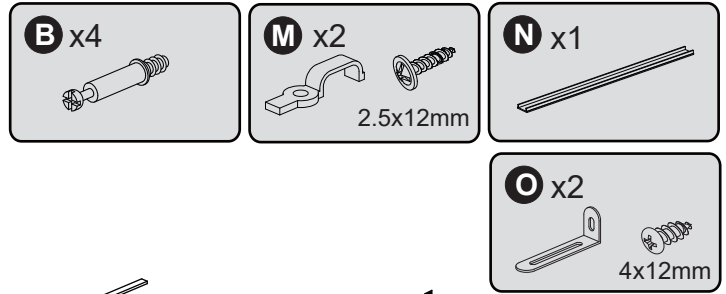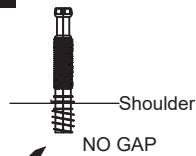
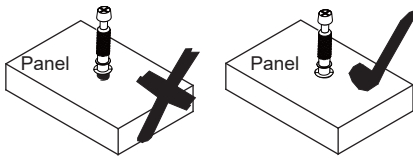


Cover the groove on panel (1) with the LED strip cover (N).

  Secure the LED strip (P) in place with part (M).

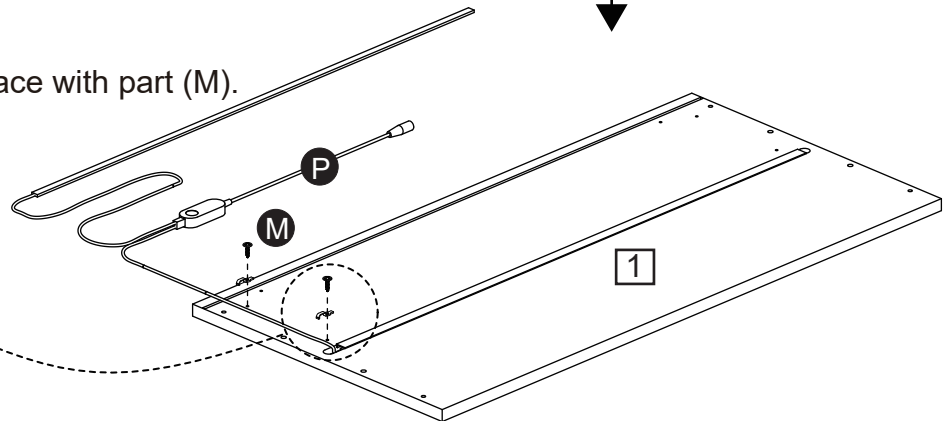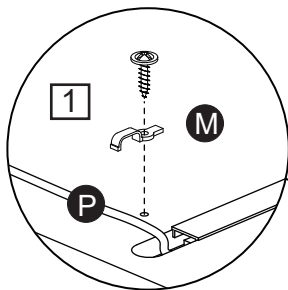

  Do not fully tighten wall fixing brackets until it's ready to be fixed to the wall.

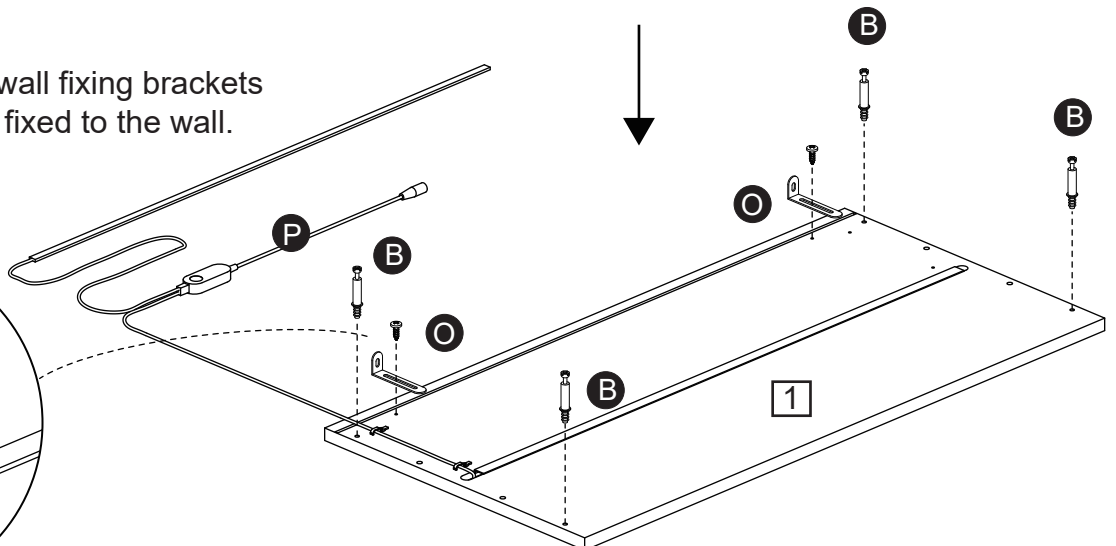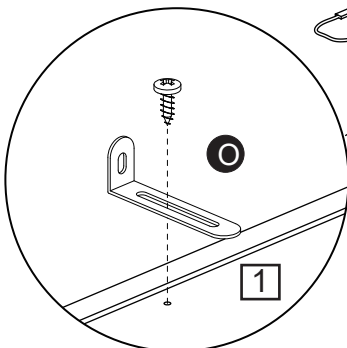

Attach part (O) to panel (1). Assemble the cam bolt (B) onto panel (1).

Assembly Instructions

 
 
Step 7

Assemble panel (1) onto panels (2) and (3), insert the cam lock (C), and tighten it.

C x4




The groove is here

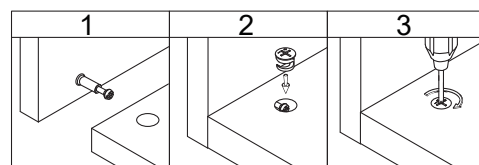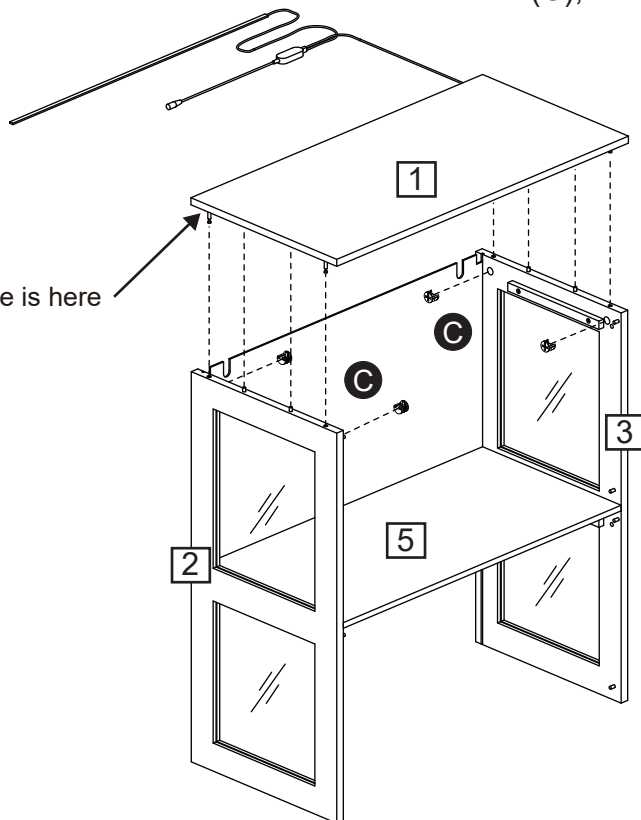


Rotate the frame
after this step as next step

 Step 8



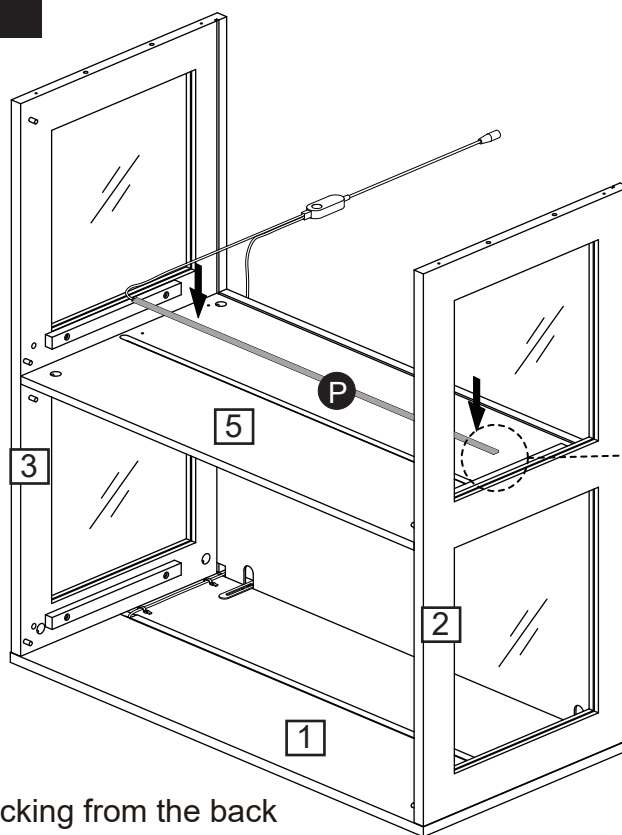


 Peel off the adhesive backing from the back of the LED strip (P), then attach it to the groove on panel (5) as shown in the diagram.

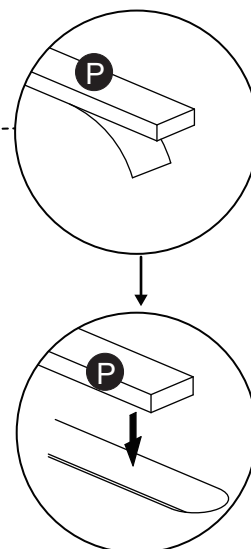


Assembly Instructions

   Step 9

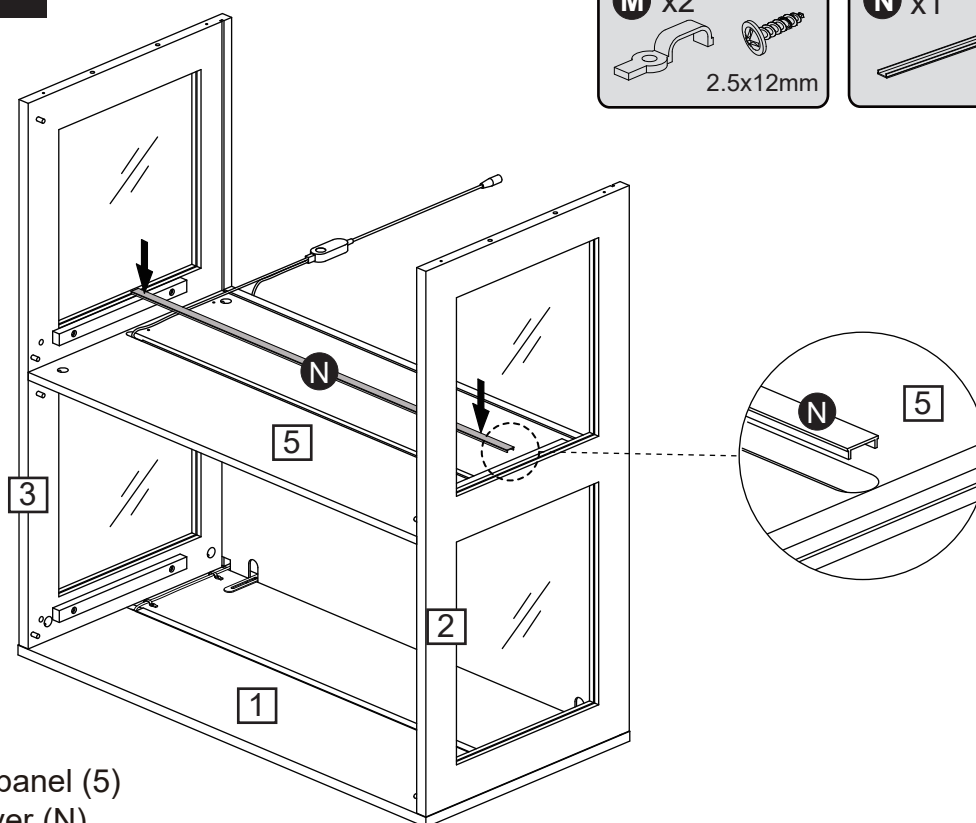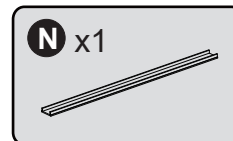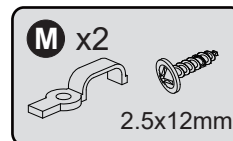


 
Cover the groove on panel (5) with the LED strip cover (N).

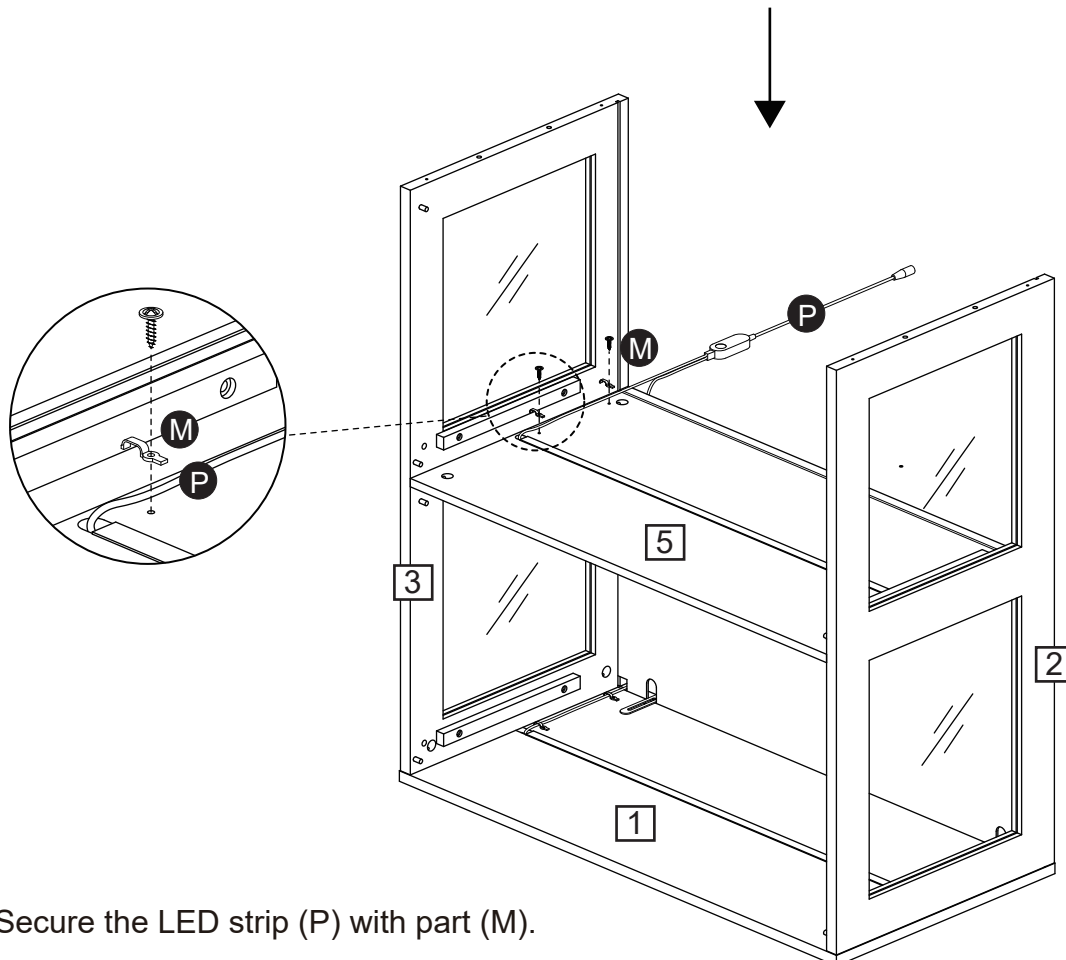

Secure the LED strip (P) with part (M).

Assembly Instructions

  Step 10

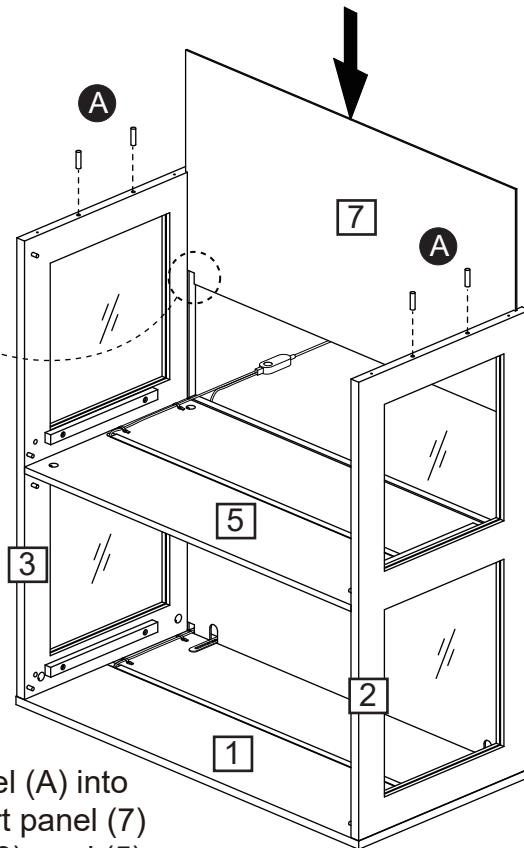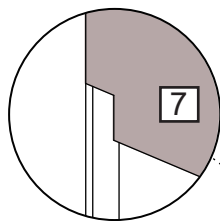


A x4




6x30mm

First, insert the wooden dowel (A) into panels (2) and (3), then insert panel (7) into the slots on panels (2), (3), and (5).

 Step 11

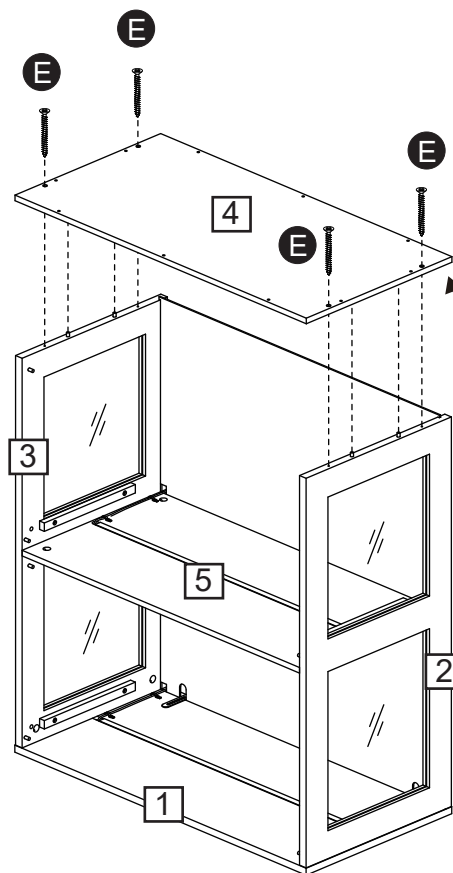

E x4

 

4x40mm

The groove is here


Use screw (E) to attach panel (4) to panels (2) and (3).

Assembly Instructions




Additional matching modular units are available separately and may be combined to create your desired storage configuration.

 
Option 1

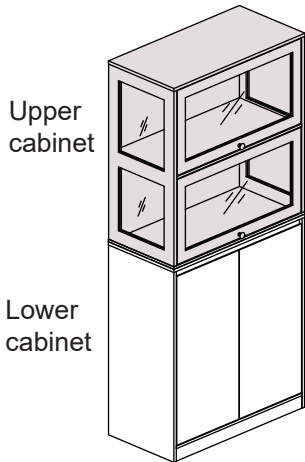


Option 2

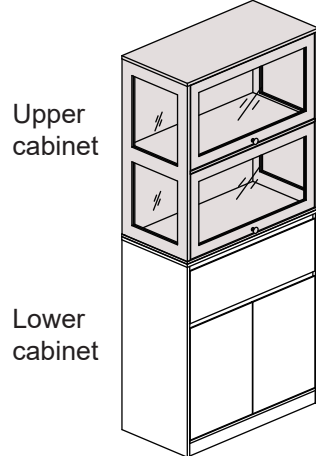 

Option 3

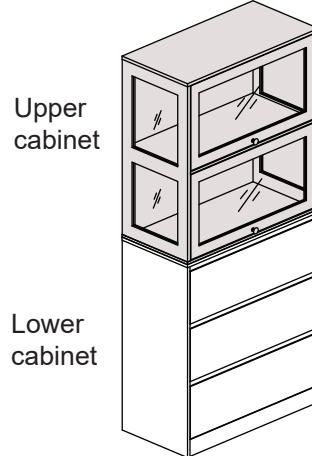 

Option 4

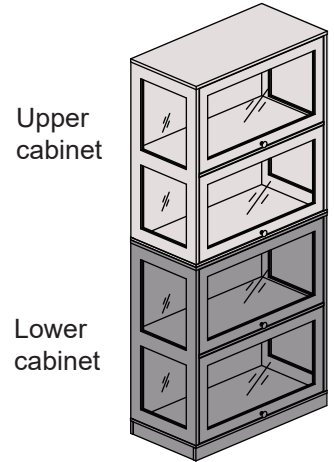 

Base frame is not required for upper cabinet.

 
Skip Steps 12 and 13, proceed to Step 14.



Assemble base frame for lower cabinet installation.


Assemble in order.

Upper cabinet

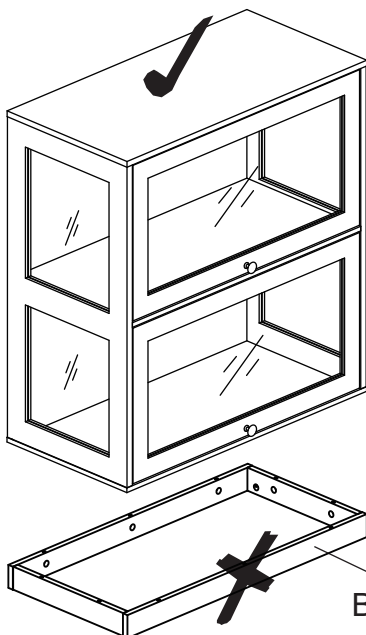

Base frame

 Lower cabinet

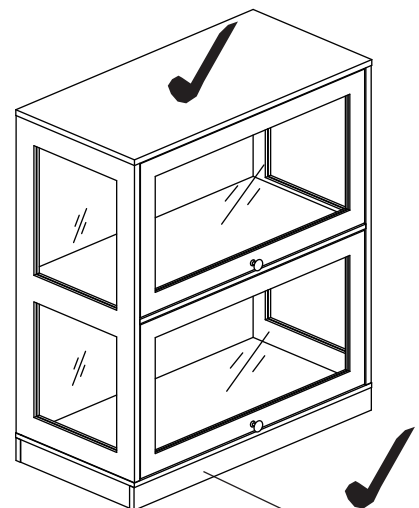


Base frame

Assembly Instructions

Step 12

CAM-LOCK

 Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

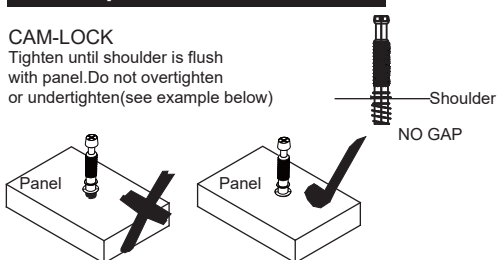


Assemble the cam bolt (B) onto panel (10).



A x4



 
B x4



C x4

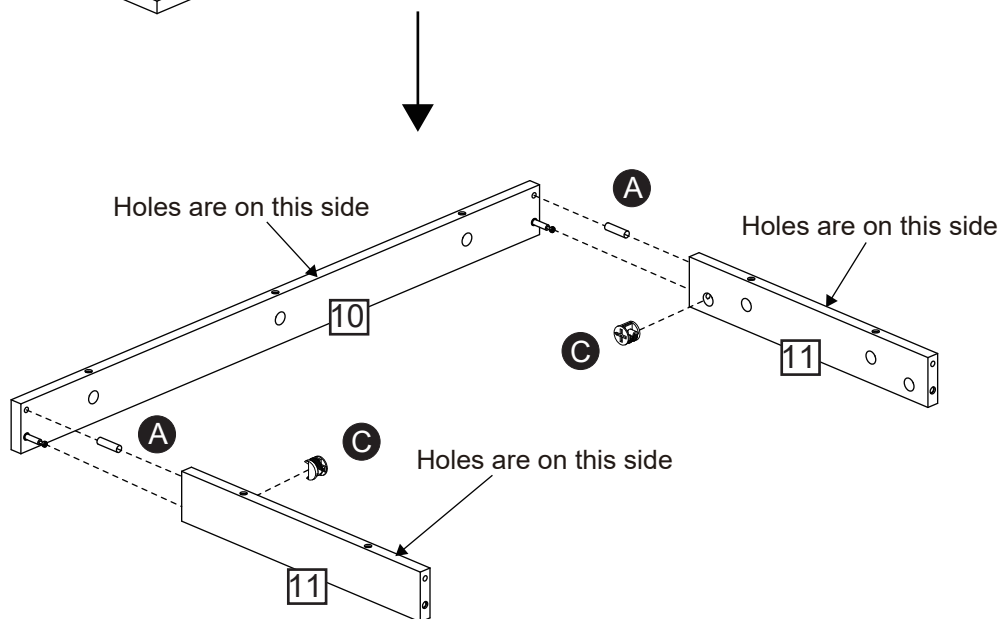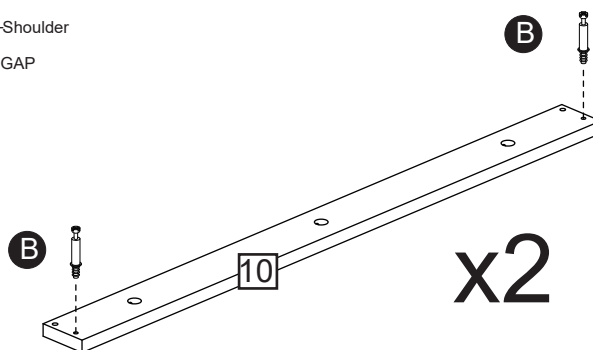  

 First, insert the wooden dowel (A) into panel (11), then assemble panel (10) onto panel (11), insert the cam lock (C), and tighten it.



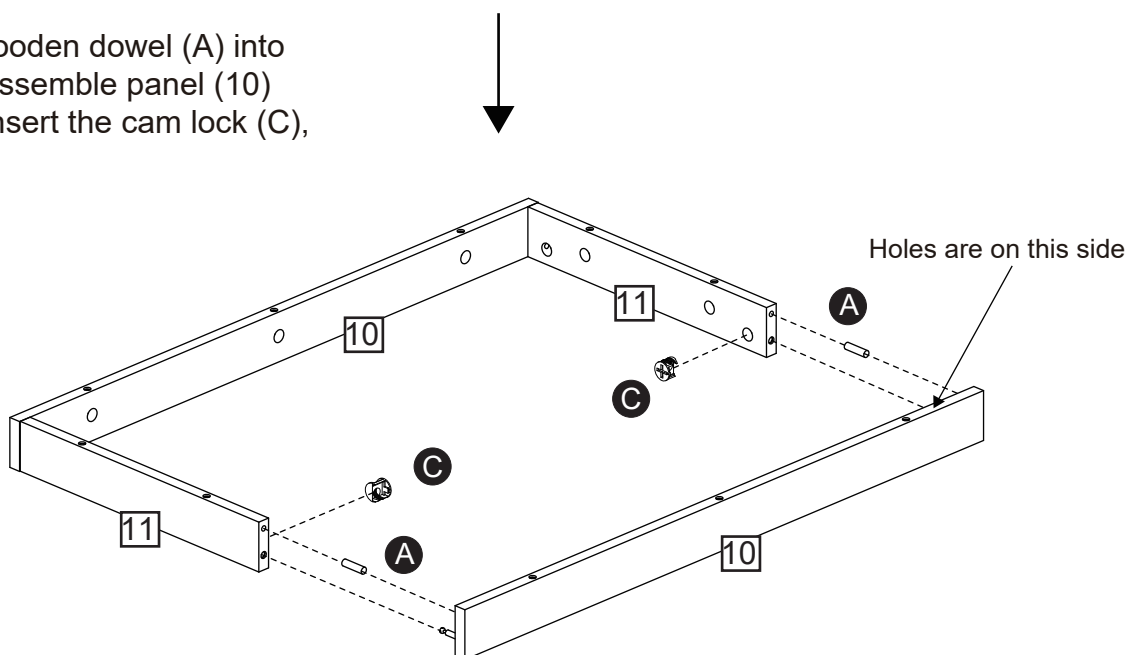


Assembly Instructions


Step 13

CAM-LOCK

   
Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

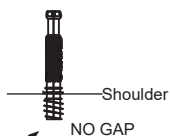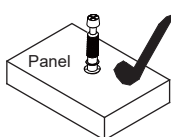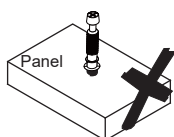

 
Assemble the cam bolt (B) onto panel (4).

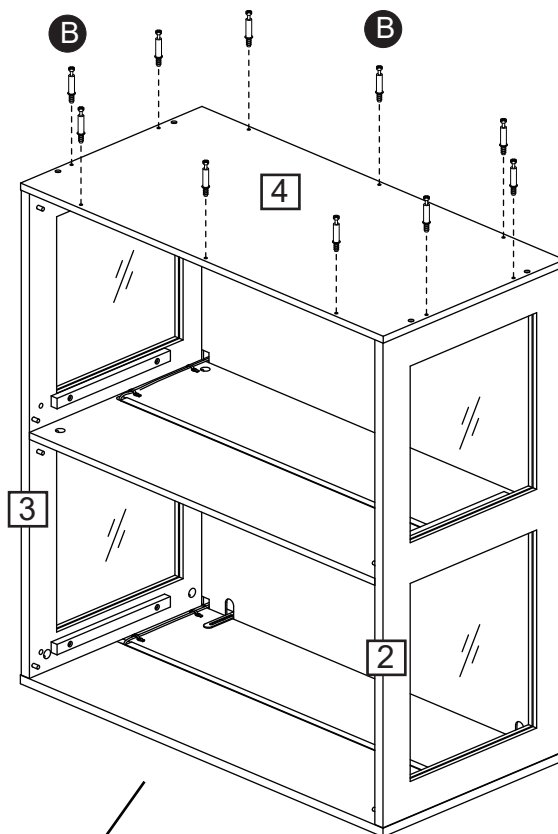

B x10

 

C x10

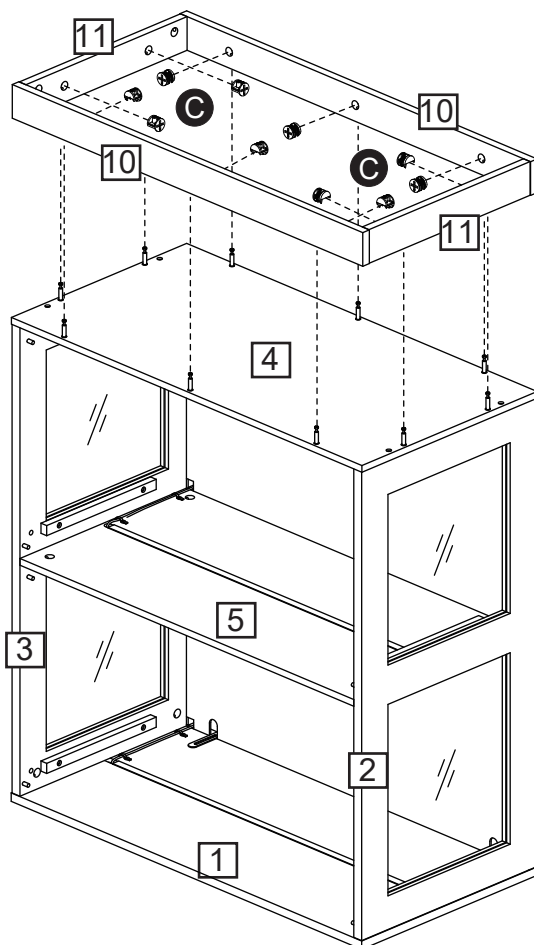 

Assemble panels (10) and (11) onto panel (4), insert the cam lock (C), and tighten it.

 


Rotate the frame after this step as next step

Assembly Instructions

Step 14




T x4

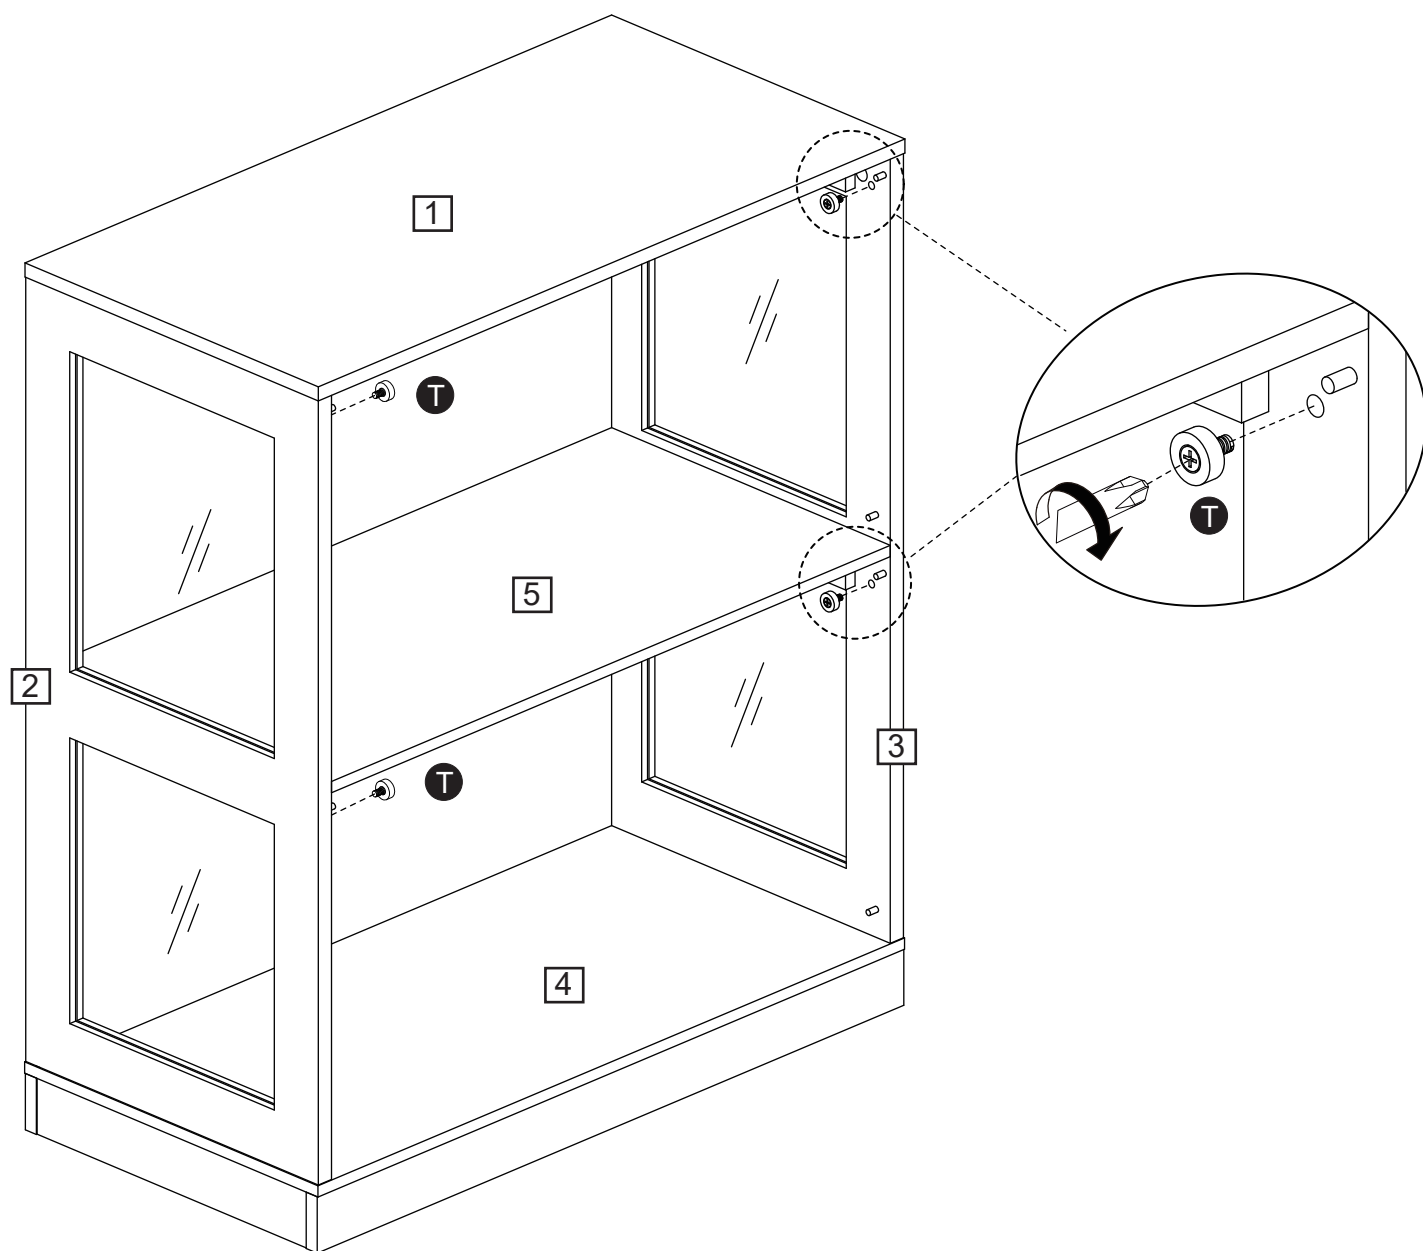







Attach part (T) to panels (2) and (3).

Assembly Instructions

   Step 15

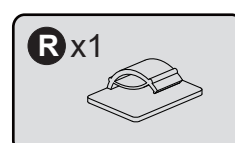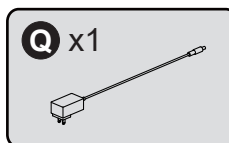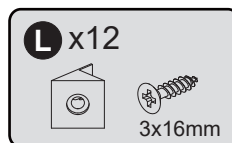

      Secure part (L) to the back panel. Glue part (R) to the position shown in the figure, and tuck the wires into it. Connect part (Q) to the light strip connector.

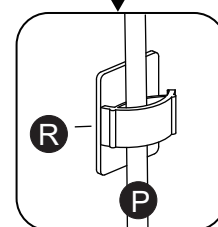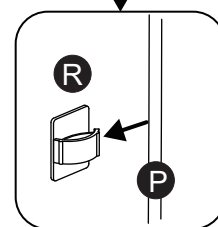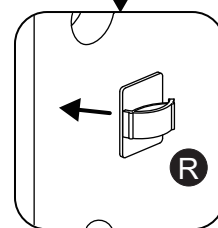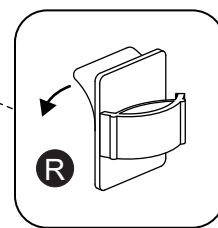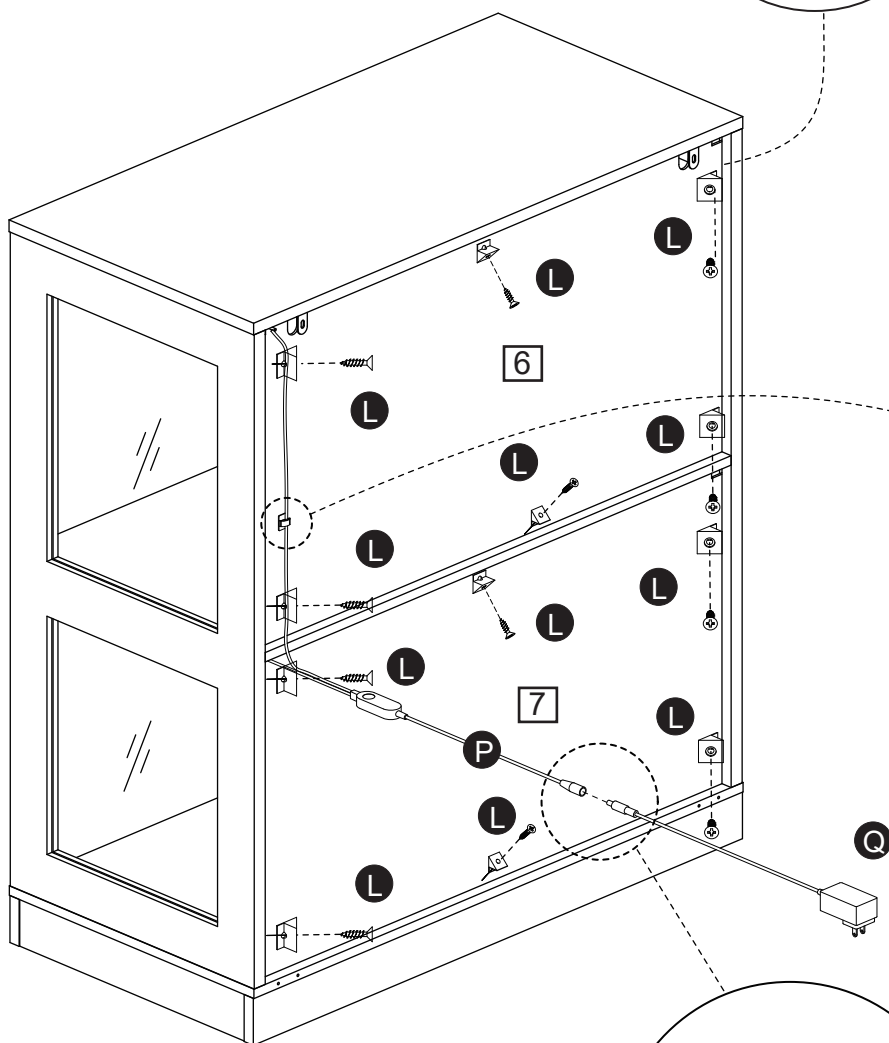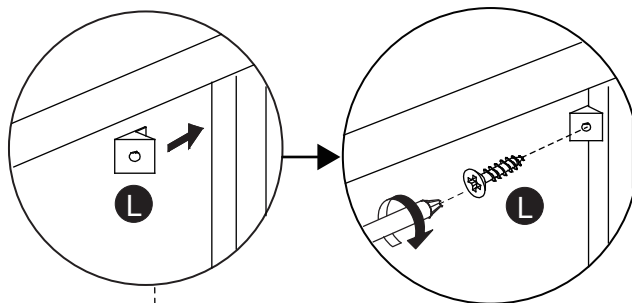


Remove the film before using the remote control.

Connect the light strip with the adapter, then control the light with the remote control provided.

Assembly Instructions

Step 16

 Peel off the protective film from the surfaces of panels (2) and (3).

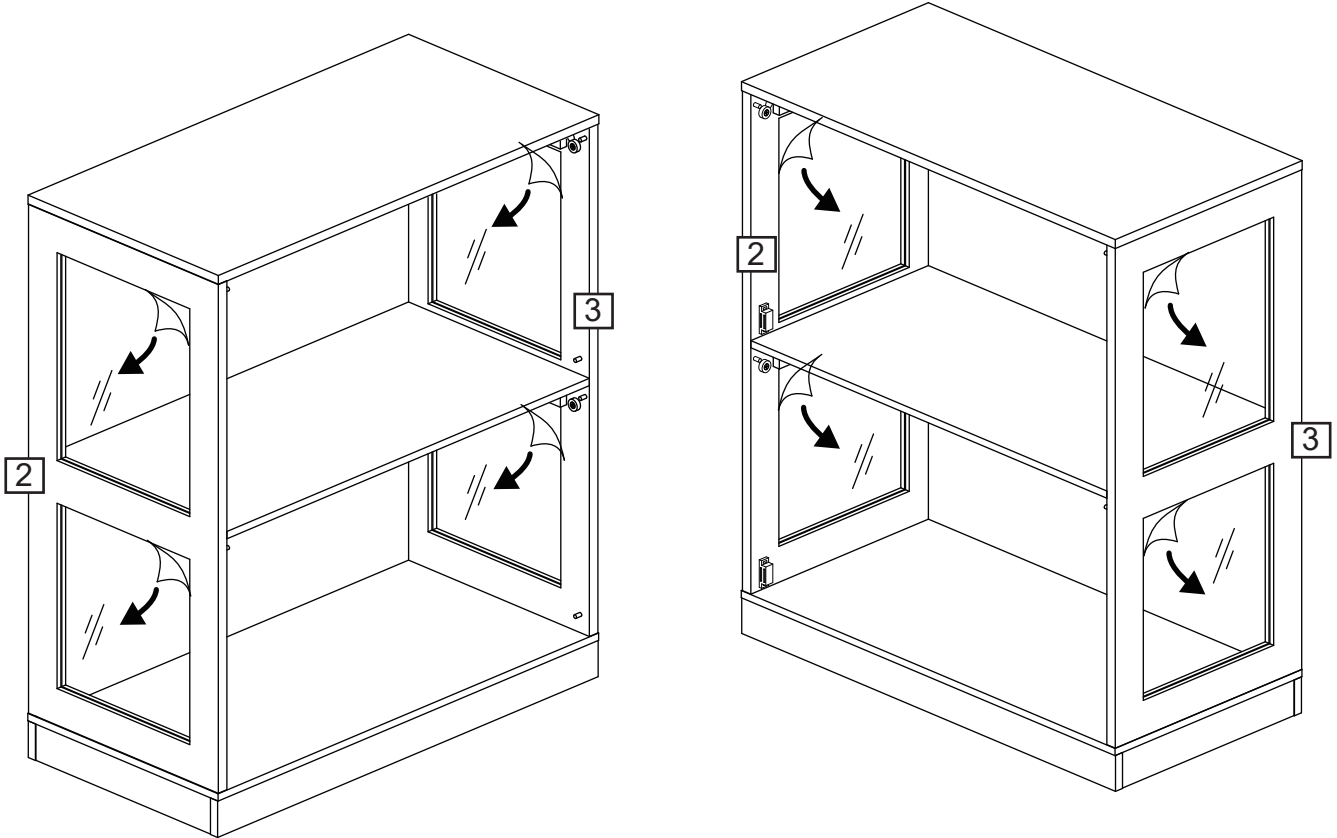


Step 17

D x2
3x12mm

G x2
4x18mm

H x2

 
K x2

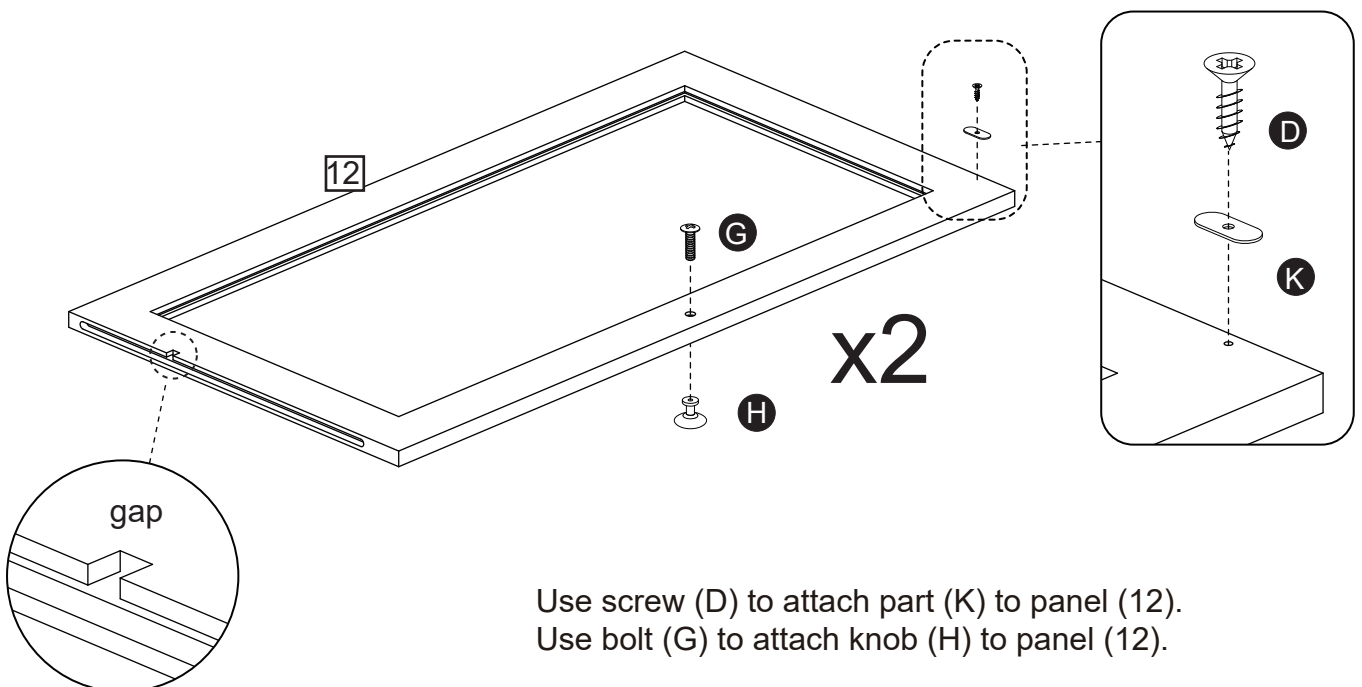

Use screw (D) to attach part (K) to panel (12).
Use bolt (G) to attach knob (H) to panel (12).


Assembly Instructions

 Step 18

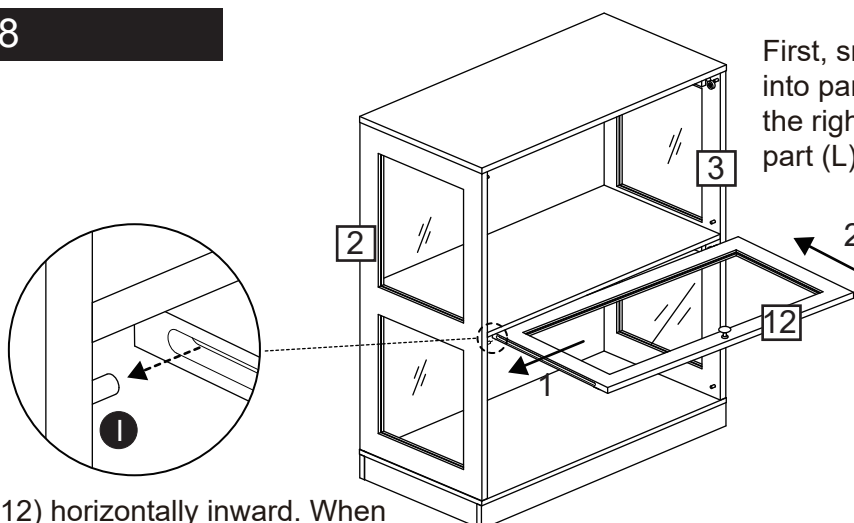


First, snap the left groove of panel (12) into part (L) of panel (2), then position the right side of panel (12) on top of part (L) of panel (3).

 Push panel (12) horizontally inward. When the gap in part (L) of panel (3) aligns with the gap in panel (12), slide part (L) of panel (3) into the slot on the right side of panel (12).

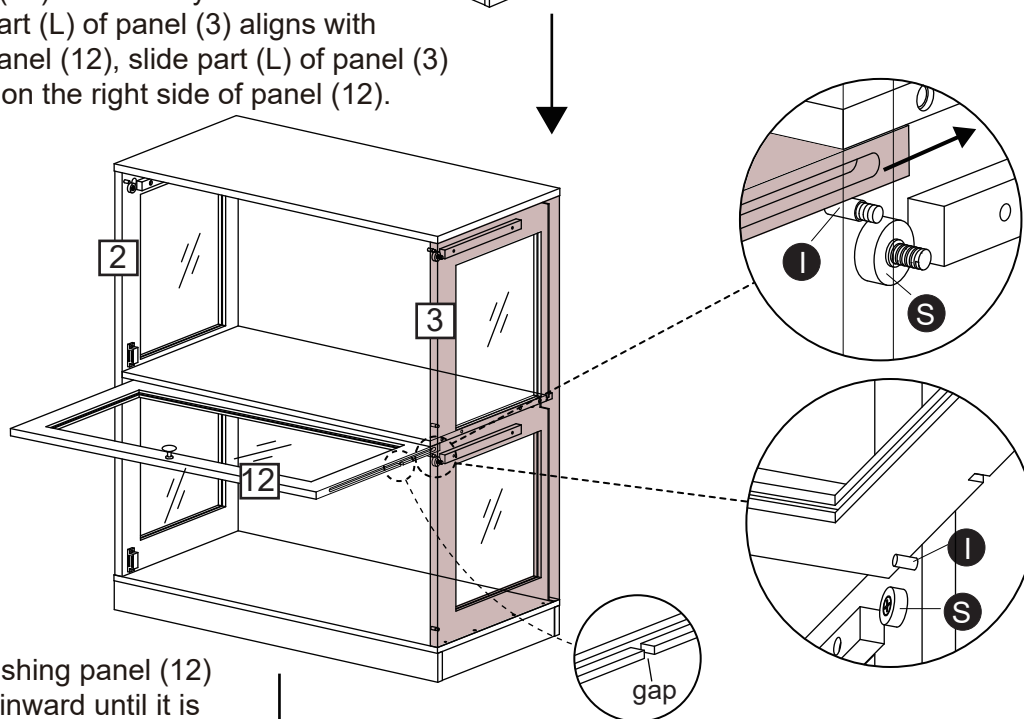






 
Continue pushing panel (12) horizontally inward until it is fully seated.

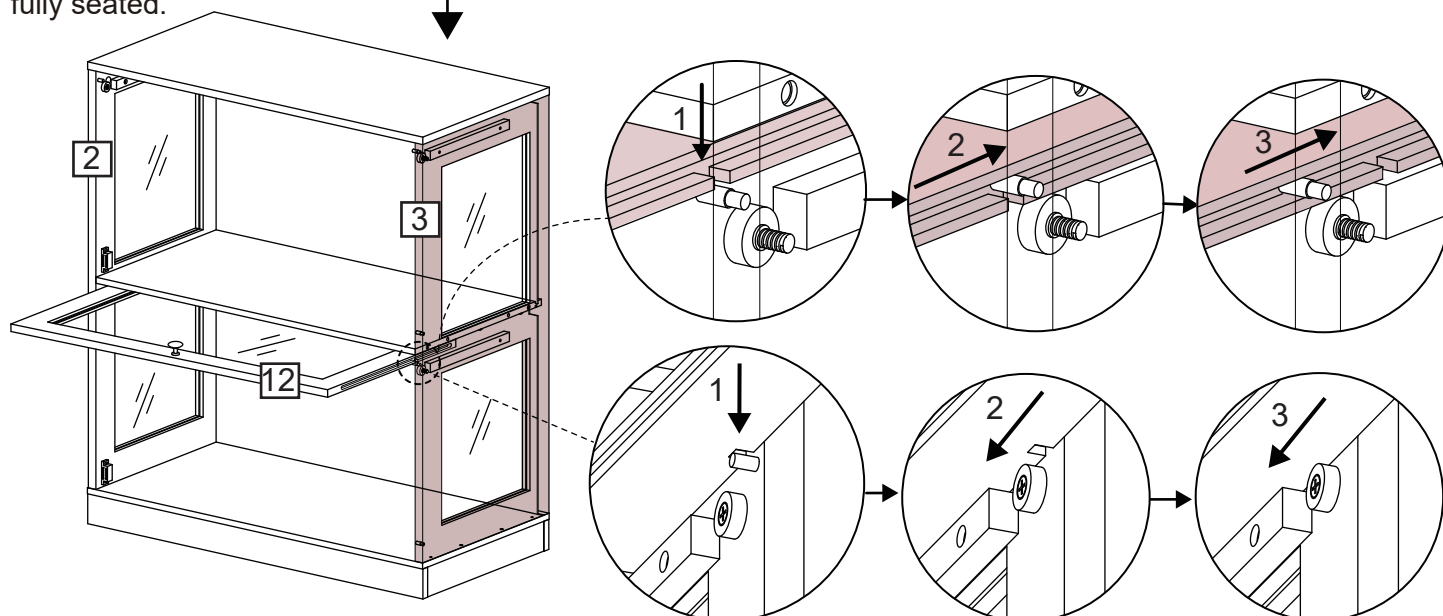

Assembly Instructions

Step 19

      Secure the cabinet to the wall using part(O).

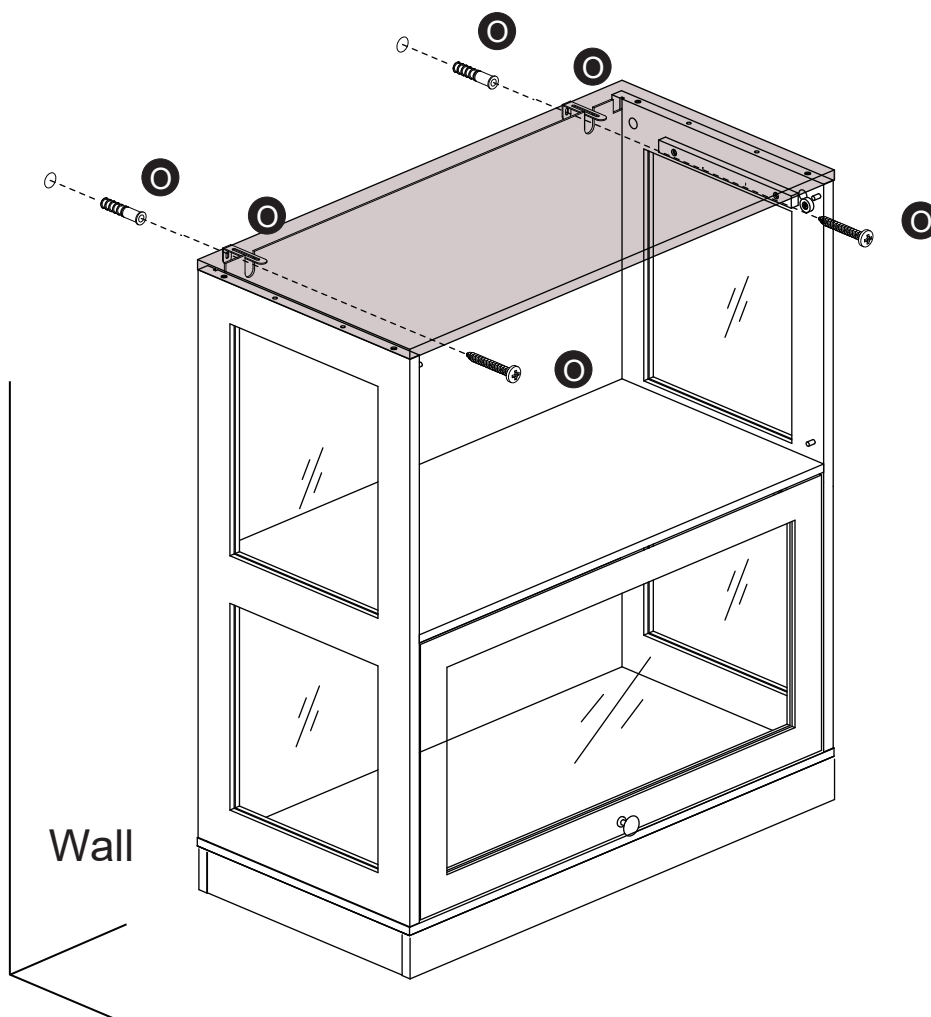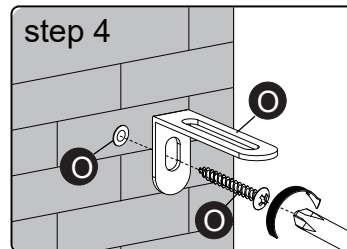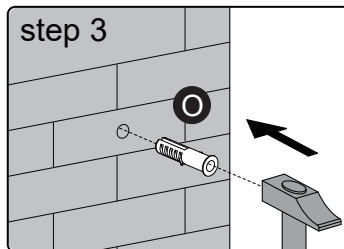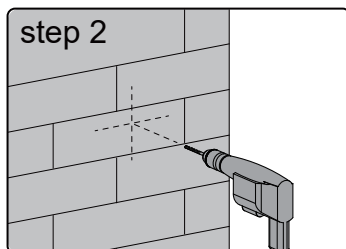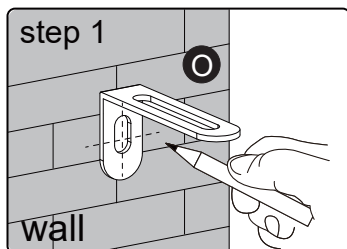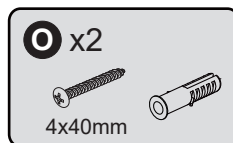

Please read the Guide to Wall Mounting & Fixings on the page 31 before excuting this step.


Assembly Instructions

Step 20




Additional matching modular units are available separately and may be combined to create your desired storage configuration.

 
Option 1

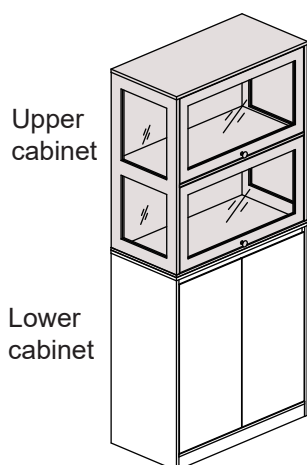


Option 2

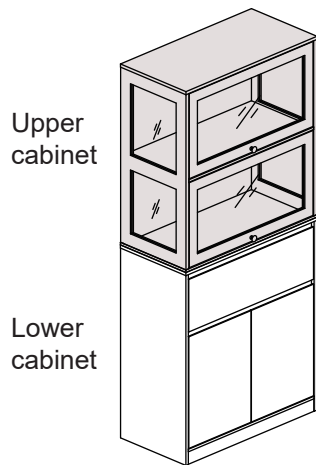 

Option 3

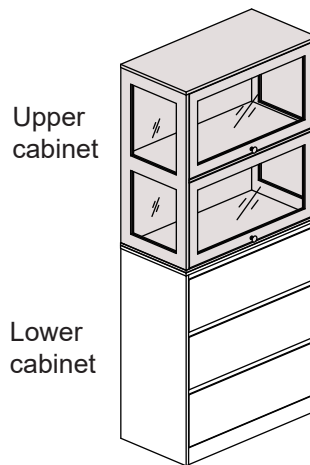 


Option 4

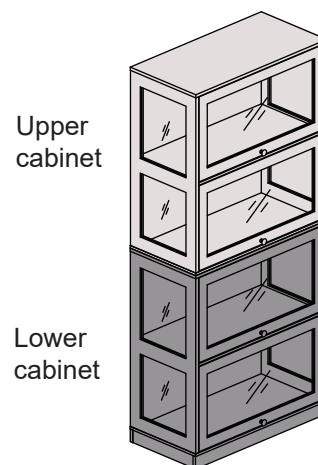 


Do not install the upper door first.

 Upper cabinet

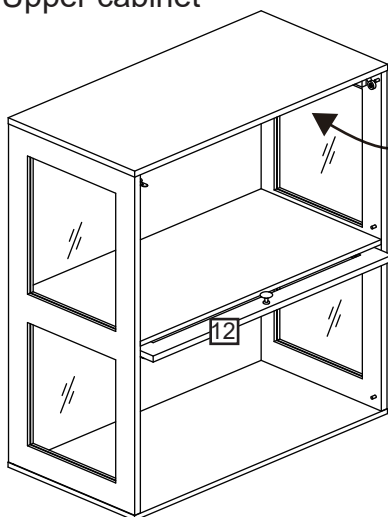

Assemble the upper door(12) by referring to step 18 for lower door assembly.

 
Lower cabinet

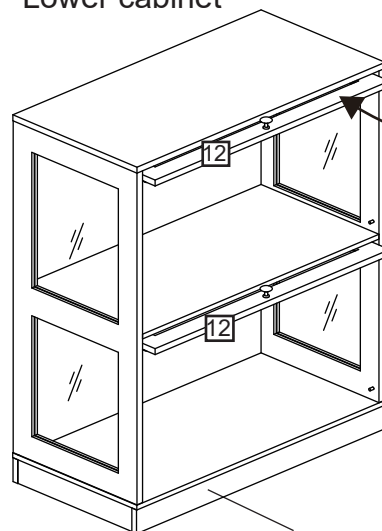


Base frame

Assembly Instructions

 
Step 21

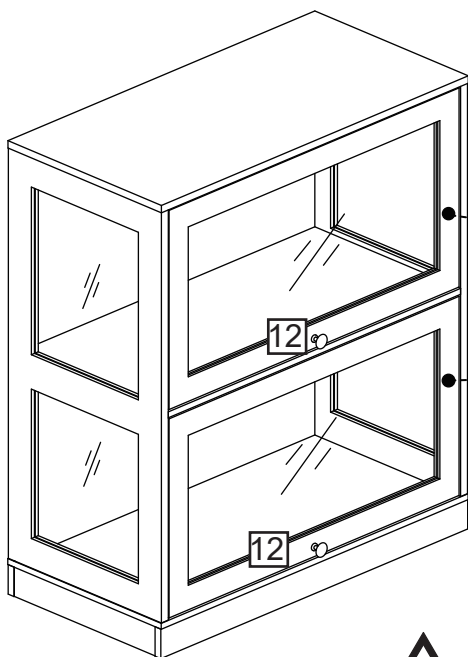

 
Pull the door horizontally all the way open.

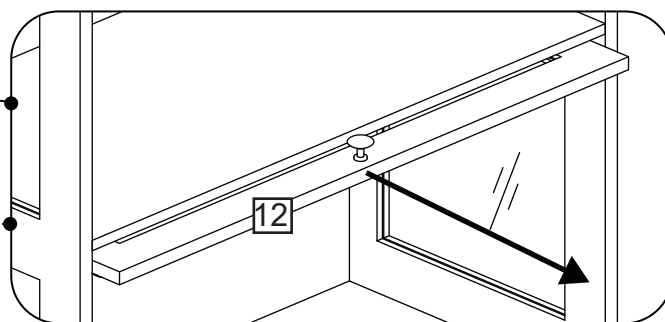


Door not fully pulled horizontally

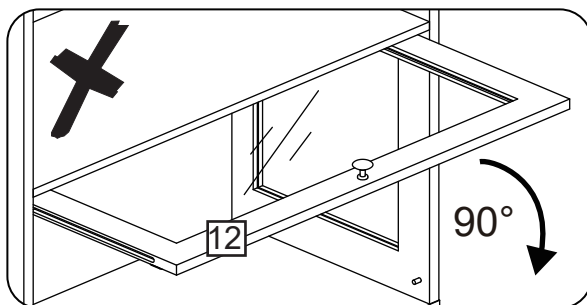 

 Pull the door horizontally all the way open.

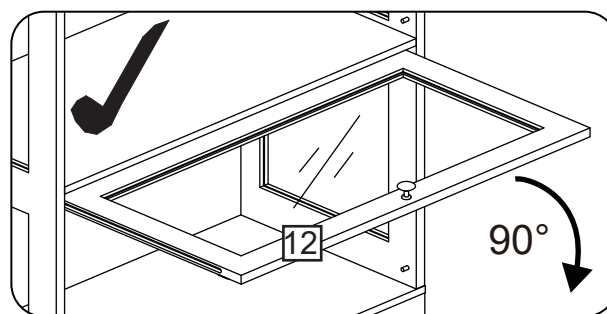

 Pull the door horizontally until it is fully open, then flip it down 90 degrees to close the door.

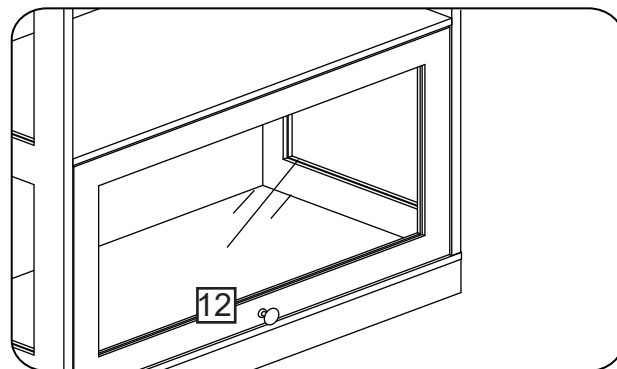


Assembly Instructions




Additional matching modular units are available separately and may be combined to create your desired storage configuration.

 
Option 1

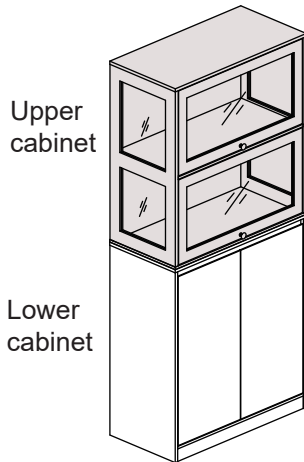


Option 2

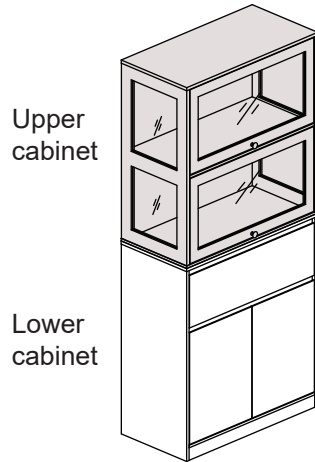 

Option 3

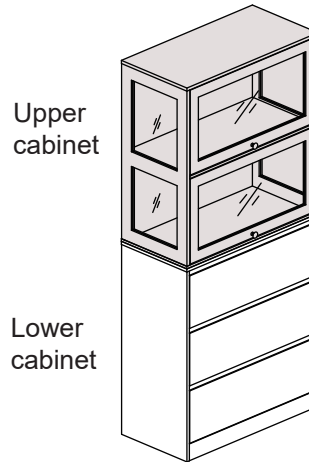 

Option 4

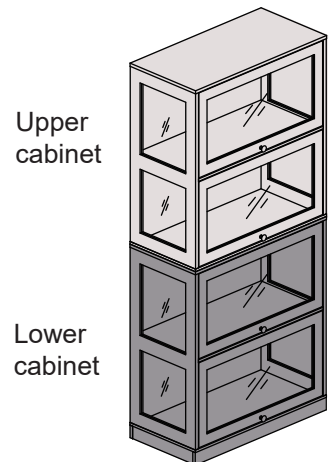 


Step 1

If necessary, stack the cabinet on top of the cabinet shown in the figure.




ASSEMBLY BY
2 PEOPLE

 
Option 1

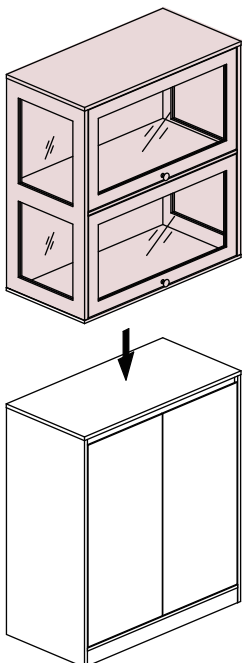


Option 2

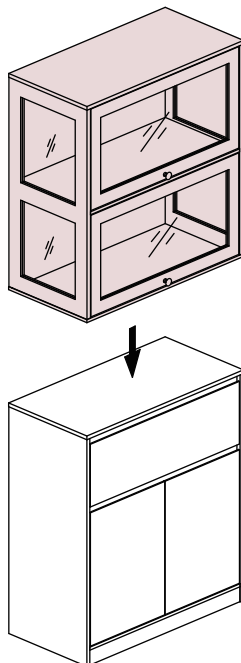 

Option 3

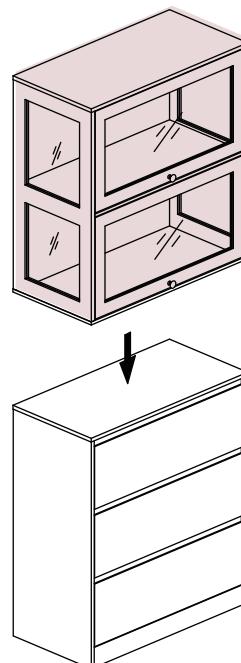 





Option 4

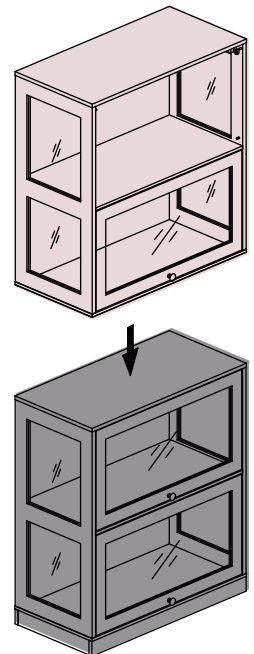 


Assembly Instructions

Step 2

   
 
Option 1
Option 2

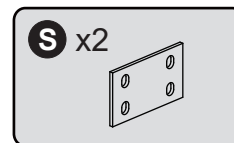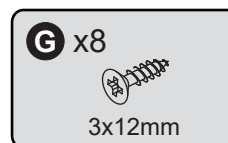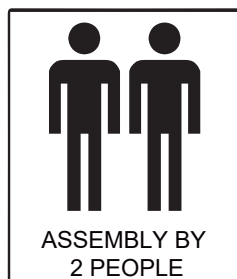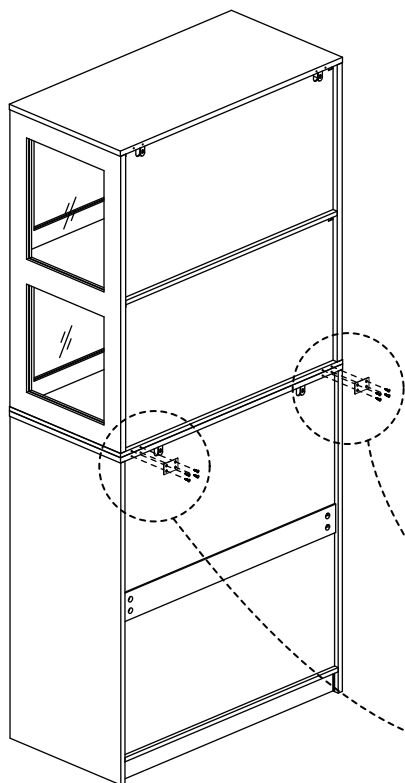

Option 3

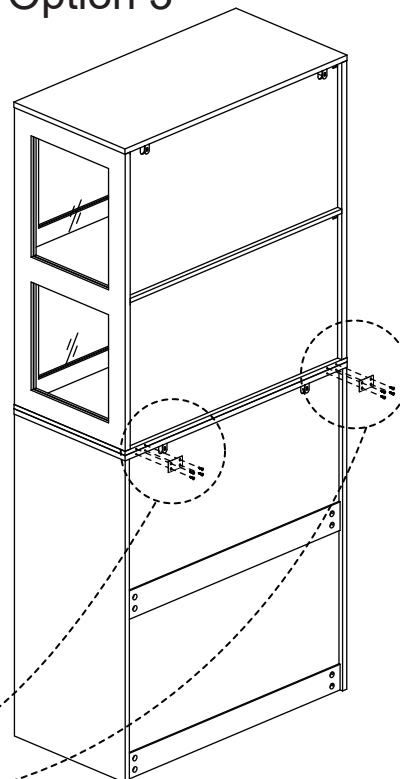 

Option 4

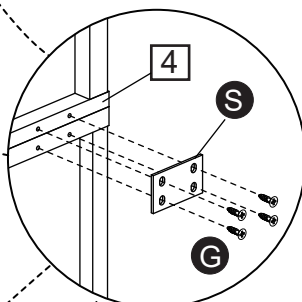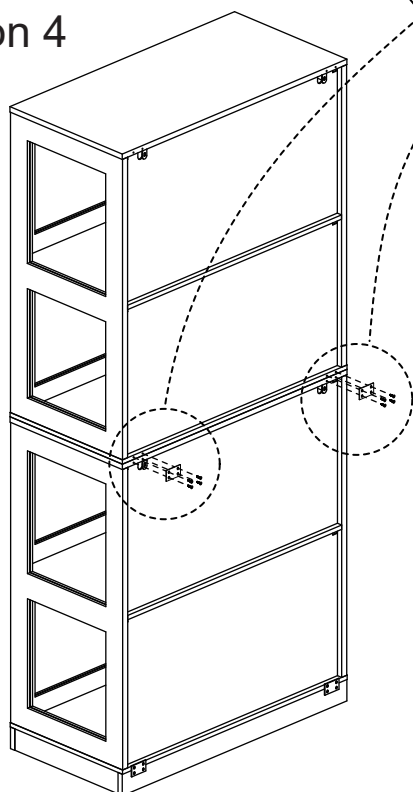  


Connect the two cabinets using screw(G) and part(S).

Assembly Instructions


Step 3

 Q x1



Connect part(Q) to the connector on the LED strip(P).

 Option 4

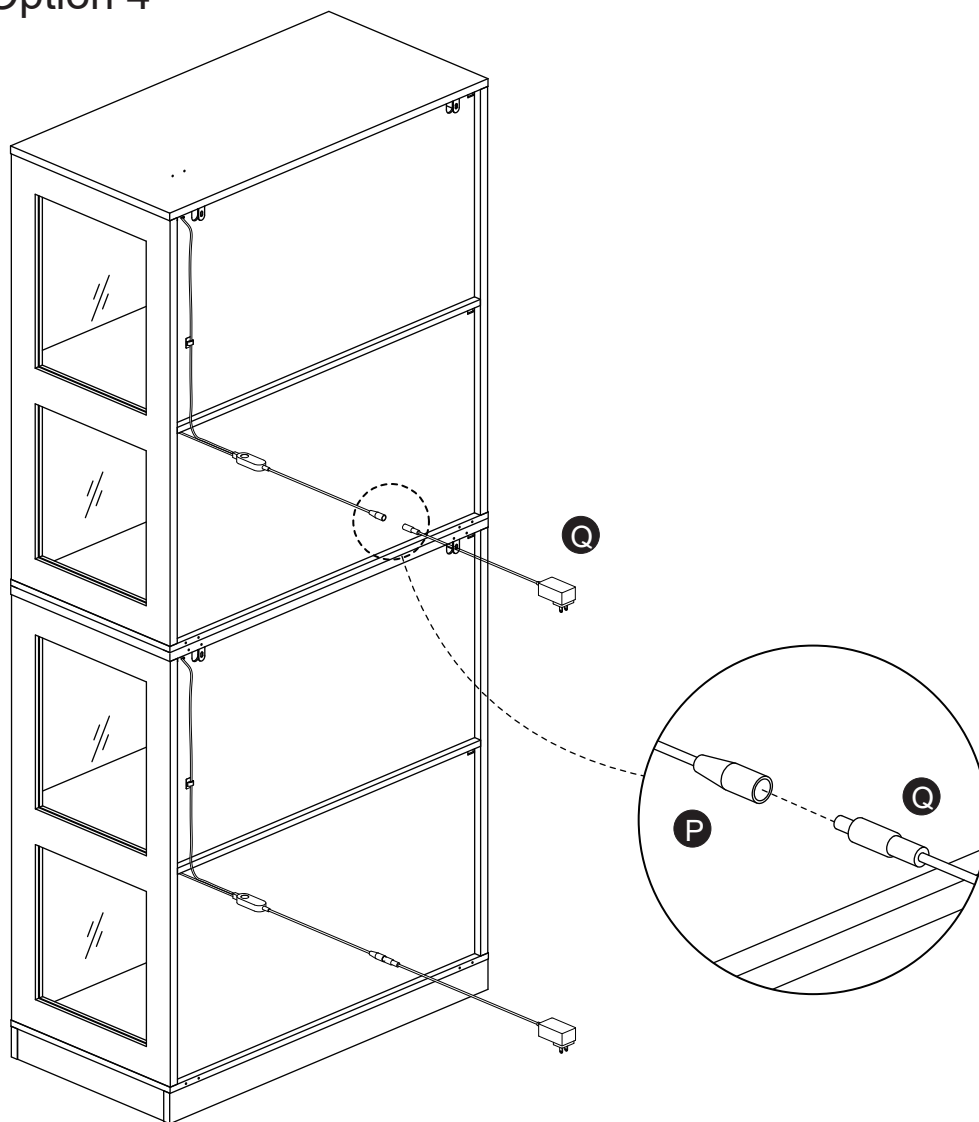






Remove the film before using the remote control.

Connect the light strip with the adapter, then control the light with the remote control provided.

Assembly Instructions

Step 4

     Secure the cabinet to the wall using part(O).

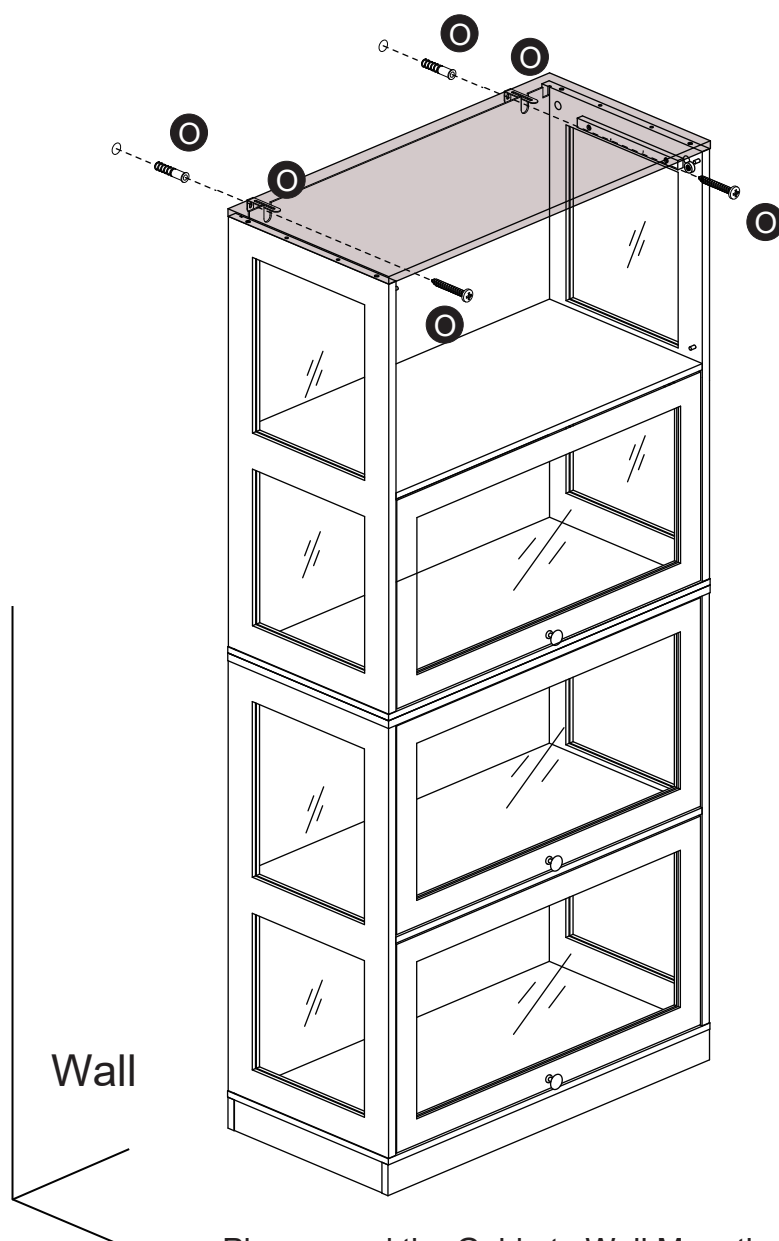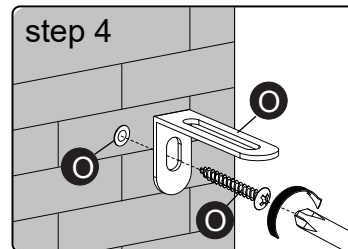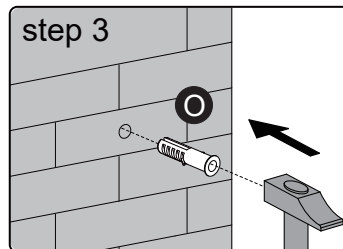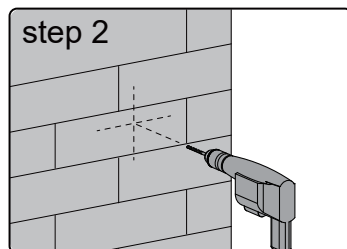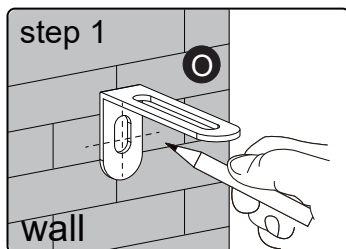


Please read the Guide to Wall Mounting & Fixings on the page 31 before excuting this step.

Assembly Instructions

Step 5

 Assemble the upper door(12) by referring to step 18 and 20 for lower door assembly.

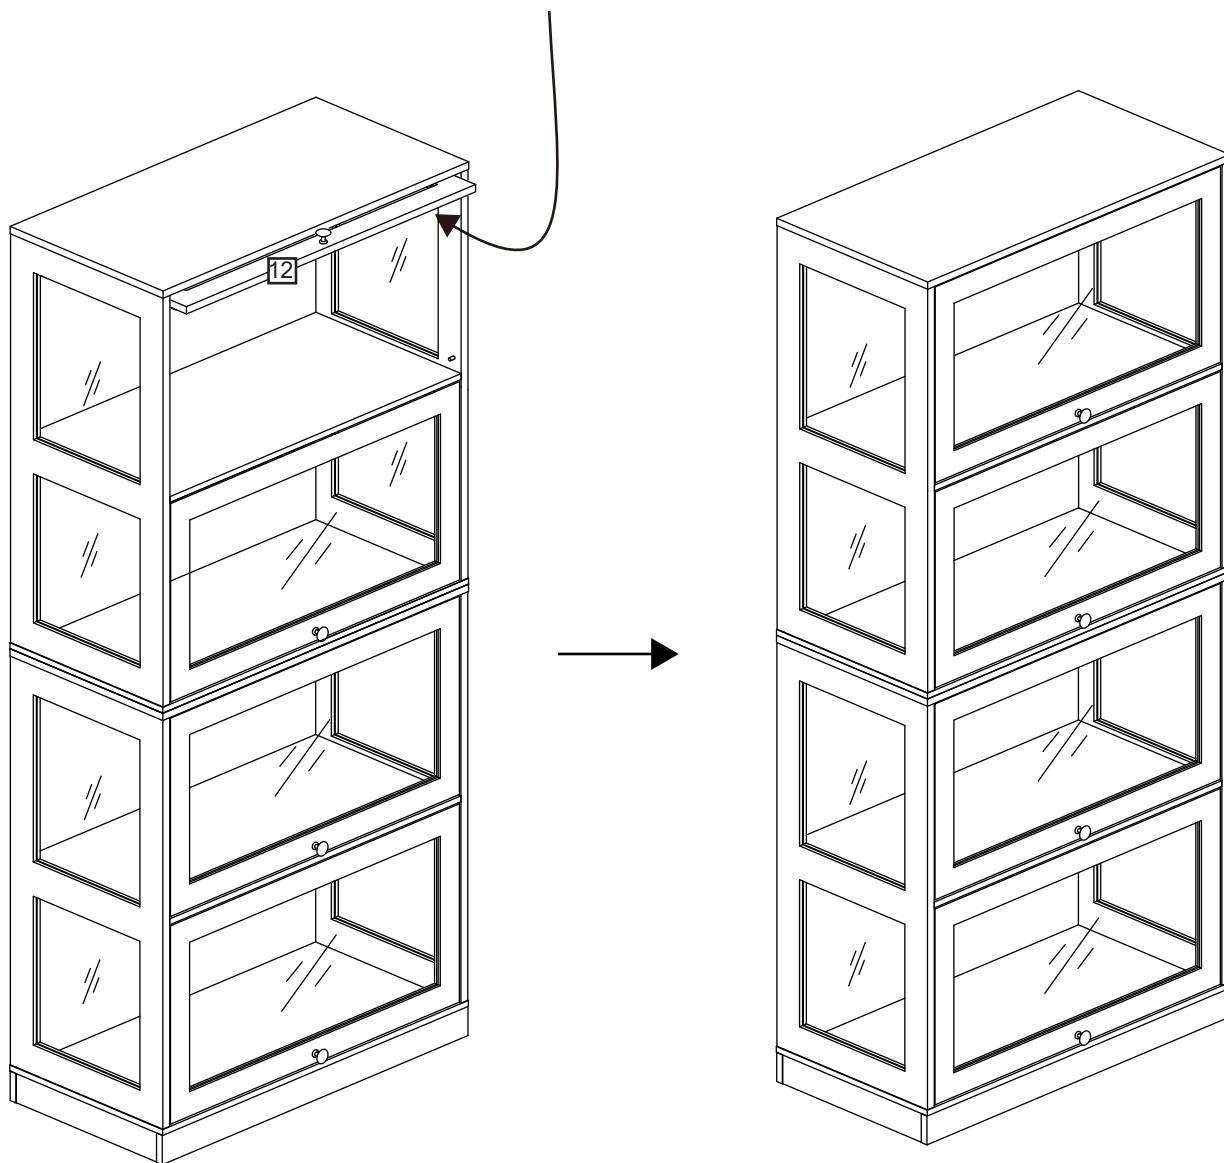

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for **supporting your unit**. **Consult a qualified tradesperson if you are unsure.**

 
Hints:

- 1: General rule:  always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

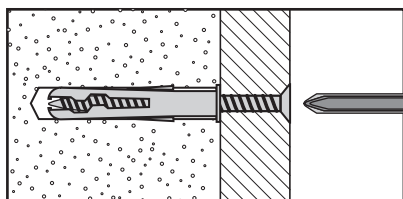


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.3 "Cavity Fixing" wall plug

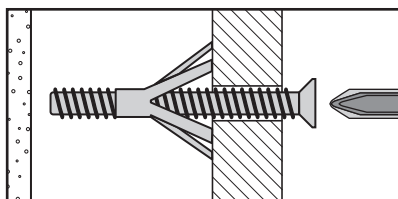


For use with plasterboard partitions or hollow wooden doors.

 No.5 "Hammer Fixing" wall plug

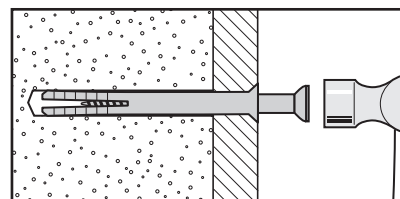


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.2 "Plasterboard" wall plug

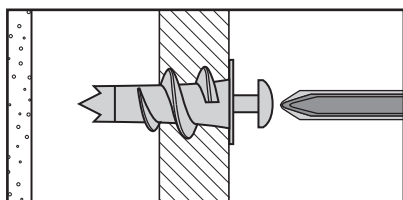


For use when attaching light loads onto plasterboard partitions.

 No.4 "Cavity Fixing – Heavy Duty" wall plug

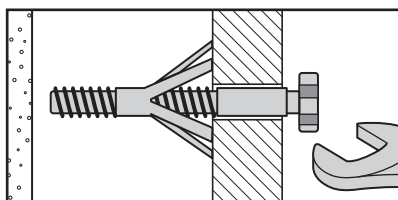

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.6 "Shield Anchor" wall plug – heavy loads

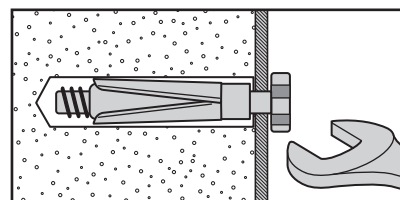

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.

| Cabinet

Sku:
C001441090
C001441100

V1.0