


Upholstered Platform Bed with Tufted Wingback Headboard

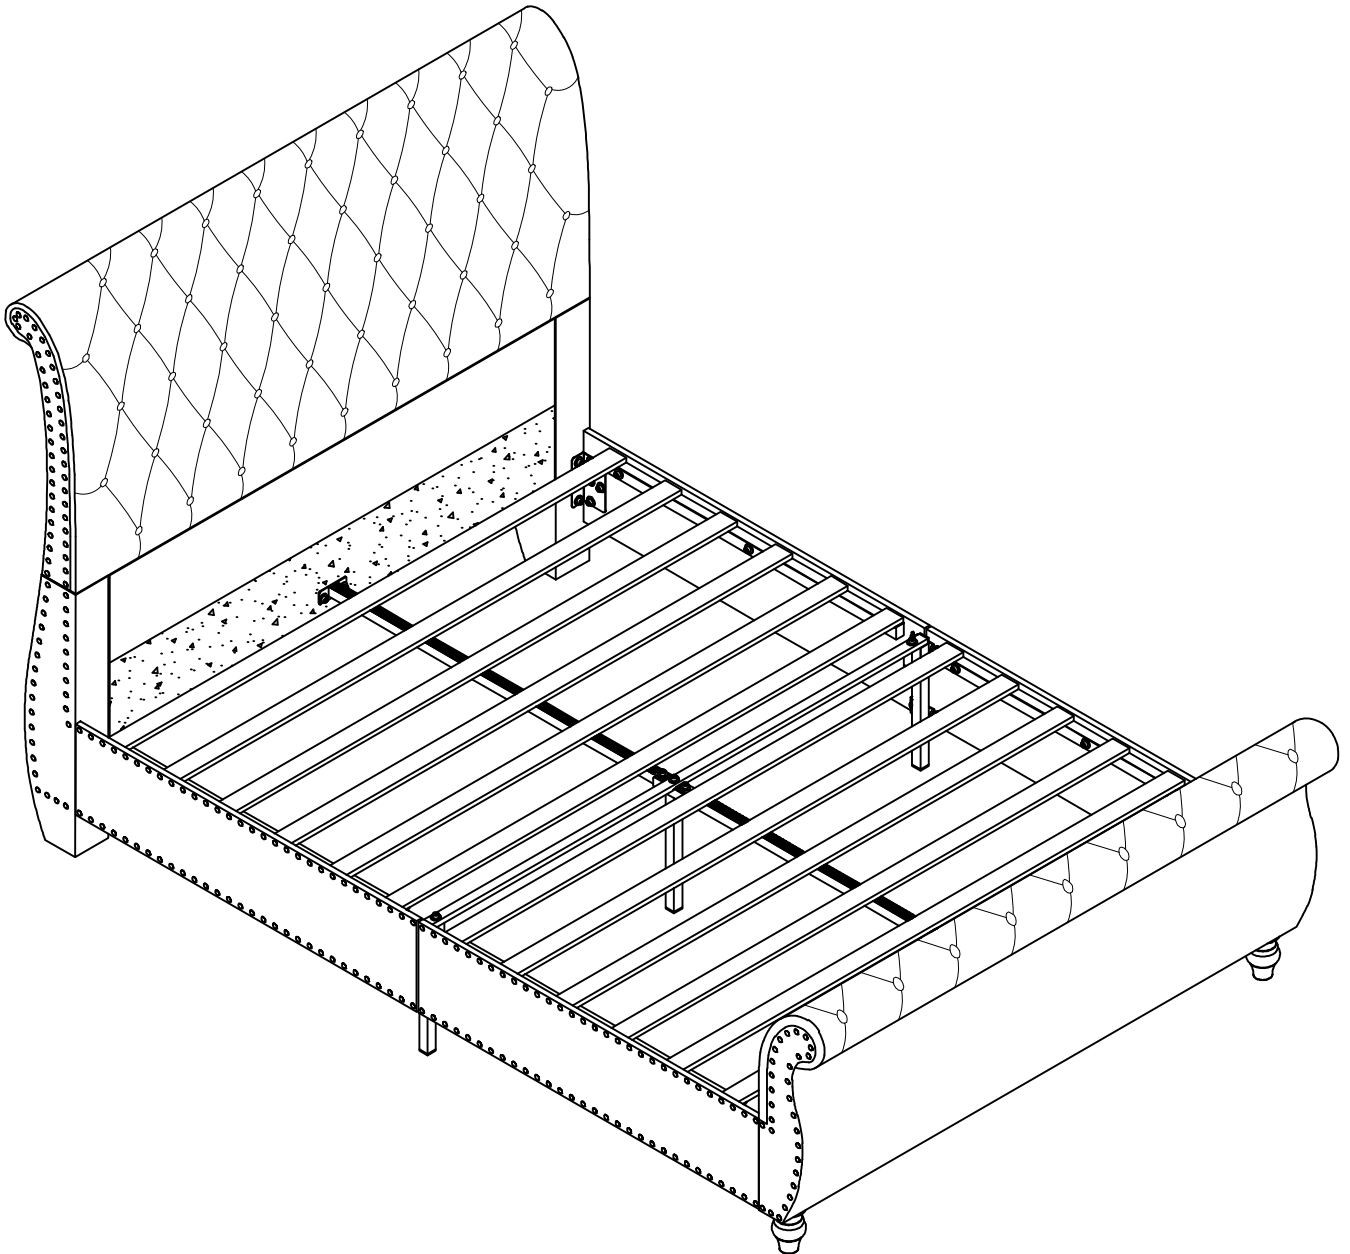

Friendly Customer Service

Satisfaction Guarantees: Any problems with assembly, quality, or return, please feel free to contact us directly.



Contact us

Phone: +1 (901) 347-2181 (US) Mon-Fri 9am - 5pm (PST)

E-Mail: cs@howedirect.com (Get efficient feedback within 12 hours)



Please follow the instruction manuals and use a pad to protect the product during your assembly.

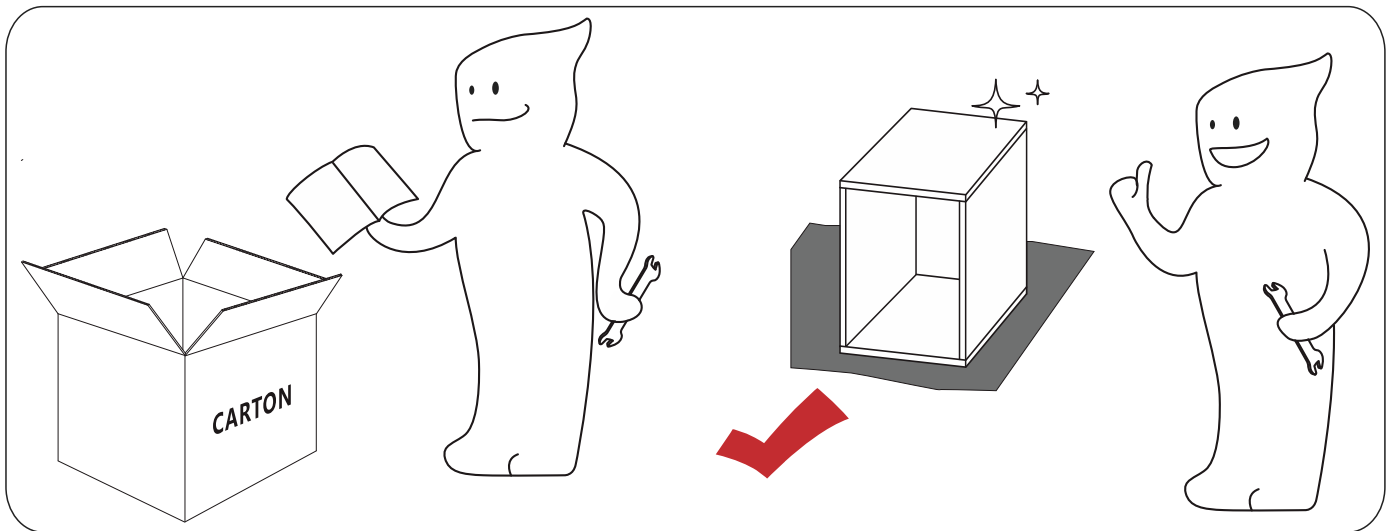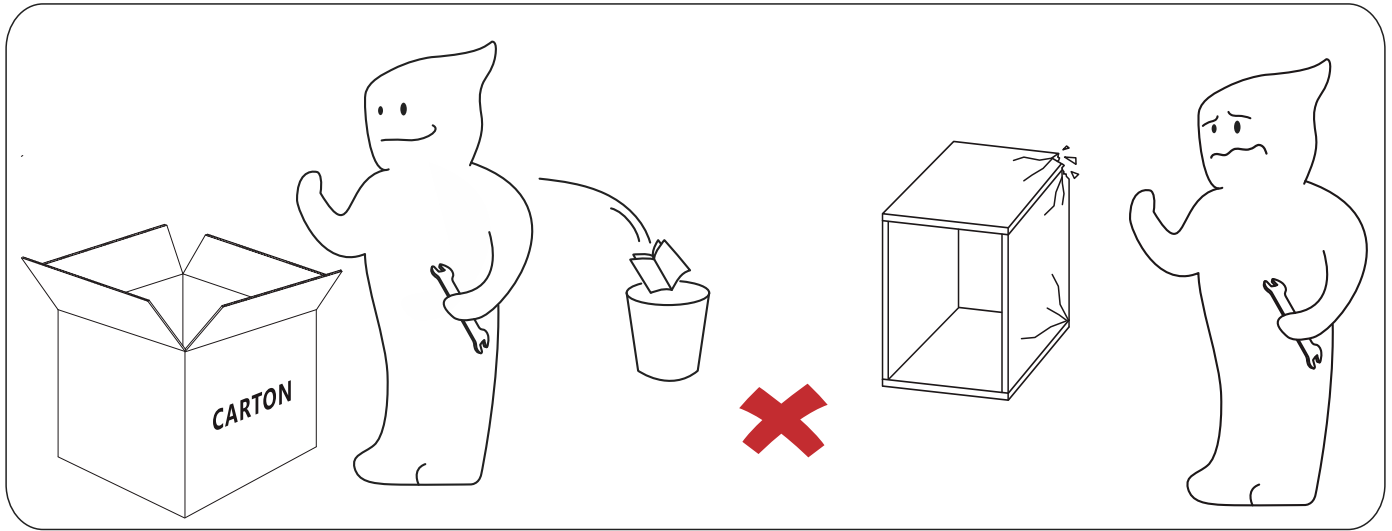


Note:

1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.














For easier and better assembly, **2** or more adults are required.









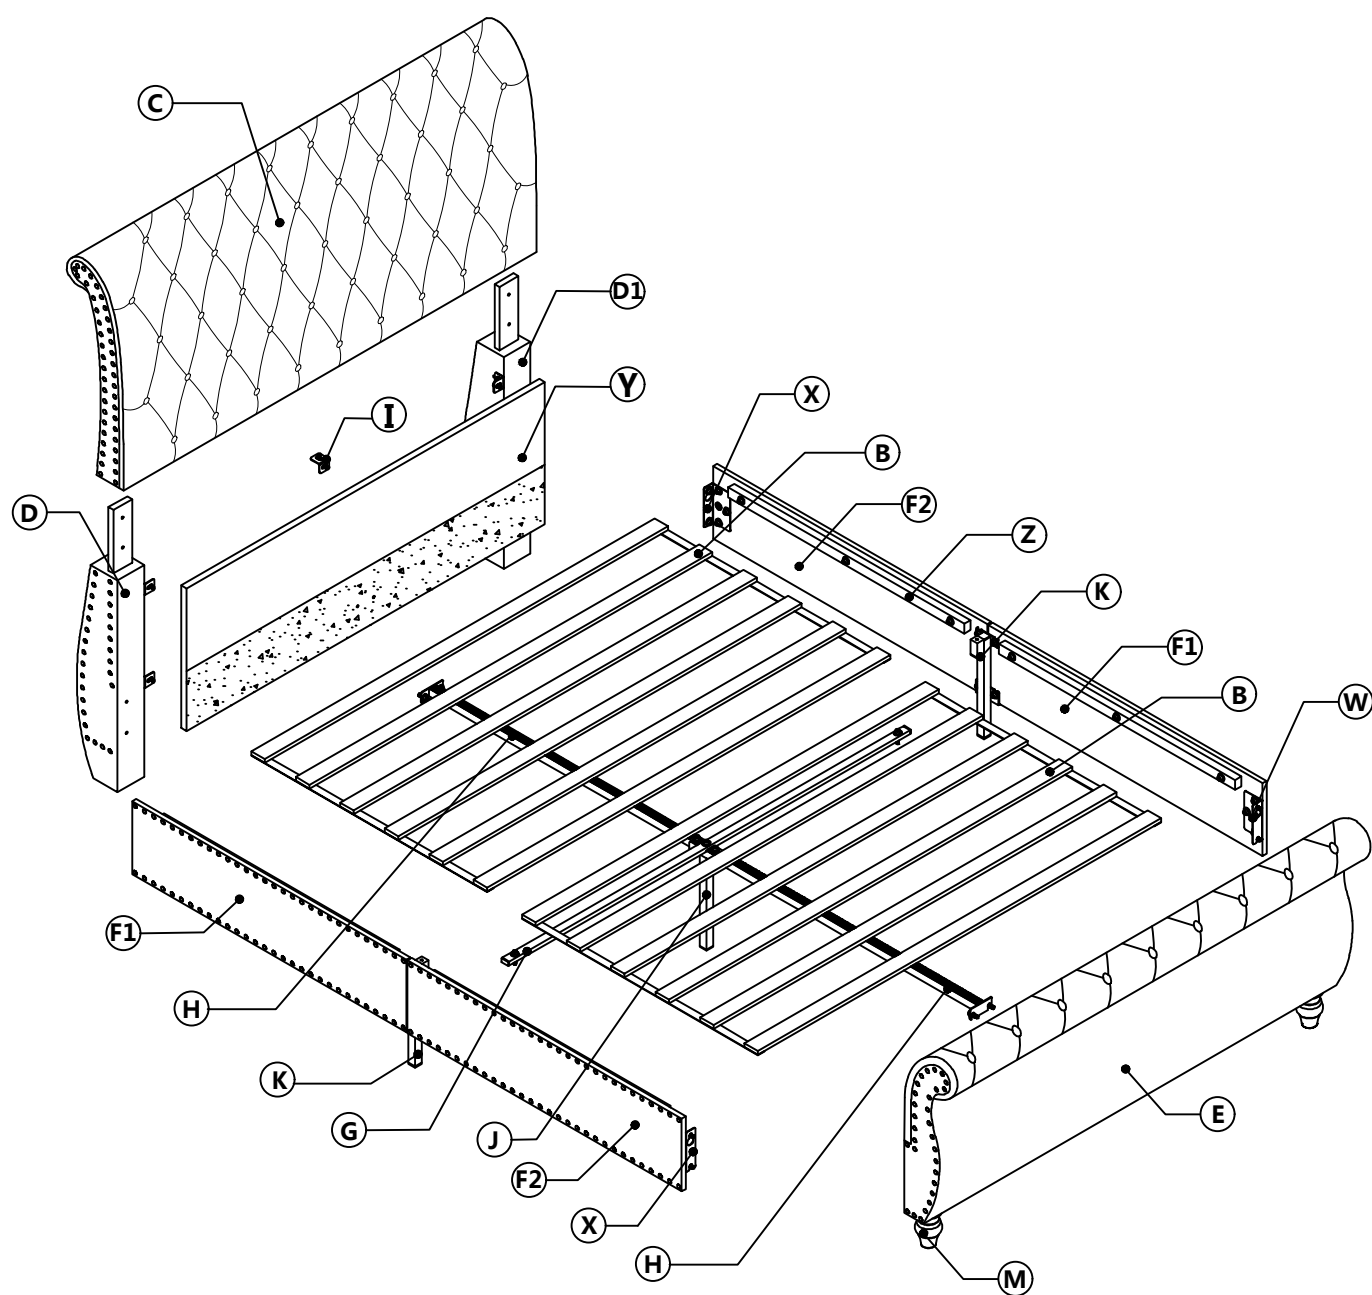
ASSEMBLY INSTRUCTIONS

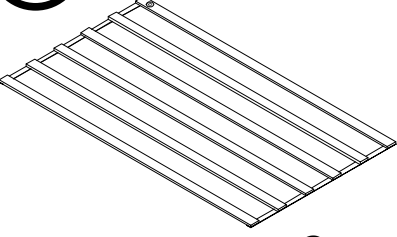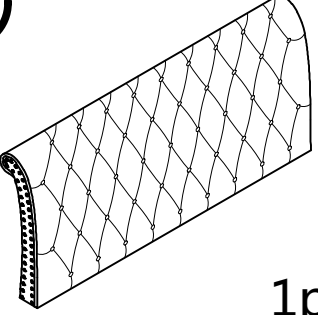

BED FRAME PARTS LIST

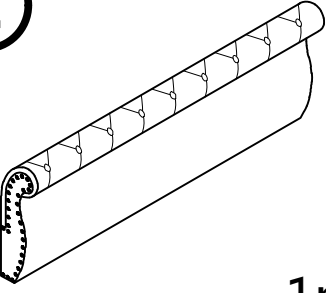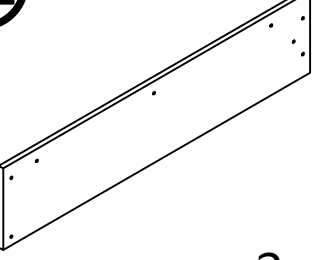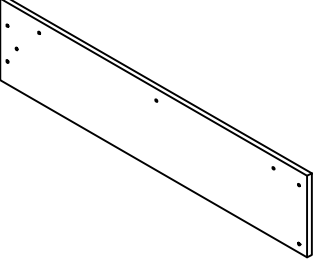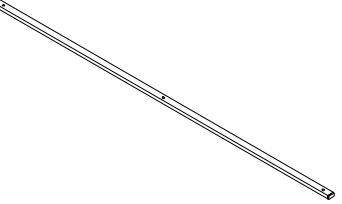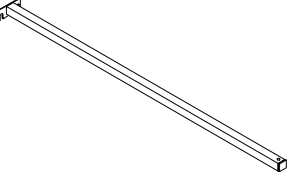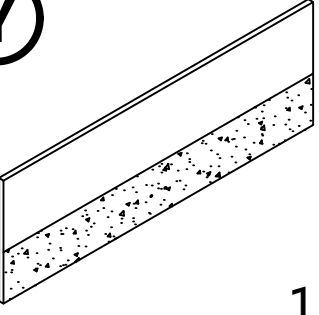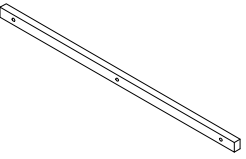
<p>(B)</p>  <p>2pcs</p>	<p>(C)</p>  <p>1pc</p>	<p>(D)</p>  <p>1pc</p>
<p>(D1)</p>  <p>1pc</p>	<p>(E)</p>  <p>1pc</p>	<p>(F1)</p>  <p>2pcs</p>
<p>(F2)</p>  <p>2pcs</p>	<p>(G)</p>  <p>1pc</p>	<p>(H)</p>  <p>2pcs</p>
<p>(Y)</p>  <p>1pc</p>	<p>(Z)</p>  <p>4pcs</p>	

FITTING PARTS LIST

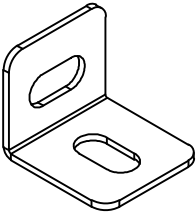
<p>I</p>  <p>5pcs</p>	<p>J</p>  <p>1pc</p>	<p>K</p>  <p>2pcs</p>
<p>M</p>  <p>2pcs</p>	<p>N</p>  <p>M8 X40mm 21+2pcs</p>	<p>P</p>  <p>M8 Spanner 1pc</p>
<p>Q</p>  <p>M8 X45mm 2pcs</p>	<p>W</p>  <p>2pcs</p>	<p>X</p>  <p>2pcs</p>



STEP 1

Insert D and D1 parts through the holes as directed

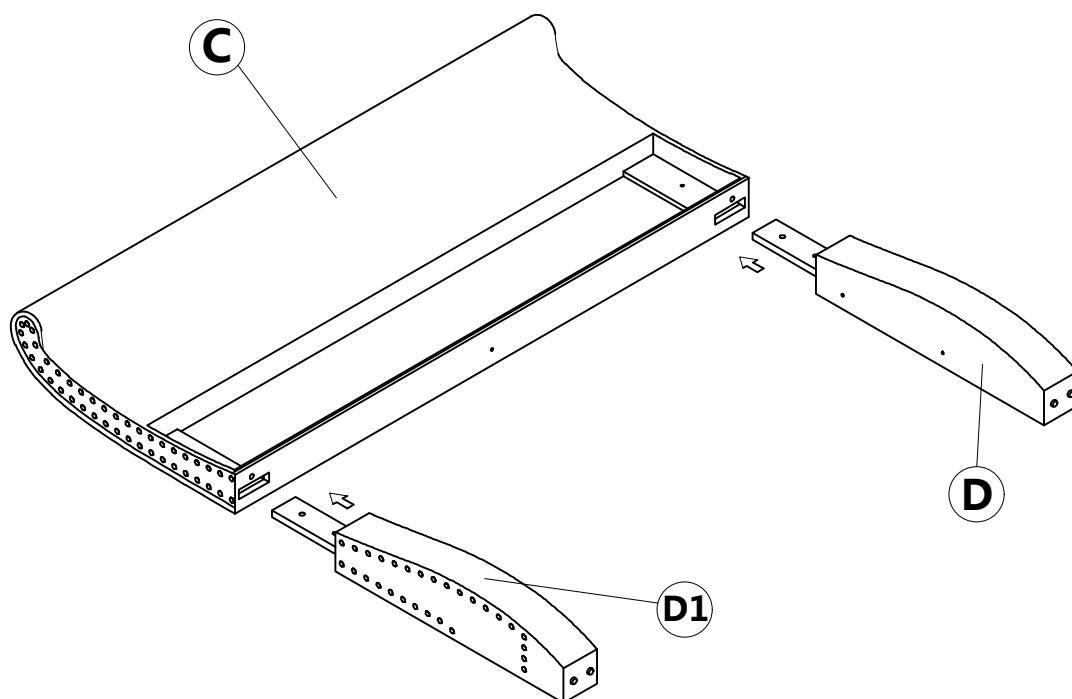


STEP 2

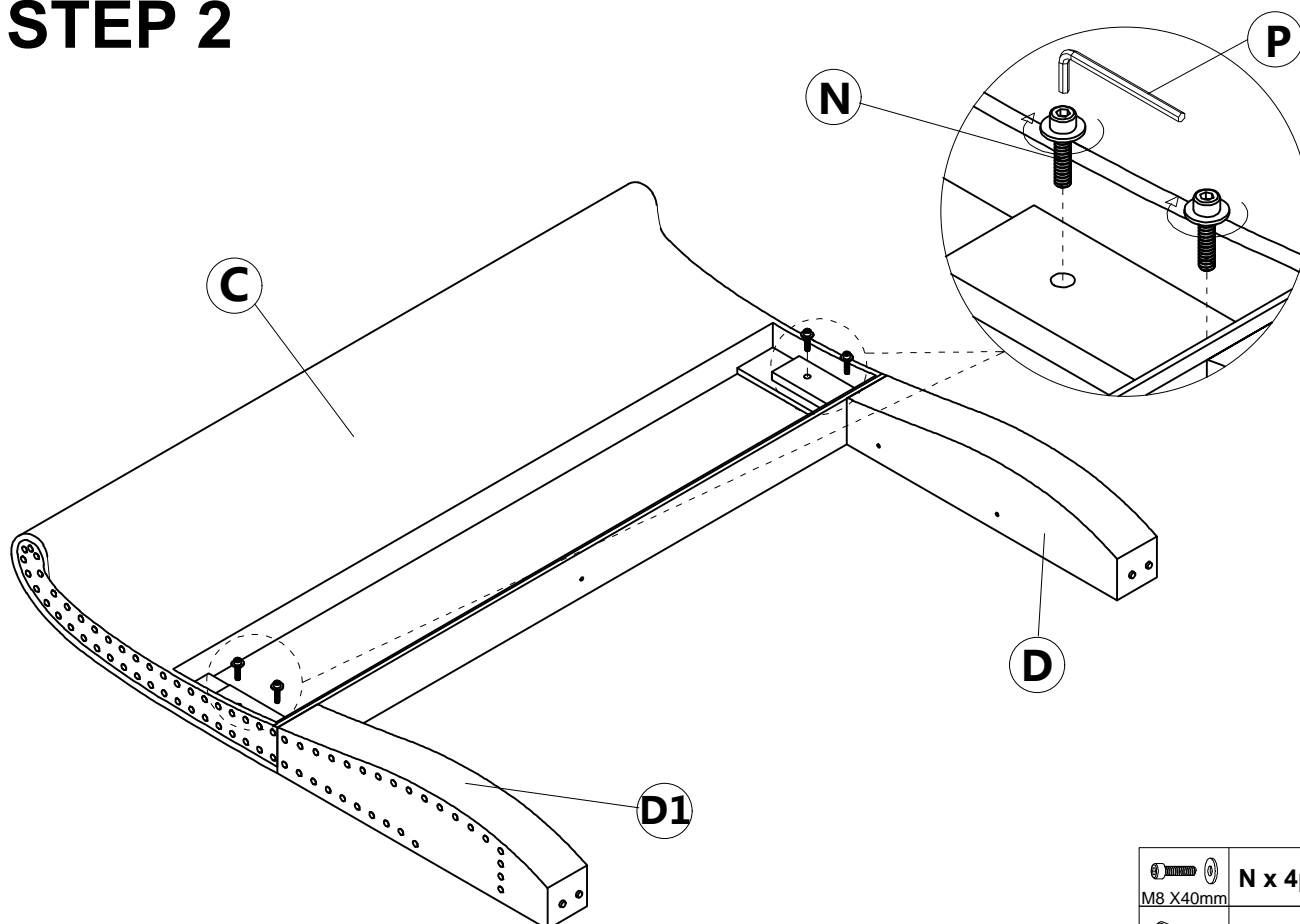


	N x 4pcs
M8 X40mm	
	P x 1pc


STEP 3

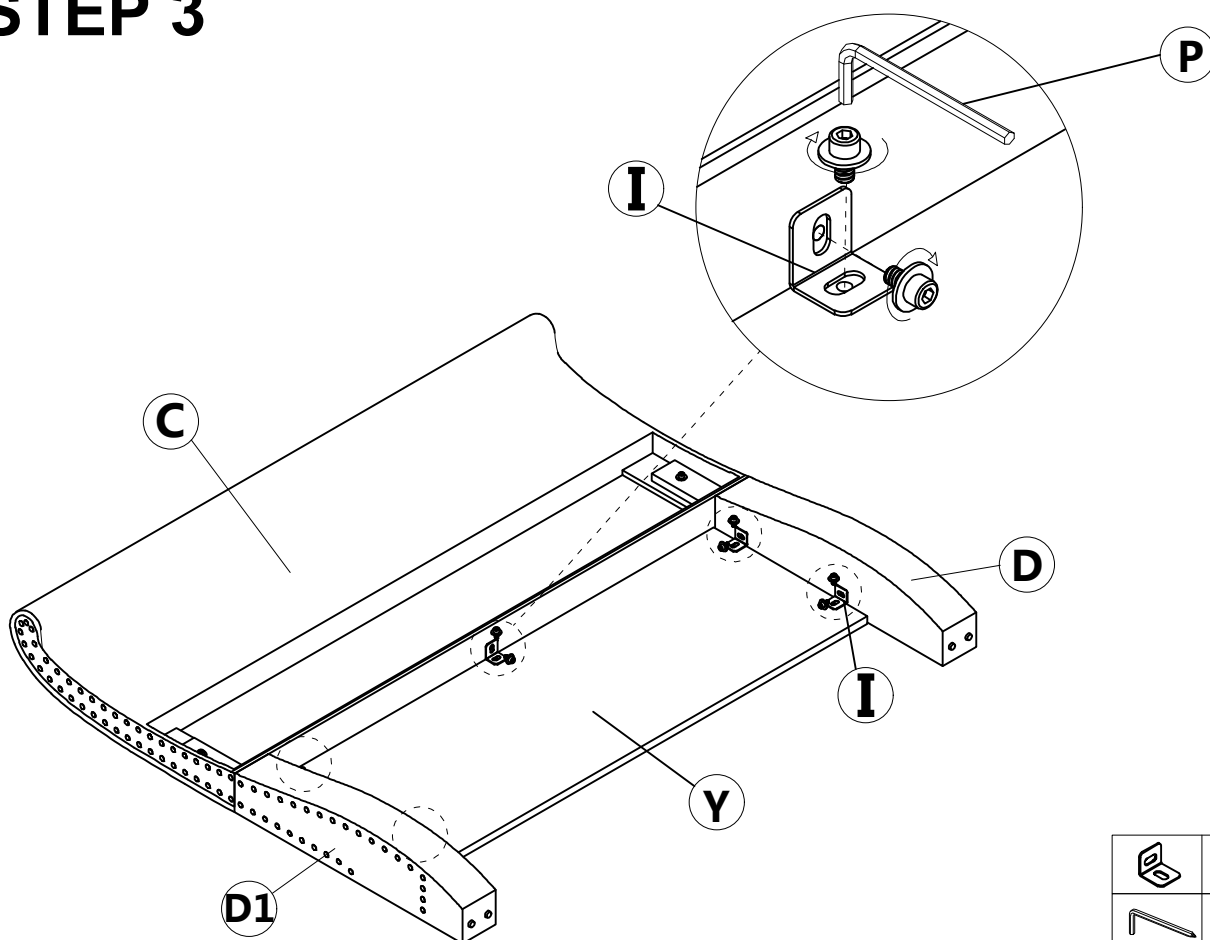

STEP 4

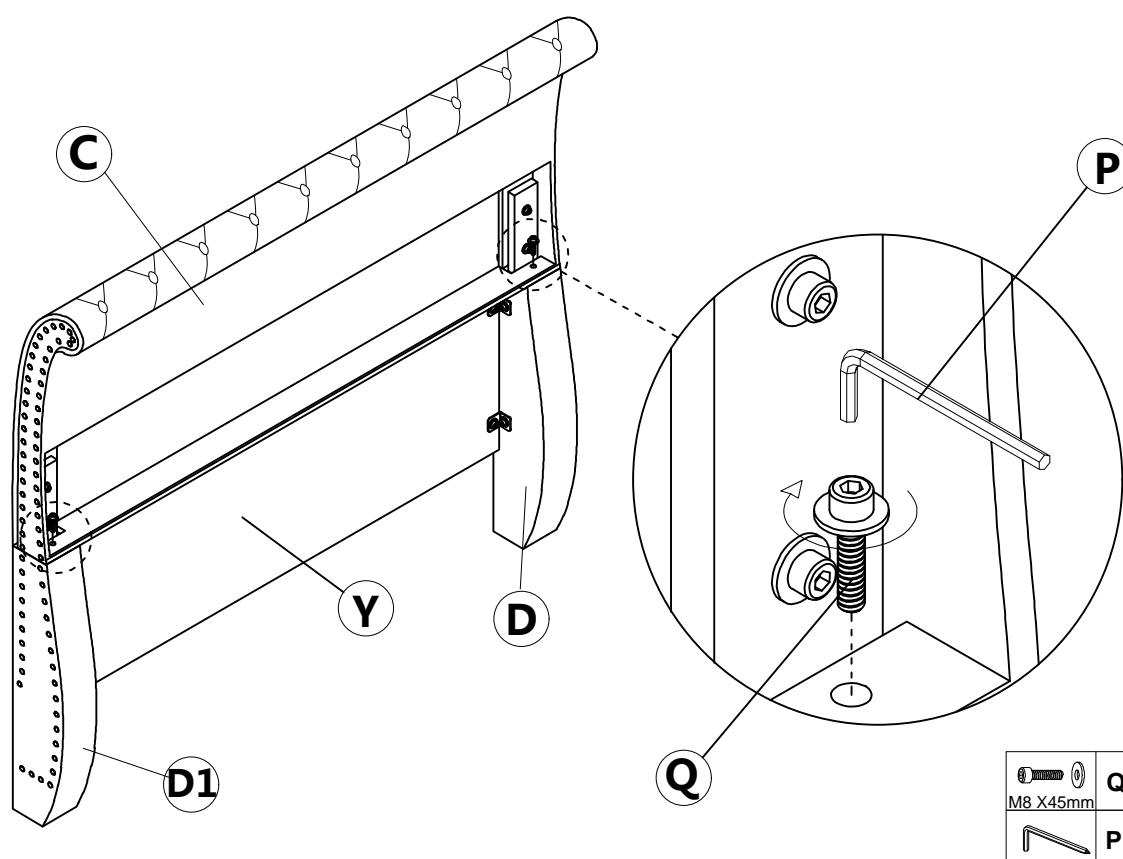


STEP 5

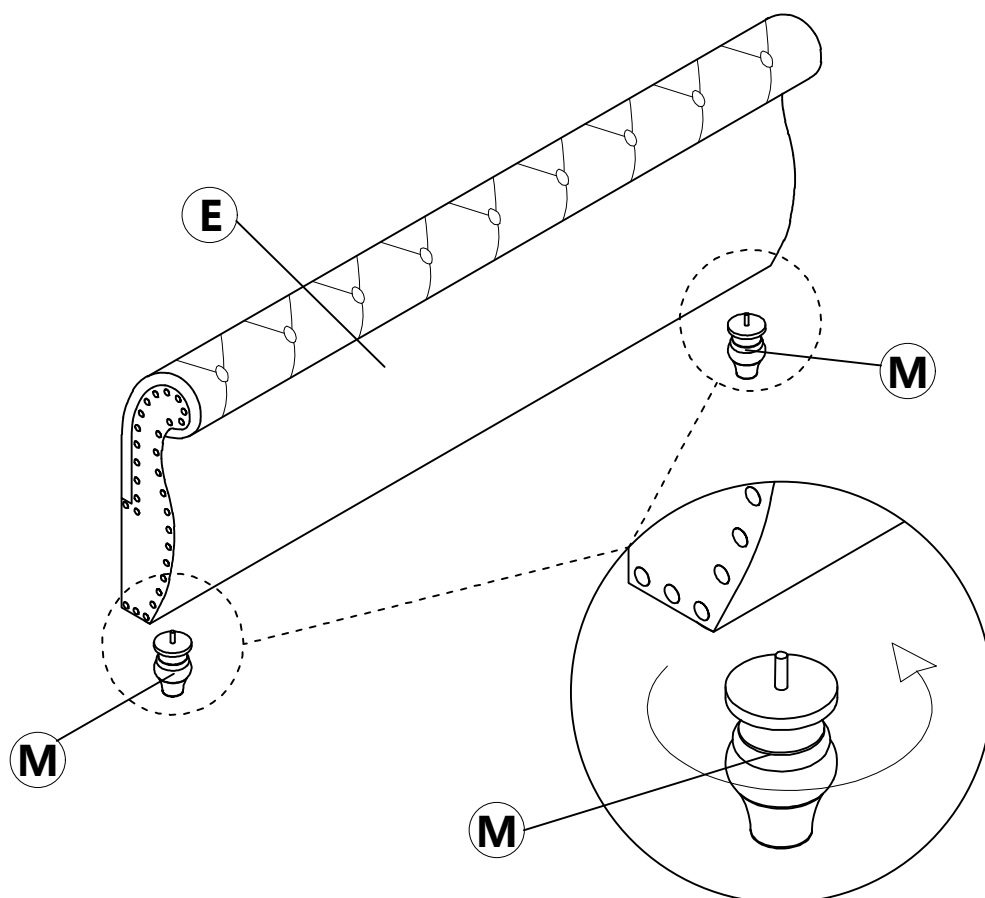

STEP 6

Connect F1 and F2 together with K, and lock the iron frame, there are 2 holes on the inside of the board.
Lock W and X on both sides of the board, with 3 holes on each side.


Note: The installation direction is as shown in the picture.

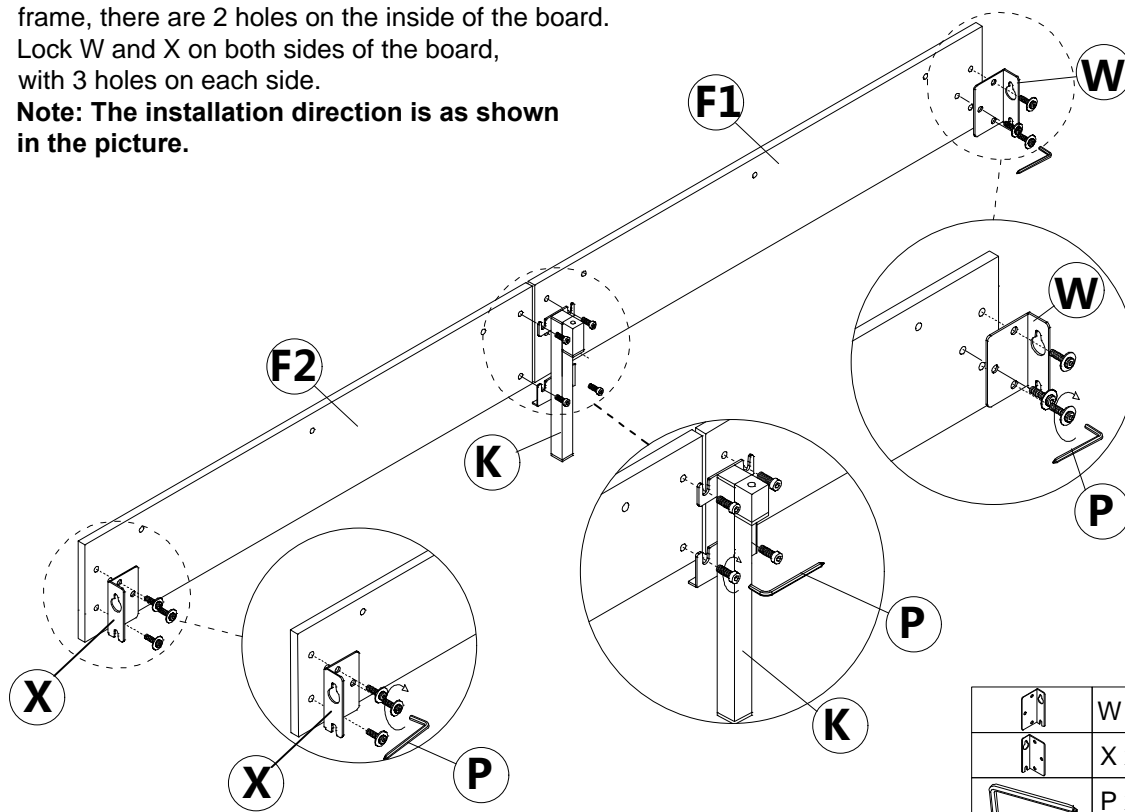

STEP 7


Connect F1 and F2 together with K, and lock the iron frame, there are 2 holes on the inside of the board. Lock W and X on both sides of the board, with 3 holes on each side.

Note: The installation direction is as shown in the picture.

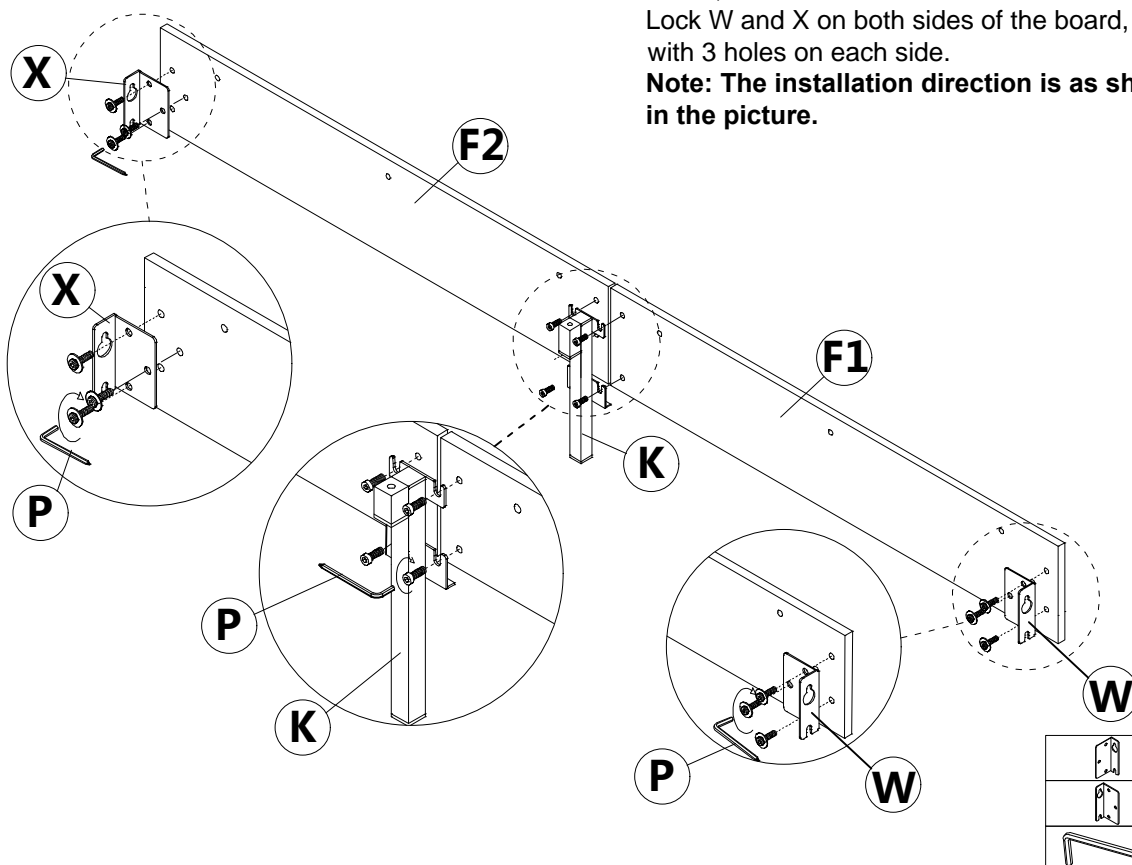




STEP 8

Loosen the screw of headboard side leg and both sides of footboard, then hang the bracket on and tighten innerscrew.

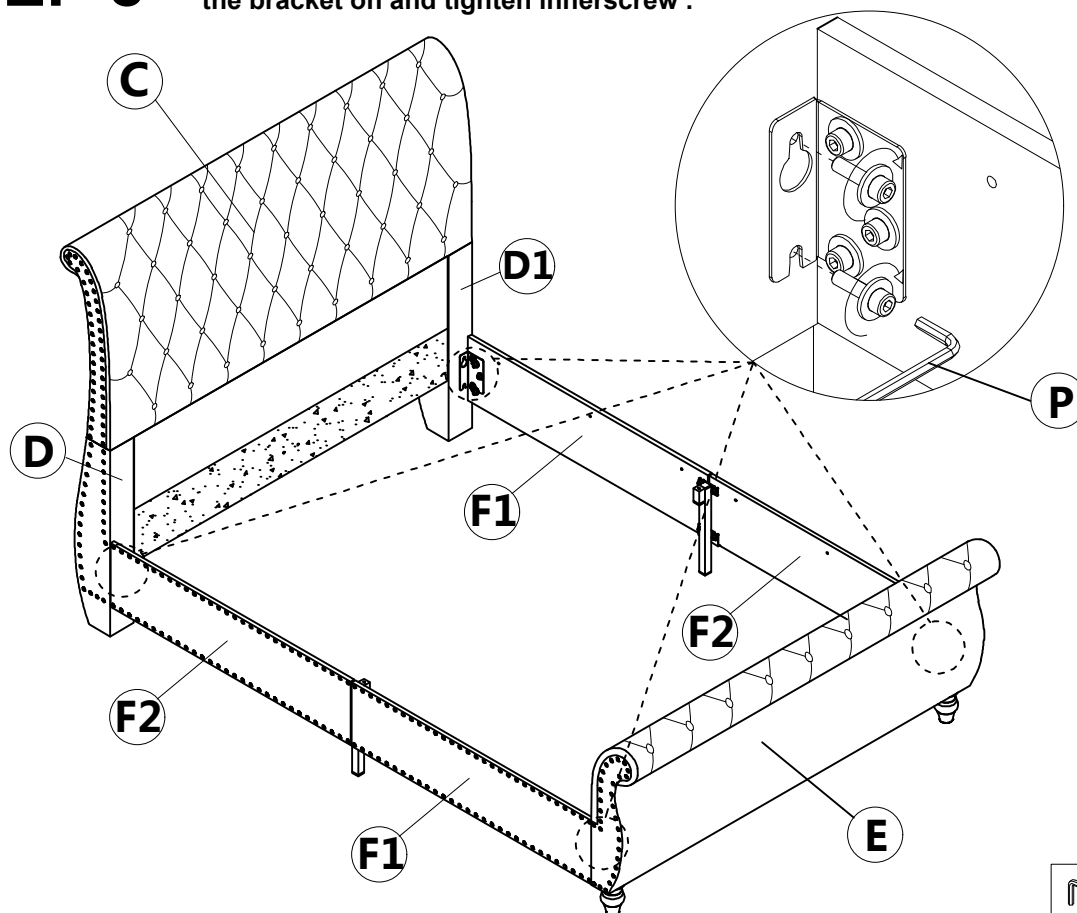


STEP 9

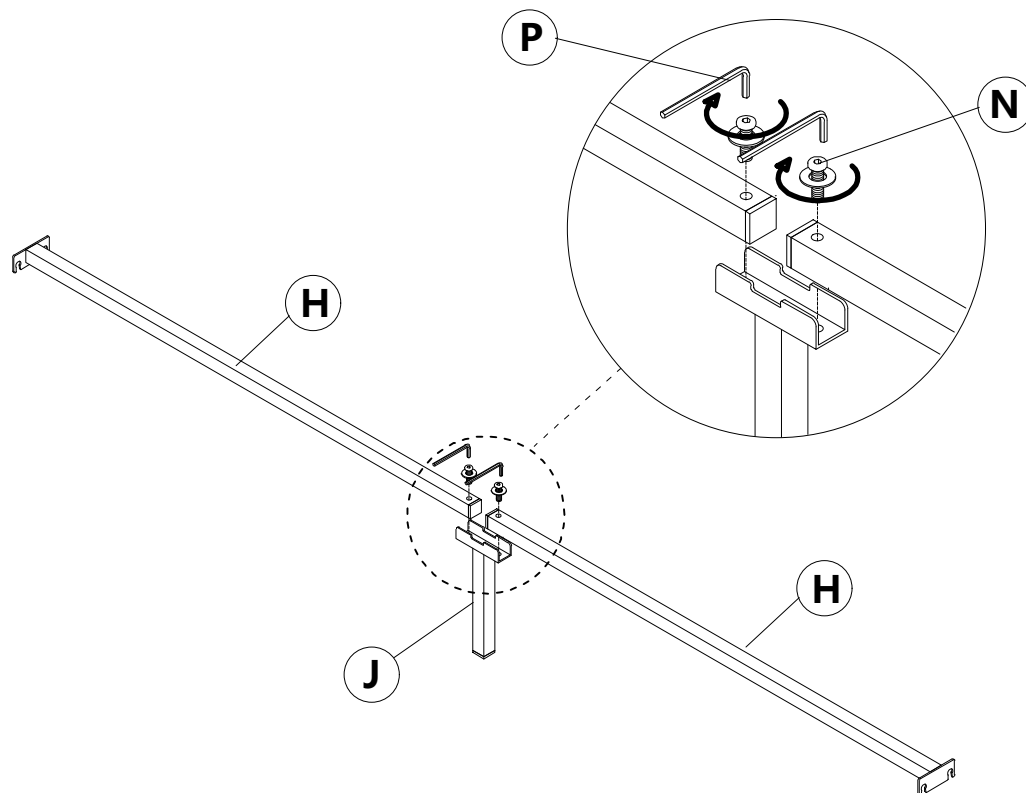

	N x 2pcs
M8 X40mm	
	P x 1pc

STEP 10


Loosen the screw in the middle of the footboard, then hang the bracket on and tighten the innerscrew.

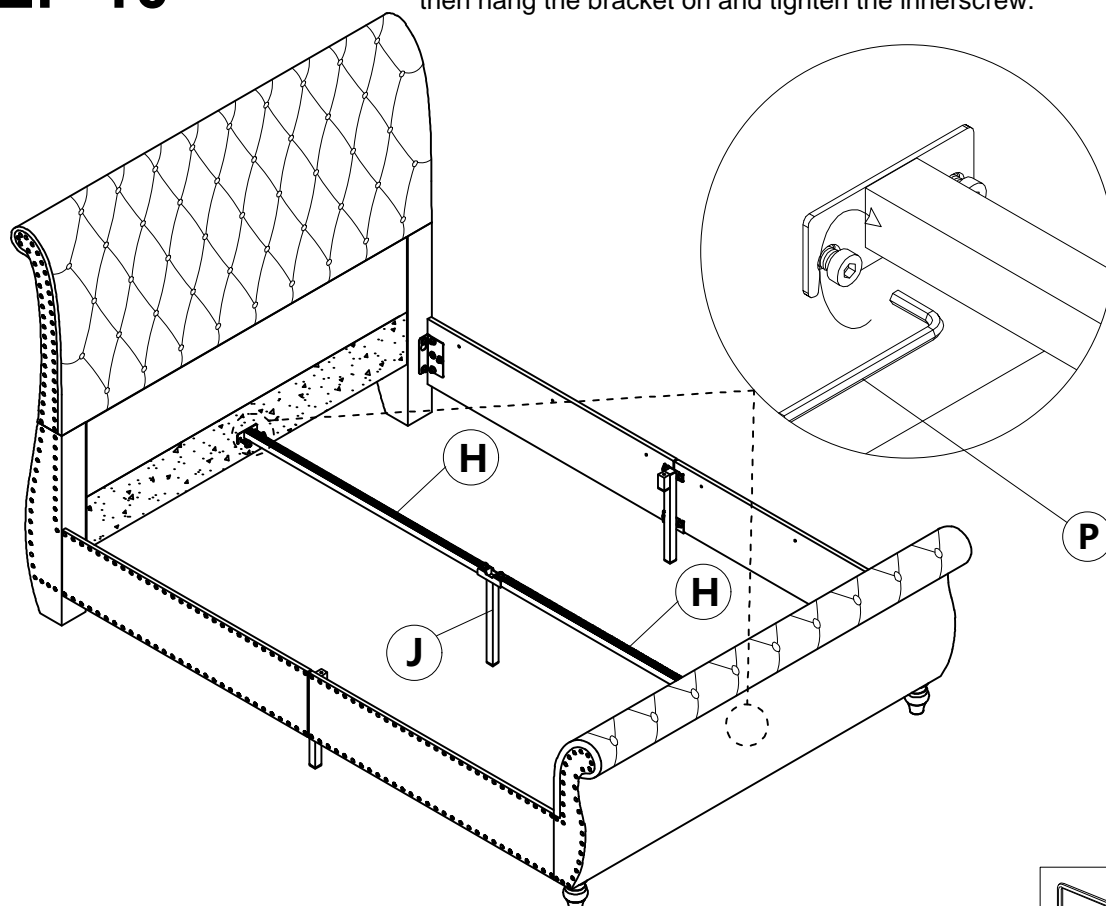


	P x 1pc
---	---------

ASSEMBLY INSTRUCTIONS


STEP 11

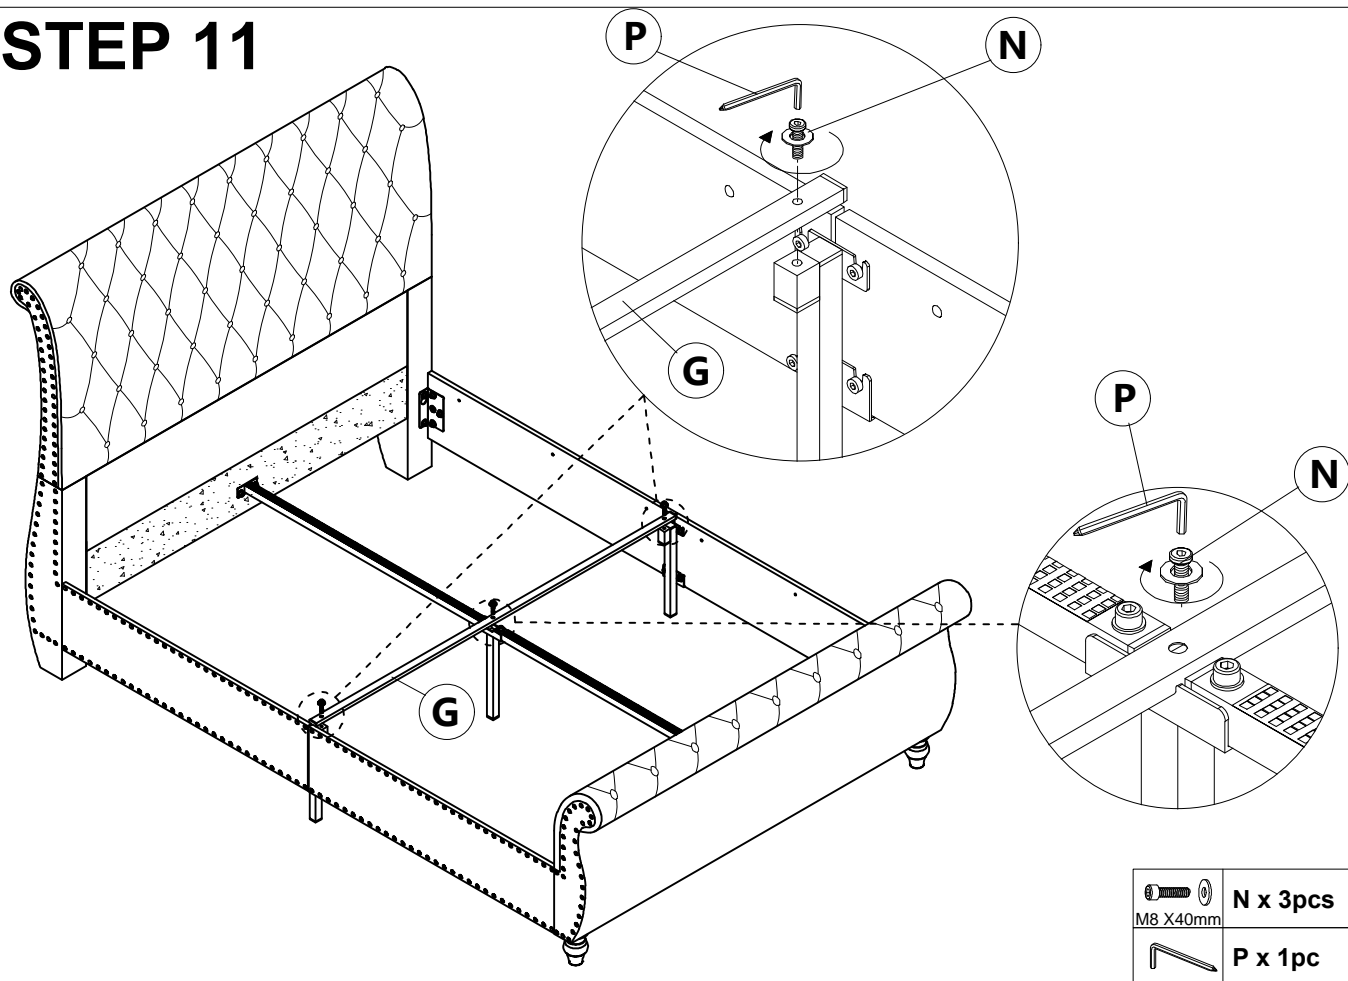


STEP 12

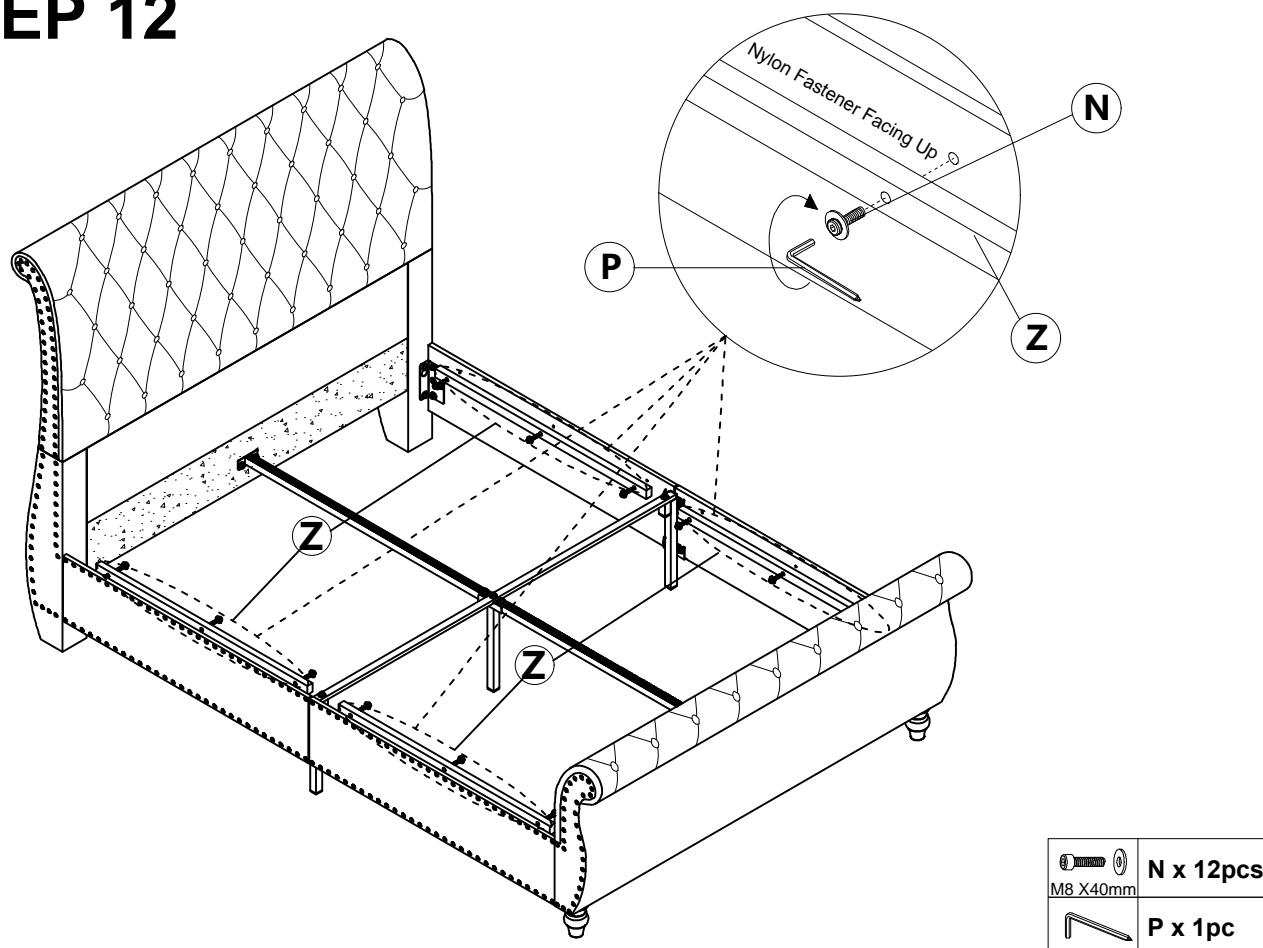


STEP 13

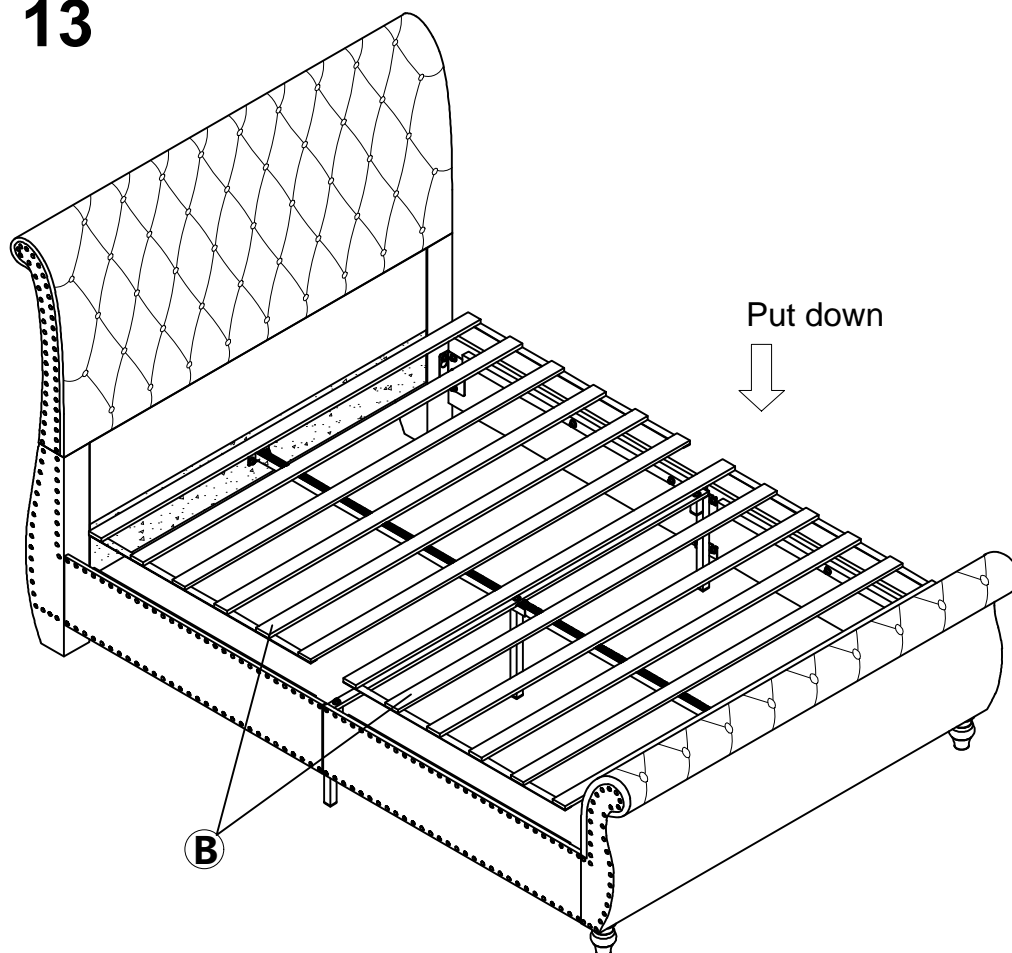

STEP 14

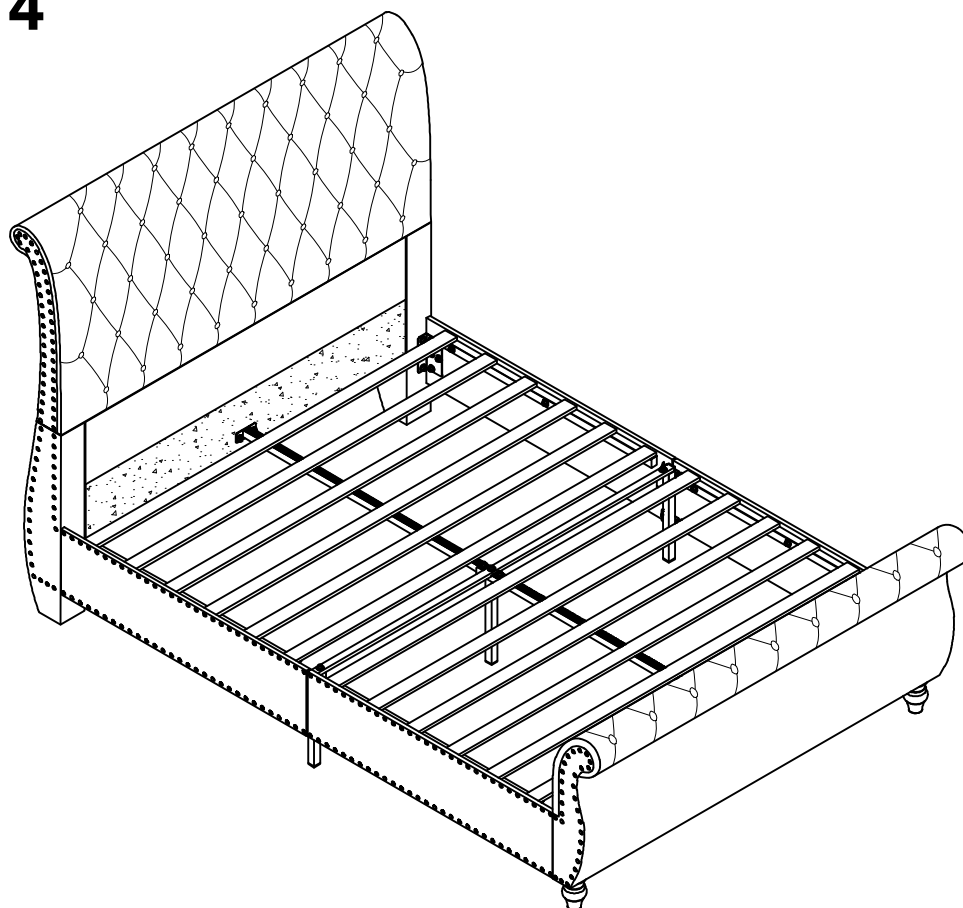

ASSEMBLY INSTRUCTIONS

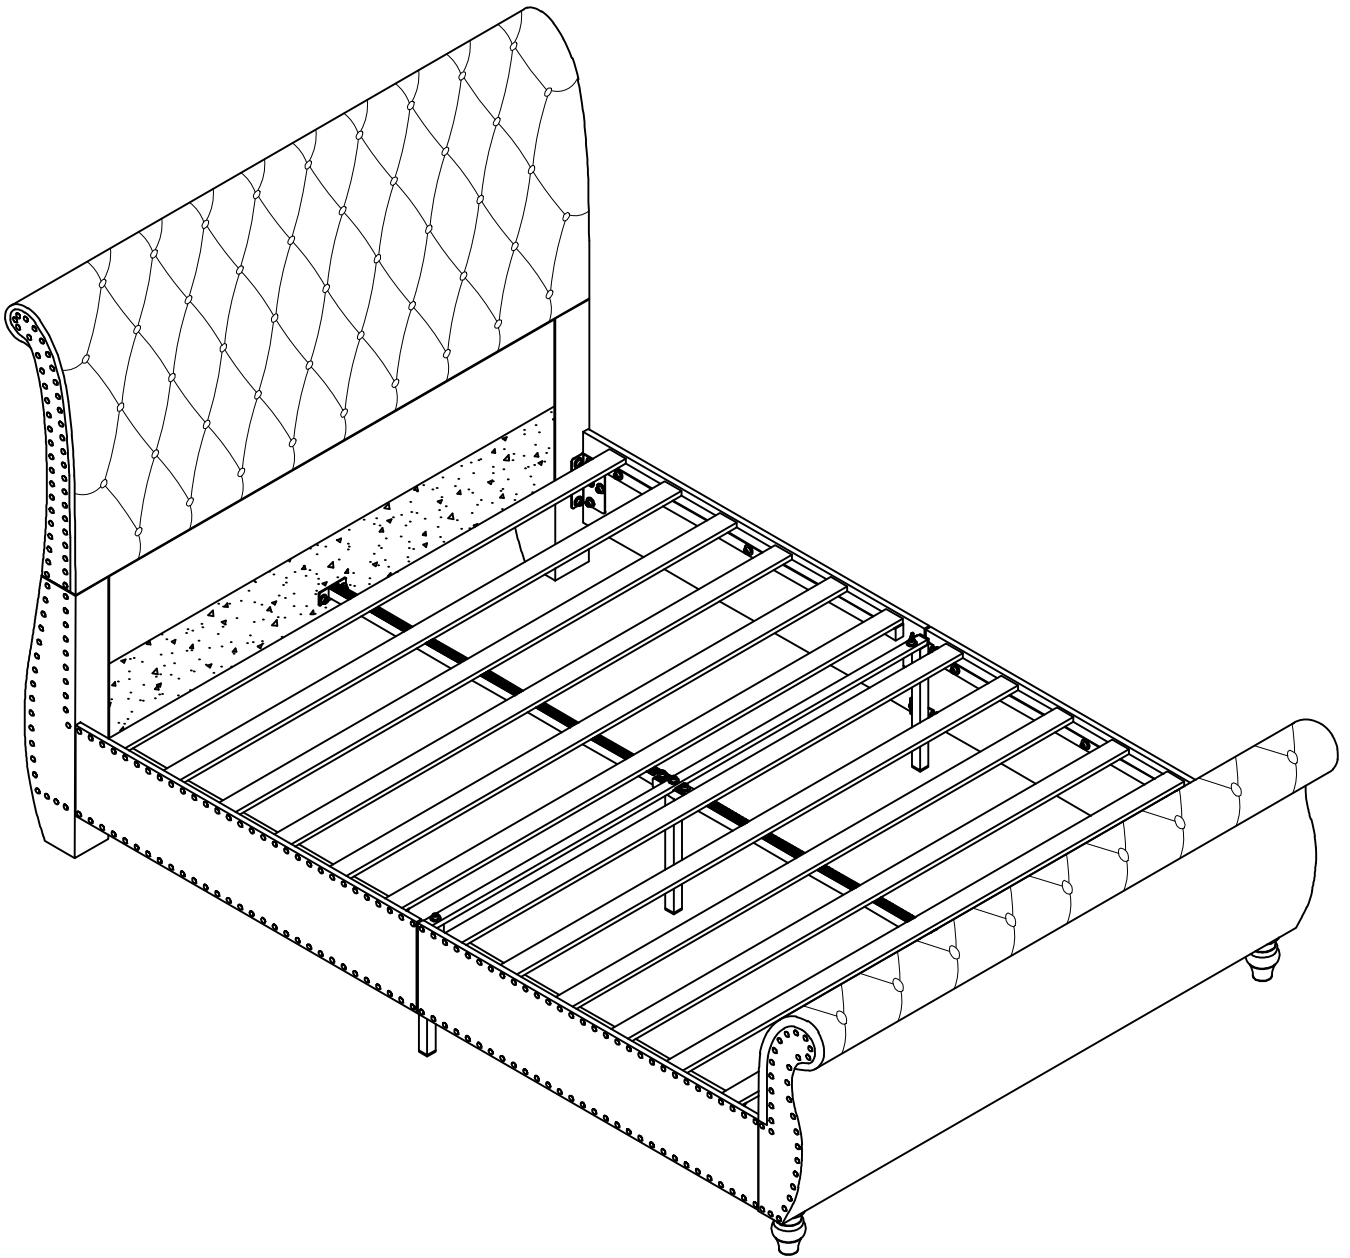

Installation Complete