


# Coffee Table

Assembly Instructions - Please keep for future reference

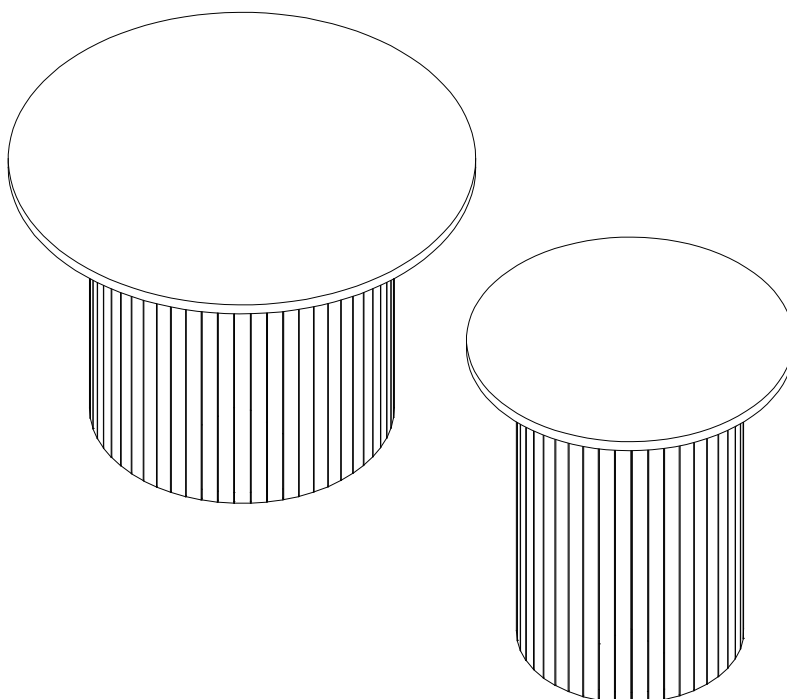

## Dimensions

Width - 23.6inch  
Depth - 23.6inch  
Height - 16.1inch

## Dimensions

Width - 16.5inch  
Depth - 16.5inch  
Height - 18.9inch

Any question please feel free to contact us:  
[support@amer-life.com](mailto:support@amer-life.com) TEL:(901) 347-2181.  
We will provide further assistance within 24 hours.

**Important – Please read these instructions fully before starting assembly**

Issue 1 - 24/10/2024



# Safety and Care Advice

**Important** – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.






## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

# Components - Fittings

Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>A</b>  8*30mm Wooden Dowel x 16	<b>B</b>  5*40mm Screw x 16	<b>C</b>  6*25mm Bolt x 8
<b>D</b>  Allen Key x 1	<b>E</b>  Felt Pad x 8	

## Tools required



Phillips screwdriver  
(medium & large)


## Ruler - Use this ruler to help correctly identify the screws




The screws length is measured from the head to the point (30mm screw shown).

# Components - Panels


Please check you have all the panels listed below

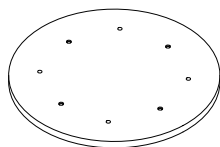


**1** (Ø38.5 x 1.5cm) x1

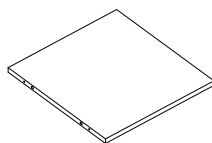


**2** (38.3 x 36.5 x 1.5cm) x1

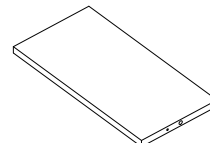


**3** (18.4 x 36.5 x 1.5cm) x2

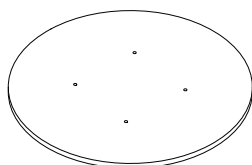


**4** (Ø60 x 1.5cm) x1

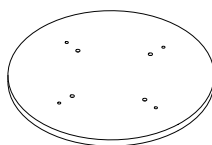


**5** (Ø38.5 x 1.5cm) x1

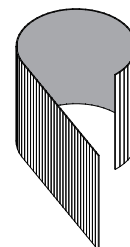


**6** (39.4 x 122.4 x 0.47cm) x1

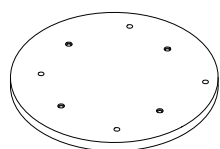


**7** (Ø28.5 x 1.5cm) x1

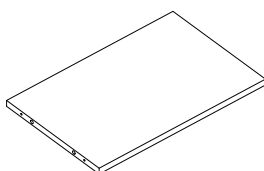


**8** (28.3 x 43.5 x 1.5cm) x1

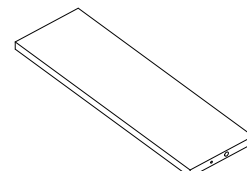


**9** (13.4 x 43.5 x 1.5cm) x2

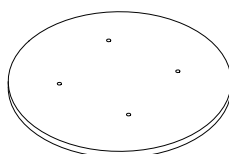

**10** (Ø42 x 1.5cm) x1










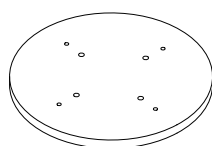


**11** (Ø28.5 x 1.5cm) x1

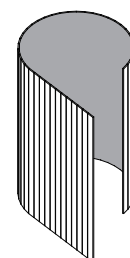


**12** (46.4 x 90.8 x 0.47cm) x1

# Assembly Instructions

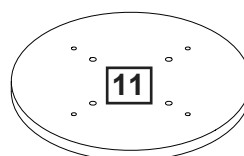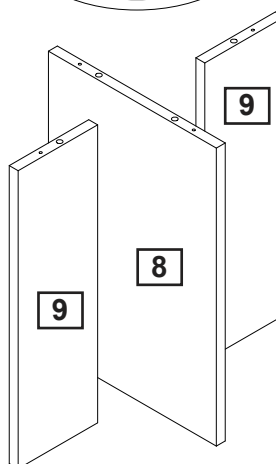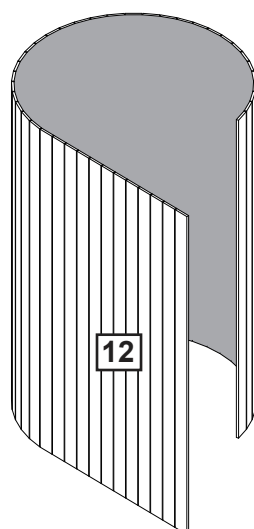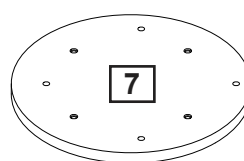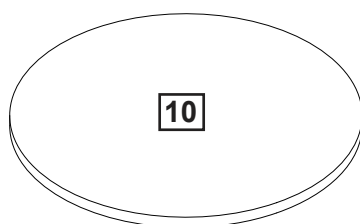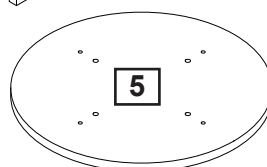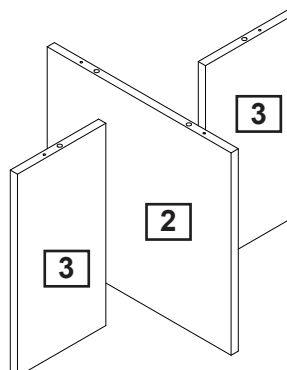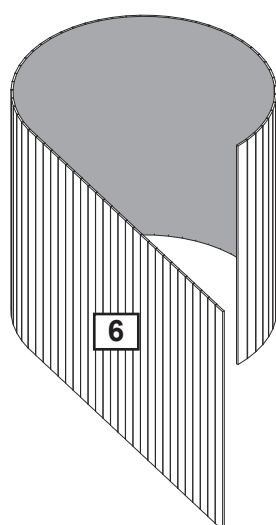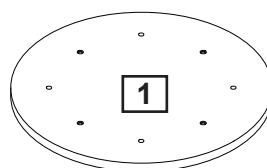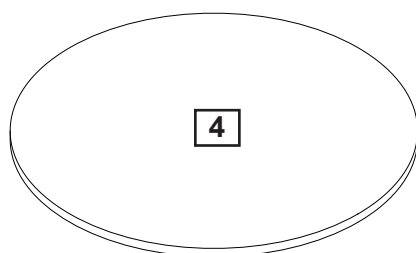


# Assembly Instructions

## Step 1

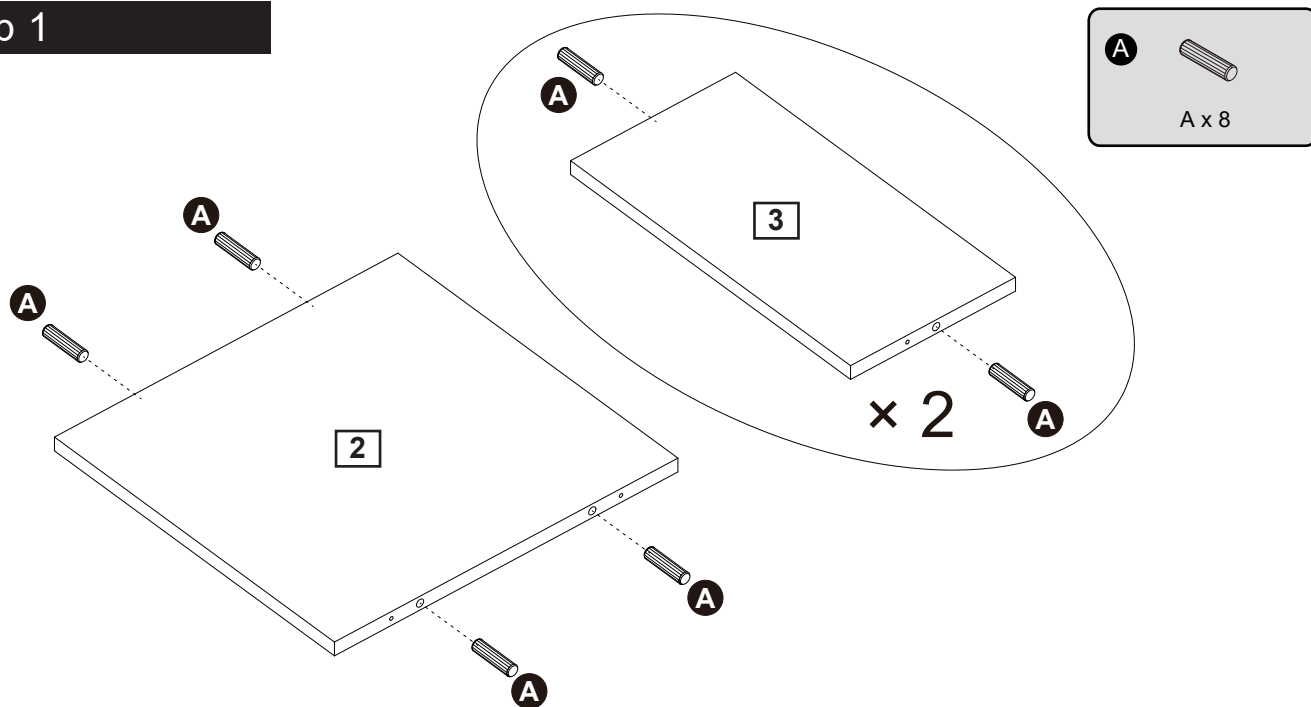

Insert wooden dowel (A) into part (2, 3).




## Step 2

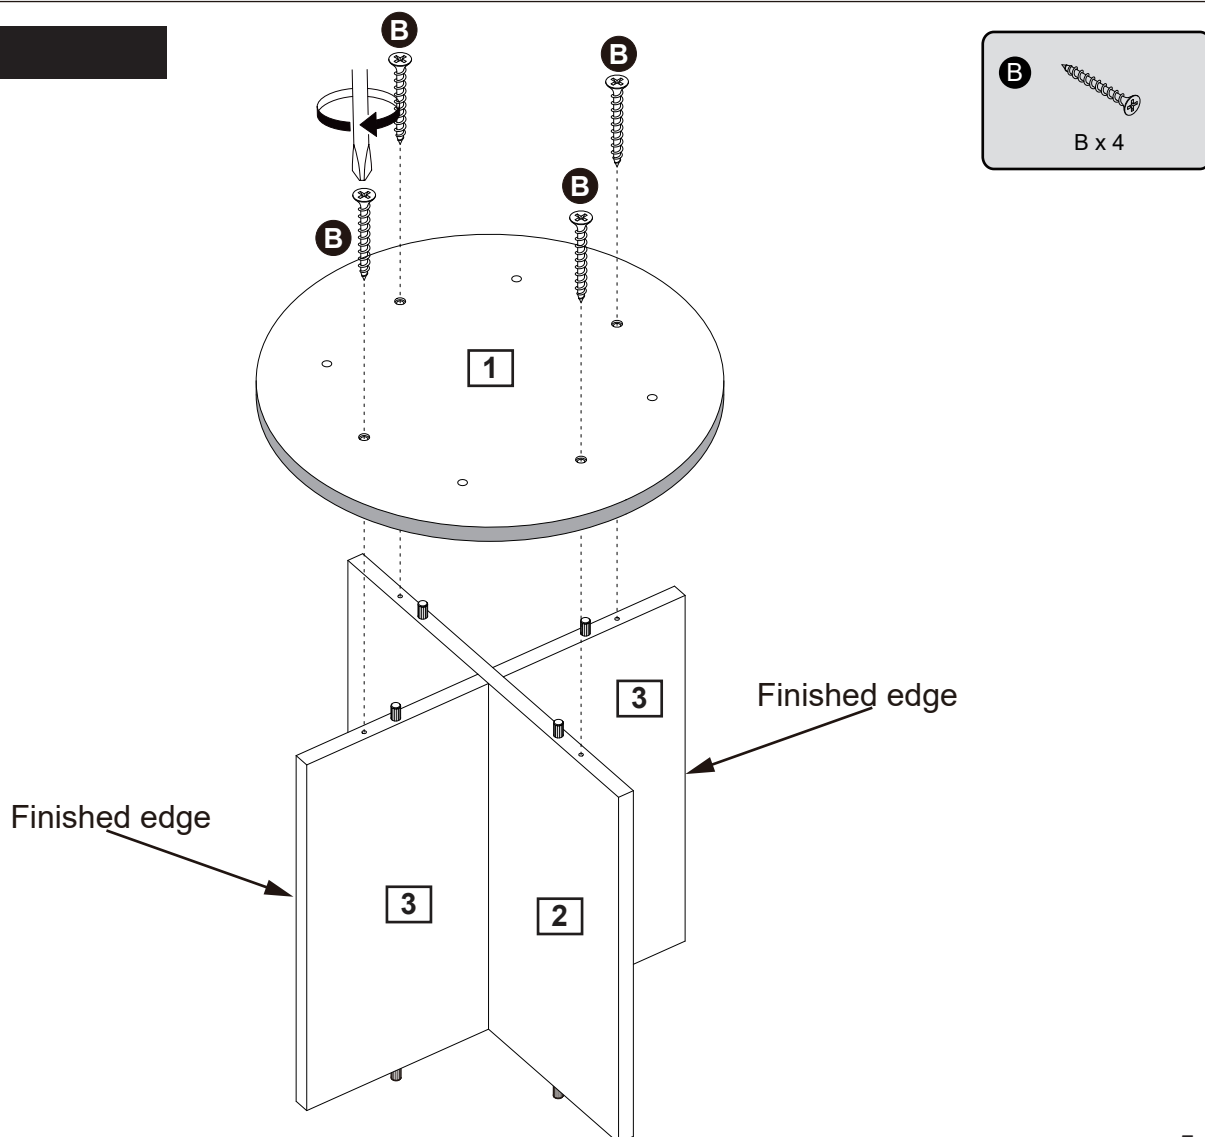

Attach part (1) to part (2, 3) using screw (B) with a screwdriver.



# Assembly Instructions

## Step 3

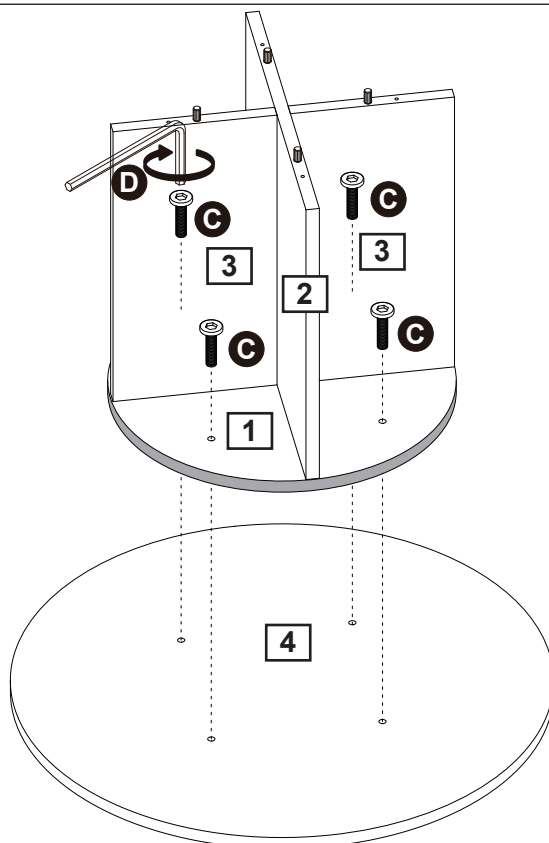

Attach part (1) to part (4) using bolt (C) with allen key (D).


## Step 4

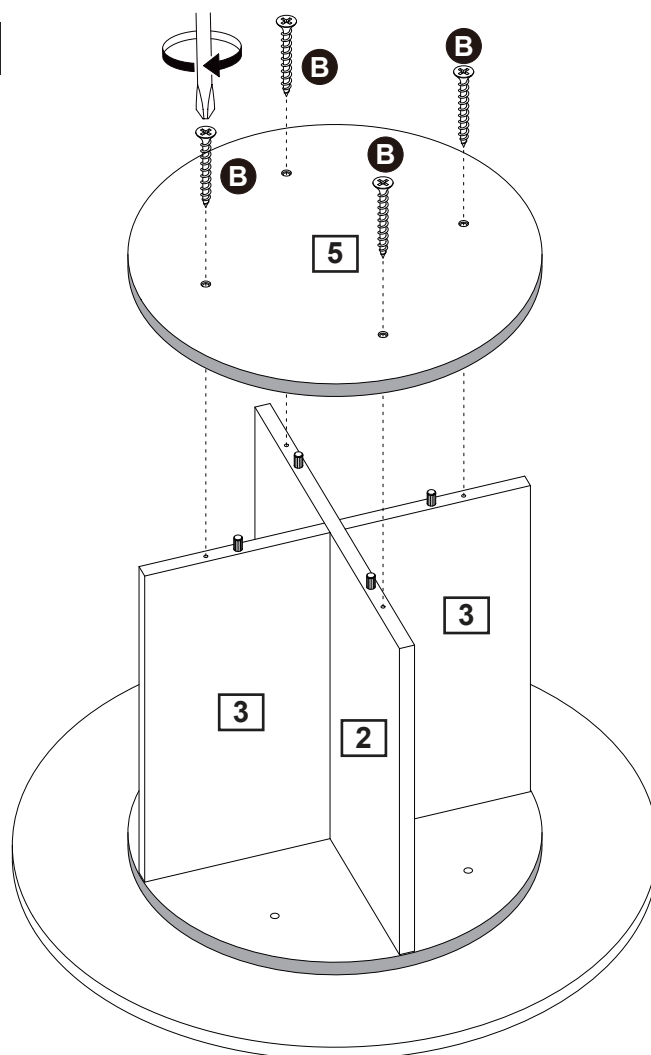

Attach part (5) to part (2, 3) using screw (B) with a screwdriver.


# Assembly Instructions

## Step 5

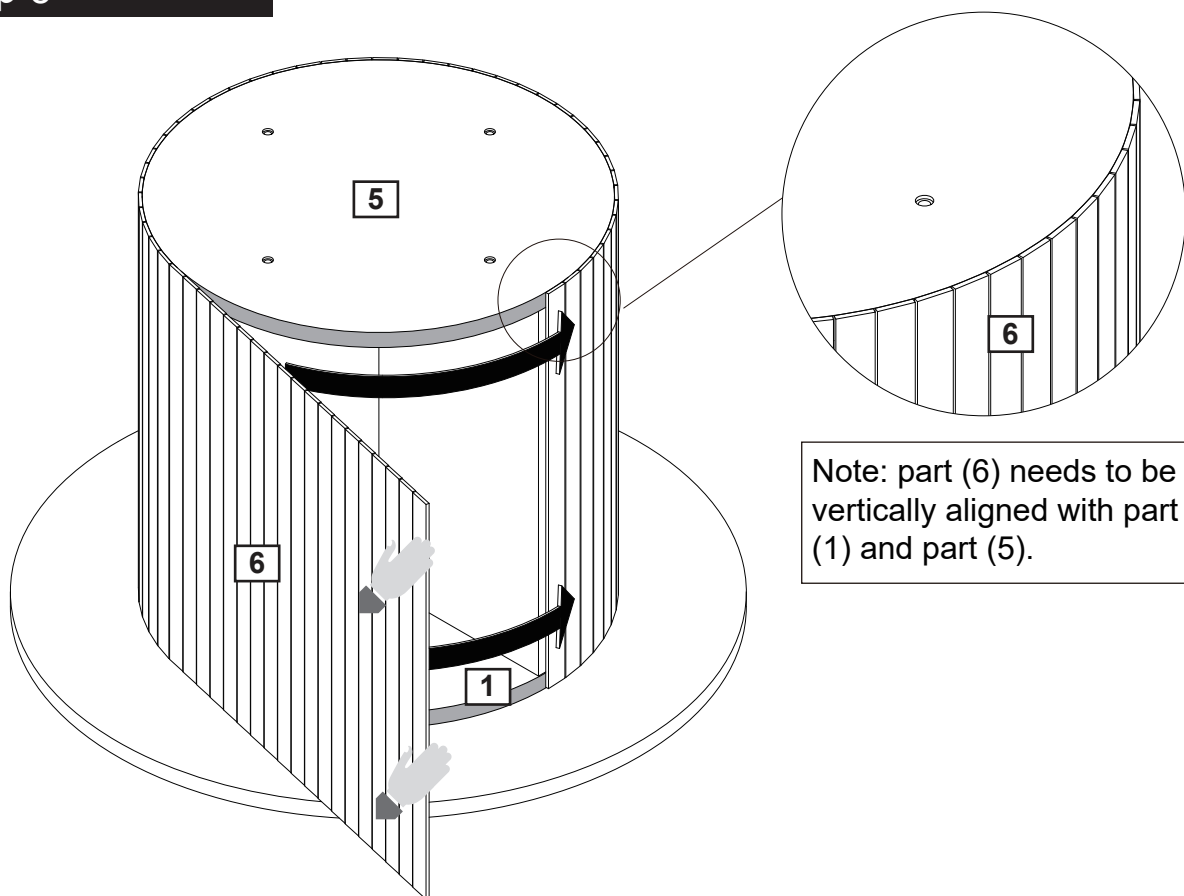

Wrap and stick part (6) on part (1) and part(5) by hand.

## Step 6

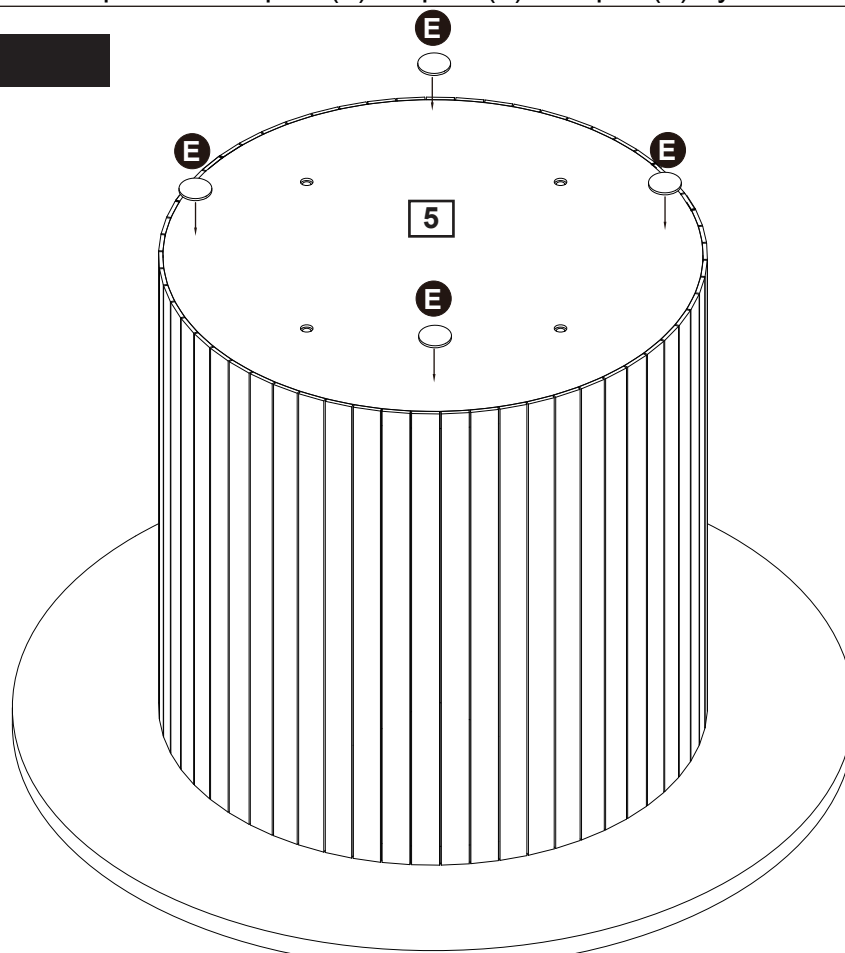


Attach felt pads (E) to part (5).




# Assembly Instructions

## Step 7

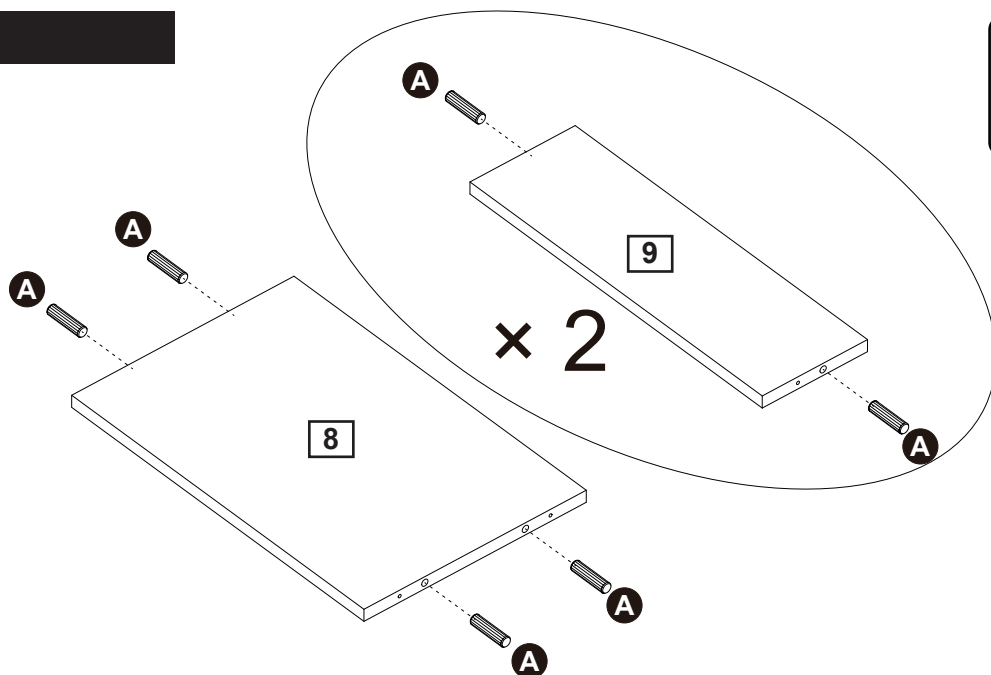

Insert wooden dowel (A) into part (8, 9).



## Step 8

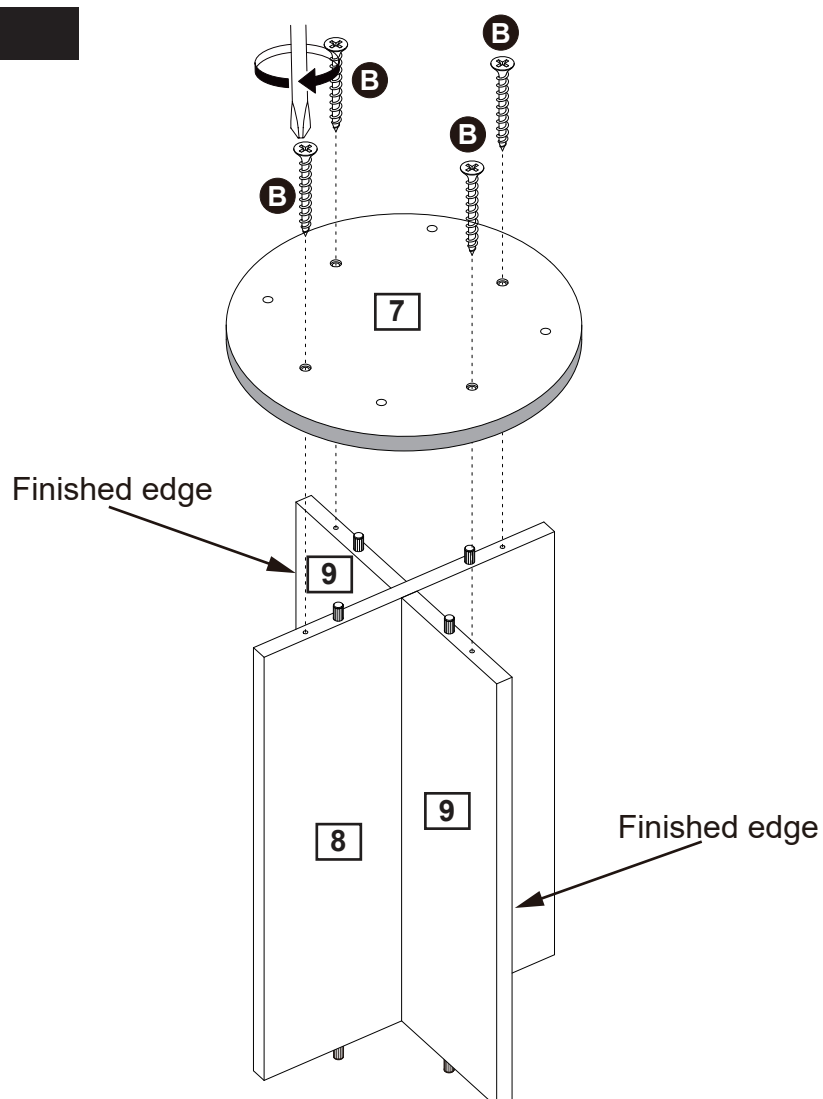

Attach part (7) to part (8, 9) using screw (B) with a screwdriver.


# Assembly Instructions

## Step 9

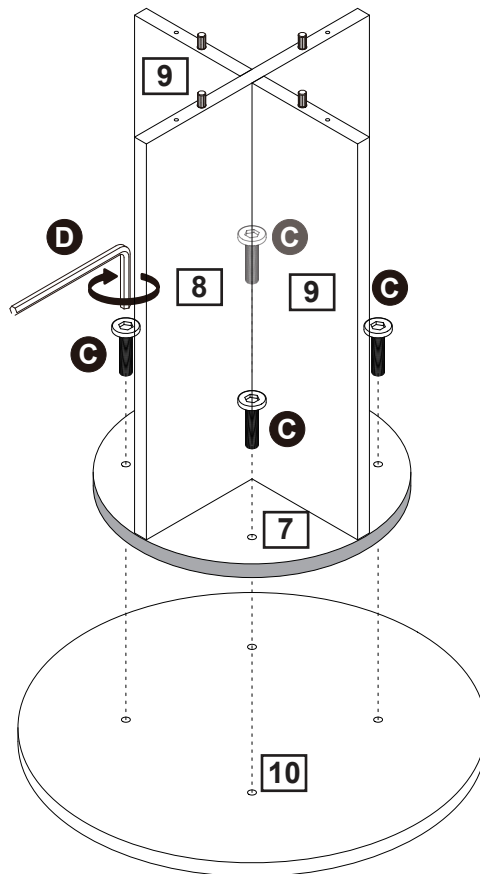

Attach part (7) to part (10) using bolt (C) with allen key (D).


## Step 10

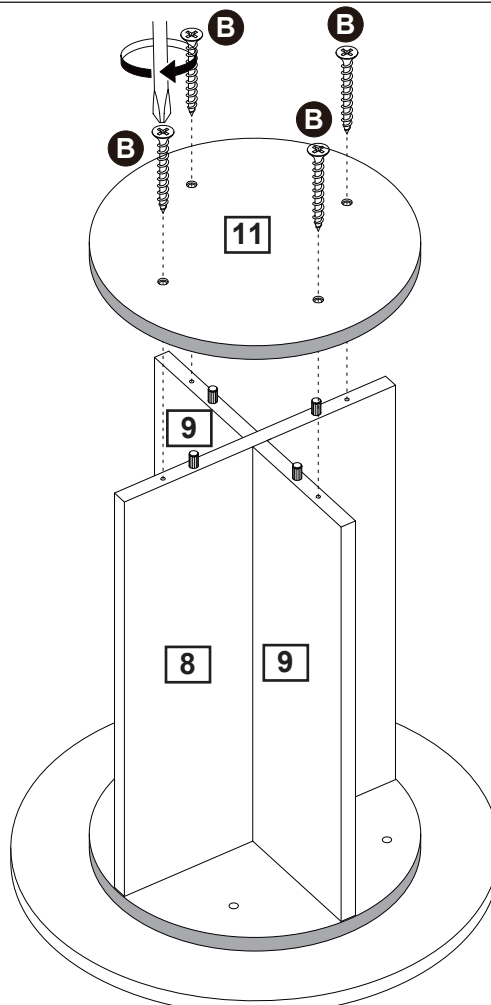

Attach part (11) to part (8, 9) using screw (B) with a screwdriver.



# Assembly Instructions

## Step 11

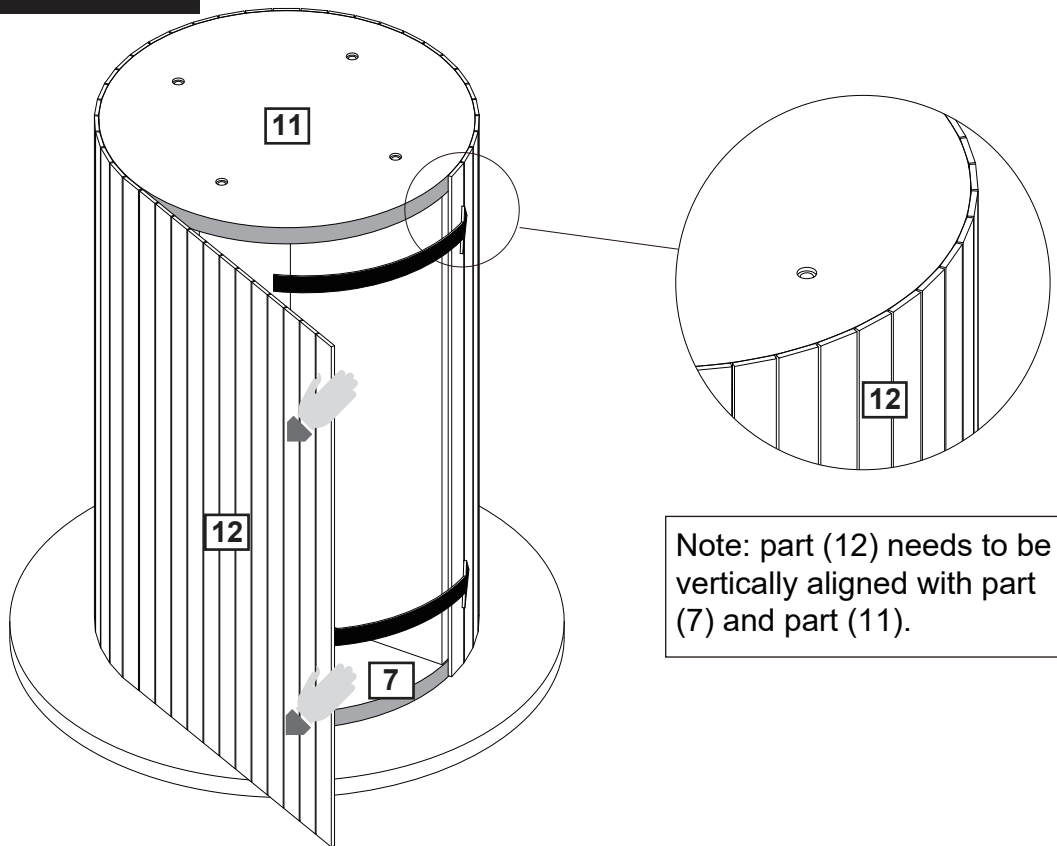

Wrap and stick part (12) on part (7) and part(11) by hand.


## Step 12

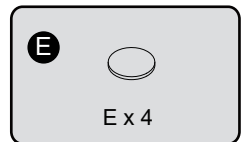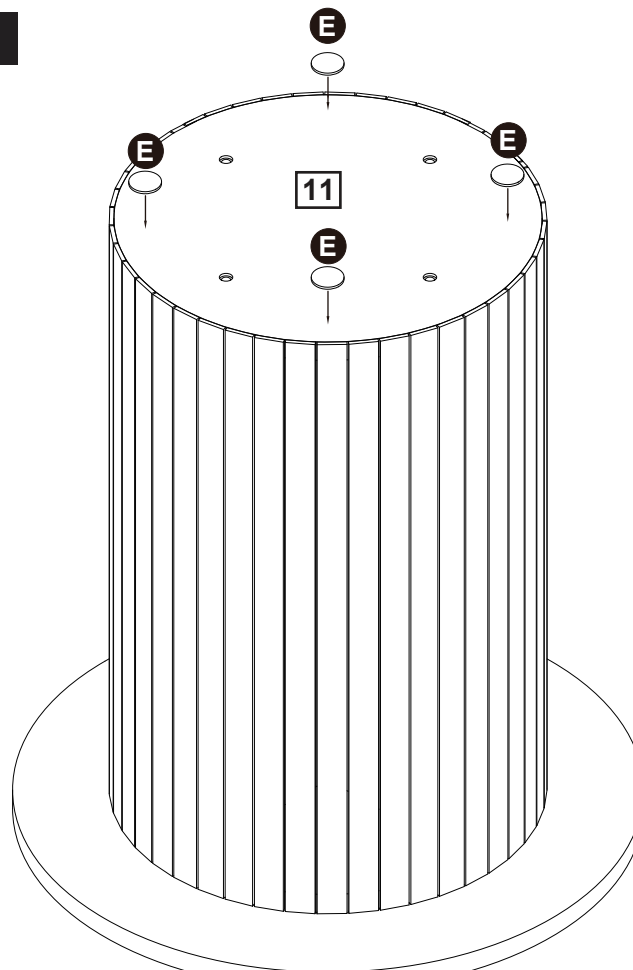

Attach felt pads (E) to part (11).

# Assembly Instructions

## Step 13

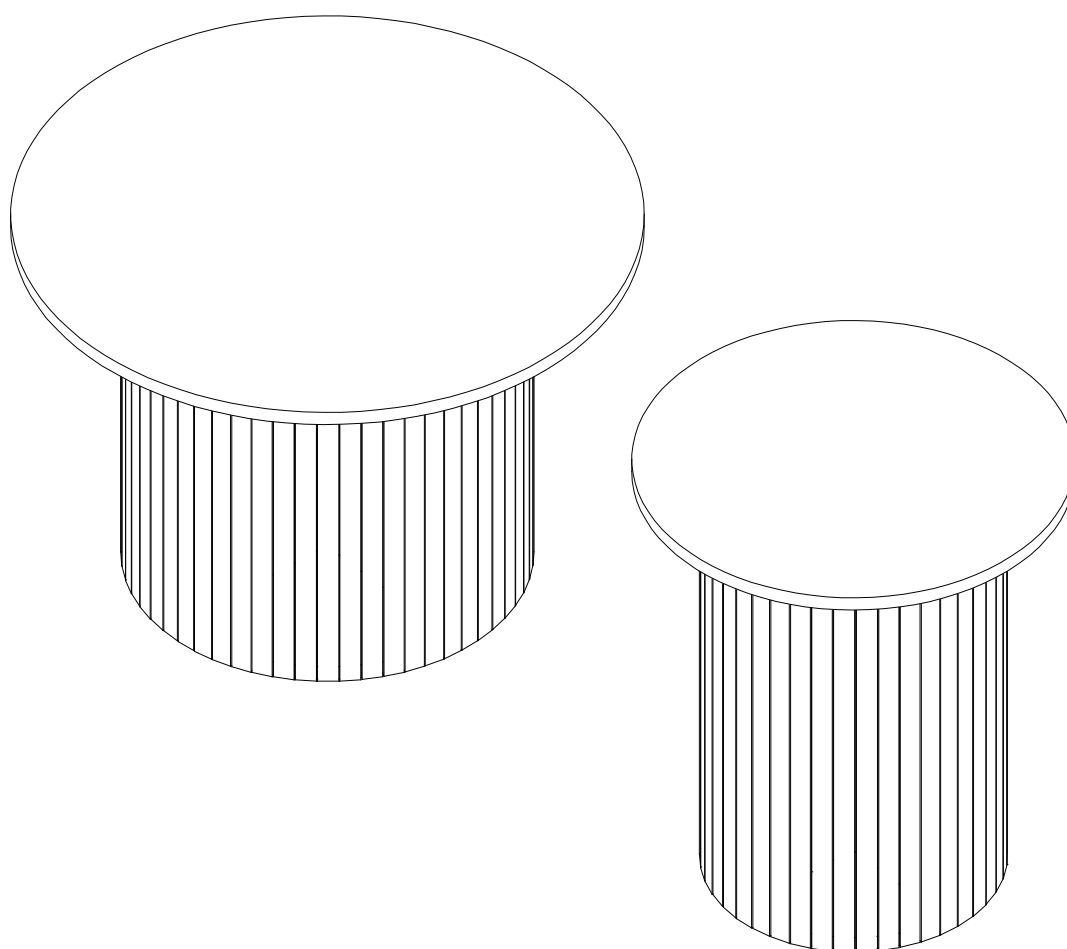

Assembly is complete