

HELP CENTER

Thank you for choosing us to be a part of your life.
We value your business, and
constantly strive to provide you only top-
quality products and services. Contact us if we
can be of further assistance, we'd love to hear your advice.




Warm Tips:

- 1.If you need any help or received damage or missing parts, please feel free to contact our customer support.
- 2.Please check the pack content be for eattenm Pting tocon struct the Sreen house.
- 3.Read them anual carefully and famil iarise yours elf with the Procedure be for easse mblingit.
- 4.Plea sed onotlocate the Productin the are aex Posed to excess winds.
- 5.I ti sre commended that he green house to beassem bled by at least tivewo People.

! WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage, or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

12x30ft Carport INSTRUCTION MANUAL

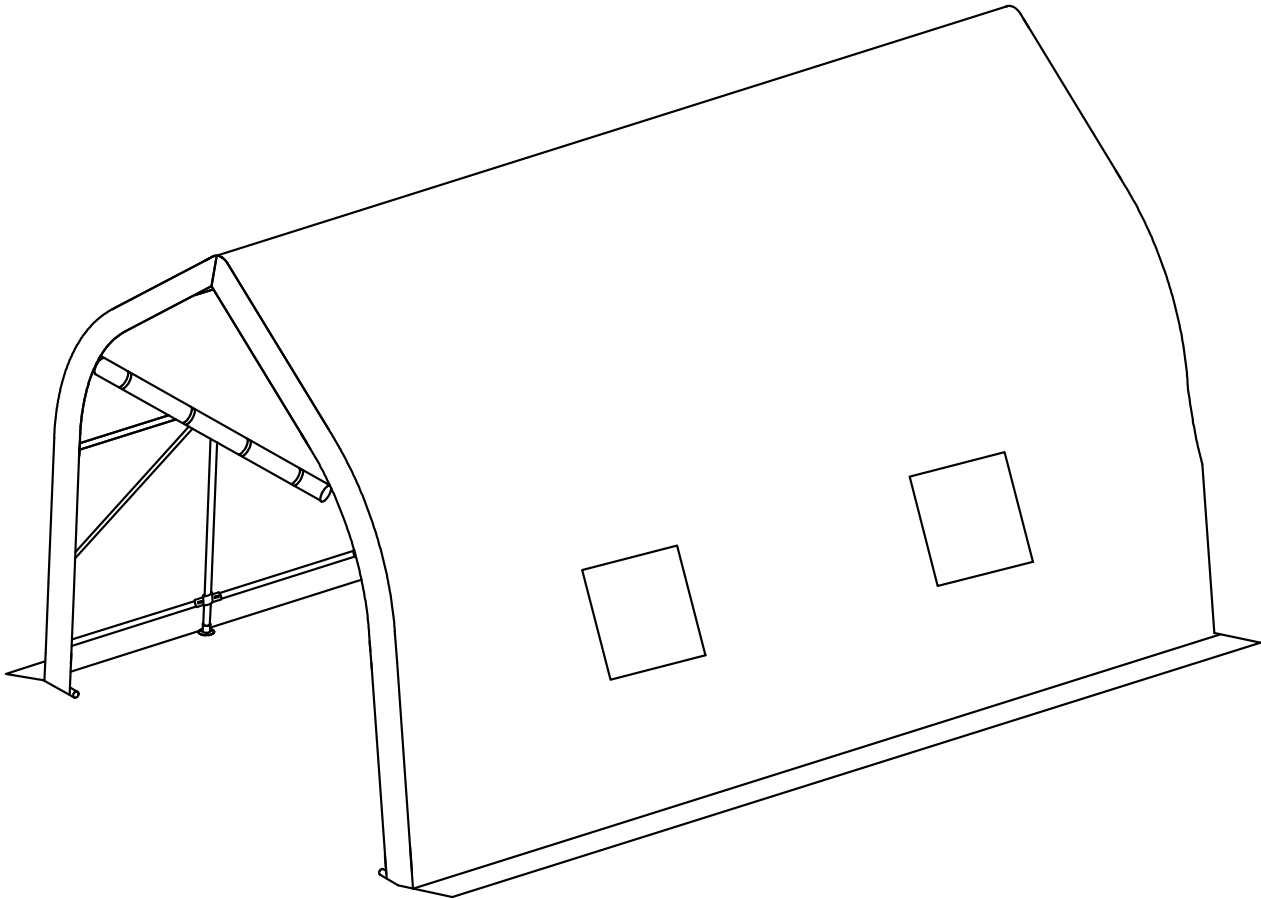

SKU : YCP004A1-A01 (BOX1/2)
YCP004A1-A02 (BOX2/2)

Arrive in 2 separate boxes and may not be part of the same shipment;

Please install the product after receiving all the packages

Email Address: support@wepatio.com

Tel: +1(901)347-2181

Service Time: 8 am-5 pm (central time) Monday-Friday. If no one picks up,
please call several more times

HELP
CENTER

ASSEMBLY INSTRUCTIONS



Pre-installation Notes:




- 1.Assembly requires three or more people.
- 2.It is recommended to use a ladder during assembly.
- 3.Ensure all necessary accessories are prepared before assembly.
- 4.Assembly is not recommended during heavy wind or rain.
- 5.Assembly is recommended on level ground.


Item no.	Reference Image	Qty.
1		X12
1A		X12
2		X16
2A		X4
2B		X5
3		X8
3A		X4
4		X10
5		X4
5A		X4
A		X2
B		X4

HELP
CENTER

ASSEMBLY INSTRUCTIONS


Item no.	Reference Image	Qty.
C		X8
D		X4
E		X40
F		X24
G		X34
H		X24
J		X4
K		X8
K1		X16
L		X4
M		X24
N		X1


Item no.	Reference Image	Qty.
C		X2
	 M6/M8	X2
	 M8*60mm	X16

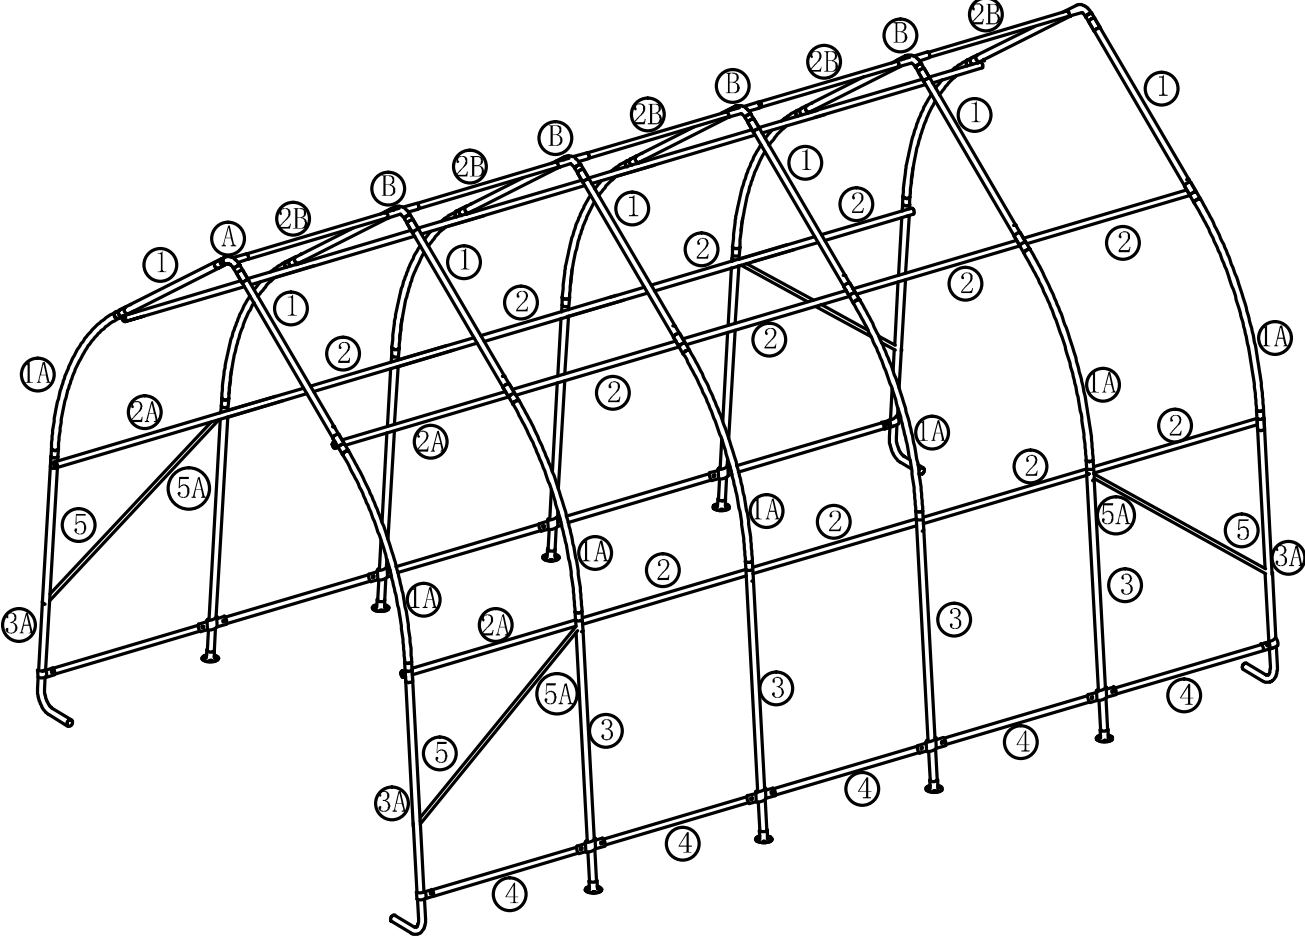


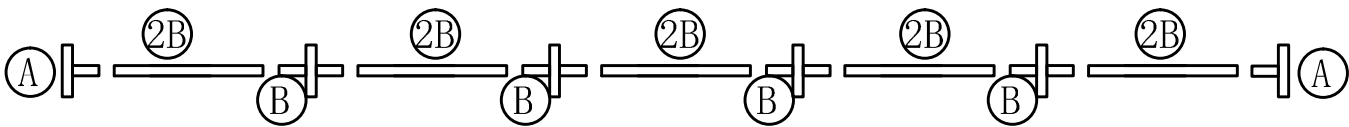
It's best to pre-locate and lay out all the profiles on the ground before proceeding with the installation

1


2B 5pcs


2pcs


4pcs




HELP
CENTER

ASSEMBLY INSTRUCTIONS


HELP
CENTER

ASSEMBLY INSTRUCTIONS



2



① 12pcs



22pcs

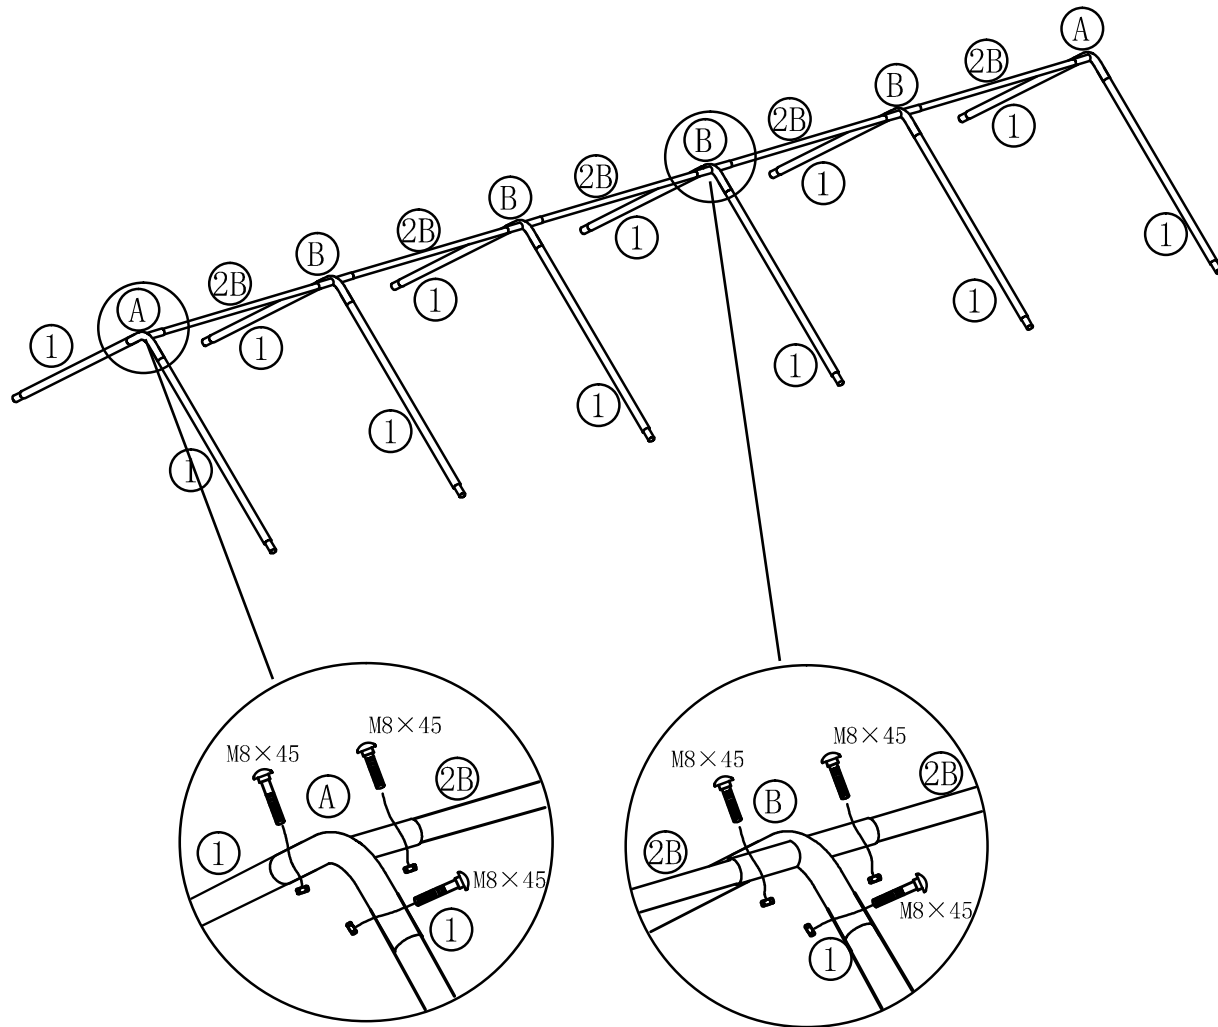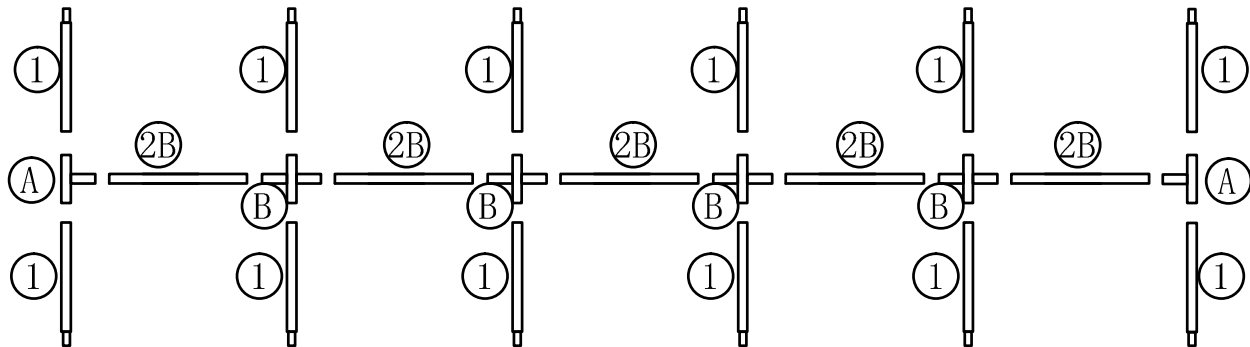

5


3




①A 12pcs




② 8pcs



②A 2pcs



12pcs

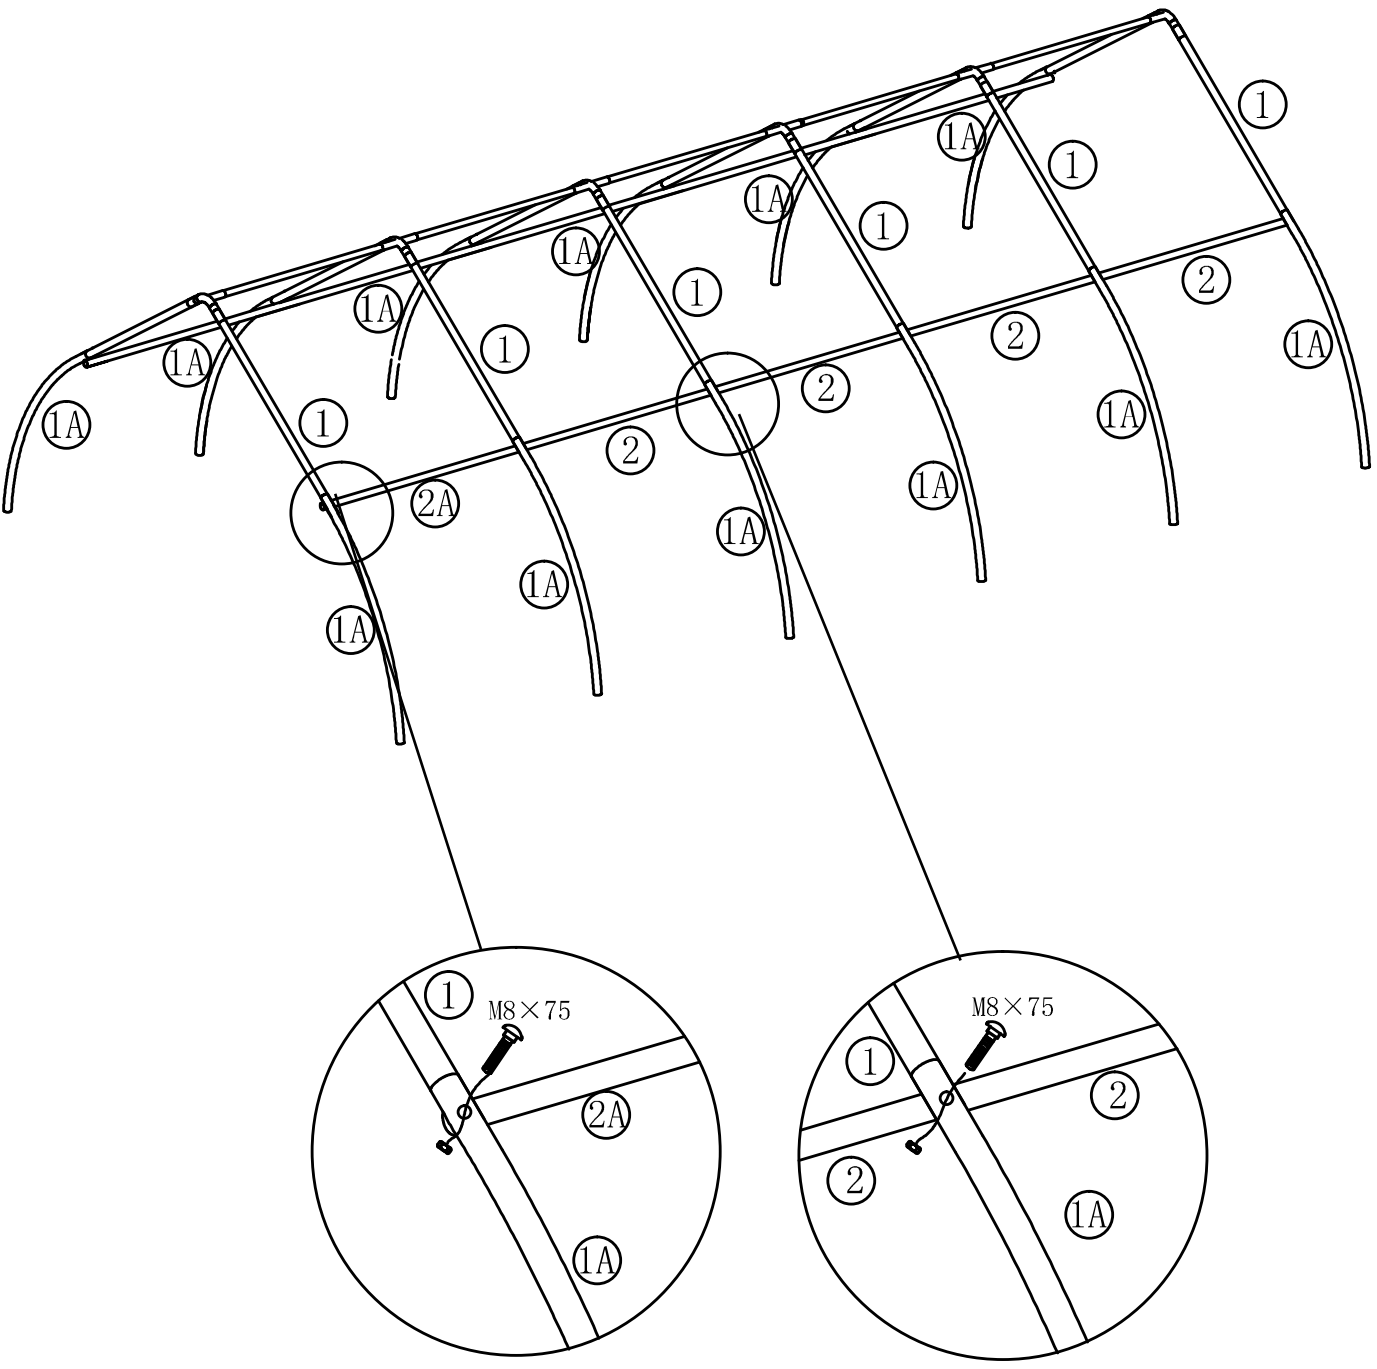


6


HELP CENTER

ASSEMBLY INSTRUCTIONS

4



40pcs

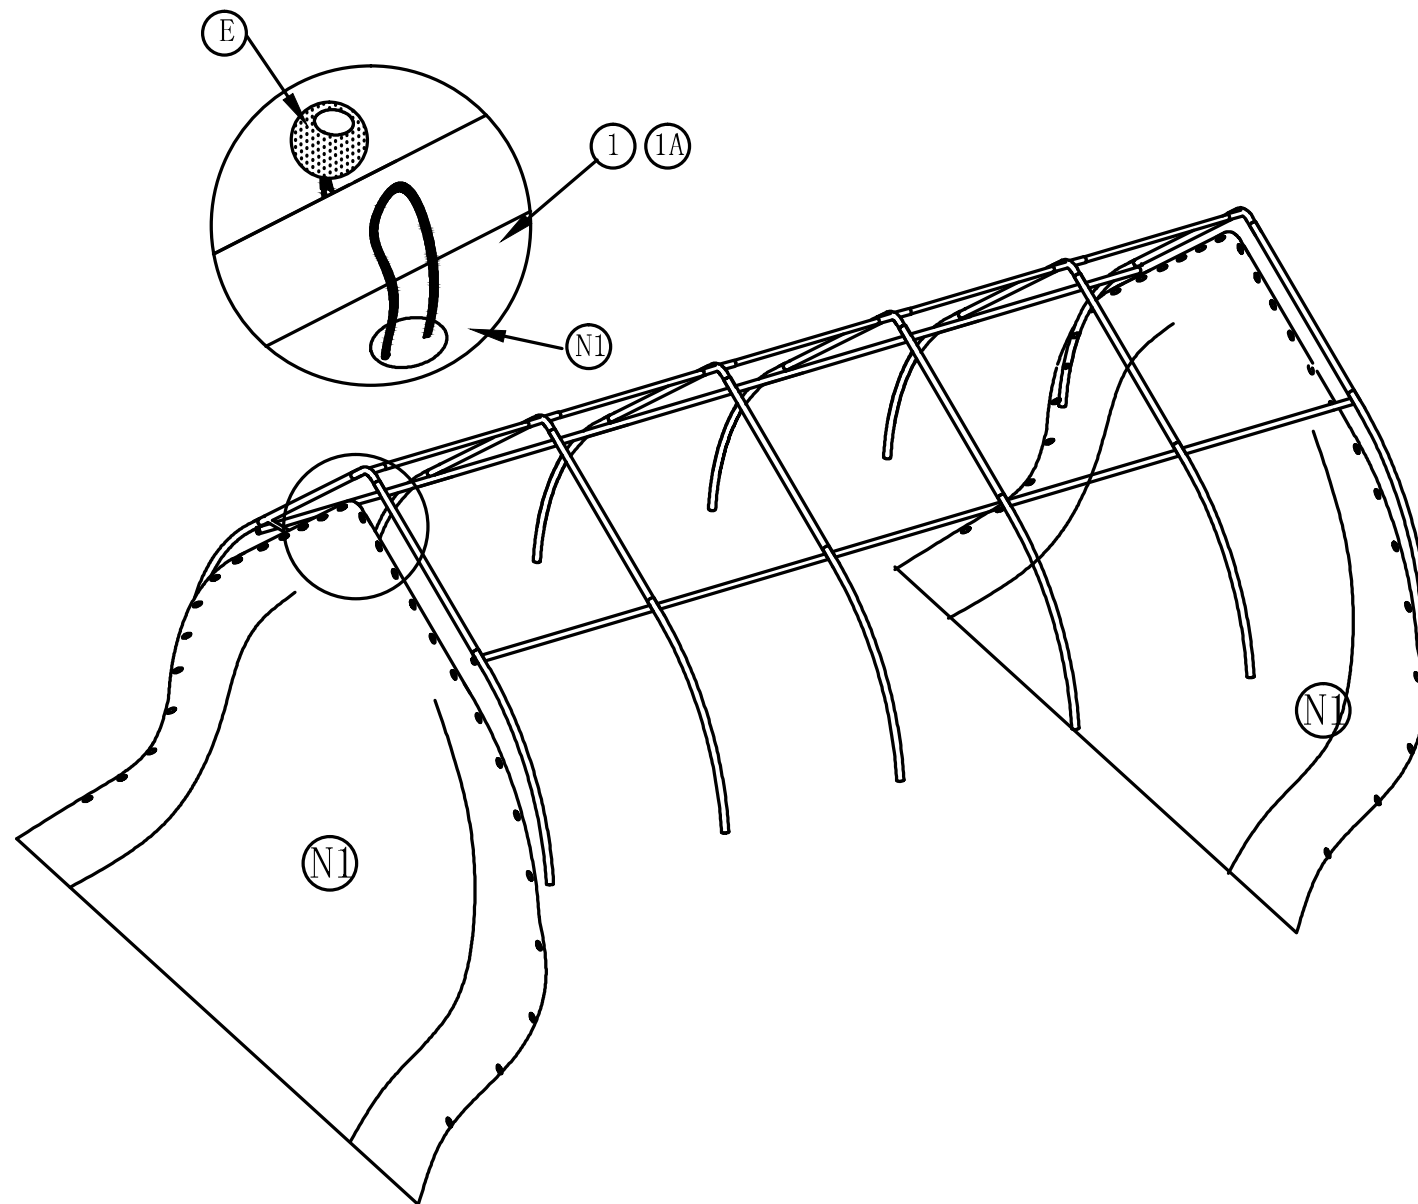


To prevent the cloth cover from being blown away, you can first use a bungees to secure the cloth cover to the profile.


HELP CENTER

ASSEMBLY INSTRUCTIONS


5




② 8pcs




⑤ 2pcs




②A 2pcs




⑤A 2pcs




③ 8pcs



2pcs



③A 4pcs




6pcs



2pcs




2pcs

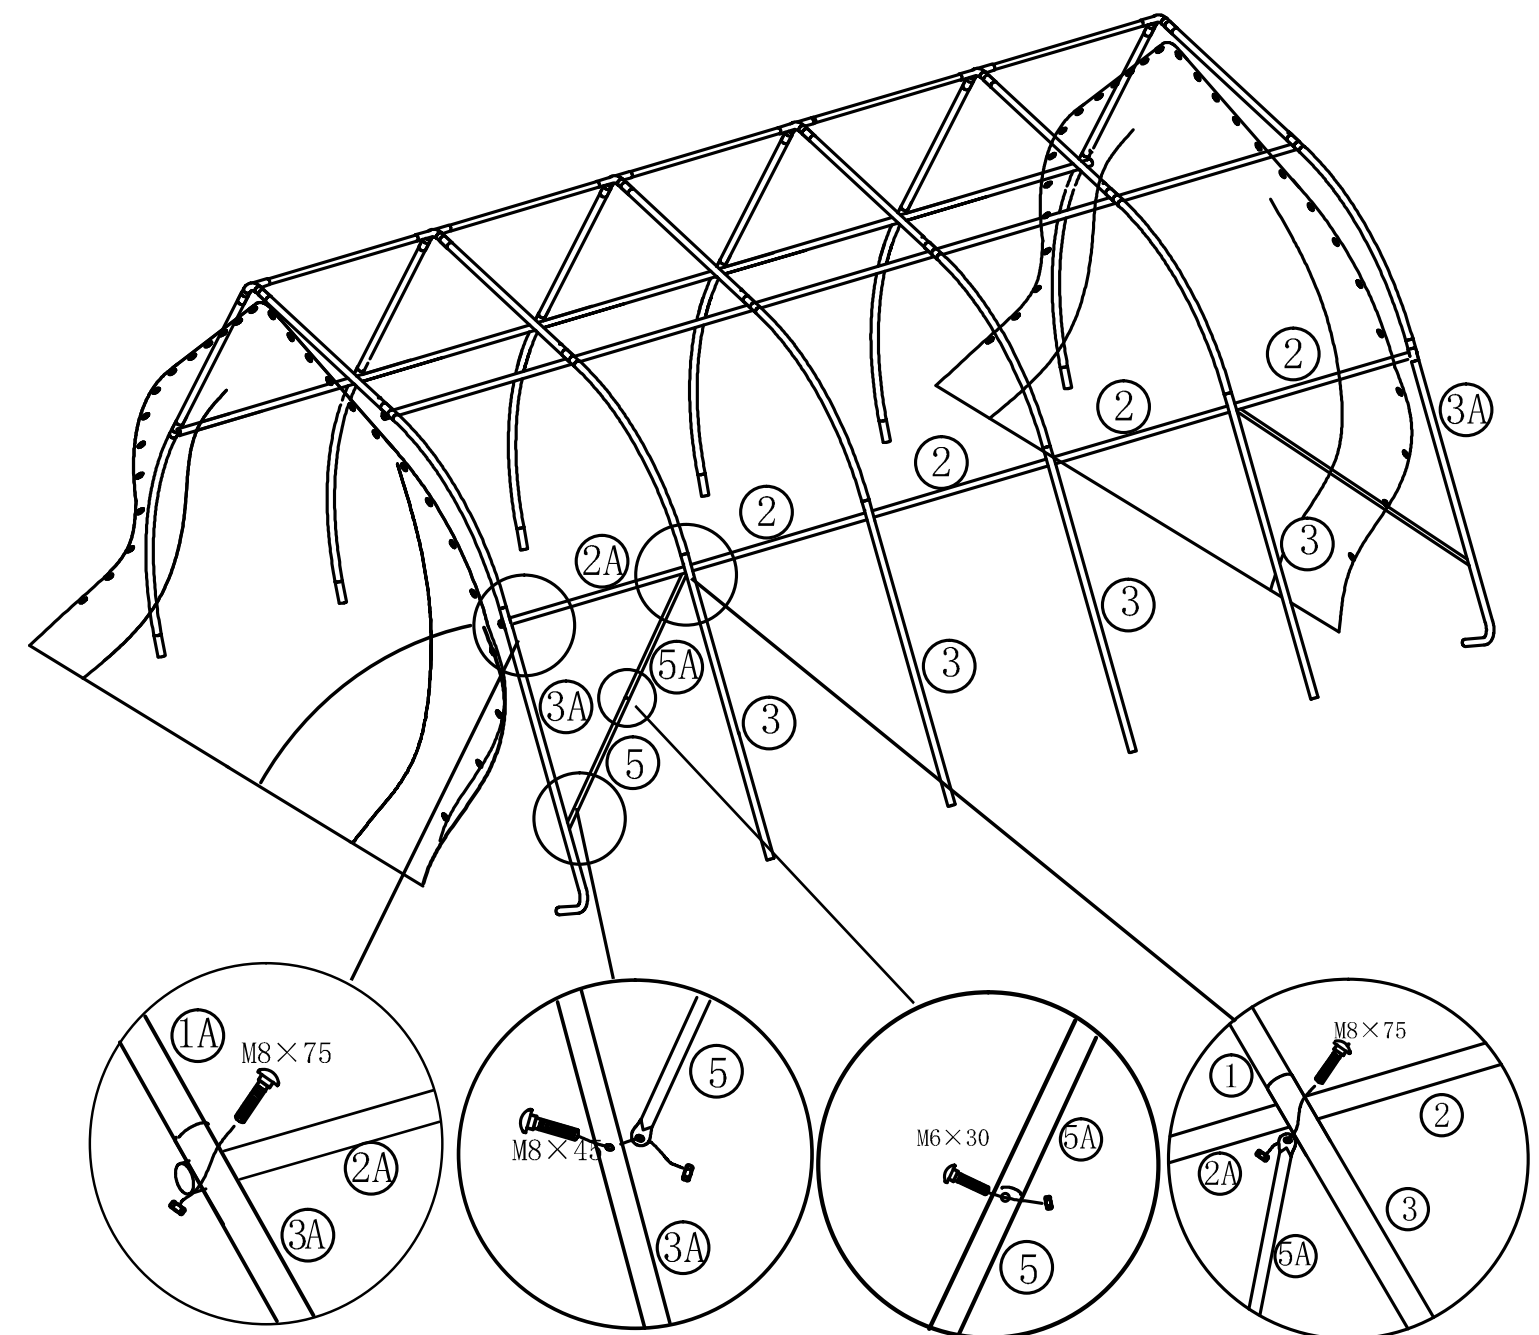

6




1pcs

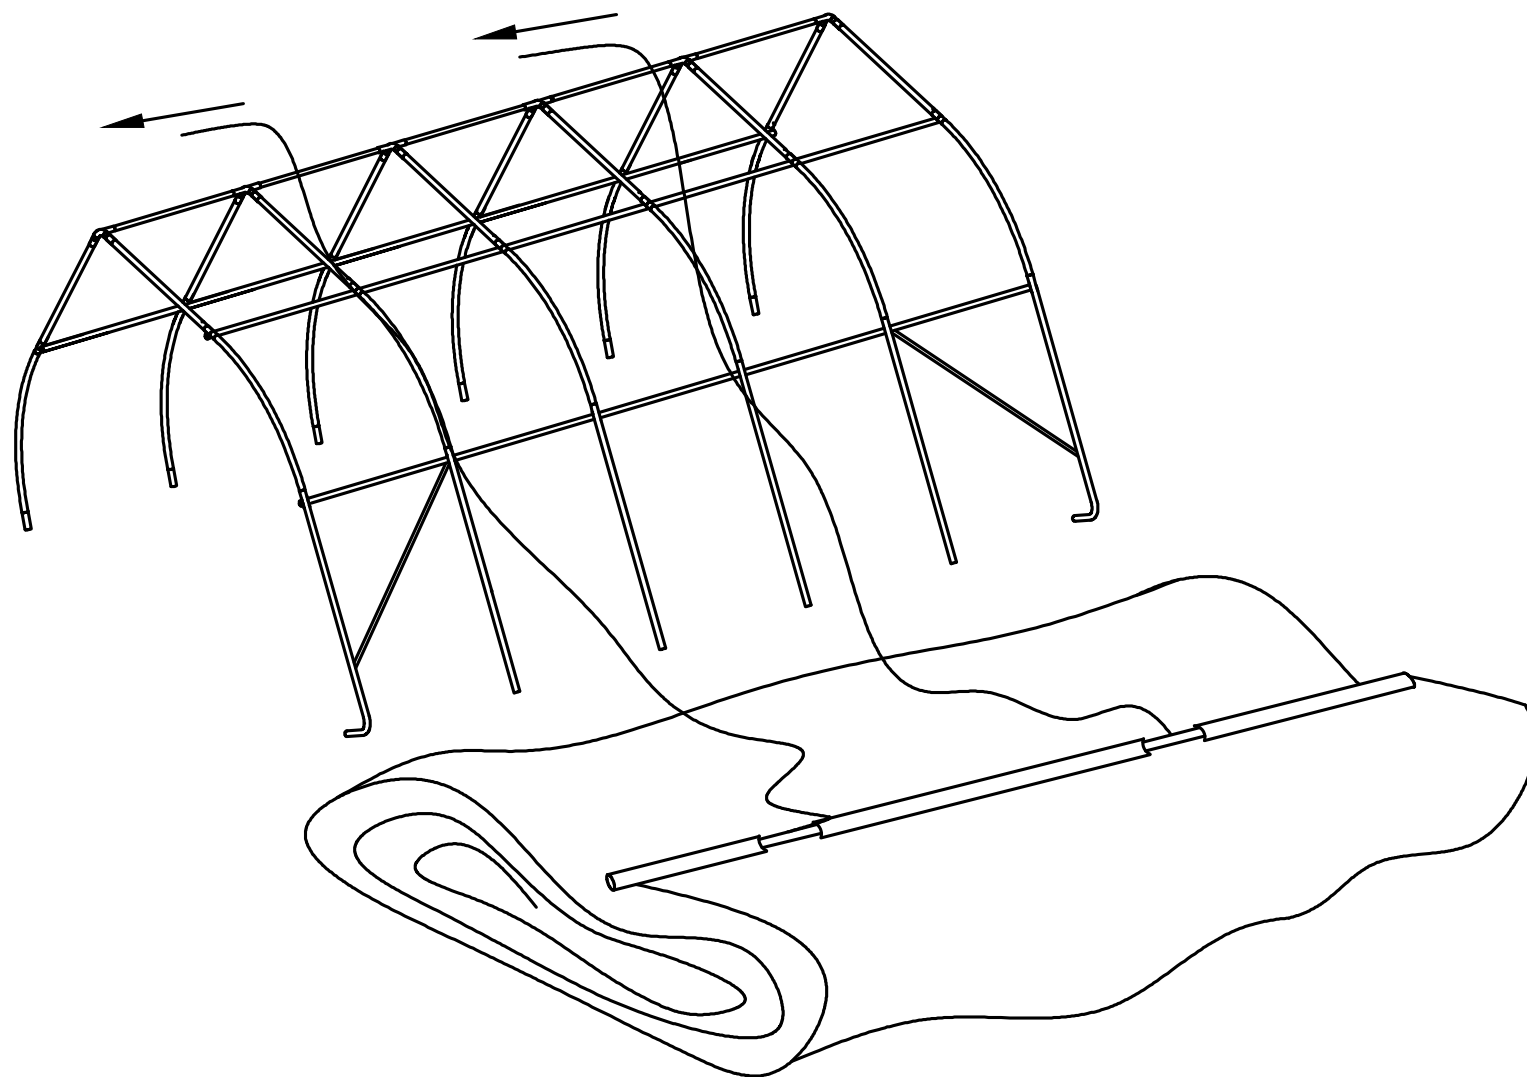


After installing one side of the legs, place the side without legs on the ground. Two people are needed to hold both ends of the cloth cover and pull it from one side to the other, covering the partially assembled frame.


7



⑤ 2pcs



⑤A 2pcs




2pcs



6pcs




2pcs

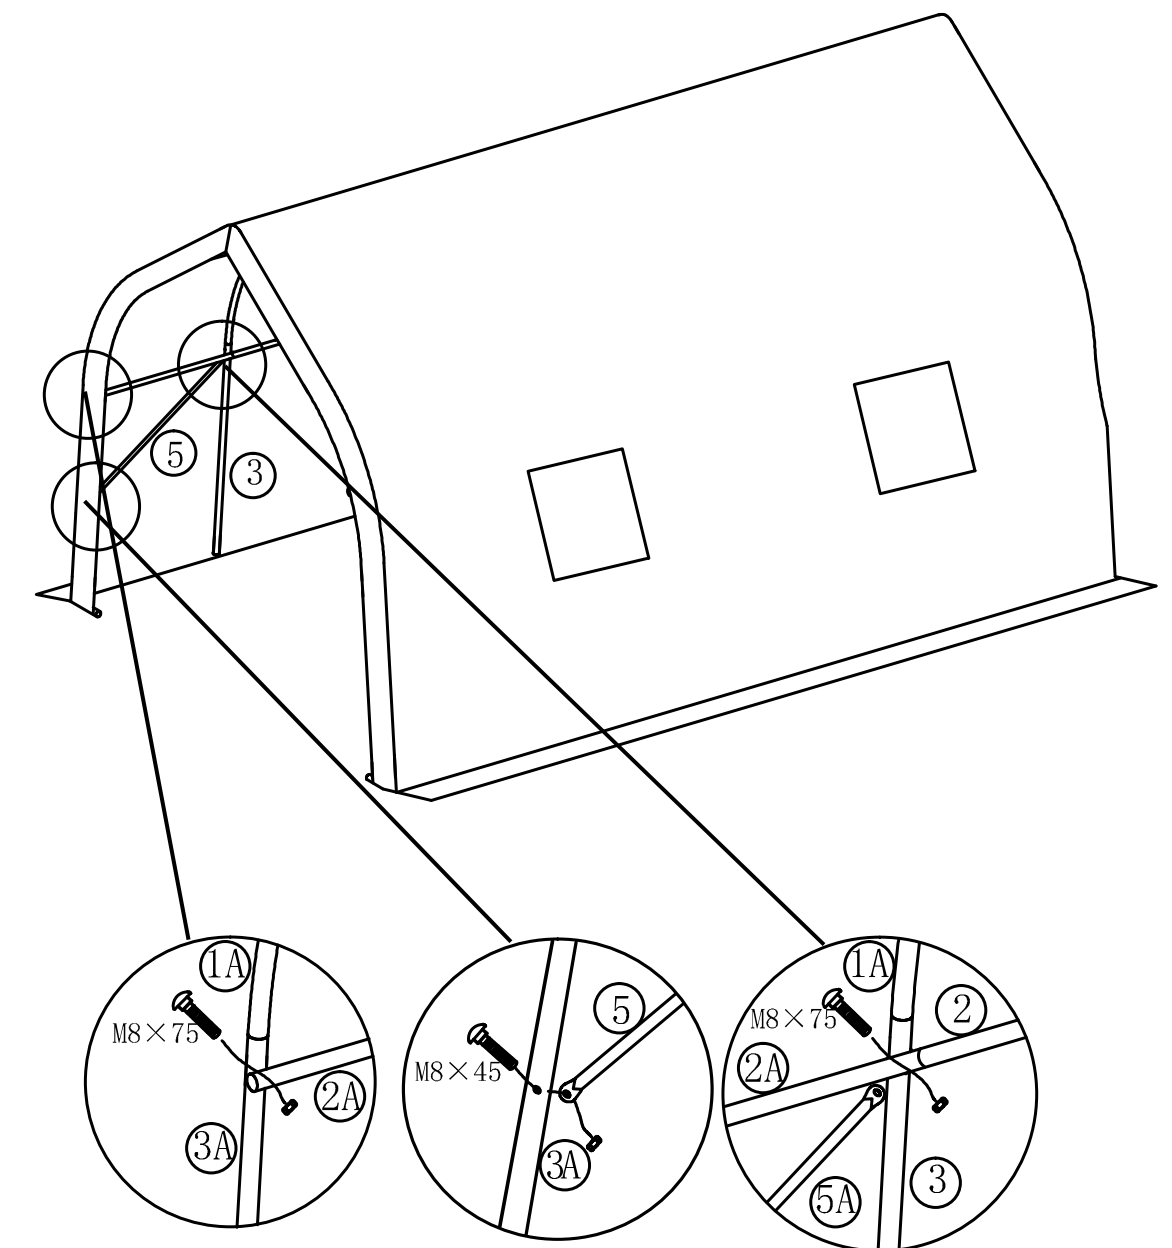

After covering the frame with the cloth cover, install the legs on the other side. This step requires at least two people.

8

④ 5pcs

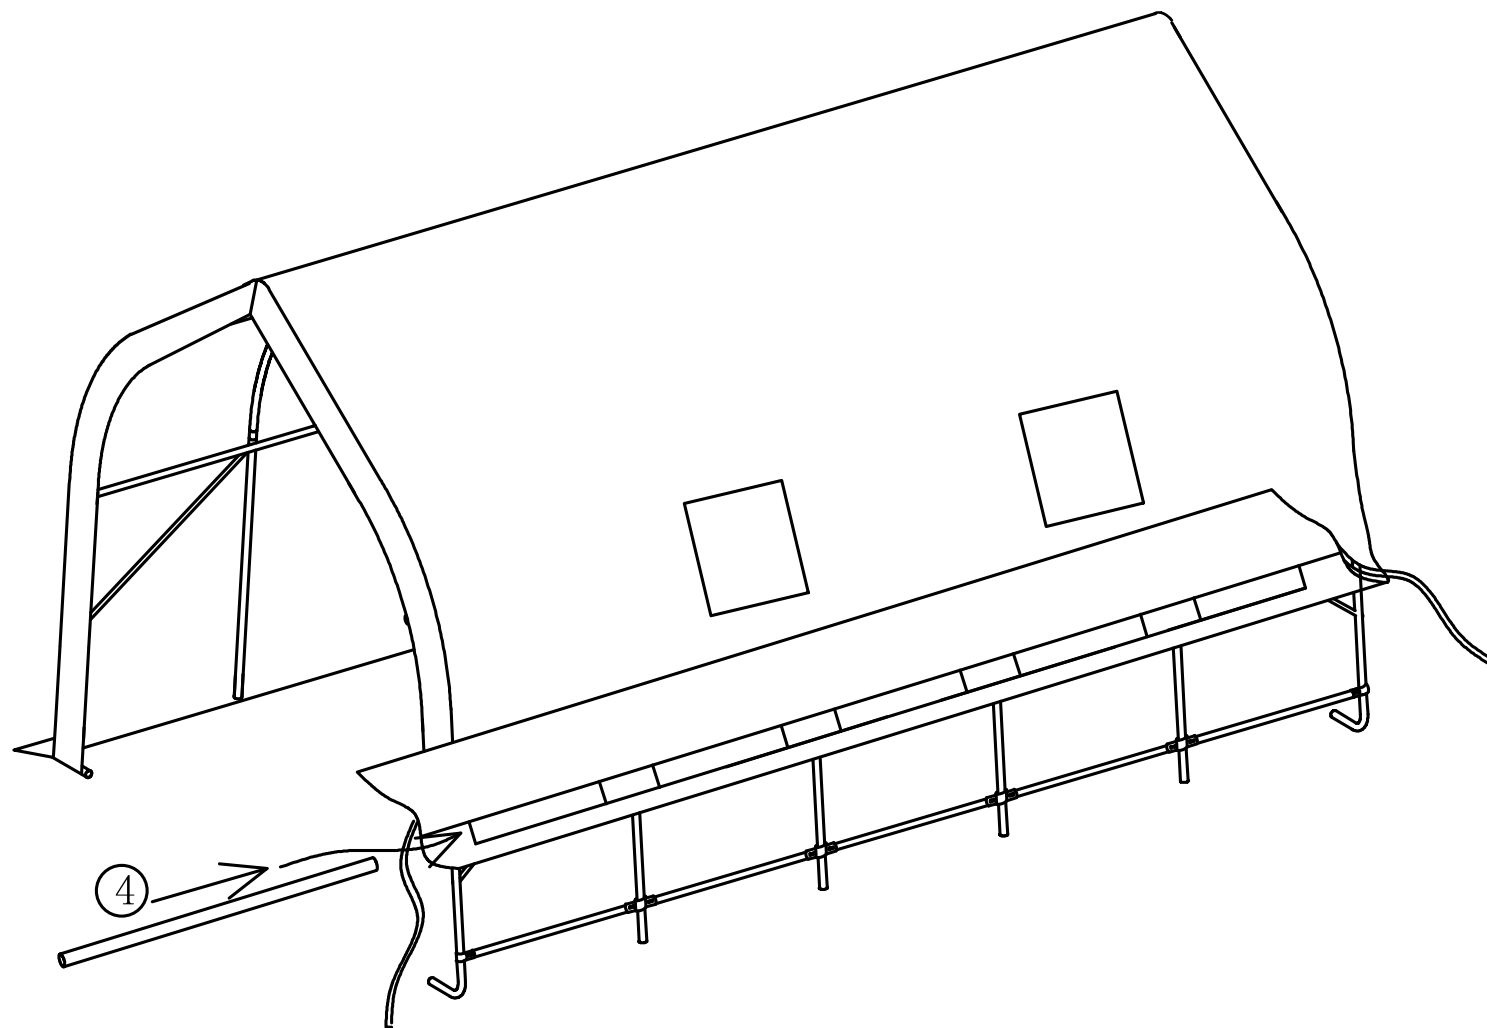


Lift the side of the cloth cover and fit it onto tube number 4.

9

4pcs

8pcs

12pcs

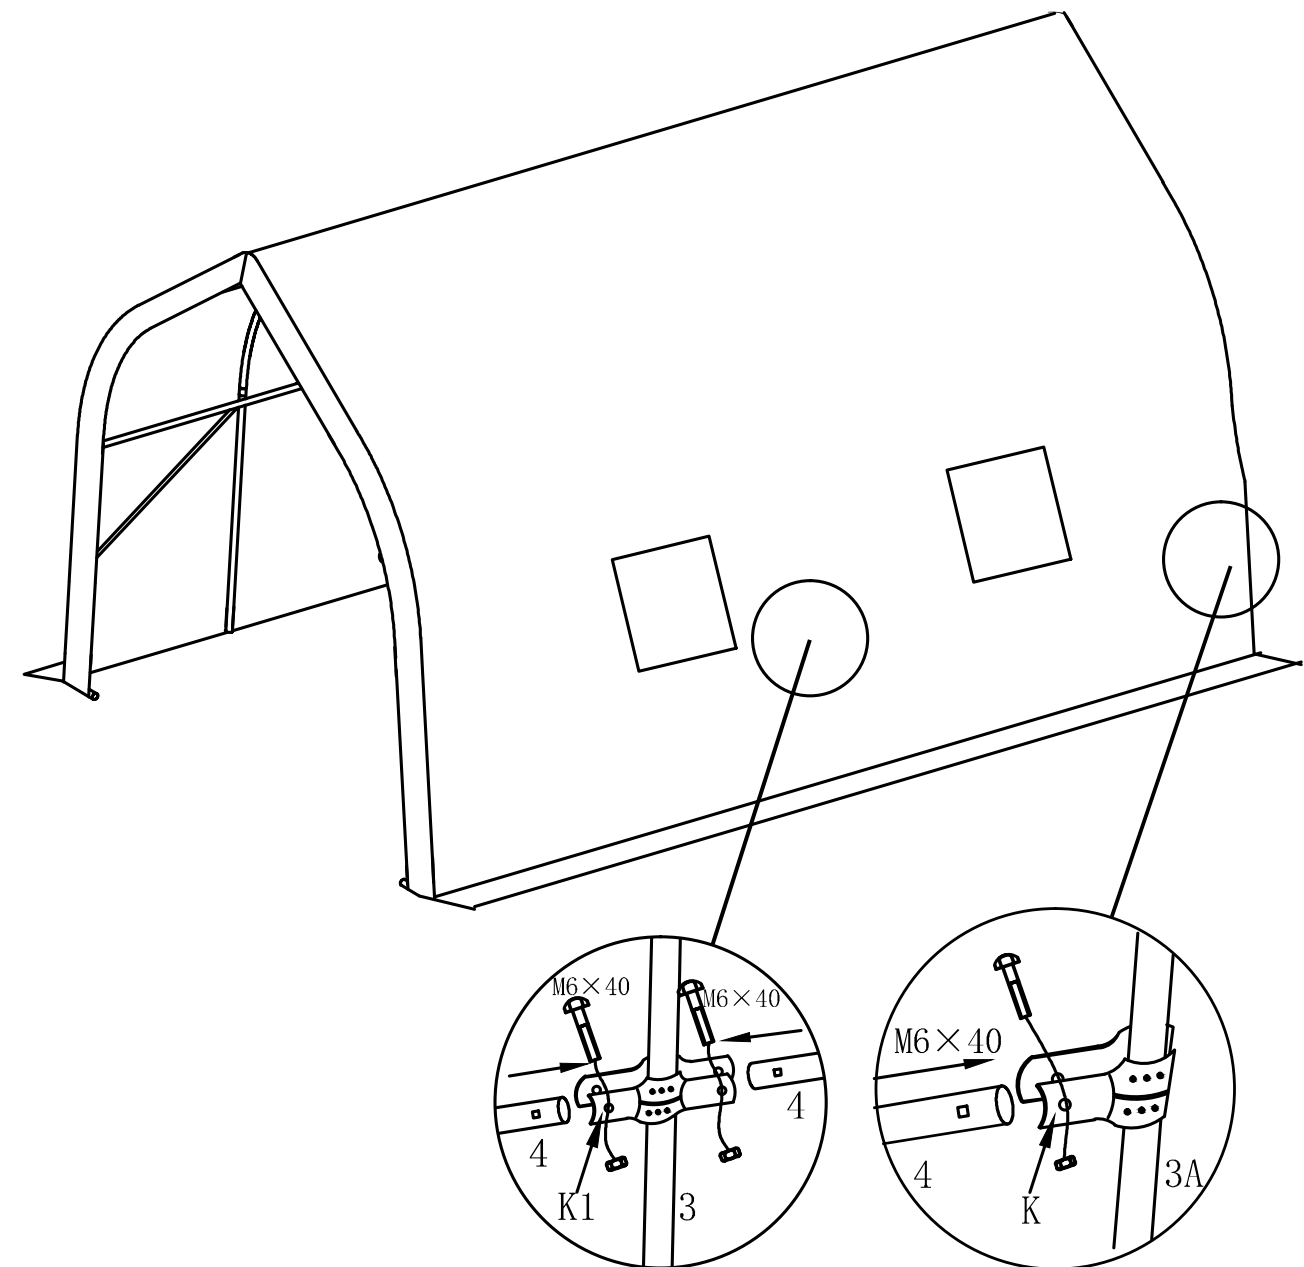

Connect and lock the number 4 pipe according to the instruction manual.


HELP CENTER

ASSEMBLY INSTRUCTIONS


HELP CENTER

ASSEMBLY INSTRUCTIONS

10




4pcs

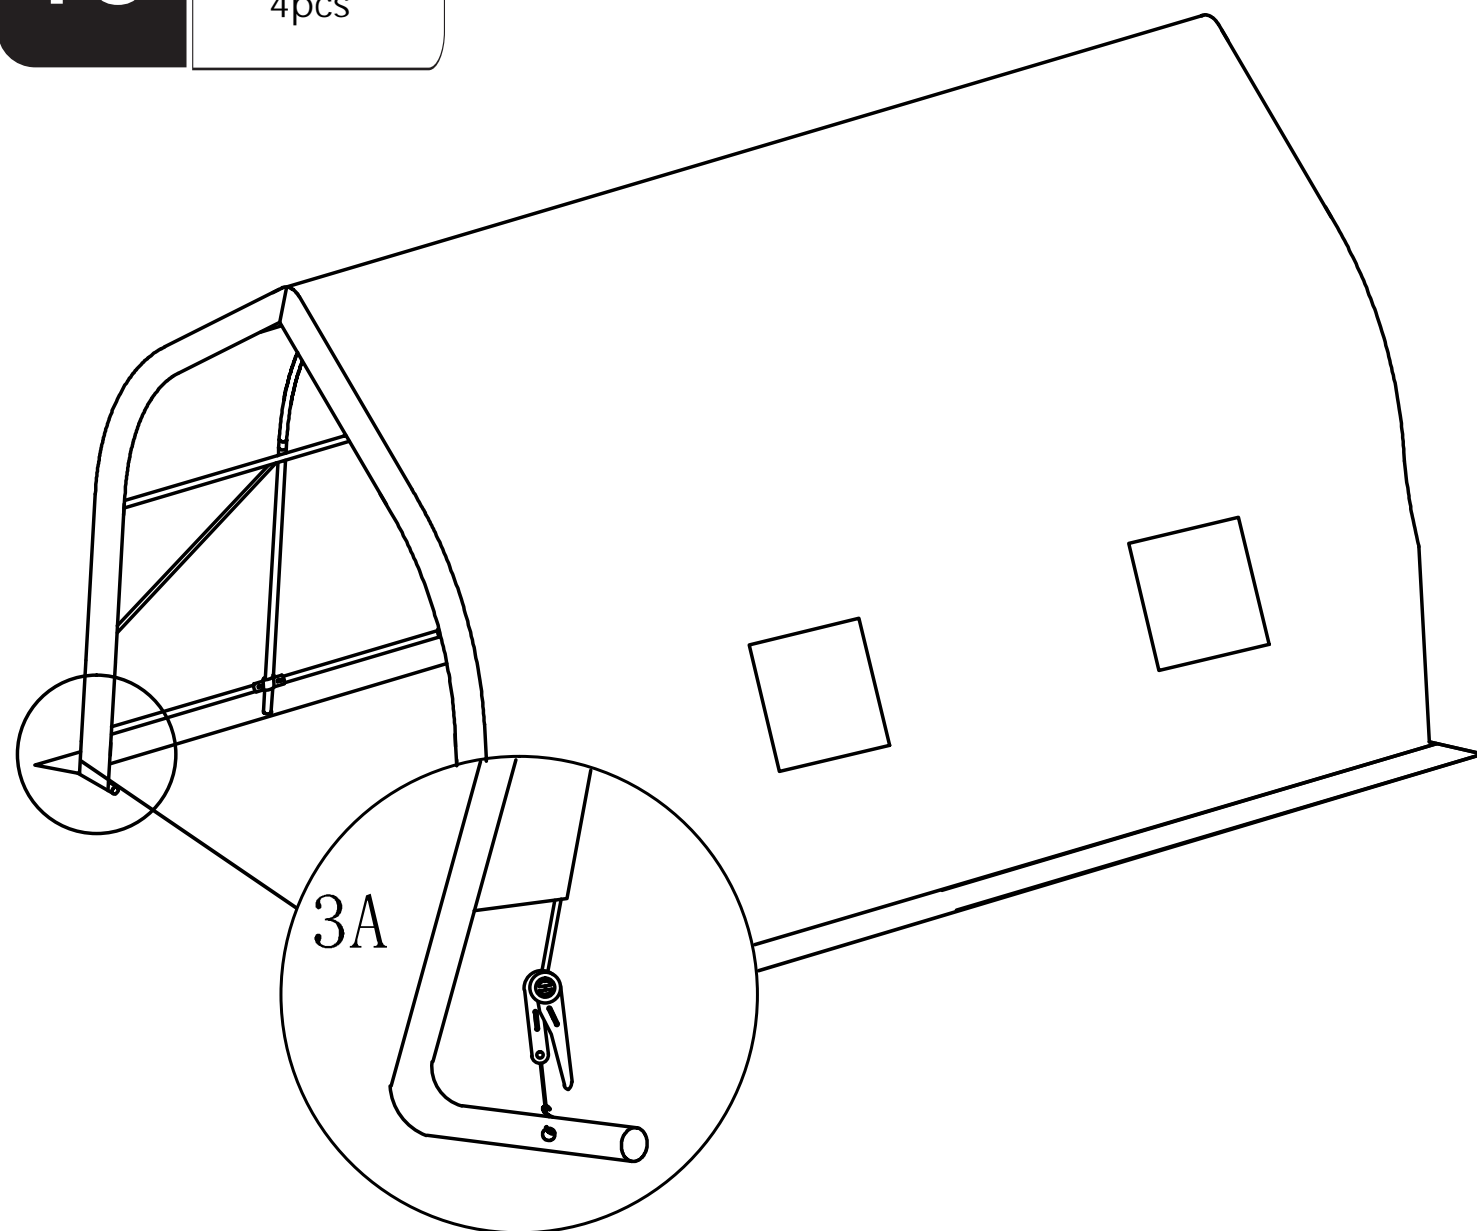

Pull the rope inside the cloth cover out and tie it around the ratchet tightener, then hook the S-shaped hook on the ratchet tightener to the 3A tripod leg.

11




④ 5pcs




4pcs



8pcs



12pcs

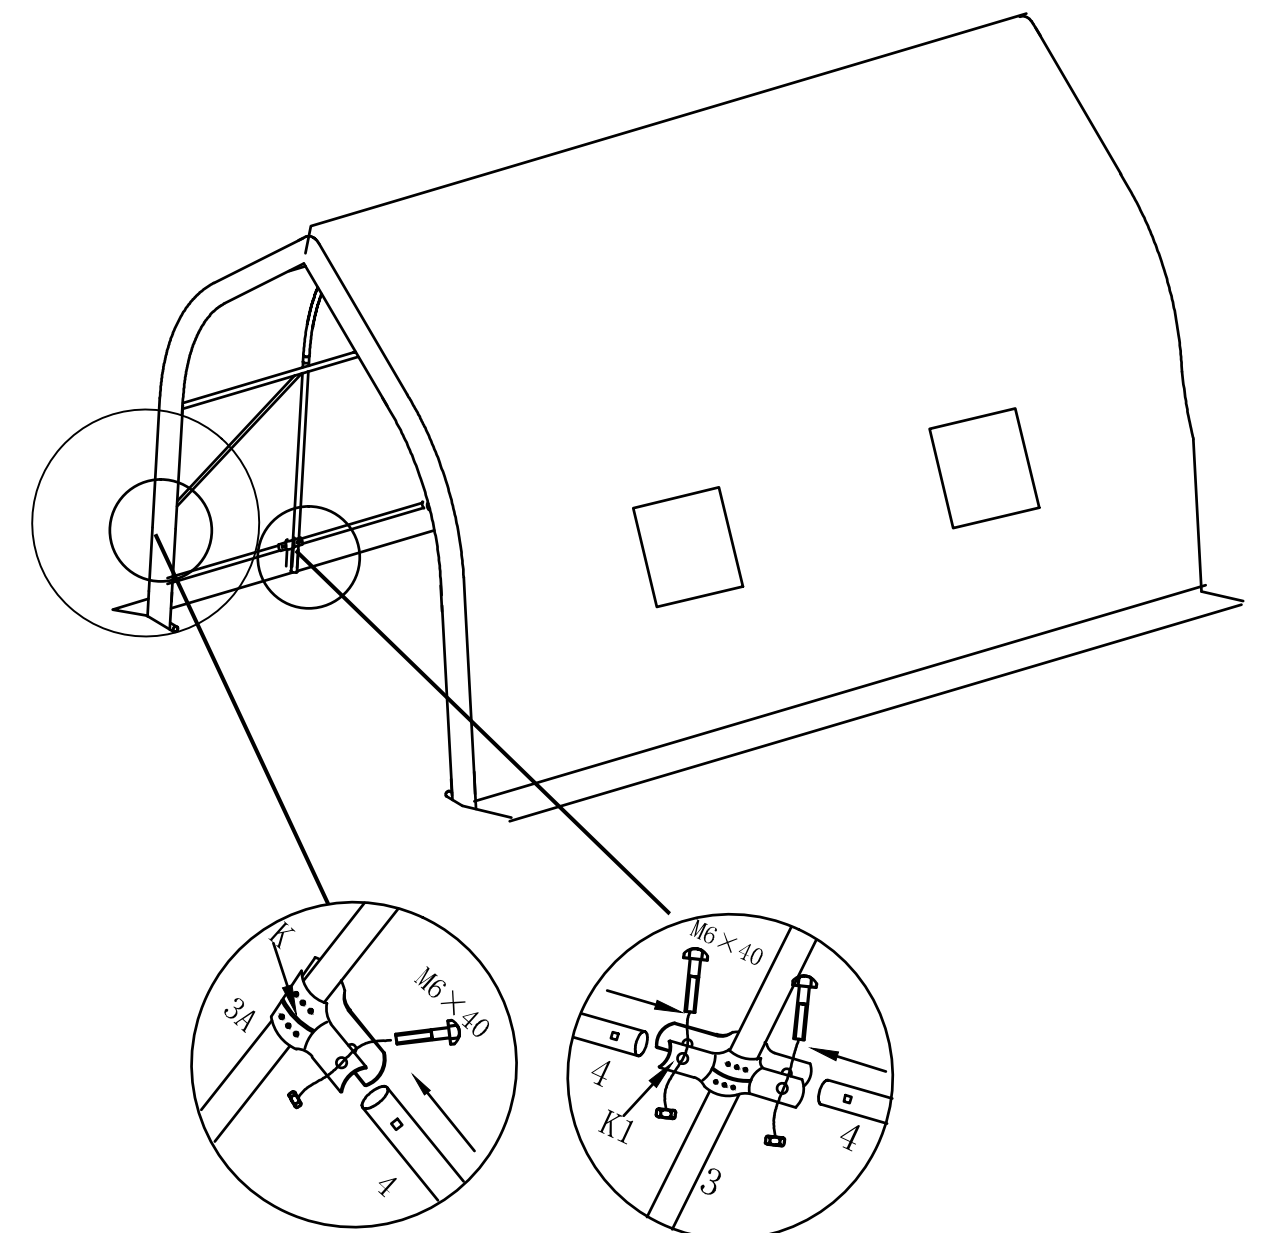


After tightening the cloth cover, then install the front side number 4 pipe on the number 3 and 3A pipes using the K accessory and K1 accessory.

HELP CENTER

ASSEMBLY INSTRUCTIONS

12

8pcs
8pcs
16pcs

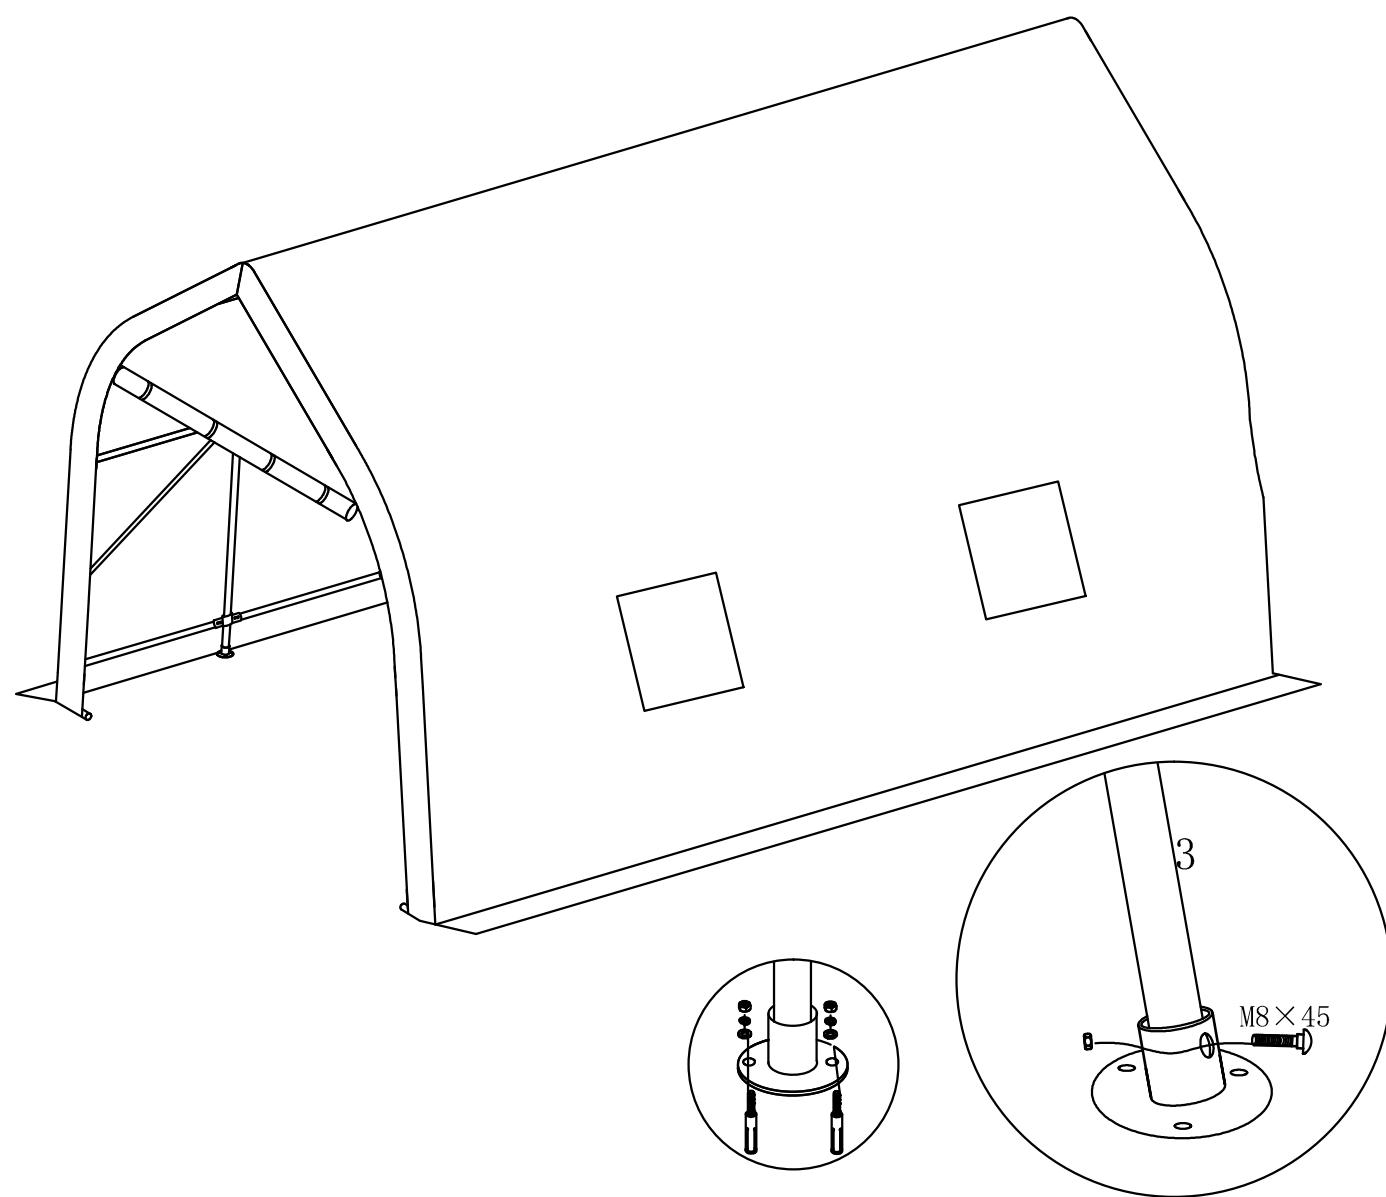


Tighten the C-number foot plate during installation to prevent wobbling.

HELP CENTER


ASSEMBLY INSTRUCTIONS

13


4pcs
24pcs

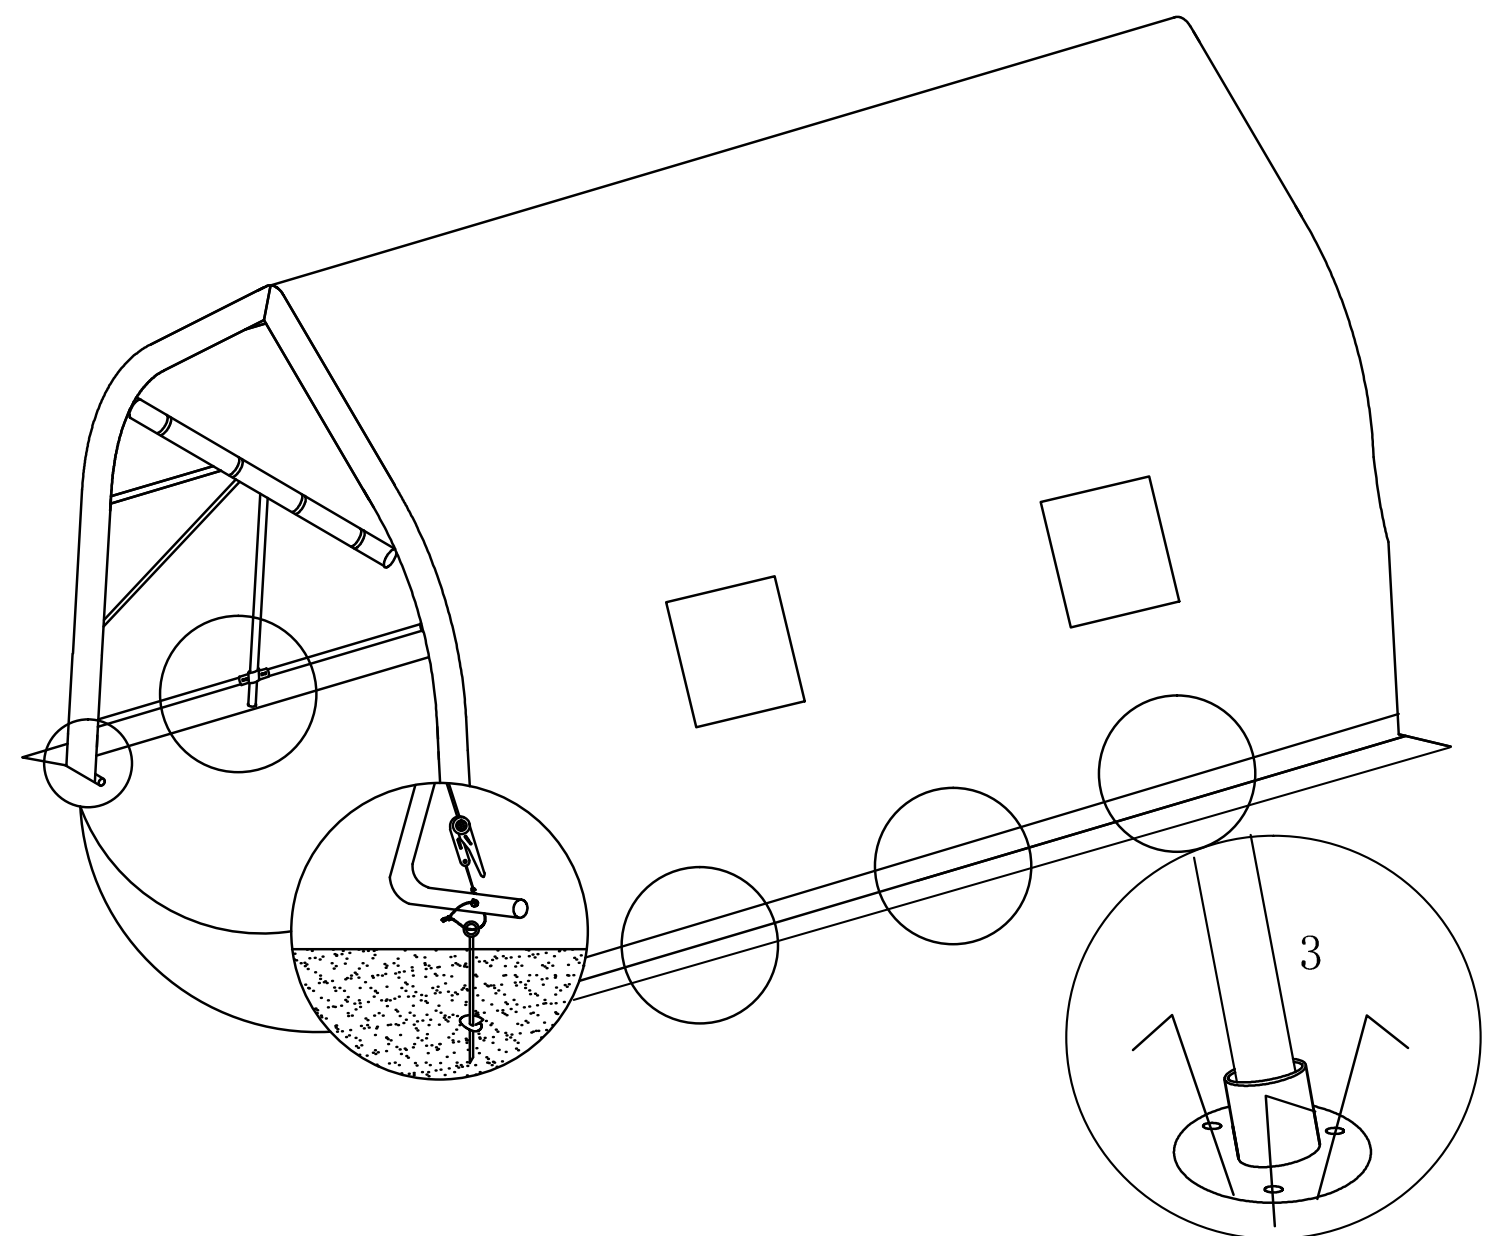

Note: To ensure stability, make sure to install the ground nails correctly!

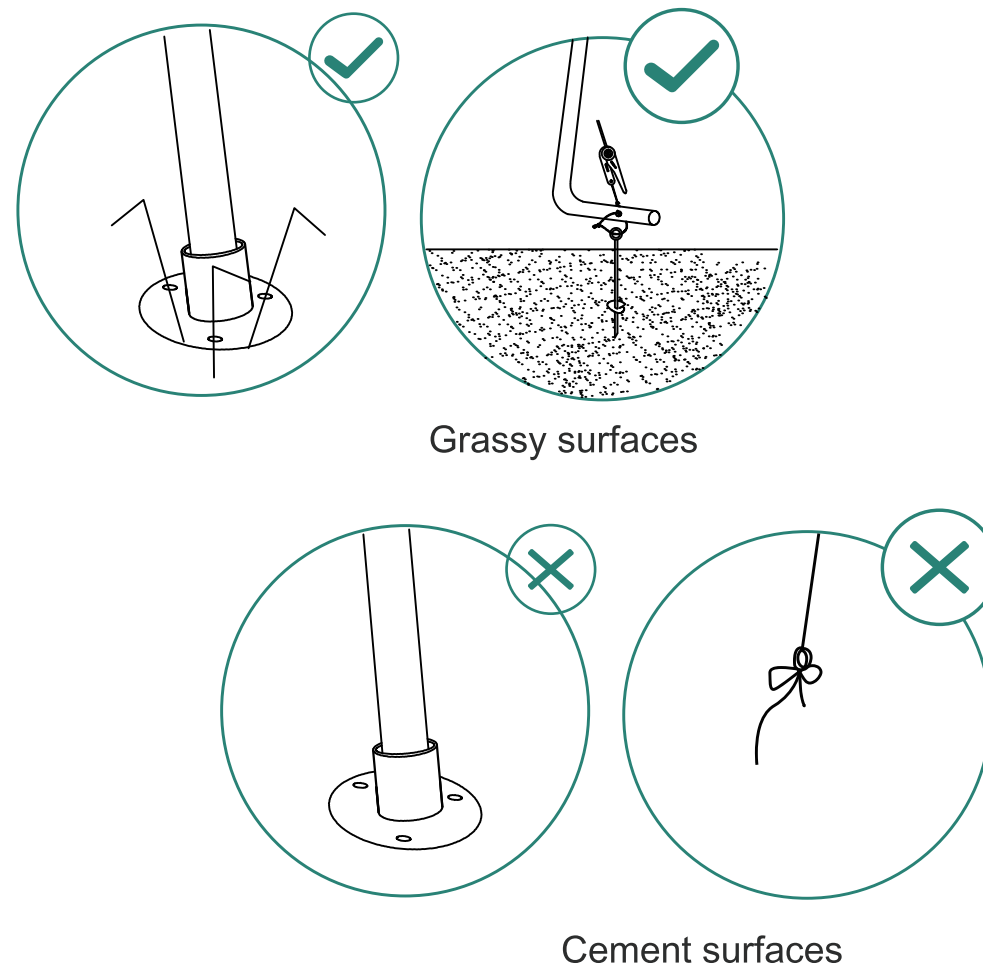

To improve wind resistance,
be sure to complete this installation step. If expansion screws or ground nails are not installed, strong winds may topple the gazebo.
 Expansion screws are essential for stability on cement surfaces and ground nails are for grassy surfaces.
 Ground nails are included in the package while expansion screws are not provided.

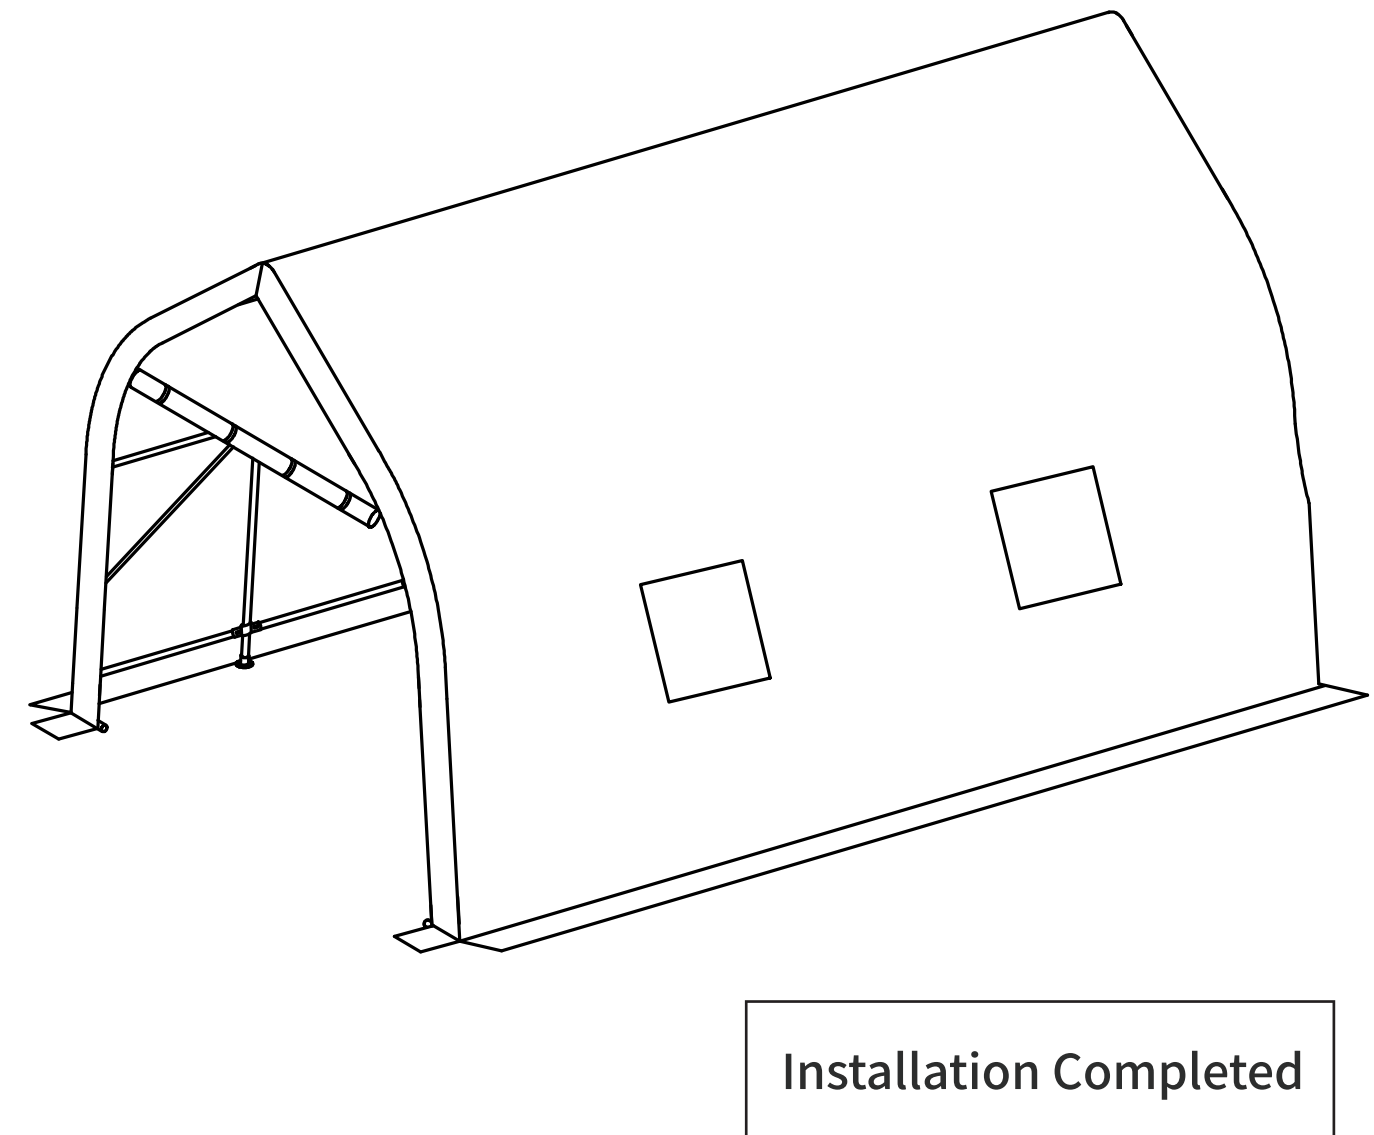

How to make the entire greenhouse more sturdy in strong winds or heavy snow?

- 1.Ensure all screws are tightened.
- 2.Confirm that ground nails and windproof ropes are installed as instructed.
- 3.Use stones or other heavy objects to weigh down any excess fabric around the perimeter.
- 4.If the canopy is erected on concrete ground, it is recommended to use expansionscrews.