

$\ensuremath{\wedge}$ Friendly Customer Service

Satisfaction Guarantees: Any problems with assembly, quality, or return, please feel free to contact us directly.


Contact us


 Phone: +1 (901) 347-2181 (US) Mon-Fri 9am - 5pm (PST)

 E-Mail: support@jocisland.com (Get efficienct answer within 12 hours)



Please follow the instruction manuals and use a pad to protect the product during your assembly.

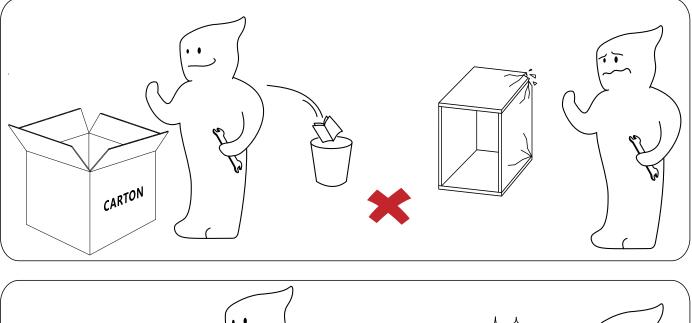

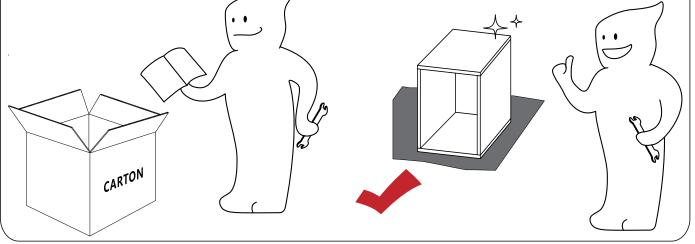

Note:


1. Should be assembled on soft surface to keep balance.





Recommend 2 or more adults for quicker assembly.



Take 2 adults about 3 hours to finish assembly.

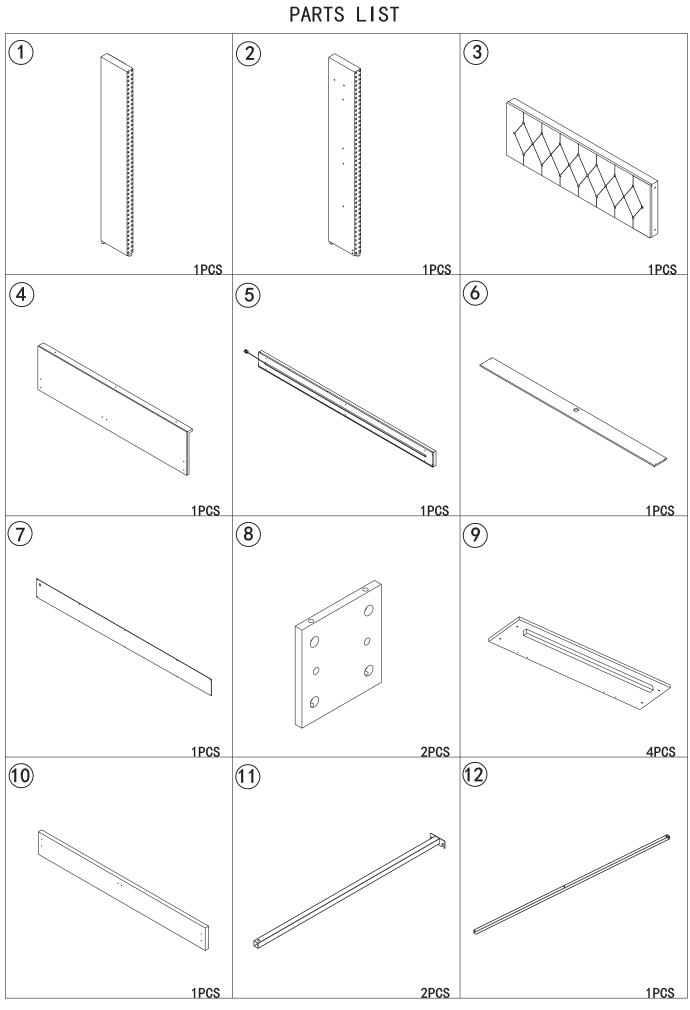

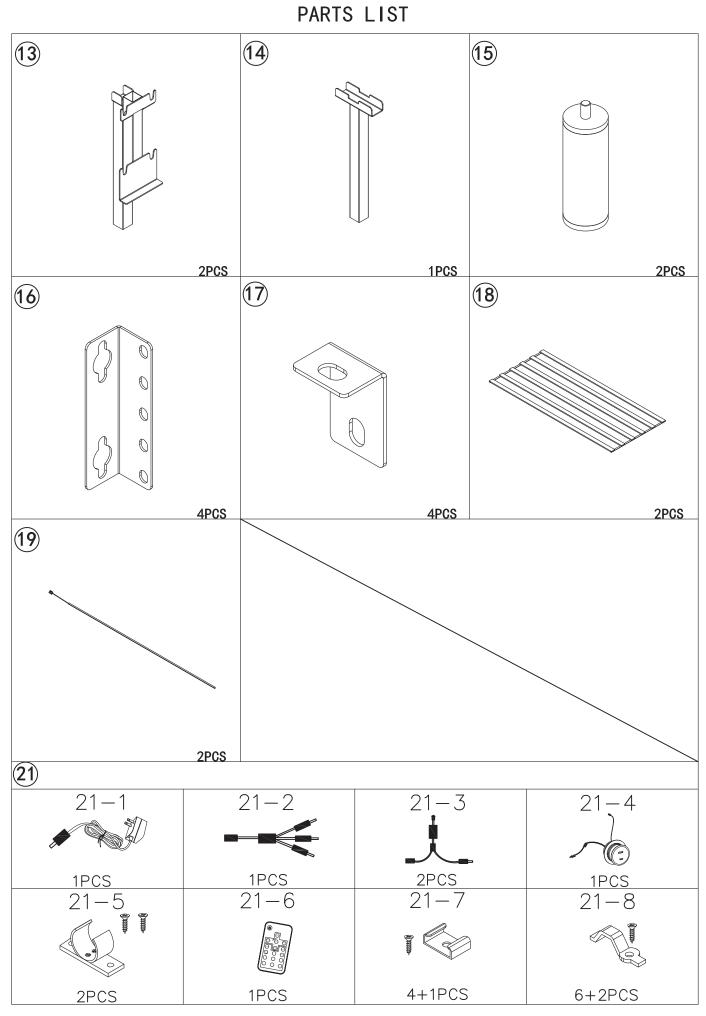


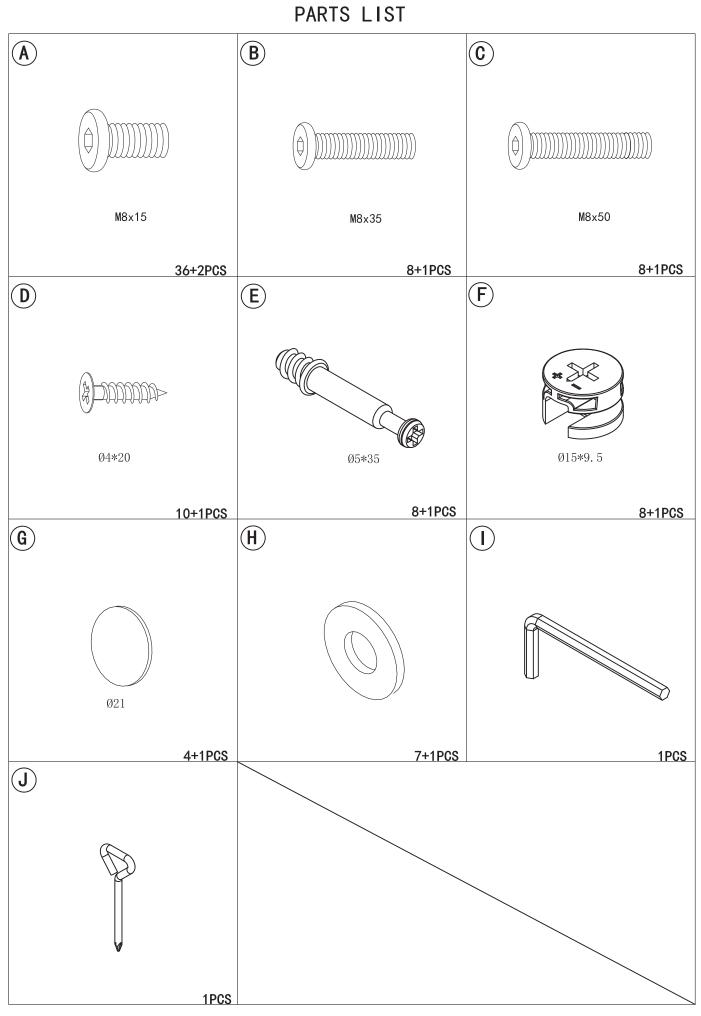

Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

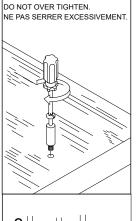

1


Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.



Push the male camlock into the entry hole.

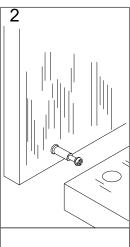


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

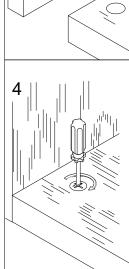


Tools required



Phillips screwdriver (medium & large)

Ruler - Use this ruler to help correctly identify the screws

10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170 0 5 hadaalaa hadaa hadaa



The screws length is measured from the head to the point (30mm screw shown).

