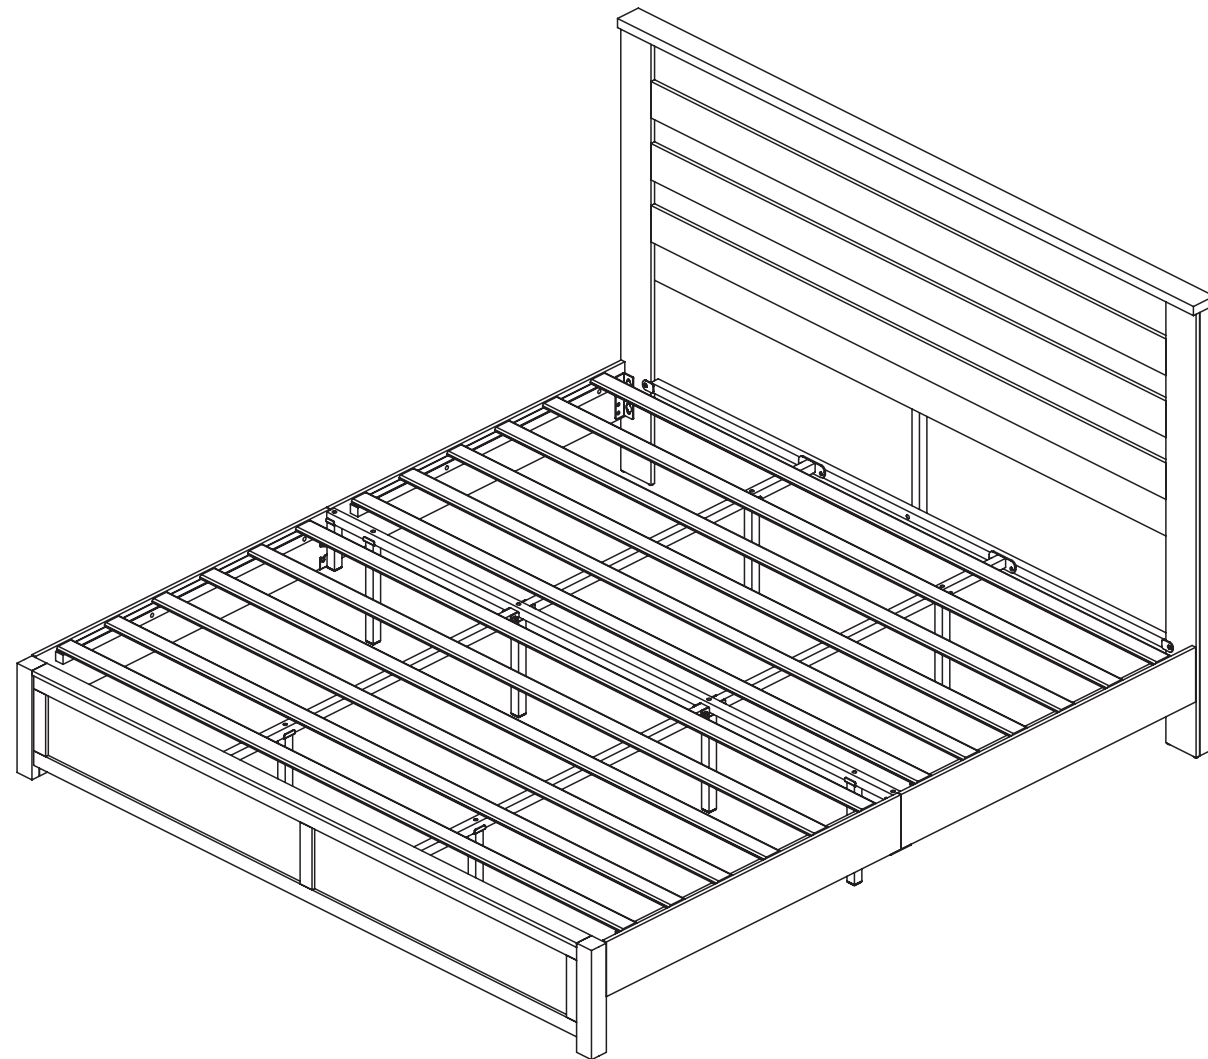


Panel Bed-K Assembly Instructions

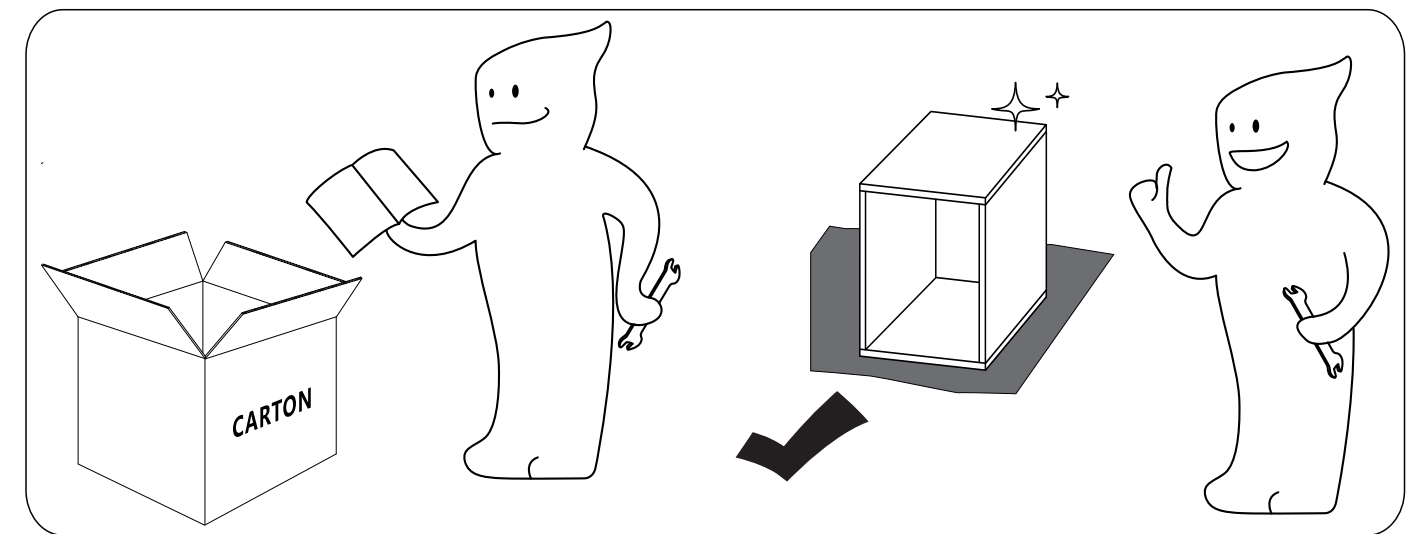
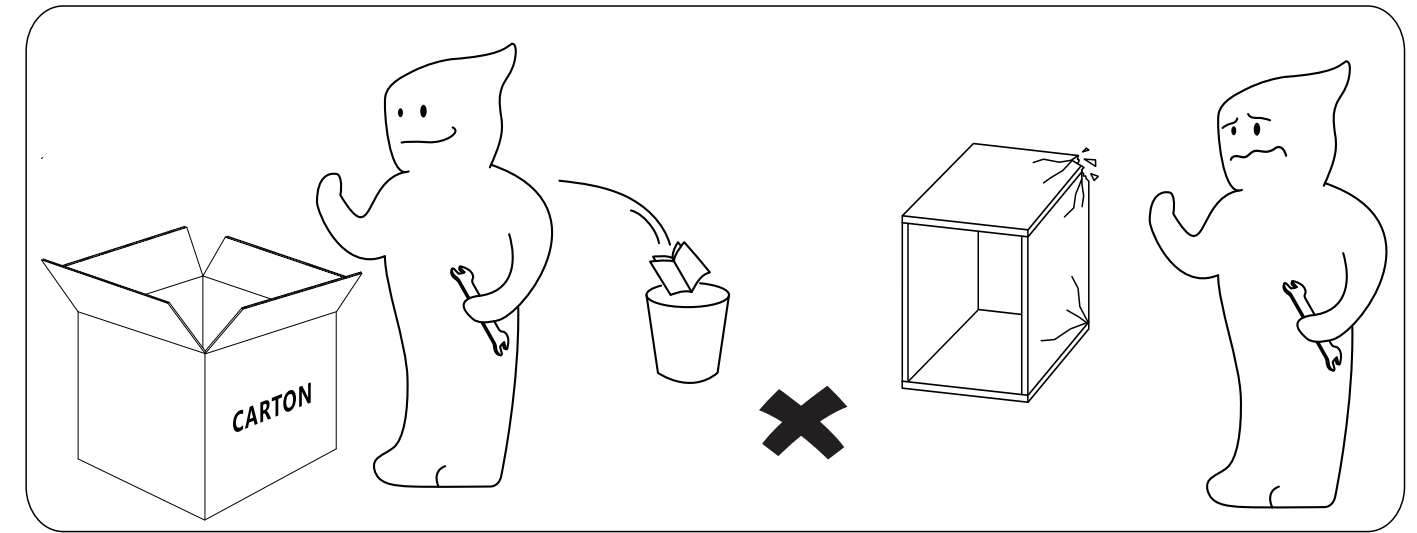


Dear Customers,

Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.
MADE IN CHINA



Please follow the instruction manuals and use a pad to protect the product during your assembly.




Note:

1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.
























For easier and better assembly, **2** or more adults are required.

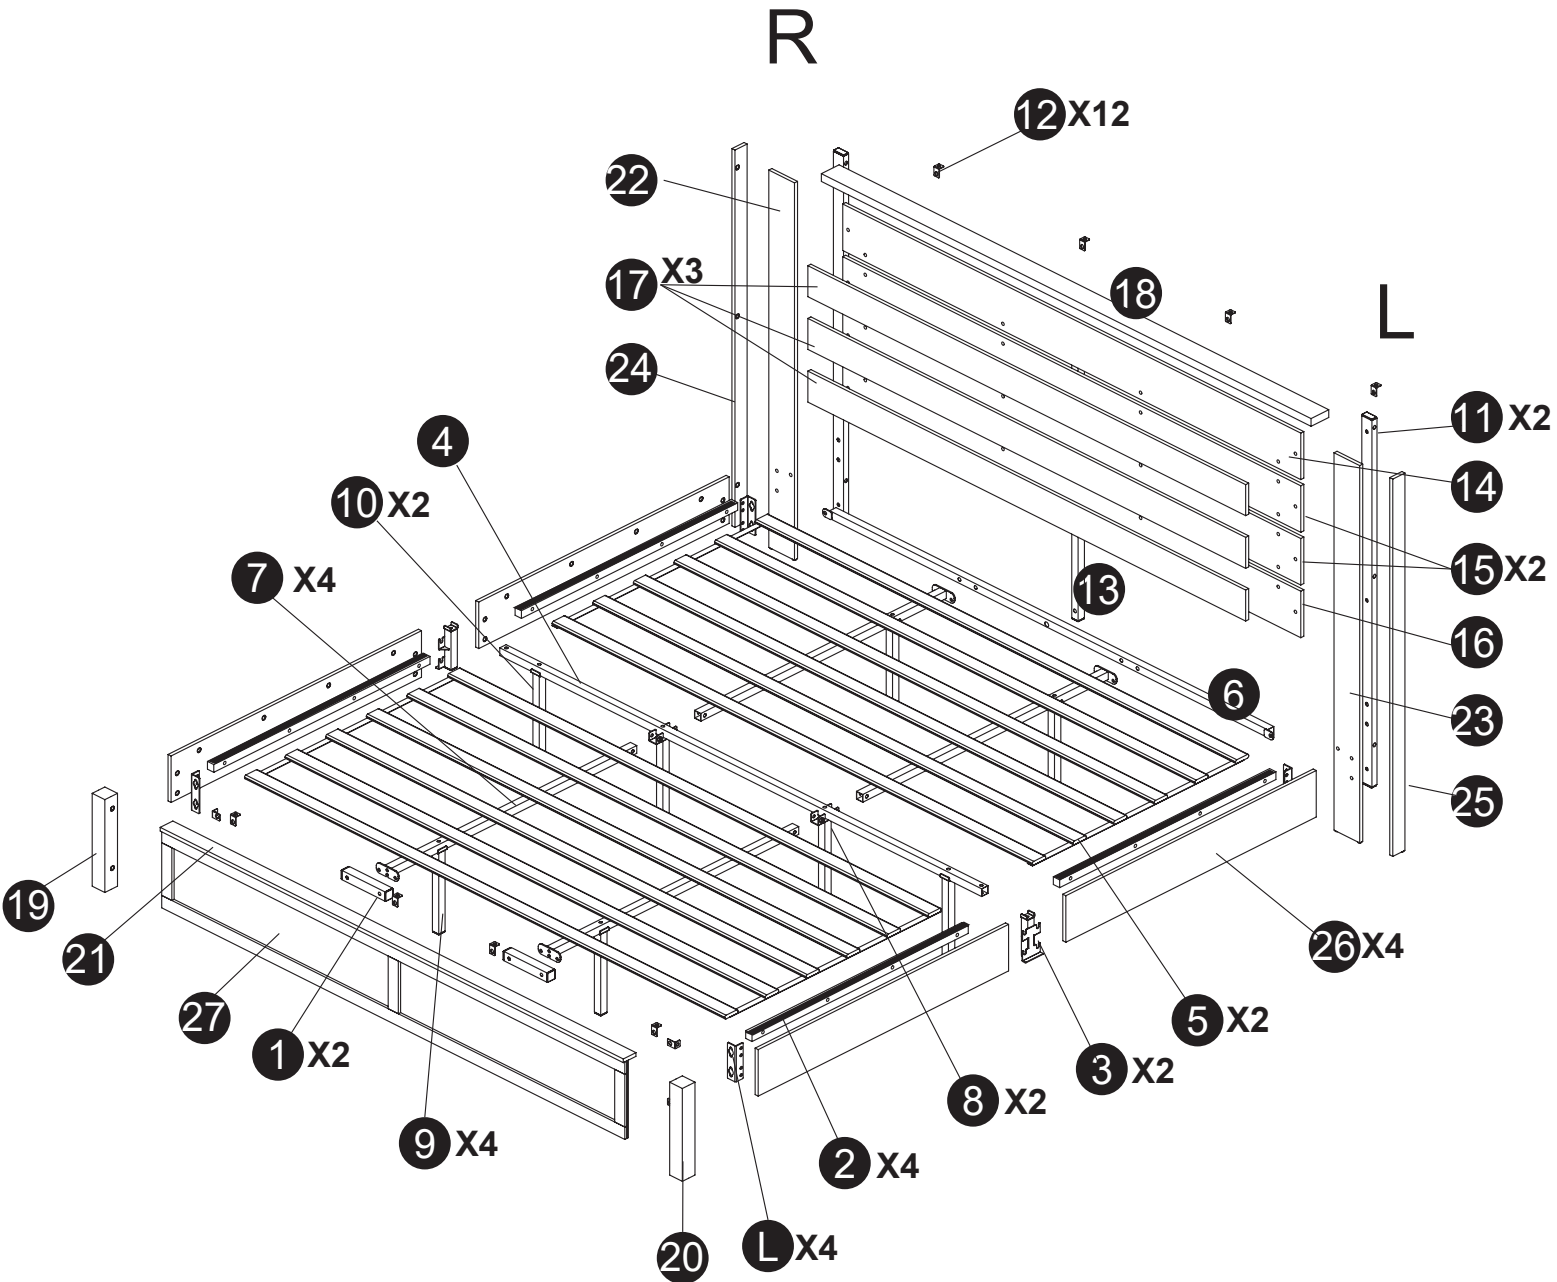ASSEMBLY INSTRUCTIONS
















ASSEMBLY INSTRUCTIONS

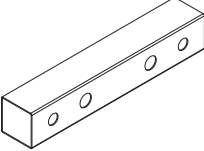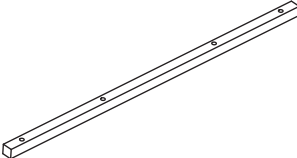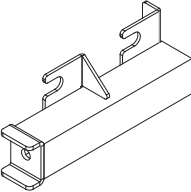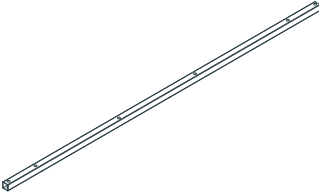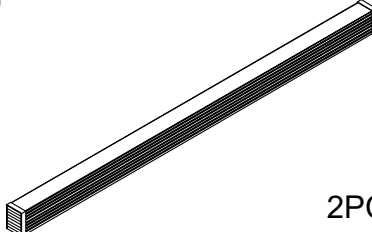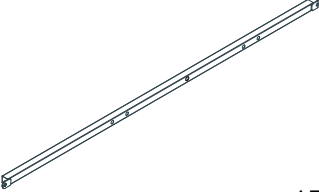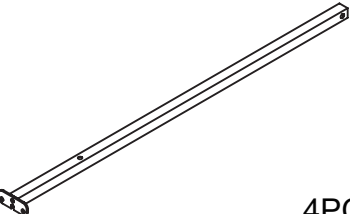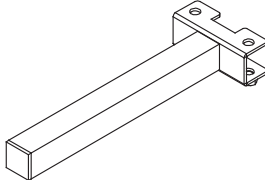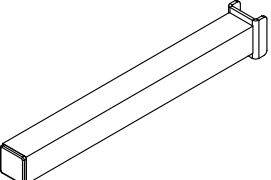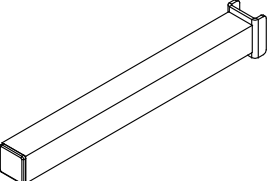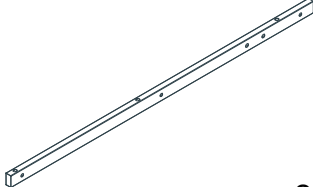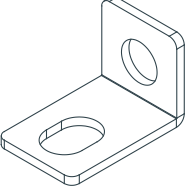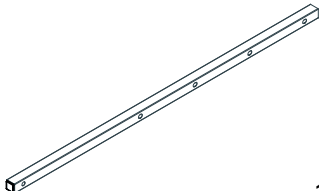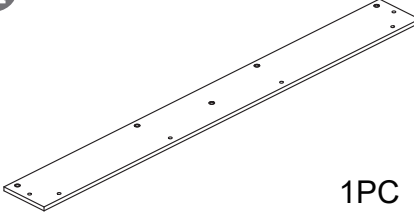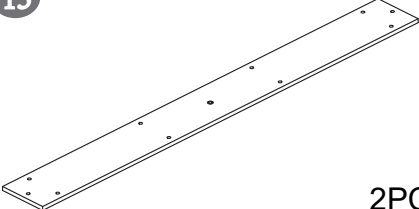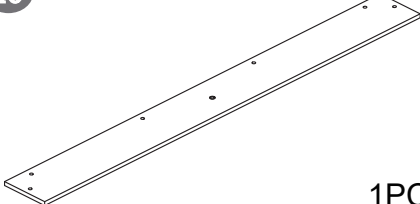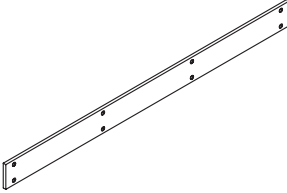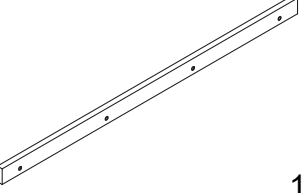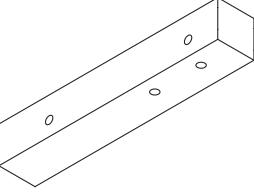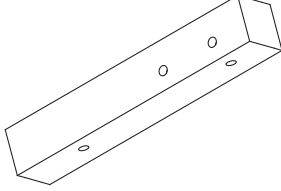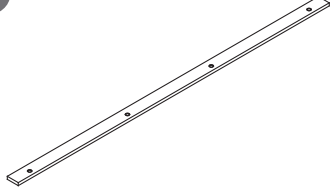PARTS LIST

1  2PCS	2  4PCS	3  2PCS
4  1PC	5  2PCS	6  1PC
7  4PCS	8  2PCS	9  4PCS
10  2PCS	11  2PCS	12  12PCS
13  1PC	14  1PC	15  2PCS
16  1PC	17  3PCS	18  1PCS
19  1PC	20  1PC	21  1PC

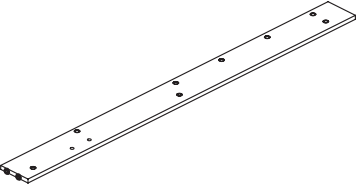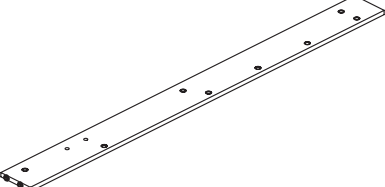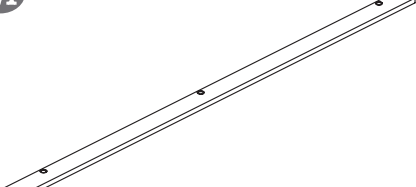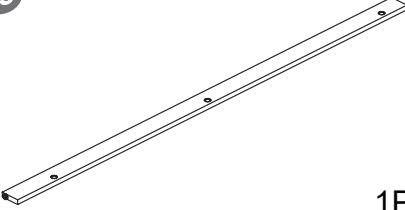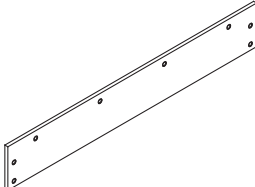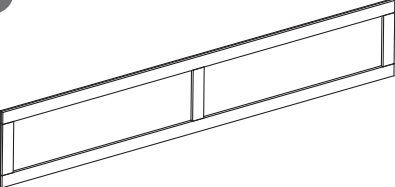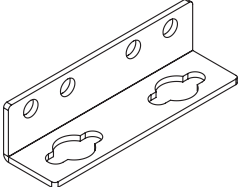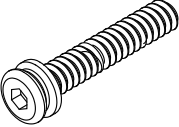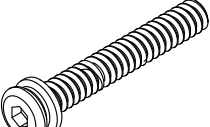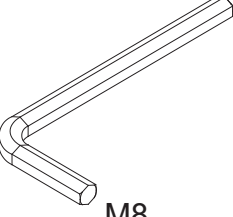
ASSEMBLY INSTRUCTIONS

22  1PC	23  1PC	24  1PC
25  1PC	26  4PCS	27  1PC
L  4PCS		
A  M8*12 42PCS	B  M8*20 40PCS	C  M8*30 6PCS
D  M8*35 Color Zinc 24PCS	E  M8*40 16PCS	F  M8*50 9PCS
G  M8*18 Color Zinc 4PCS	H  M8 1PC	

ASSEMBLY INSTRUCTIONS

1

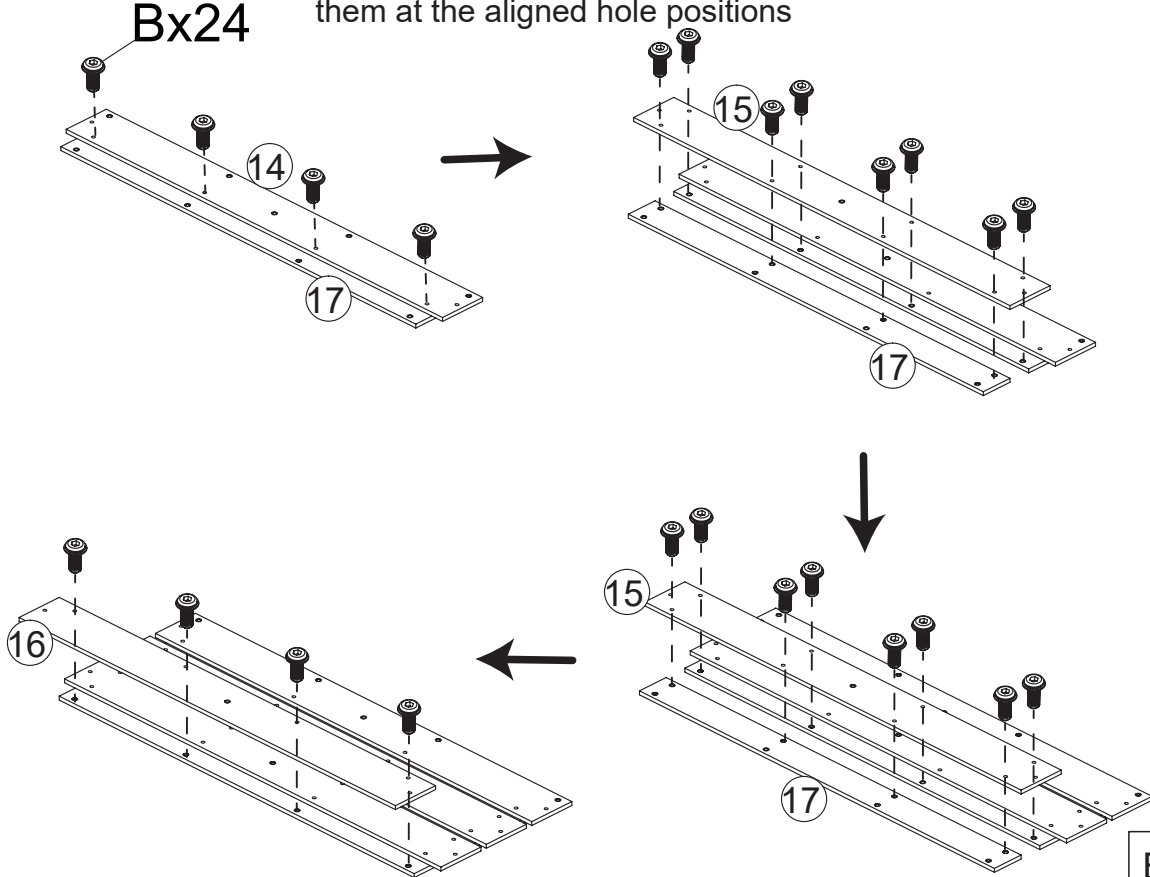Note: Before assembly, identify the part numbers and assemble them at the aligned hole positions




B



M8*20

24PCS

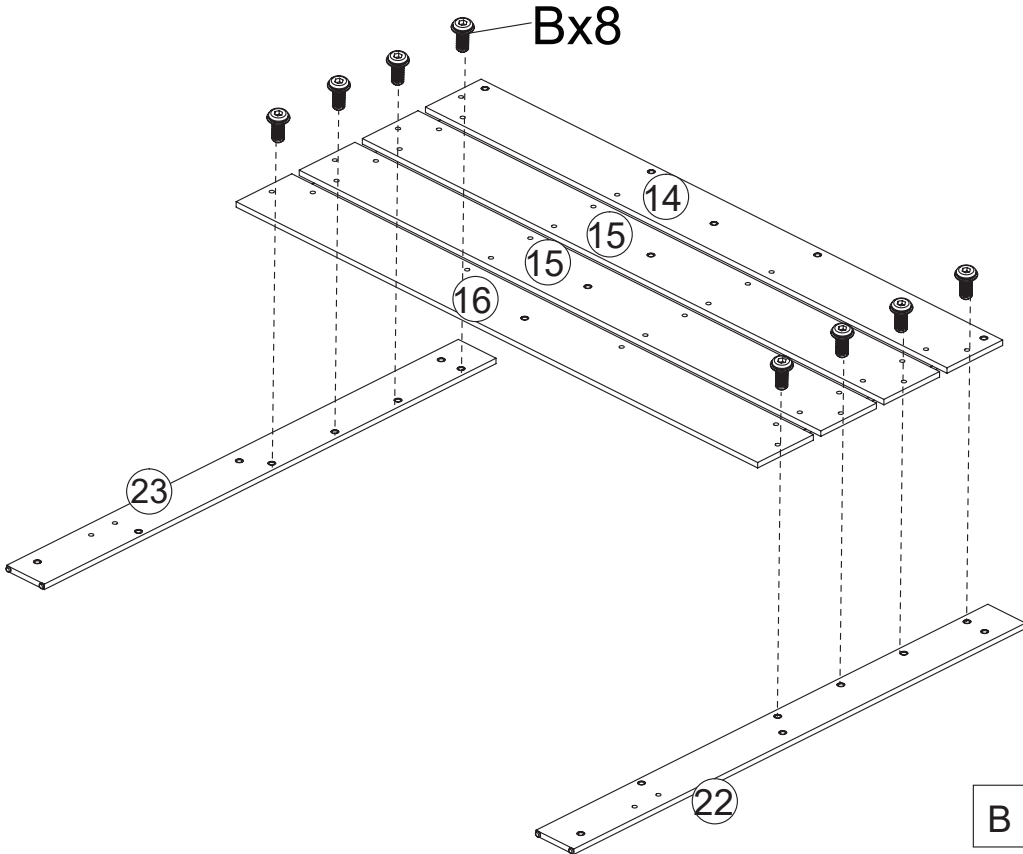2



B

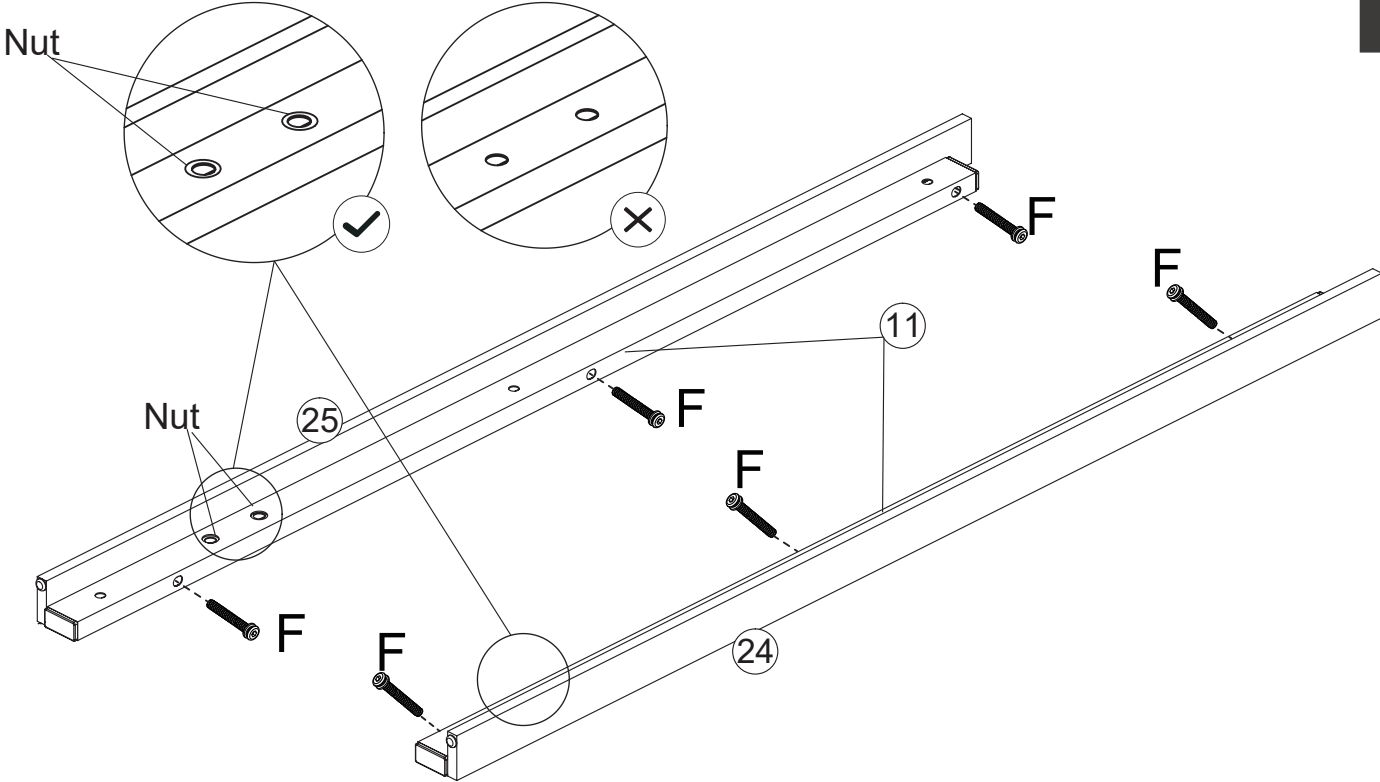


M8*20

8PCS

5/15

3




Note: Assemble with the nut facing upwards

F		M8*50	6PCS
---	--	-------	------

5

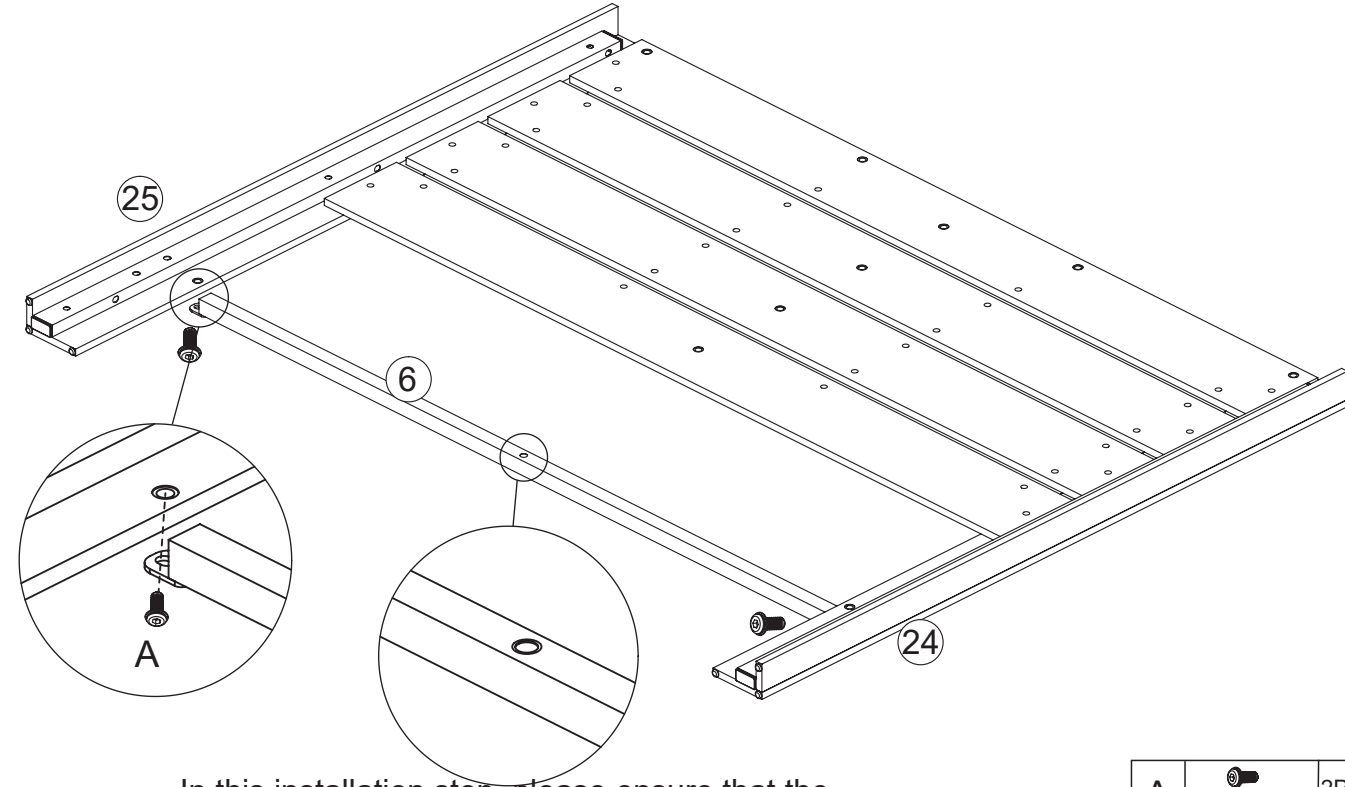
Note: Lift the wooden board to prepare for assembly



In this installation step, please ensure that the hole in the middle of component 6 is facing upward


A		M8*12	2PCS
---	--	-------	------

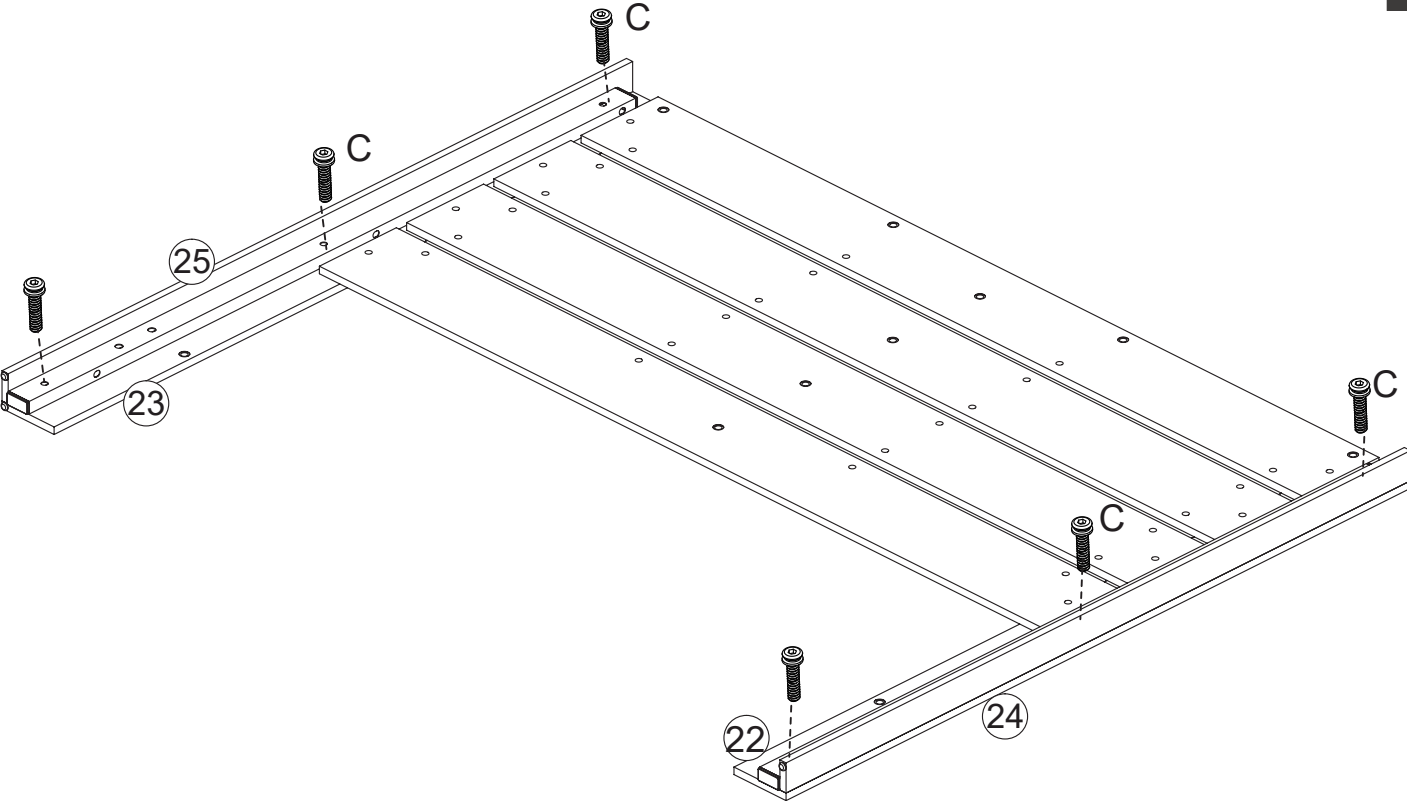4



C		M8*30	6PCS
---	---	-------	------

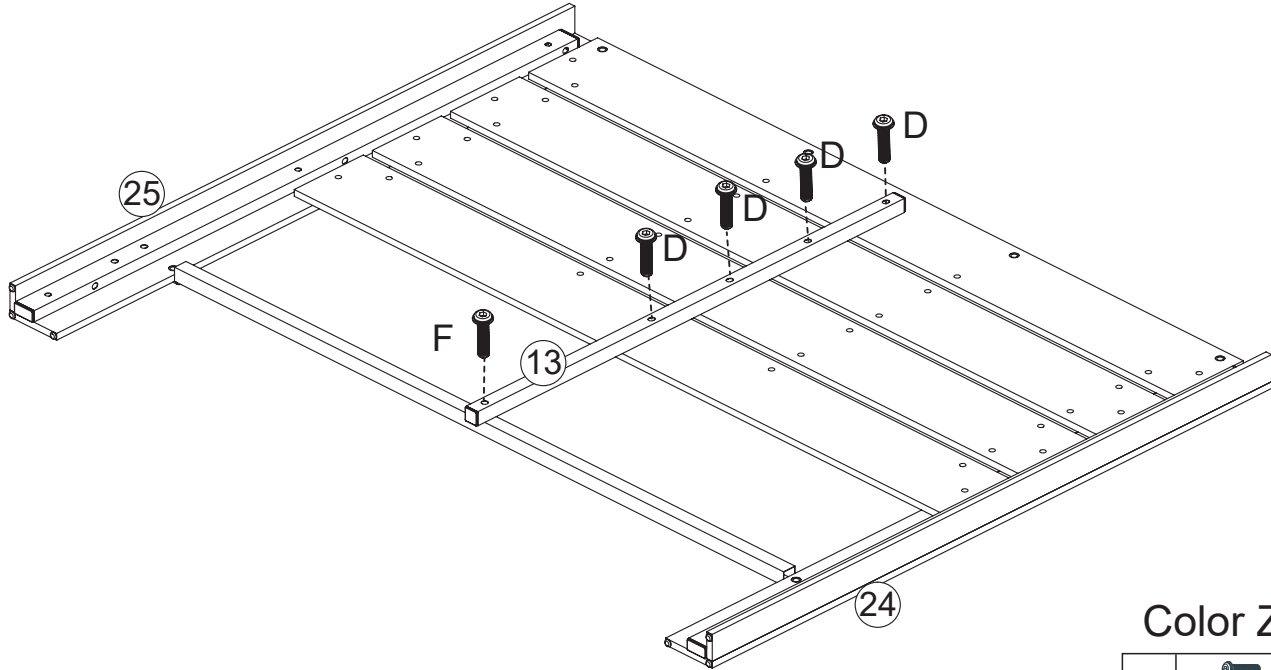6




Color Zinc			
D		M8*35	4PCS
F		M8*50	1PCS

ASSEMBLY INSTRUCTIONS

In this installation step, please ensure that the side of component 18 with the hole positioned closer is facing upward

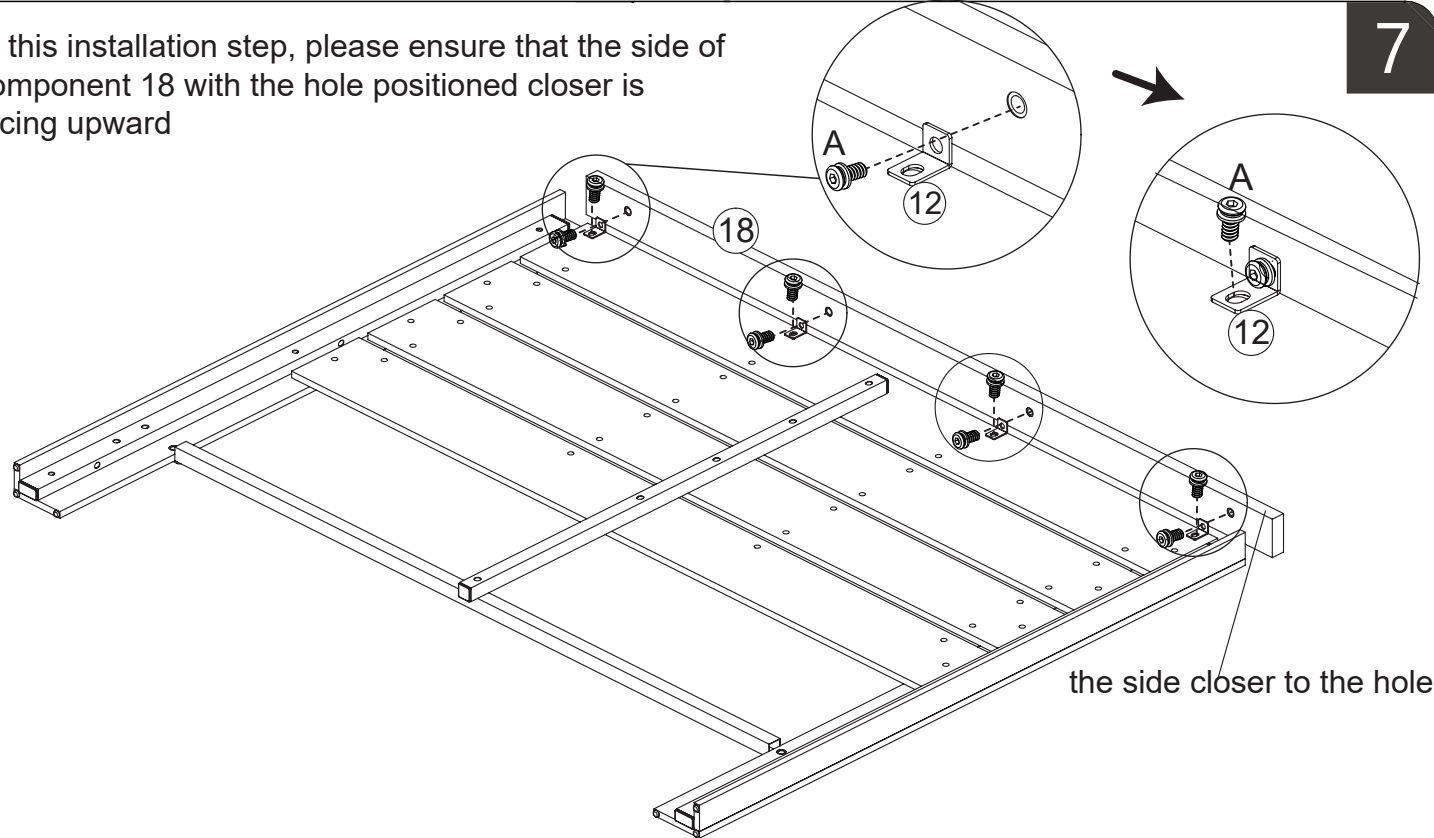
7



A		M8*12	8PCS
---	--	-------	------

In this installation step, please ensure that the side of component 21 with the hole positioned closer is facing upward

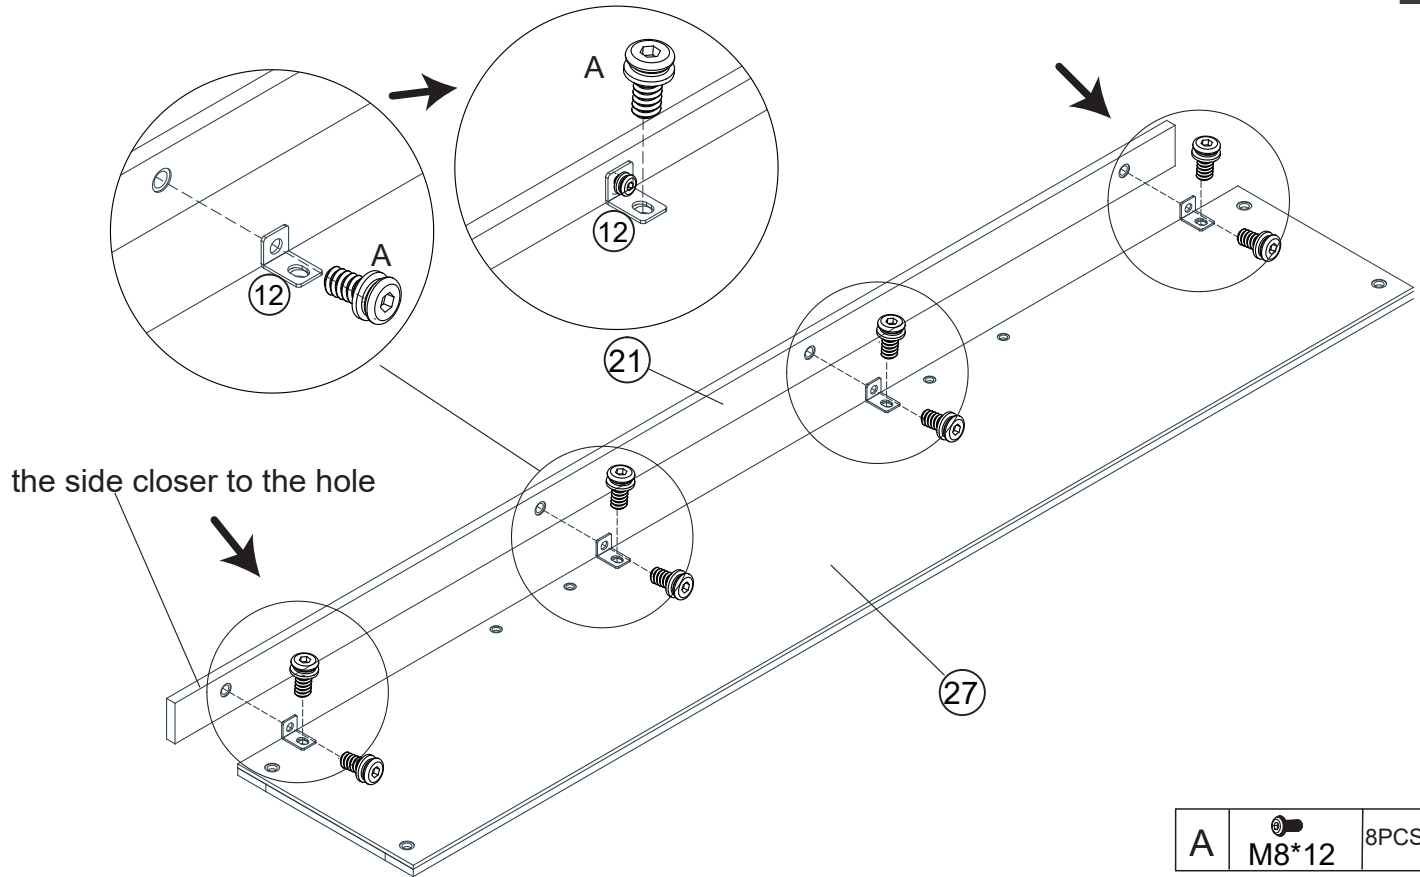
8



A		M8*12	8PCS
---	---	-------	------


ASSEMBLY INSTRUCTIONS

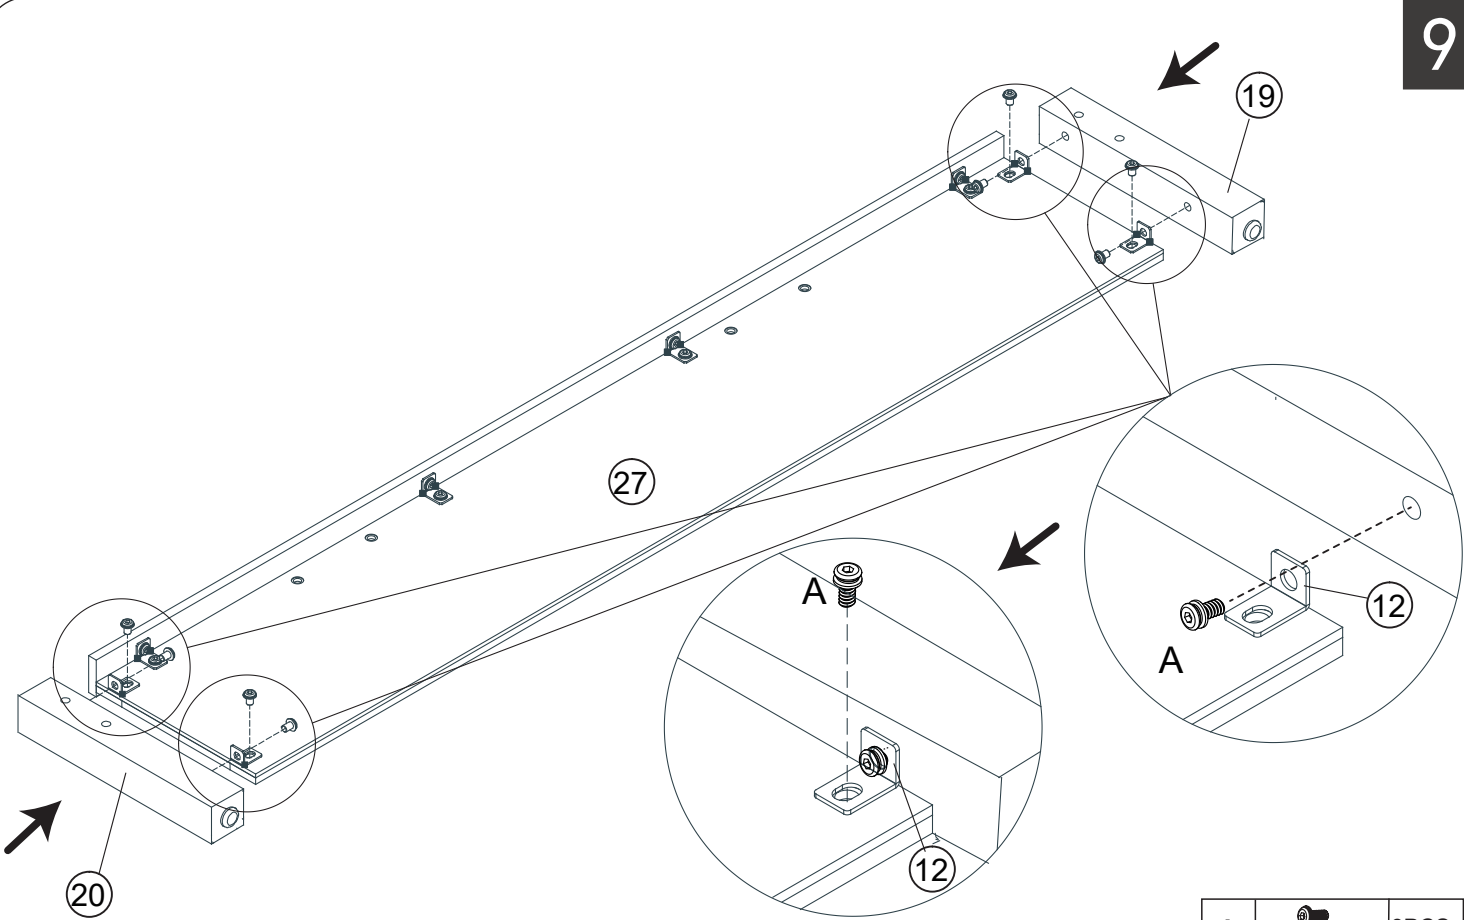9



A		M8*12	8PCS
---	--	-------	------

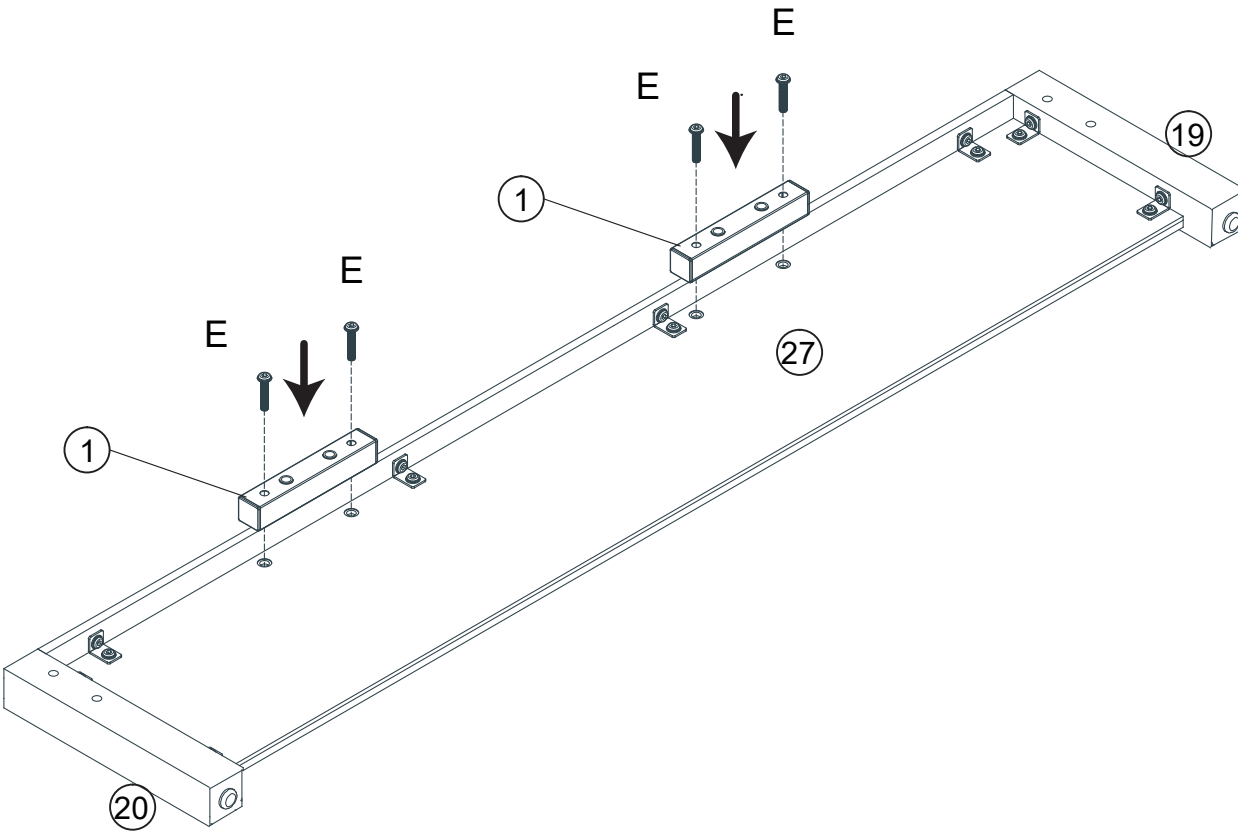10



E		M8*40	4PCS
---	---	-------	------

ASSEMBLY INSTRUCTIONS

11

A	M8*12	16PCS
---	-------	-------

12

Screw in the screw G to about 50%, then hang the bracket on and finally tighten the screw G.

G	M8*18	4PCS
---	-------	------

ASSEMBLY INSTRUCTIONS

13




Screw in the screw D to about 50%, then hang the bracket on and finally tighten the screw D

D	M8*35	4PCS
---	-------	------

14


Nylon Fastener

D	M8*35	16PCS
---	-------	-------

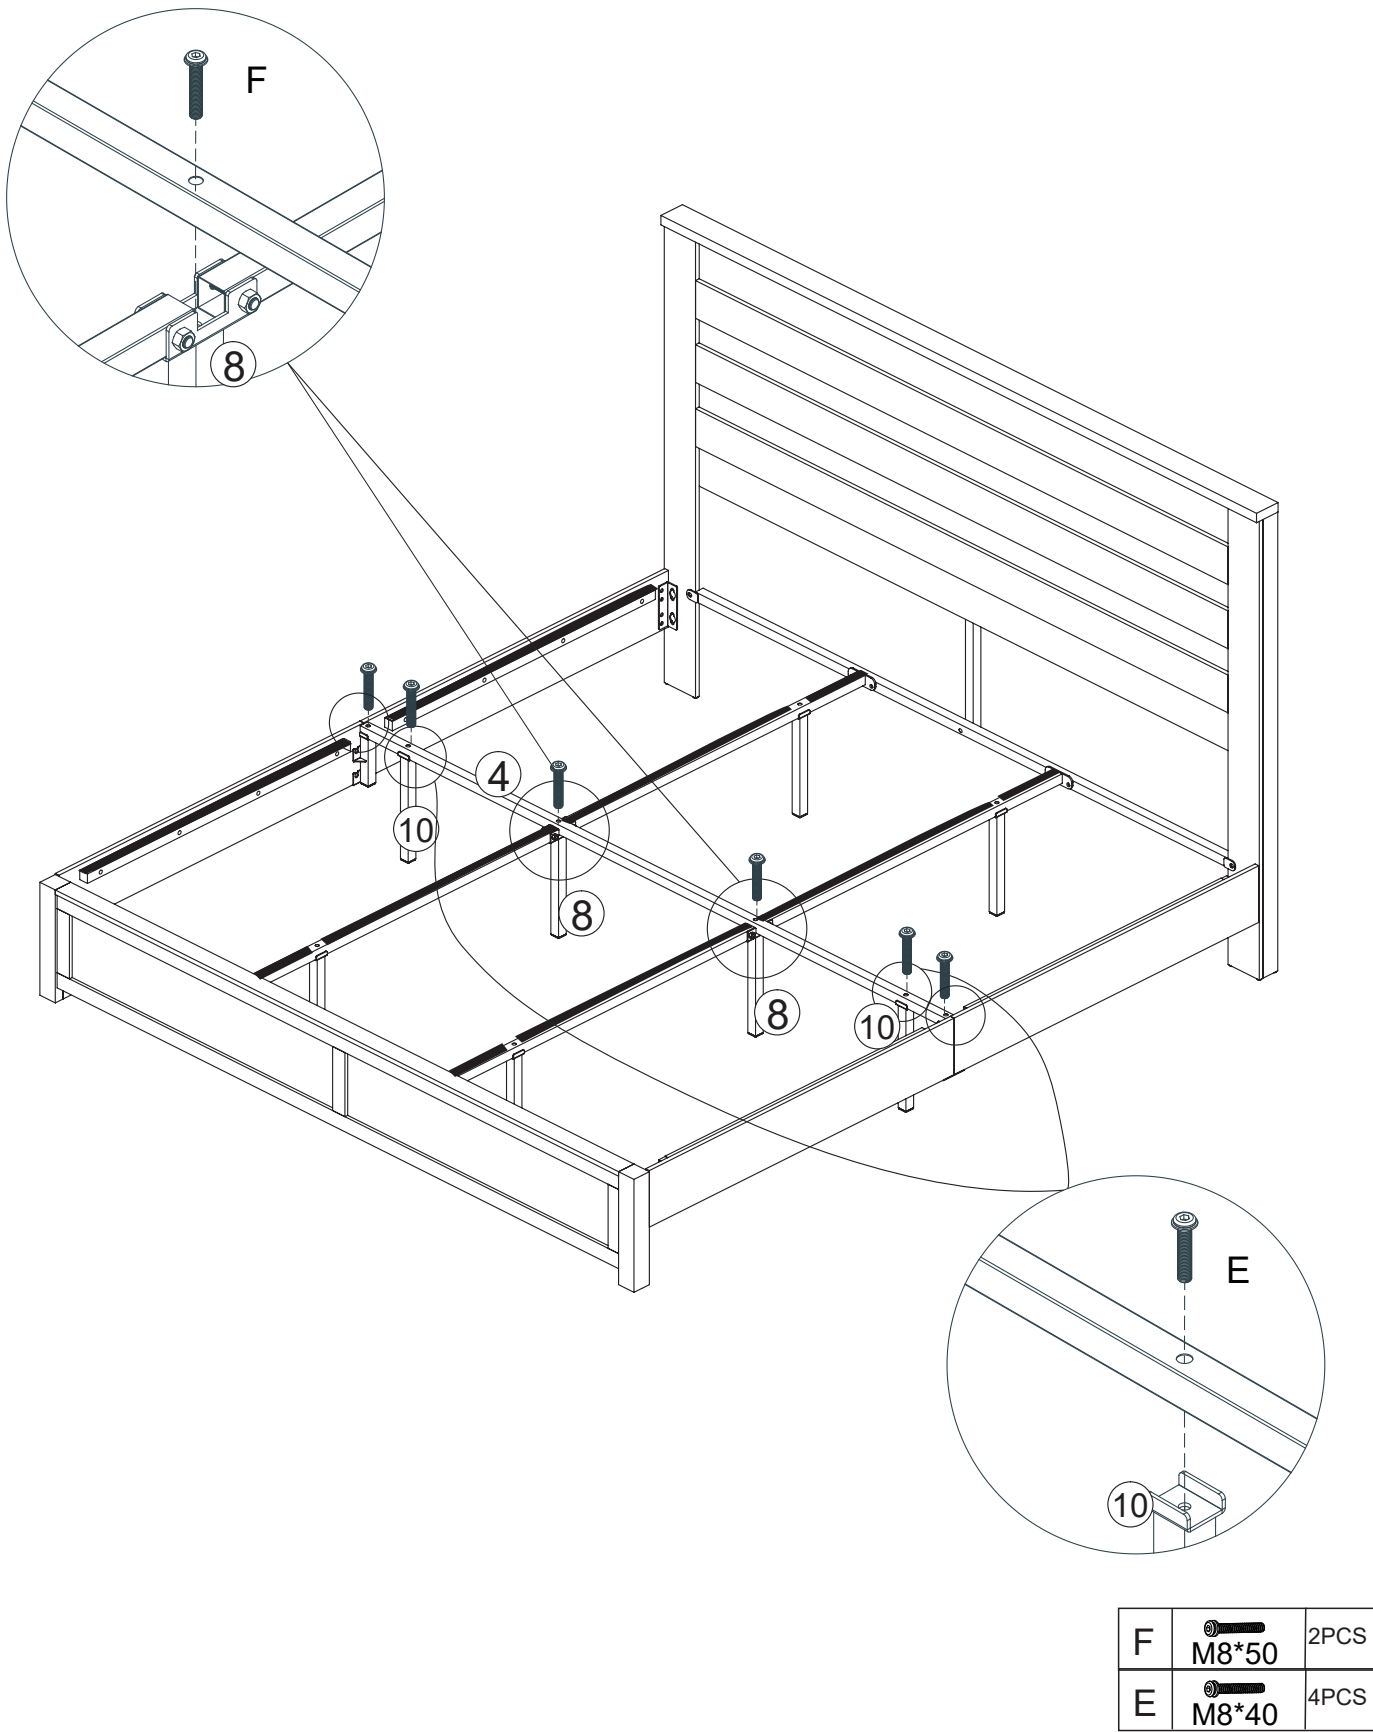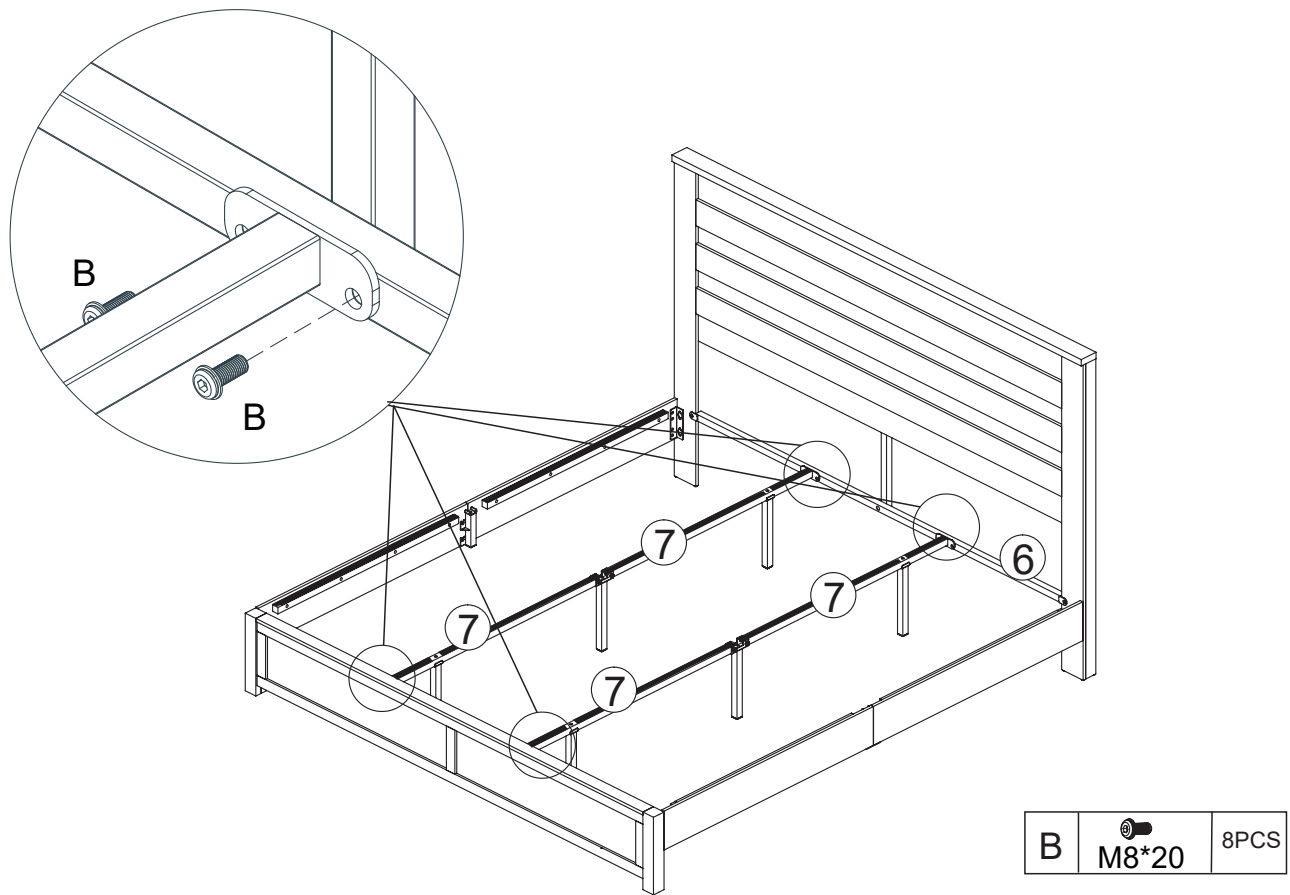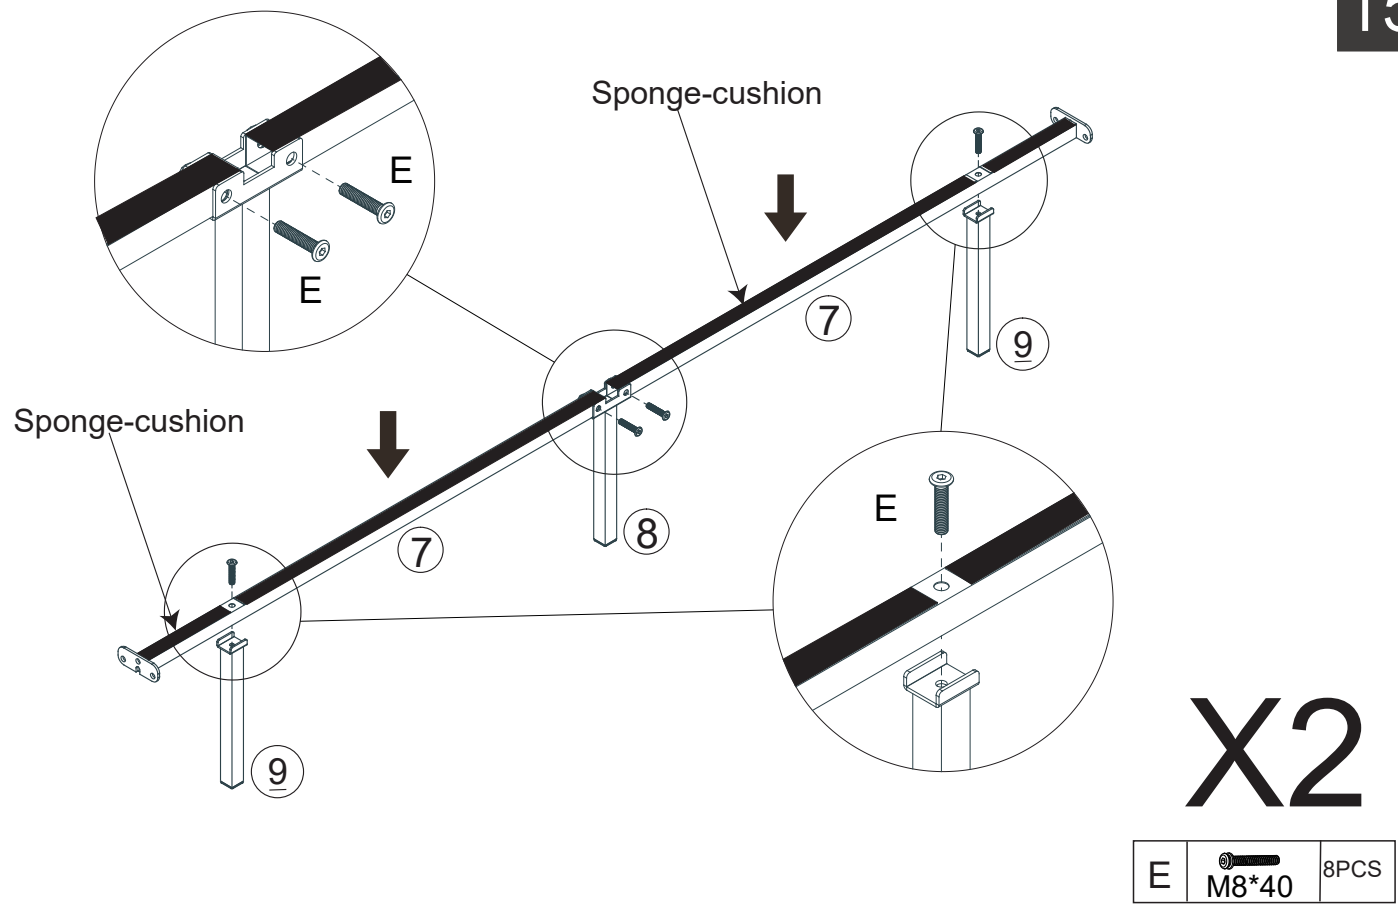


18

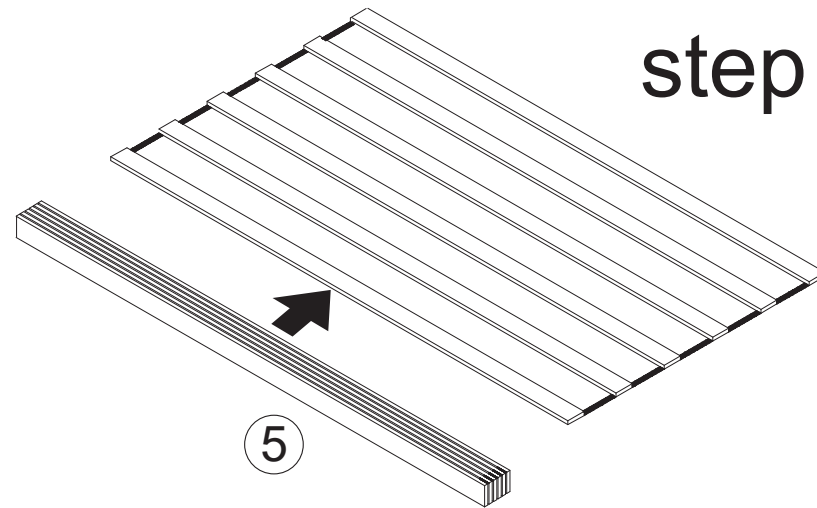
step 1



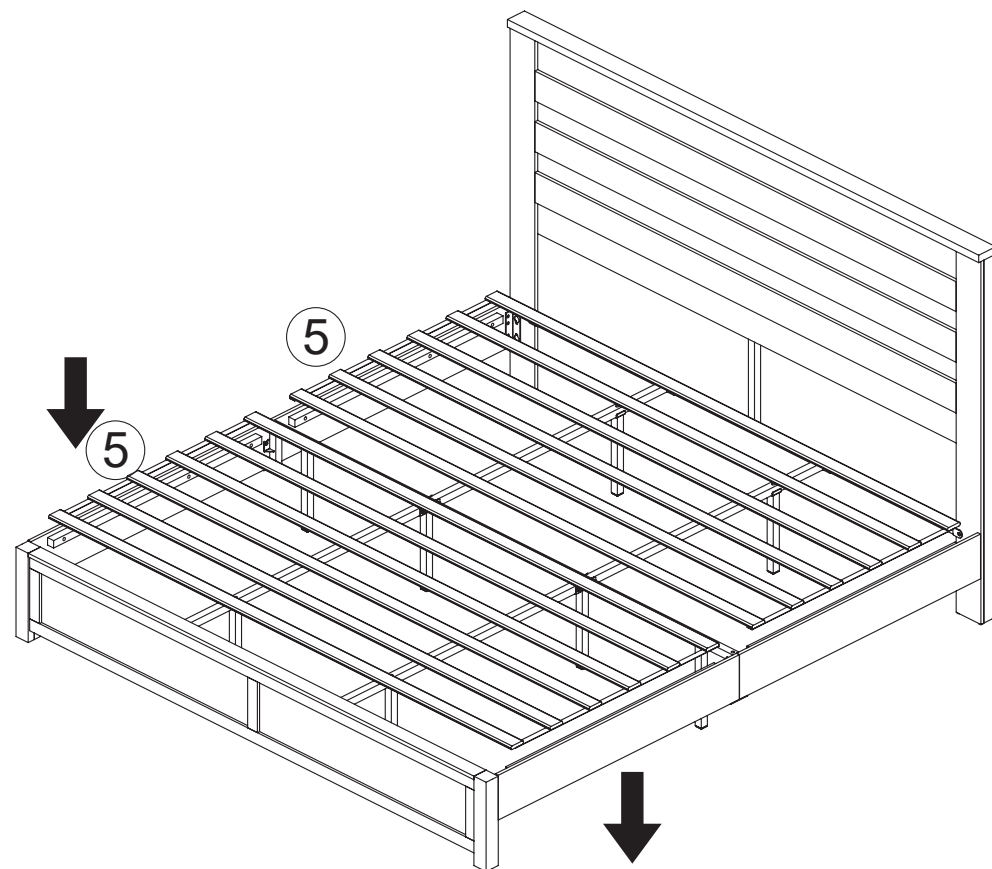step 2



19

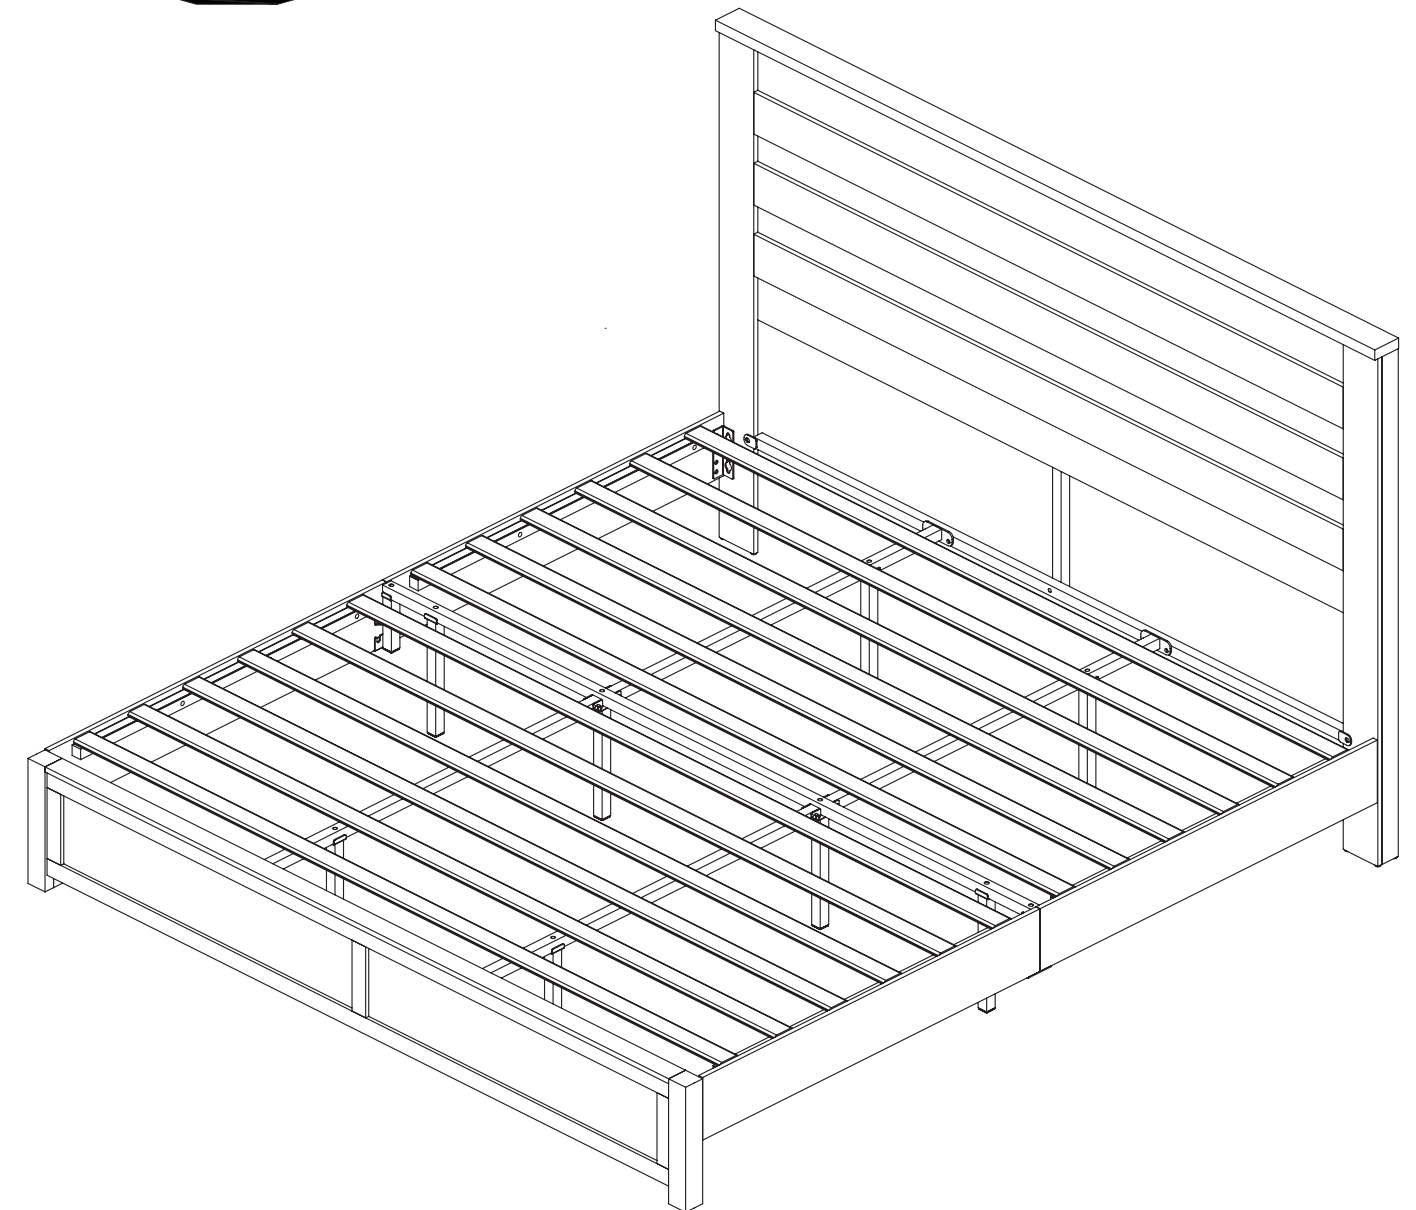

Installation Complete