


Bed

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

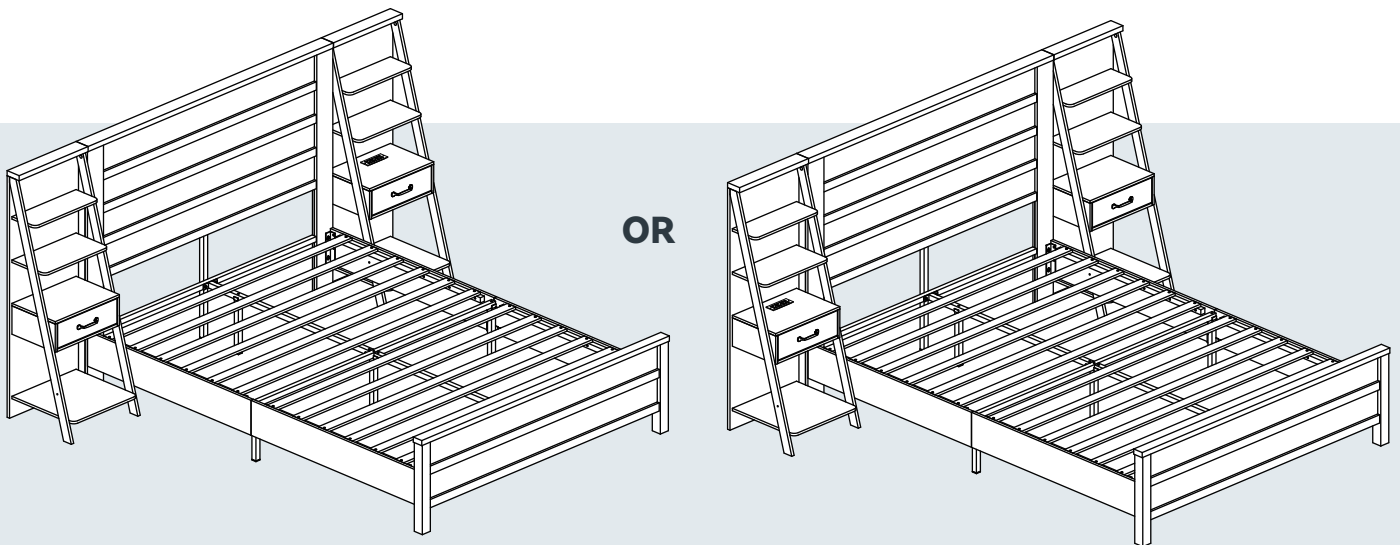

Arrive in 2 separate boxes and may not be part of the same shipment;
Please install the product after receiving all the packages.

Dimensions

Width-85.2 inch
Depth-94 inch
Height-47.2 inch

CONTACT US

- **Email: service@grandtunnel.com**
In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

Important – Please read these instructions carefully before starting the installation.

EN



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)

Do not allow children to climb or hang on the furniture

Do not open more than one drawer at a time

Do not place heavy items in the top drawers

Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type

CUSTOMER SERVICE GUIDE

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6x30mm screws.”

Contact Us:

· By Email:

Send an email to service@grandtunnel.com, with the subject line “Missing Parts Issue.” Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with other details to service@grandtunnel.com, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: service@grandtunnel.com).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

- Customer Service Email: service@grandtunnel.com

Helpful Tips

To process your issue efficiently, please prepare the following information:















- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

Thank you for your trust and support! We hope you enjoy using our product!

Parts List - Fittings(in Box 1)

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

A  6*30mm Wooden Dowel x 55	B  6*35mm Cam Bolt x 76	C  Cam Lock x 76
D  8*40mm Wooden Dowel x 4	E  3*12mm Screw x 58	F  4*30mm Screw x 60
G  4*25mm Screw x 28	H  4*35mm Screw x 24	I  6*12mm Bolt x 24
J  6*25mm Bolt x 12	K  6*30mm Bolt x 12	L  6*35mm Bolt x 13
M  6*75mm Bolt x 1	N  x 2	O  4*16mm Bolt x 4
P  x 2	Q  x 6 Ø 20mm	R  x 1 M4
S  x 1 M10	T 240mm  x 4 = x 4 + x 4	U  x 1
V  x 4	W  x 4	X  x 6
Y  6*40mm Wooden Dowel x 6	Z  x 1	a  x 4

Tools required



Phillips screwdriver
(medium & large)

Ruler - Use this ruler to help correctly identify the screws

mm

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170



The screws length is measured from the head to the point (30mm screw shown).


0 1 2 3

inch

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

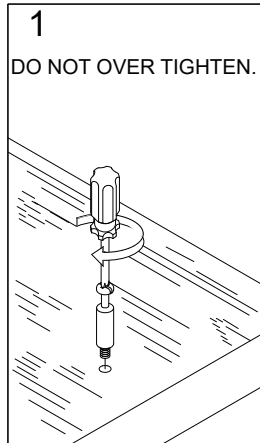

Step 2


Push the male camlock into the entry hole.

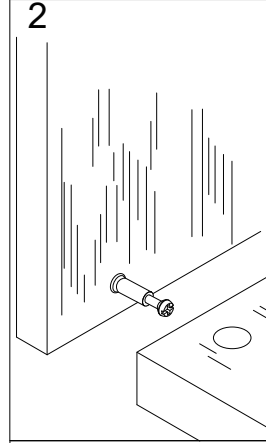

Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

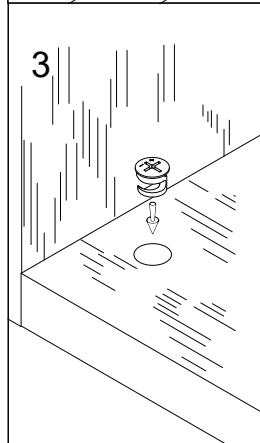


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

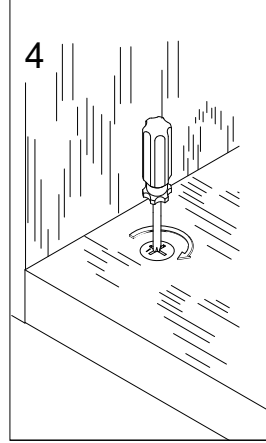


Parts List - Panels(Box 1)


Please check you have all the panels listed below

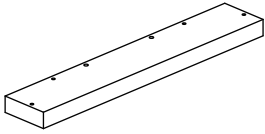


1 (430x75x25mm x2)




6 (400x145x12mm x2)




7 (400x205x12mm x2)

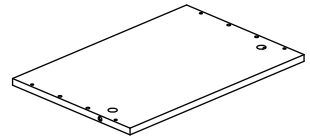


8 (400x270x12mm x1)

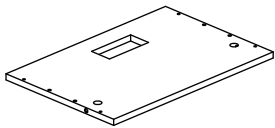


10 (400x270x12mm x1)

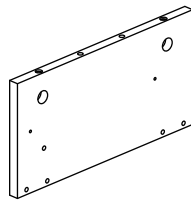


11 (270x138x12mm x2)

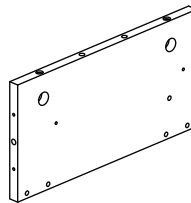


12 (270x138x12mm x2)

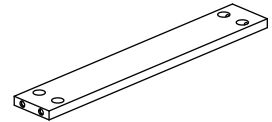


13 (377x60x12mm x4)

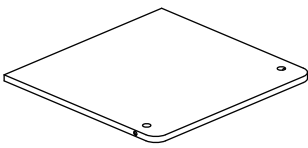


14 (400x385x12mm x2)

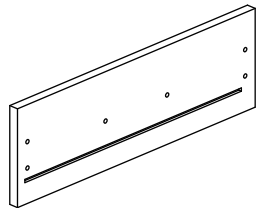


15(370x122x12mm x2)

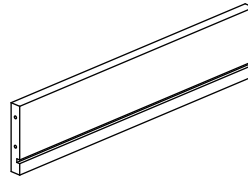


16(327x75x12mm x1)

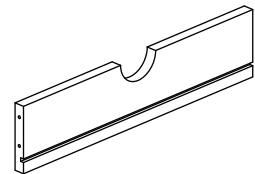


17 (327x75x12mm x1)

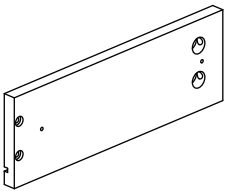


18 (250x85x12mm x2)

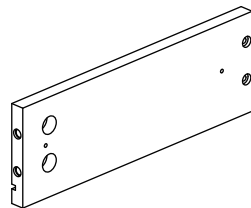


19 (250x85x12mm x2)

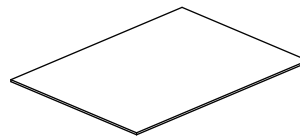


20 (335x245x3mm x2)

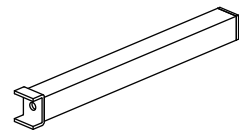


32 (275x30x25mm x2)

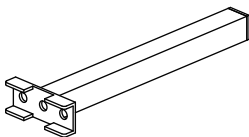


33 (275x80x30mm x1)

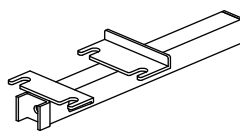

34 (275x85x38mm x2)

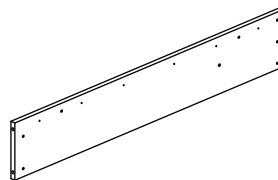


35 (1020x170x15mm x1)

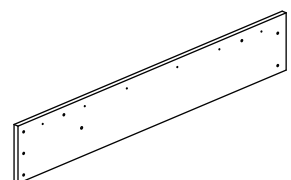


36(1020x170x15mm x1)

Parts List - Panels(Box 1)


Please check you have all the panels listed below

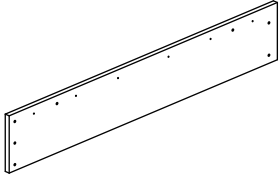


37 (1020x170x15mm x1)

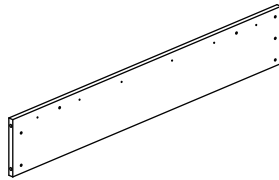


38 (1020x170x15mm x1)

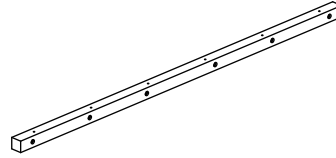


39 (900x28x25mm x4)

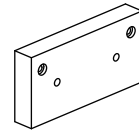

40 (120x60x18mm x1)

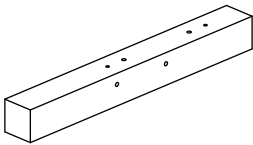


42 (436x50x50mm x1)

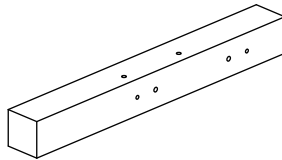


43 (436x50x50mm x1)

Parts List - Panels(Box 2)


Please check you have all the panels listed below

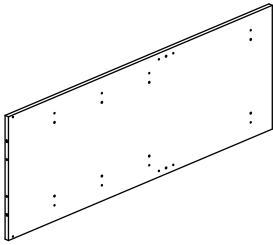


2 (1175x430x17mm x1)

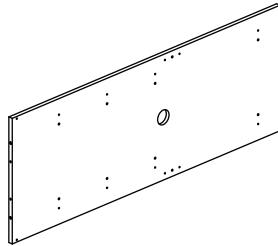


3 (1175x430x17mm x1)

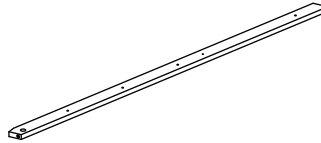


4 (1236x45x15mm x2)

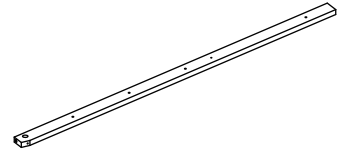


5 (1236x45x15mm x2)

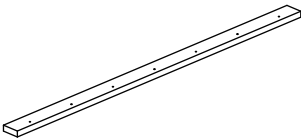


21 (1530x75x25mm x1)

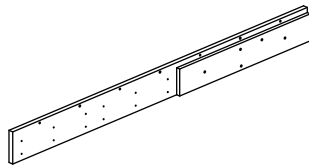


22 (1175x100x27mm x1)

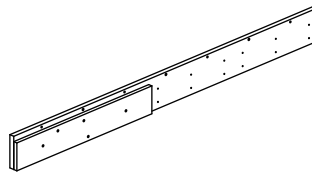


23 (1175x100x27mm x1)

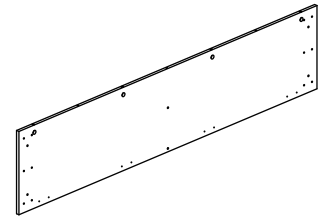


24 (1498x327x24mm x1)

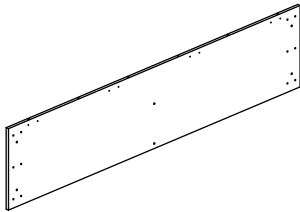


25 (1498x327x24mm x1)

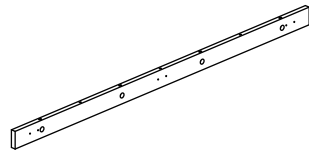


26 (1175x55x15mm x2)

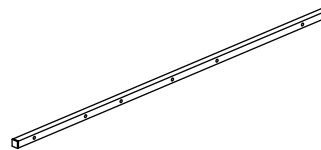


27 (1168x20x20mm x2)

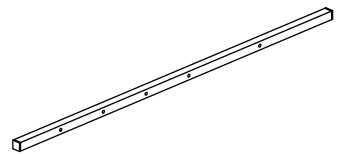


28 (1172x25x25mm x1)

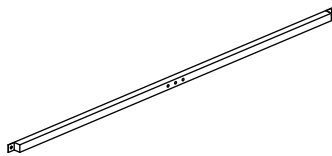


29 (1380x25x25mm x1)

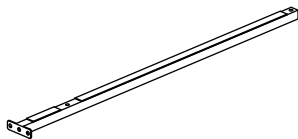


30 (1007x25x25mm x2)

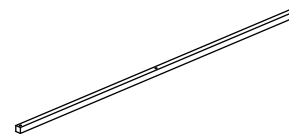


31 (1494x25x25mm x1)

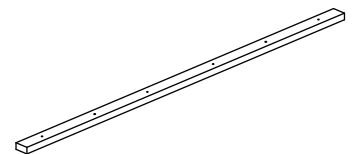

41 (1544x53x25mm x1)

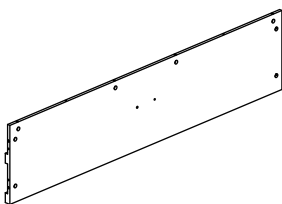

44 (1434x327x24mm x1)

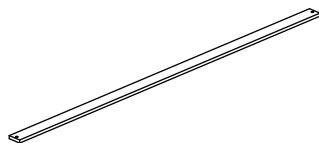

45 (1497x53x12mm x12)

Assembly Instructions

Part A


This diagram illustrates the exploded view of Part A, which is a rectangular frame or enclosure. The components are numbered 1 through 18:

- 1**: A small horizontal rectangular piece.
- 2**: A large vertical rectangular panel with a grid of small holes.
- 3**: A small horizontal rectangular piece, identical to component 1.
- 4**: A long, thin vertical rectangular piece.
- 5**: A long, thin vertical rectangular piece, identical to component 4.
- 6**: A small horizontal rectangular piece, identical to component 1.
- 7**: A small horizontal rectangular piece, identical to component 1.
- 8**: A small horizontal rectangular piece, identical to component 1.
- 9**: A small horizontal rectangular piece, identical to component 1.
- 10**: A small horizontal rectangular piece, identical to component 1.
- 11**: A small horizontal rectangular piece, identical to component 1.
- 12**: A small horizontal rectangular piece, identical to component 1.
- 13**: A small horizontal rectangular piece, identical to component 1.
- 14**: A small horizontal rectangular piece, identical to component 1.
- 15**: A small horizontal rectangular piece, identical to component 1.
- 16**: A small horizontal rectangular piece, identical to component 1.
- 17**: A small horizontal rectangular piece, identical to component 1.
- 18**: A small horizontal rectangular piece, identical to component 1.

Part B

This diagram illustrates the exploded view of Part B, showing the following components:

- 1: A small rectangular piece.
- 3: A large rectangular panel with a central circular feature and four small circular holes.
- 4: A long, thin rectangular piece.
- 5: A long, thin rectangular piece.
- 6: A small rectangular piece.
- 7: A small rectangular piece.
- 10: A small rectangular piece.
- 11: A small rectangular piece.
- 12: A small rectangular piece.
- 13: A small rectangular piece.
- 14: A small rectangular piece.
- 15: A small rectangular piece.
- 17: A small rectangular piece.
- 18: A small rectangular piece.
- 19: A small rectangular piece.
- 20: A small rectangular piece.

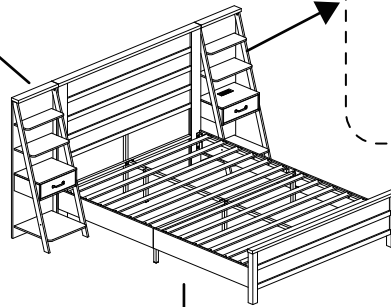

Part C


Exploded view diagram of Part C, showing various components numbered 21 through 45. The components include long horizontal rails, vertical posts, and smaller connectors. The diagram shows how these parts are assembled into a larger structure.

Assembly Instructions




Assembly Park A

Left shelf

See relevant pages 9 to 20

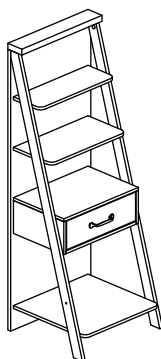

Step 1

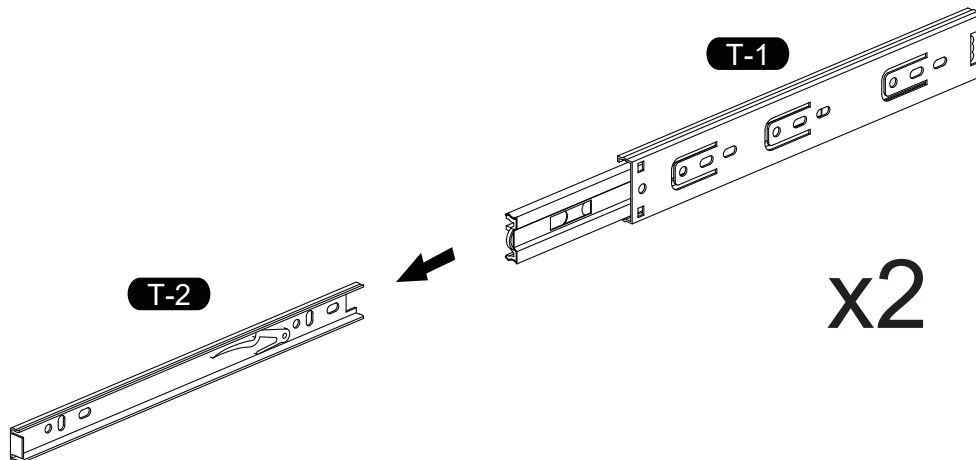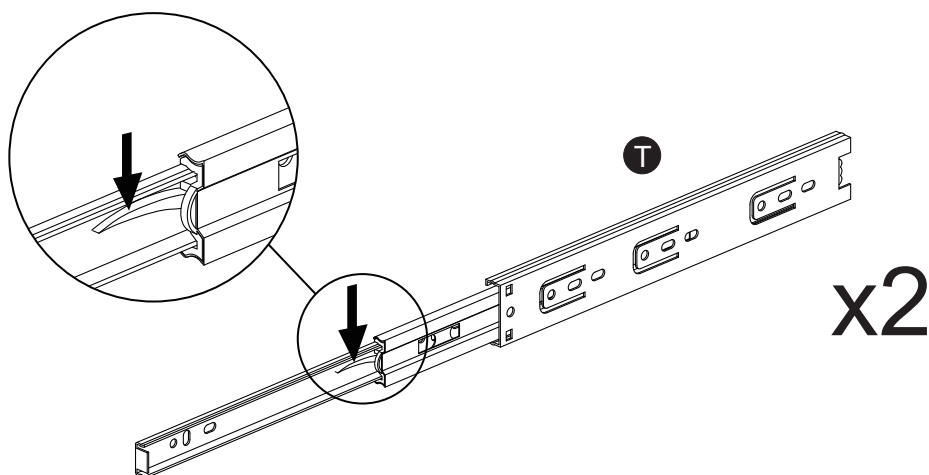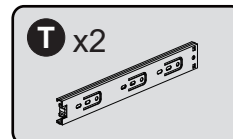



As shown in the picture: press the rail switch to split rail T into T-1 and T-2.

Assembly Instructions


Step 2

CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

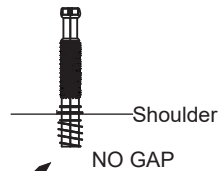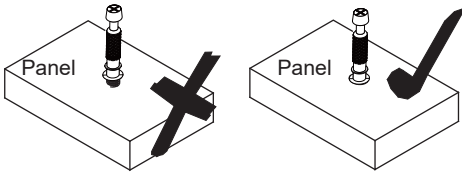







B x8



E x4



T x2

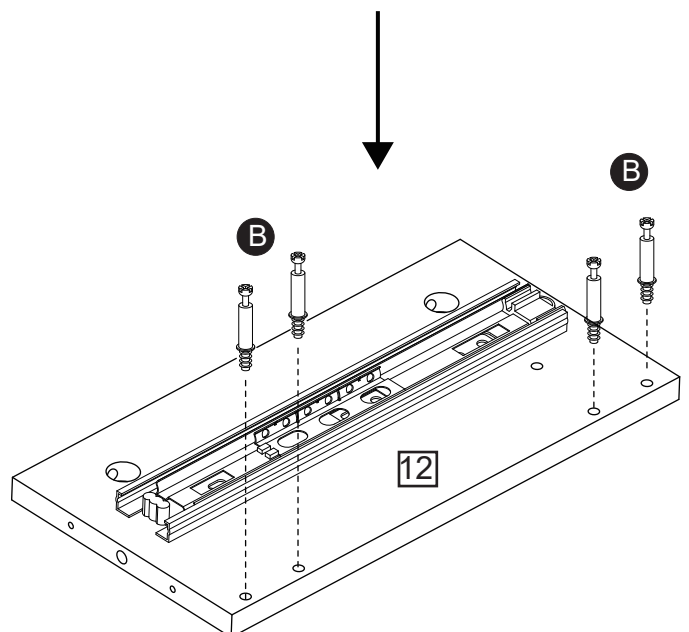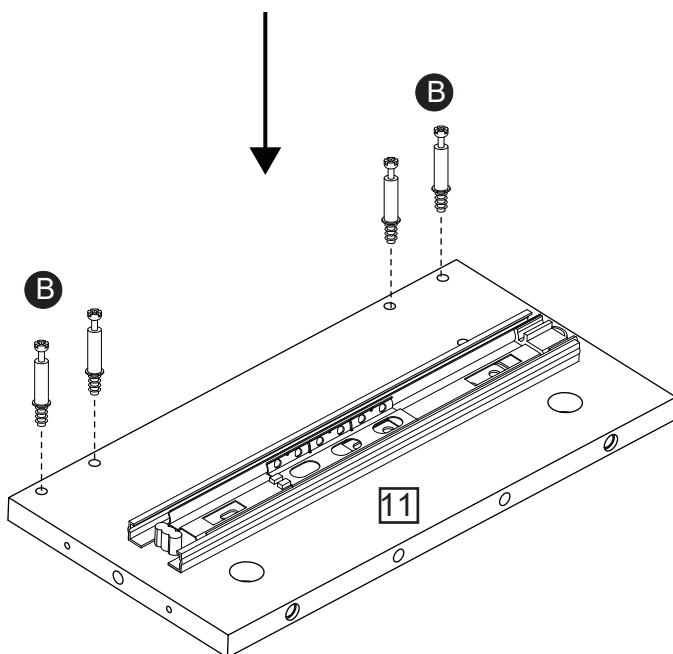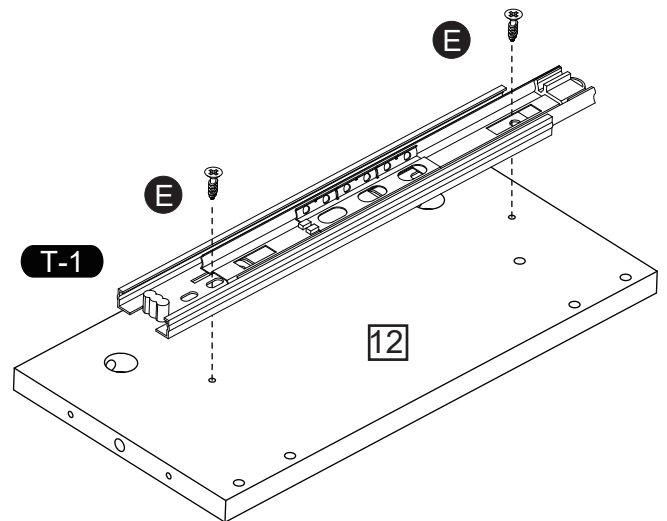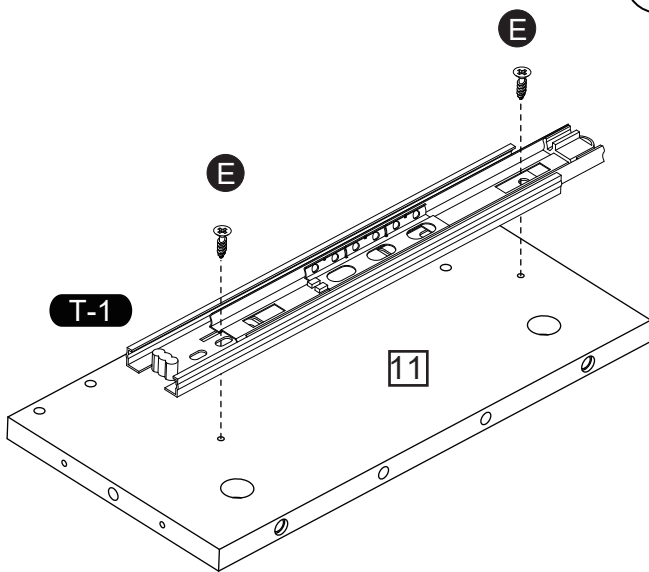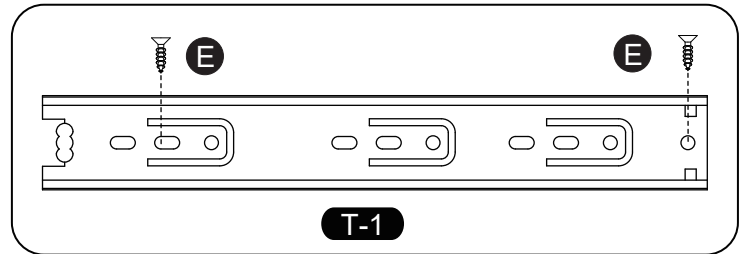


Use screw (E) to attach rail T-1 to panel (11) and panel (12).
Lock cam bolts (B) to panel (11) and panel (12).

Assembly Instructions


Step 3

Attach panel (13) to panel (11), insert cam lock (C), and tighten.

C x8

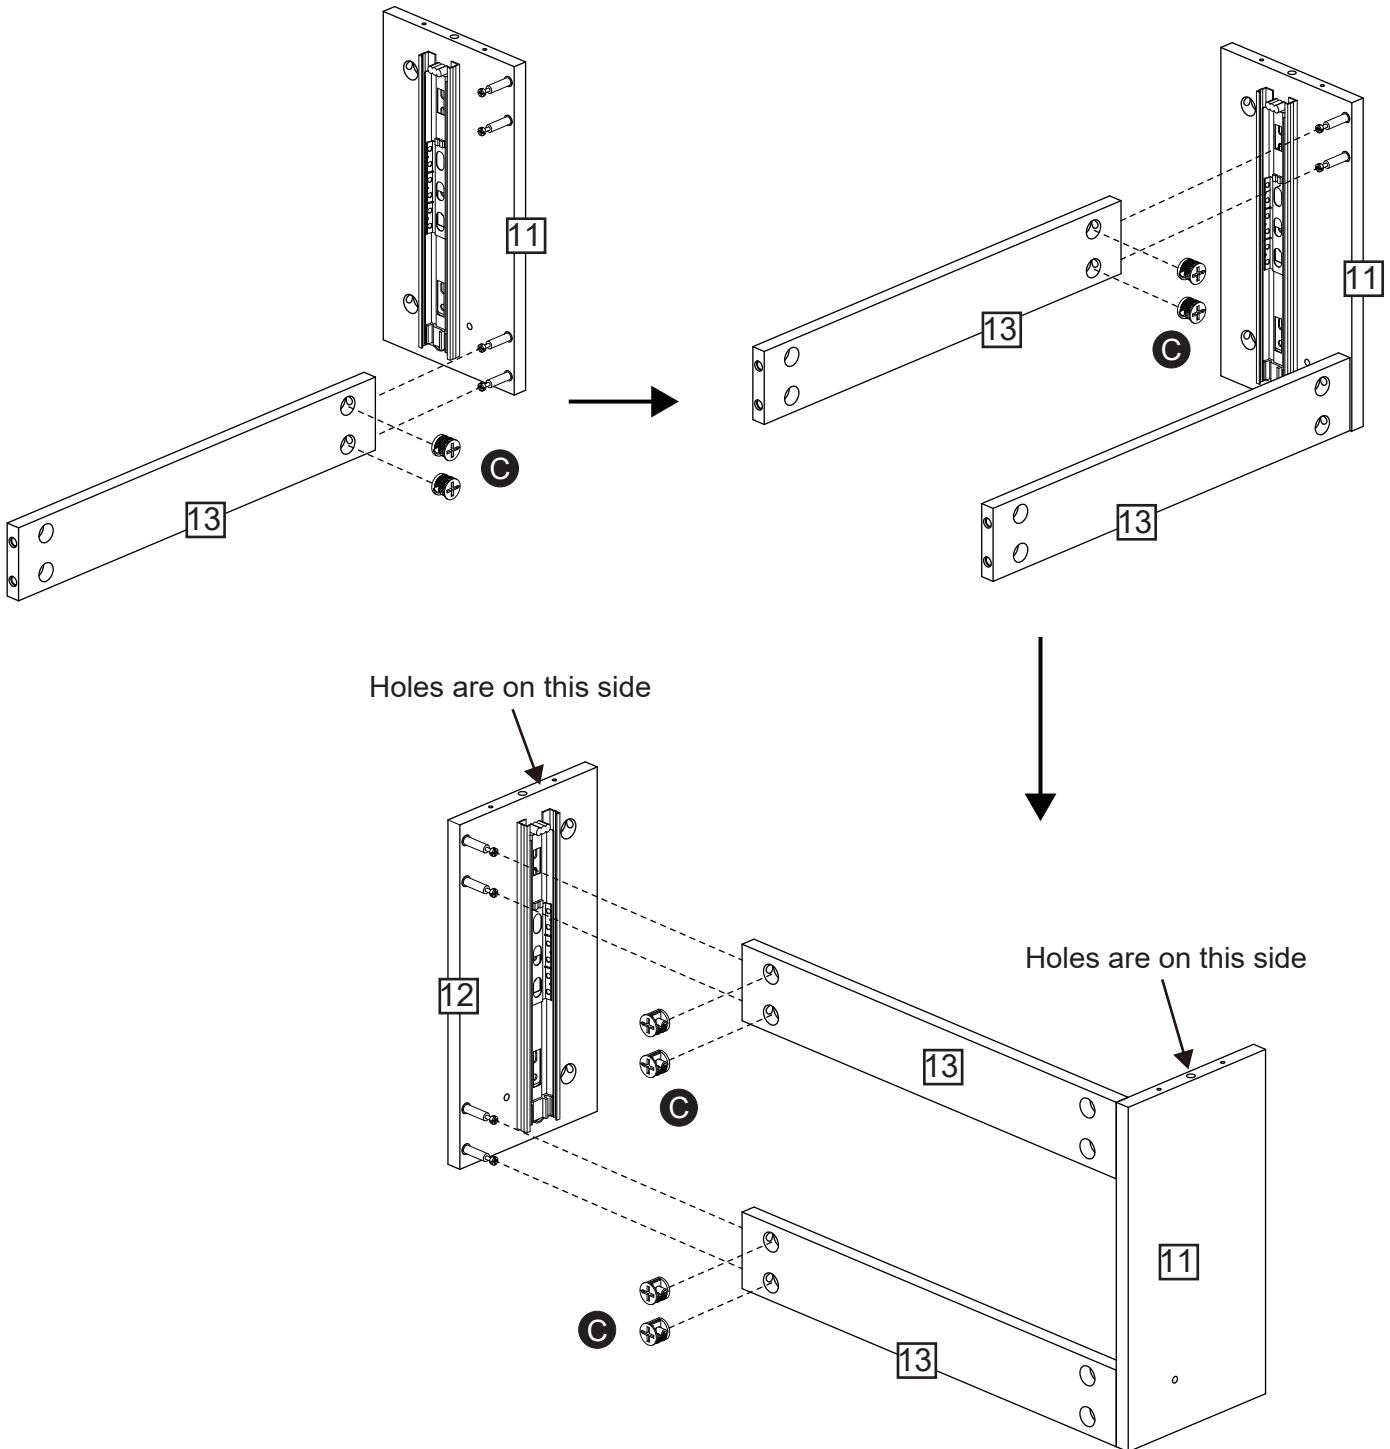

Attach panel (12) to panel (13), insert cam lock (C), and tighten.

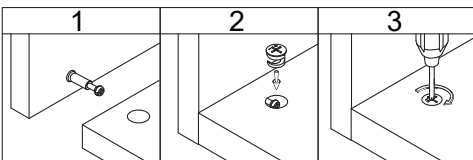



Rotate the frame
after this step as next step

Assembly Instructions

Step 4

CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

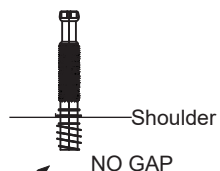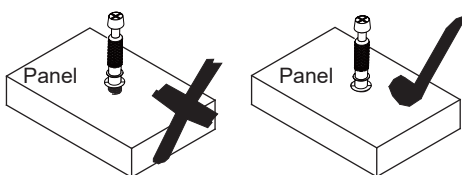


A x4
6x30mm

B x4



C x4

Lock cam bolt (B) to panel (8).

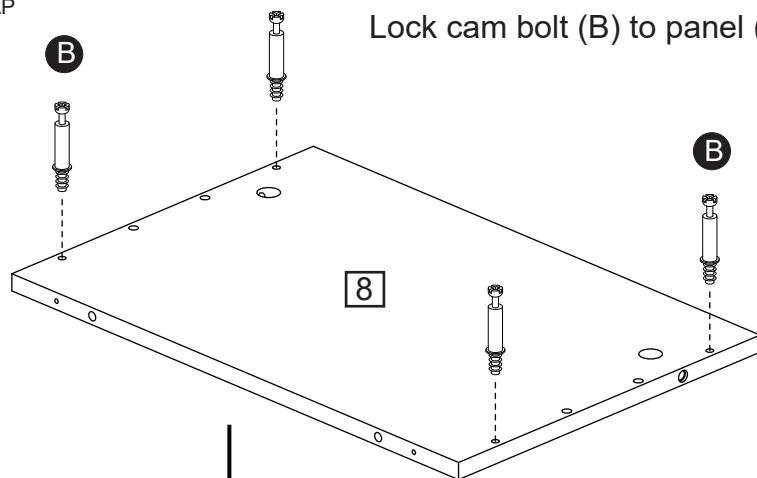

Holes are on this side

Holes are on this side

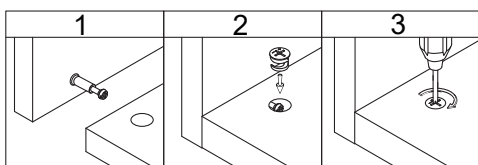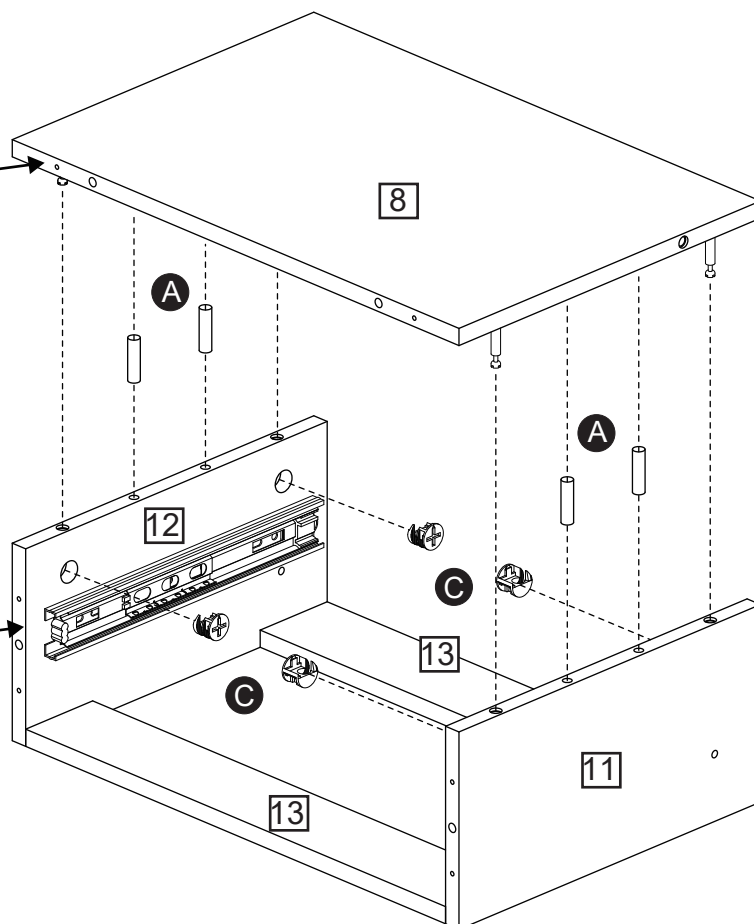

First, insert wooden dowel (A) into panels (11) and (12), then attach panel (8) to panels (11) and (12), insert cam lock (C), and tighten.

Assembly Instructions



Step 5

A x8


6x30mm

F x10

4x30mm

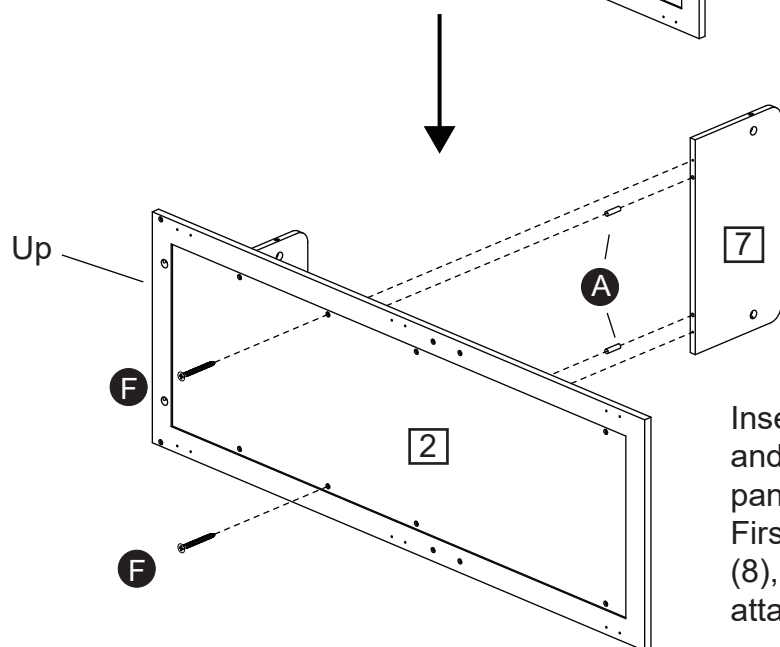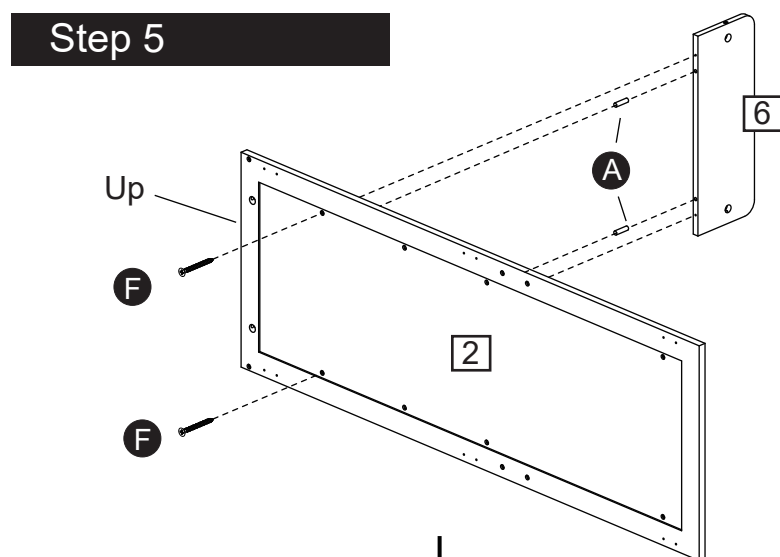


Insert wooden dowel (A) into panels (6) and (7), then use screw (F) to attach panel (6) and panel (7) to panel (2). First, insert wooden dowel (A) into panels (8), (11), and (12), then use screw (F) to attach panels (8), (11), and (12) to panel (2).

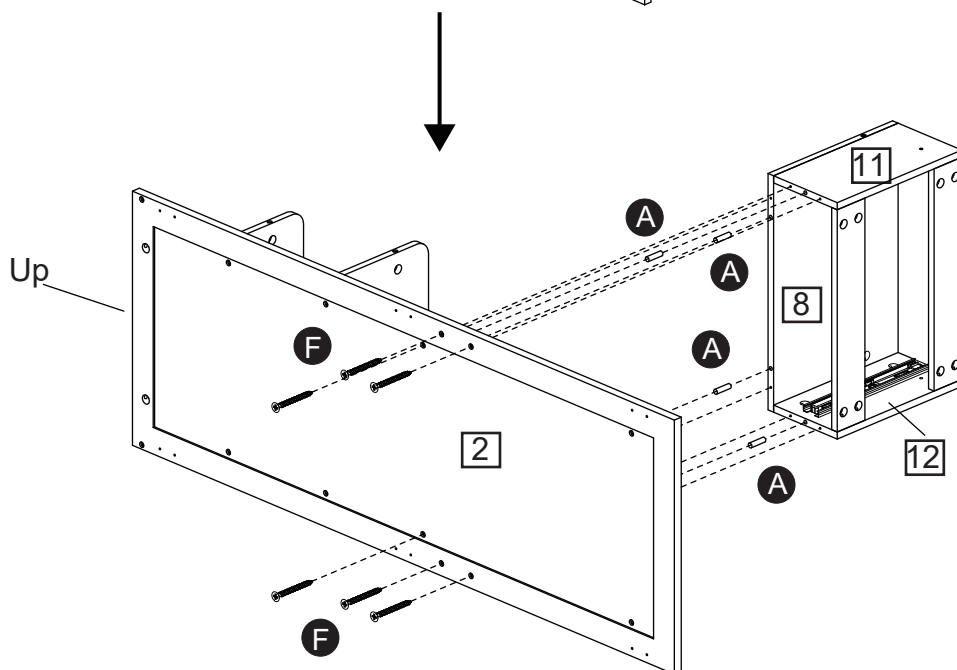

Assembly Instructions

Step 6

Insert wooden dowel (A) into panel (14), then use screw (F) to attach panel (14) to panel (2).

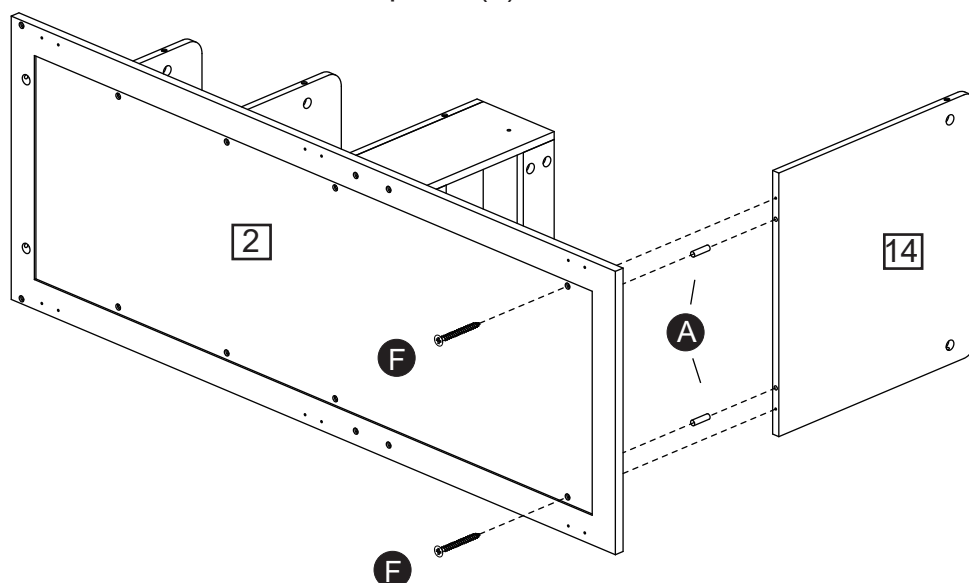




A x2
6x30mm

F x2
4x30mm


Step 7

CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

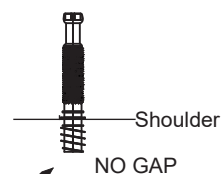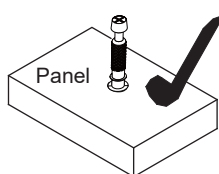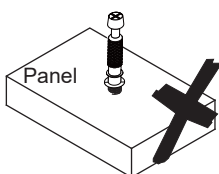


B x8

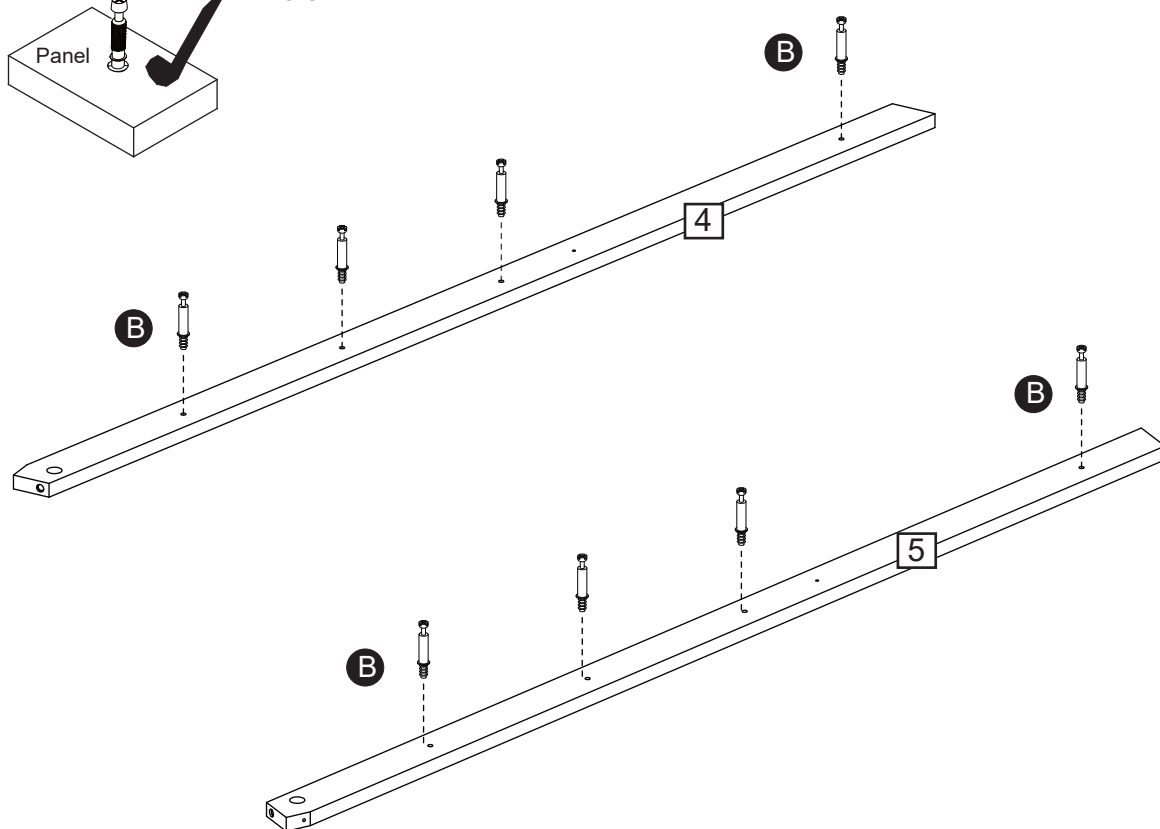

Lock cam bolts (B) to panel (4) and panel (5).

Assembly Instructions

Step 8

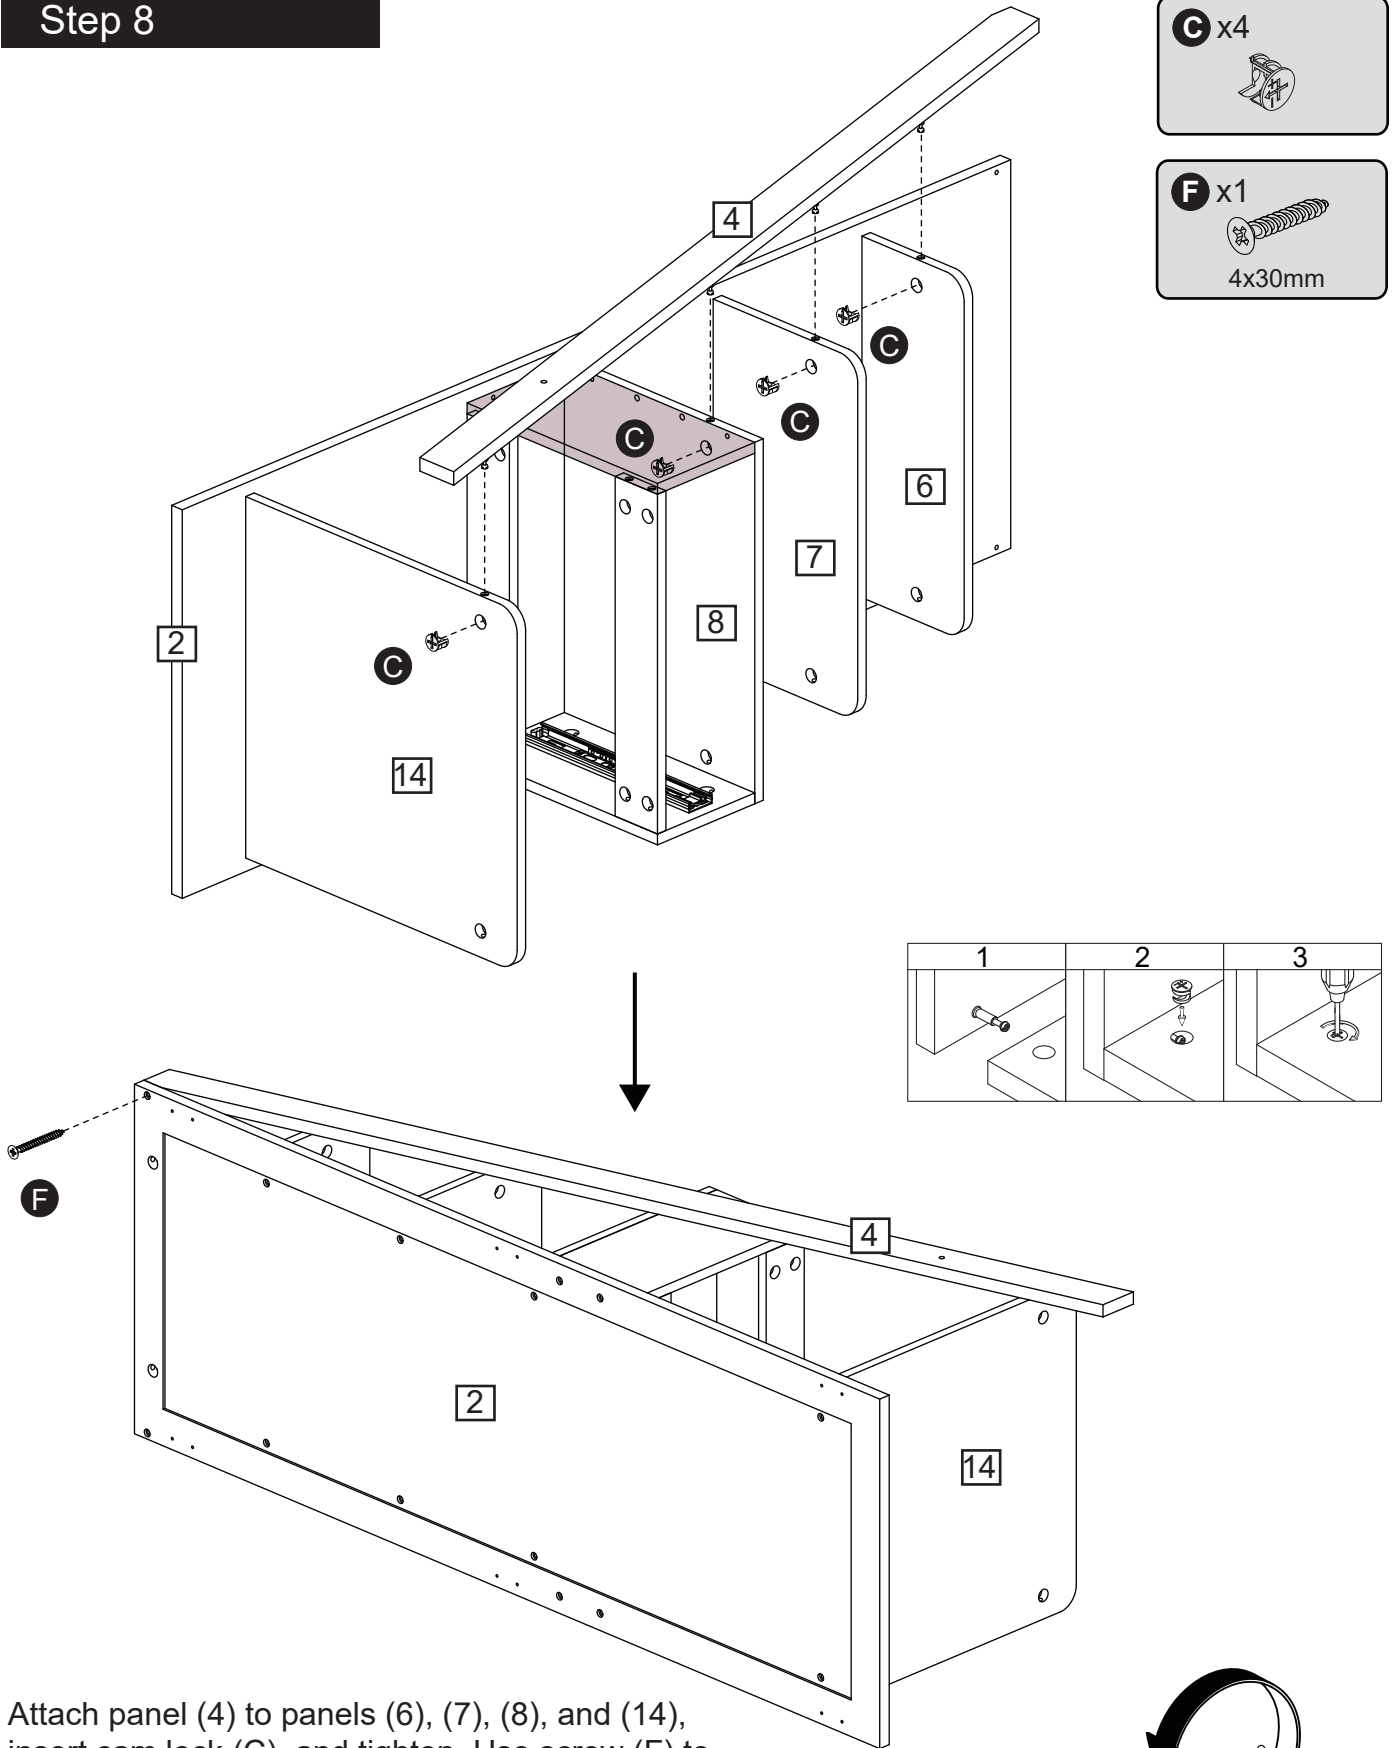

Attach panel (4) to panels (6), (7), (8), and (14), insert cam lock (C), and tighten. Use screw (F) to attach panel (4) to panel (2).

180°
Rotate the frame
after this step as next step

Assembly Instructions

Step 9

C x4





F x1





4x30mm

a x2

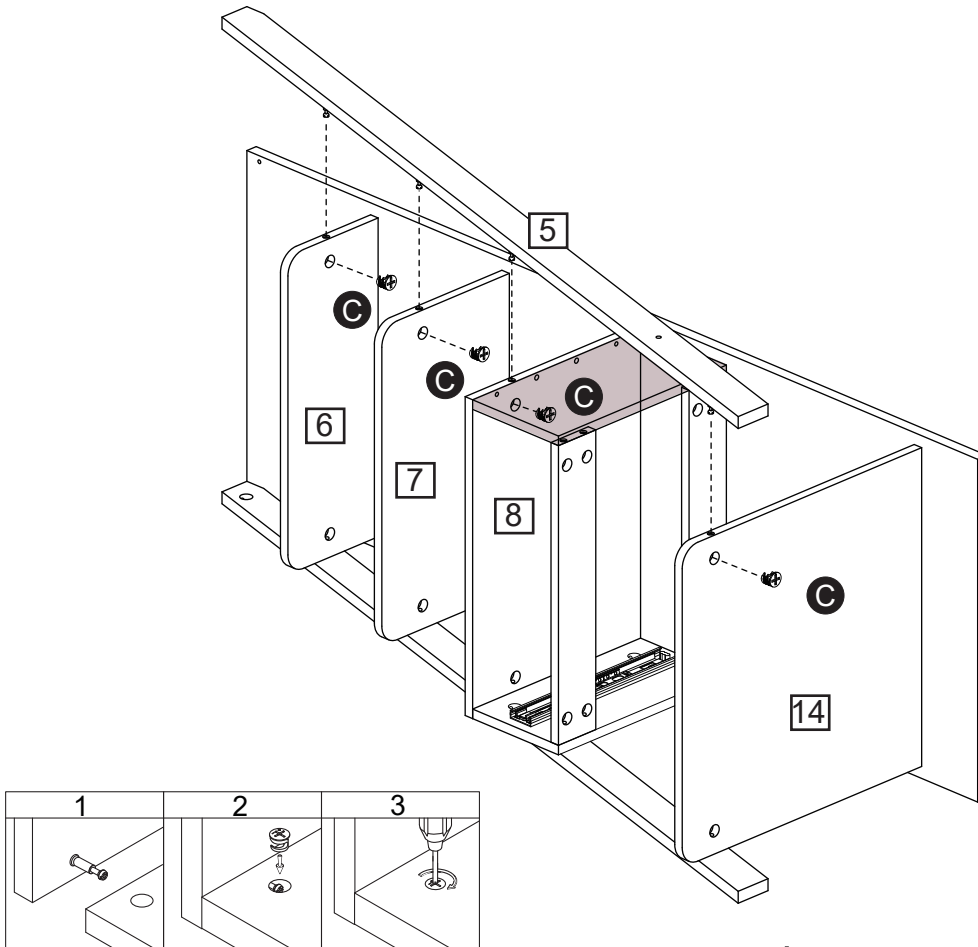

Assemble the felt pad (a) onto panel (4),(5).

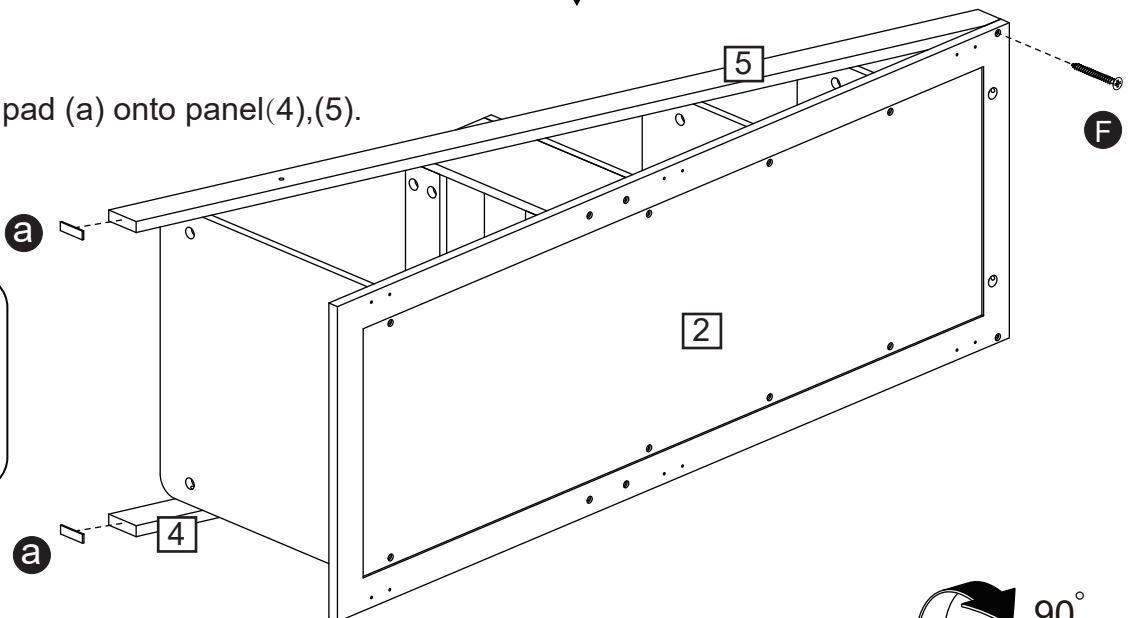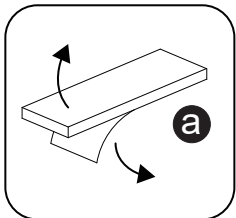



Attach panel (5) to panels (6), (7), (8), and (14), insert cam lock (C), and tighten. Use screw (F) to attach panel (5) to panel (2).



Rotate the frame after this step as next step

Assembly Instructions

Step 10

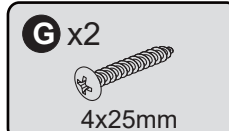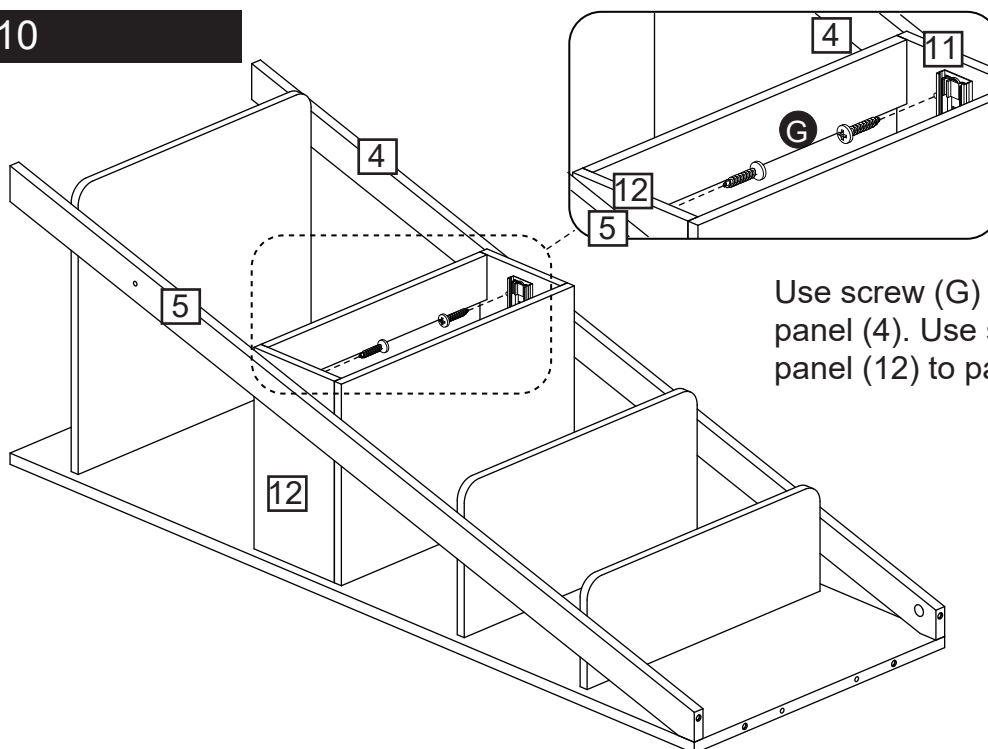

Use screw (G) to fix panel (11) to panel (4). Use screw (G) to fix panel (12) to panel (5).








Rotate the frame after this step as next step

Step 11

CAM-LOCK


Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

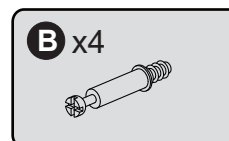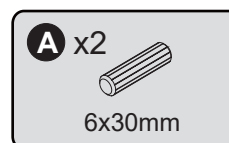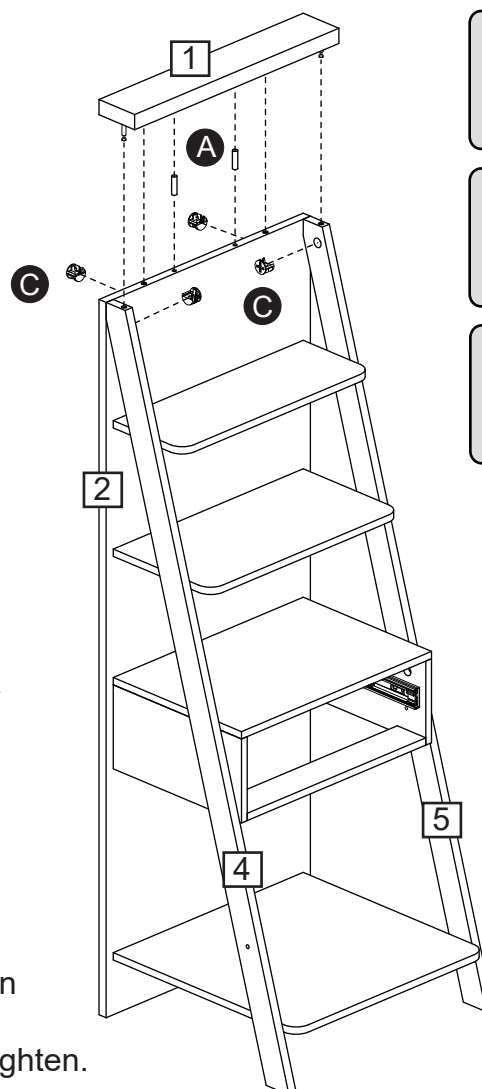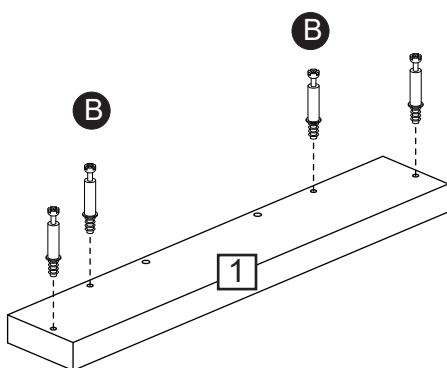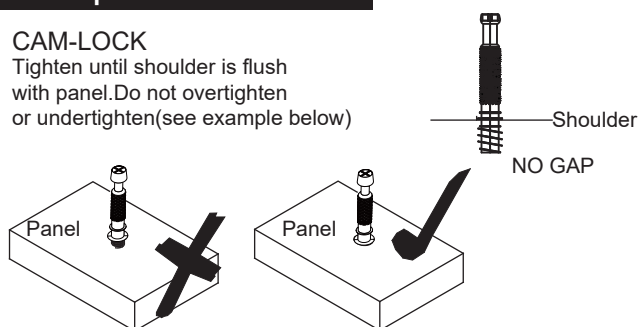

Lock cam bolt (B) to panel (1). First, insert wooden dowel (A) into panel (2), then attach panel (1) to panels (2), (4), and (5), insert cam lock (C), and tighten.

Assembly Instructions



Step 12

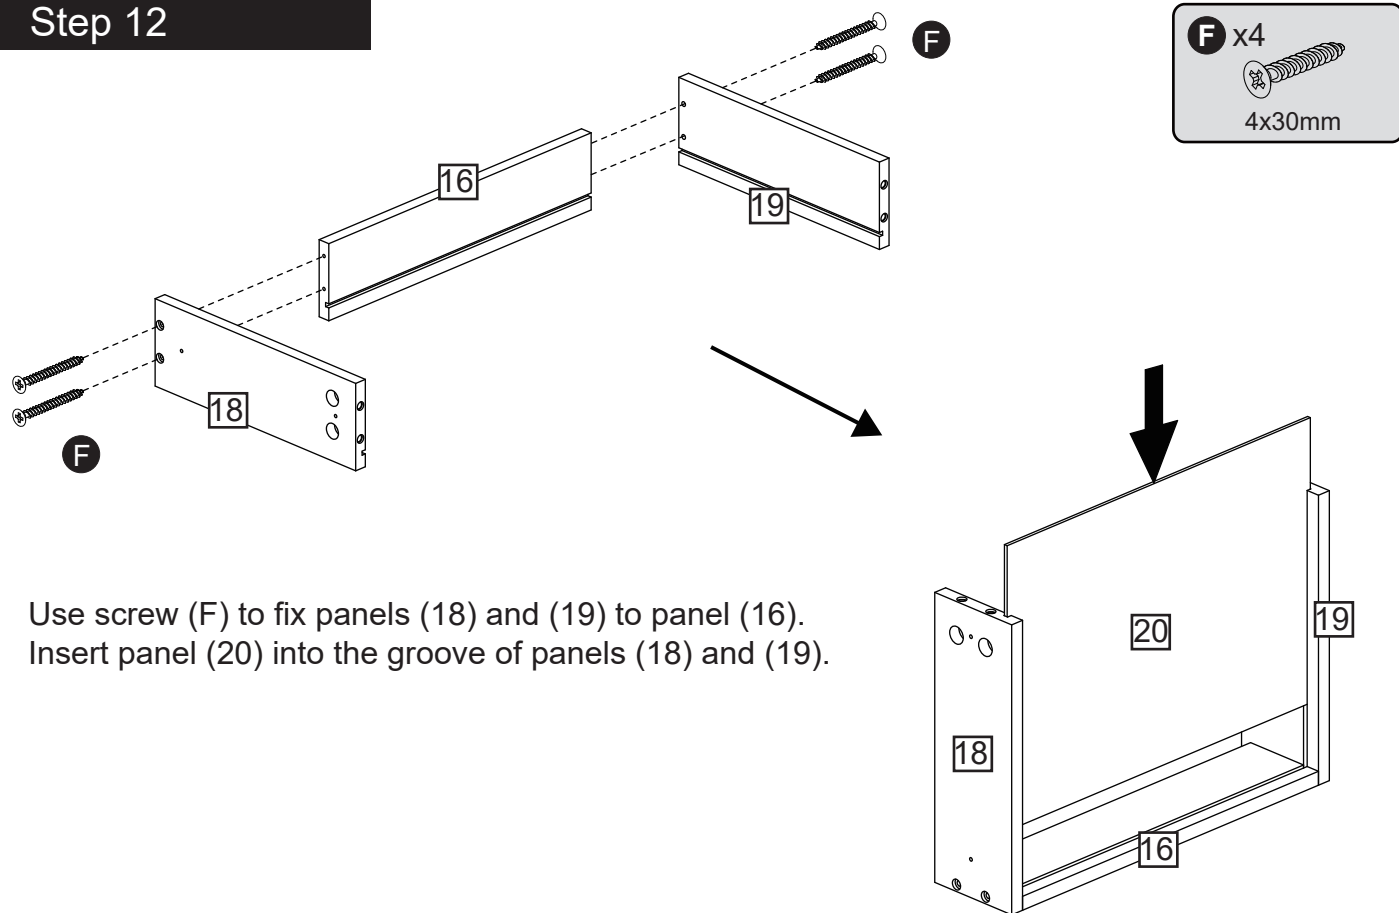

Step 13

CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

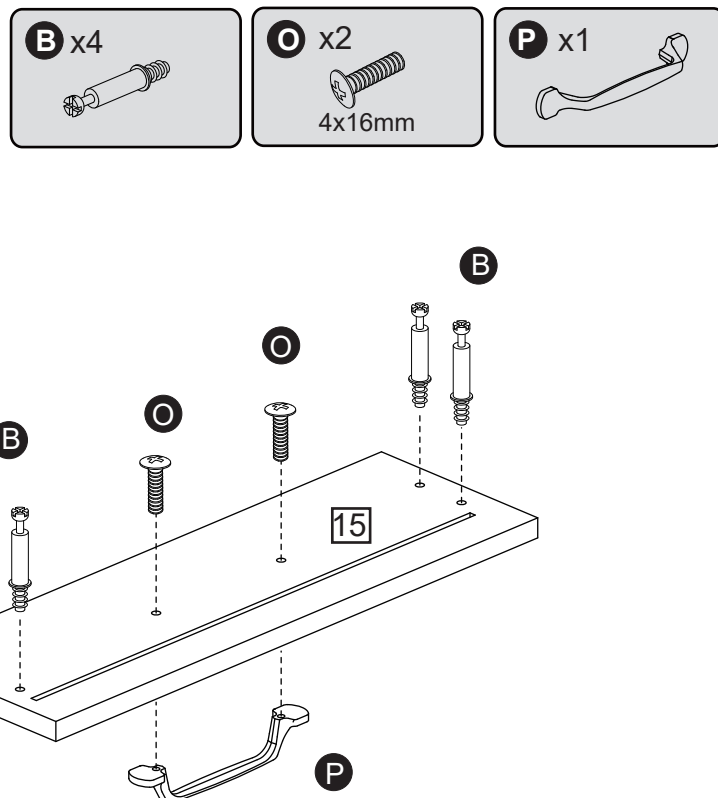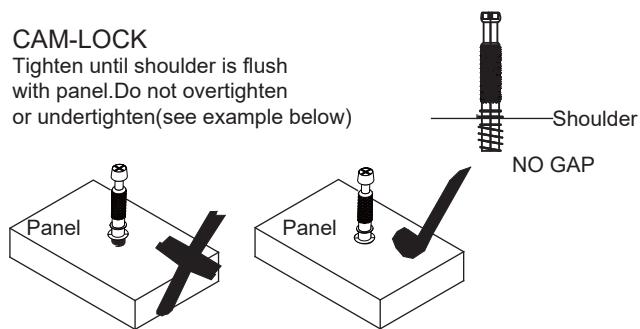

Lock cam bolt (B) to panel (15).
Use bolt (O) to attach handle (P) to panel (15).

Assembly Instructions

Step 14




C x4





E x4



T x2

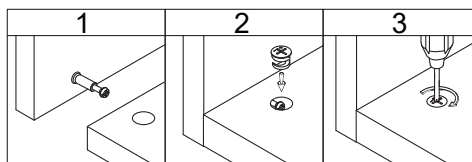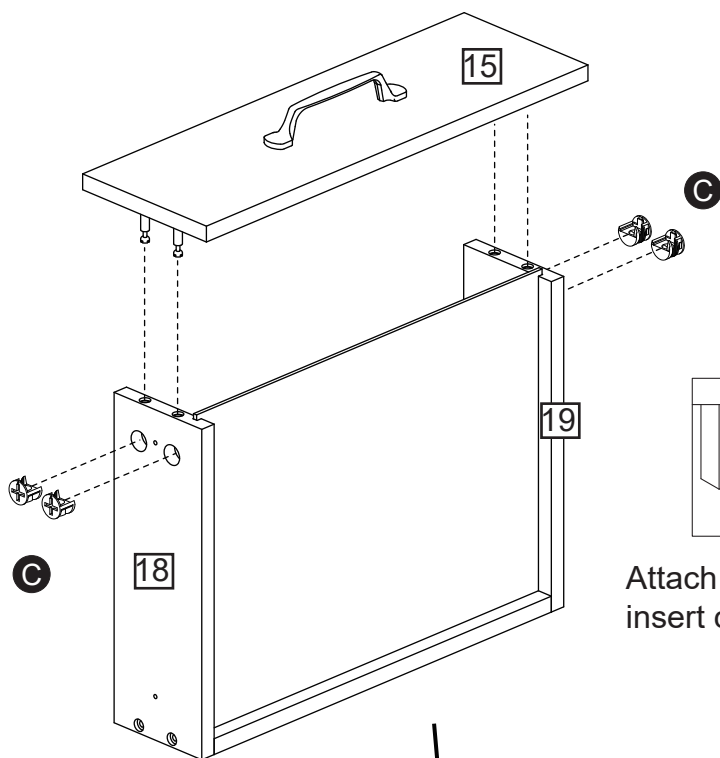

Attach panel (15) to panels (18) and (19), insert cam lock (C), and tighten.


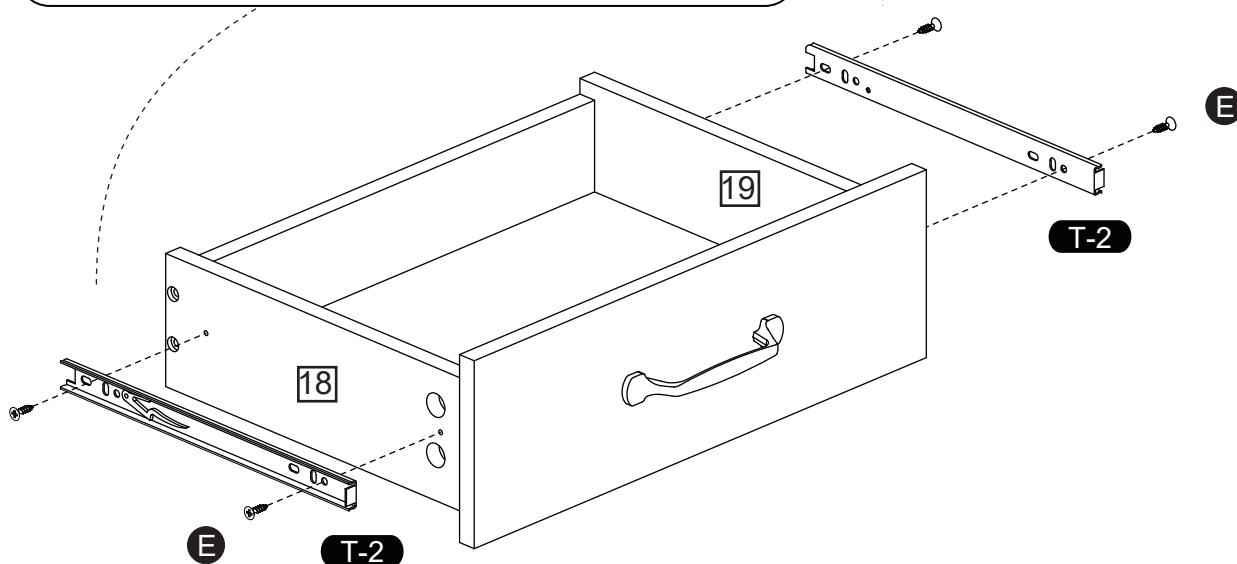
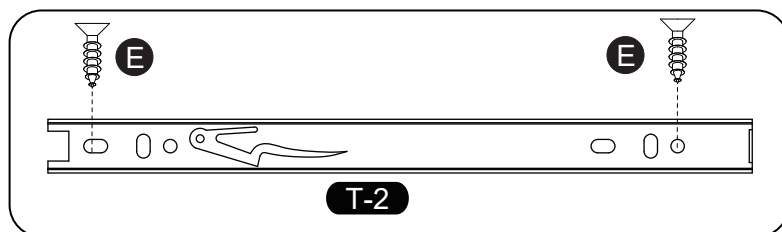


Use screw (E) to attach rail T-2 to panels (18) and (19).


Assembly Instructions

Step 15

1. Drawers must be horizontally put into the cabinets.
2. Make sure both sides sliders match well to avoid damage.

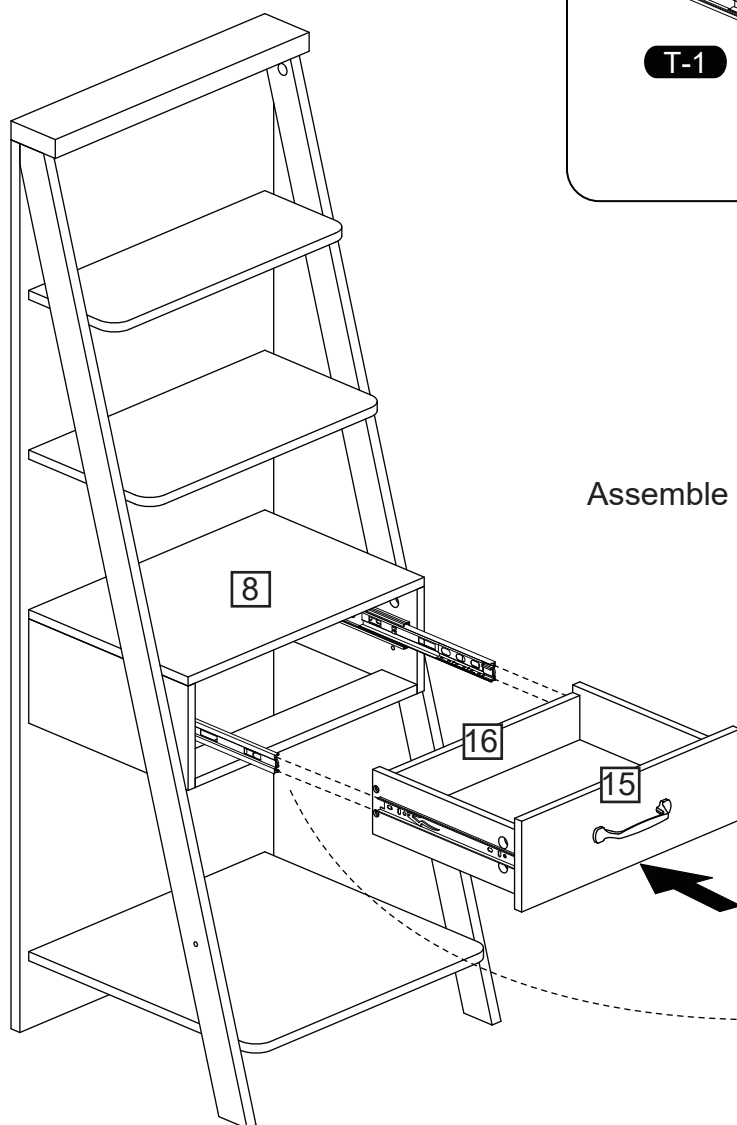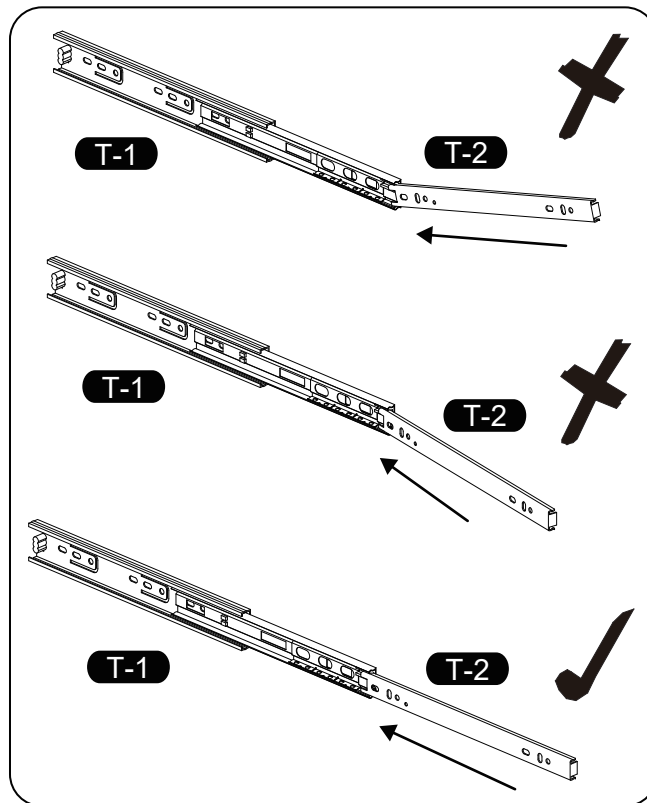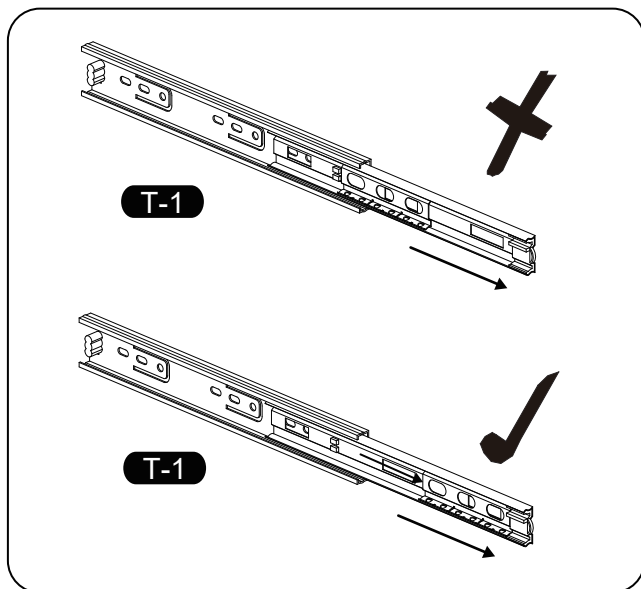

Assemble the drawer to the frame.

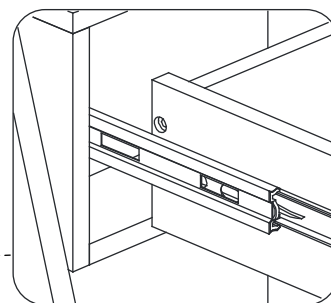


Assembly Instructions



Assembly Park B

Right shelf

See relevant pages 21 to 32

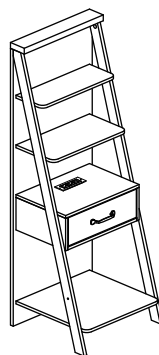

Step 16

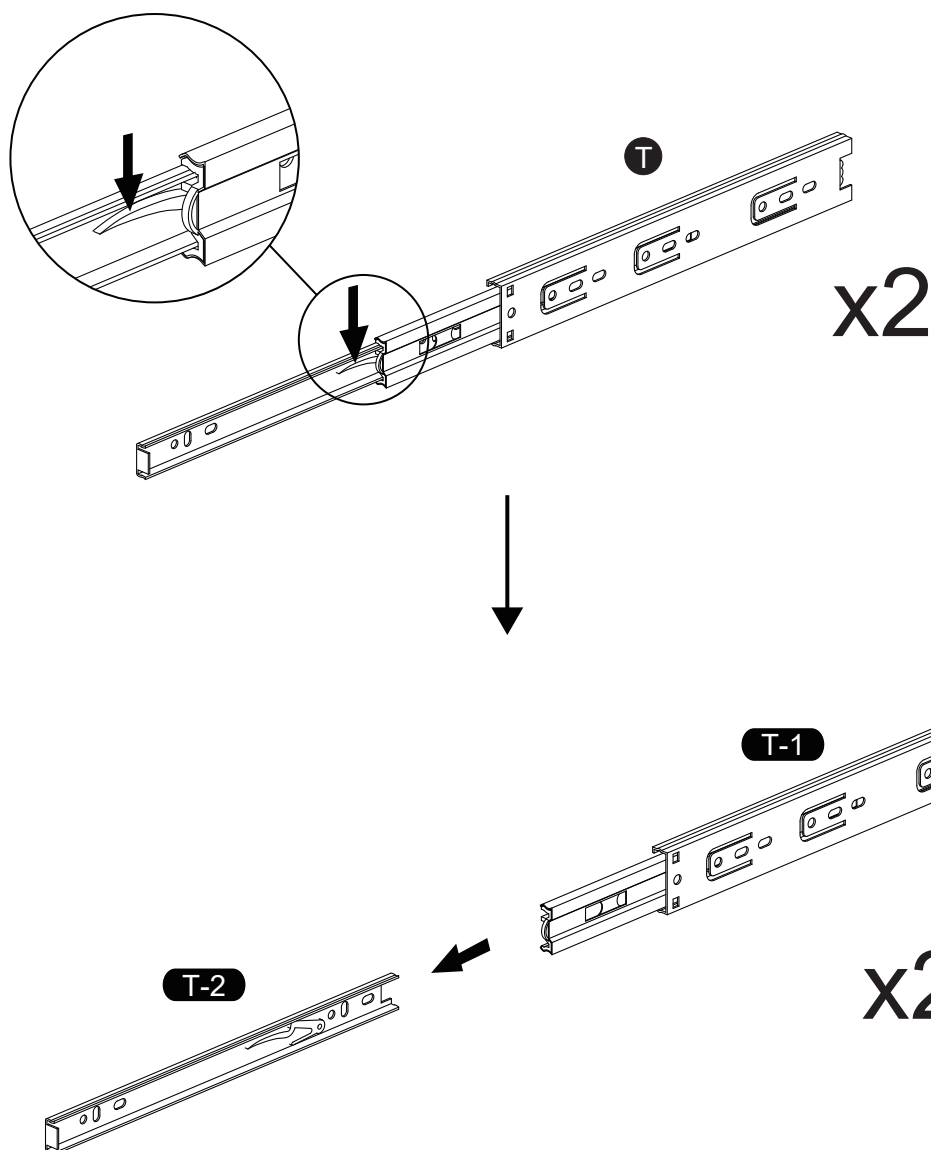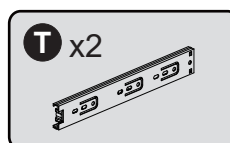




As shown in the picture: press the rail switch to split rail T into T-1 and T-2.

Assembly Instructions


Step 17

CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

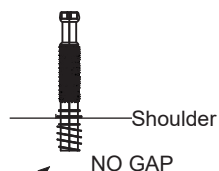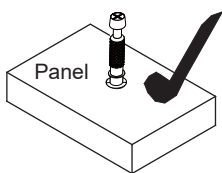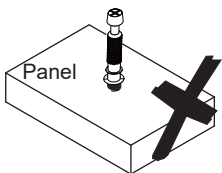







B x8



E x4



T x2

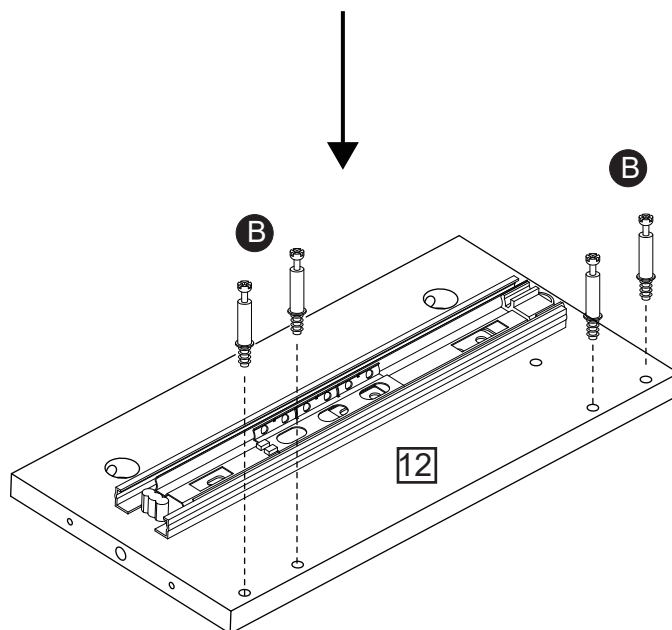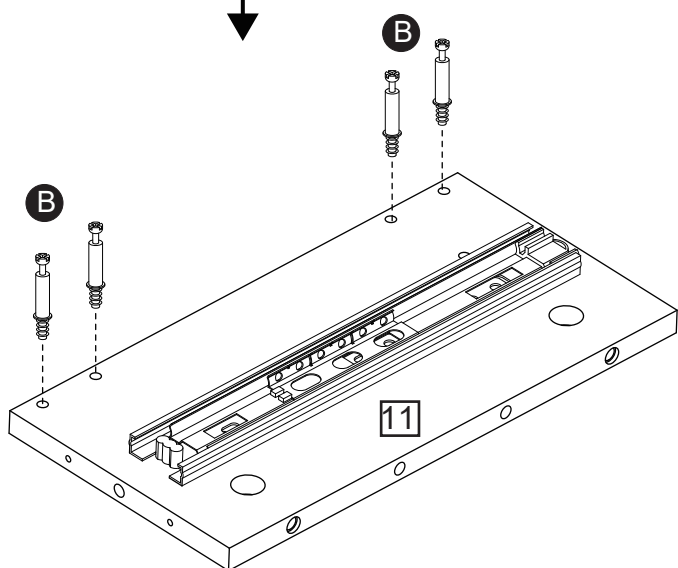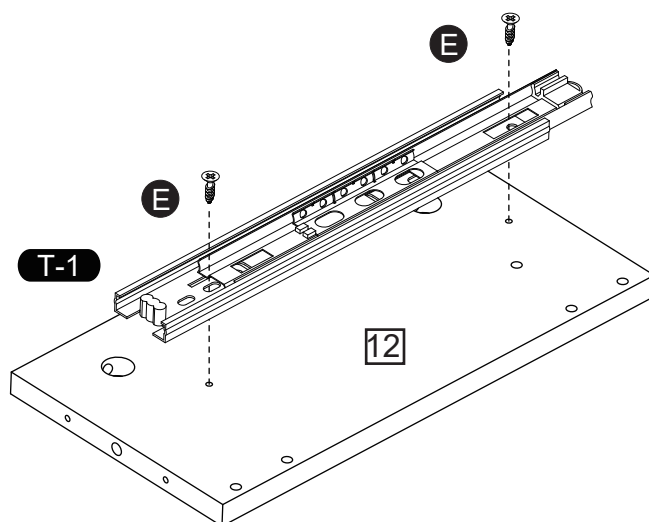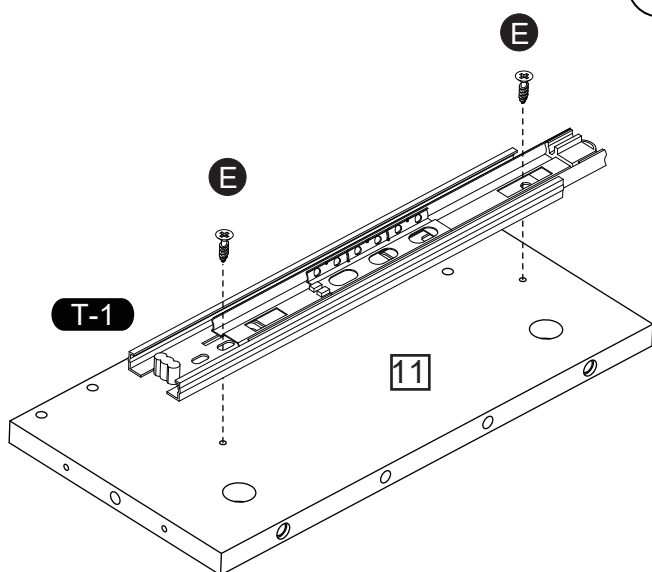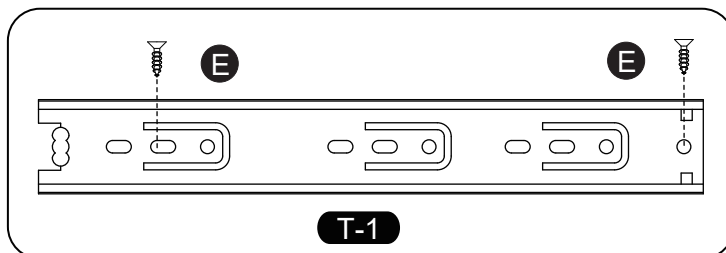


Use screw (E) to attach rail T-1 to panel (11) and panel (12).
Lock cam bolts (B) to panel (11) and panel (12).

Assembly Instructions


Step 18

Attach panel (13) to panel (11), insert cam lock (C), and tighten.

C x8

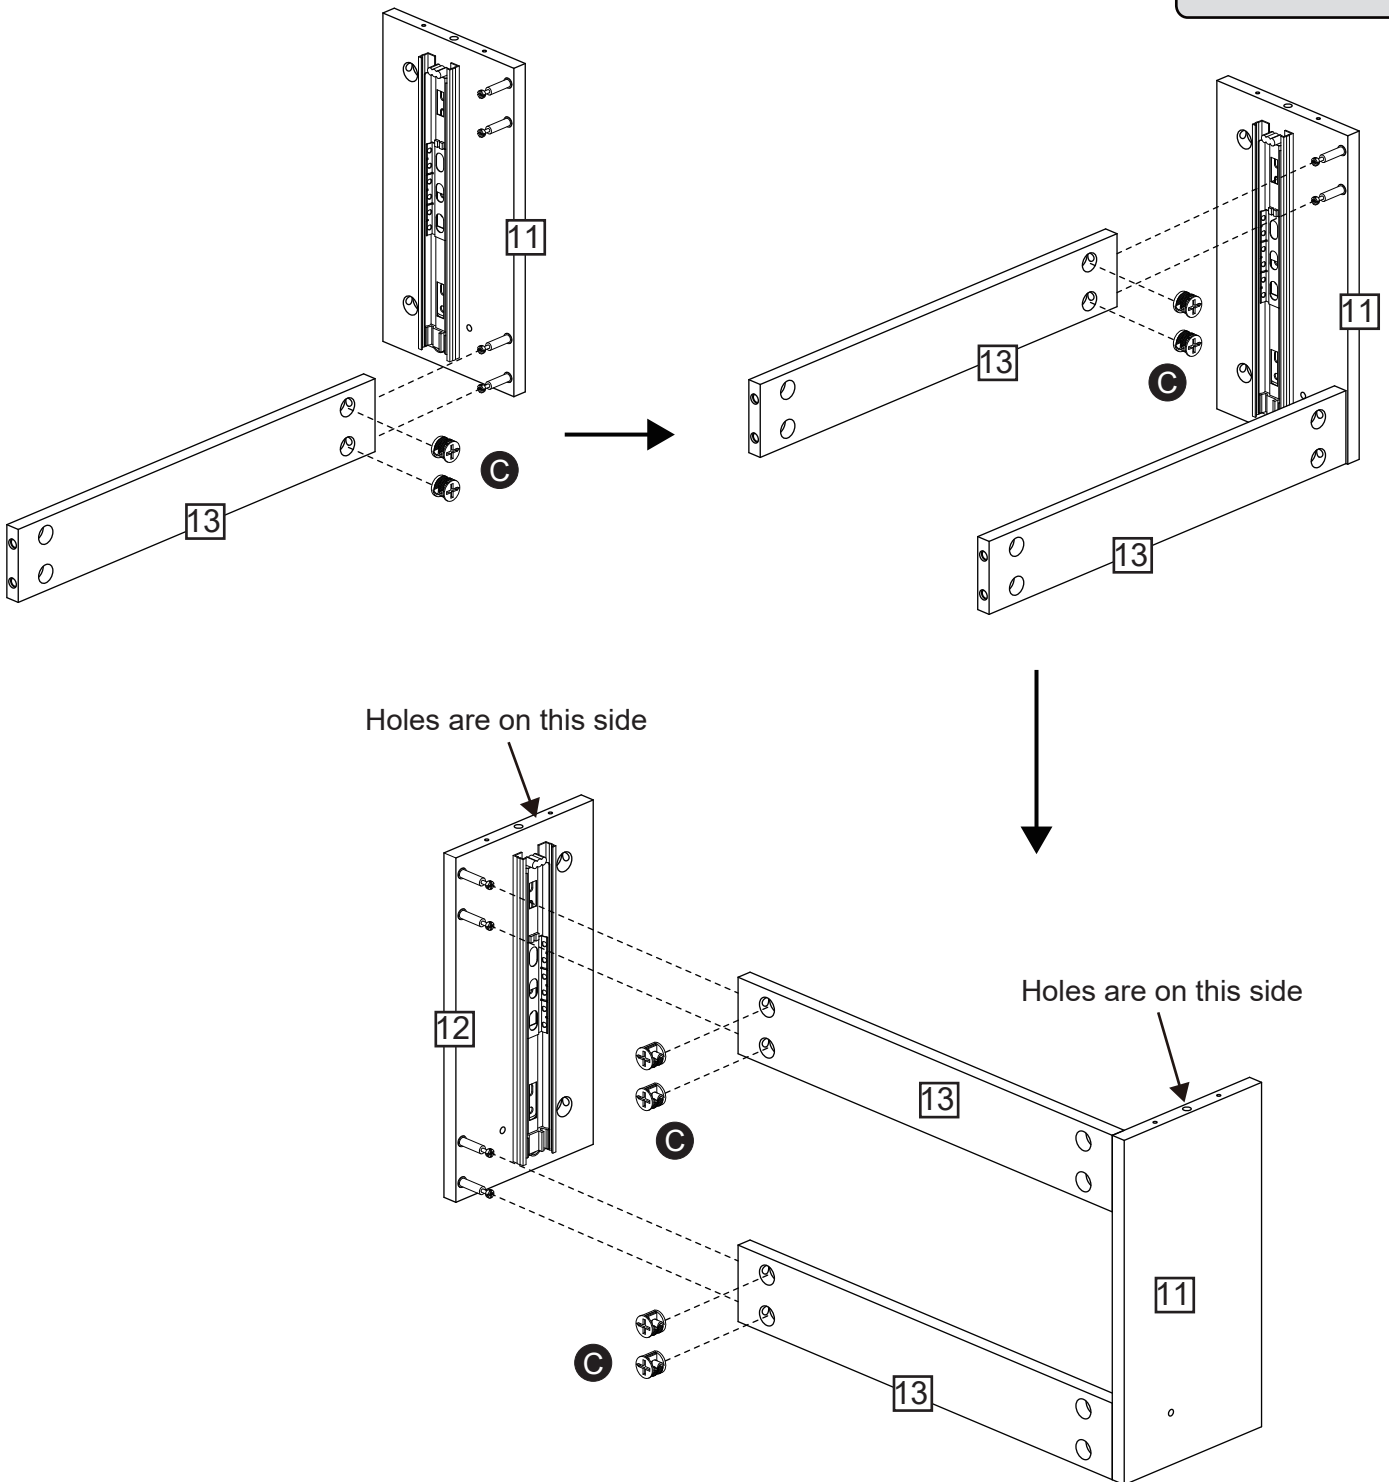

Attach panel (12) to panel (13), insert cam lock (C), and tighten.

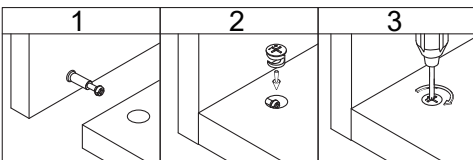




Rotate the frame
after this step as next step

Assembly Instructions

Step 19

CAM-LOCK


Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

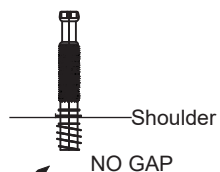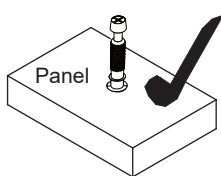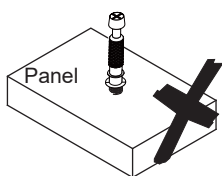

A x4
6x30mm

B x4



C x4

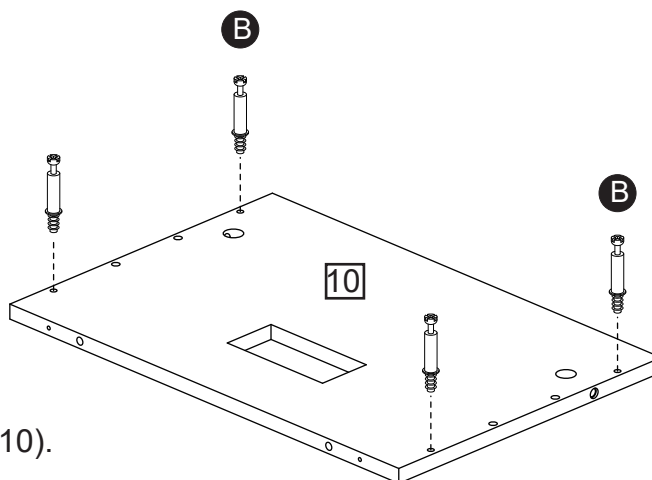

Lock cam bolt (B) to panel (10).

Holes are on this side





Holes are on this side

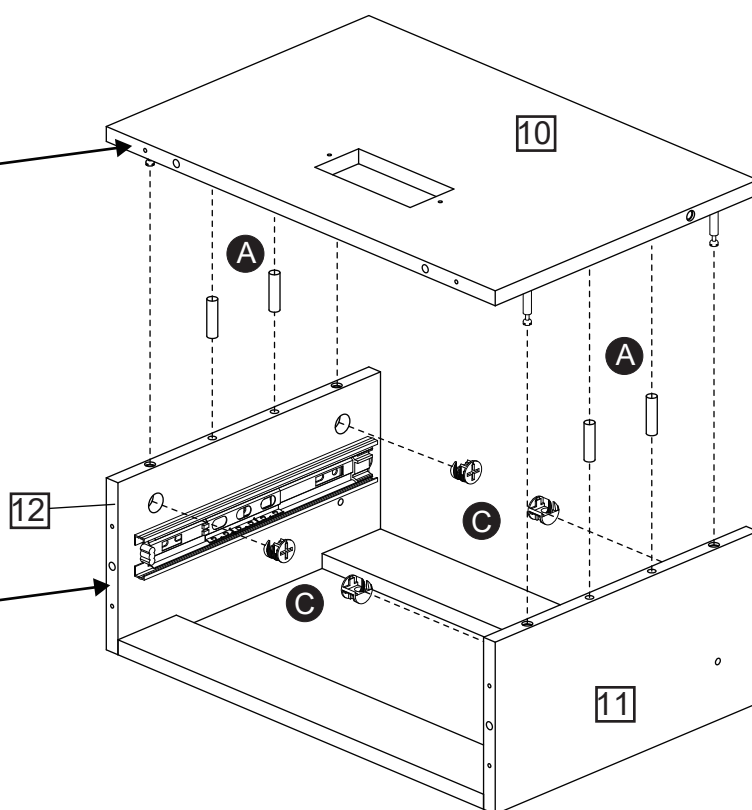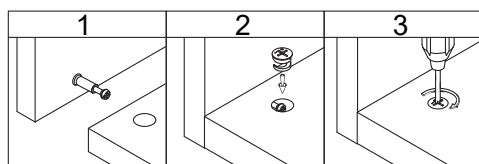


First, insert wooden dowel (A) into panels (11) and (12), then attach panel (10) to panels (11) and (12), insert cam lock (C), and tighten.

Assembly Instructions

Step 20

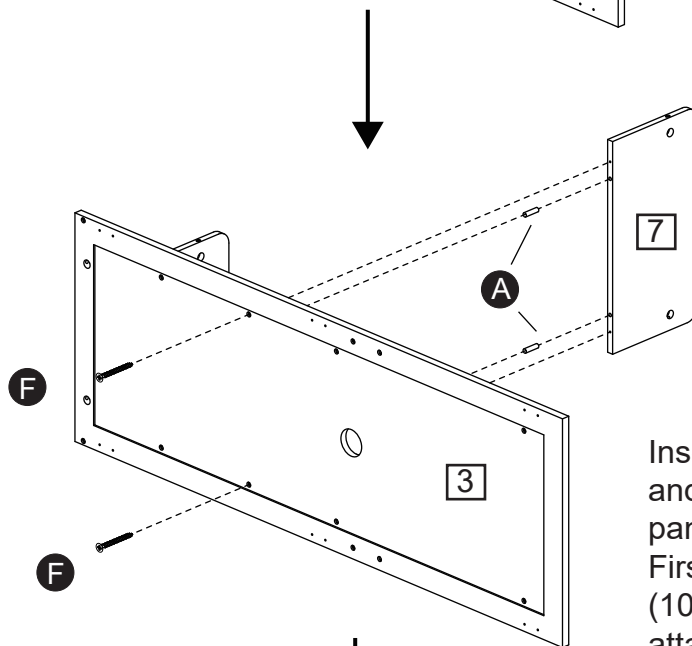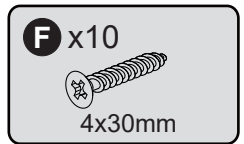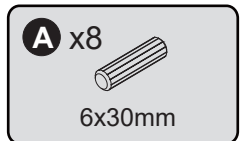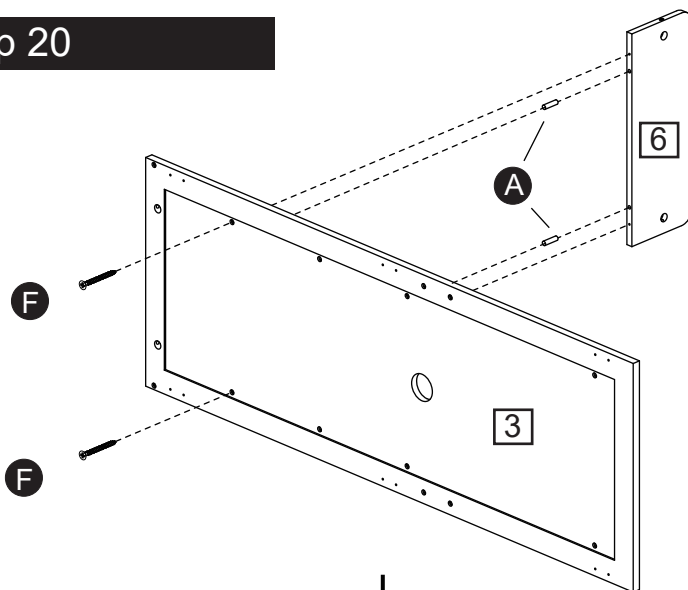


Insert wooden dowel (A) into panels (6) and (7), then use screw (F) to attach panel (6) and panel (7) to panel (3).
First, insert wooden dowel (A) into panels (10), (11), and (12), then use screw (F) to attach panels (8), (11), and (12) to panel (3).

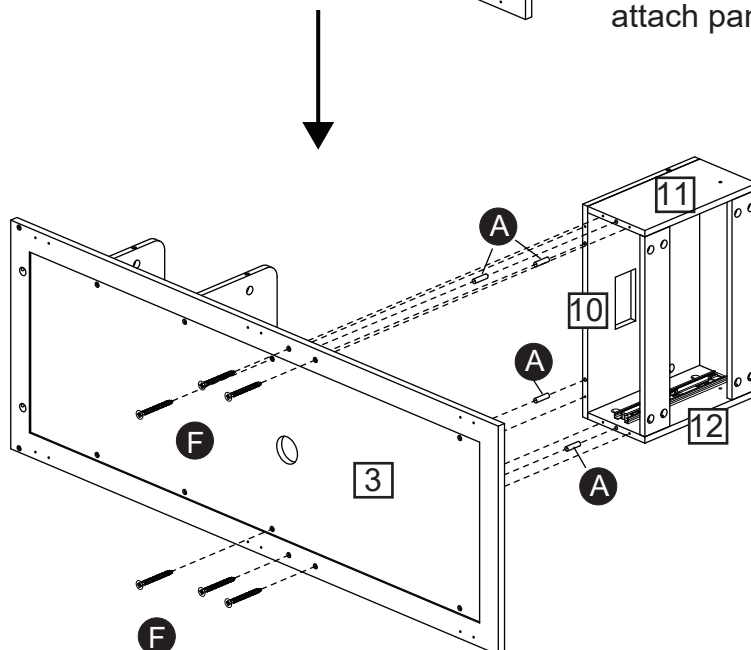

Assembly Instructions





Step 21

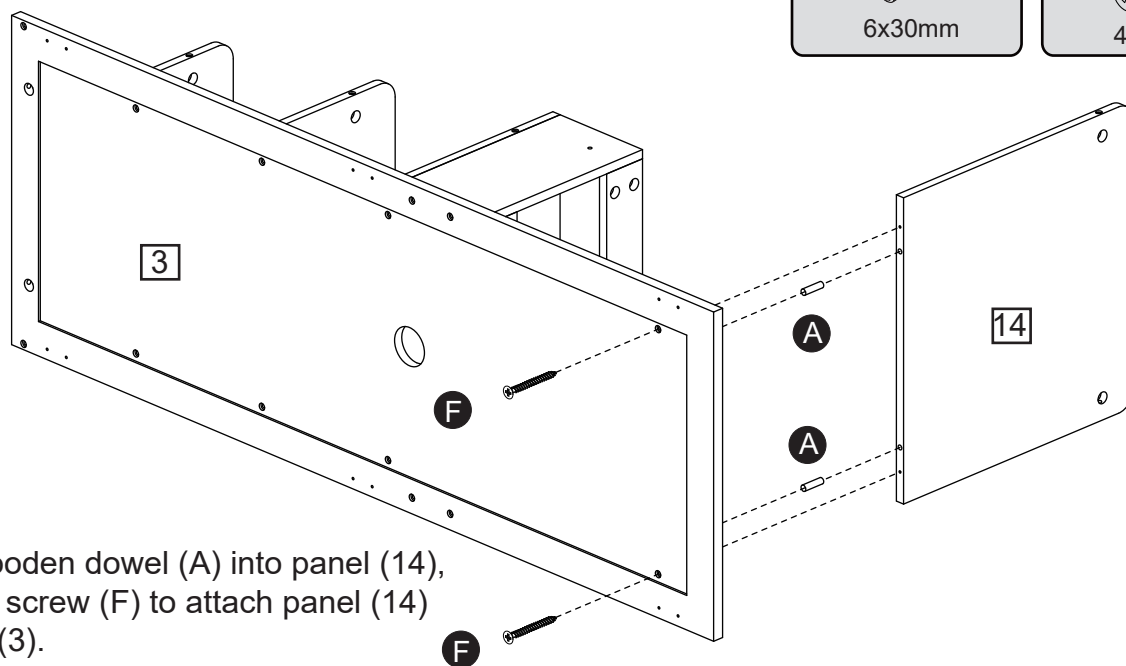

Step 22


CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

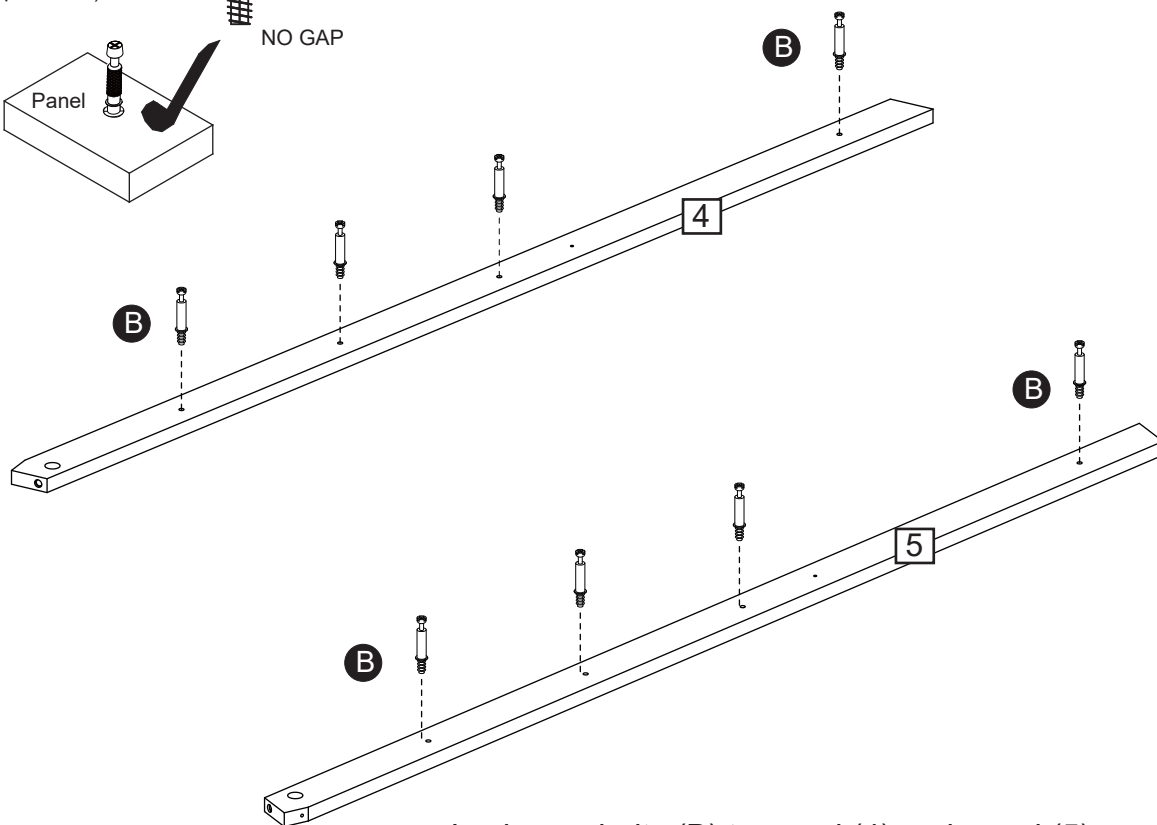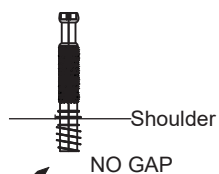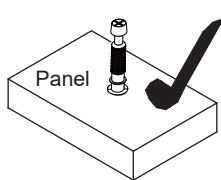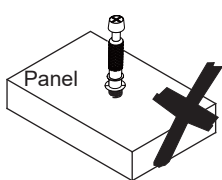

Assembly Instructions


Step 23

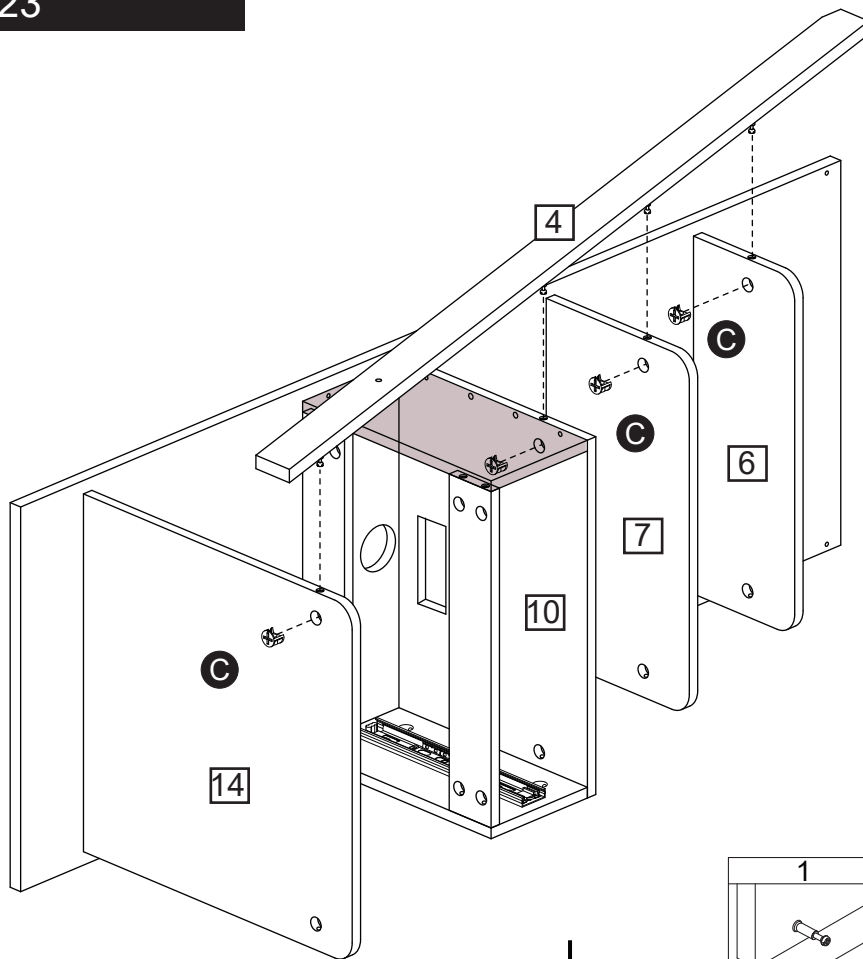



C x4



F x1



4x30mm

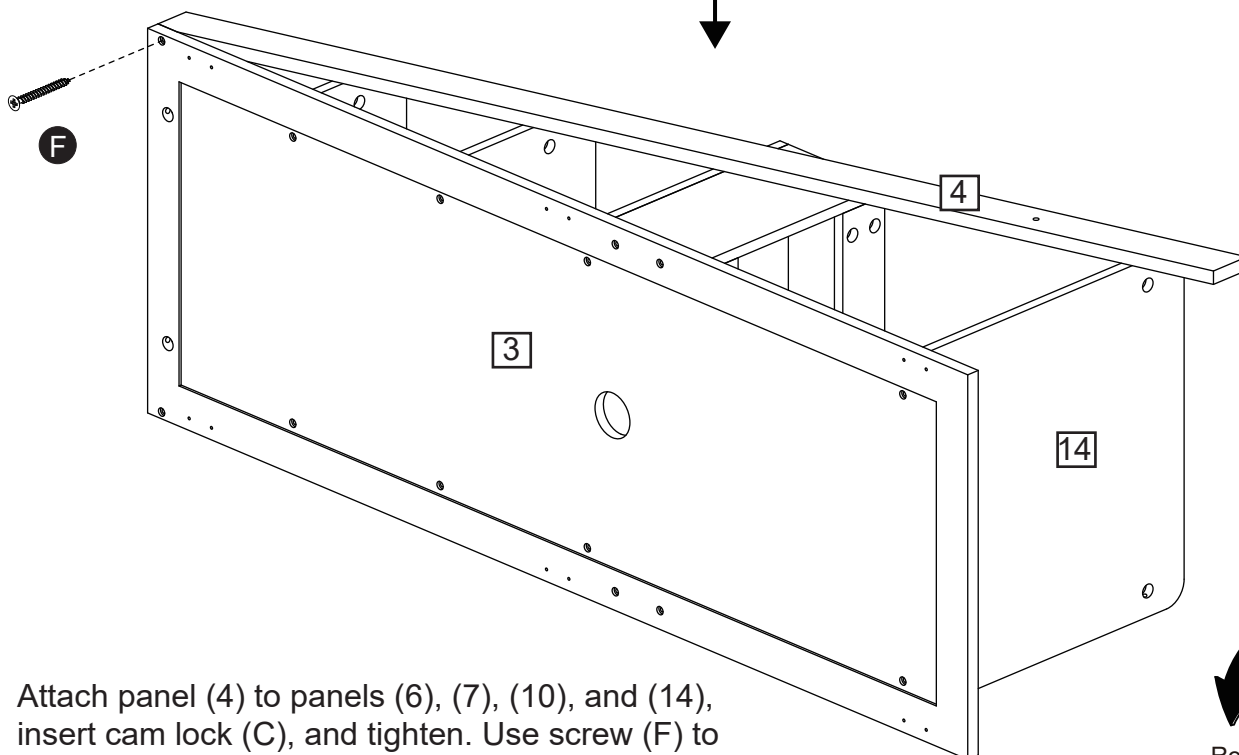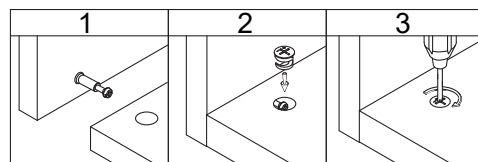

Attach panel (4) to panels (6), (7), (10), and (14), insert cam lock (C), and tighten. Use screw (F) to attach panel (4) to panel (3).



Rotate the frame after this step as next step

Assembly Instructions

Step 24

C x4




F x1




4x30mm

a x2

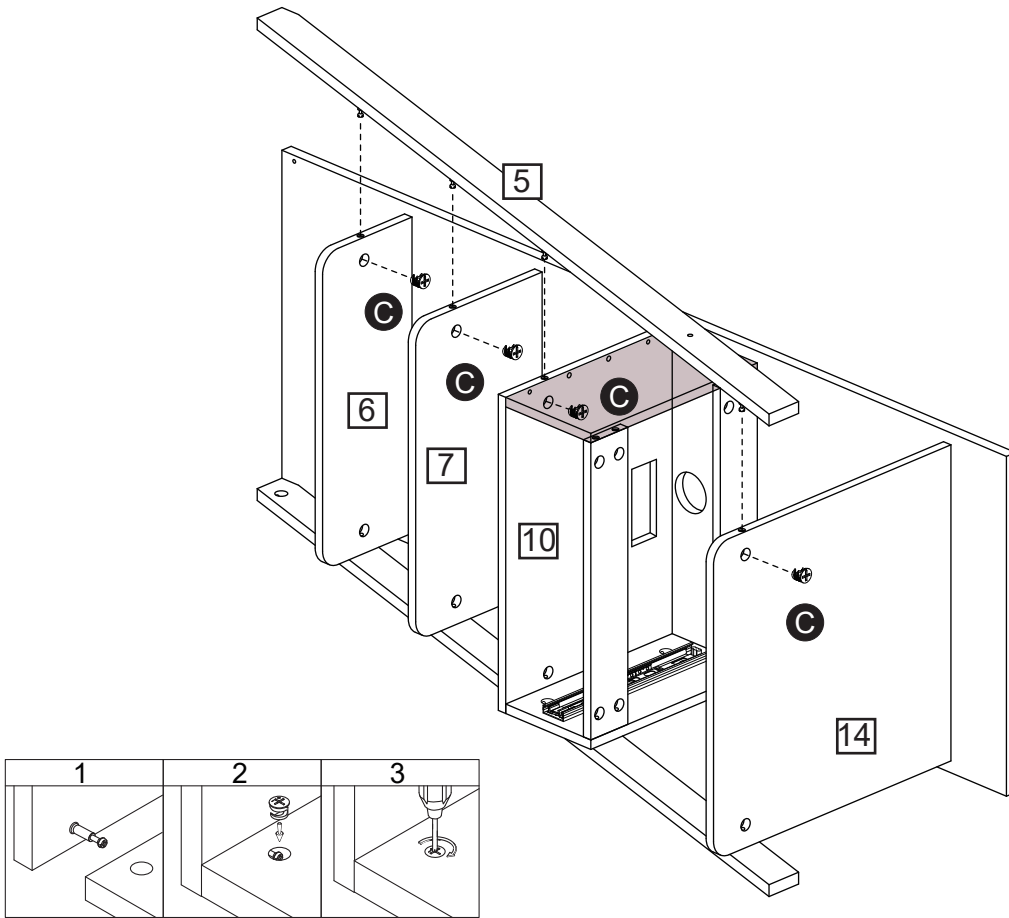

Assemble the felt pad (a) onto panel (4), (5).

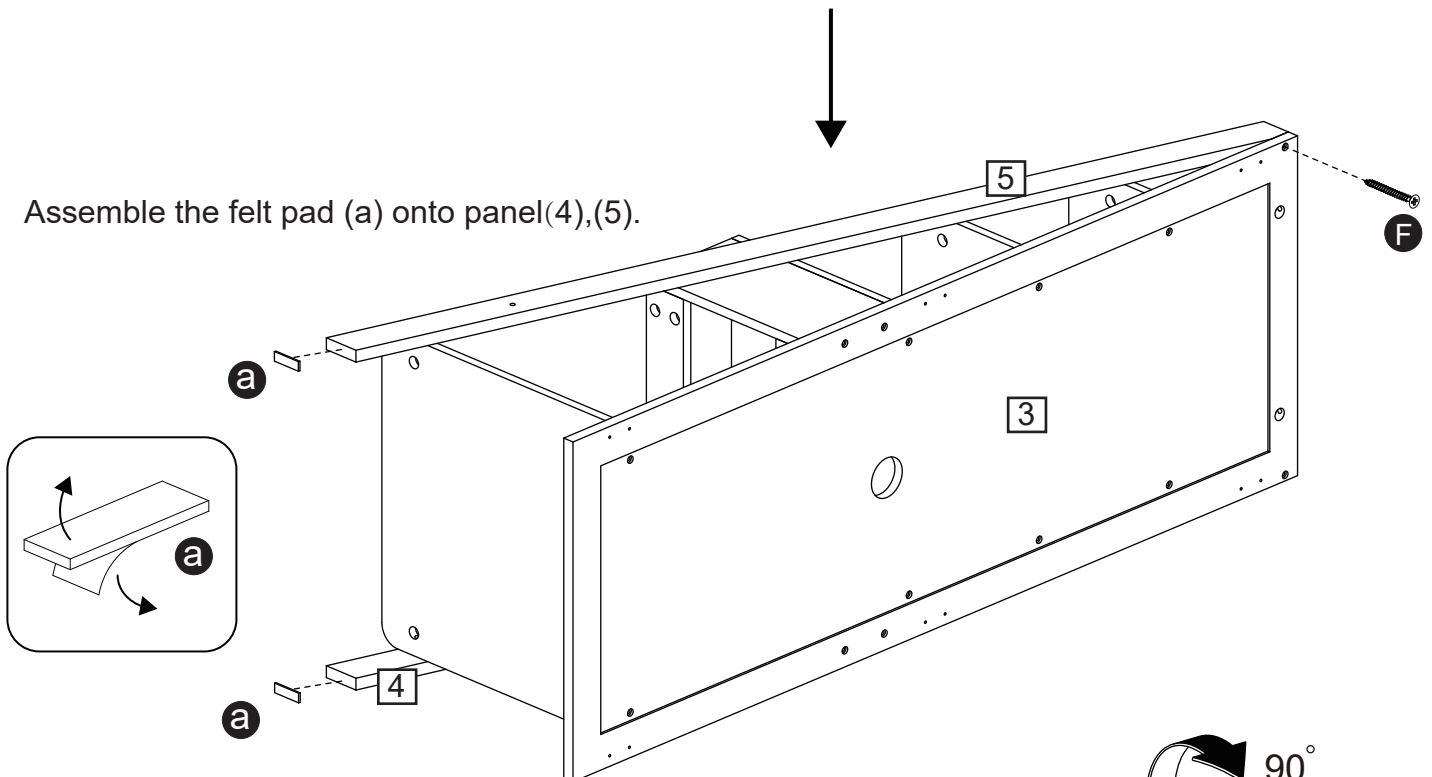


Attach panel (5) to panels (6), (7), (10), and (14), insert cam lock (C), and tighten. Use screw (F) to attach panel (5) to panel (3).

Rotate the frame
after this step as next step

Assembly Instructions

Step 25

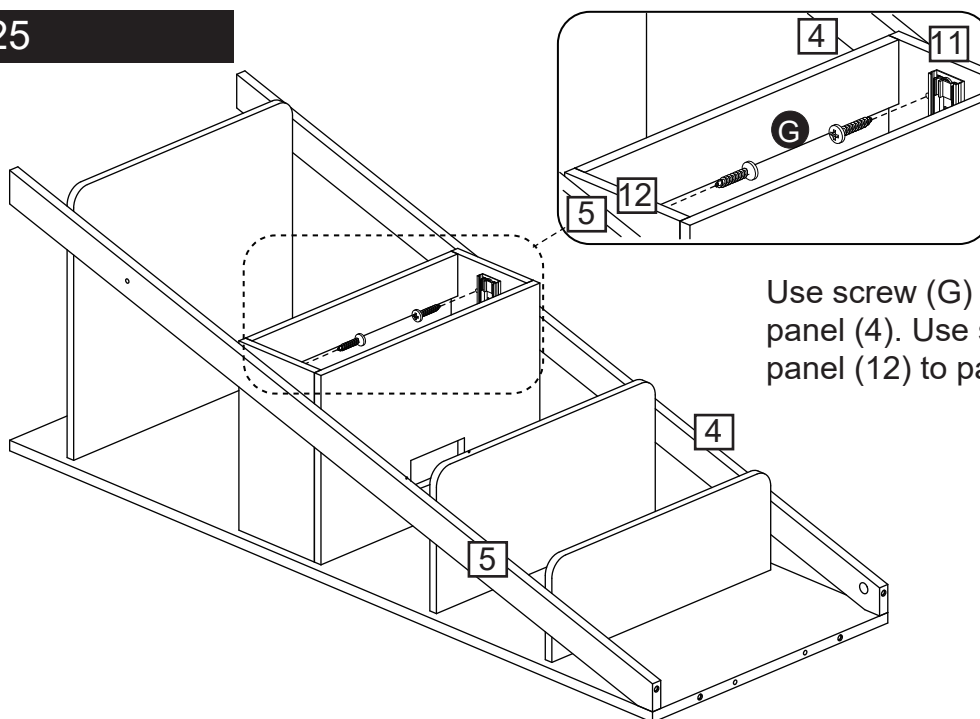

G x2



Use screw (G) to fix panel (11) to panel (4). Use screw (G) to fix panel (12) to panel (5).








Rotate the frame after this step as next step

Step 26

CAM-LOCK


Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

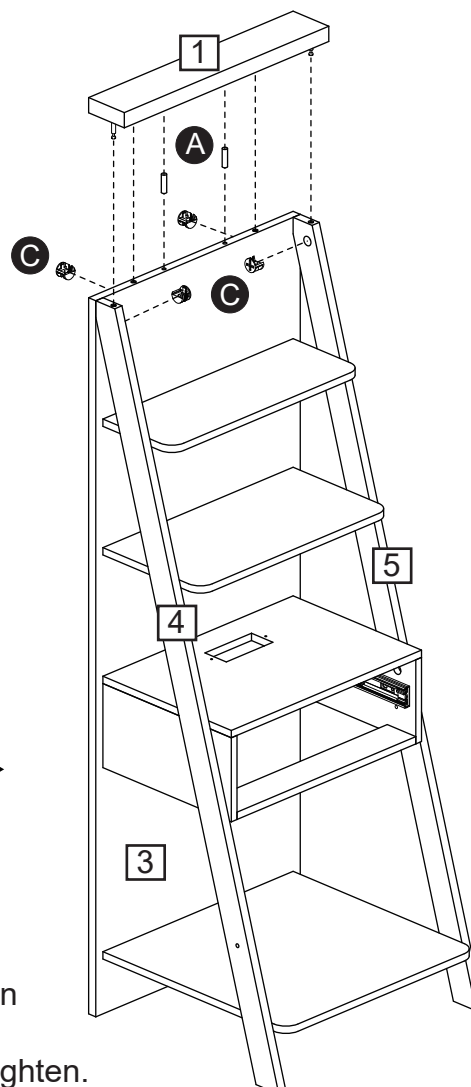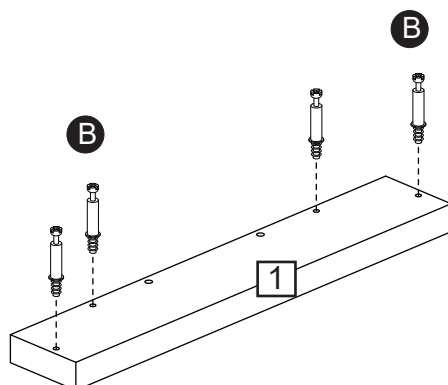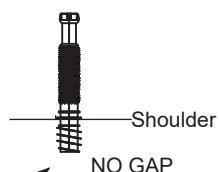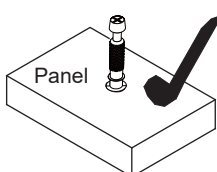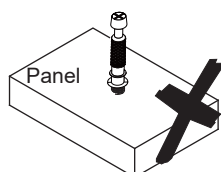

A x2



B x4




C x4



Lock cam bolt (B) to panel (1). First, insert wooden dowel (A) into panel (3), then attach panel (1) to panels (3), (4), and (5), insert cam lock (C), and tighten.

Assembly Instructions

Step 27

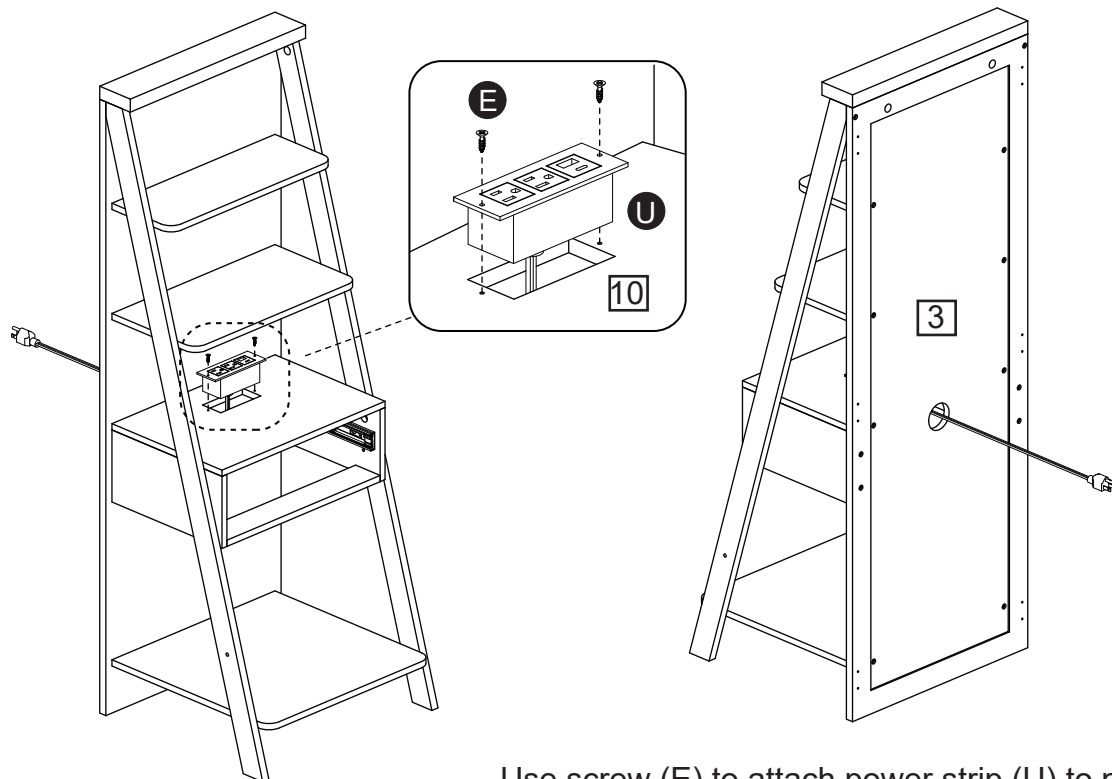


E x2




3x12mm

U x1




Z x1



Use screw (E) to attach power strip (U) to panel (10).

Step 28

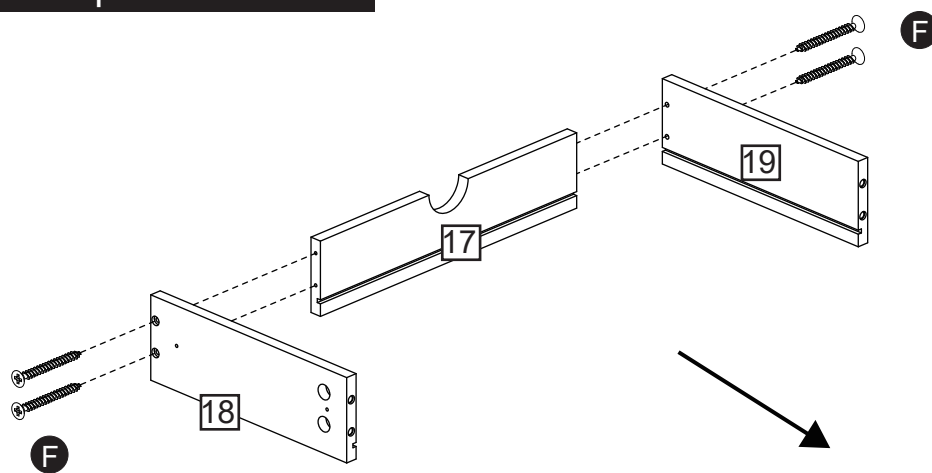


F x4



4x30mm

Use screw (F) to fix panels (18) and (19) to panel (17).
Insert panel (20) into the groove of panels (18) and (19).

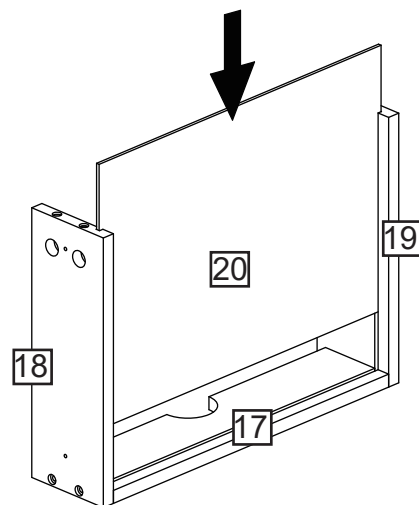


Assembly Instructions


Step 29

CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

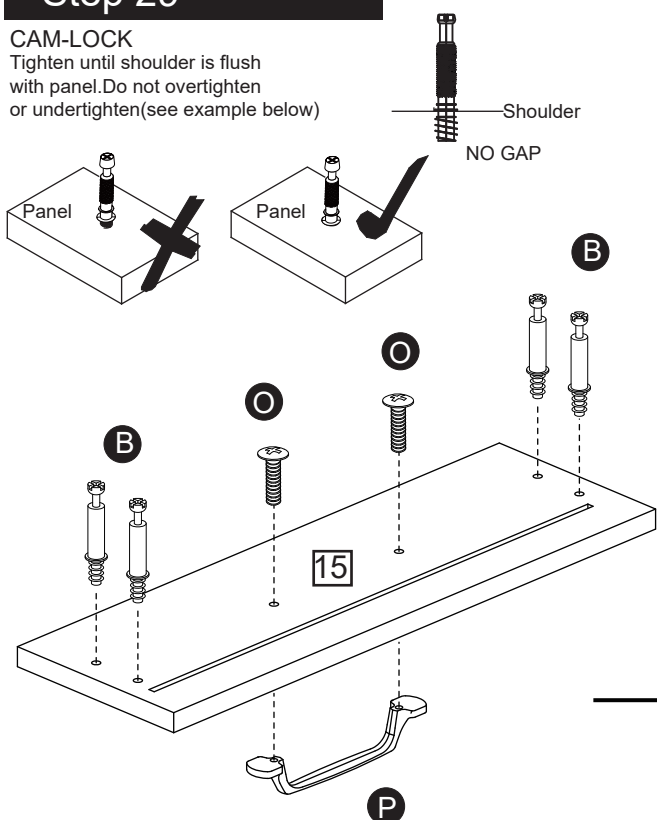

B x4




C x4




O x2



P x1




Attach panel (15) to panels (18) and (19), insert cam lock (C), and tighten.

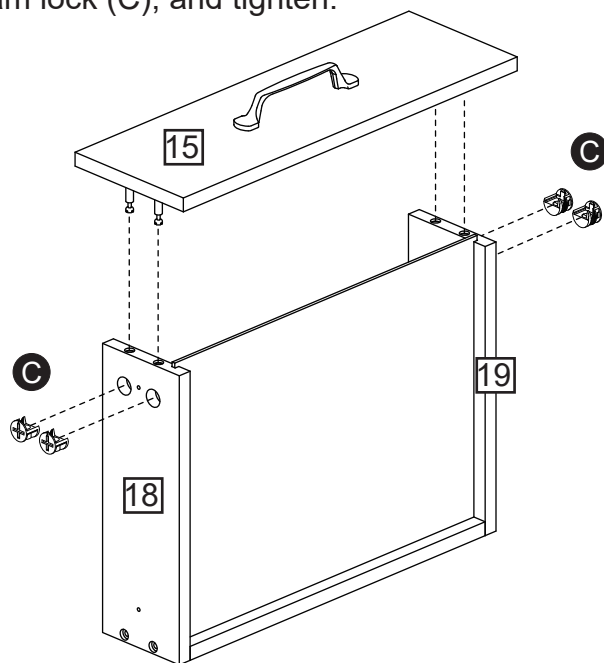

Lock cam bolt (B) to panel (15).
Use bolt (O) to attach handle (P) to panel (15).


Step 30

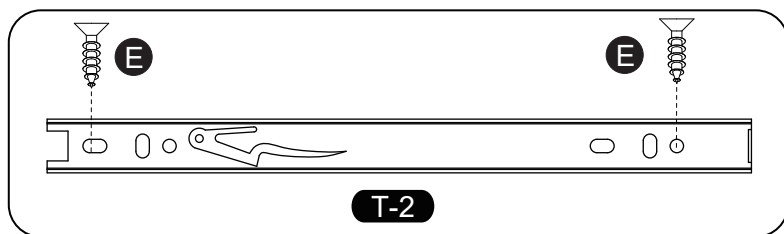

E x4



T x2



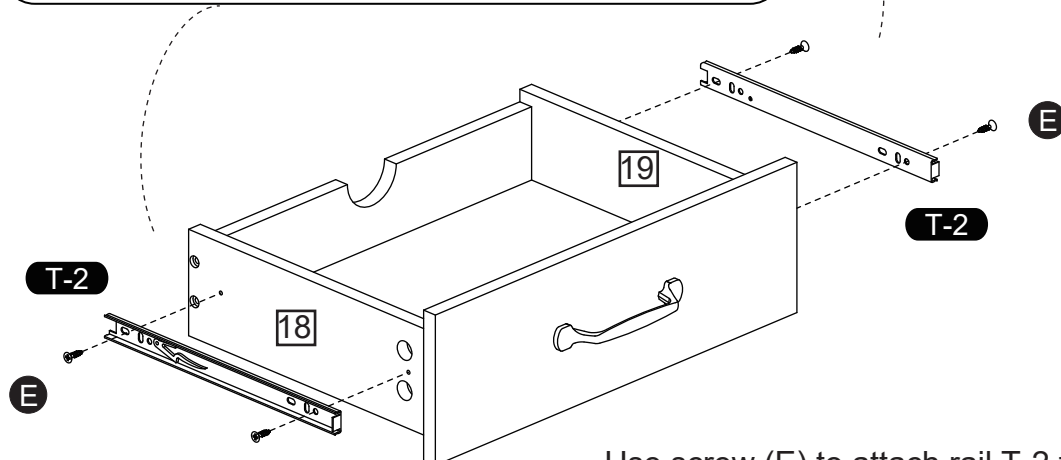


Use screw (E) to attach rail T-2 to panels (18) and (19).


Assembly Instructions

Step 31

1. Drawers must be horizontally put into the cabinets.
2. Make sure both sides sliders match well to avoid damage.

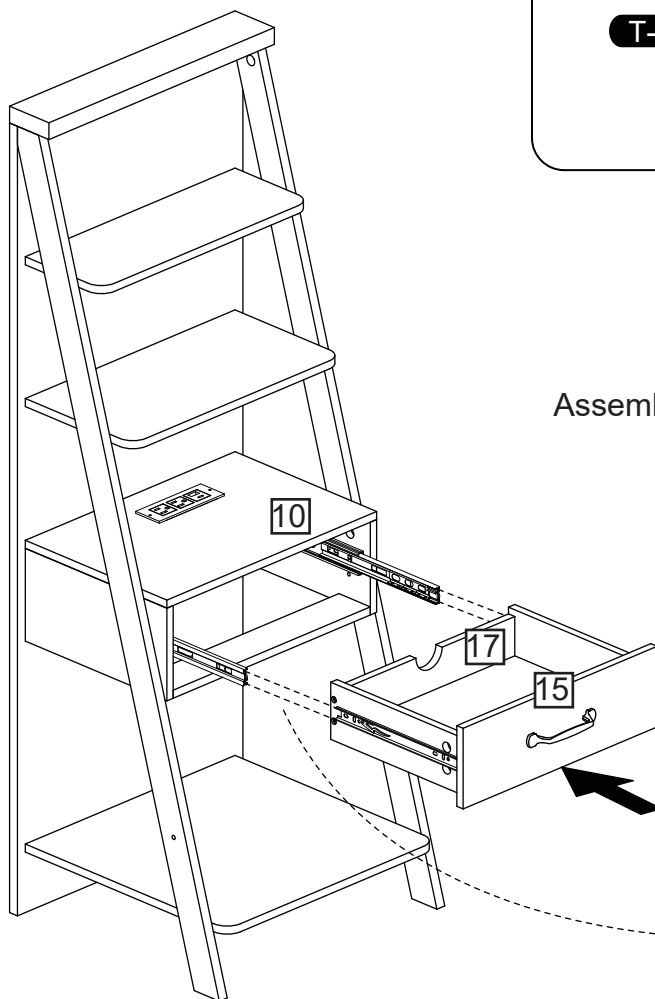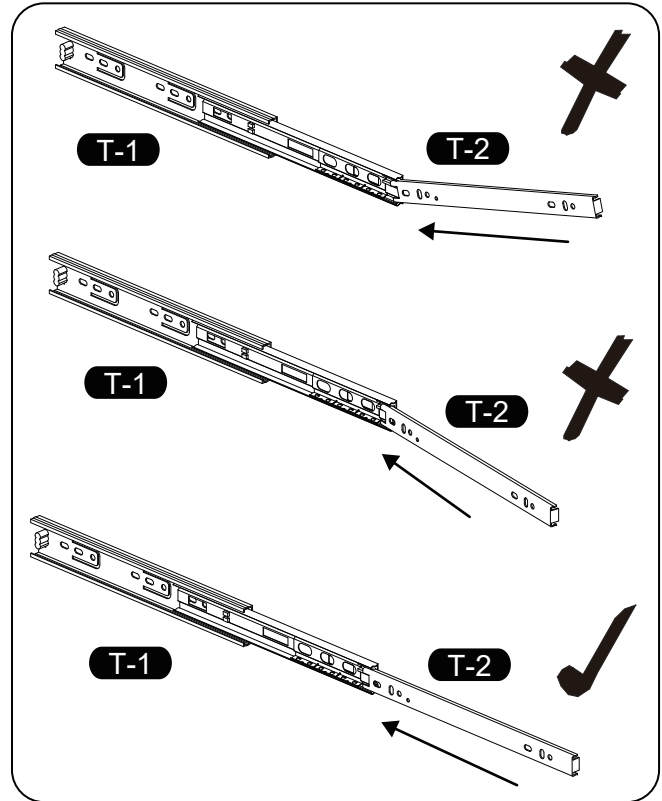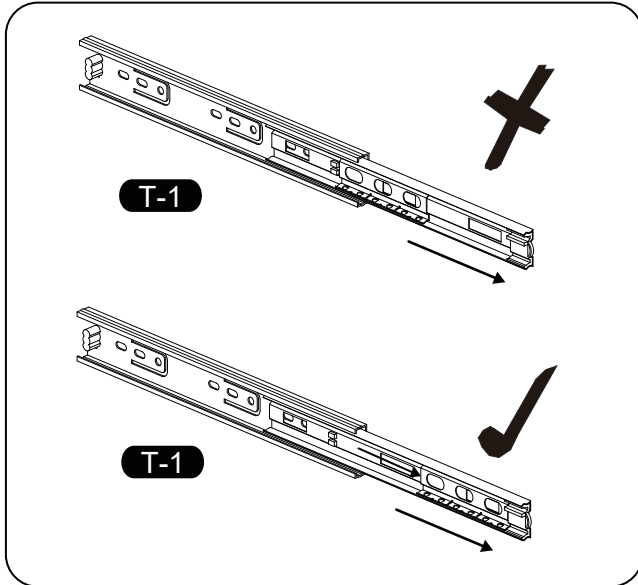

Assemble the drawer to the frame.

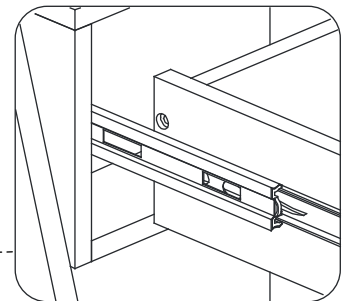


Assembly Instructions

Assembly Park C

Bed









See relevant pages 33 to 45

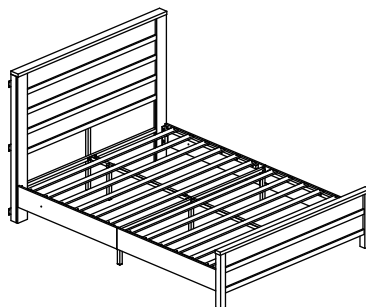

Step 32

CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

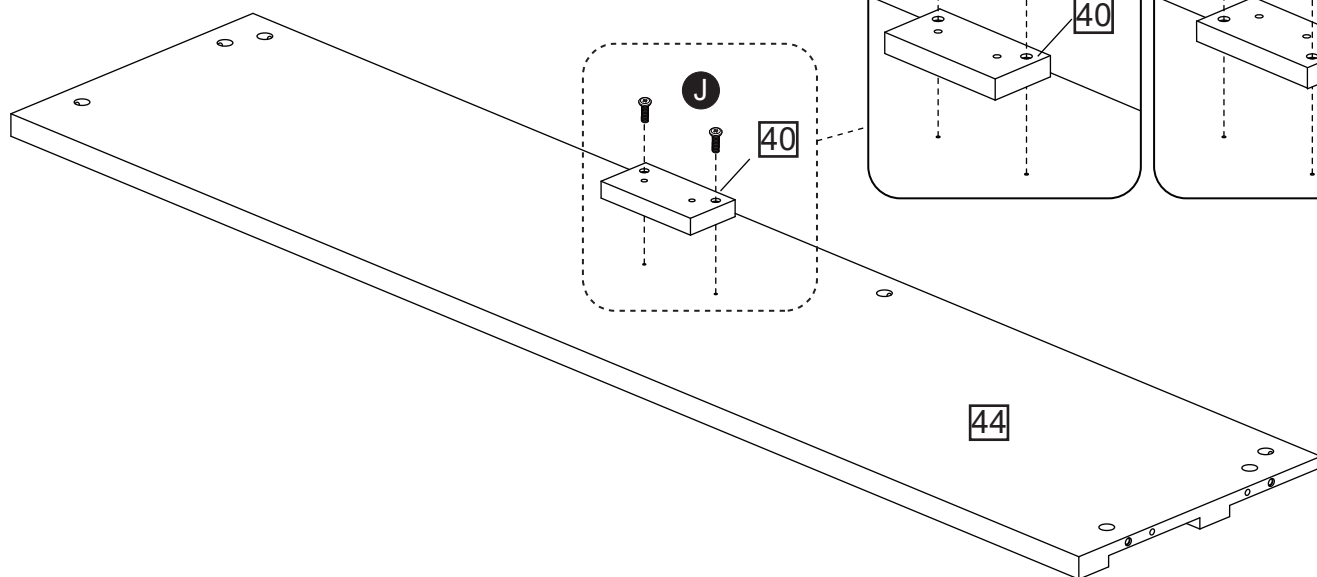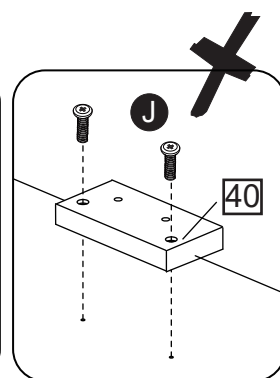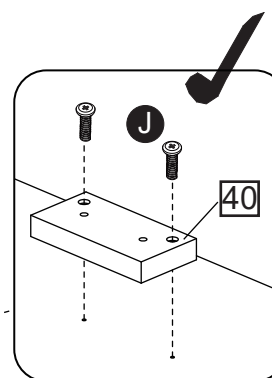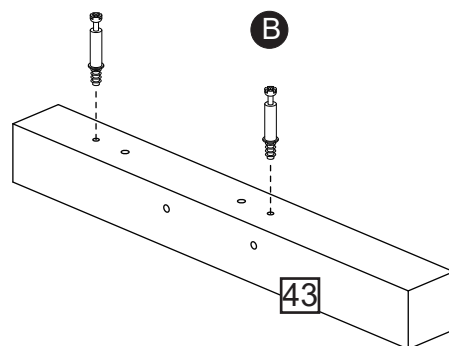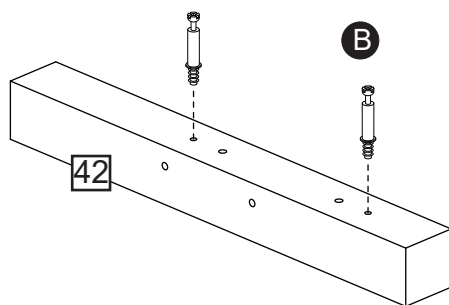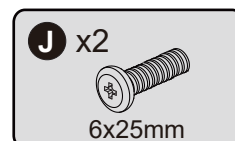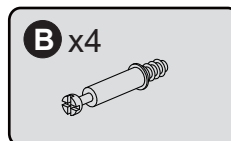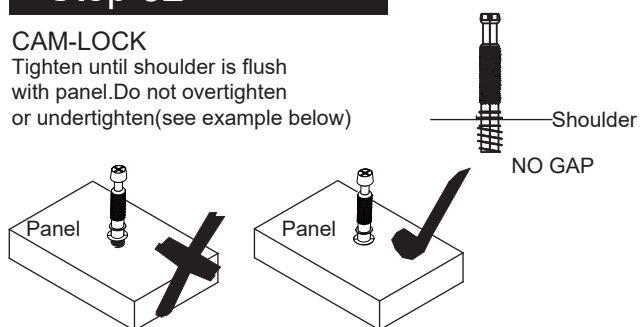




Lock cam bolts (B) to panels (42) and (43). Use bolt (J) to attach panel (40) to panel (44).

Assembly Instructions

Step 33

A x4
6x30mm

C x4

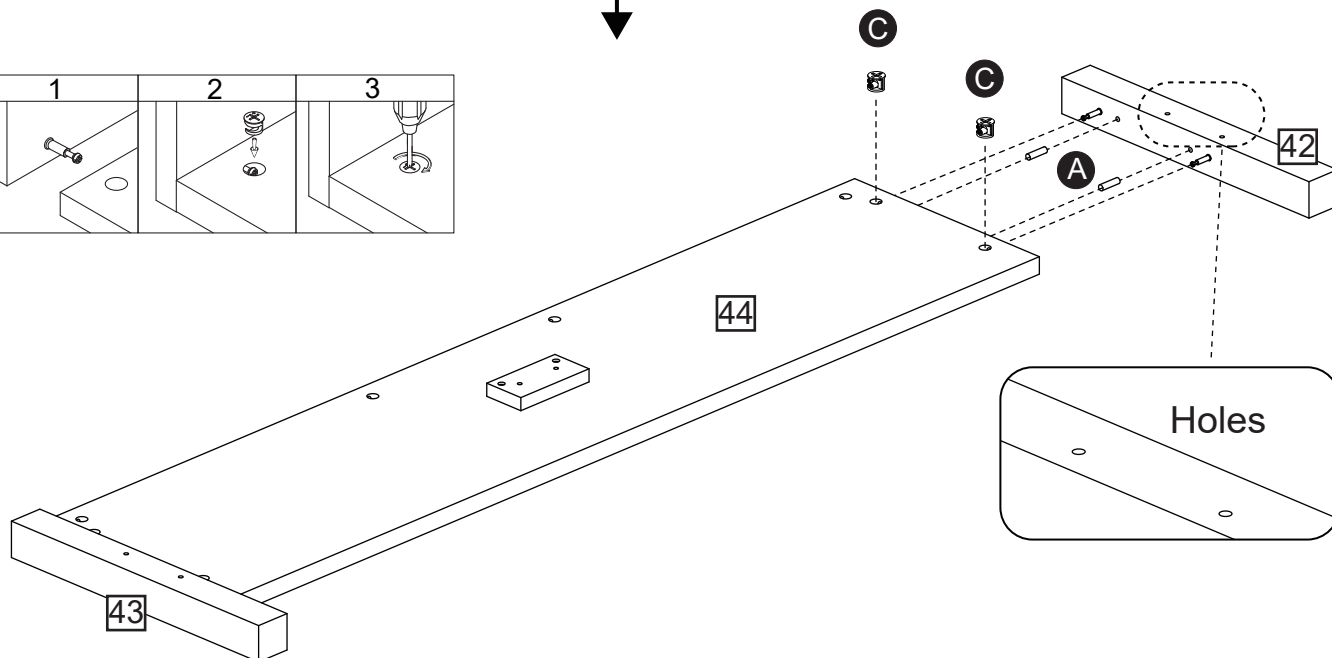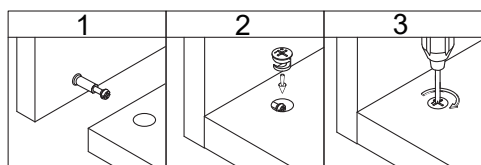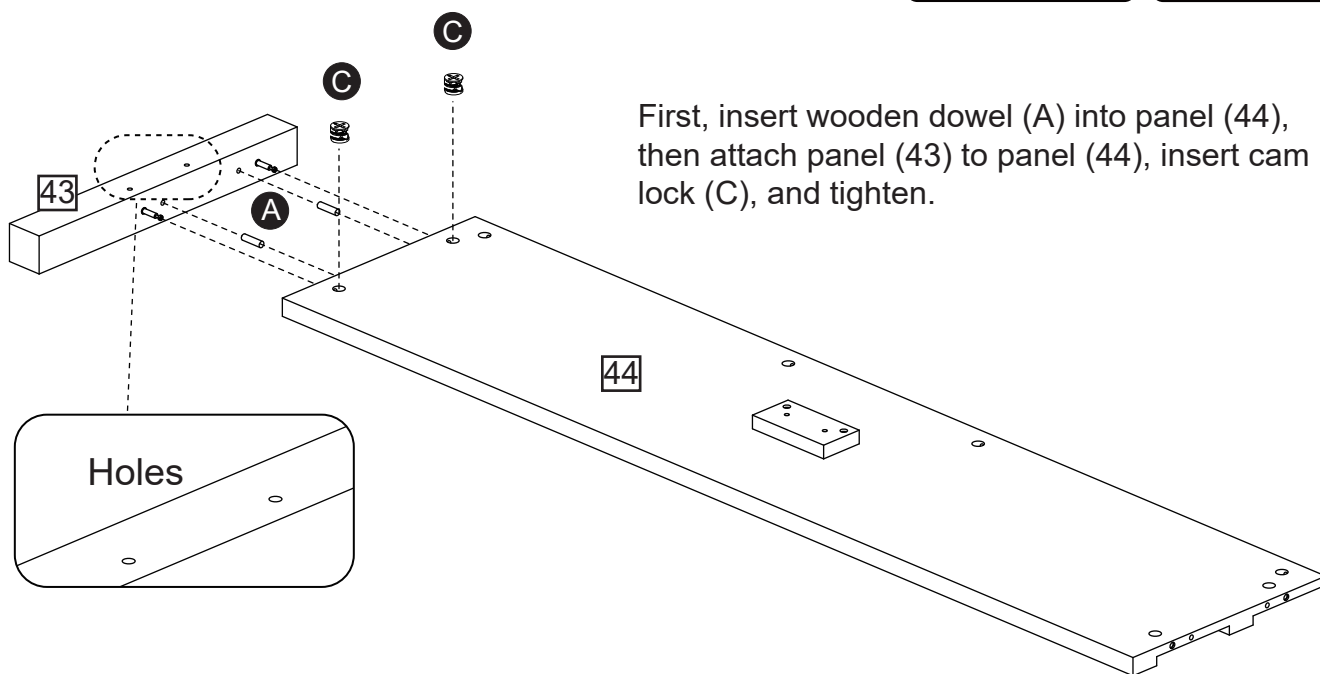




Rotate the frame
after this step as next step

Assembly Instructions

Step 34

CAM-LOCK



Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

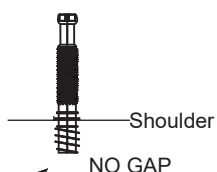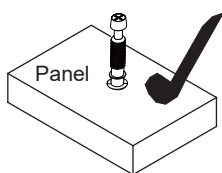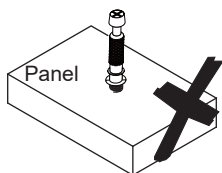

A x2
6x30mm

B x4

C x4

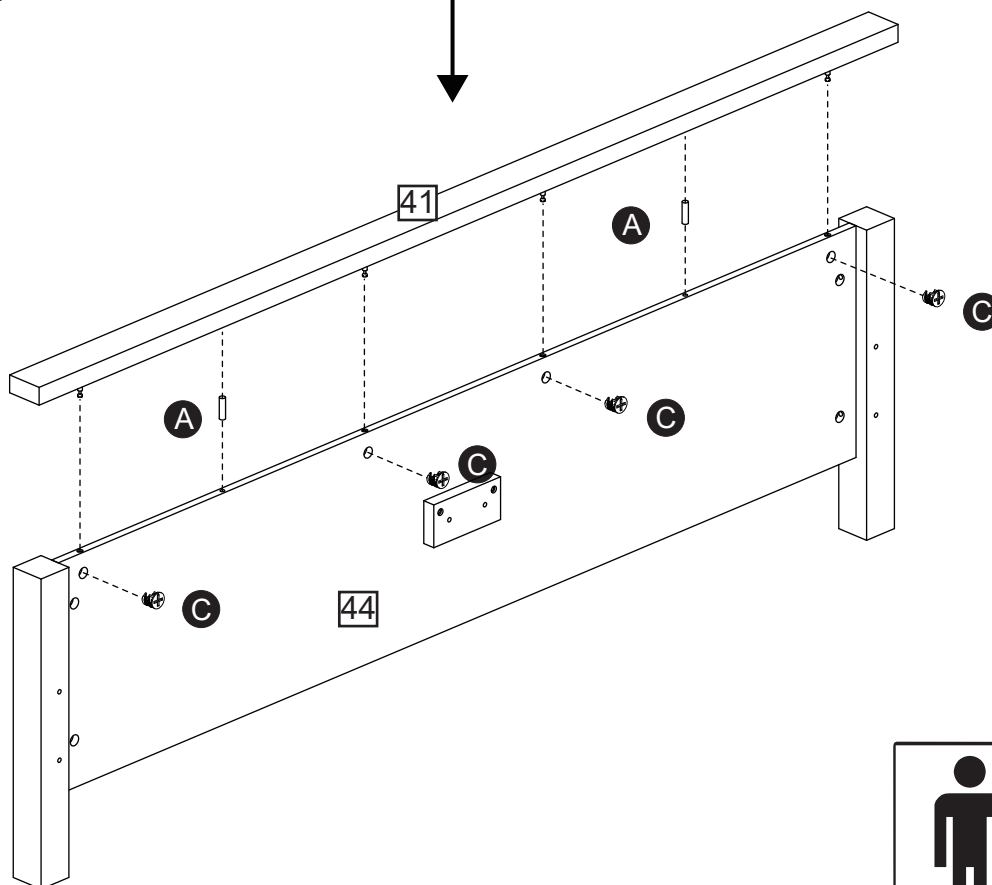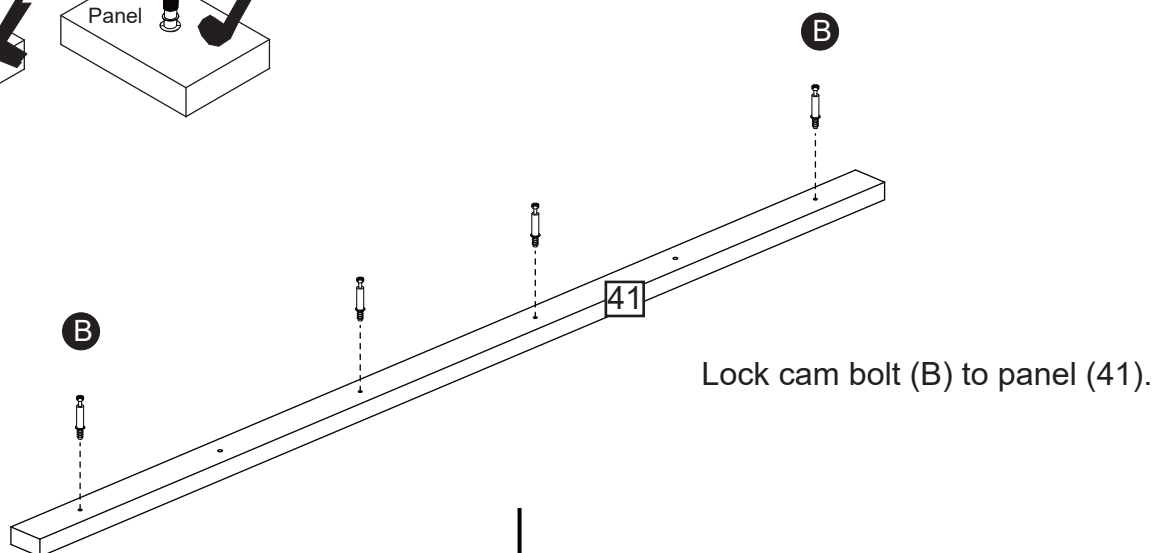



First, insert wooden dowel (A) into panel (44), then attach panel (41) to panel (44), insert cam lock (C), and tighten.





ASSEMBLY BY
2 PEOPLE

Assembly Instructions

Step 35

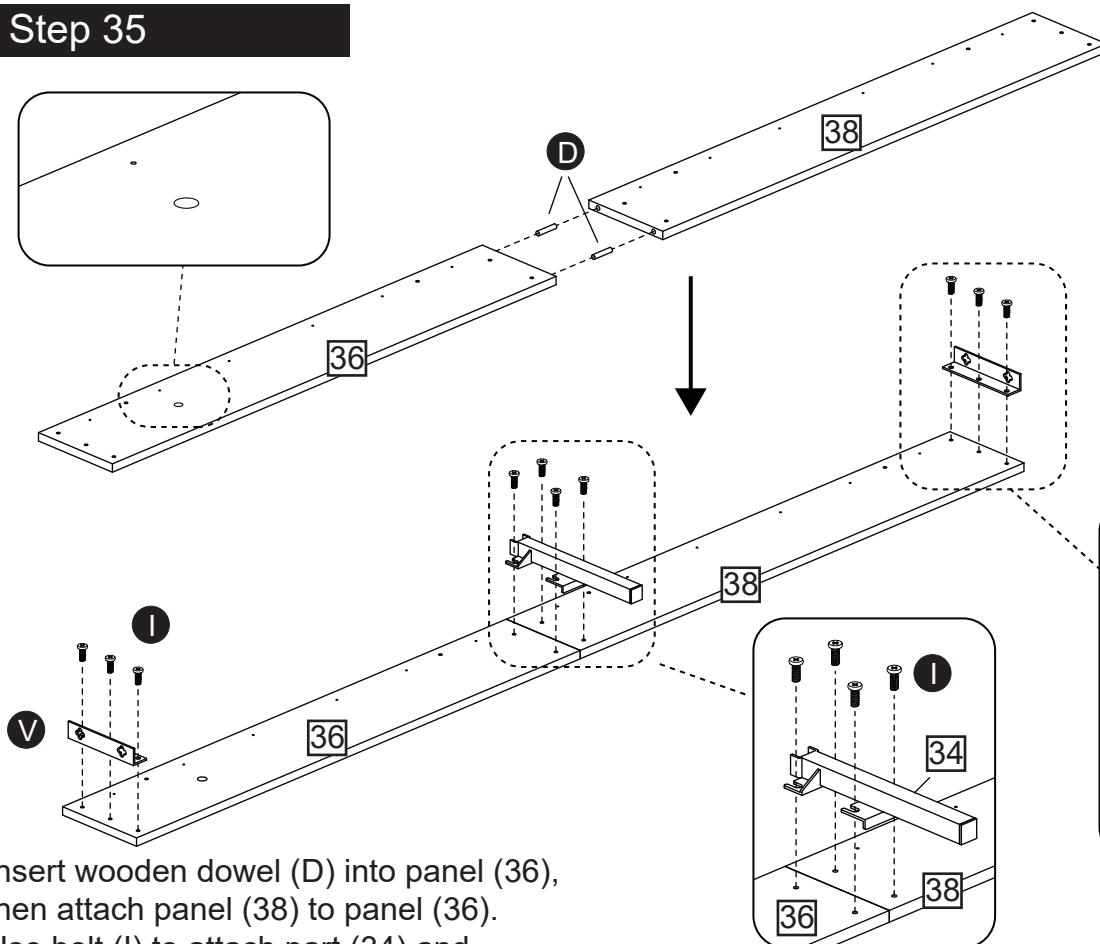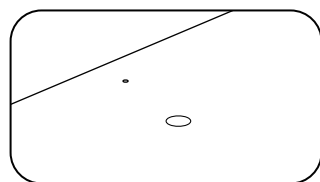


Insert wooden dowel (D) into panel (36), then attach panel (38) to panel (36). Use bolt (I) to attach part (34) and part (V) to panels (36) and (38).

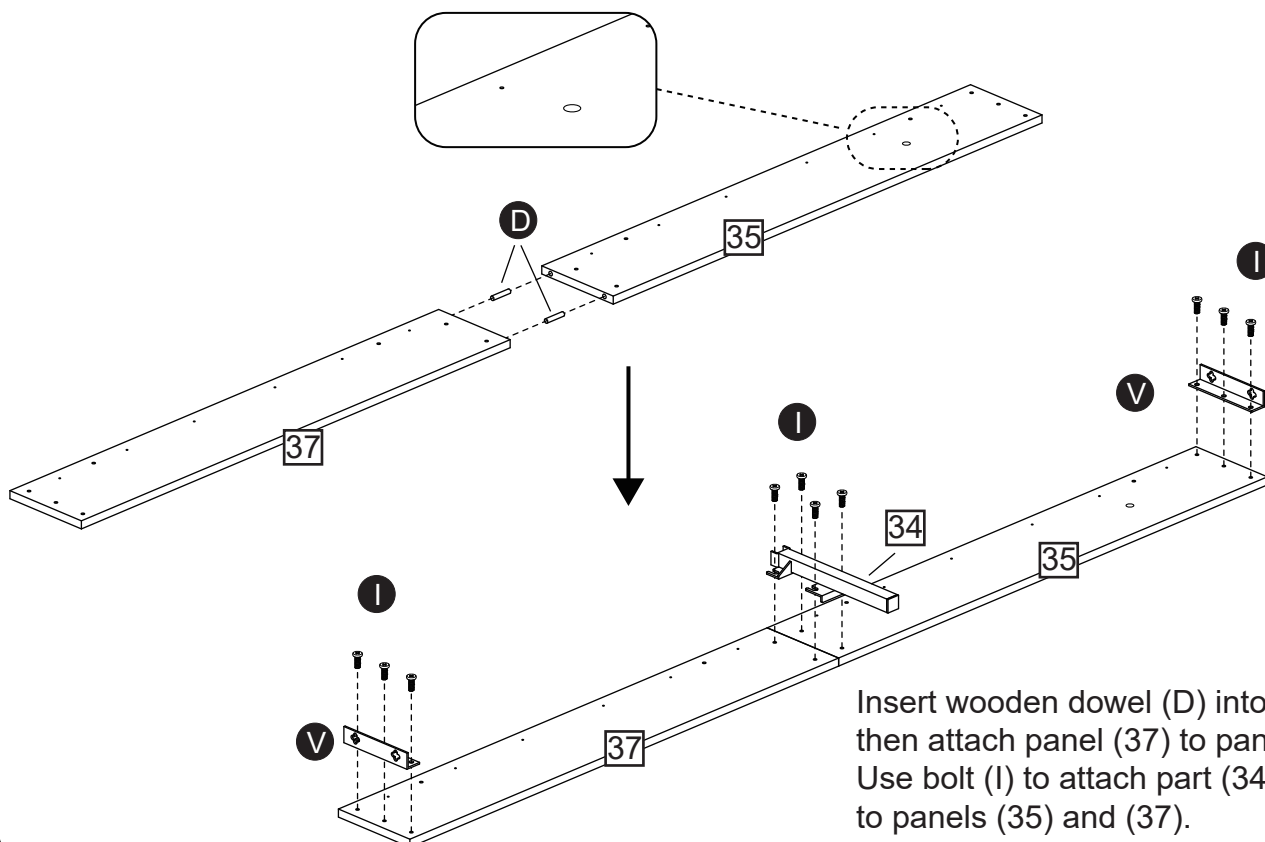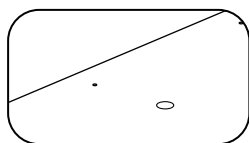

Insert wooden dowel (D) into panel (35), then attach panel (37) to panel (35). Use bolt (I) to attach part (34) and part (V) to panels (35) and (37).

Assembly Instructions

Step 36

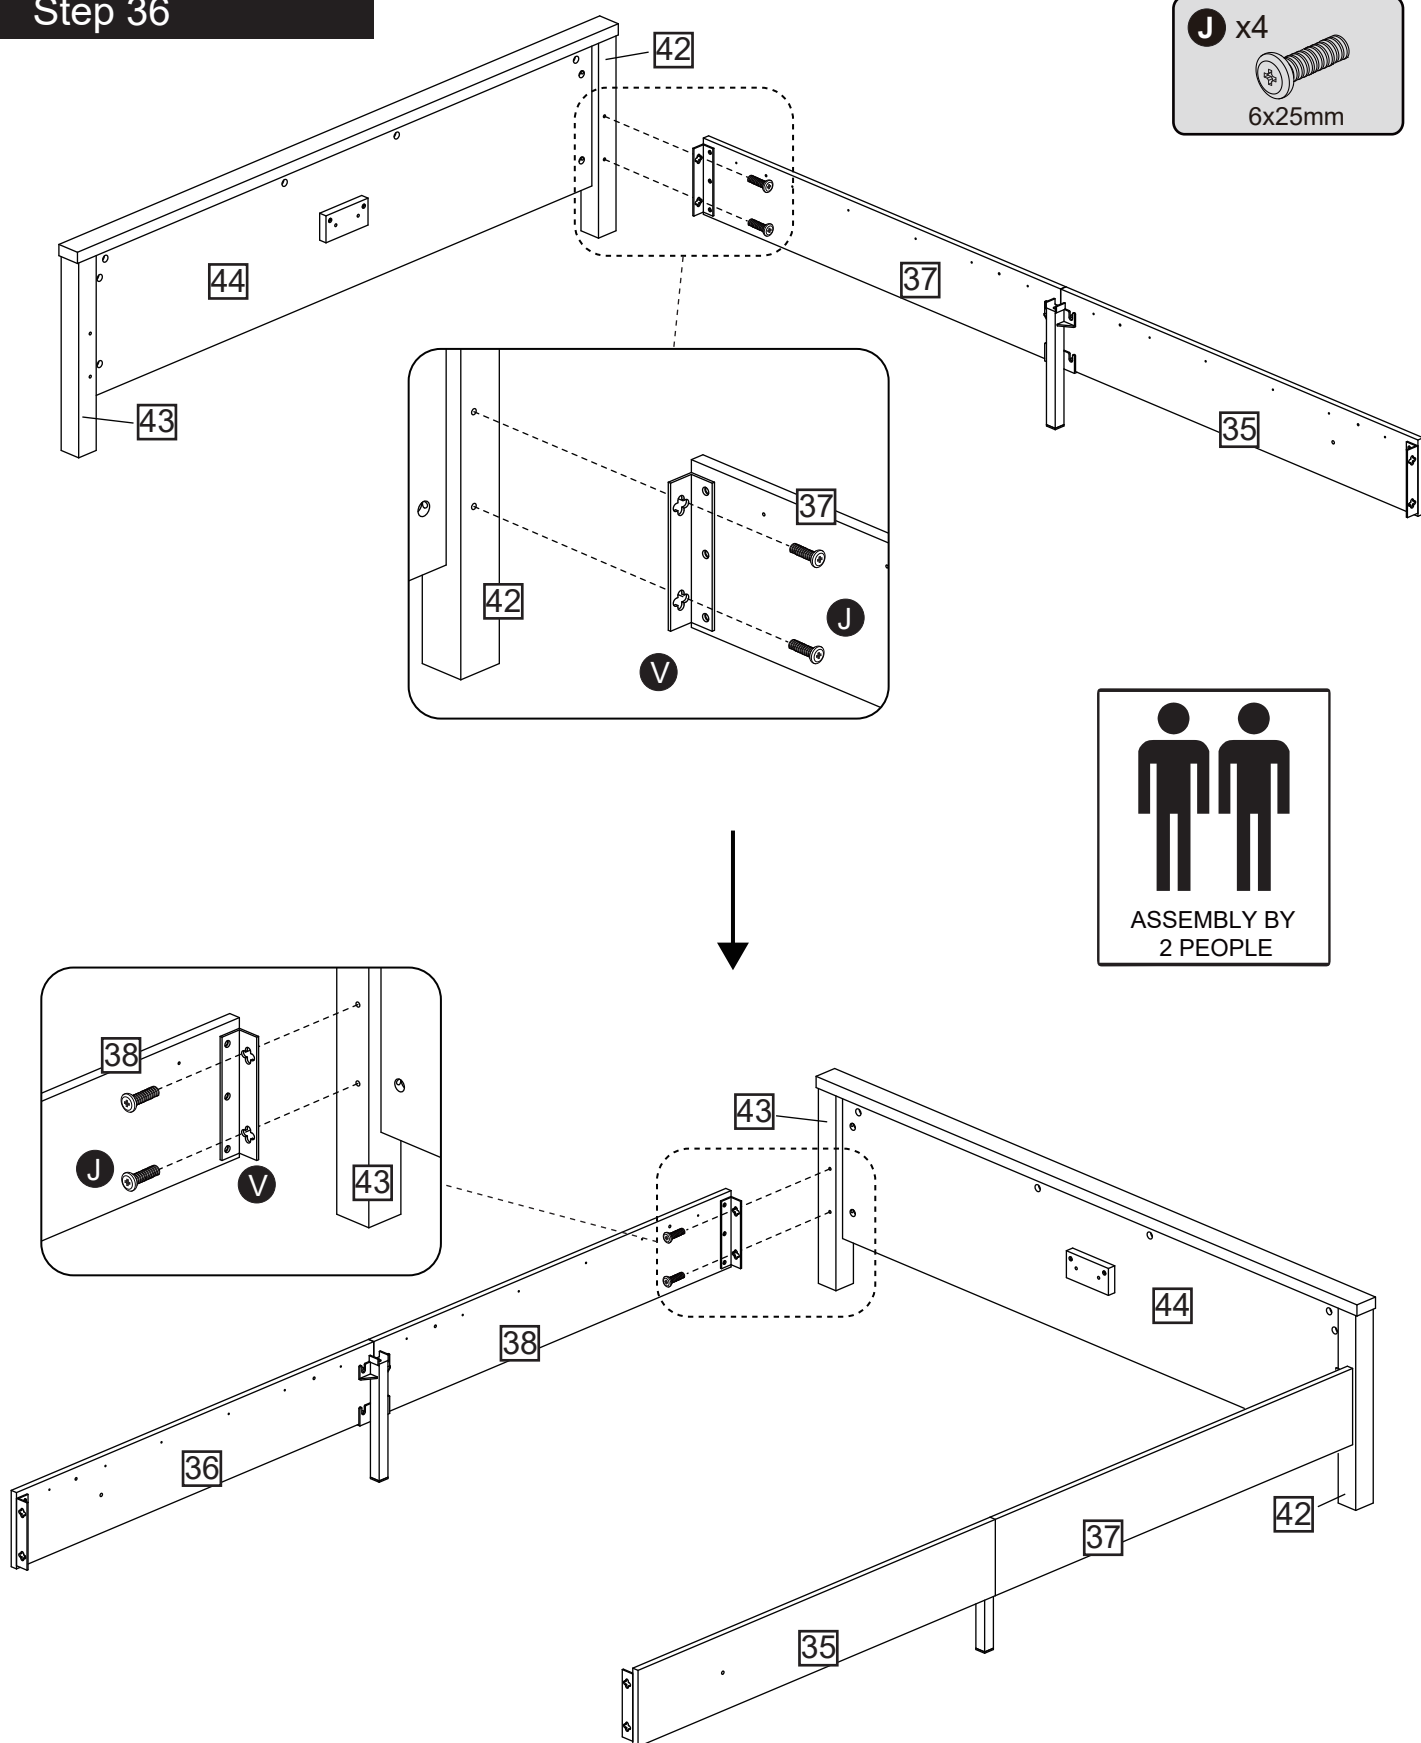

Get assistance: use bolt (J) to attach panel (37) to panel (42), and attach panel (38) to panel (43).

Assembly Instructions




Step 37

E x16
3x12mm

W x4

Y x6
6x40mm

Insert wooden dowel (A) into panel (24), then attach panel (24) to panel (25).

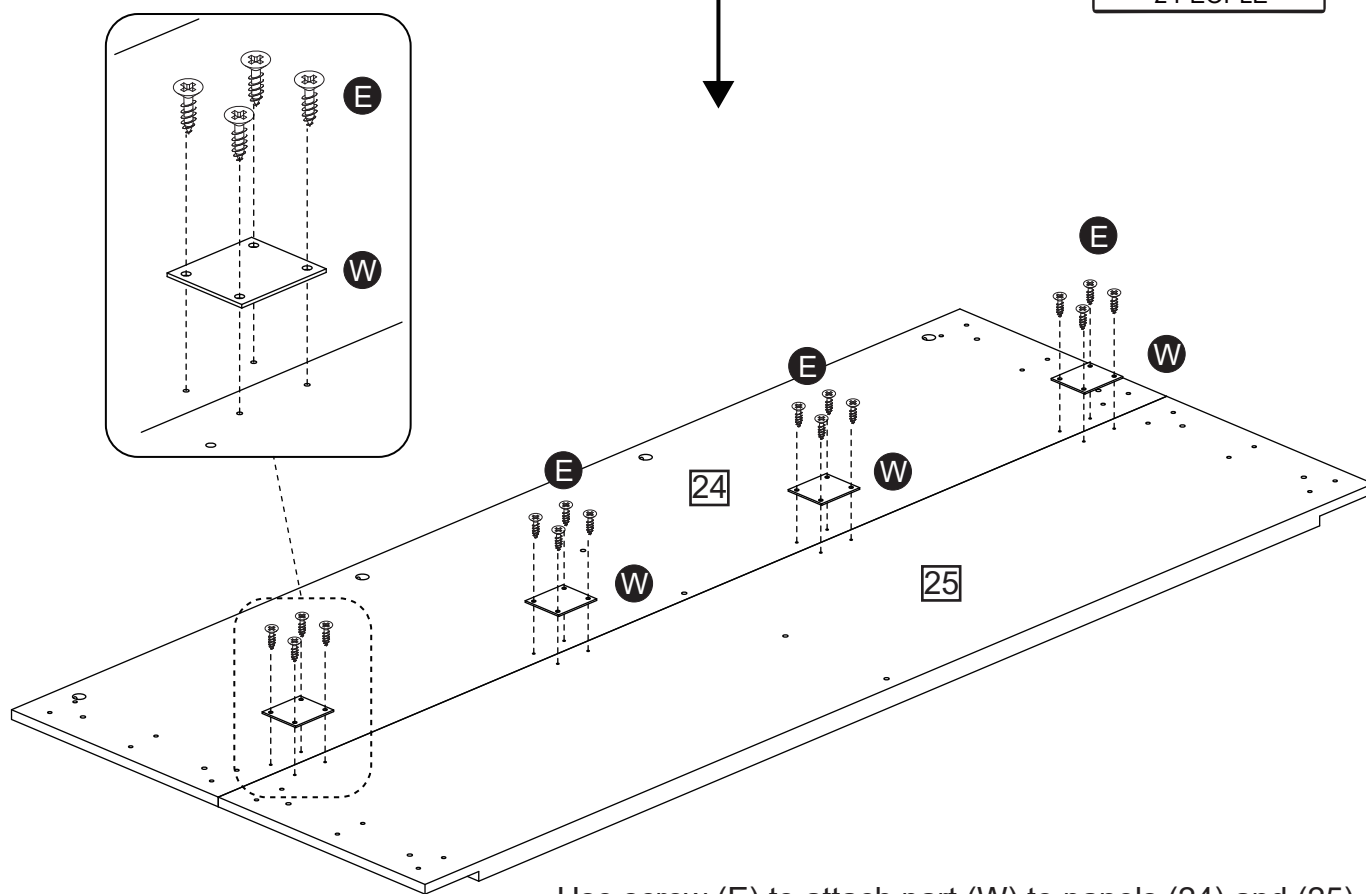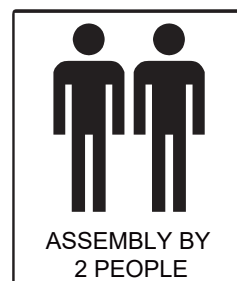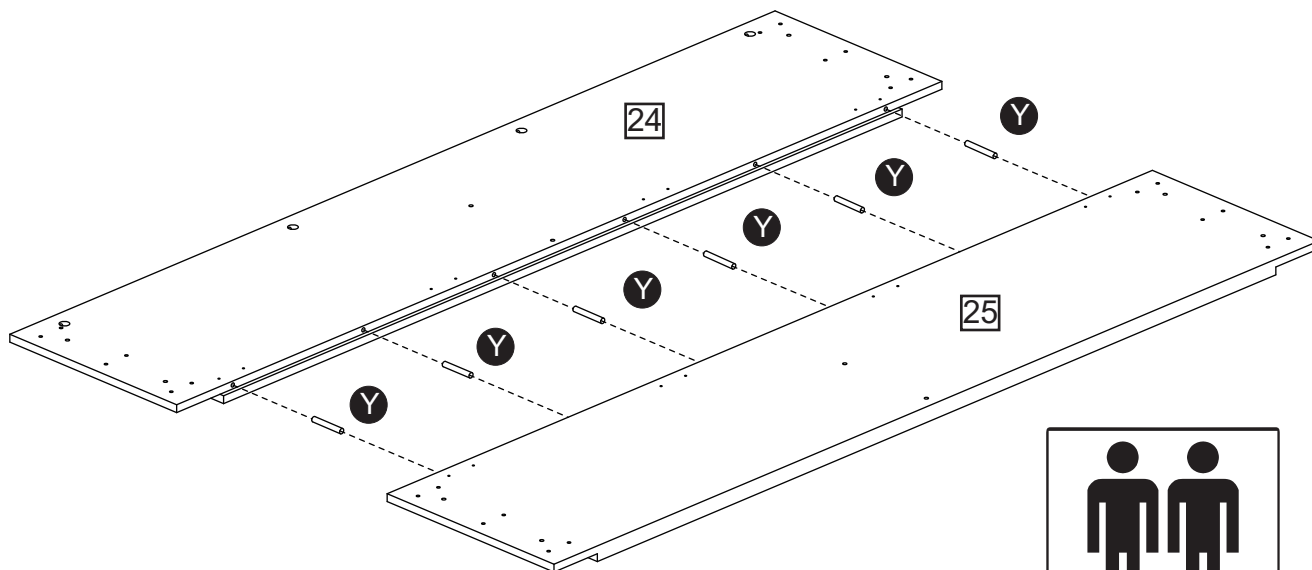




Use screw (E) to attach part (W) to panels (24) and (25).

Assembly Instructions

Step 38

CAM-LOCK


Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

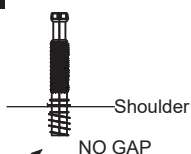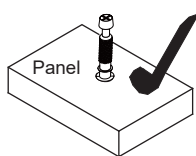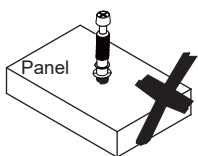


A x6
6x30mm

B x8

C x8

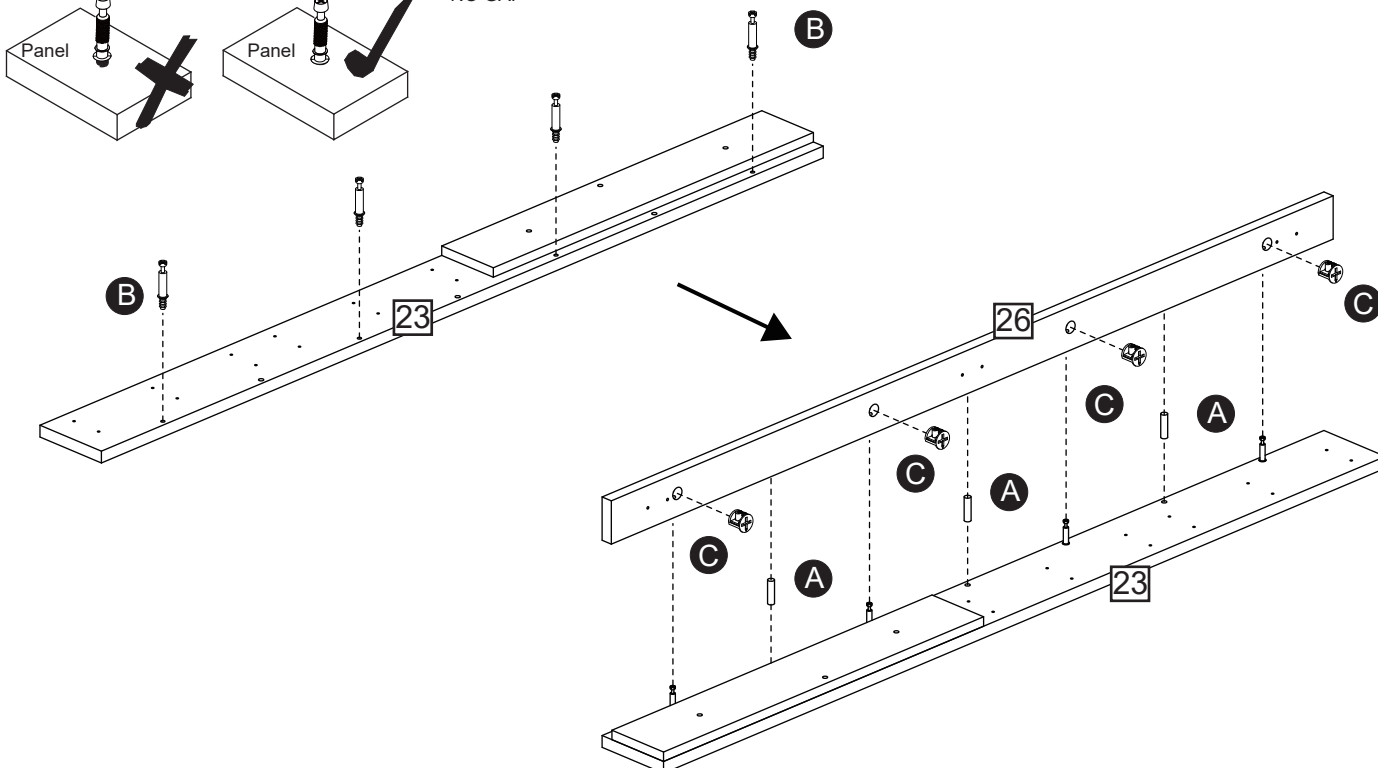


Lock cam bolt (B) to panel (23). First, insert wooden dowel (A) into panel (23), then attach panel (26) to panel (23), insert cam lock (C), and tighten.

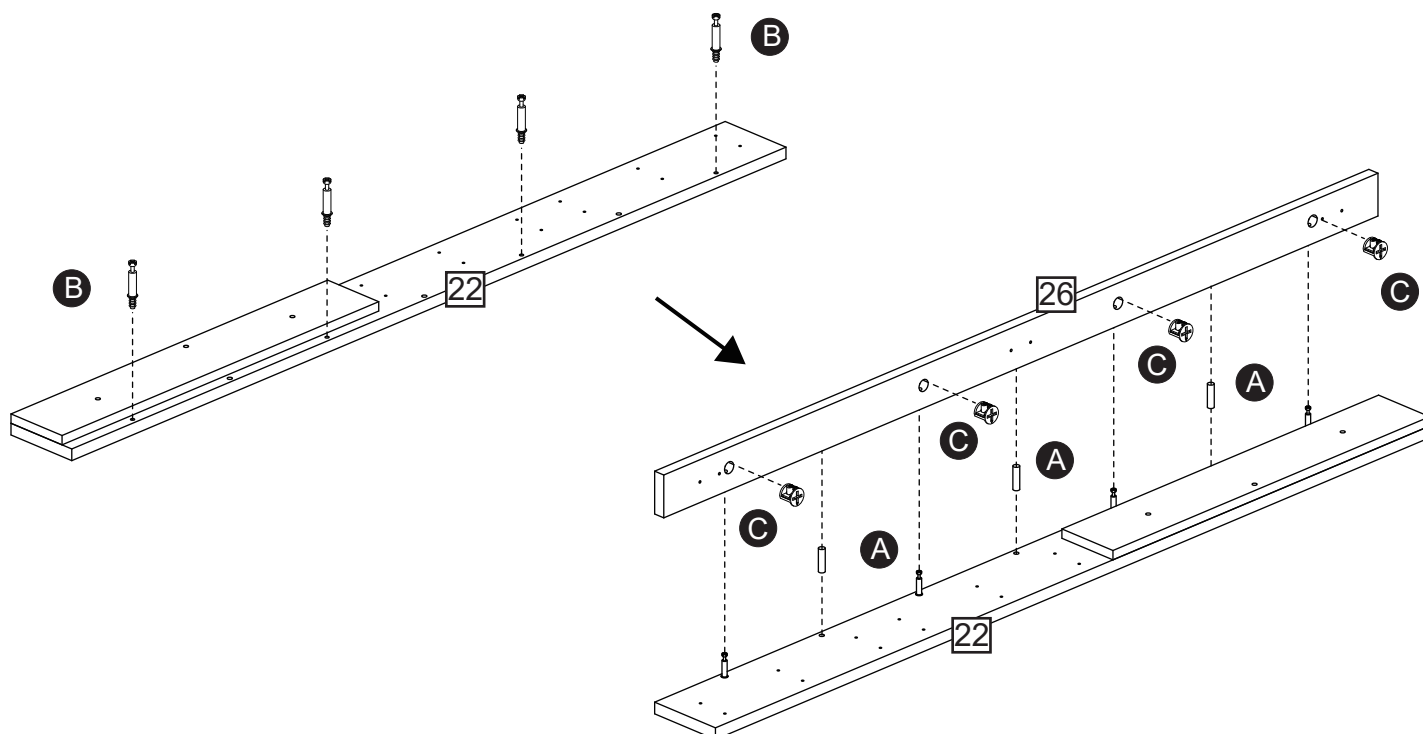

Lock cam bolt (B) to panel (22). First, insert wooden dowel (A) into panel (22), then attach panel (26) to panel (22), insert cam lock (C), and tighten.

Assembly Instructions

Step 39

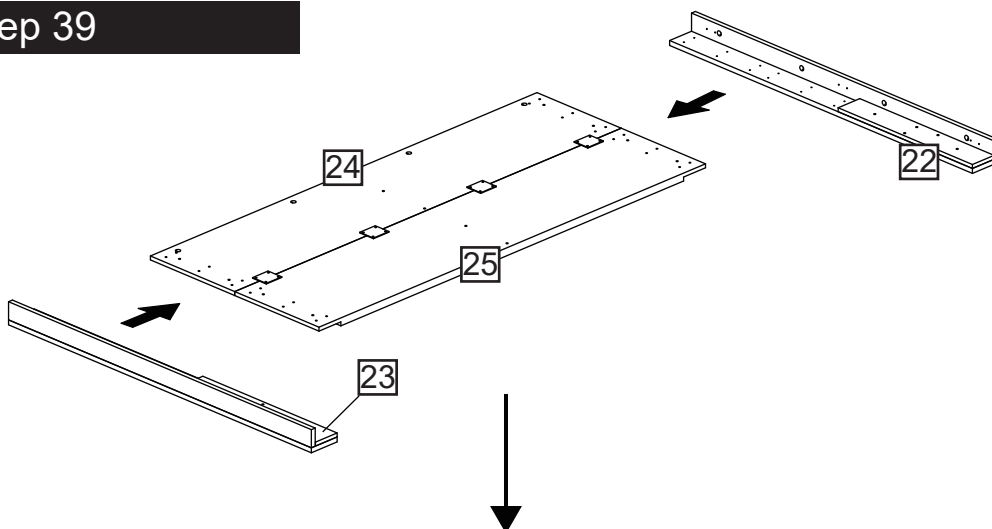

E x12



G x24






I x2



X x6



Use screw (G) to attach panels (24) and (25) to panels (22) and (23).

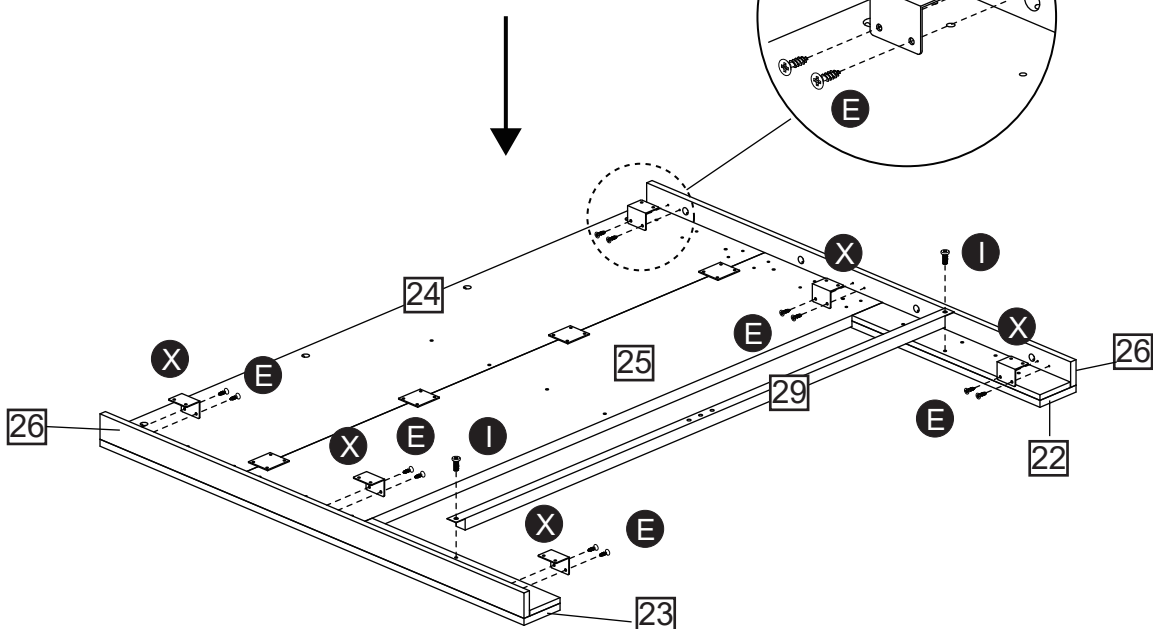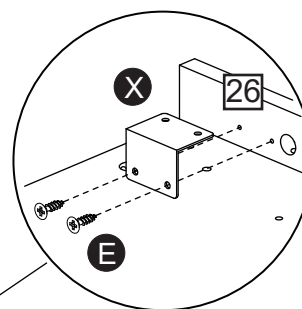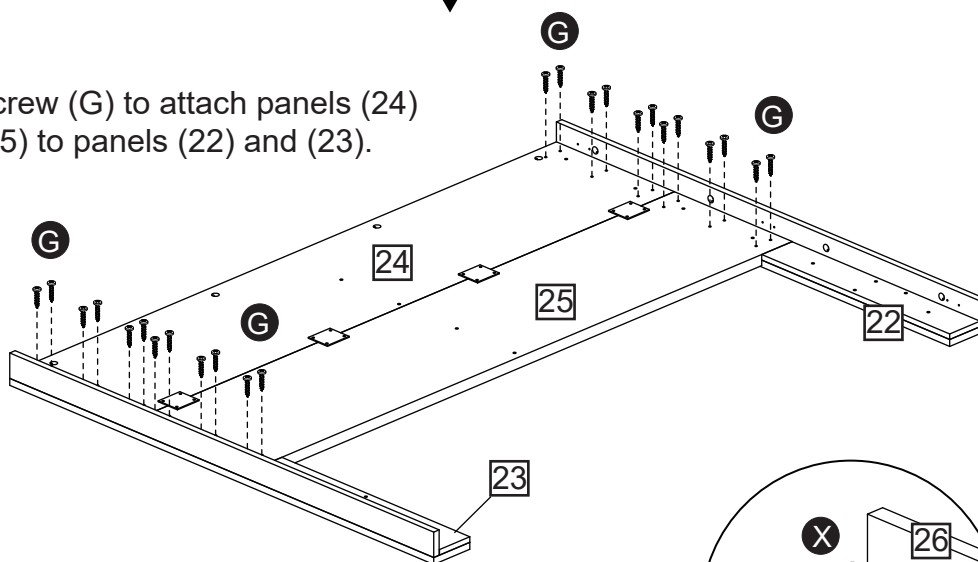


Use screw (E) to attach part (X) to panel (26).
Use bolt (I) to attach panel (29) to panels (22) and (23).

Assembly Instructions

Step 40





Use bolt (K) and wrench (R) to attach part (27) to panels (22), (23), (24), and (25).

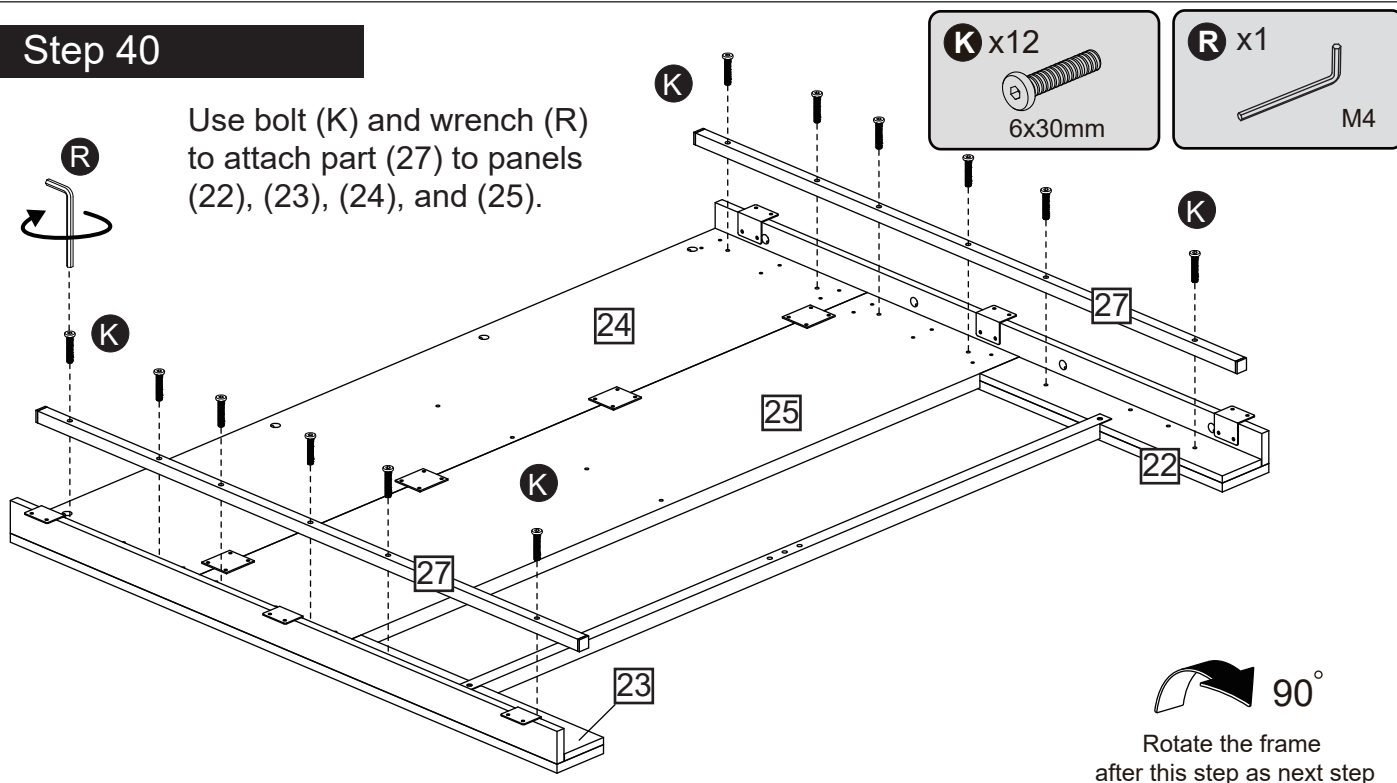




Step 41

CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

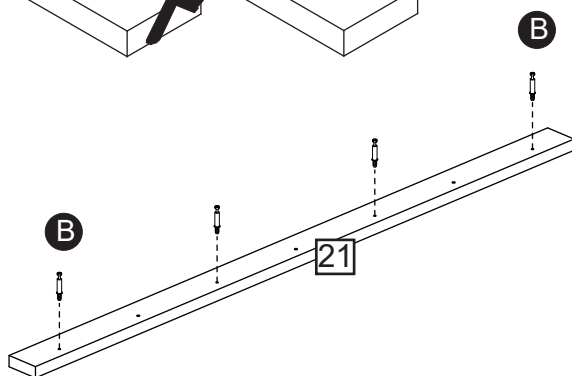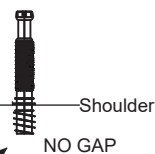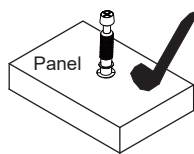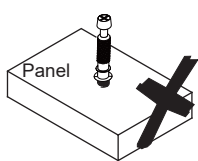


Lock cam bolt (B) to panel (21).

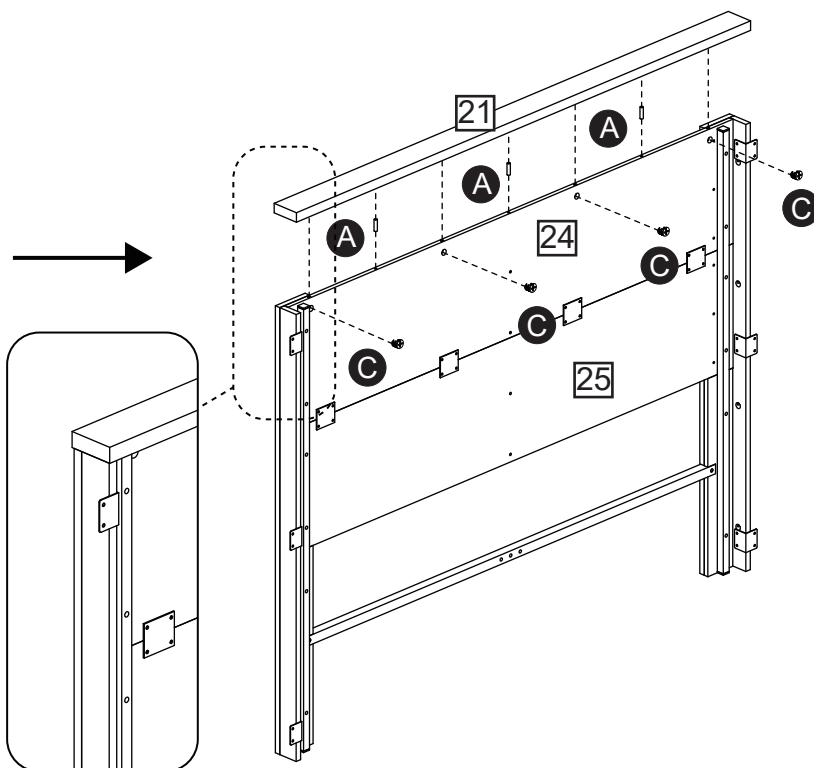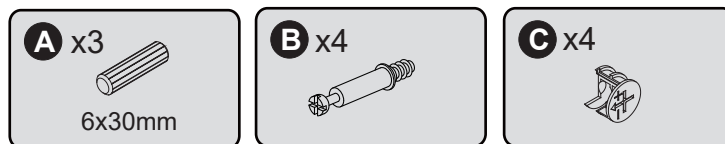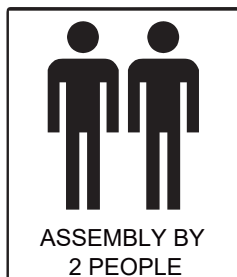

First, insert wooden dowel (A) into panel (24), then attach panel (21) to panel (24), insert cam lock (C), and tighten.


Assembly Instructions

Step 42

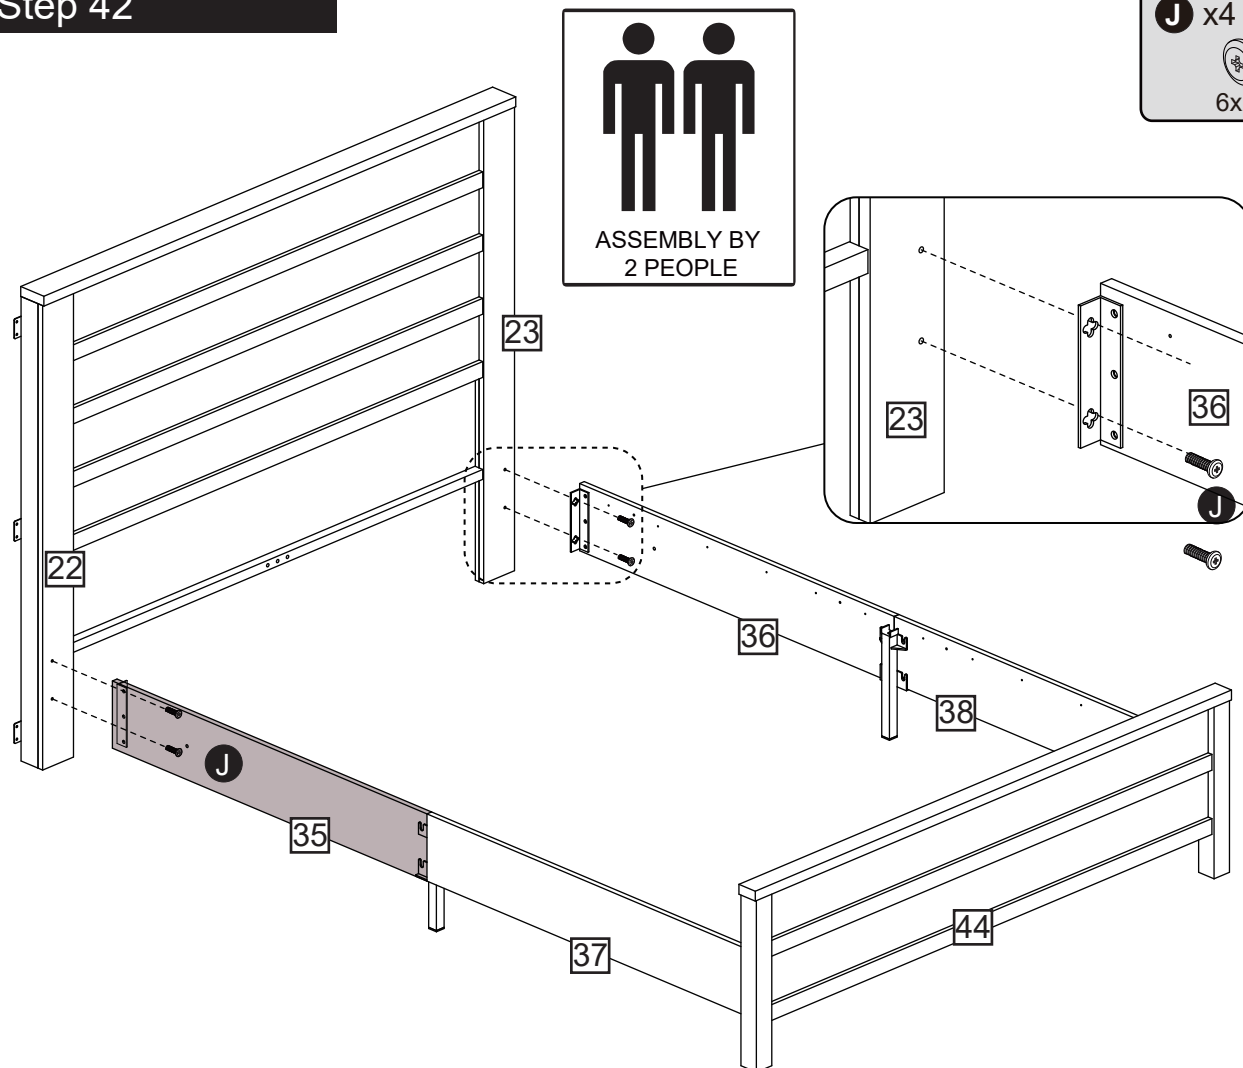

Get assistance: use bolt (J) to attach panel (36) to panel (23), and attach panel (35) to panel (22).


Step 43

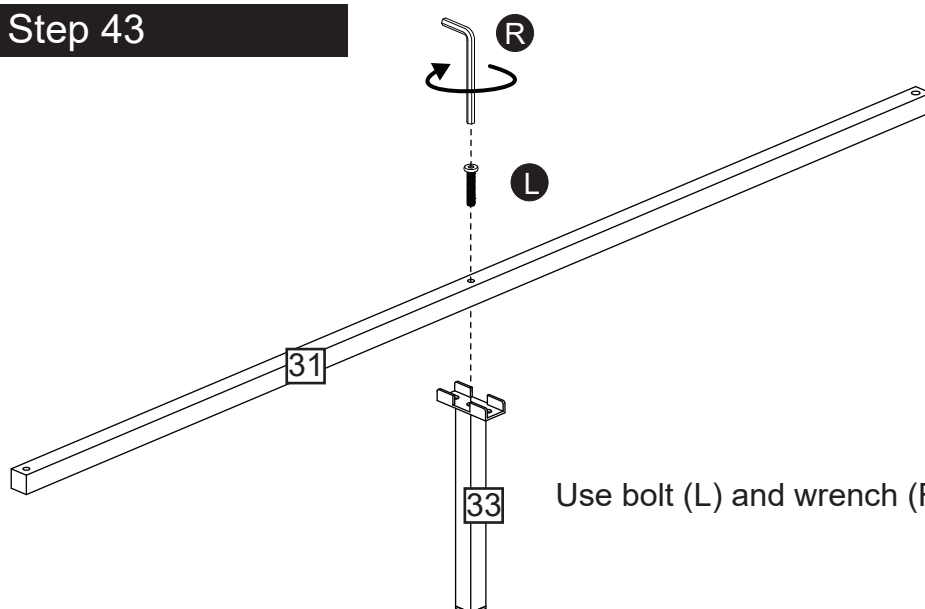

Use bolt (L) and wrench (R) to attach part (31) to part (33).


Assembly Instructions

Step 44

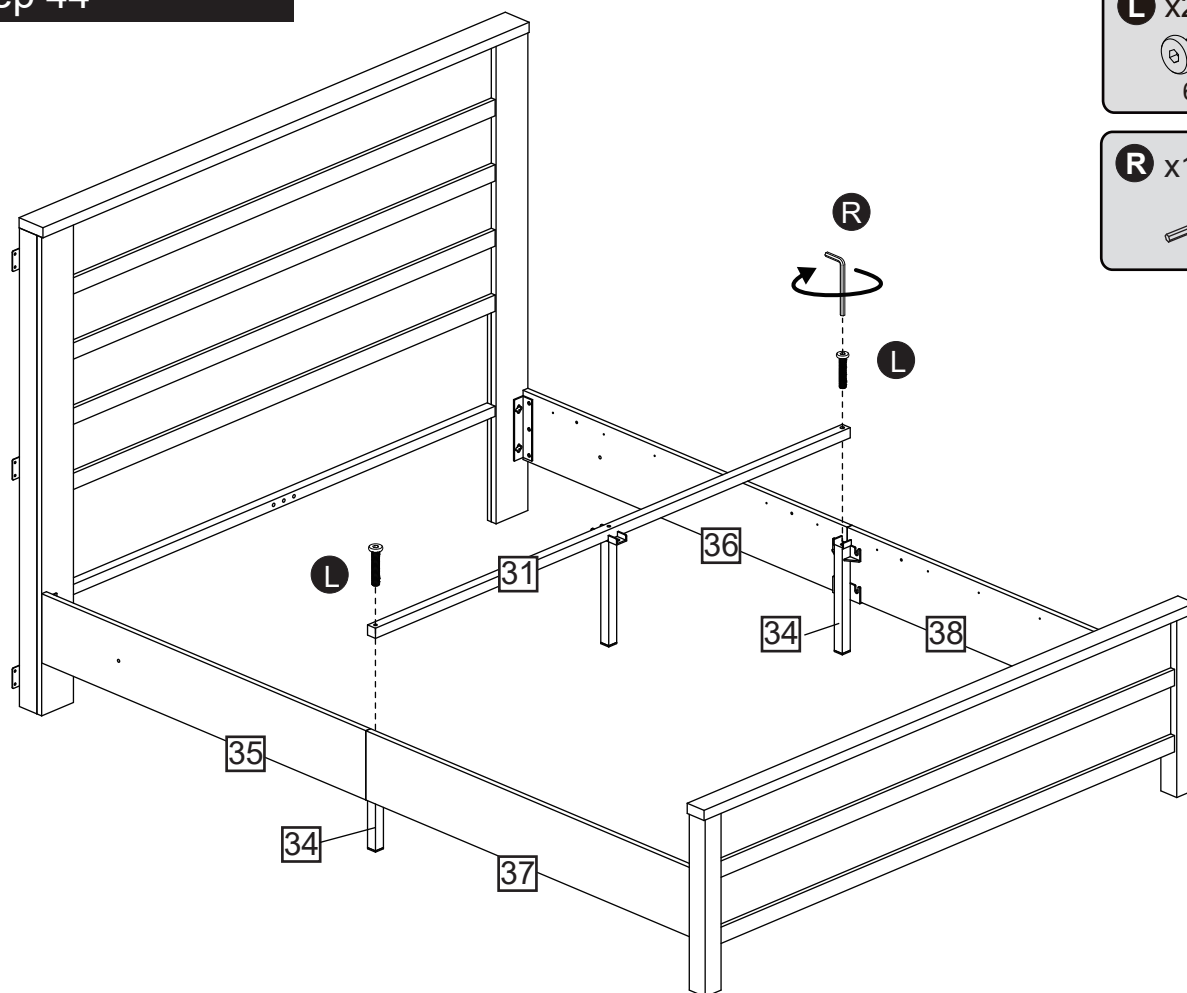

Use bolt (L) and wrench (R) to attach part (31) to part (34).










Step 45

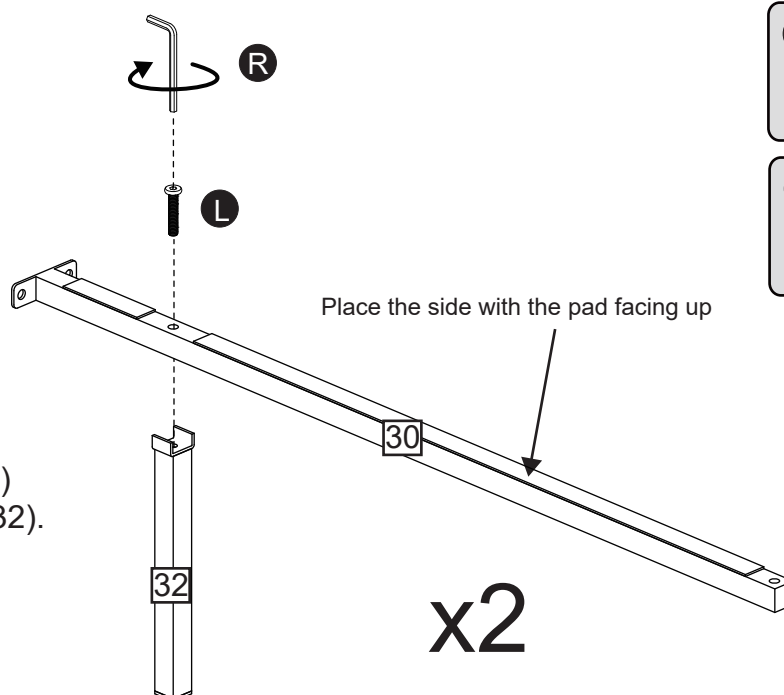



Use bolt (L) and wrench (R) to attach part (30) to part (32).

Assembly Instructions

Step 46

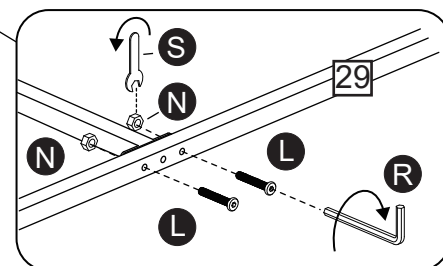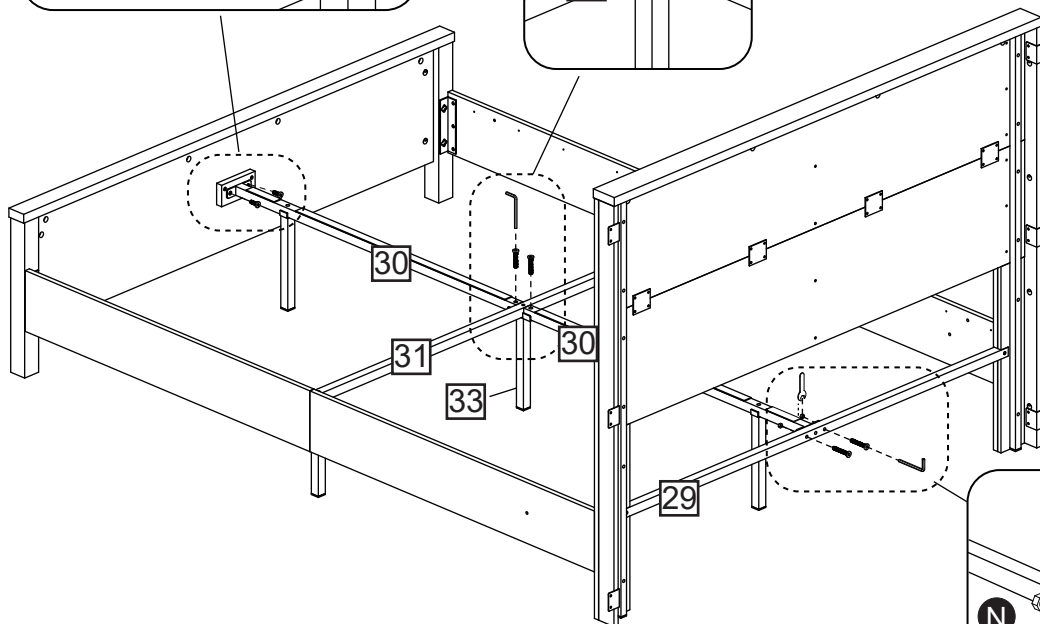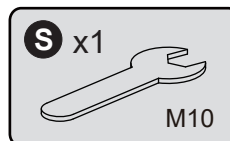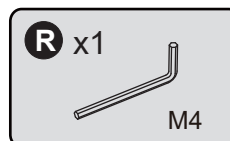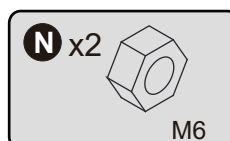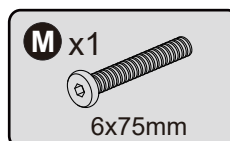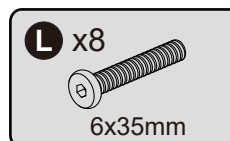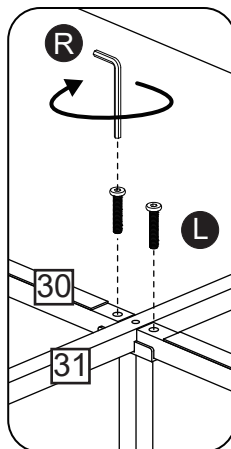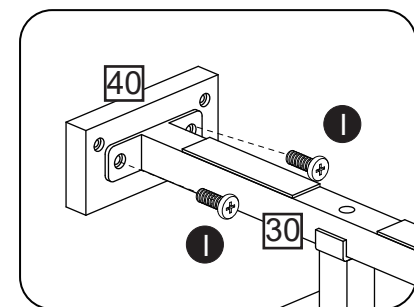


Use bolt (I), (L) to attach part (30) to panel (40) and part (33).
Use bolt (L), nut (N), wrench (R), and wrench (S) to attach part (30) to panel (29) and part (33).

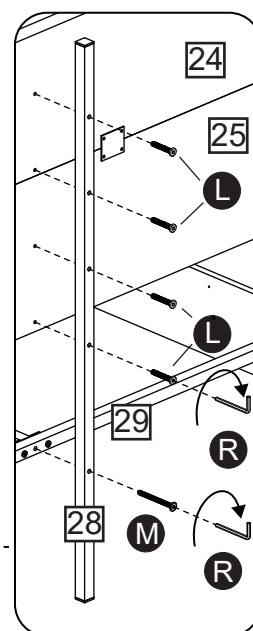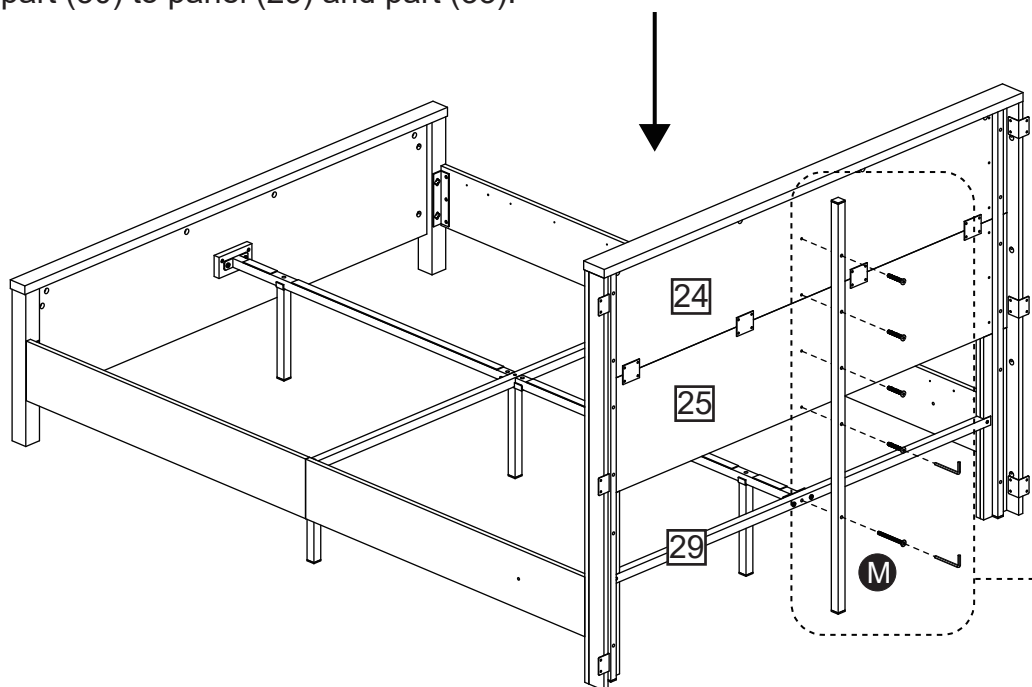

Use bolt (L), bolt (M), and wrench (R) to attach part (28) to panels (24), (25), and (29).


Assembly Instructions

Step 47

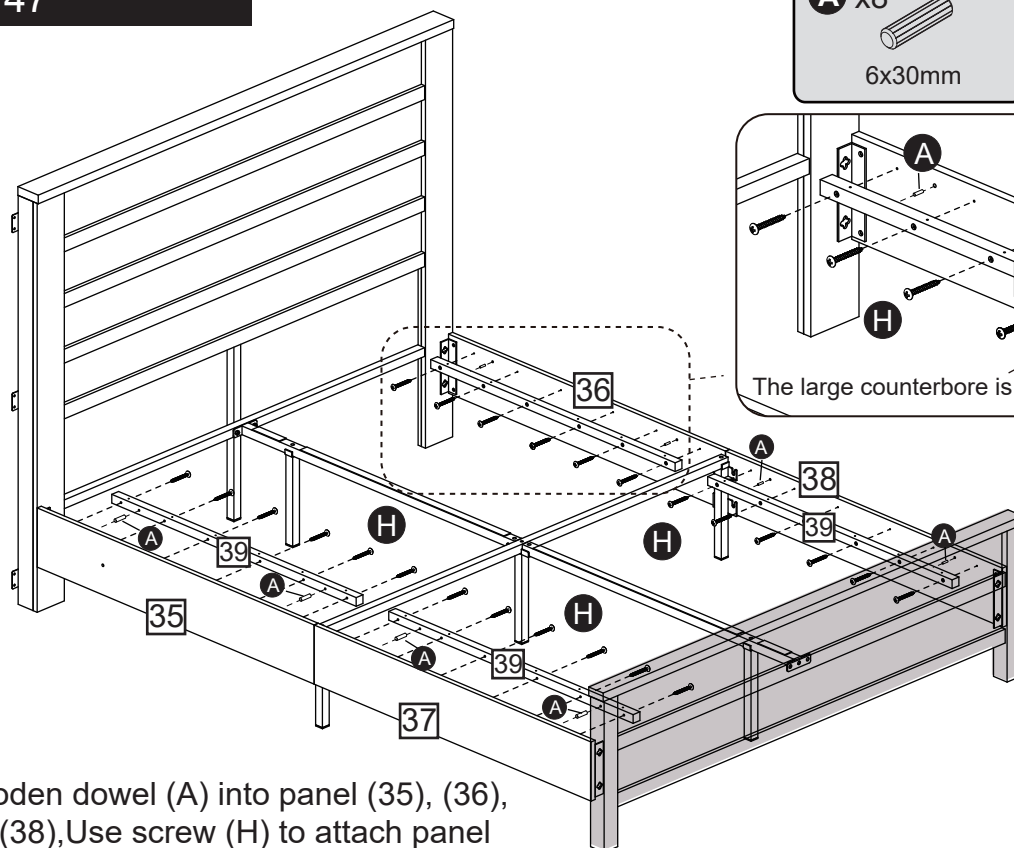

Insert wooden dowel (A) into panel (35), (36), (37), and (38). Use screw (H) to attach panel (39) to panels (35), (36), (37), and (38).


Step 48

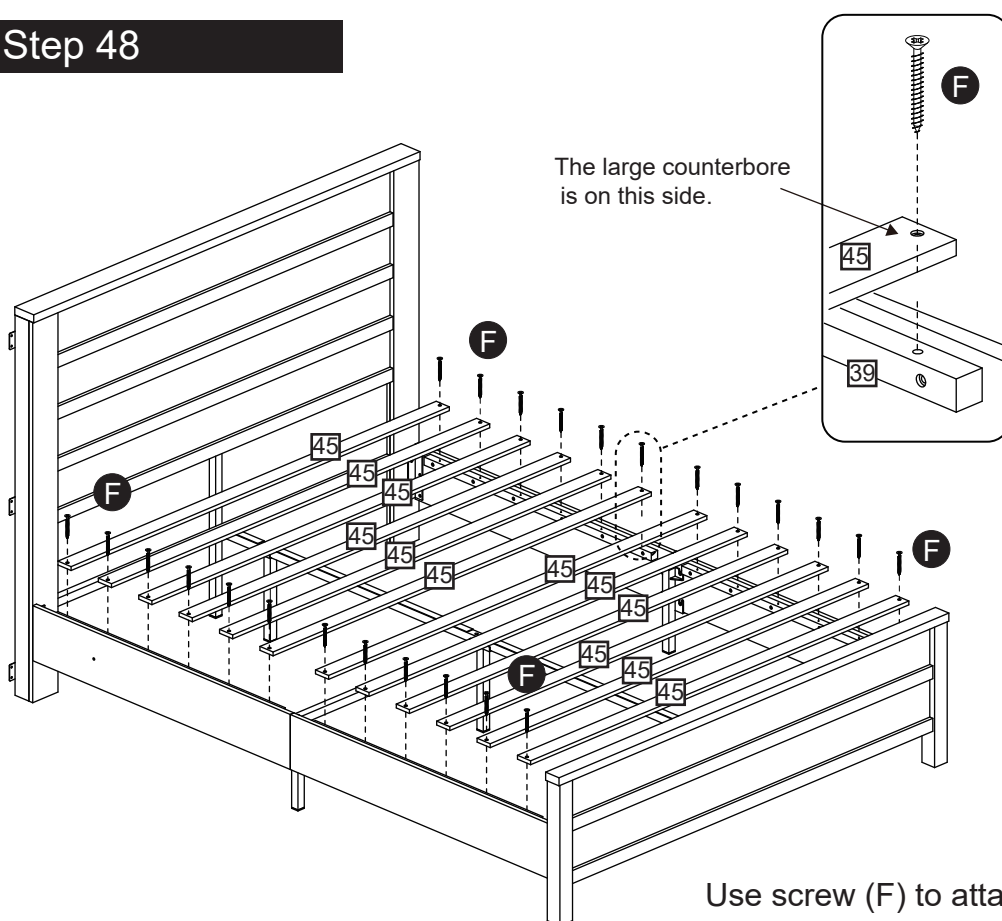


Use screw (F) to attach panel (45) to panel (39).

Assembly Instructions

Option 1 There are two types of opening directions for the side shelf:
For Option 1, please refer to Pages 46-47.
For Option 2, please refer to Pages 48-49.

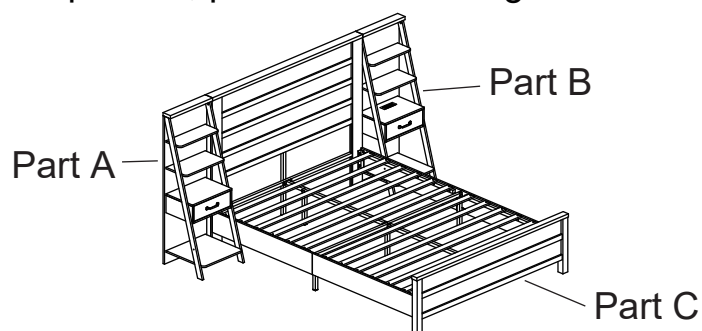

Step 49


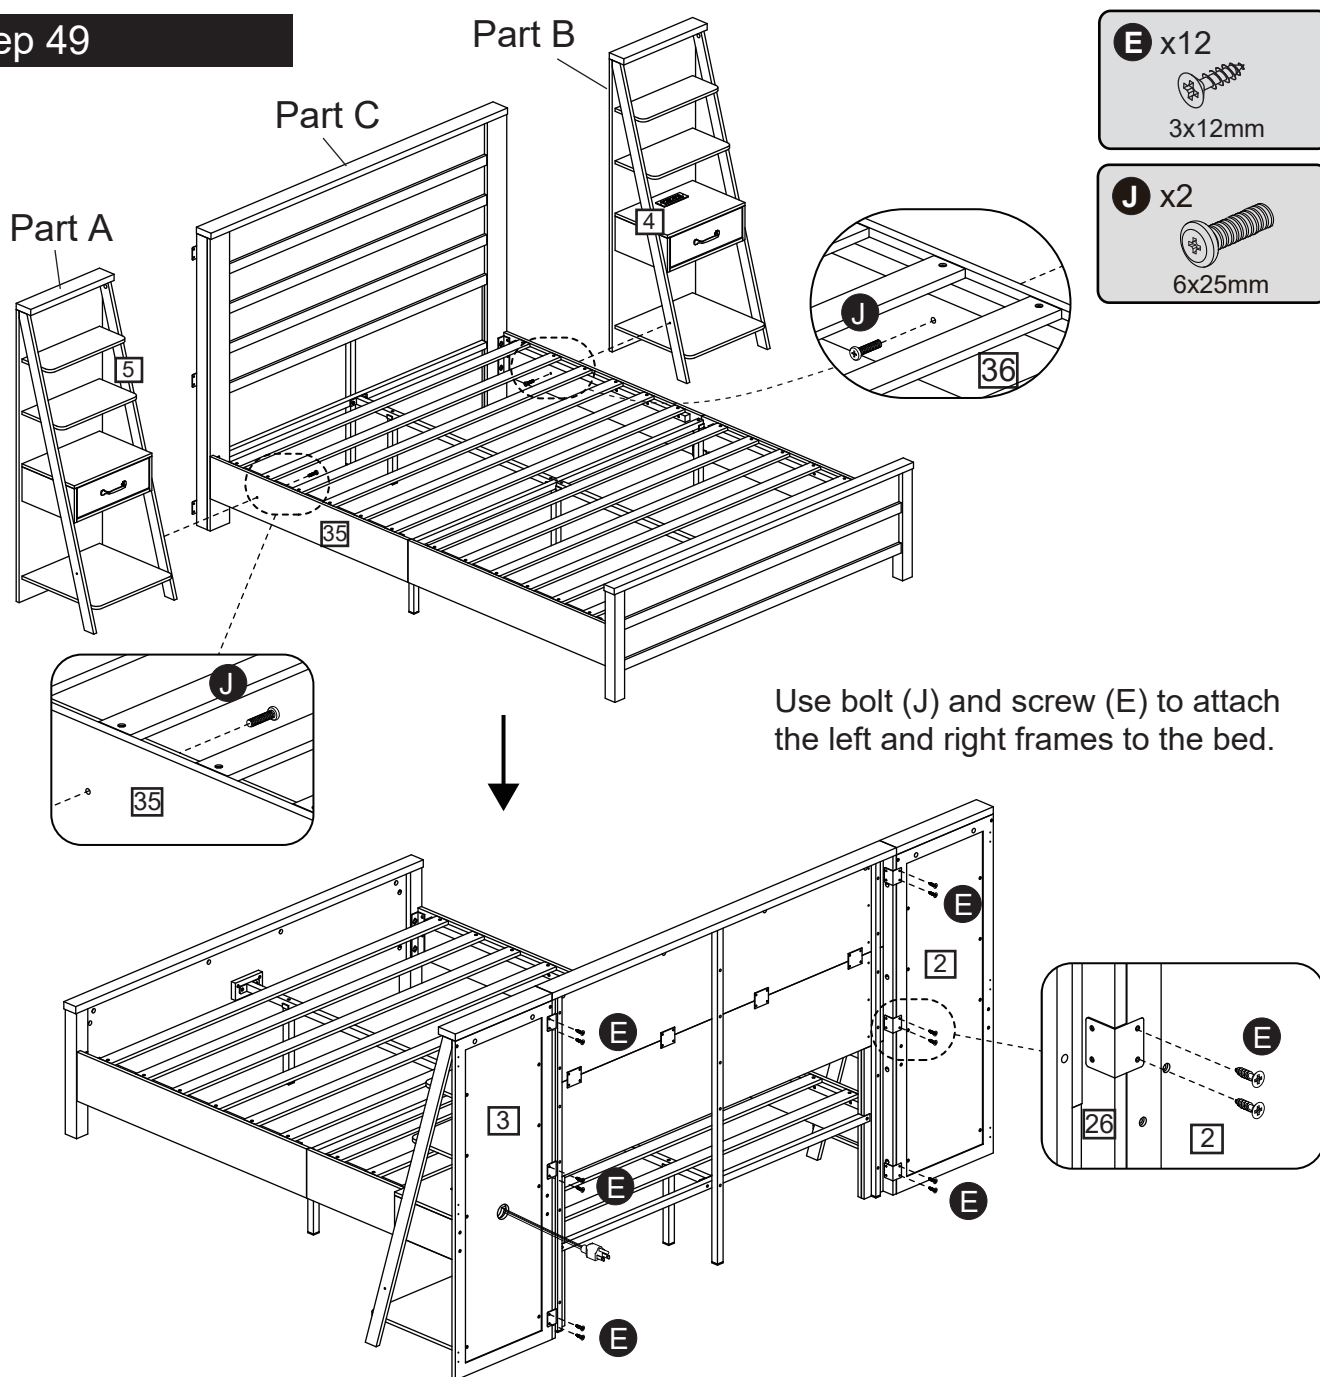


Assembly Instructions

Step 50




Use part (Q) to cover the holes on panels (4) and (5).

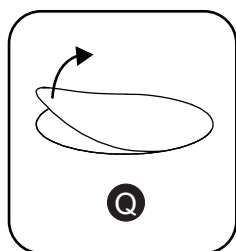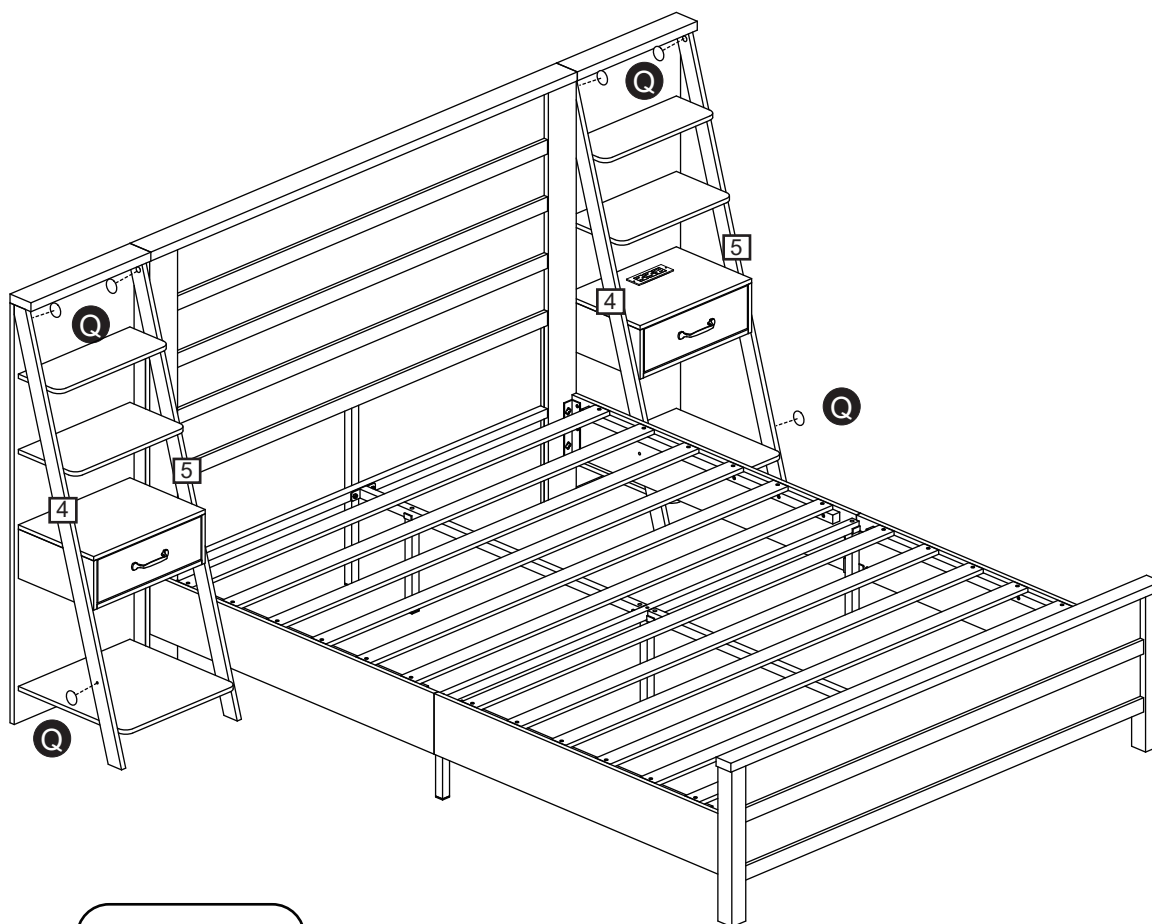


Assembly Instructions

Option 2 There are two types of opening directions for the side shelf:
For Option 1, please refer to Pages 46-47.
For Option 2, please refer to Pages 48-49.

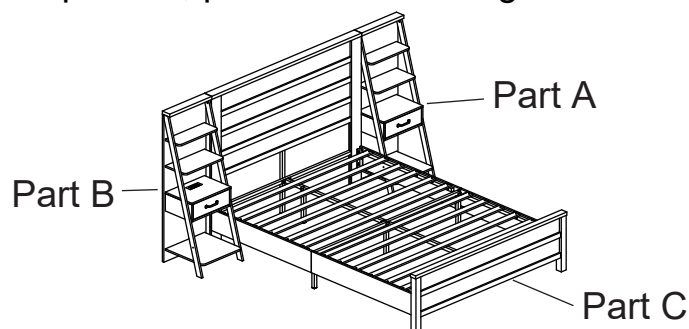

Step 49


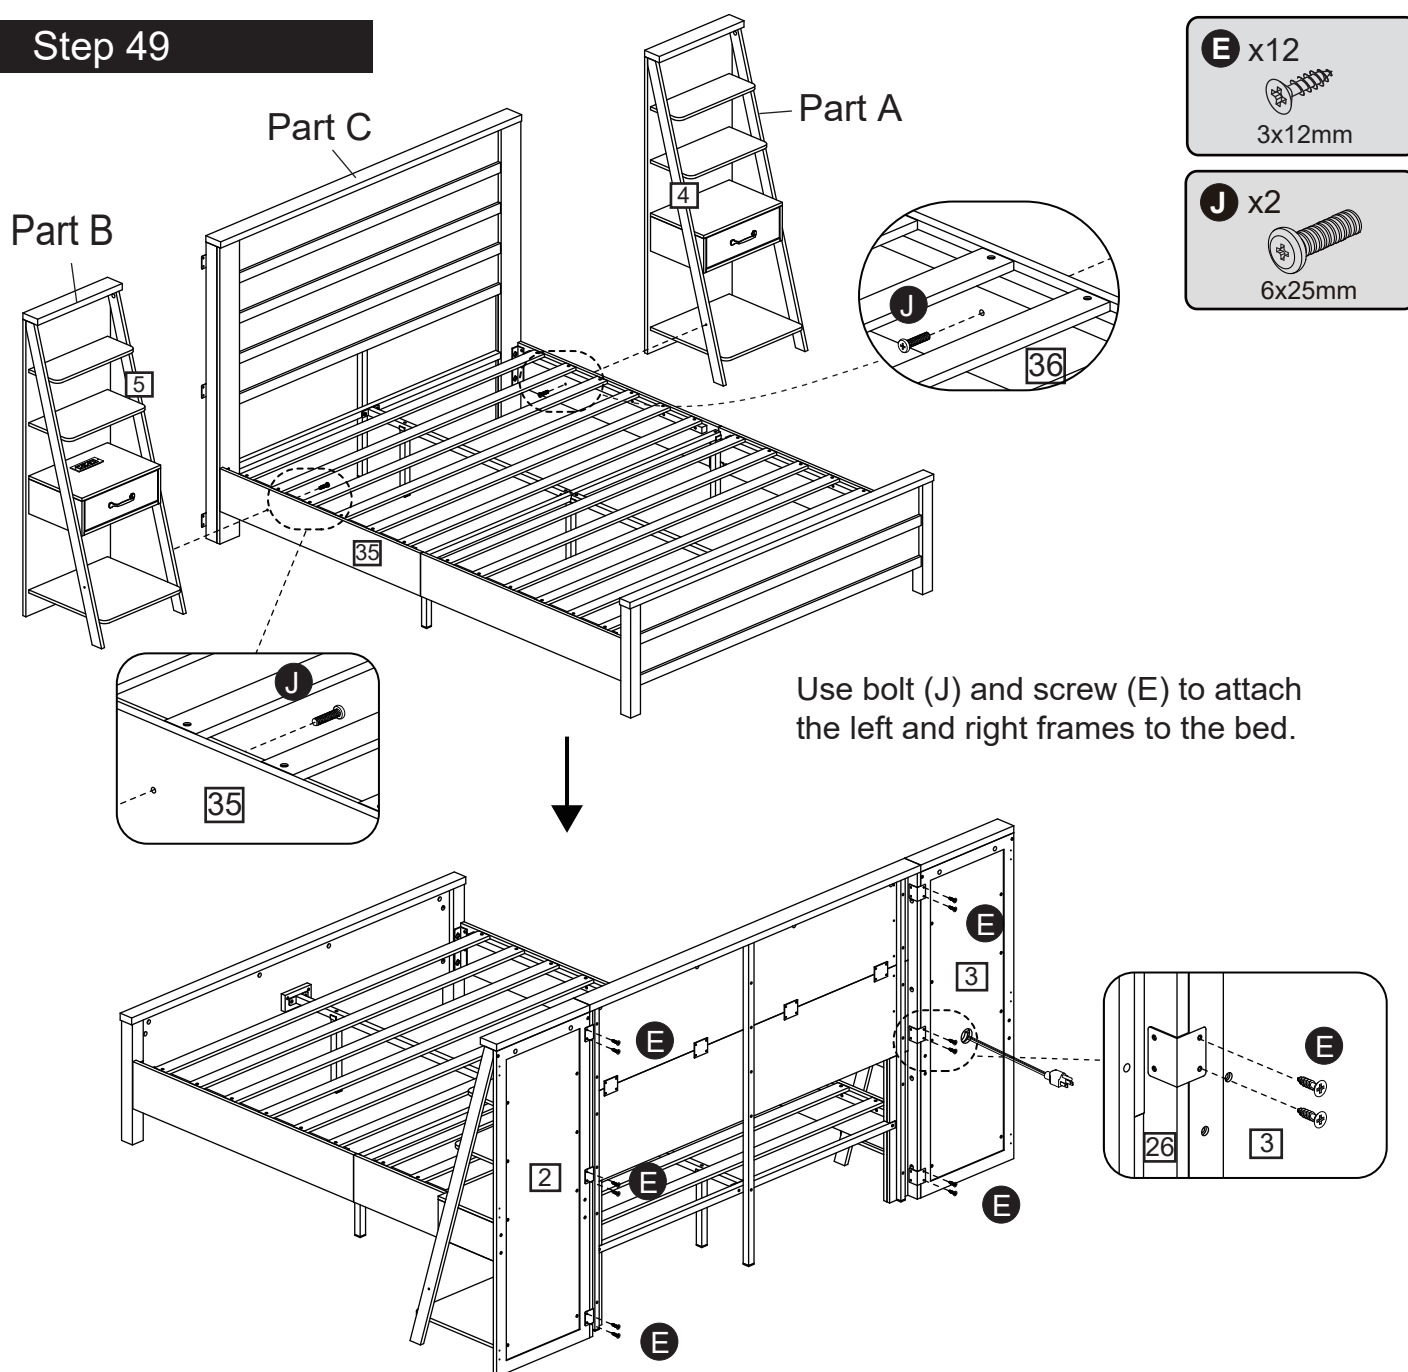


Assembly Instructions

Step 50



Use part (Q) to cover the holes on panels (4) and (5).

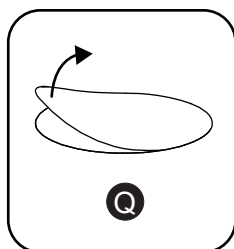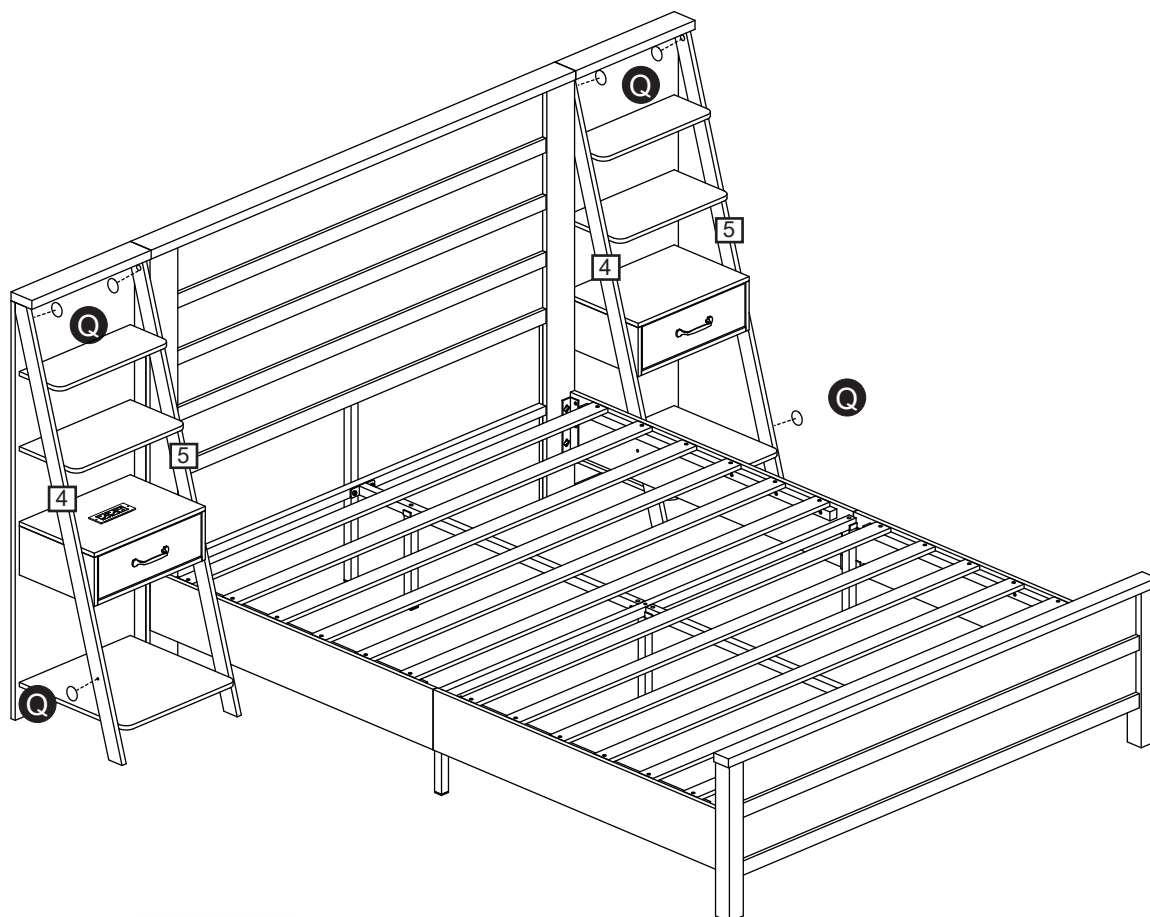

| Bed

Sku:

BL22HE-1Q0A1

BL22HE-1Q0A2

BL22HE-1Q0B1

BL22HE-1Q0B2

V1.0