


SKU:  
C001519010  
C001519020  
C001519030  
C001519040

V1.0

# Coffee Table

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

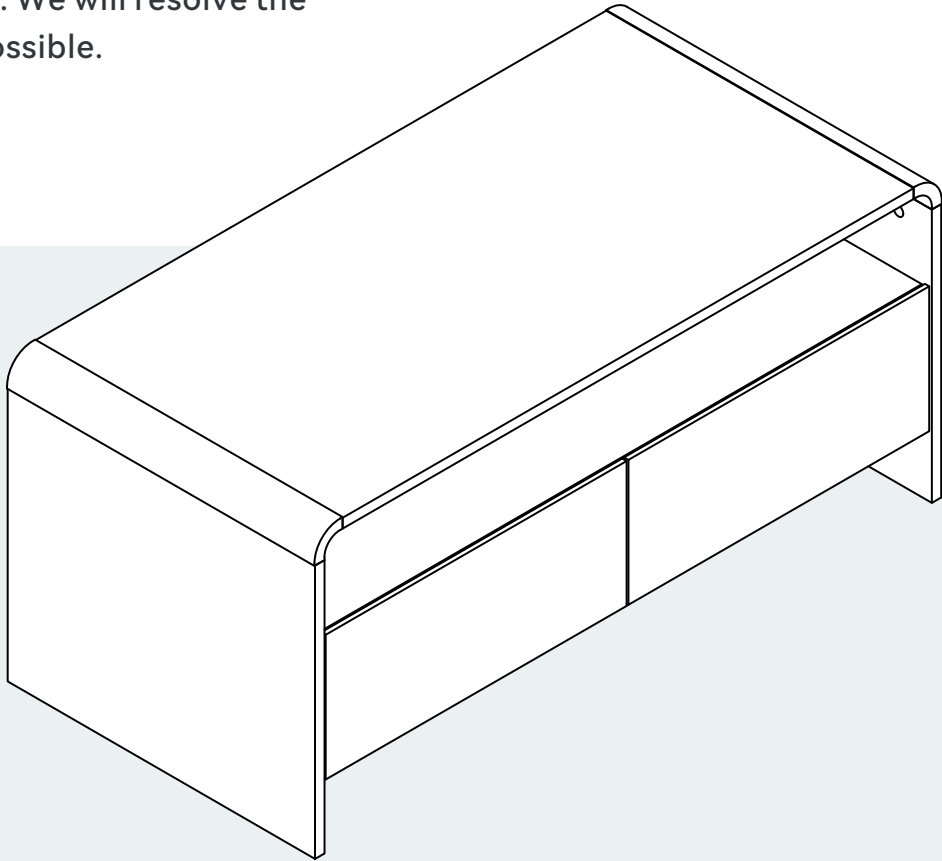

## CONTACT US

- **Email: [service@grandtunnel.com](mailto:service@grandtunnel.com)**  
In order to receive assistance more quickly, please provide

## THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

**Important** – Please read these instructions carefully before starting the installation.

EN

## Before Assembly



Thank you for choosing our product!

To ensure a smooth installation process, please read this guide carefully to familiarize yourself with the required tools, materials, and installation steps.

Follow the relevant sections to avoid any damage caused by improper installation, and make sure to review all operation and safety guidelines for correct installation procedures.

### Packaging Notice:

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

## Safety and Care Advice



### Important :

Please read these instructions fully before starting assembly.

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.

### Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.

### Warning

In order to help prevent overturning, please follow these instructions.

- Use the anti tip strap or wall fixing method provided (if applicable).
- Do not allow children to climb or hang on the furniture.
- Do not open more than one drawer at a time.
- Do not place heavy items in the top drawers.
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose.
- Please note that only the anti tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type.

# Customer Service Guide



Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

## 1. Missing Parts

### Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6×30mm screws.”

### Contact Us:

#### By Email:

Send an email to **service@grandtunnel.com**, with the subject line “Missing Parts Issue.” Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

## 2. Product or Packaging Damage

### If it affects normal use:

#### Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with order details to **service@grandtunnel.com**, with the subject line “Product Damage Issue.”

#### Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

### If it does not affect normal use:

#### Steps:

1. Contact our customer service team (by email: **service@grandtunnel.com**).
2. Provide a description of the damage and include relevant photos or videos.

#### Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

### Contact Us:

Customer Service Email: **service@grandtunnel.com**

## Helpful Tips

### To process your issue efficiently, please prepare the following information:


- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

**Thank you for your trust and support!**  
**We hope you enjoy using our product!**


# Parts List - Panels




Please check you have all the panels listed below.

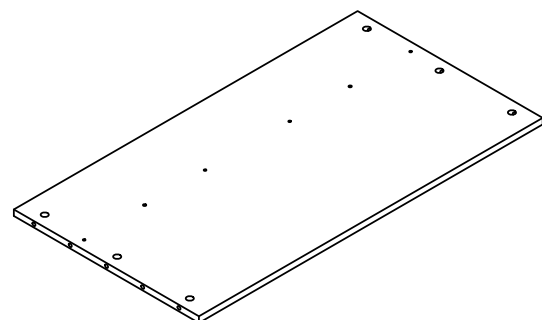


① (910x490x15mm)X1

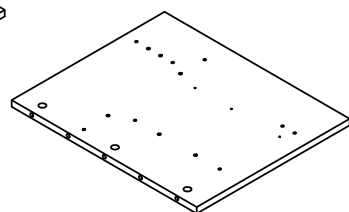


② (405x490x15mm)X1

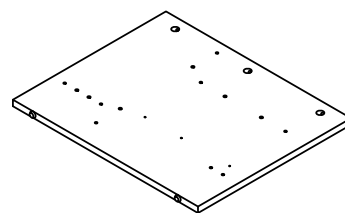


③ (405x490x15mm)X1

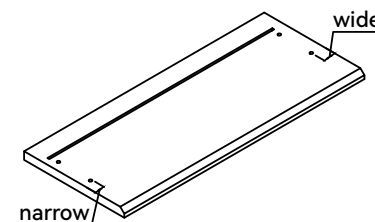


⑭ (479.5x200x15mm)X1

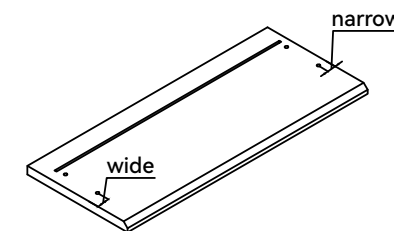


⑮ (479.5x200x15mm)X1

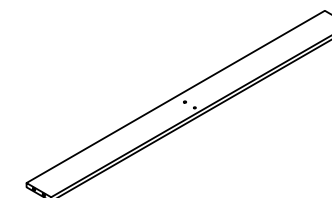


⑯ (968x80x12mm)X1

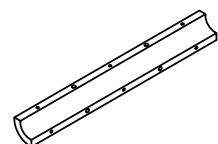


④ (490x63.6x26.2mm)X2

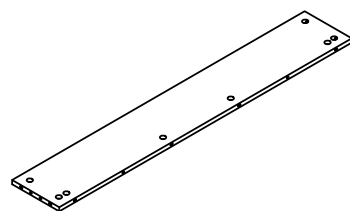


⑤ (968x156x12mm)X1

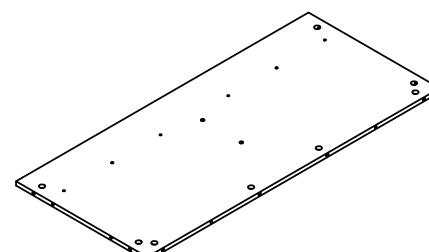


⑥ (968x434x12mm)X1

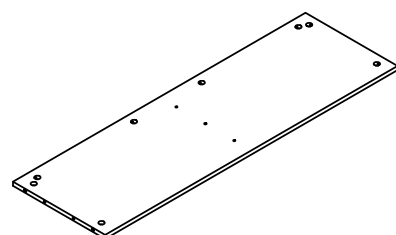


⑦ (968x305x12mm)X1

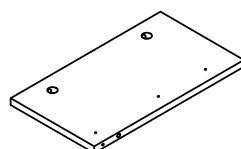


⑧ (170x305x12mm)X1

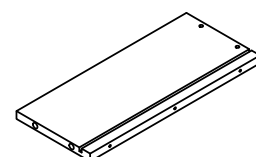


⑩ (300x130x12mm)X2

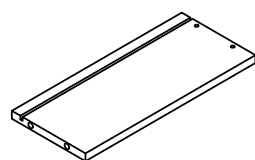

⑪ (300x130x12mm)X2

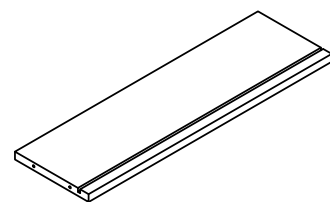

⑫ (429x130x12mm)X2

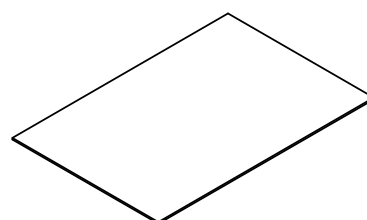

⑬ (439x297x3mm)X2

# Parts List - Fittings




Please check you have all the fittings listed below.

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.


|            |       |            |       |            |      |            |       |
|------------|-------|------------|-------|------------|------|------------|-------|
| <b>(A)</b> | X50+3 | <b>(B)</b> | X50+3 | <b>(C)</b> | X8+1 | <b>(D)</b> | X21+2 |
|            |       |            |       |            |      |            |       |
| Ø15*9.5mm  |       | Ø6.5*35mm  |       | Ø8*30mm    |      | Ø6*30mm    |       |
| <b>(E)</b> | X24+2 | <b>(F)</b> | X11+1 | <b>(G)</b> | X2   | <b>(G)</b> | X2    |
|            |       |            |       |            | CL   |            | CR    |
| Ø3.5*12mm  |       | Ø4*35mm    |       | L=300mm    |      | L=300mm    |       |
| <b>(G)</b> | X2    | <b>(G)</b> | X2    | <b>(H)</b> | X1   | <b>(I)</b> | X45+3 |
|            | DL    |            | DR    |            |      |            |       |
| L=300mm    |       | L=300mm    |       | 70*30*5mm  |      | Ø21mm      |       |

## Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

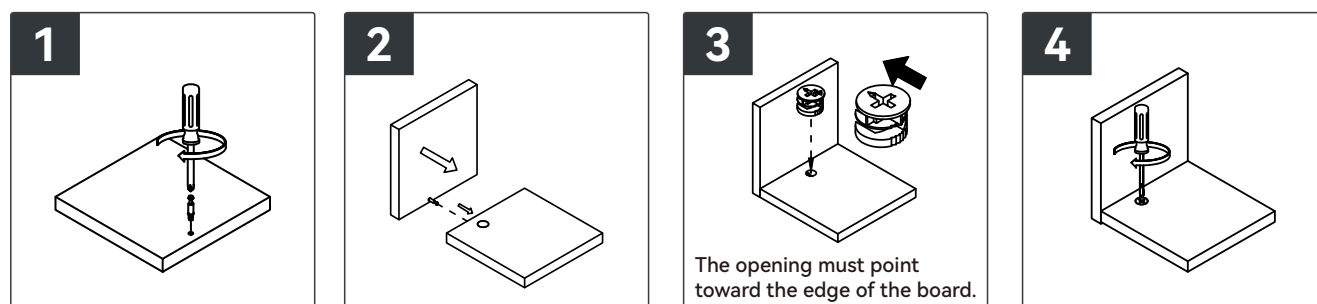


# Assembly Instructions


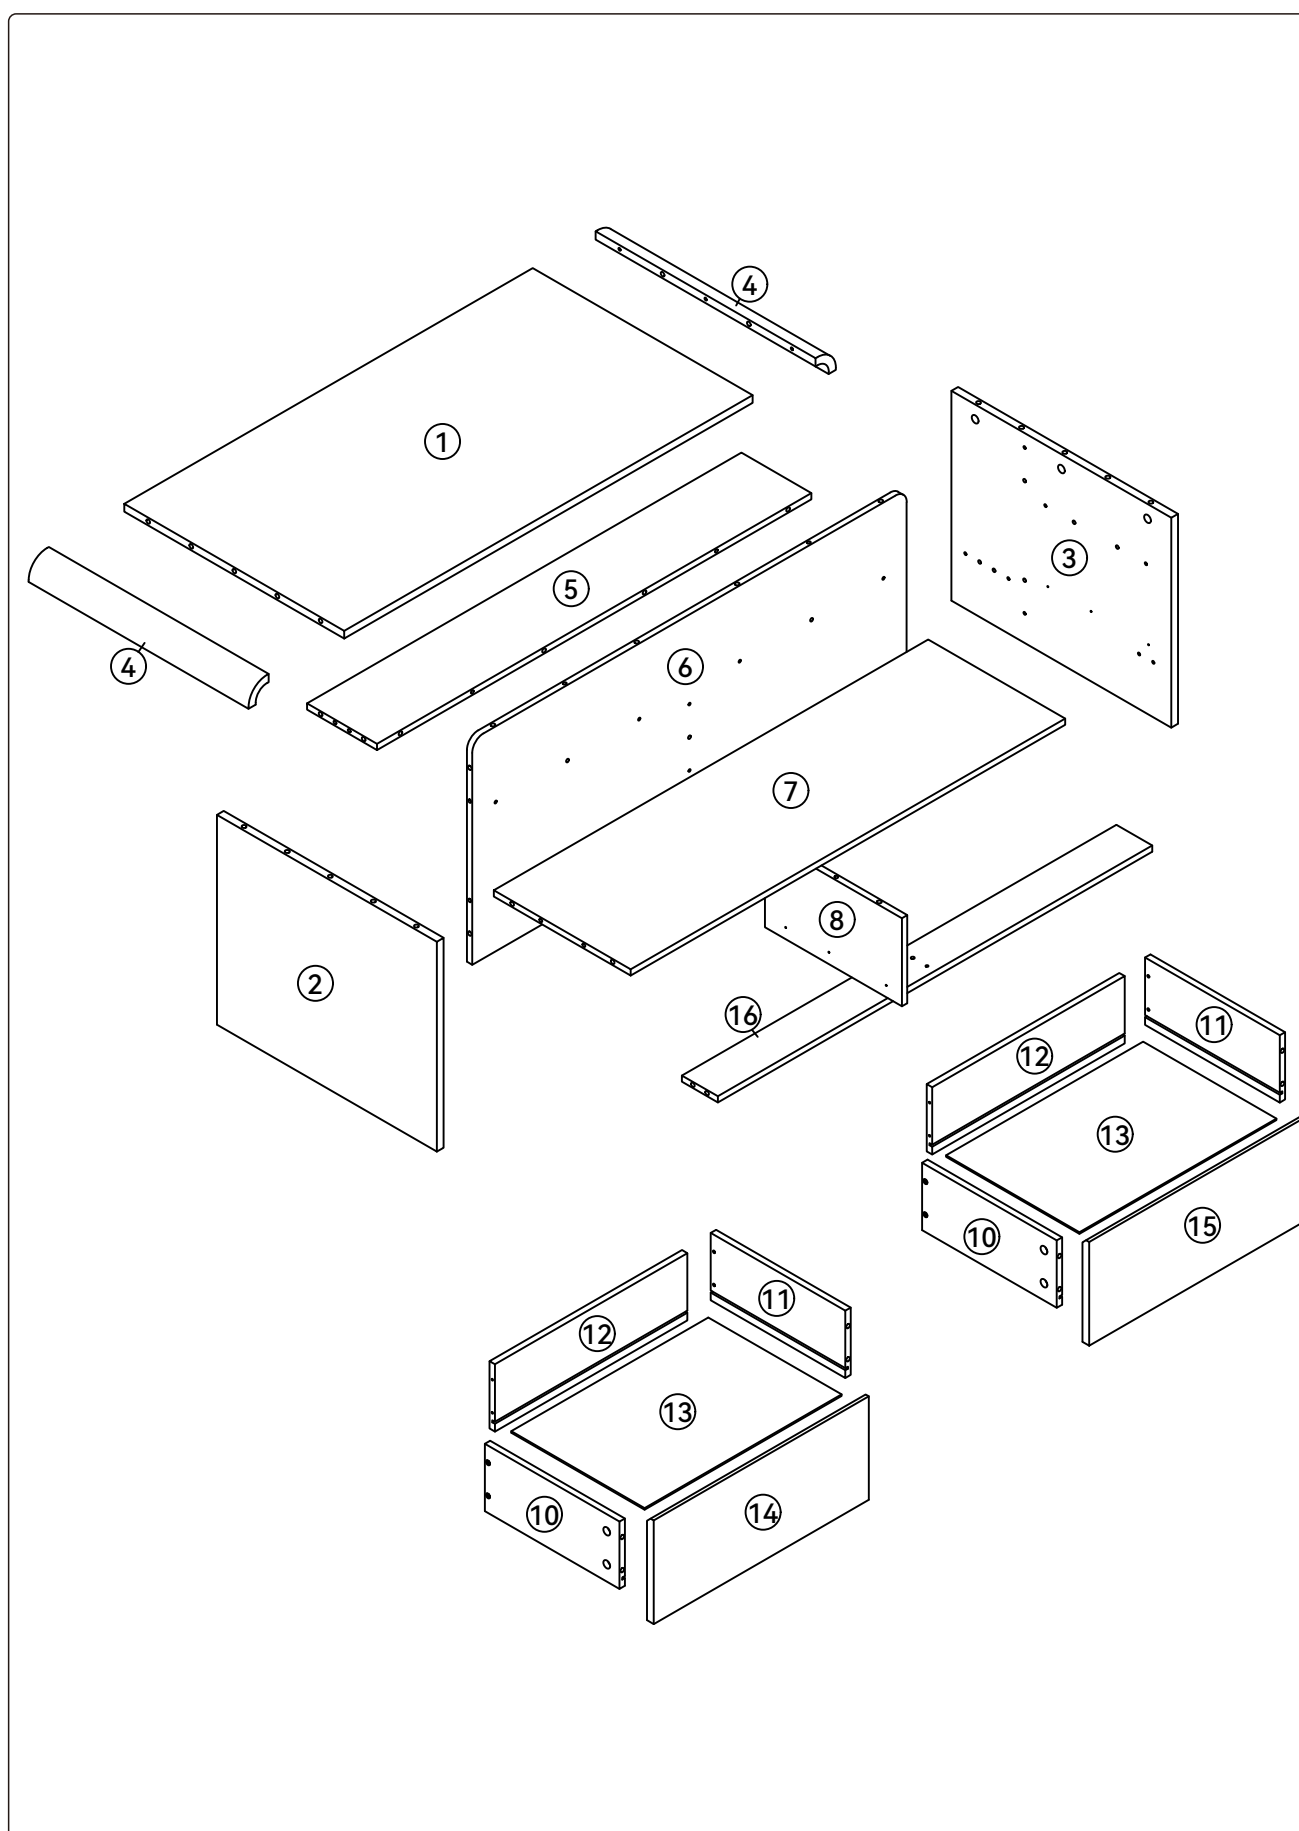


## Step 1

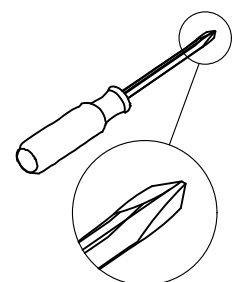


|                                                                                     |    |
|-------------------------------------------------------------------------------------|----|
| (B)                                                                                 | X2 |
|  |    |
| Ø6.5*35mm                                                                           |    |

Install Part B onto Panel 7, as shown.

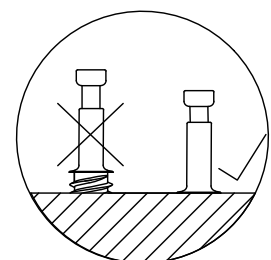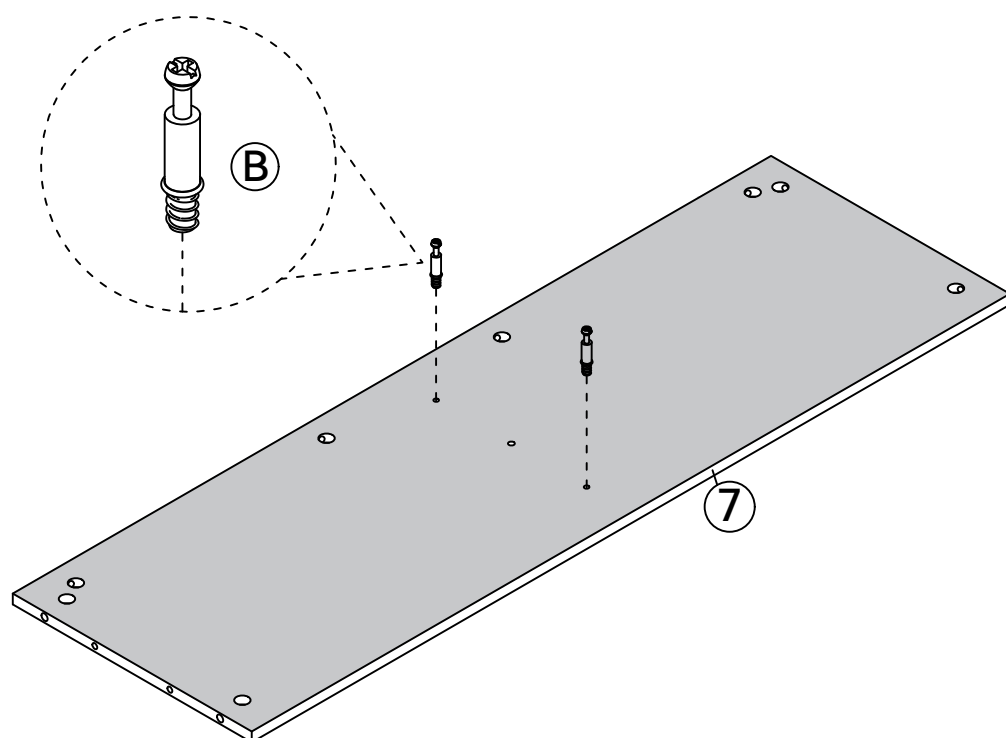


## Step 2

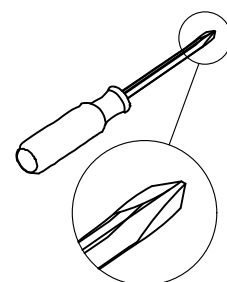


|                                                                                     |    |
|-------------------------------------------------------------------------------------|----|
| (E)                                                                                 | X6 |
|  |    |
| Ø3.5*12mm                                                                           |    |





|                                                                                     |    |
|-------------------------------------------------------------------------------------|----|
| (G)                                                                                 | X1 |
|  |    |
| CL<br>L=300mm                                                                       |    |

|                                                                                     |    |
|-------------------------------------------------------------------------------------|----|
| (G)                                                                                 | X1 |
|  |    |
| CR<br>L=300mm                                                                       |    |


Use Screw E to secure Part G-CR to Panel 8. Flip the panel over, then secure Part G-CL to Panel 8 with Screw E, as shown.

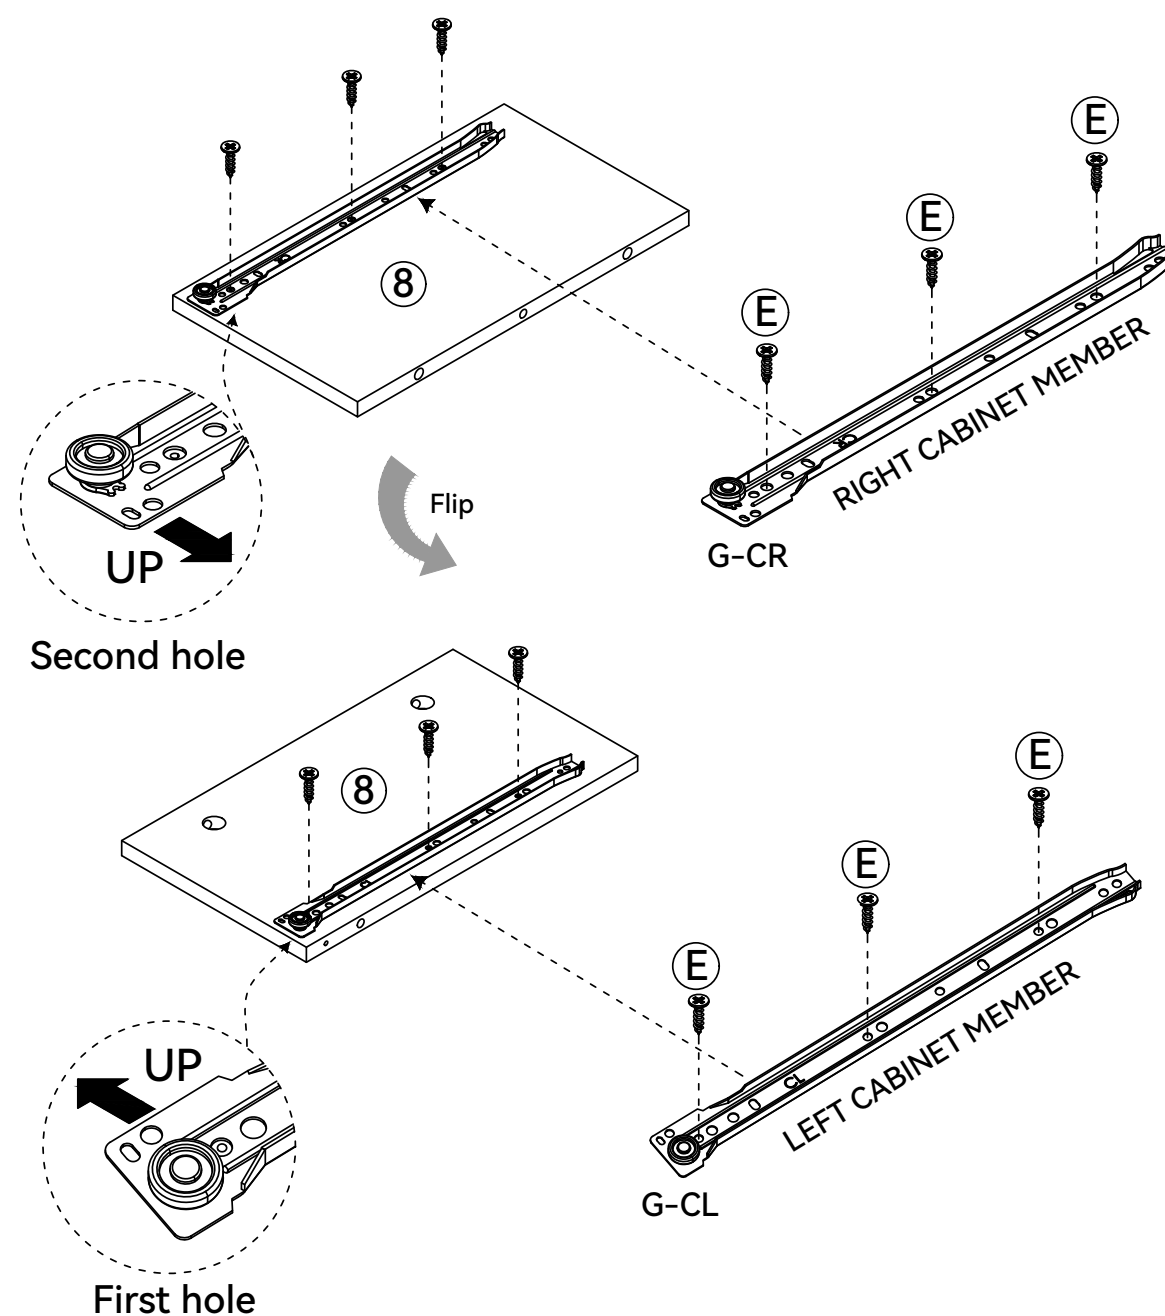


## Step 3

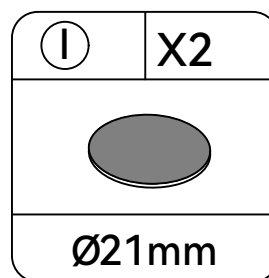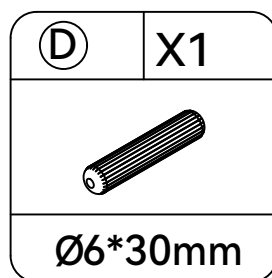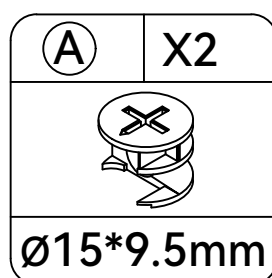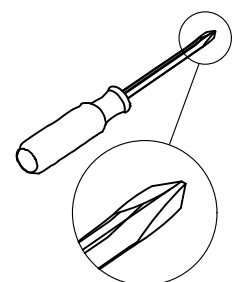

Insert Part D into the holes in Panel 7 and align it. Then insert it vertically into Panel 8. Tighten Part A clockwise to secure it to Panel 7. Finally, cover the holes with Part I, as shown.




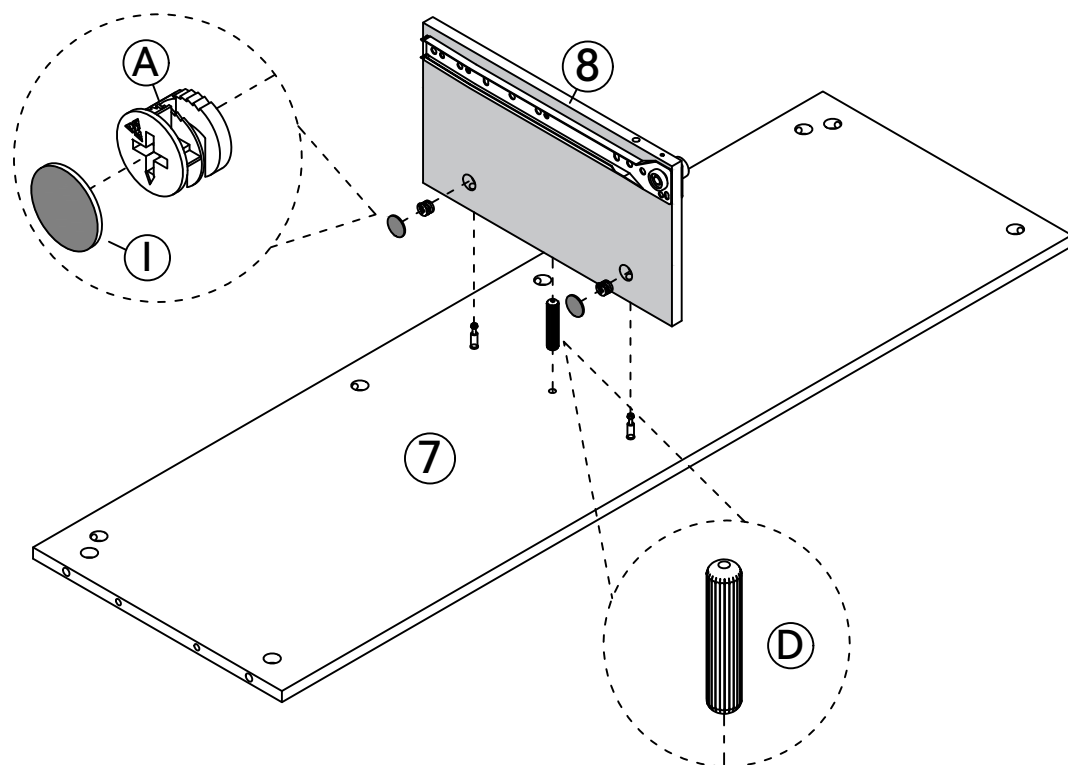


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

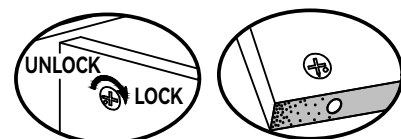


Proper orientation of CAM LOCK


## Step 4

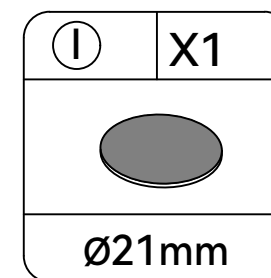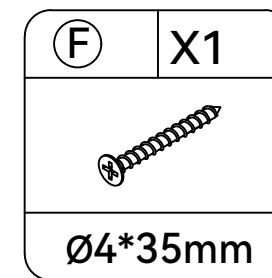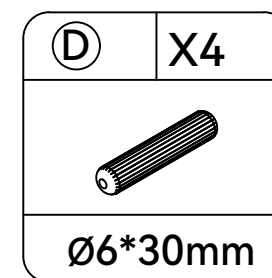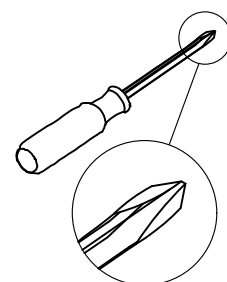


Insert Part D vertically into the holes in Panels 7 and 8. Then use Part F to connect Panel 8 and Panel 16. Finally, use Part I to cover the holes, as shown.

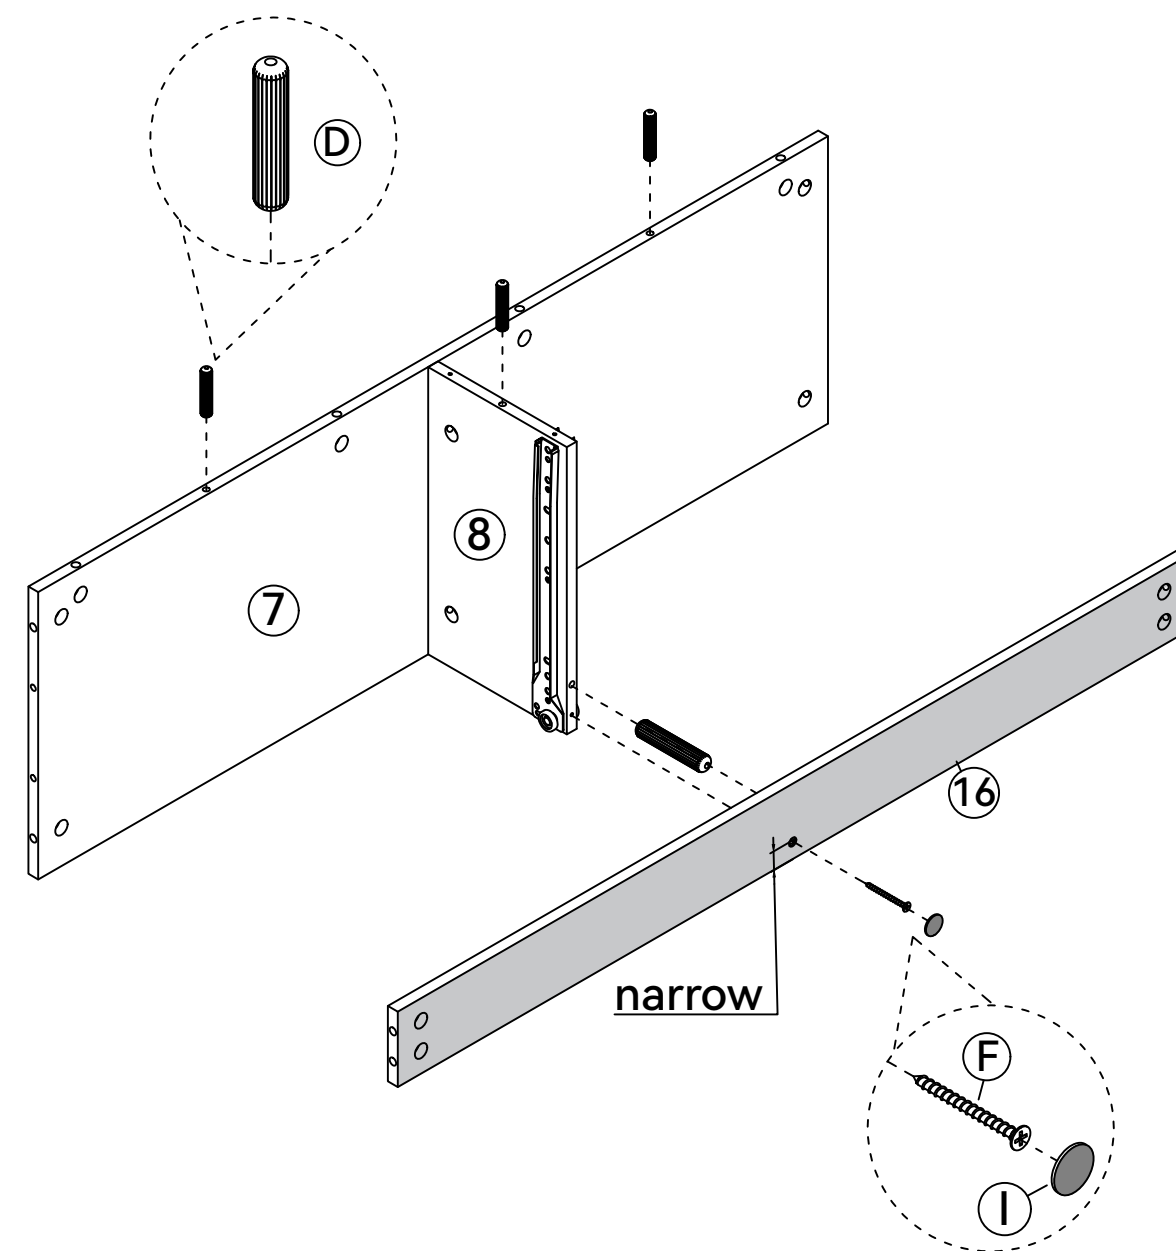


## Step 5

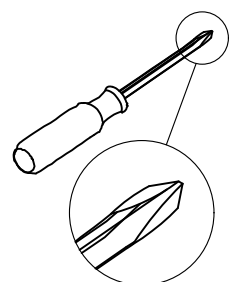


|                                                                                     |    |
|-------------------------------------------------------------------------------------|----|
| (B)                                                                                 | X8 |
|  |    |
| Ø6.5*35mm                                                                           |    |

Install Part B onto Panel 6. Turn the panel over and install Part B on the other side, as shown.

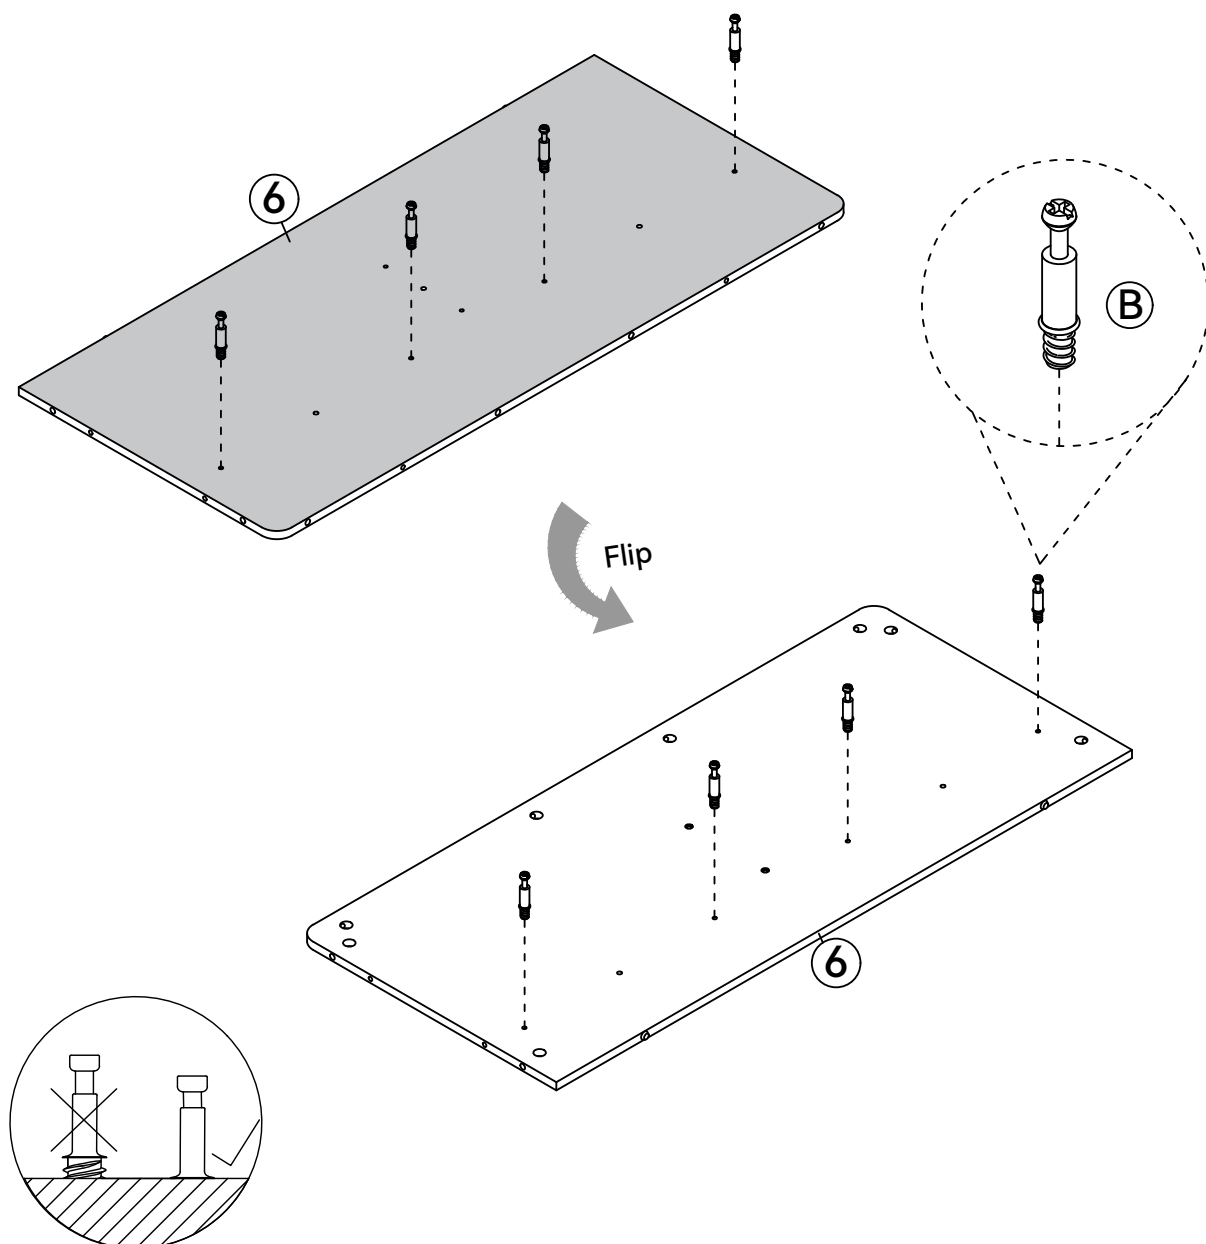


## Step 6

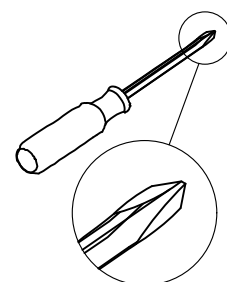


|                                                                                     |    |
|-------------------------------------------------------------------------------------|----|
| (A)                                                                                 | X4 |
|  |    |
| Ø15*9.5mm                                                                           |    |


|                                                                                     |    |
|-------------------------------------------------------------------------------------|----|
| (F)                                                                                 | X2 |
|  |    |
| Ø4*35mm                                                                             |    |

|                                                                                     |    |
|-------------------------------------------------------------------------------------|----|
| (I)                                                                                 | X6 |
|  |    |
| Ø21mm                                                                               |    |

Insert Part F through the holes in Panel 6 and connect it to Panel 8. Then tighten Part A to secure the assembly. Finally, cover the holes with Part I.




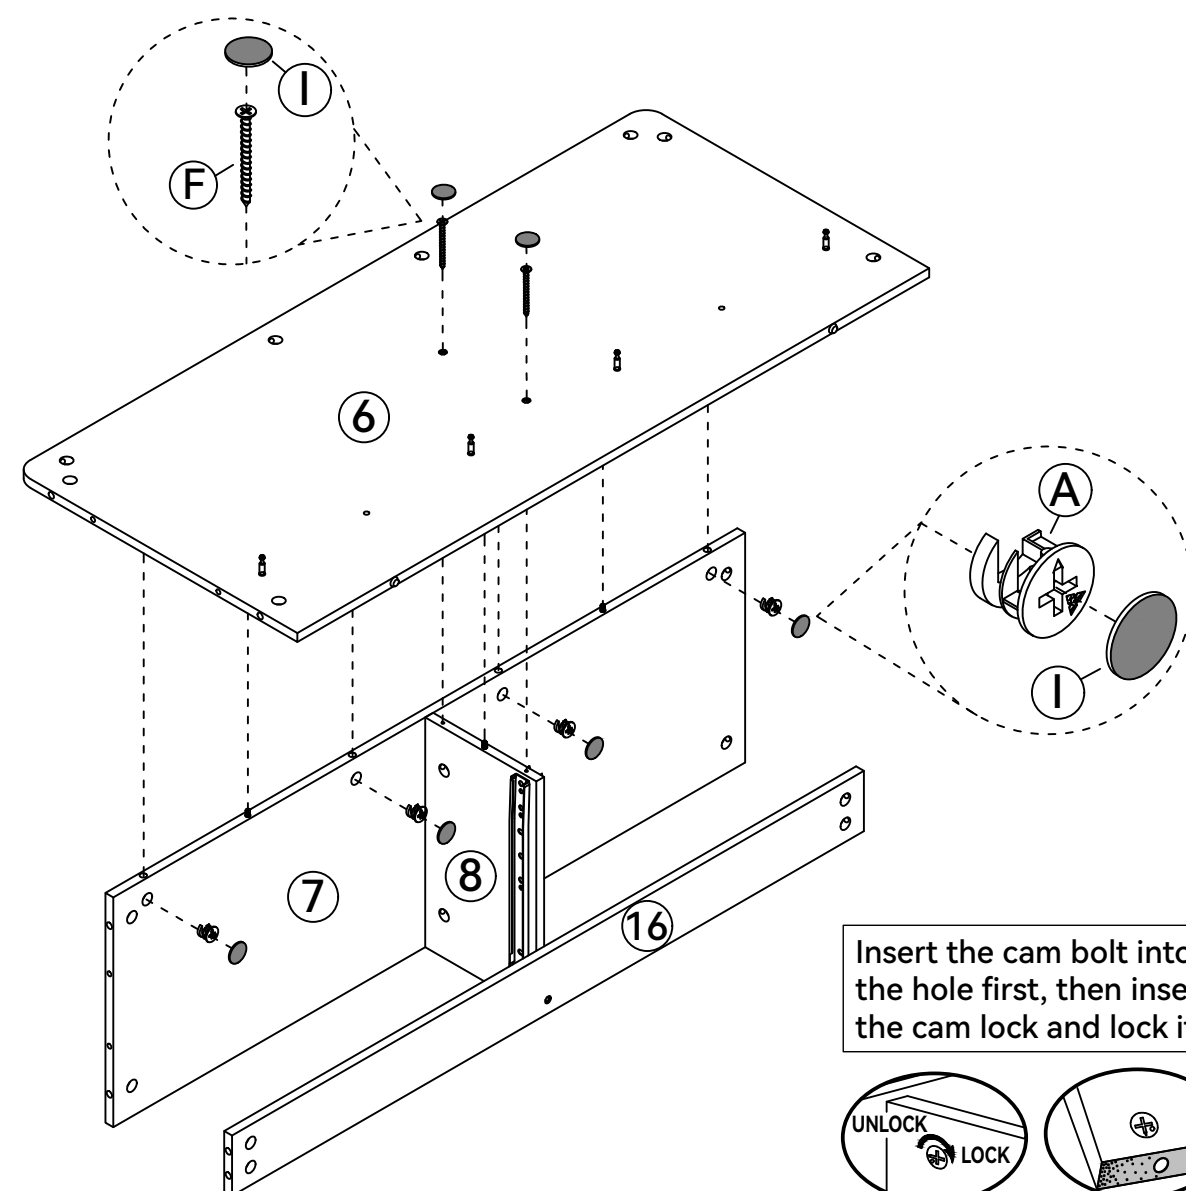


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

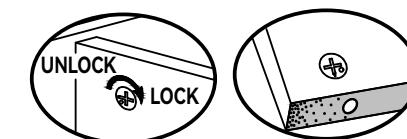


Proper orientation of CAM LOCK


## Step 7

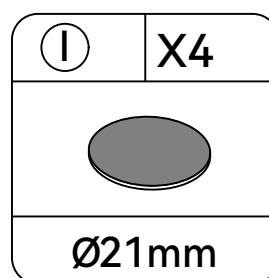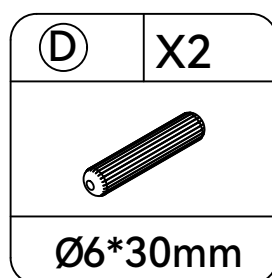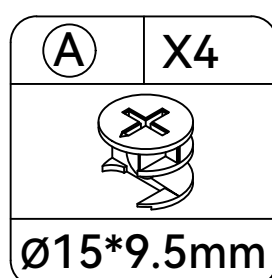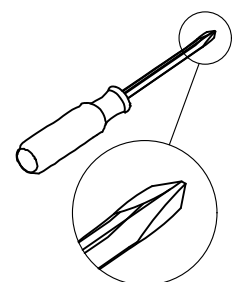

Insert Part D into the holes in Panel 6 and align it. Then insert it vertically into Panel 5. Tighten Part A to secure it, then cover the holes with Part I.




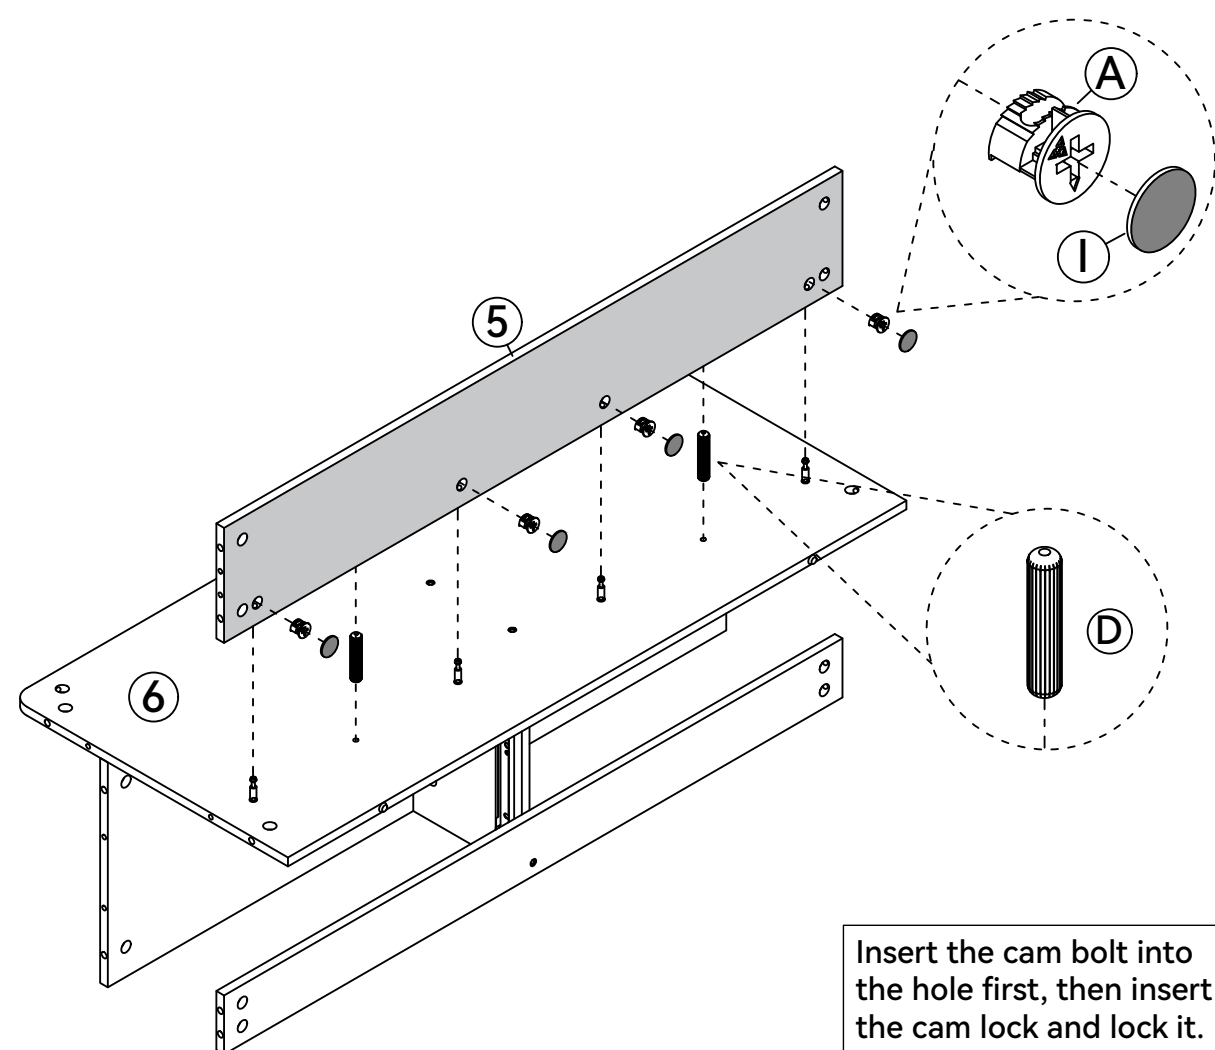


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

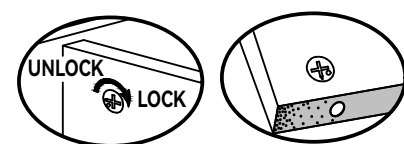


Proper orientation of CAM LOCK


## Step 8

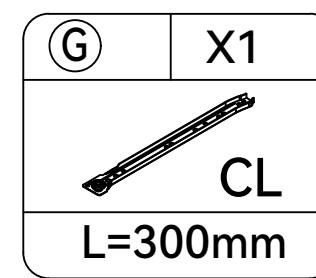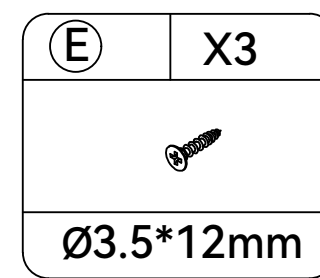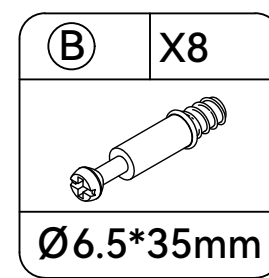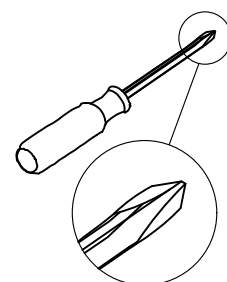


Use Screw E to secure Part G-CL to Top Panel 2. Then install Part B on Top Panel 2, as shown.

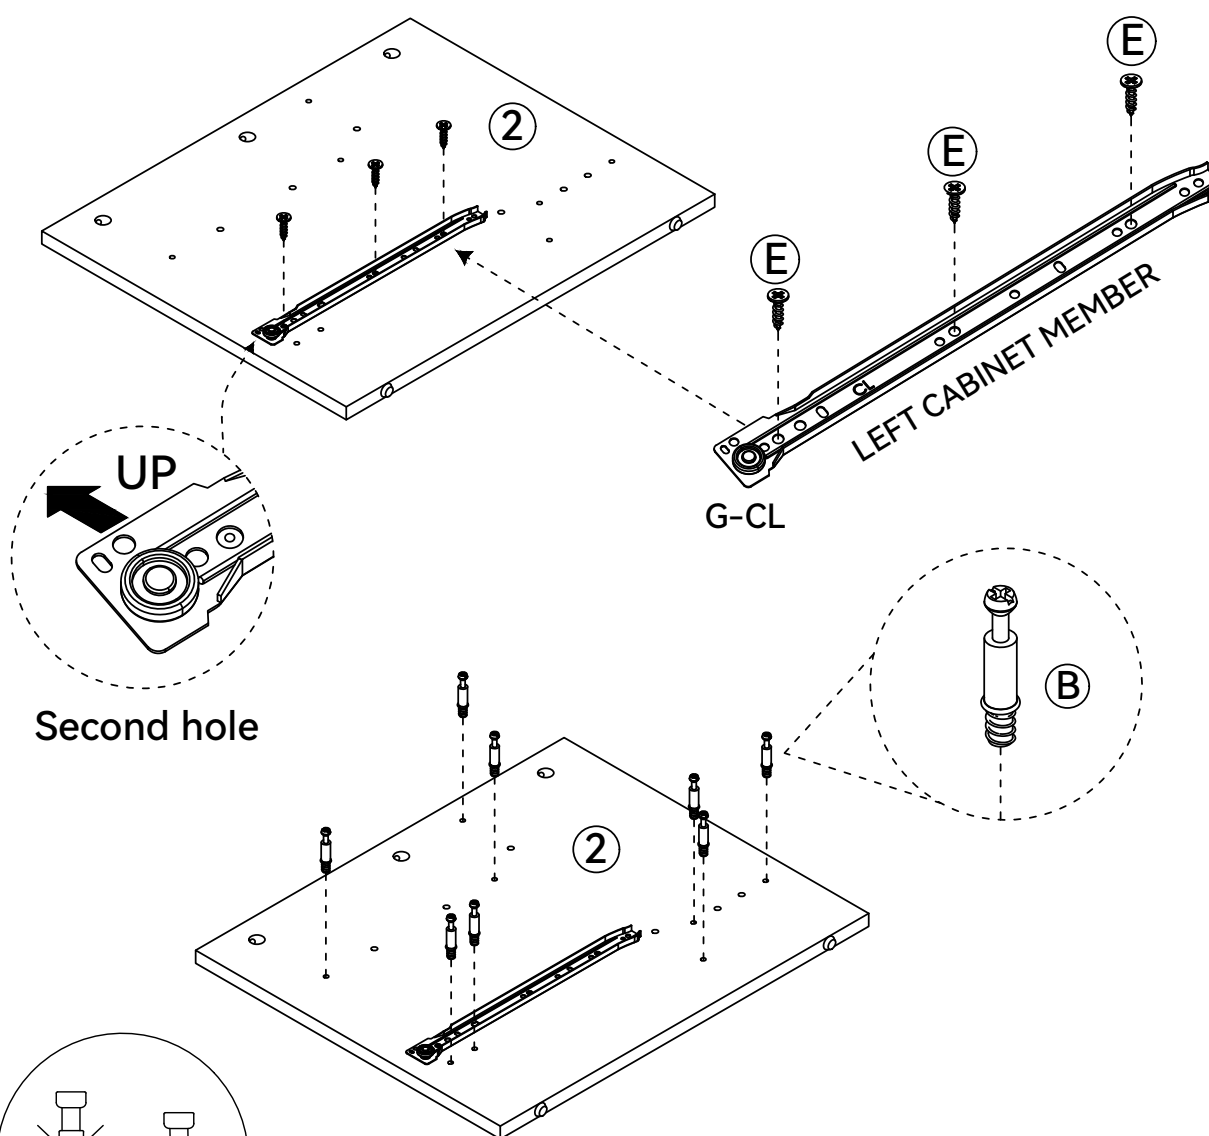

UP  
Second hole

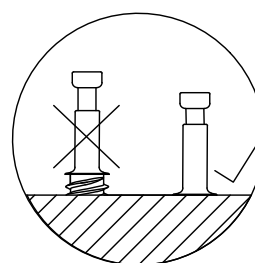

## Step 9

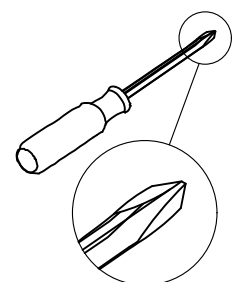


|                                                                                   |    |
|-----------------------------------------------------------------------------------|----|
| (B)                                                                               | X8 |
|  |    |
| <p>Ø6.5*35mm</p>                                                                  |    |


|                                                                                   |           |
|-----------------------------------------------------------------------------------|-----------|
| <b>E</b>                                                                          | <b>X3</b> |
|  |           |
| <b>Ø3.5*12mm</b>                                                                  |           |

|                                                                                     |    |
|-------------------------------------------------------------------------------------|----|
| (G)                                                                                 | X1 |
|  |    |
| L=300mm                                                                             |    |

Use Screw E to secure Part G-CR to Top Panel 3. Then install Part B on Top Panel 3, as shown.

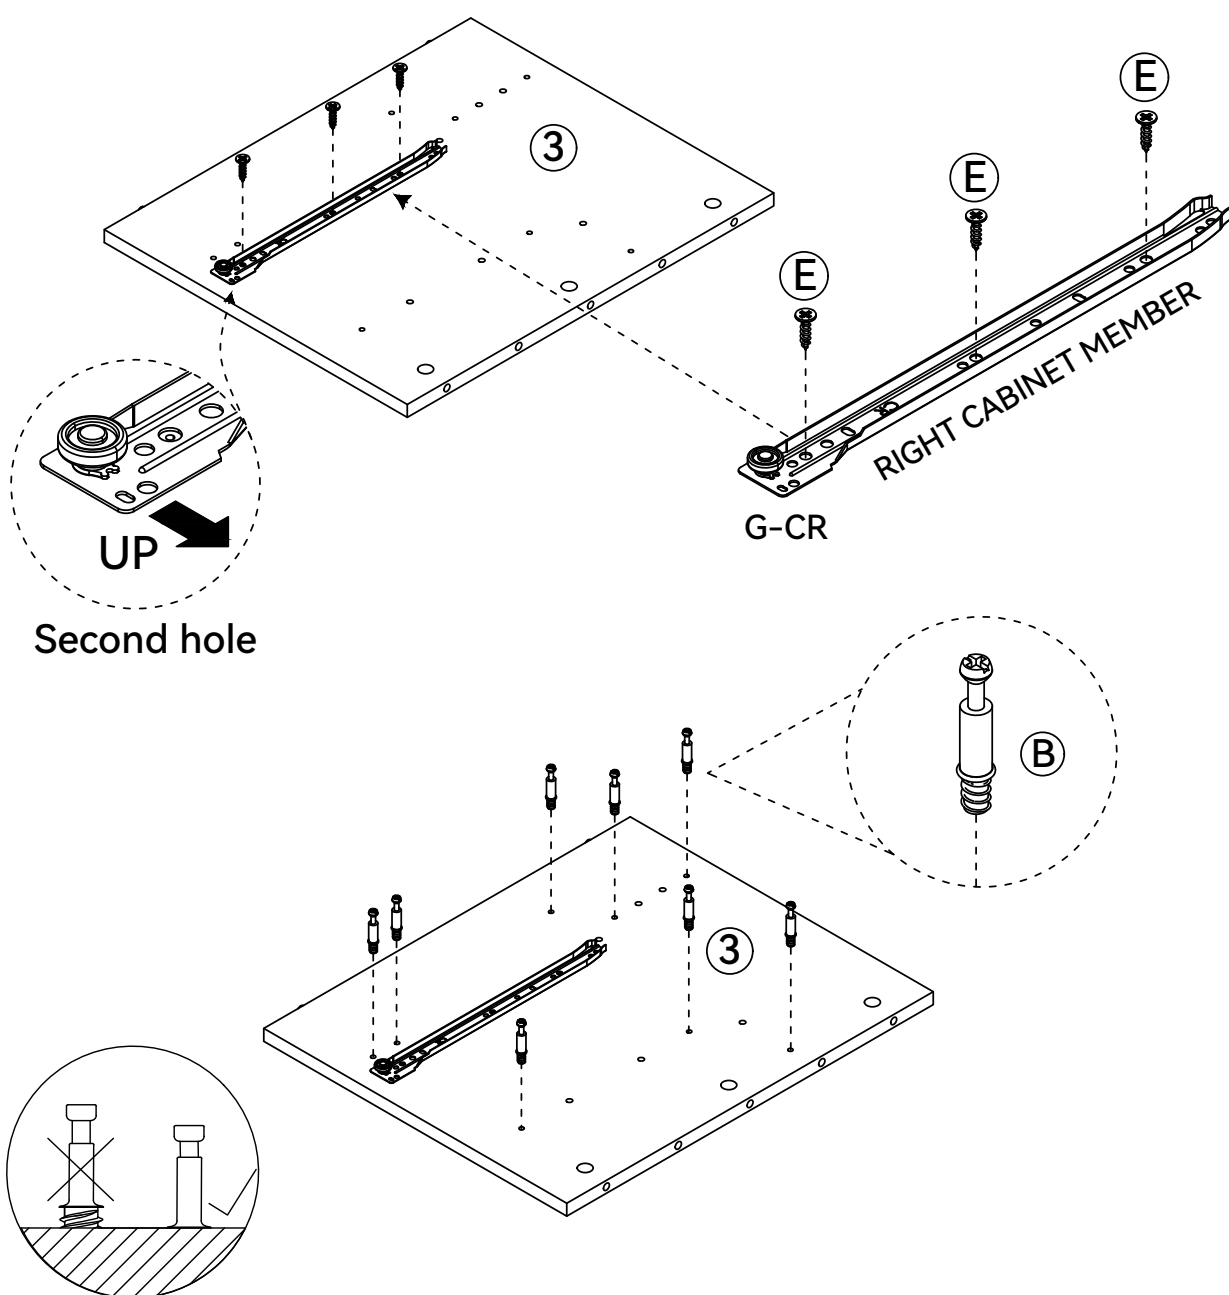

## Step 10

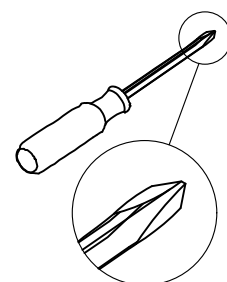


|                                                                                     |    |
|-------------------------------------------------------------------------------------|----|
| A                                                                                   | X8 |
|  |    |
| Ø15*9.5mm                                                                           |    |





|                                                                                     |    |
|-------------------------------------------------------------------------------------|----|
| (D)                                                                                 | X6 |
|  |    |
| <p>Ø6*30mm</p>                                                                      |    |

|                                                                                     |    |
|-------------------------------------------------------------------------------------|----|
| ①                                                                                   | X8 |
|  |    |
| <p>Ø21mm</p>                                                                        |    |


Insert Part D into the holes in Panels 5, 6, and 7 and align it. Then insert it vertically into Panel 2. Tighten Part A to secure it, as shown. Cover the holes with Part I.

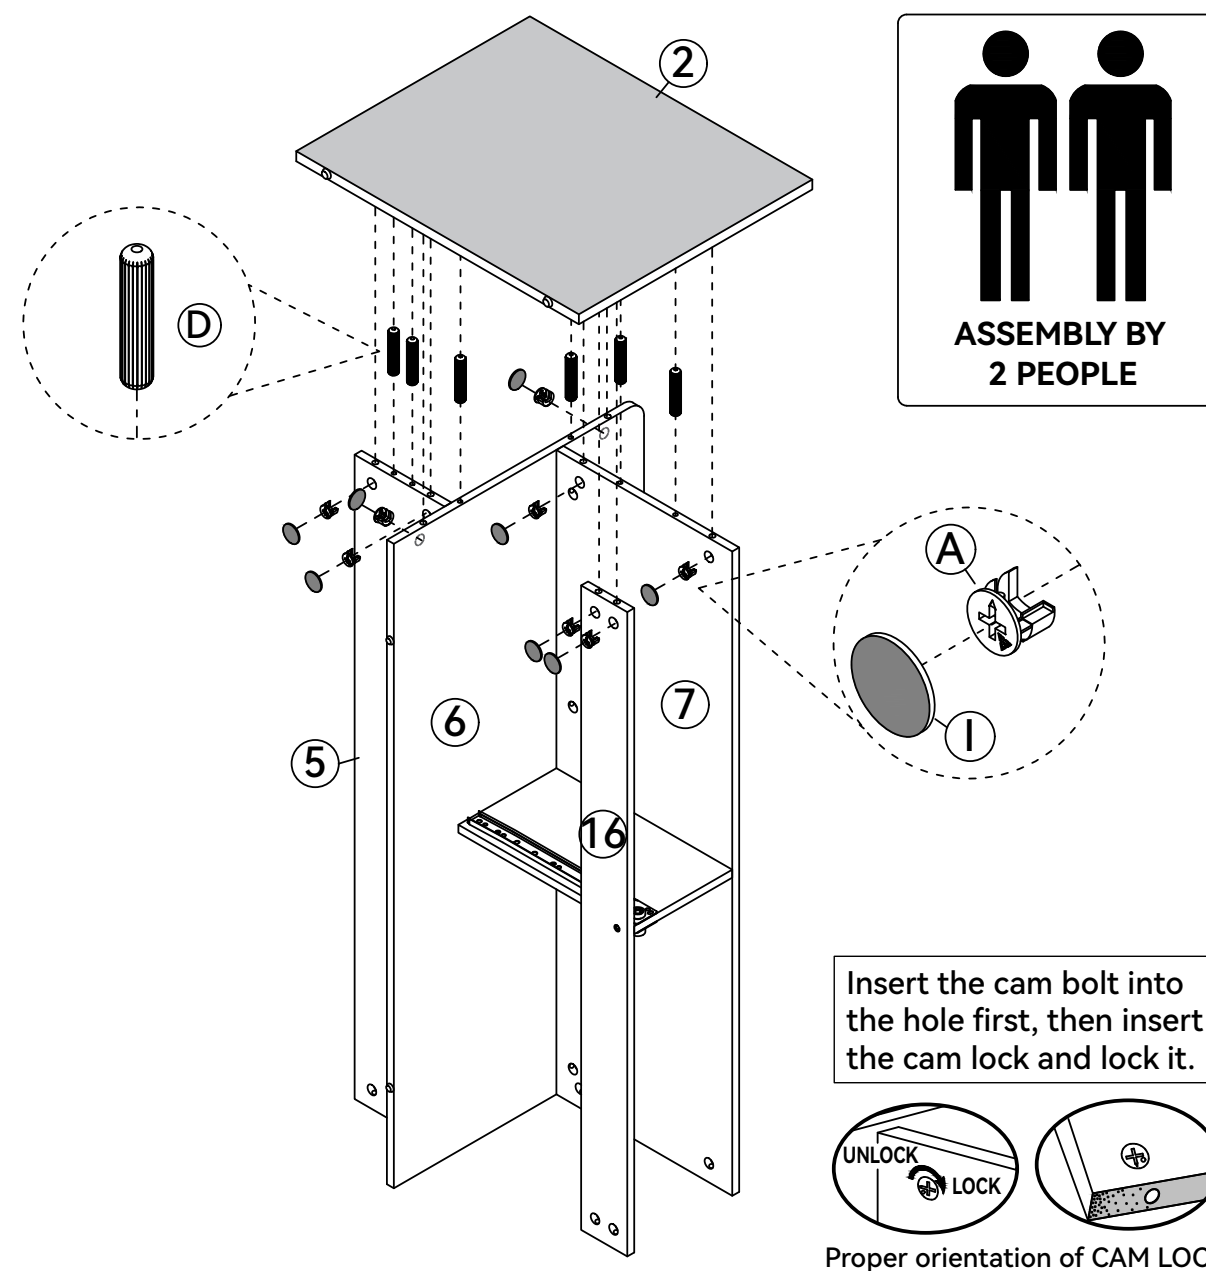



## Step 11

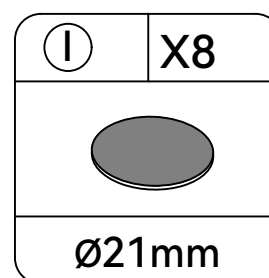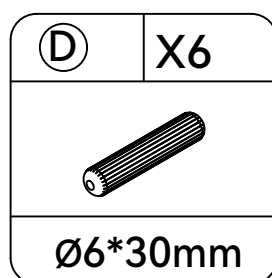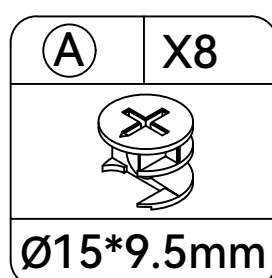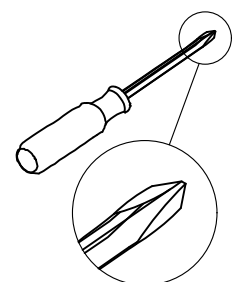




Insert Part D into the holes in Panels 5, 6, and 7 and align it. Then insert it vertically into Panel 3. Tighten Part A to secure it, as shown. Cover the holes with Part I.

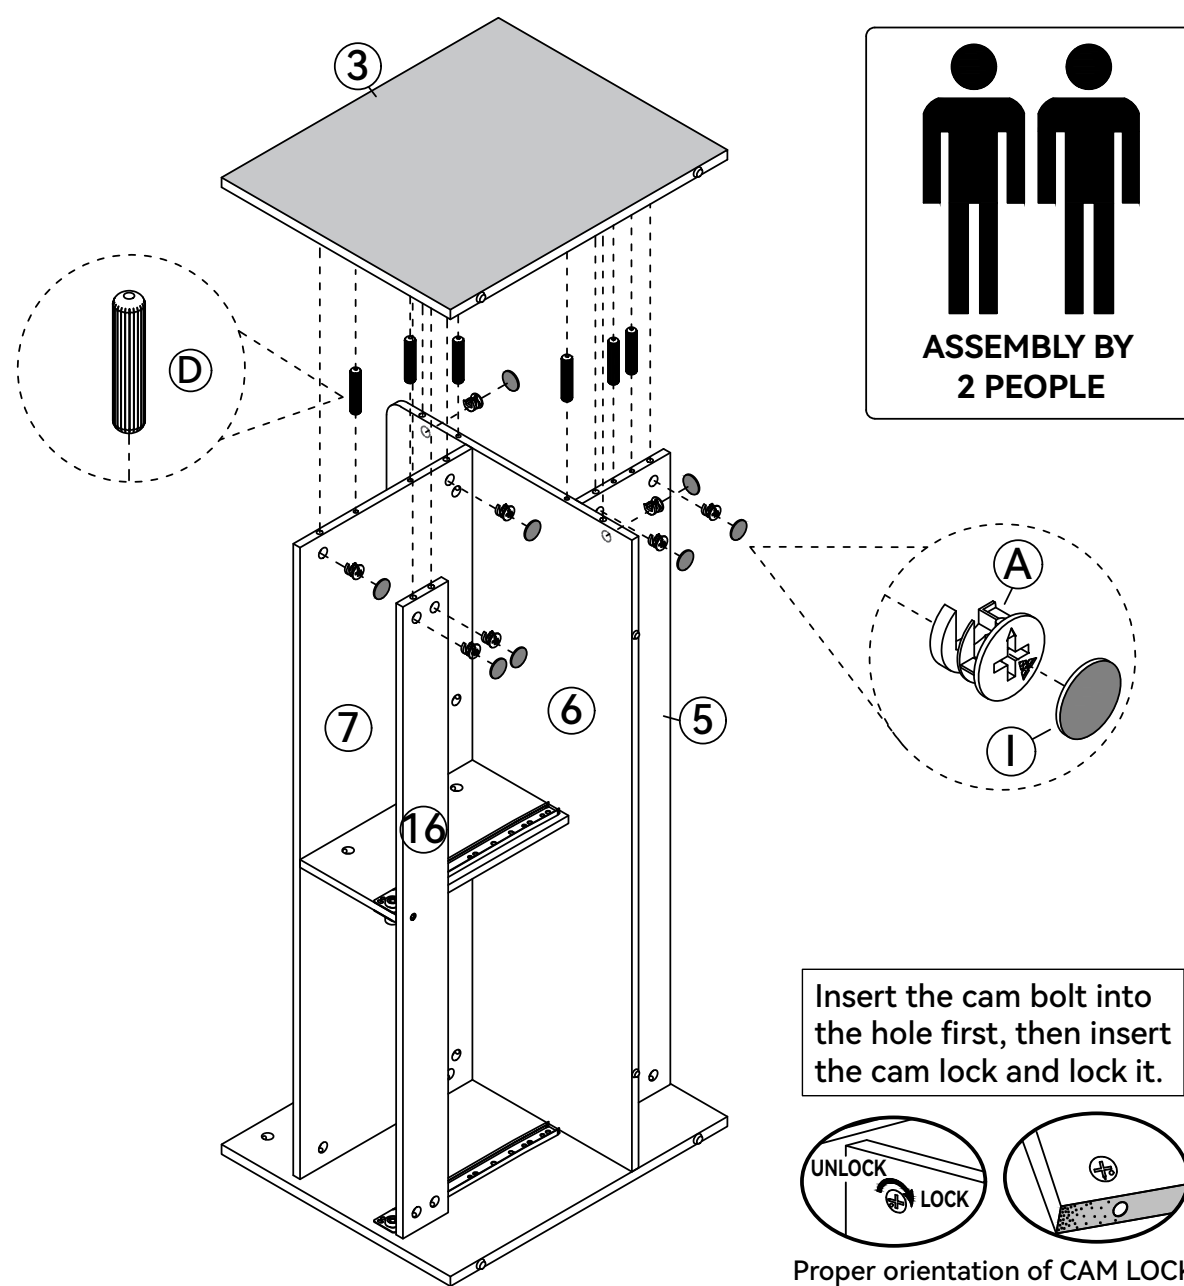





## Step 12

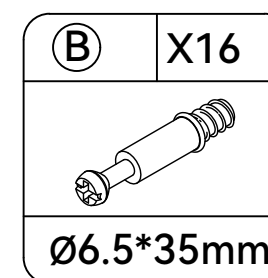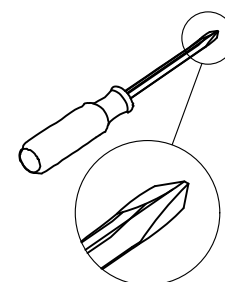


Connect Panels 1 and 4 using Part B, as shown.

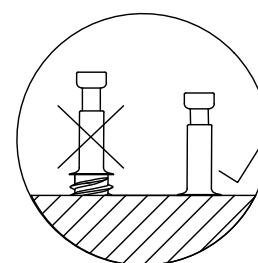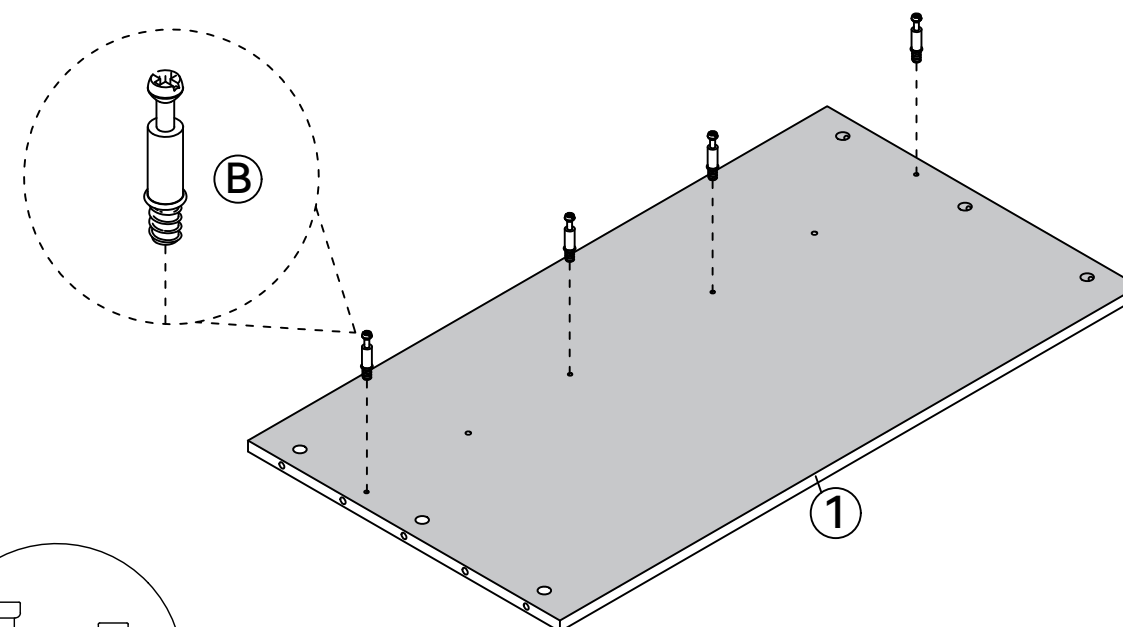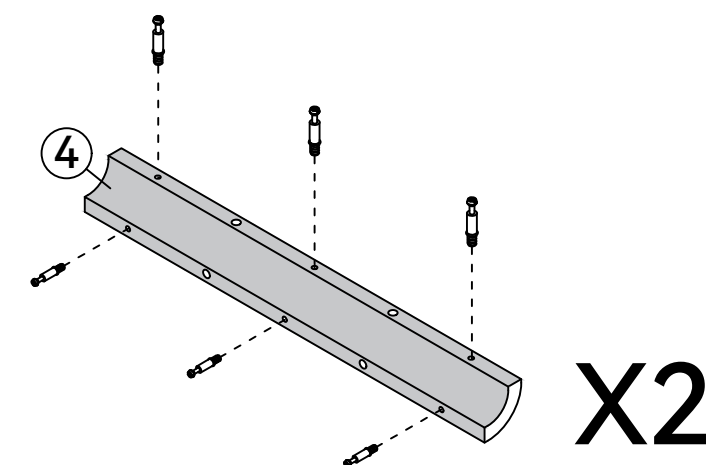


## Step 13

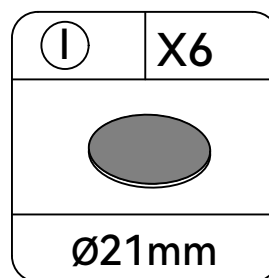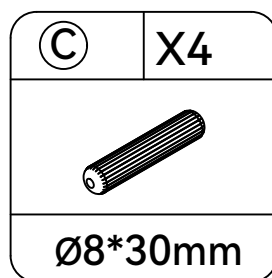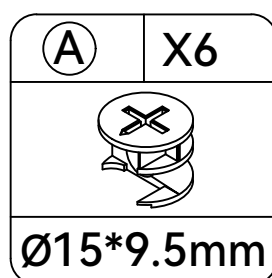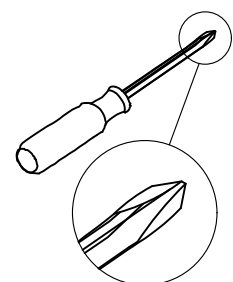

Insert Part C into the holes in Panel 1 and align it. Then insert it vertically into Panel 4. Tighten Part A to secure it, as shown. Cover the holes with Part I.



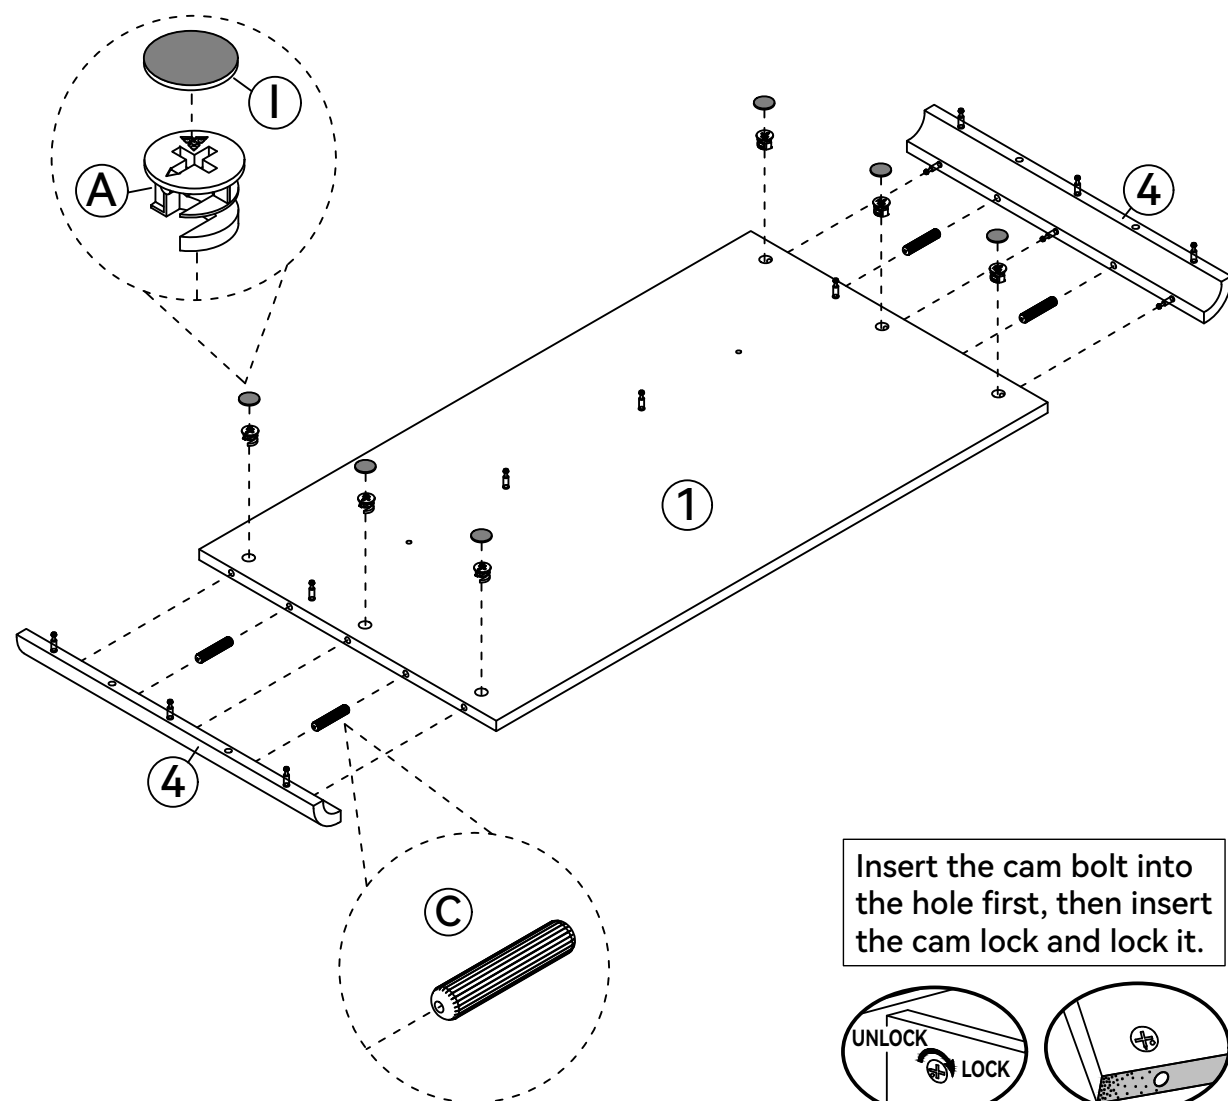


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

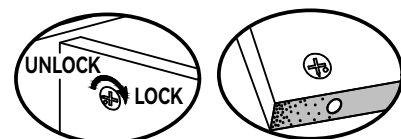


Proper orientation of CAM LOCK




## Step 14

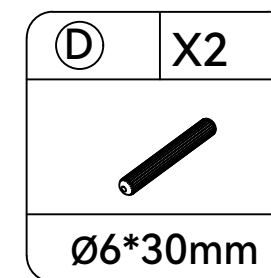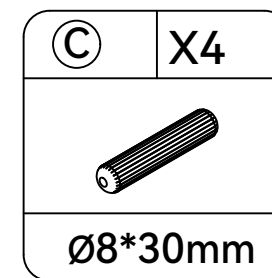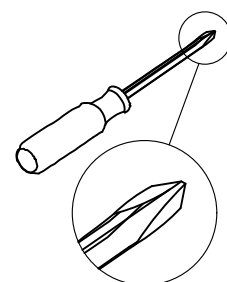



Insert Part D vertically into the holes in Panel 6, then insert Part C vertically into the holes in Panels 2 and 3, as shown.

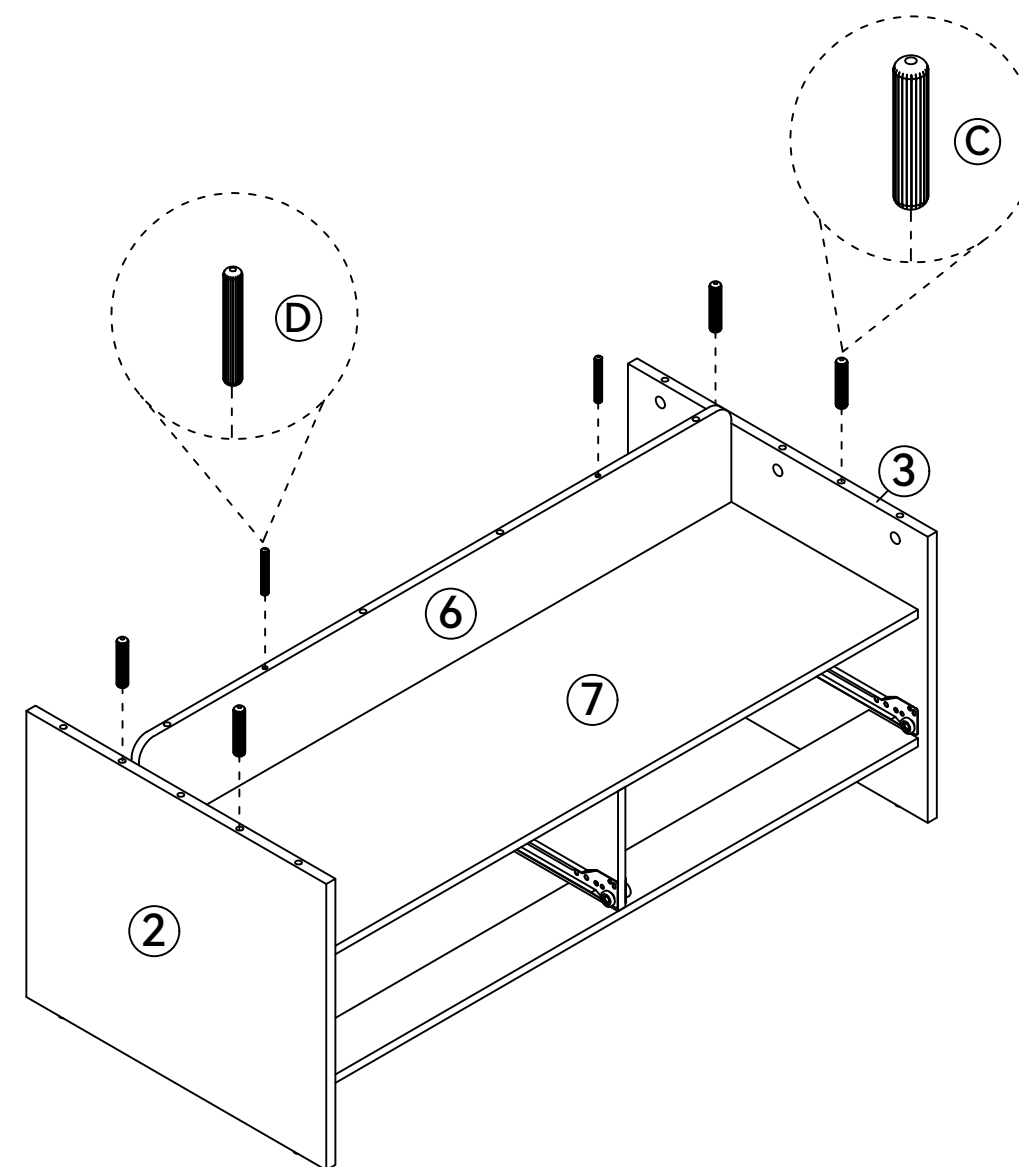


## Step 15

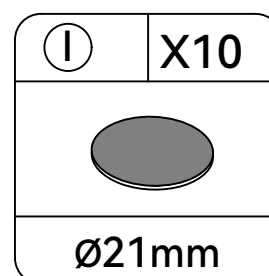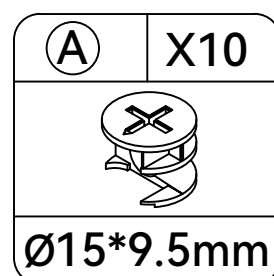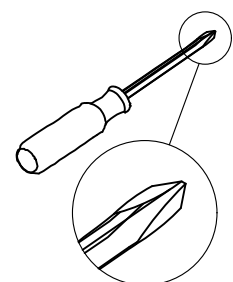

Insert Panel 4 vertically into Panels 2, 3, and 6. Tighten Part A to secure it, as shown. Then cover the holes with Part I.


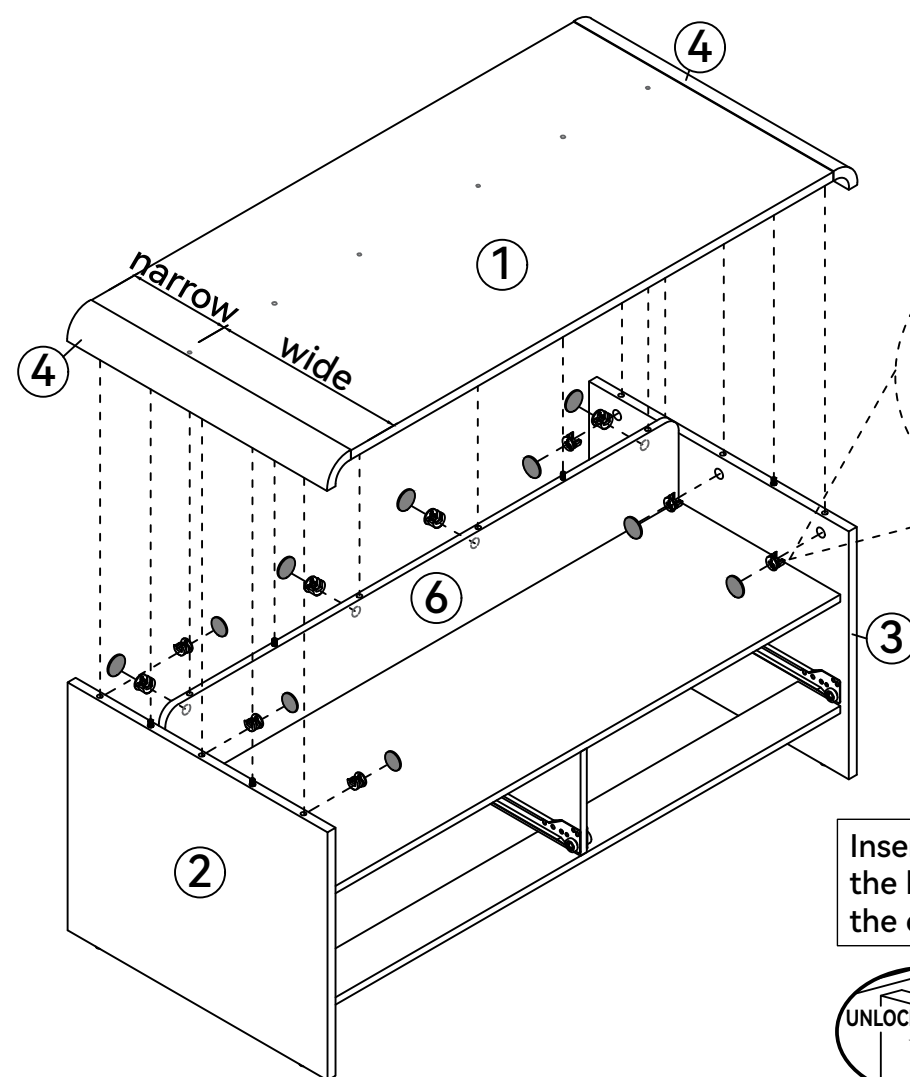
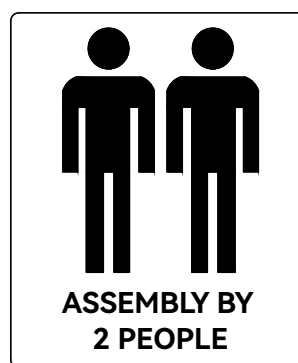


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

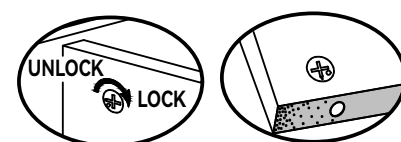


Proper orientation of CAM LOCK


## Step 16

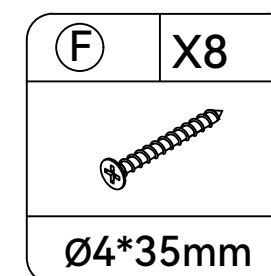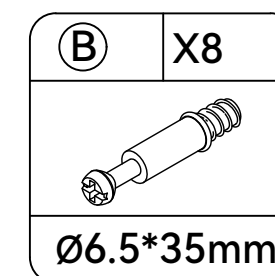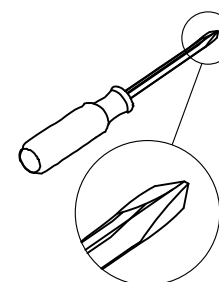




Use Screws F to fasten Panels 10, 11, and 12 together. Then insert Panel 13, as shown. Install Part B on Panels 14 and 15.

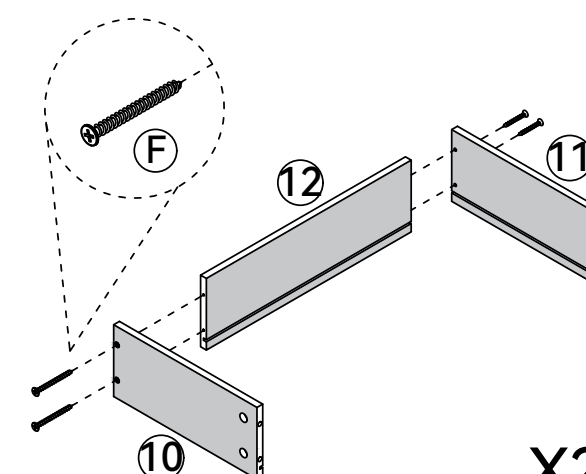

X2  
Step 1

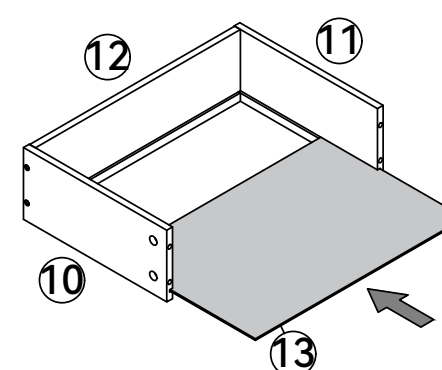


X2  
Step 2

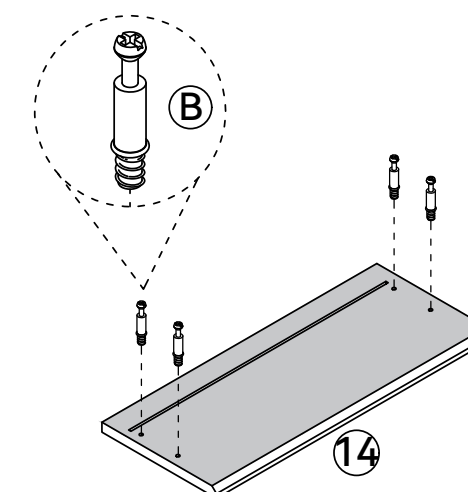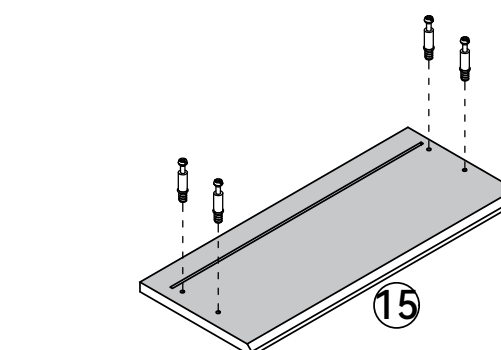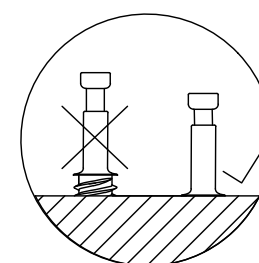


Step 3

## Step 17

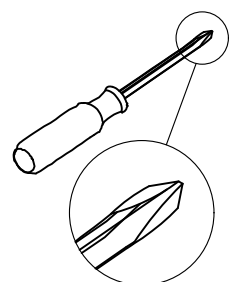


|           |    |
|-----------|----|
| (A)       | X8 |
|           |    |
| Ø15*9.5mm |    |

Insert Panels 14 and 15 vertically into Panels 10 and 11. Tighten Part A to secure them, as shown.

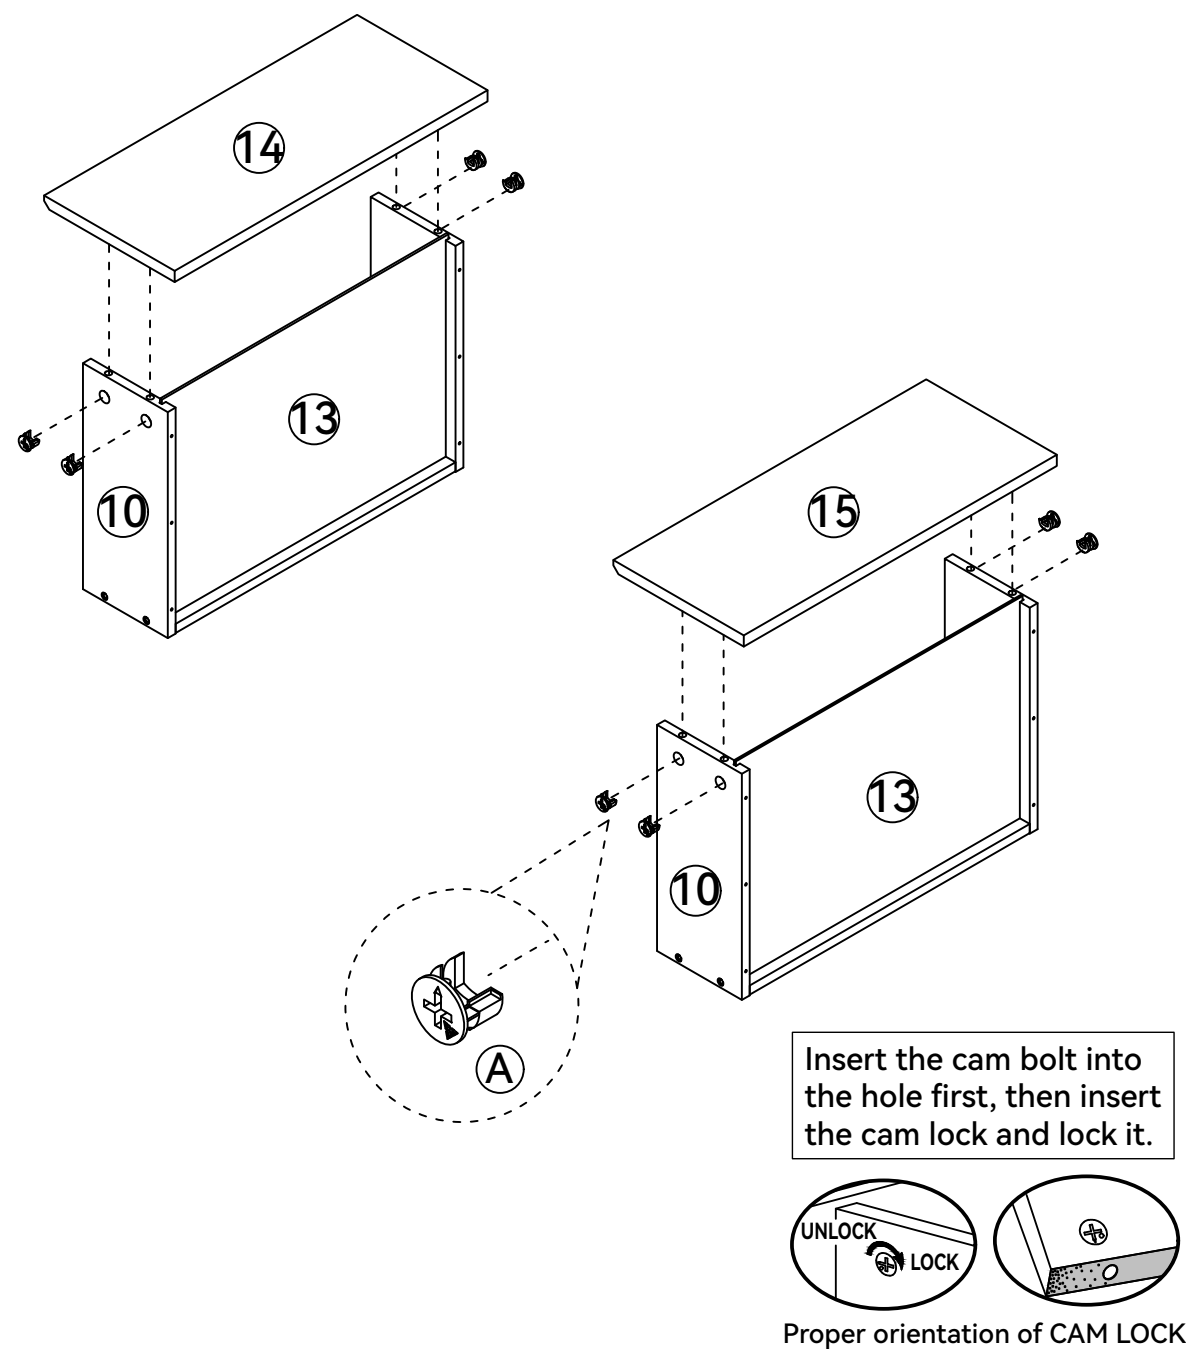

## Step 18

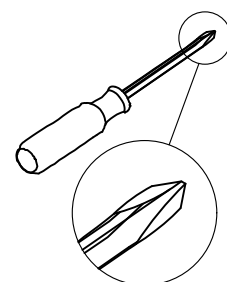


|           |     |
|-----------|-----|
| (E)       | X12 |
|           |     |
| Ø3.5*12mm |     |

|               |    |
|---------------|----|
| (G)           | X2 |
|               |    |
| DR<br>L=300mm |    |

|               |    |
|---------------|----|
| (G)           | X2 |
|               |    |
| DL<br>L=300mm |    |

Use Screws E to secure Part G to Panels 10 and 11, as shown.

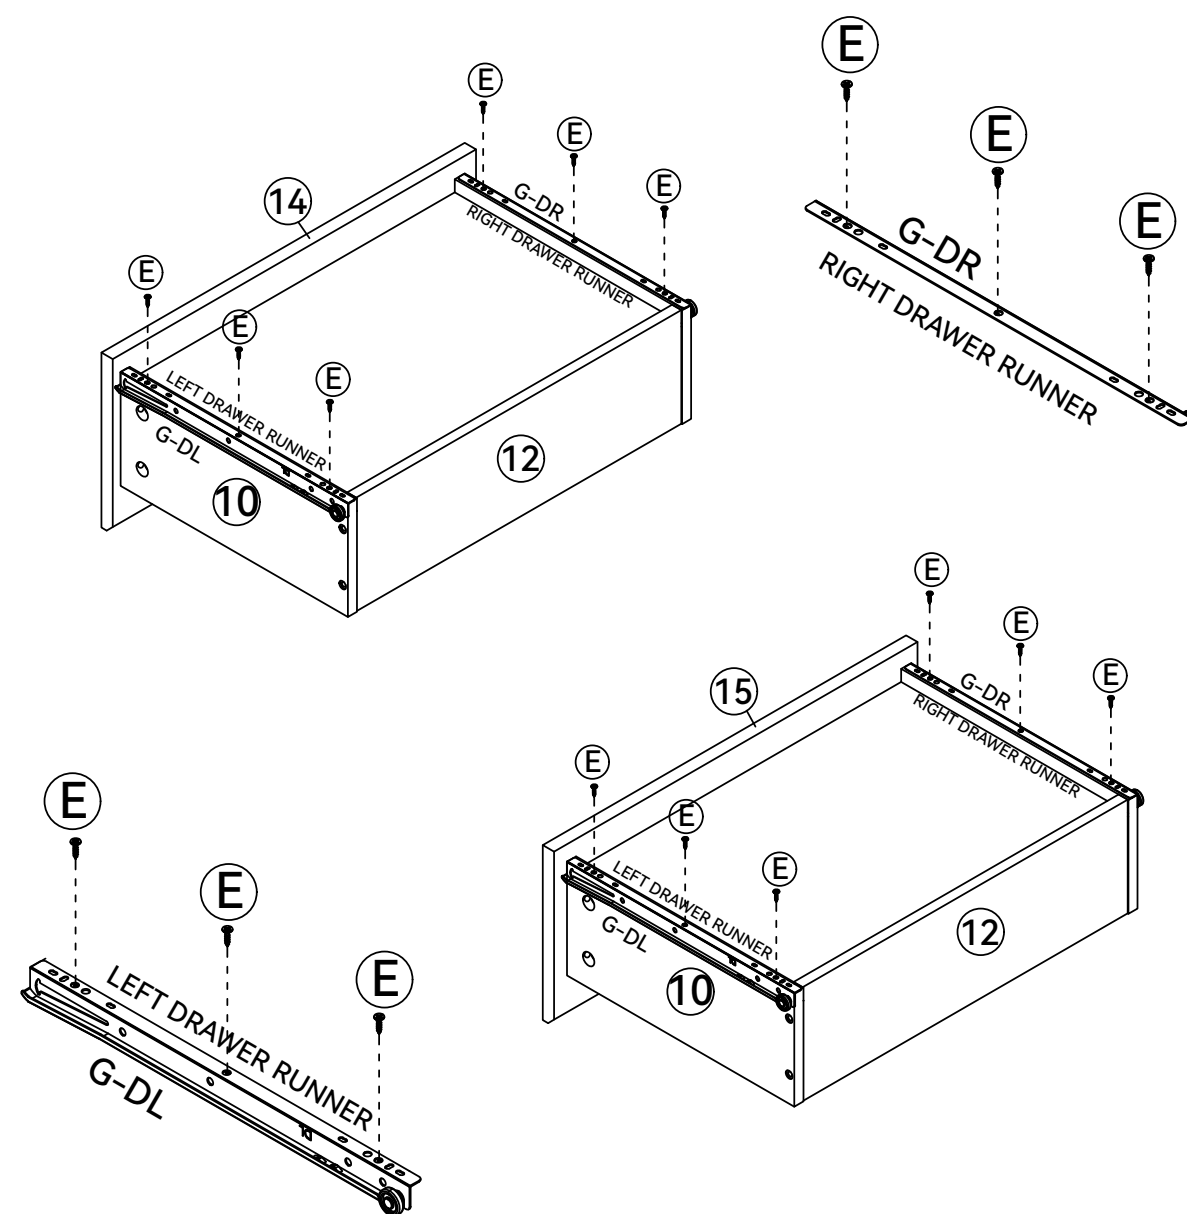

**Step 19**

Push the two drawers into the cabinet. Make sure the G fittings on both sides of the drawers are aligned with the slots of the G fittings inside the cabinet, as shown in the diagram.

