


Steel structure carport

Assembly Instruction - Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

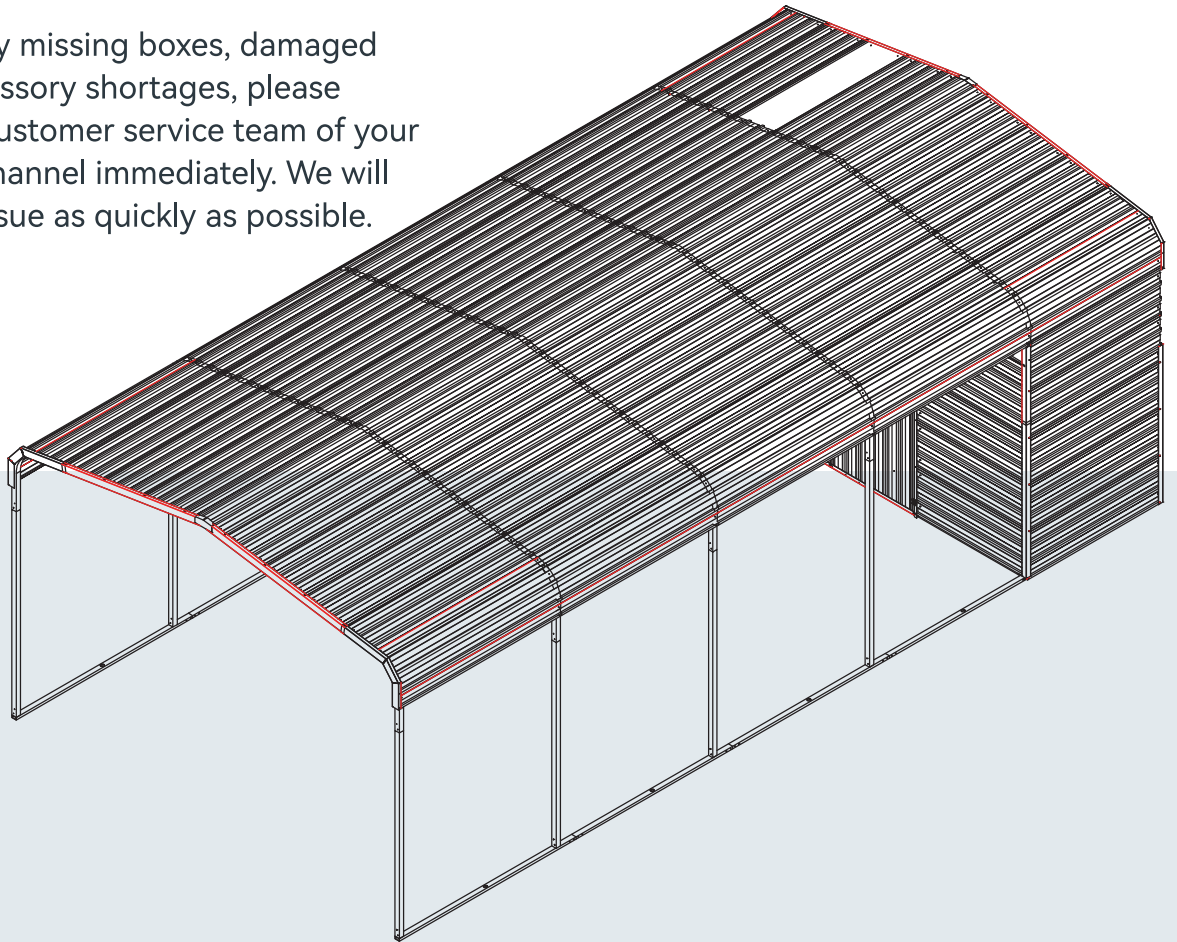

Arrive in 6 separate boxes and may not be part of the same shipment.
Please install the product after receiving all the packages.

CONTACT US

12.1×23.6 FT

- **Email: service@grandtunnel.com**

In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)





EN

Important – Please read these instructions carefully before starting the installation.

Important tips

In order to offer you a better use experience, we recommend that after the installation of the product, you shall carry out anti-rust protection treatment for the cutting end directly exposed to the air, the paint scratch and the surface zinc layer damage caused during the installation process. Due to the limitation of shipping conditions, we cannot provide you with flammable and explosive products such as antirust paint or antirust oil. Please purchase them locally or contact the dealer. After antirust treatment, the service life of the product can be effectively extended.

Required Items:

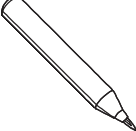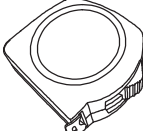Tools					
	Gloves	Safety Goggles	Shoes	Rivet Gun	Workbench
					
	Power Tool	Screwdriver Bit	Pencil	Tape Measure	Ladder

- Clear an area that allows access to the work zone from four sides, and prepare a platform to make assembly easier.
- All parts are labeled, so as you go through the manual page by page, the diagrams will show the location of each part.
- Many holes are pre-drilled for fastening with self-tapping screws or rivets. Use a drill bit in areas where additional holes are needed.
- Before starting the machine, it is recommended to wear gloves to protect your hands, safety glasses to protect your eyes, and shoes or boots to protect your feet to avoid any accidental injuries.

Please keep children away from the construction site.

- Most of the assembly can be done by one person, but assistance may be needed when you reach certain stages of installation.
- Please note: Some local government authorities have regulations regarding the installation of scaffolding, and you may need to obtain approval before installing this scaffold.

Steps:

1. Remove all parts from the carton and place them outside the work area. Check the parts against the parts list on the next page.
2. Tip: Parts are labeled with the letters T=Top, U=Up, M=Middle, B=Bottom. Use these letters as a guide for part locations.
3. Refer to the 'How Panels Connect' page. The unique latch structure reduces the number of screws and rivets required, speeding up the installation process.
4. Complete the assembly instructions page by page.
5. Once completed, position the shed in place and secure it firmly to the ground.
6. Clean all metal parts, rivets, and screws.

CUSTOMER SERVICE GUIDE

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6x30mm screws.”

Contact Us:

- By Email:

Send an email to service@grandtunnel.com, with the subject line “Missing Parts Issue.” Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with other details to service@grandtunnel.com, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: service@grandtunnel.com).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

- Customer Service Email: service@grandtunnel.com

Helpful Tips

To process your issue efficiently, please prepare the following information:

- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.




Thank you for your trust and support! We hope you enjoy using our product!

BEFORE YOU START – HOW PANELS ARE JOINED






Push

Place the U-shaped slot at one end of the connecting plate, then push the U-shaped slot forcefully toward the plate to lock the plate in place.

It is easier to assemble if the panel is laid on the table.

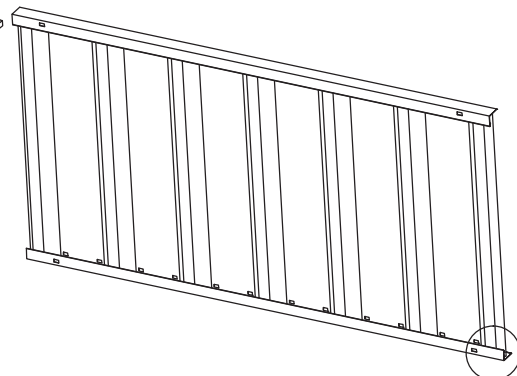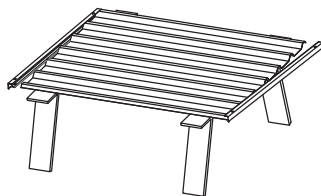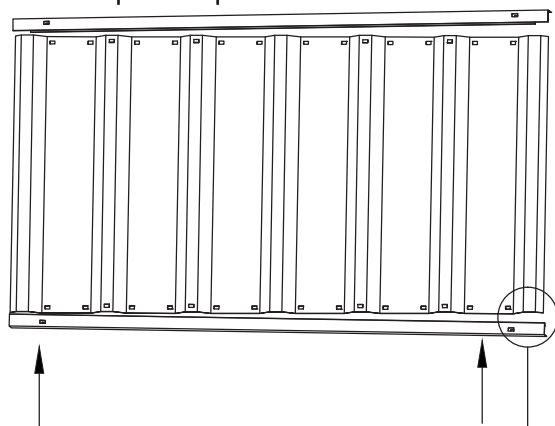





If you need to remove the U-shaped channel from the panel, pull the U-shaped channel along both ends of the panel. You may need assistance.

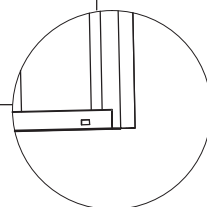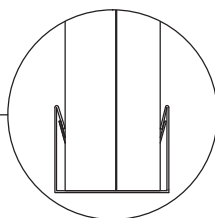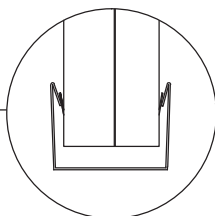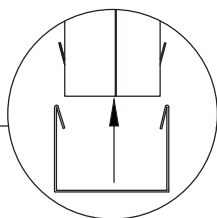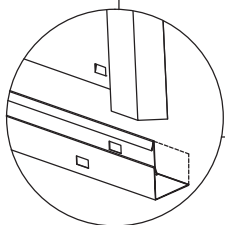



How to connect the U-shaped slot (where needed).











To ensure structural stability, you can choose to install an additional four S3 screws at EJ1.

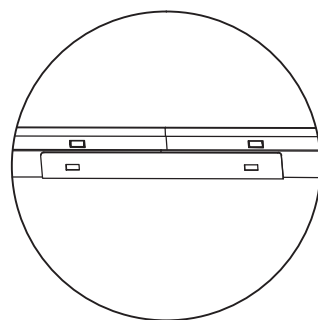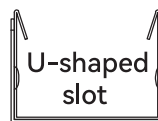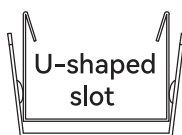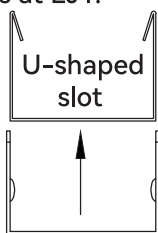

Use part EG1 to connect at the corners.

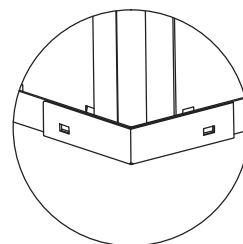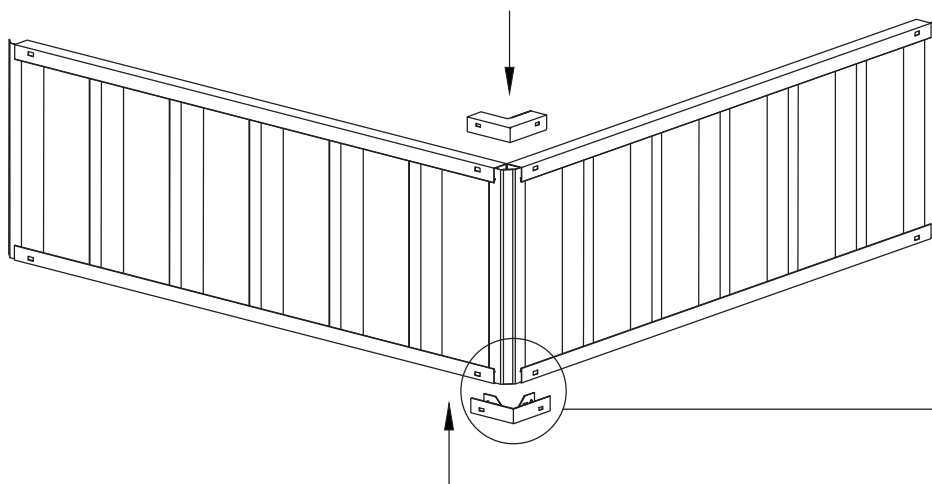

BOX1



ETP1 × 11 	ETP3 × 10 	EP9 × 8 	EP10 × 1 	ETL1 × 2 
ETL2 × 2 	ETL3 × 2 	ETL4 × 2 	ETL5 × 1 	ETL6 × 1 
ETL7 × 2 	ETL8 × 2 	ETP3-1 × 1 		

BOX2





ETP5 × 10 	ETP6 × 5 	ETP2 × 12 	EP1A × 1 	EP2A × 1 
EP3A × 1 	EP4A × 1 	EP5A × 1 	EP6A × 1 	EP7A × 1 
EP8A × 1 	EP1B × 1 	EP2B × 1 	EP3B × 1 	EP4B × 1 
EP5B × 1 	EP6B × 1 	EP7B × 1 	EP8B × 1 	

PART LIST





BOX3

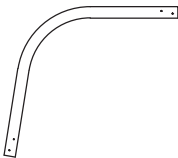 A1 × 8	 A3 × 2	 A4 × 4	 AC1 × 6	 AC2 × 4
 B1 × 2	 B6 × 1	 G2 × 1	 G4 × 1	 D5 × 2











BOX4

 ETP2 × 21	 ETP4 × 10	 N1A × 1	 N1B × 1	 N2A × 1
 N2B × 1				



BOX5

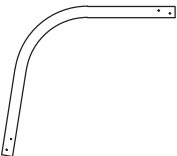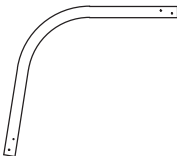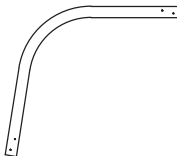 DC1 × 2	 AC1 × 2	 BC1 × 2	 AC2 × 2	 B5 × 2
 B3 × 2	 D1 × 2	 A5 × 2	 G5 × 2	 G3 × 2
 D6 × 1	 G1 × 2	 B4 × 2	 D4 × 2	 ED1 × 2

PART LIST

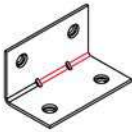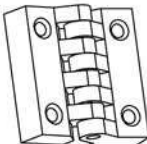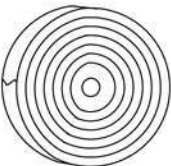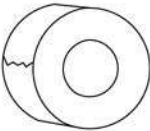ED2 ×4 	ETL9 ×1 	ETL10 ×1 	S12 ×975 	K1 ×12 
C2 ×4 	C3 ×12 	C52 ×8 	S18 ×28 	S5 ×4 
H2 ×1 	H3 ×1 	S3 ×14 	EH1 ×2 	SH2 ×6 
SC04 ×28 	Waterproof glue ×1 	Waterproof tape ×1 	M32 ×16 	L8 ×4 
S11 ×16 	LG3 ×2 			


BOX6

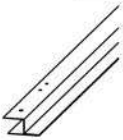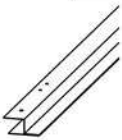ET1 ×1 	ET2 ×1 	Z2 ×1 	EDF2 ×1 	EDF3 ×1 
---	---	--	---	--


PART LIST

EDF4 × 1 	EDF5 × 1 	A2 × 8 	B2 × 2 	D2 × 2 
D3 × 2 	EDP1 × 2 	EDP2 × 1 	EDP3 × 1 	EP11 × 1 
EDT1 × 4 	Z1 × 1 	Z3 × 1 	Z4 × 1 	Z5 × 1 
Z6 × 1 				

FRAME ASSEMBLY

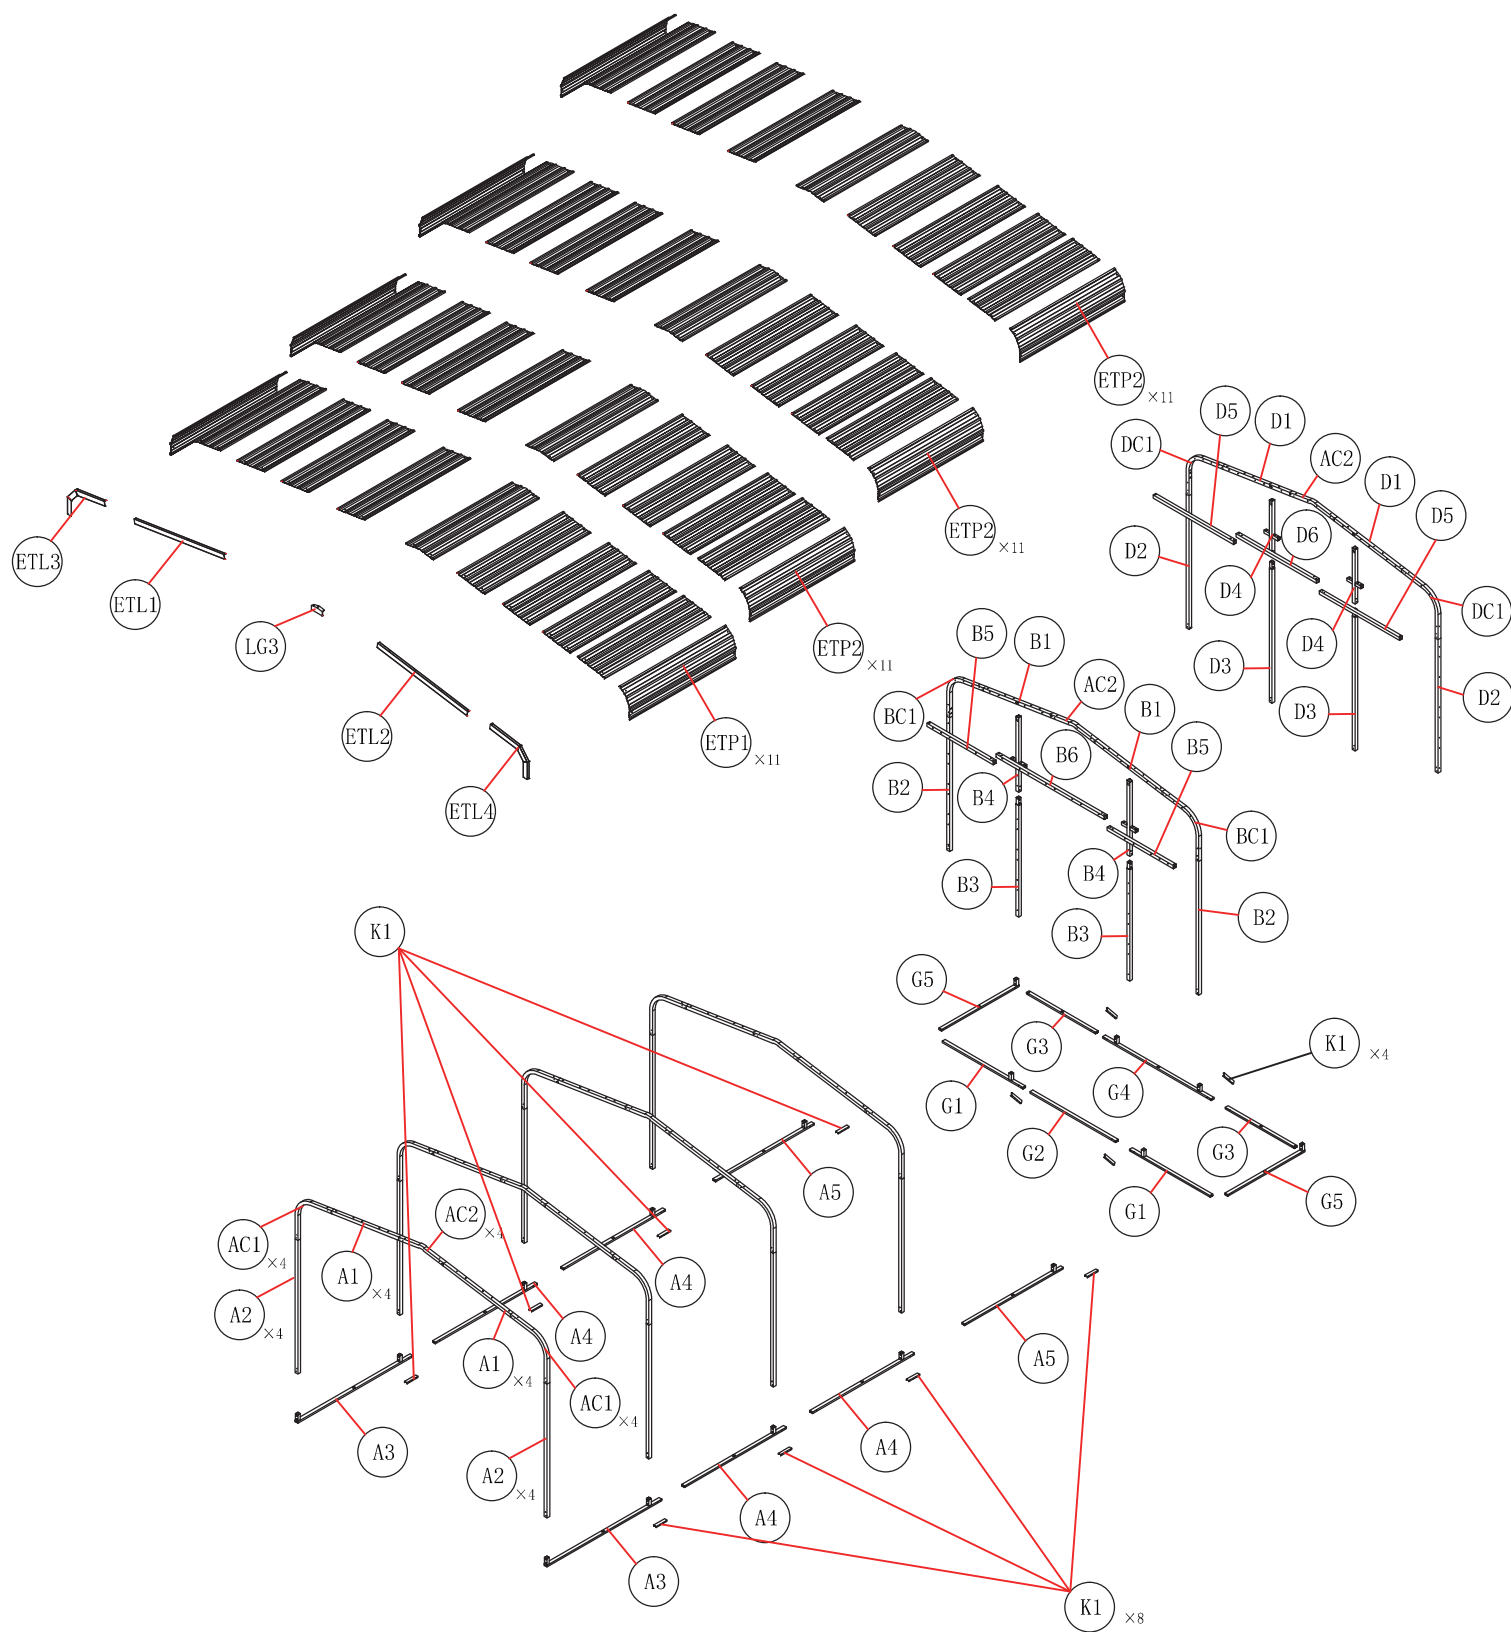

FRAME ASSEMBLY

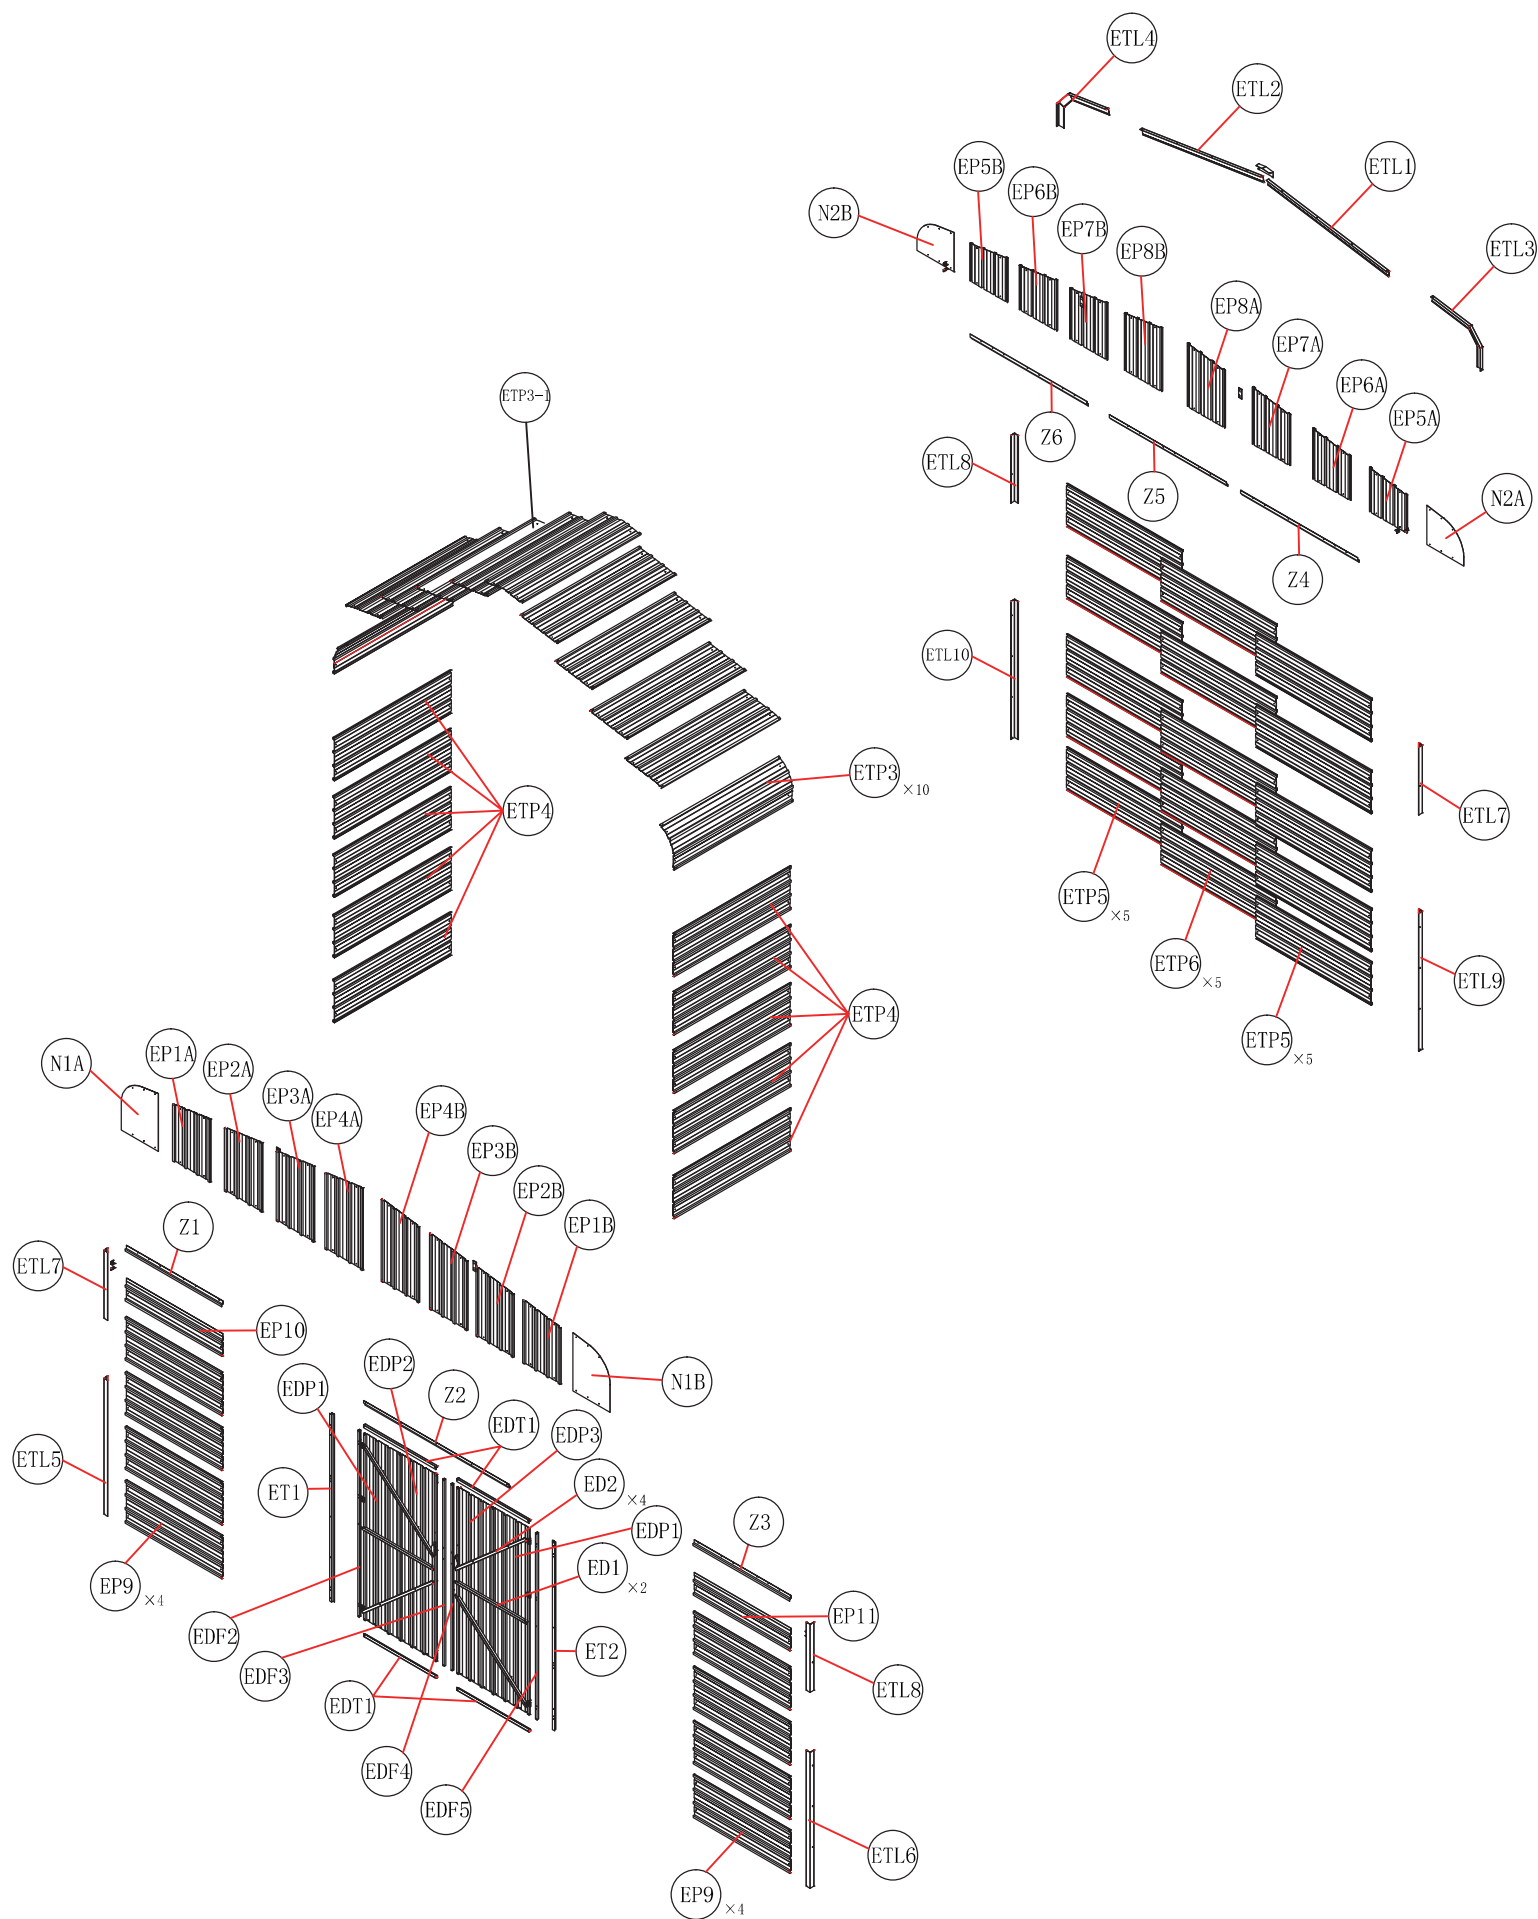


FRAME ASSEMBLY


	A2	2		AC1	2		A1	2		AC2	1
	S12	24									

× 4


STEP 1

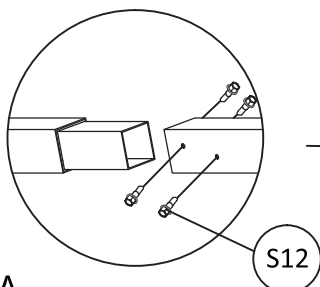

STEP 2

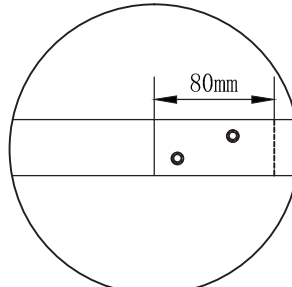


PART A

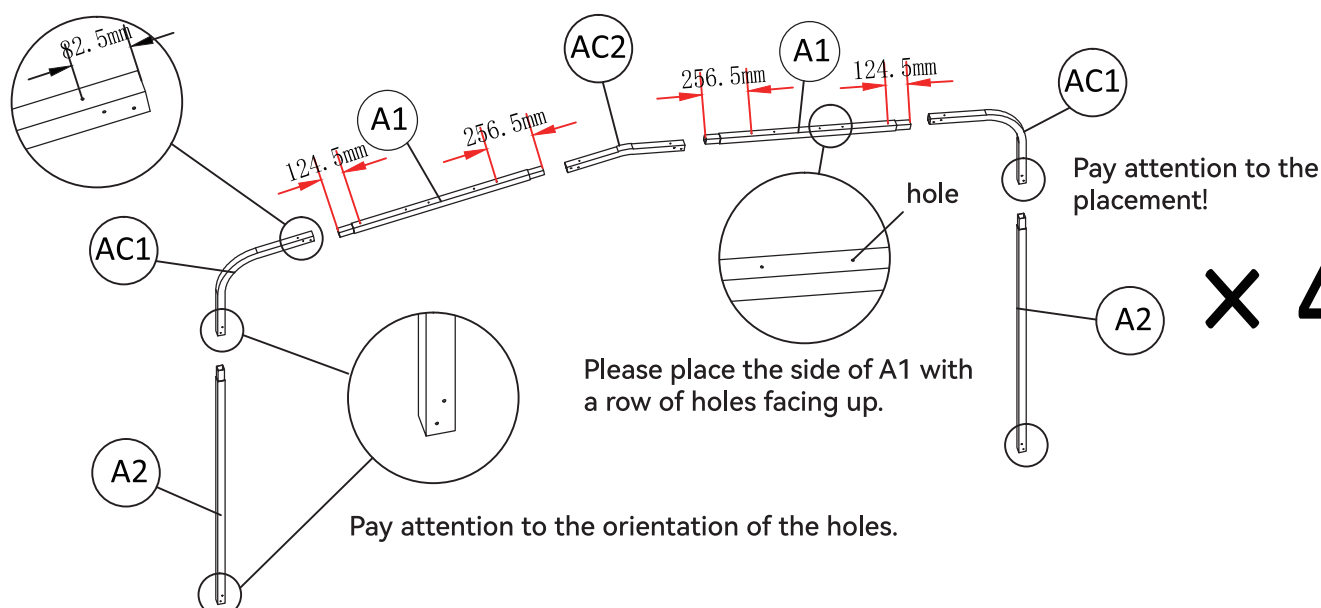

Step1:


Arrange two (A1), two (A2), one (AC1), and one (AC2) according to the sequence and hole orientation shown in the diagram. Insert the reduced tube of (A2) into (AC1). Insert the reduced tubes at both ends of (A1) into (AC1) and (AC2) respectively. At each connection point, secure the parts using four screws (S12): two screws through the pre-drilled holes on the front side and two screws through the pre-drilled holes on the back side, as shown in the diagram. This completes one PART A assembly. Repeat this process to assemble a total of four PART A units.

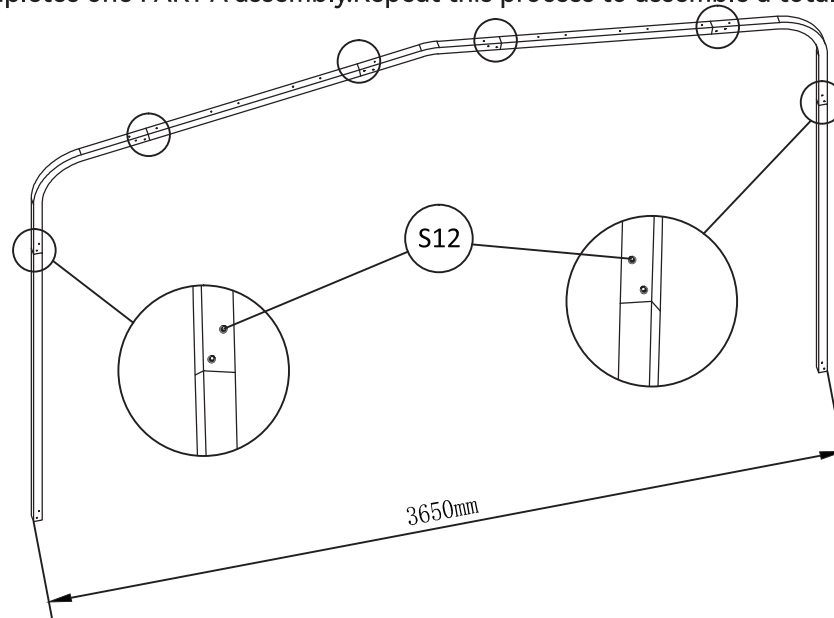


FRAME ASSEMBLY

	B2	2		BC1	2		B1	2		AC2	1
	S12	24									

STEP 1

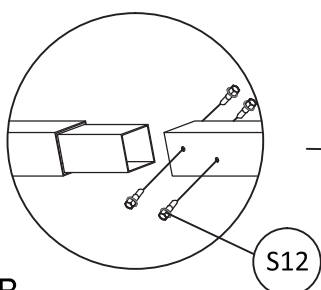


STEP 2

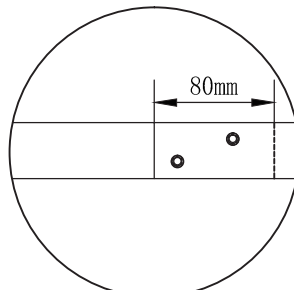


PART B

Place the side of BC1 with five holes on the outer side of the mountain.

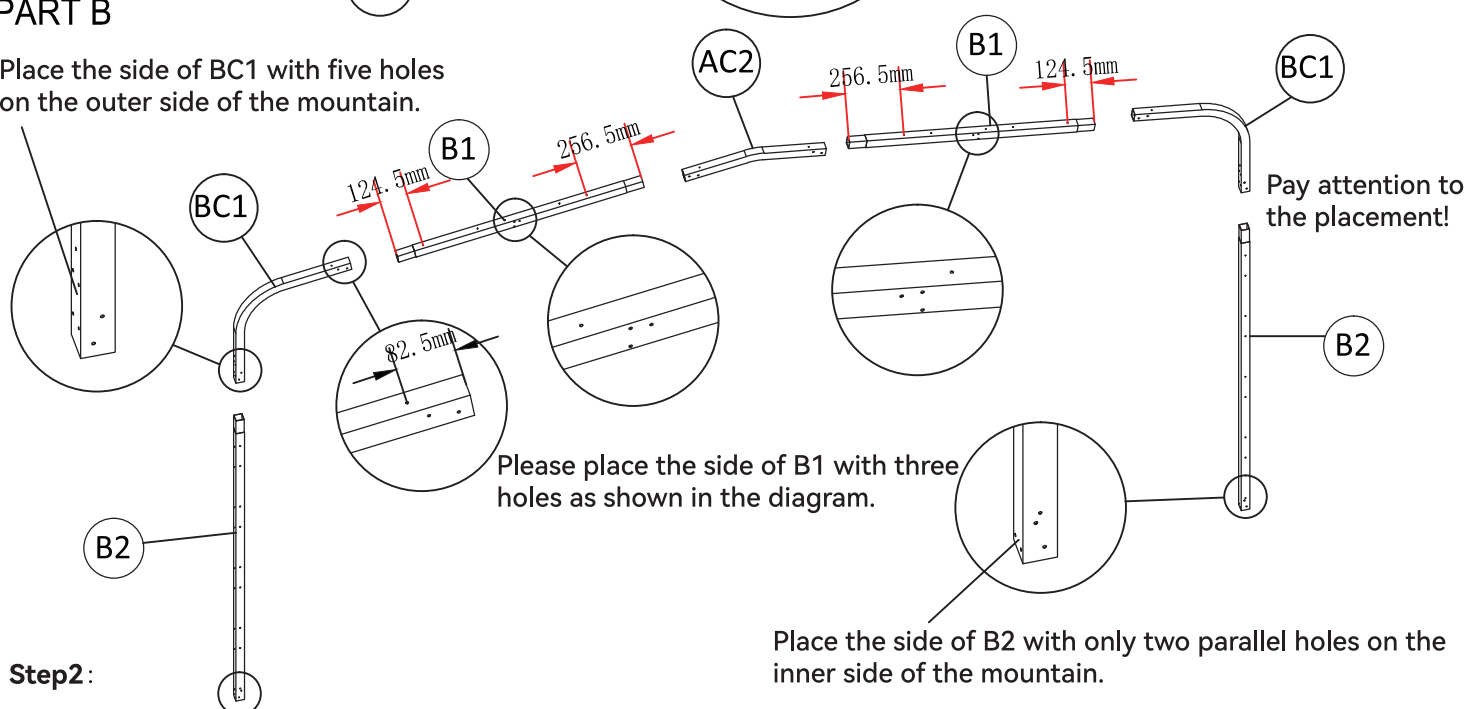

Step2:


Arrange two (B1), two (B2), one (BC1), and one (AC2) according to the sequence and hole orientation shown in the diagram. Insert the reduced tube of (B2) into (BC1), then insert the reduced tubes at both ends of (B1) into (BC1) and (AC2) respectively. At each connection point, secure the parts using four screws (S12), with two screws fastened through the pre-drilled holes on the front side and two screws through the pre-drilled holes on the back side, as shown in the diagram, to complete one PART B assembly.

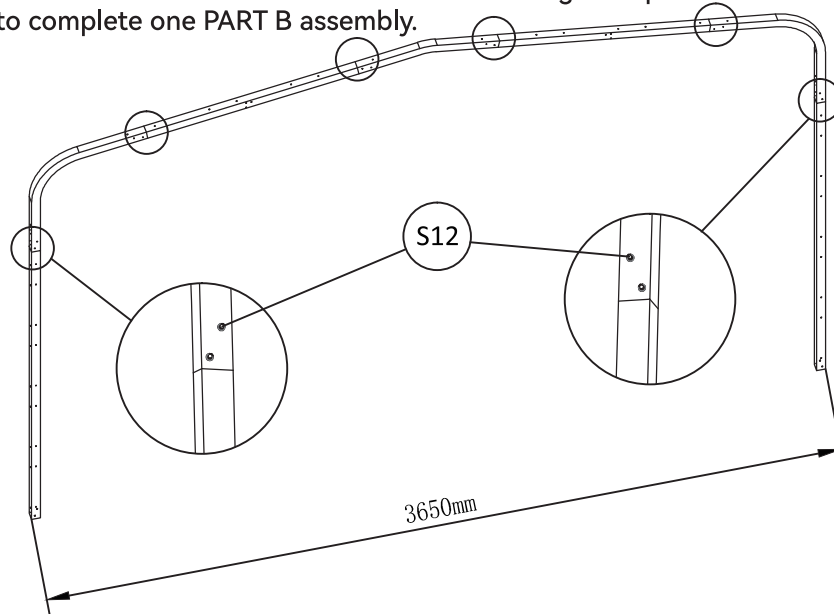


FRAME ASSEMBLY

	D2	2		DC1	2		D1	2		AC2	1
	S12	24									


STEP 1

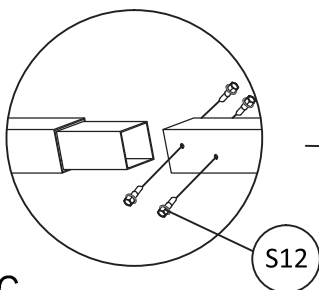

STEP 2

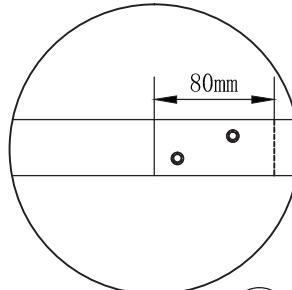


PART C

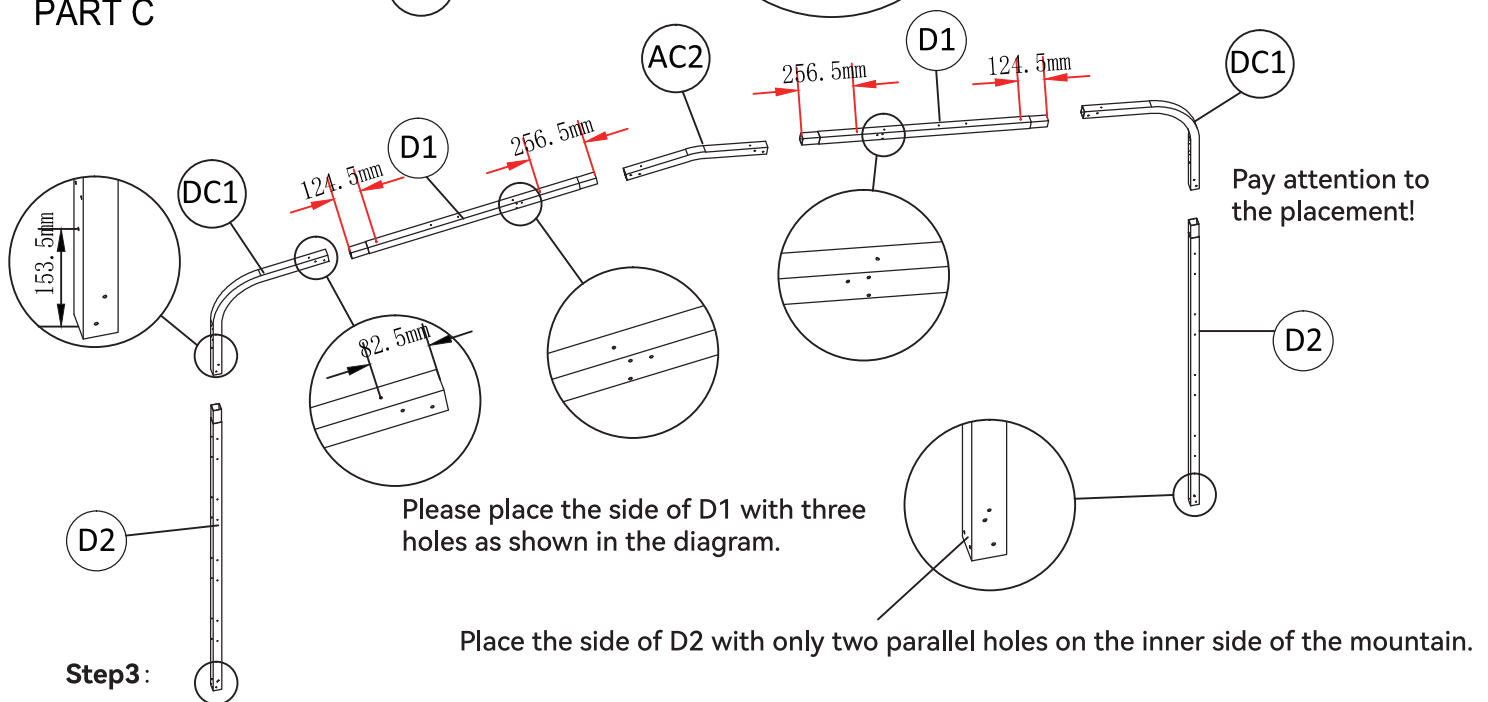

Step3:

Arrange two (D1), two (D2), one (DC1), and one (AC2) according to the sequence and hole orientation shown in the diagram. Insert the reduced tube of (D2) into (DC1), then insert the reduced tubes at both ends of (D1) into (DC1) and (AC2) respectively. At each connection point, secure the parts using four screws (S12), with two screws fastened through the pre-drilled holes on the front side and two screws through the pre-drilled holes on the back side as shown in the diagram, completing one PART C assembly.

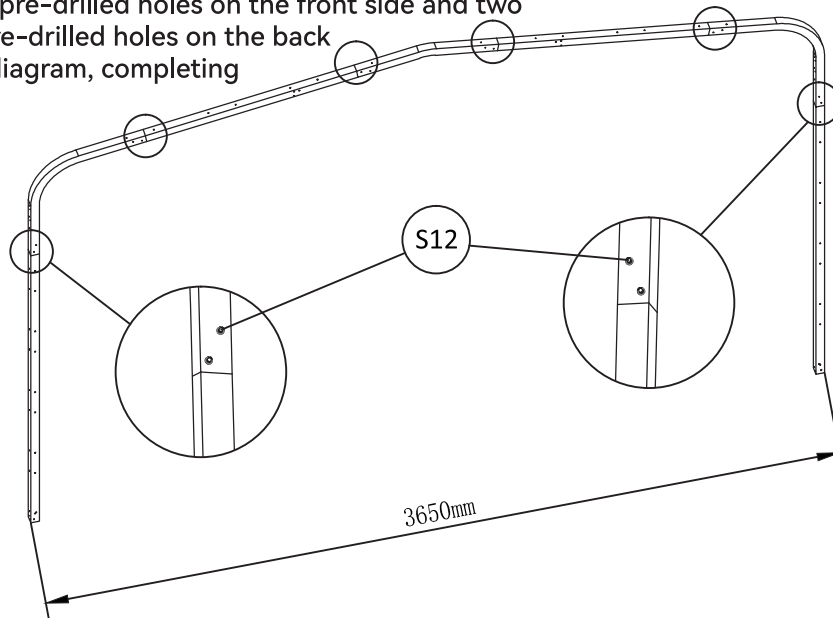


FRAME ASSEMBLY

	A3	2		A4	4		A5	2		G5	2
	S12	64		K1	8						


STEP 1

STEP 2

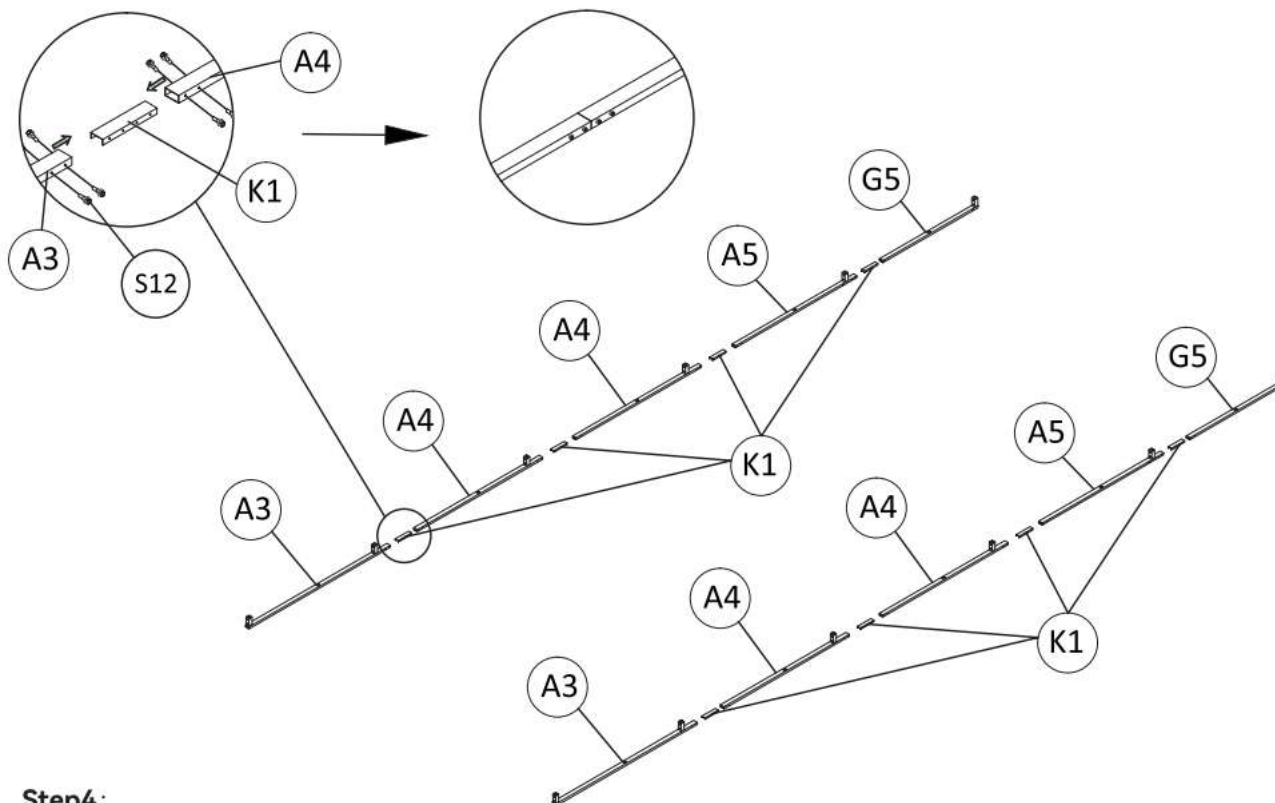


Step4:

Arrange two (A3), two (A5), two (A4), and four (K1) according to the sequence and orientation shown in the diagram. Insert the connector (K1) into each connection point, then secure them using eight screws (S12), with four screws fastened through the pre-drilled holes on the front side and four screws through the pre-drilled holes on the back side. After assembly, align the completed bottom frames and place them parallel to each other, ensuring a measured distance of 3650 mm between them.

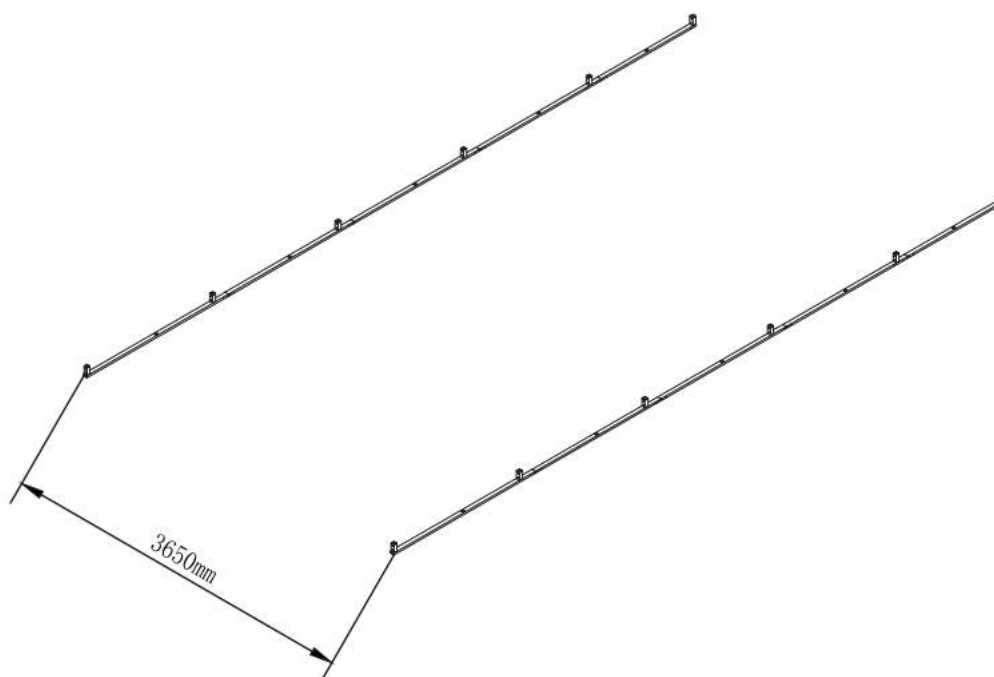


	S12	48
---	-----	----

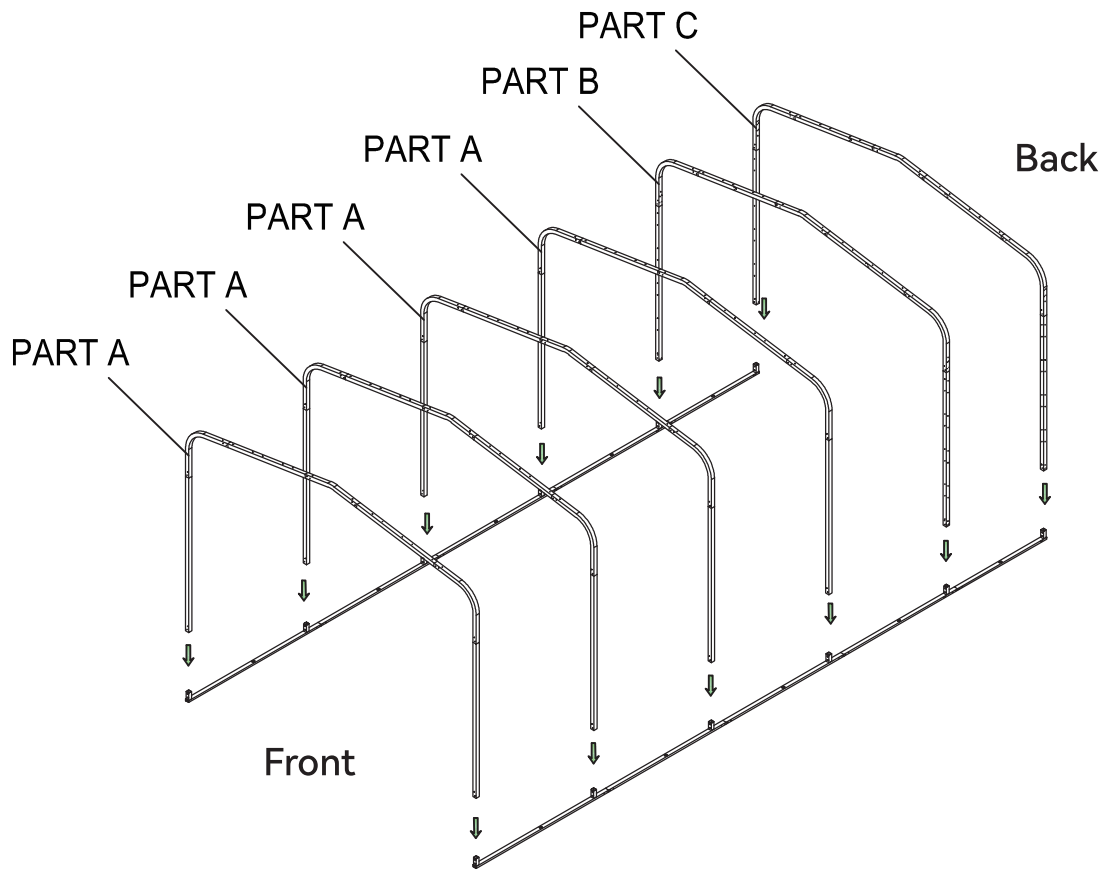

Step5:

Place four PART A units, one PART B unit, and one PART C unit onto the bottom frame assembled in Step 4, following the sequence and orientation shown in the diagram. Insert the short ends of the bottom frame into the long straight tubes, then secure each connection point using four screws (S12), with two screws fastened through the pre-drilled holes on the front side and two screws through the pre-drilled holes on the back side as illustrated.

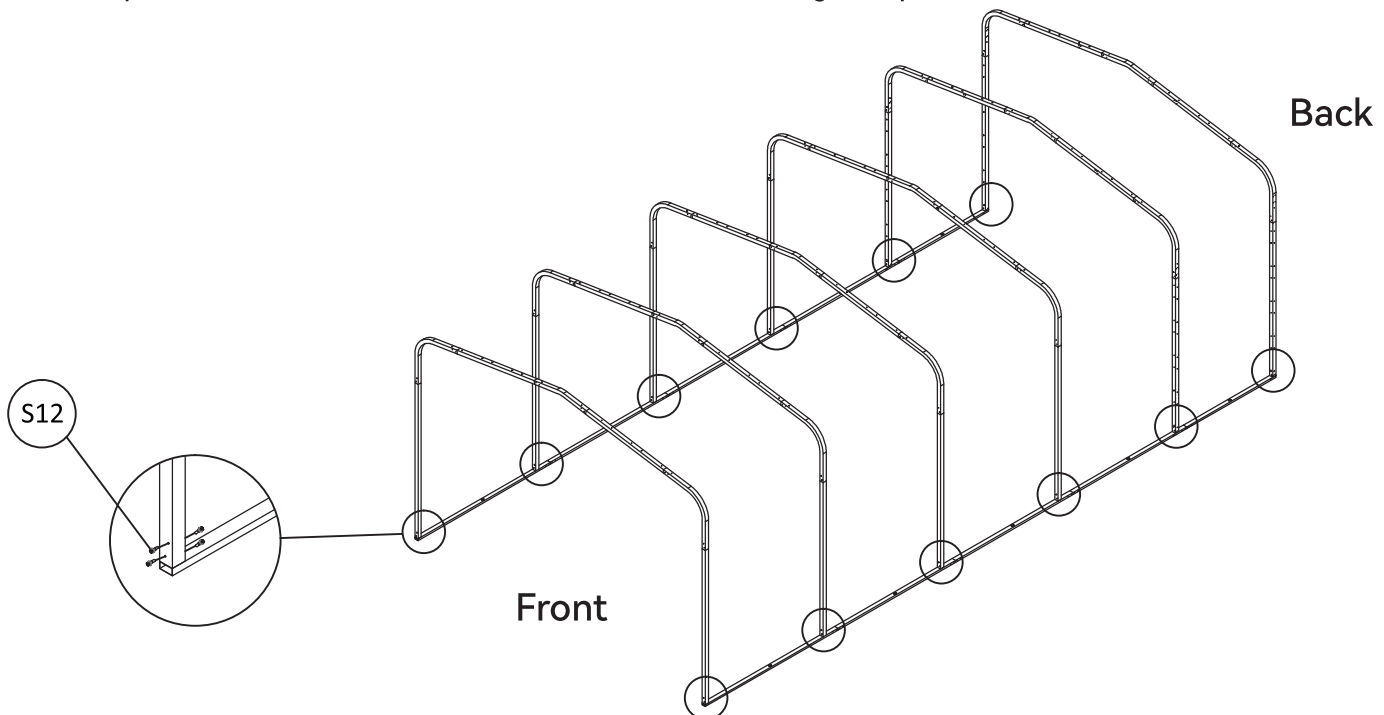


FRAME ASSEMBLY




	G1	2		G2	1
	S12	16		K1	2

PART D-1

STEP 1

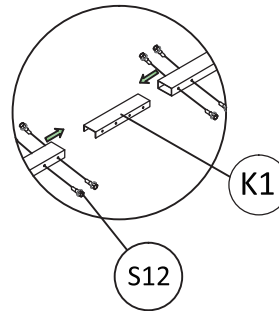

STEP 2

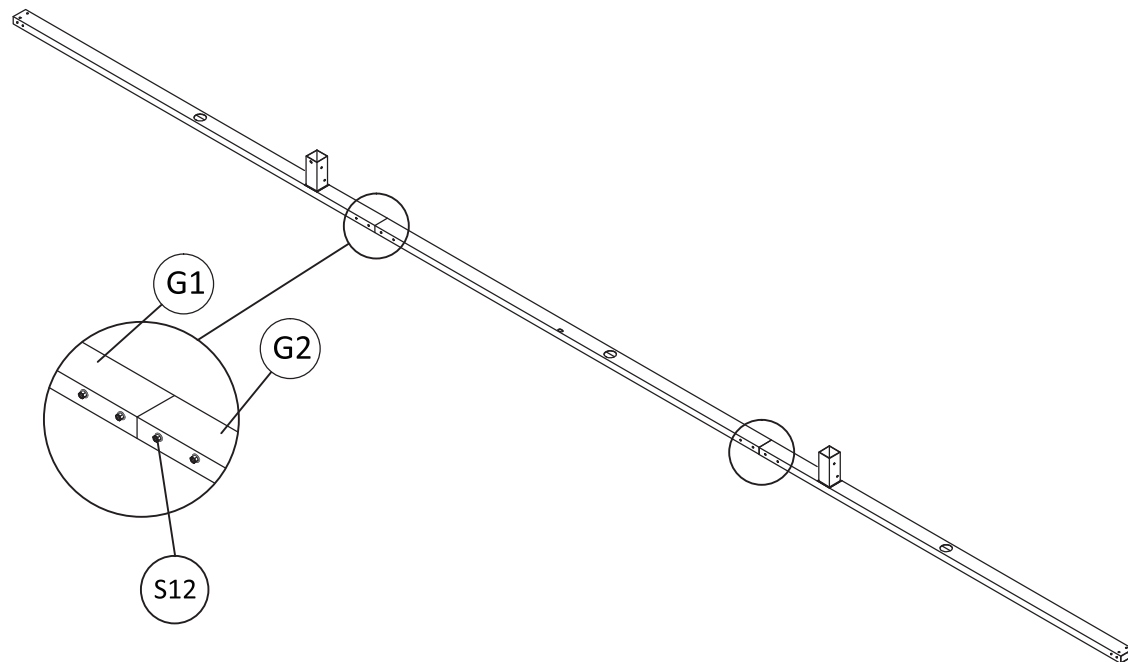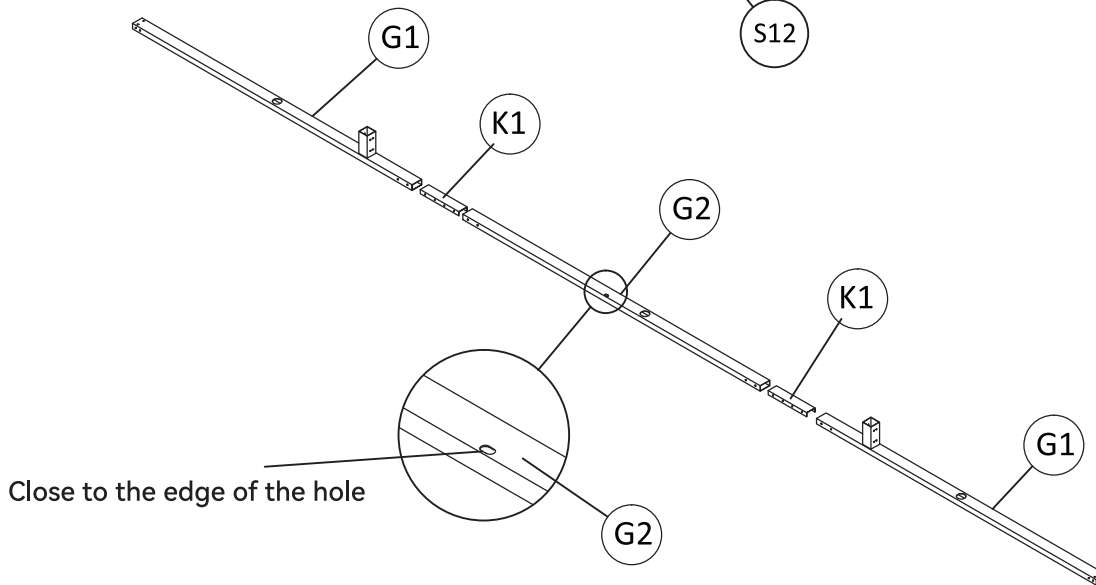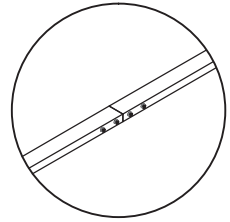

Step6:


Arrange two (G1) and one (G2) according to the sequence and orientation shown in the diagram. As illustrated, insert the connector (K1) into each connection point, then secure them using eight screws (S12), with four screws fastened through the pre-drilled holes on the front side and four screws through the pre-drilled holes on the back side.

FRAME ASSEMBLY

Step7:


	B3	2
	S12	8

Place two (B3) onto the bottom frame installed in Step 6, following the sequence and hole orientation shown in the diagram. Insert the short end of (G1) into (B3), then secure each connection point using four screws (S12), with two screws fastened through the pre-drilled holes on the front side and two screws through the pre-drilled holes on the back side as illustrated, completing one PART D-1 assembly.

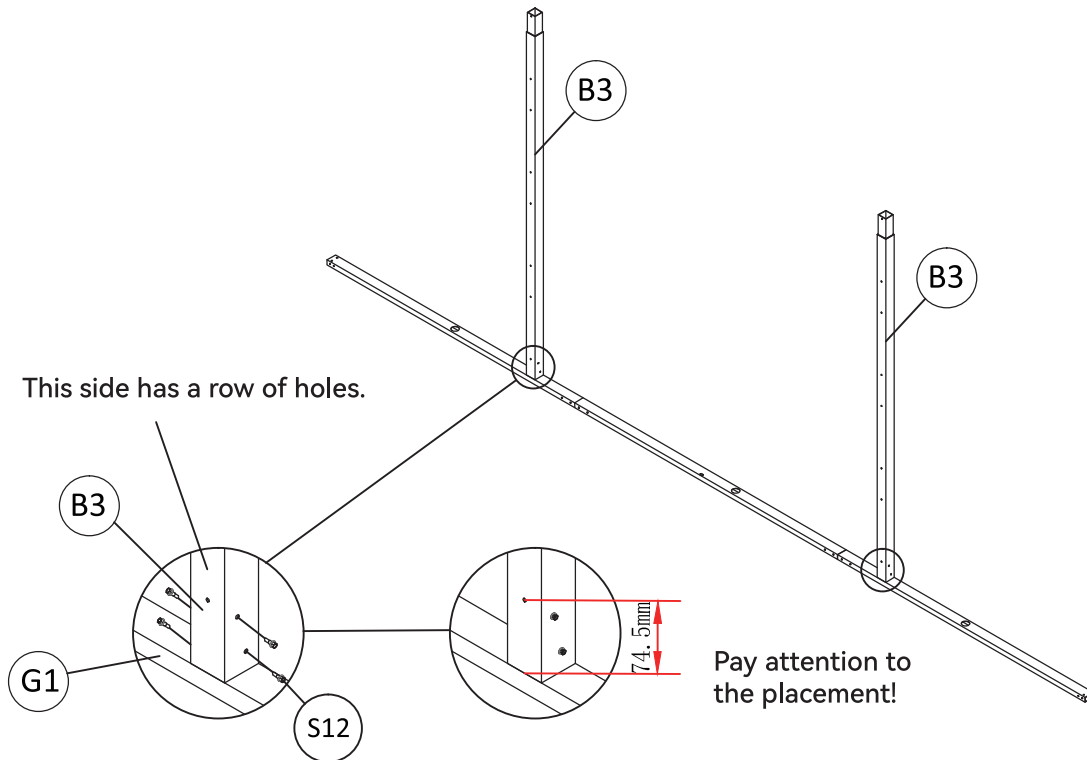

	B4	2		B5	2		B6	1
	S12	16						


PART D-2

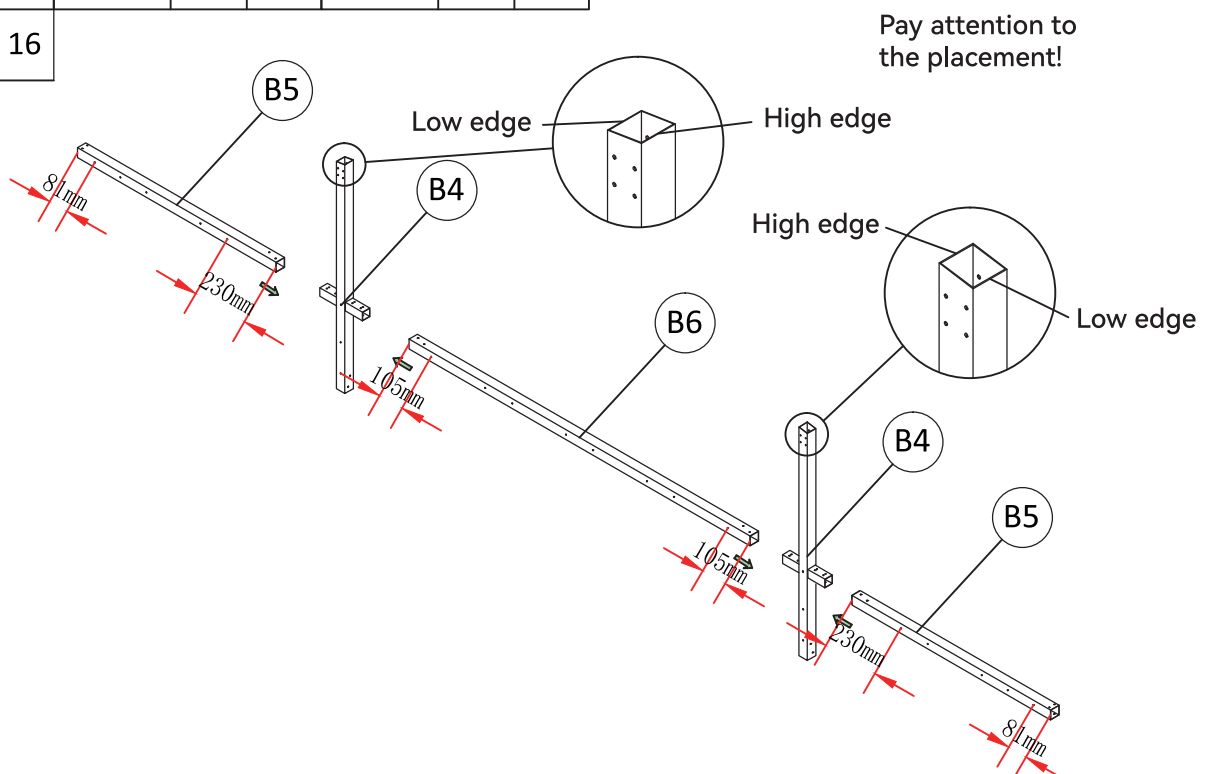

FRAME ASSEMBLY


Step8:

Arrange two (B4), two (B5), and one (B6) according to the sequence and hole orientation shown in the diagram. Insert the two short ends of (B4) into (B5) and (B6) respectively, then secure each connection point using four screws (S12), with two screws fastened through the pre-drilled holes on the front side and two screws through the pre-drilled holes on the back side as illustrated, completing one PART D-2 assembly.

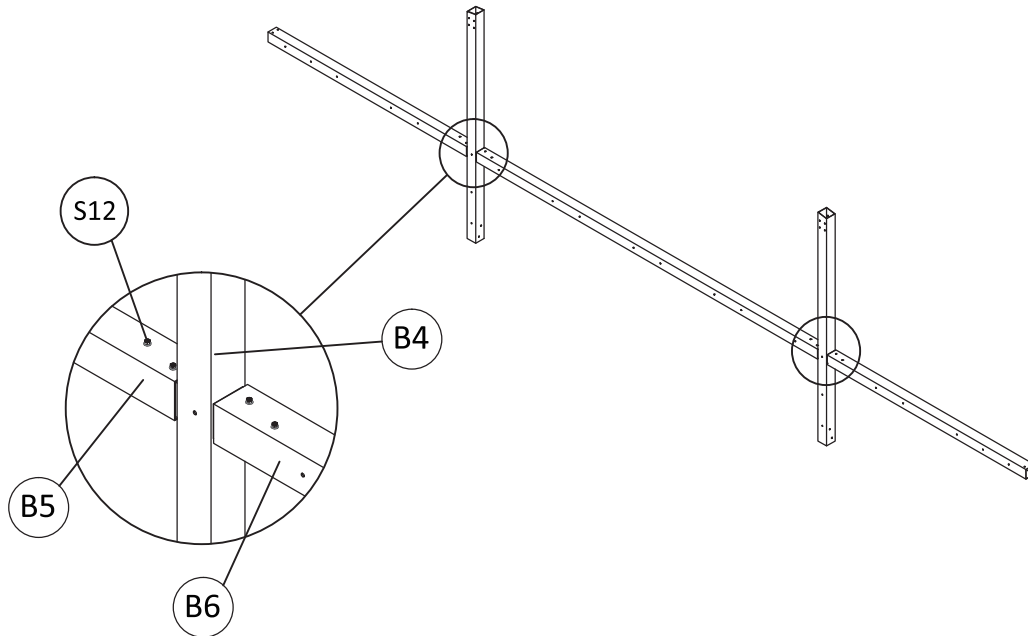


PART D


	S12	8
---	-----	---

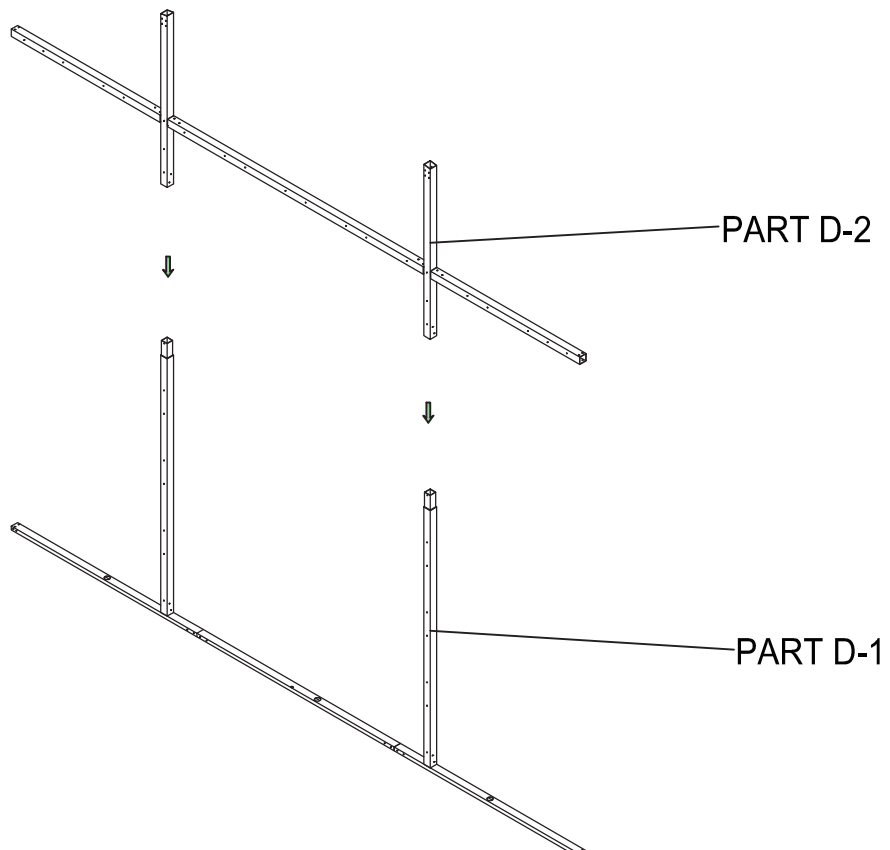

FRAME ASSEMBLY

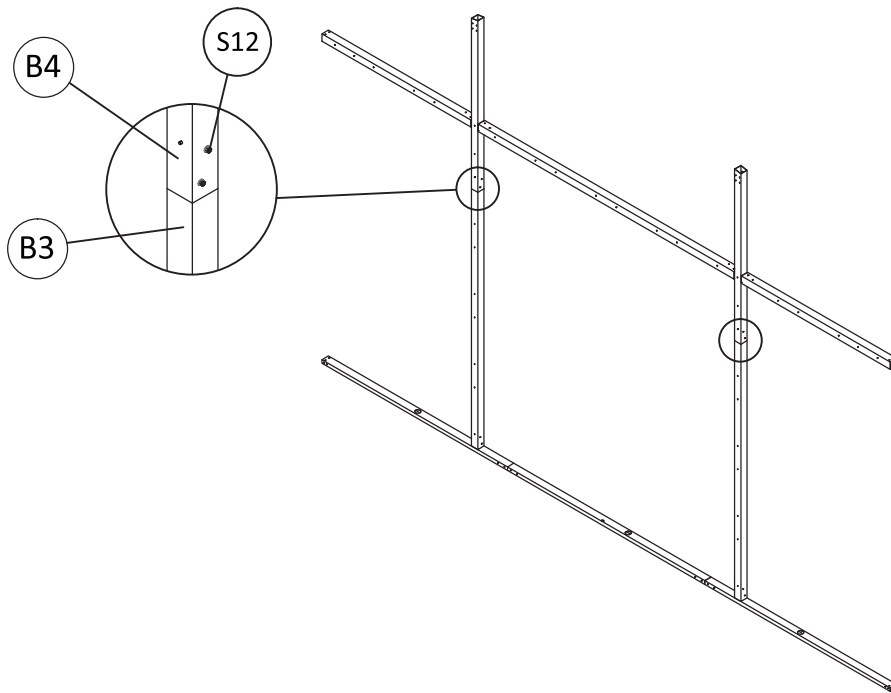

	C2	2		C3	6		C52	4		S12	64
--	----	---	--	----	---	--	-----	---	--	-----	----

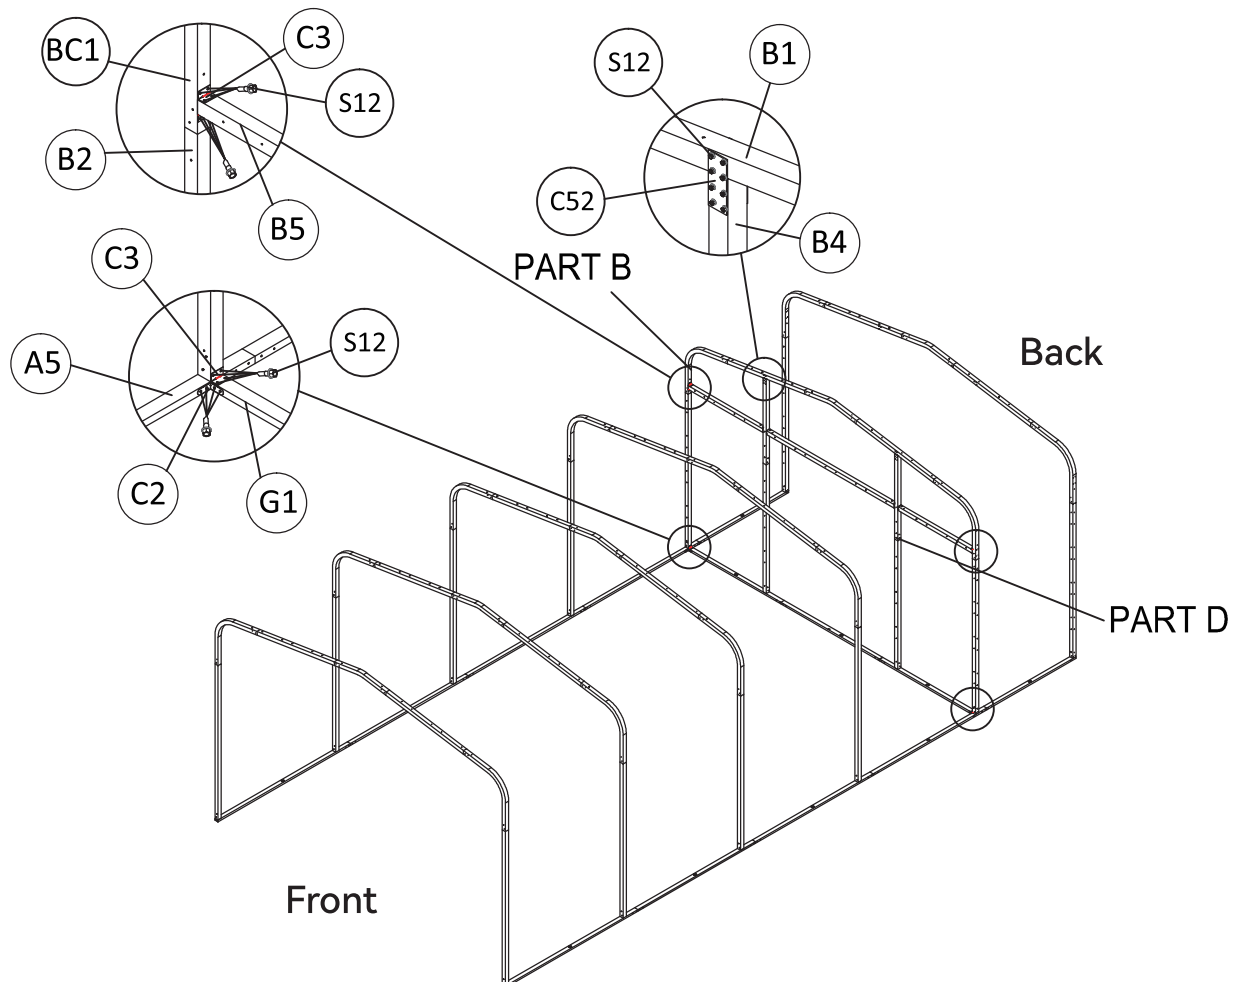

Step9:

Arrange PART D-1 and PART D-2 according to the sequence and hole orientation shown in the diagram. Insert the reduced tube of PART D-1 into the straight tube of PART D-2, then secure each connection point using four screws (S12), with two screws fastened through the pre-drilled holes on the front side and two screws through the pre-drilled holes on the back side as illustrated, completing one PART D assembly.

Step10:

Position PART D and the frame assembled in Step 5 according to the sequence and orientation shown in the diagram. As illustrated, align (B5) with (BC1), place two connectors (C3) into the angle formed between (B5) and (BC1), and align them with the pre-drilled holes. Secure each C3 using four screws (S12). After completing the installation on the left side, repeat the same procedure to install the right side.

Step11:

As shown in the diagram, position (G1) flush against (A5). Place one connector (C3) into the angle formed between (G1) and the frame, align it with the pre-drilled holes, and secure each (C3) using four screws (S12). Then place one connector (C2) into the angle formed between (G1) and (A5), align it with the pre-drilled holes, and secure each C2 using four (S12). After completing the installation on the left side repeat the same procedure to install the right side. Step 12

: As show


n in the diagram align (B) flush with (B1). Place two connectors (C2), one on the front side and one on the back side, over the pre-drilled holes formed between (B4) and (B), then secure each (C2) using eight screws (S12). After completing the installation on the left side repeat the same procedure to install the right side.

	G3	2		G4	1		D3	2
	S12	24		K1	2			

STEP 1

STEP 2

PART E-1

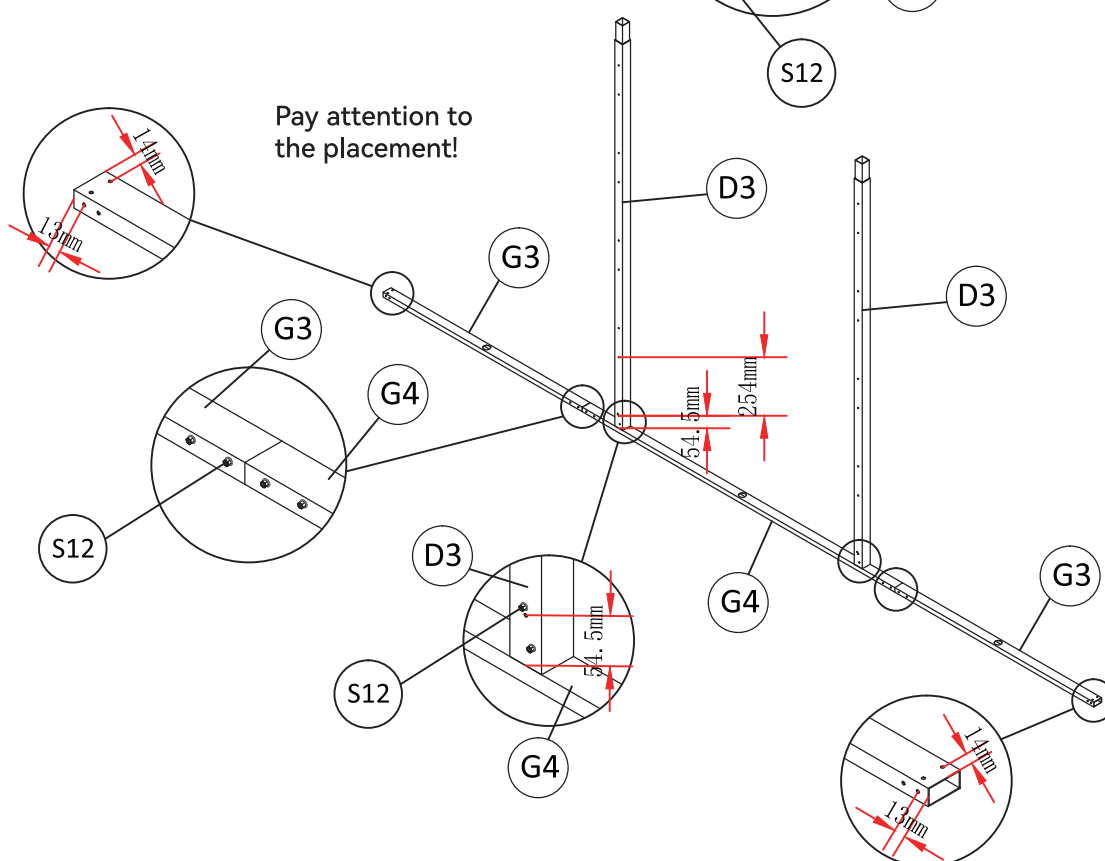


Step13:

Arrange two (G3), two (D3), and one (G4) according to the sequence and dimensional orientation shown in the diagram. As illustrated, insert the connector (K1) into the connection points between (G3) and (G4), then secure them using eight screws (S12), with four screws fastened through the pre-drilled holes on the front side and four screws through the pre-drilled holes on the back side. Insert the two short ends of (G4) into the two (D3) pieces, then secure each connection point using four screws (S12), with two screws fastened through the pre-drilled holes on the front side and two screws through the pre-drilled holes on the back side as shown, completing one PART E-1 assembly.

PART E-2

	D4	2		D5	2		D6	1
	S12	16						

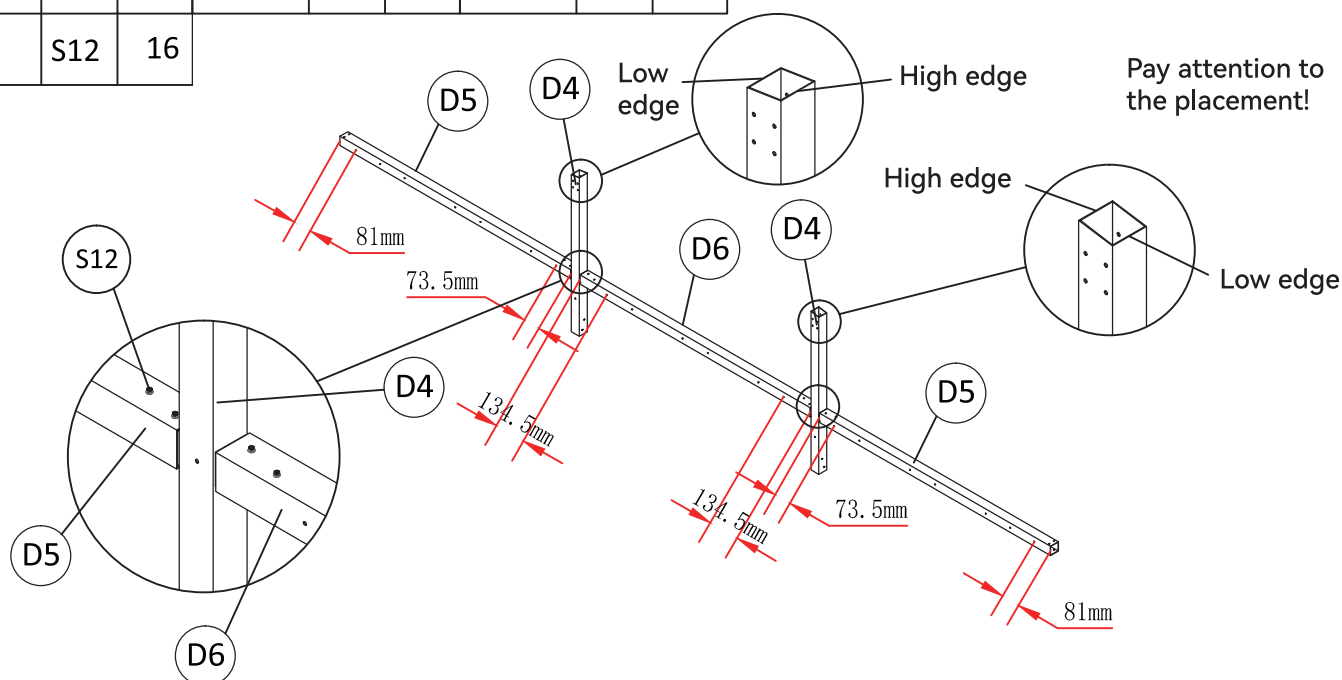


Step14:

Arrange two (D4), two (D5), and one (D6) according to the sequence and hole orientation shown in the diagram. Insert the two short ends of (D4) into (D5) and (D6) respectively, then secure each connection point using four screws (S12), with two screws fastened through the pre-drilled holes on the front side and two screws through the pre-drilled holes on the back side as illustrated, completing one PART E-2 assembly.

FRAME ASSEMBLY

	S12	8
---	-----	---

PART E

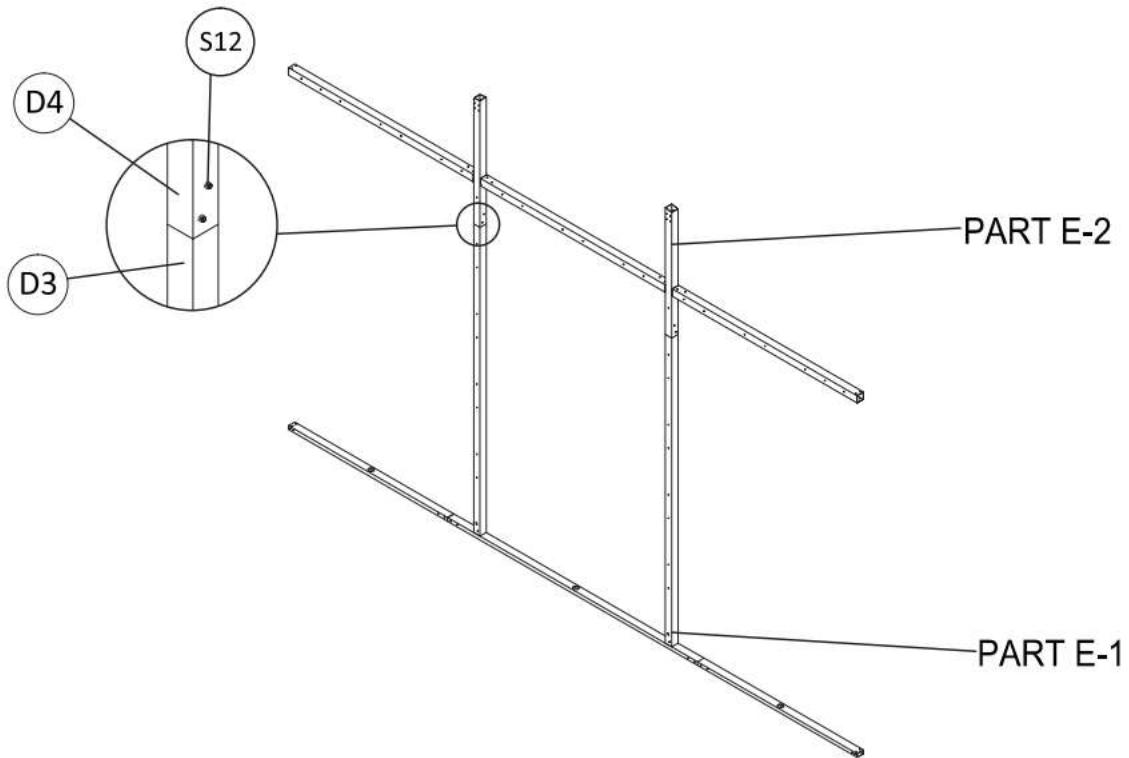


Step15:

The parts E-1 and E-2 should be arranged according to the order and hole dimensions shown in the large diagram. Insert the reduced tube of PART E-1 into the straight tube of PART E-2. For each connection position, secure with four screws (S12), two from the front and two from the back through the pre-drilled holes, as shown in the diagram, to assemble a complete PART E.

FRAME ASSEMBLY

	C2	2		C3	6		C52	4		S12	64
---	----	---	---	----	---	---	-----	---	---	-----	----

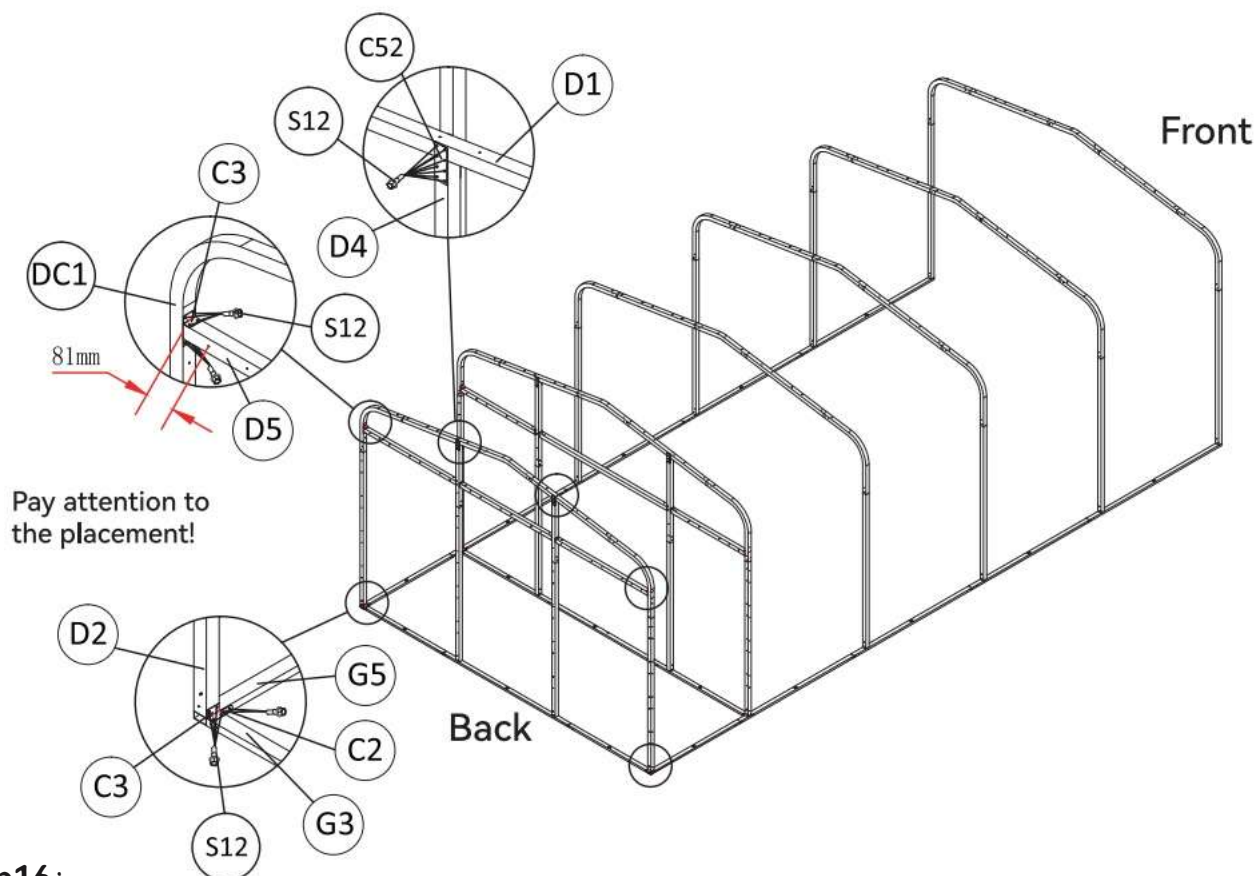

Step16:

Position PART E and the frame assembled in Step 12 according to the sequence and dimensional orientation shown in the diagram. As illustrated, align (D5) with (DC1), place two connectors (C3) into the angle formed between (D5) and (DC1), and align them with the pre-drilled holes. Secure each C3 using four screws (S12). After completing the installation on the left side, repeat the same procedure to install the right side.


Step17:

As shown in the diagram, position (G3) flush against (G5). Place one connector (C3) into the angle formed between (G3) and the frame, align it with the pre-drilled holes, and secure each (C3) using four screws (S12). Then place one connector (C2) into the angle formed between (G3) and (G5), align it with the pre-drilled holes, and secure each (C2) using four (S12). After completing the installation on the left side, repeat the same procedure to install the right side.


: As sho

wn in the diagram, align (D4) flush with (D1). Place two connectors (C52), one on the front side and one on the back side, over the pre-drilled holes formed between (D4) and (D1), then secure each (C52) using eight screws (S12). After completing the installation on the left side, repeat the same procedure to install the right side.

ANCHORING CONSTRUCTION

	S11	16
---	-----	----


Left Wall

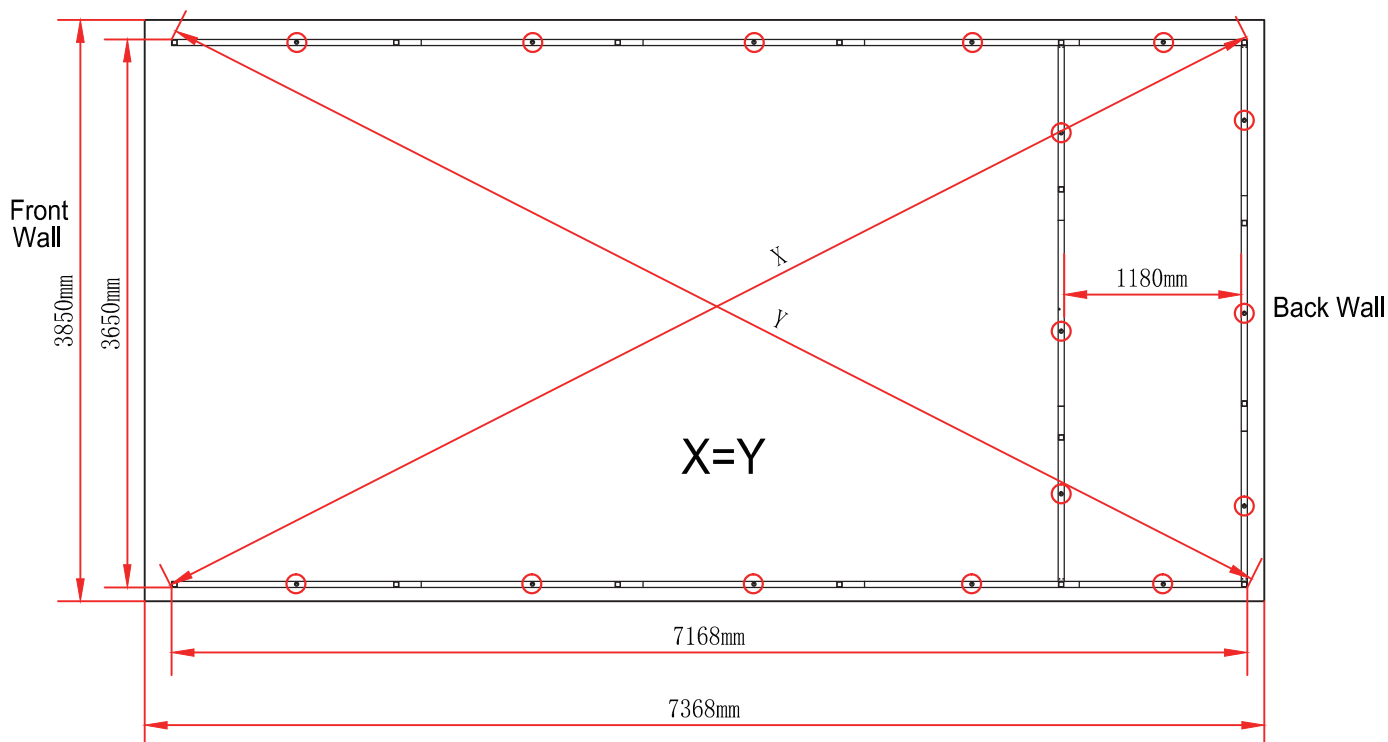


Tip: After assembling the frame, measure the distance of the base, adjust it to the correct value, and secure the base.

Step19:

Position the frame assembled in Step 18 according to the dimensions and orientation shown in the diagram, then measure and adjust the diagonal distances to ensure both diagonals are equal. As illustrated, use a 12 mm diameter drill bit to drill holes directly below each pre-drilled hole in the frame, with a drilling depth exceeding the length of the expansion bolts (S11). Insert a total of sixteen expansion bolts (S11) through the pre-drilled holes in the frame, then tighten the expansion bolts (S11) with a wrench to securely anchor the base.

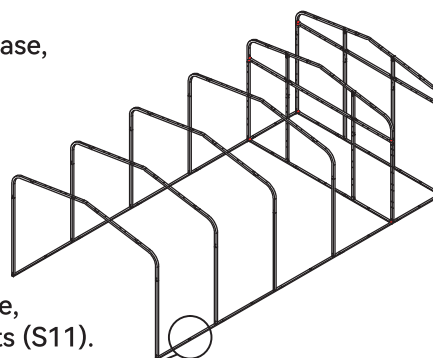

Ø12 mm (-0.47")

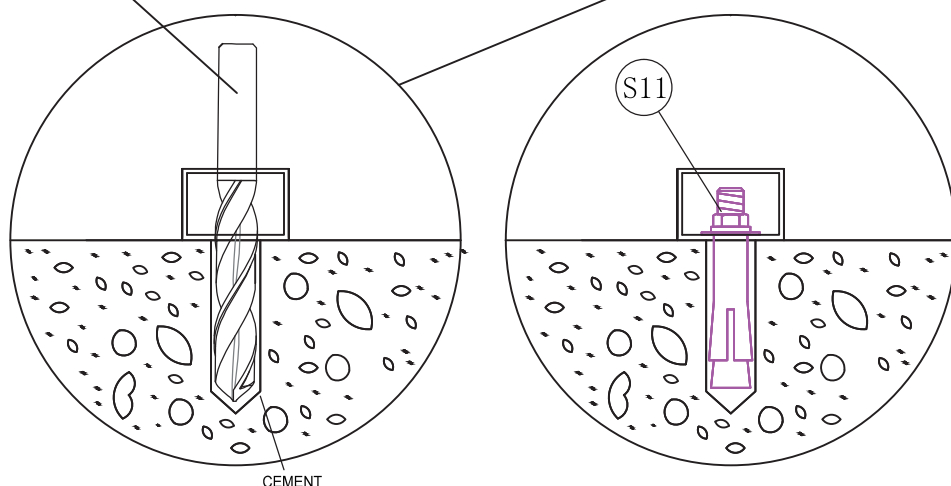


PANEL ASSEMBLY

	ETP5	1		S12	2
---	------	---	---	-----	---

Step20:


Position one color-coated panel (ETP5) according to the sequence and dimensional orientation shown in the diagram, then secure it using two screws (S12) through the pre-drilled holes on the front side as illustrated.

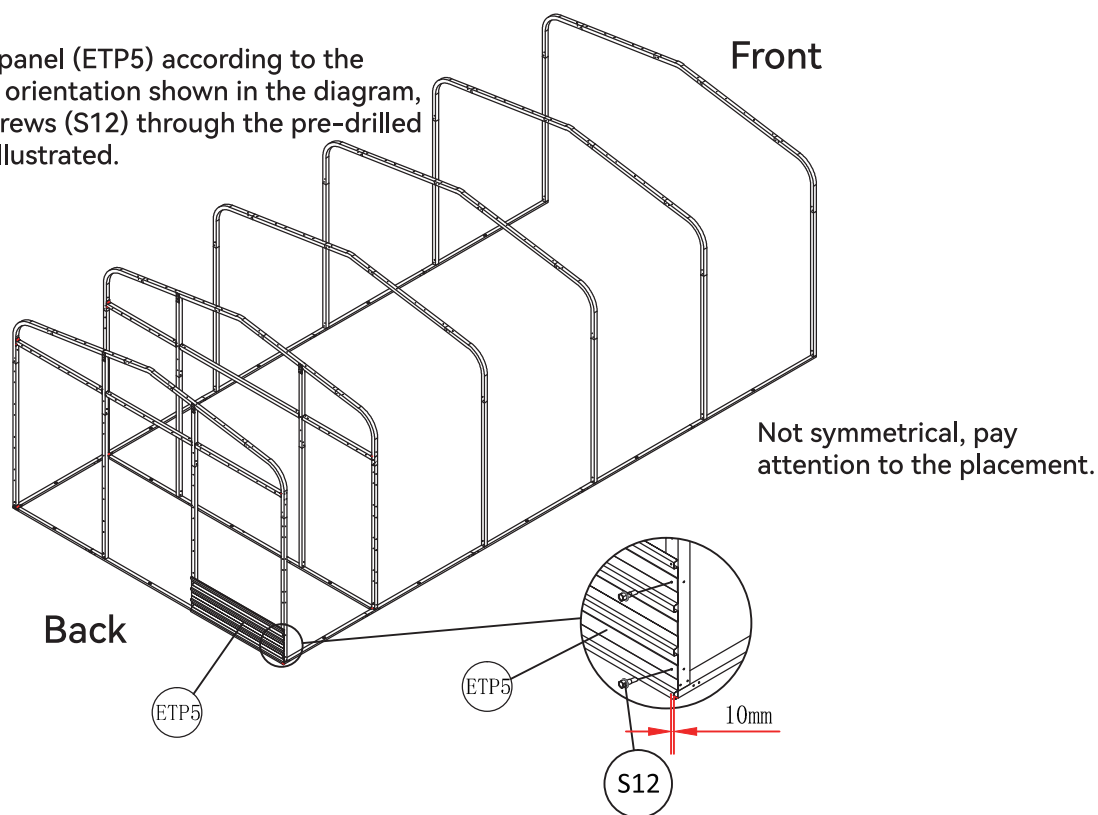

	ETP6	1		S12	2
---	------	---	---	-----	---

Step21:


Position one color-coated panel (ETP6) according to the sequence and orientation shown in the diagram, then secure it using two screws (S12) through the pre-drilled holes on the front side as illustrated.

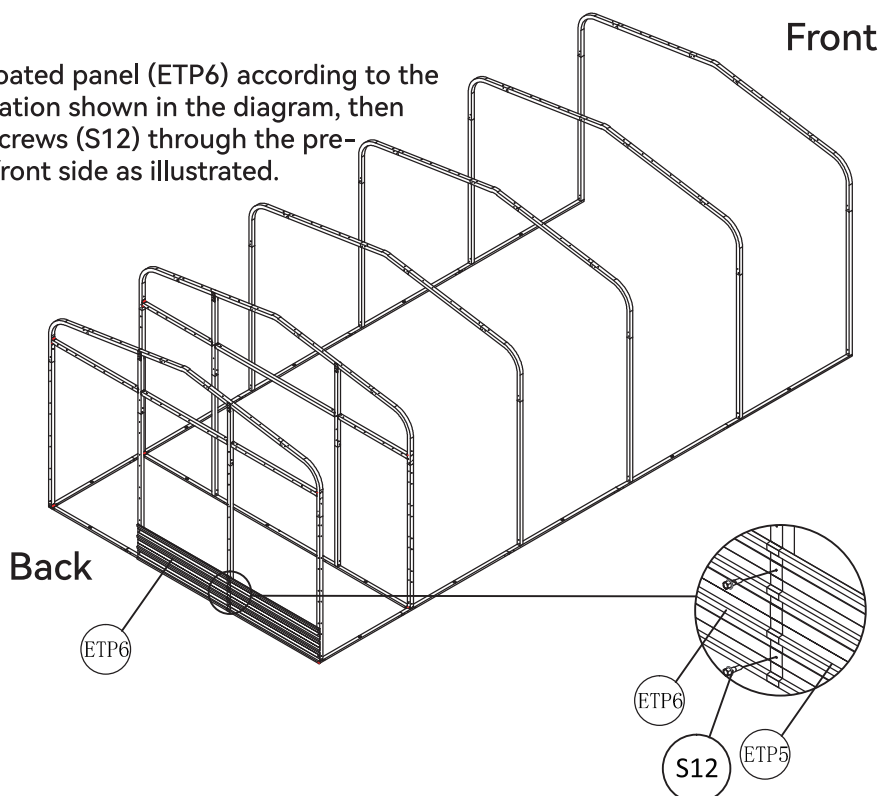

PANEL ASSEMBLY

	ETP5	1		S12	4
---	------	---	---	-----	---


Not symmetrical, pay attention to the placement.

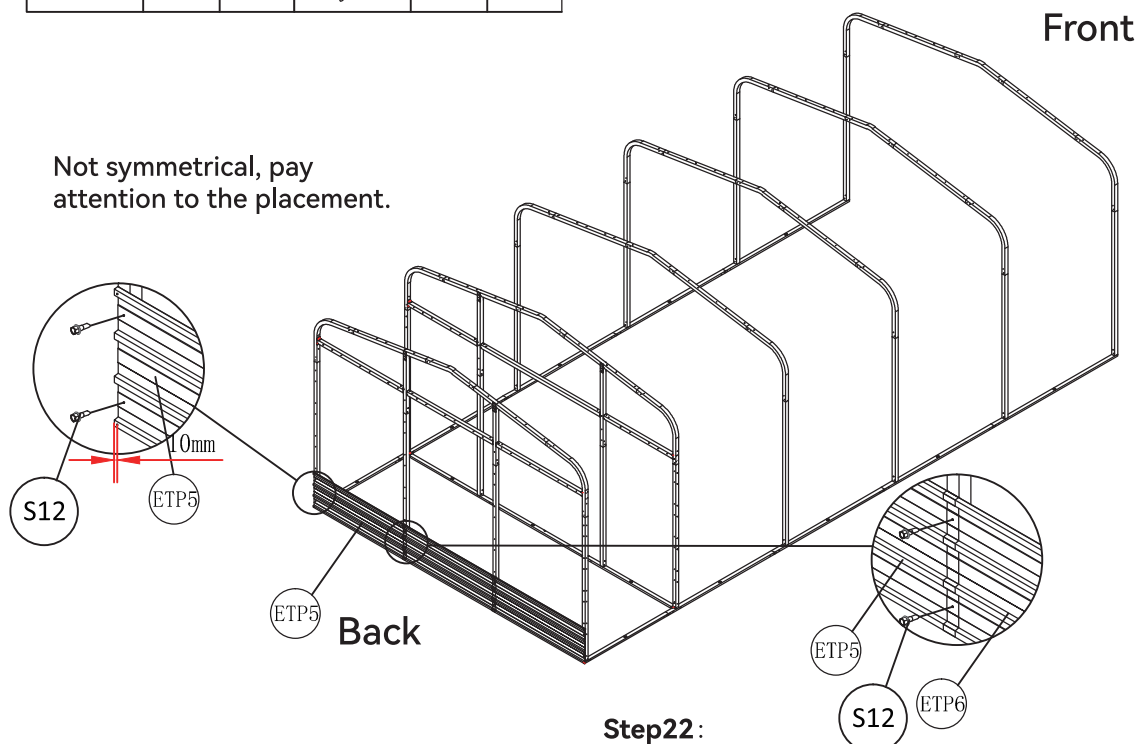

Step22:

Position one color-coated panel (ETP5) according to the sequence and dimensional orientation shown in the diagram, then secure it using four screws (S12) through the pre-drilled holes on the front side as illustrated.

	ETP5	8		S12	32
	ETP6	4			

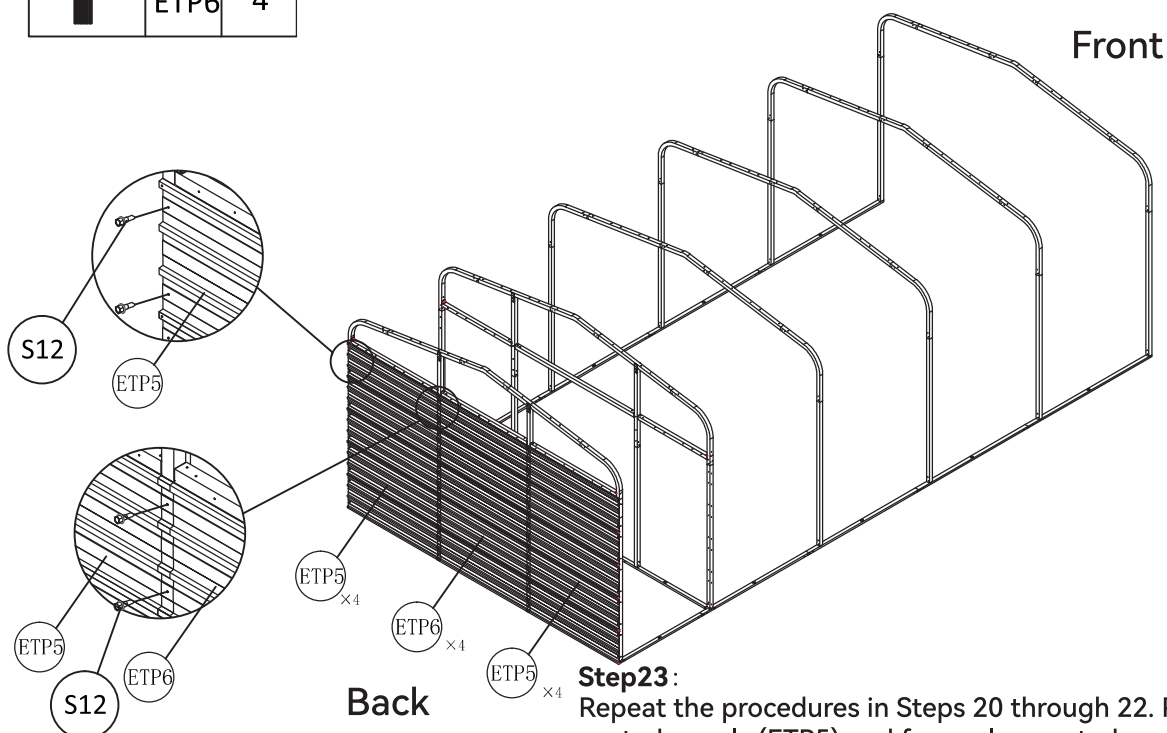


Step23:

Repeat the procedures in Steps 20 through 22. Position eight color-coated panels (ETP5) and four color-coated panels (ETP6) according to the sequence and dimensional orientation shown in the diagram, then secure them using a total of thirty-two screws (S12) through the pre-drilled holes on the front side as illustrated.


PANEL ASSEMBLY

	N2A	1		Z4	1		S12	4
---	-----	---	---	----	---	---	-----	---

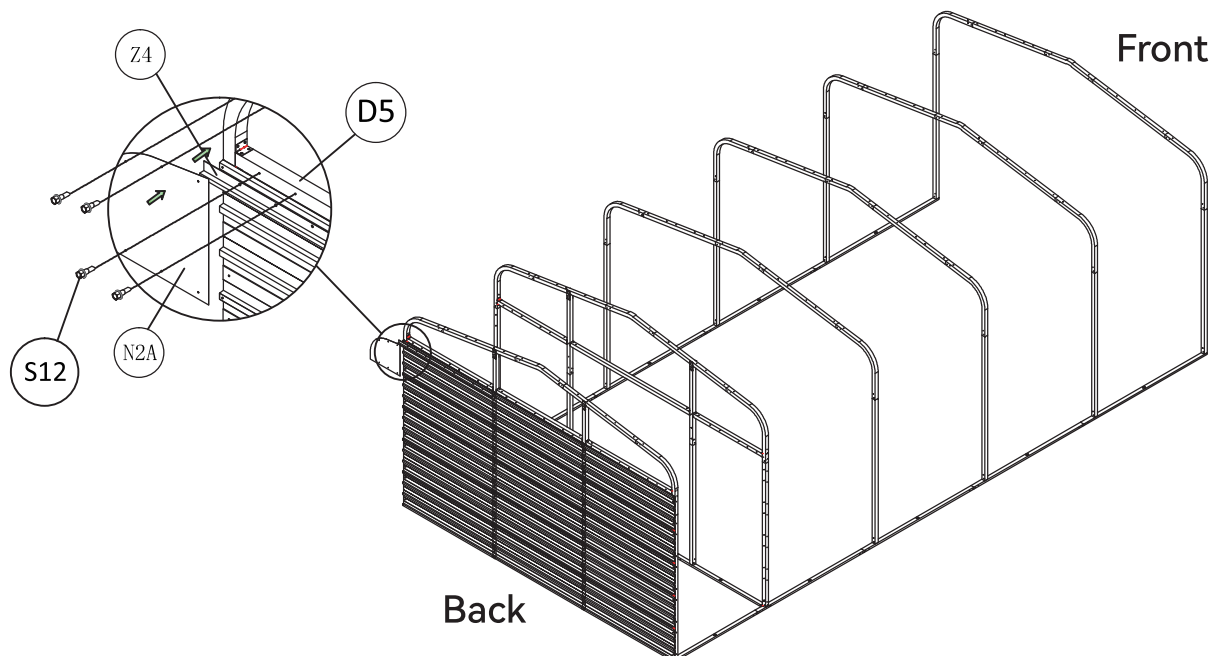

Step24: Position one bent piece (Z4) and one color-coated sheet (N2A) according to the sequence and hole orientation shown in the diagram. Align each hole of (Z4) with the pre-drilled holes in (D5), then align the holes of (N2A) with the pre-drilled holes in (Z4) and (D5). As illustrated, secure the parts from the front side using four screws (S12); use the two lower screws (S12) with the two pre-drilled holes on the left side, and drill holes as required for the two upper screws (S12).


	EP5A	1		S12	4
---	------	---	---	-----	---

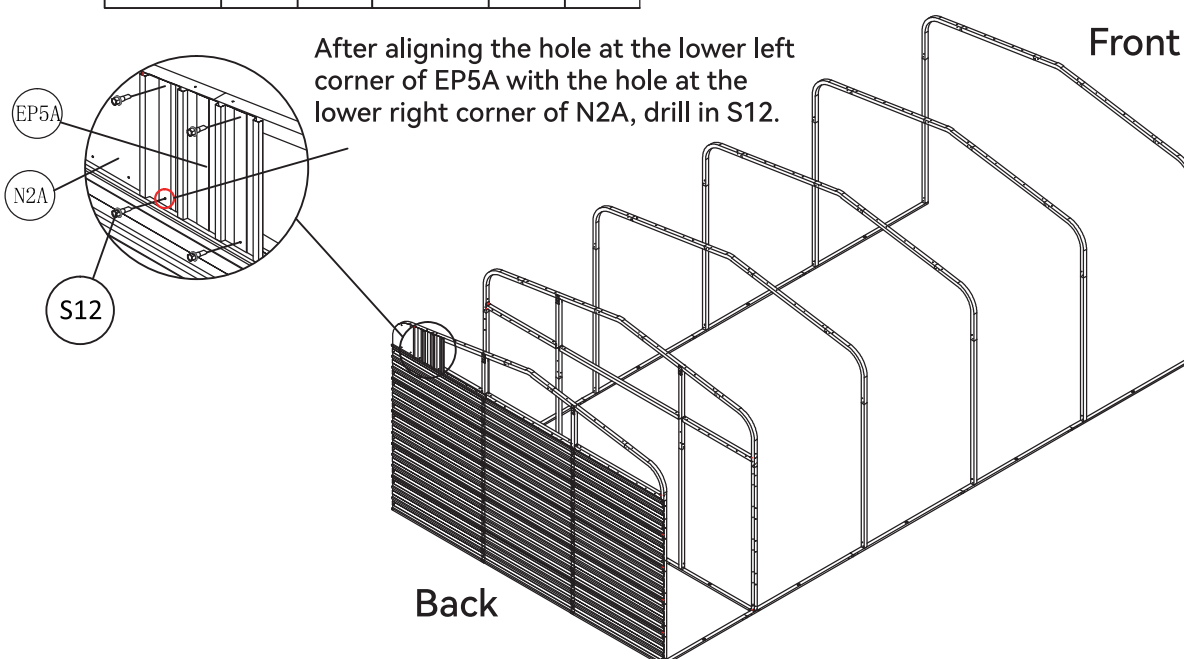


Step25: Position one color-coated panel (EP5A) according to the sequence and dimensional orientation shown in the diagram. Align the hole at the lower left corner of the color-coated panel (EP5A) with the pre-drilled hole at the lower right corner of the color-coated sheet (N2A). As illustrated, secure the panel from the front side using four screws (S12); use the two lower screws (S12) with the two pre-drilled holes, and drill holes as required for the two upper screws (S12).

PANEL ASSEMBLY

	EP6A	1		EP7A	1		EP8A	1		S12	12
	Z5	1									

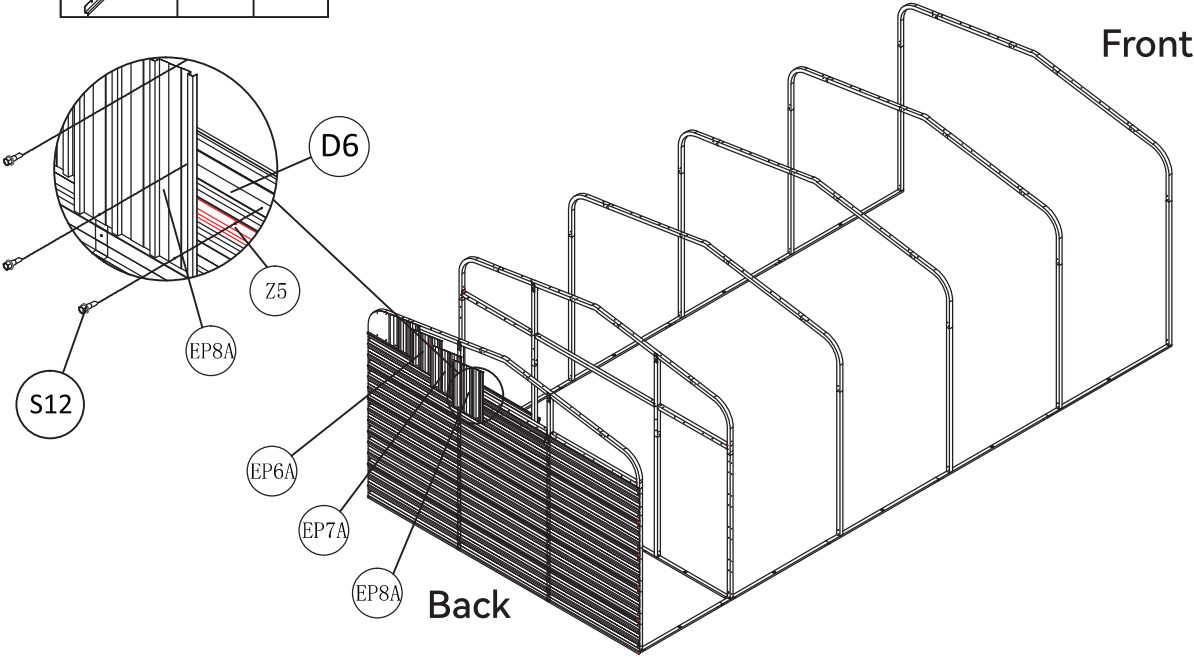

	EP5B	1		EP6B	1		EP7B	1		EP8B	1		S12	20
	N2B	1		Z6	1									

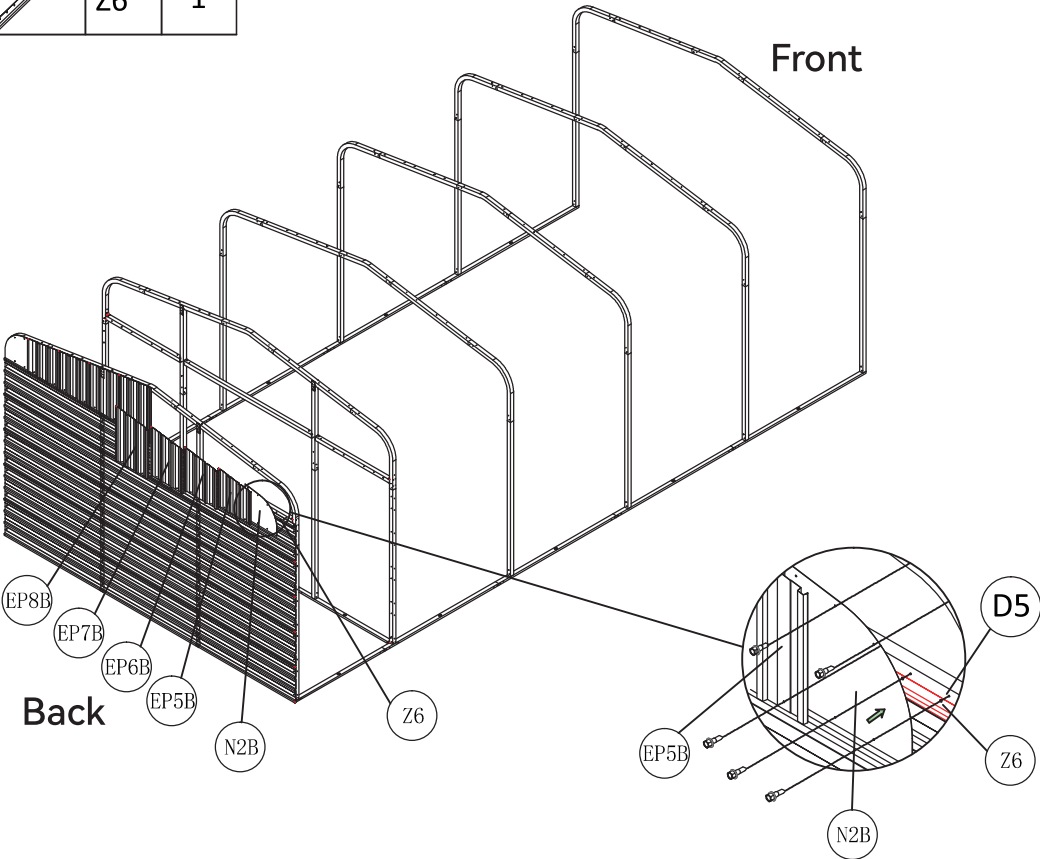

Step26:

Position one color-coated panel (EP6A), one color-coated panel (EP7A), and one color-coated panel (EP8A) according to the sequence and dimensional orientation shown in the diagram. Align the two lower holes of the color-coated panel (EP6A) with the pre-drilled holes in the bent piece (Z4). As illustrated, secure the panels from the front side using four screws (S12); use the two lower screws (S12) with the two pre-drilled holes, and drill holes as required for the two upper screws (S12).

Step27:

Place the bent piece (Z5) onto the right side of the bent piece (Z4), ensuring that the pre-drilled holes do not overlap. One person should assist by holding the bent piece (Z5) in position. Align each hole of (Z5) with the pre-drilled holes in (D6), then align the holes of the color-coated panel (EP7A) on the left side with the pre-drilled holes in the bent piece (Z4), and align the holes of the color-coated panel (EP7A) on the right side with the pre-drilled holes in the bent piece (Z5). As shown, secure from the front side using four screws (S12); use the two lower screws (S12) with the pre-drilled holes, and drill holes as required for the two upper screws (S12).

Step28:

Position one color-coated panel (EP8A) according to the sequence and dimensional orientation shown in the diagram. Align the lower holes of the color-coated panel (EP8A) with the pre-drilled holes in the bent piece (Z5). As illustrated, secure the panel from the front side using four screws (S12); use the two lower screws (S12) with the pre-drilled holes, and drill holes as required for the two upper screws (S12).

Step29:

Position one bent piece (Z6) and one color-coated sheet (N2B) according to the sequence and hole orientation shown in the diagram. Align each hole of (Z6) with the pre-drilled holes in (D5), and align the holes of (N2B) with the pre-drilled holes in (Z6) and (D5). As illustrated, secure from the front side using four screws (S12); use the two lower screws (S12) with the two pre-drilled holes, and drill holes as required for the two upper screws (S12).

Step30:

Position one color-coated panel (EP5B) according to the sequence and dimensional orientation shown in the diagram. Align the hole at the lower right corner of the color-coated panel (EP5B) with the pre-drilled hole at the lower left corner of the color-coated sheet (N2B). As illustrated, secure from the front side using four screws (S12); use the two lower screws (S12) with the pre-drilled holes, and drill holes as required for the two upper screws (S12).


Step31:

Position one color-coated panel (EP6B), one color-coated panel (EP7B), and one color-coated panel (EP8B) according to the sequence and dimensional orientation shown in the diagram. Align the lower holes of the color-coated panels (EP6B), (EP7B), and (EP8B) with the pre-drilled holes in the bent piece (Z6). As illustrated, secure from the front side using twelve screws (S12); use the six lower screws (S12) with the pre-drilled holes, and drill holes as required for the six upper screws (S12).

Step32:

	EP9	2		S12	8
---	-----	---	---	-----	---


Position two color-coated panels (EP9) according to the sequence and dimensional orientation shown in the diagram. As illustrated, secure each color-coated panel (EP9) using four screws (S12) through the pre-drilled holes on the front side.

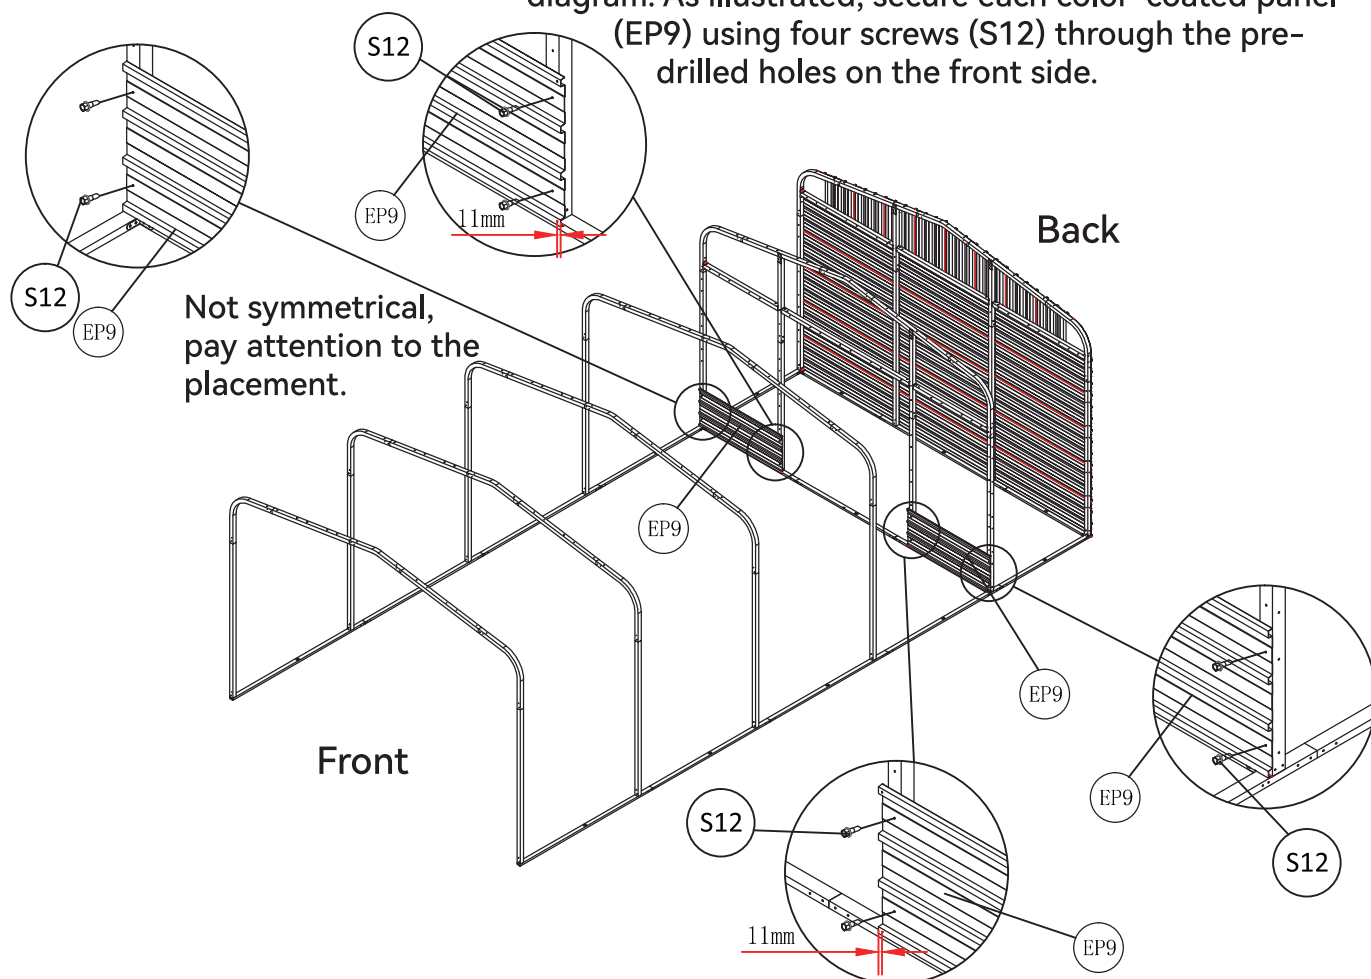


	EP9	6		S12	24
---	-----	---	---	-----	----

Step33:

Position six color-coated panels (EP9) according to the sequence and dimensional orientation shown in the diagram. As illustrated, secure each color-coated panel (EP9) using four screws (S12) through the pre-drilled holes on the front side.

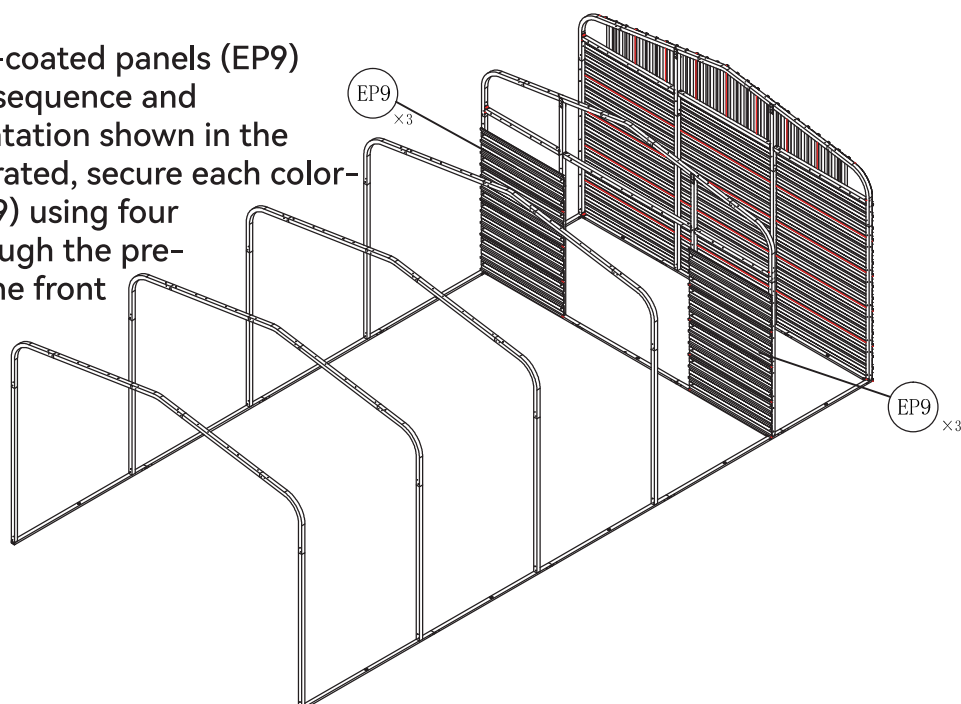


	EP10	1		EP11	1		S12	4
---	------	---	---	------	---	---	-----	---

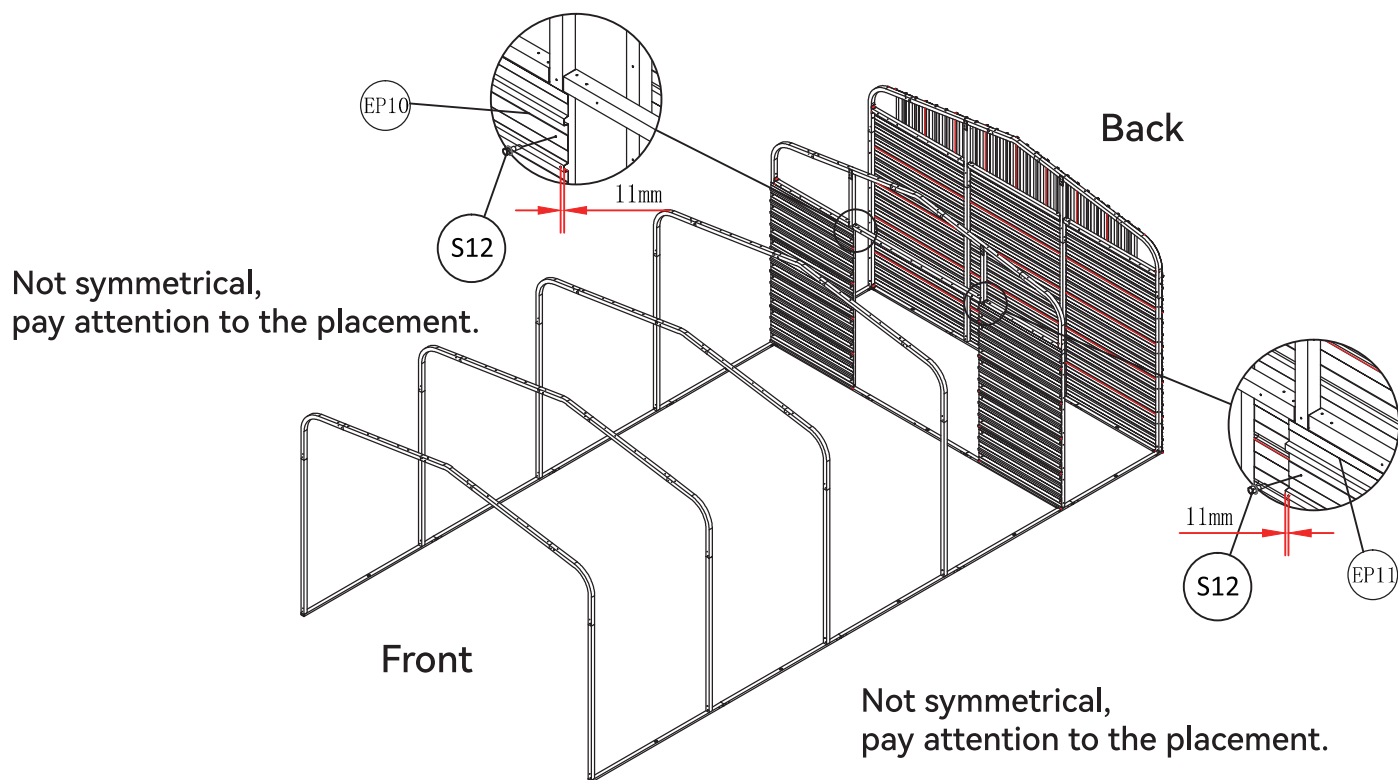

Step34:

Position one color-coated panel (EP10) and one color-coated panel (EP11) according to the sequence and dimensional orientation shown in the diagram. As illustrated, secure the color-coated panel (EP10) using two screws (S12) through the pre-drilled holes on the front side, and secure the color-coated panel (EP11) using two screws (S12) through the pre-drilled holes on the front side.

	N1A	1		Z1	1		S12	8
	N1B	1		Z3	1			

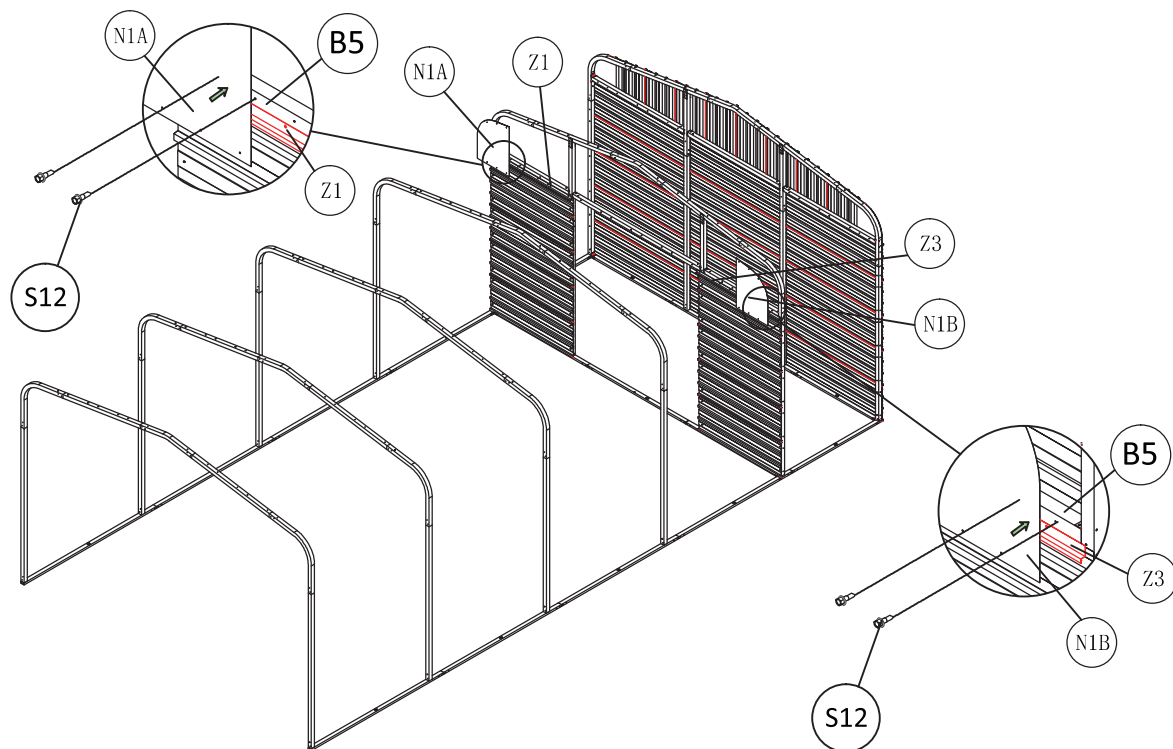


Step35:

Position one bent piece (Z1) and one color-coated sheet (N1A) according to the sequence and hole orientation shown in the diagram. Align each hole of (Z1) with the pre-drilled holes in (B5), and align the holes of (N1A) with the pre-drilled holes in (Z1) and (B5). As illustrated, secure from the front side using four screws (S12); use the two lower screws (S12) with the two pre-drilled holes, and drill holes as required for the two upper screws (S12).

Step36:

Position one bent piece (Z3) and one color-coated sheet (N1B) according to the sequence and hole orientation shown in the diagram. Align each hole of (Z3) with the pre-drilled holes in (B5), and align the holes of (N1B) with the pre-drilled holes in (Z3) and (B5). As illustrated, secure from the front side using four screws (S12); use the two lower screws (S12) with the two pre-drilled holes, and drill holes as required for the two upper screws (S12).

	ET1	1		ET2	1		S12	10
---	-----	---	---	-----	---	---	-----	----

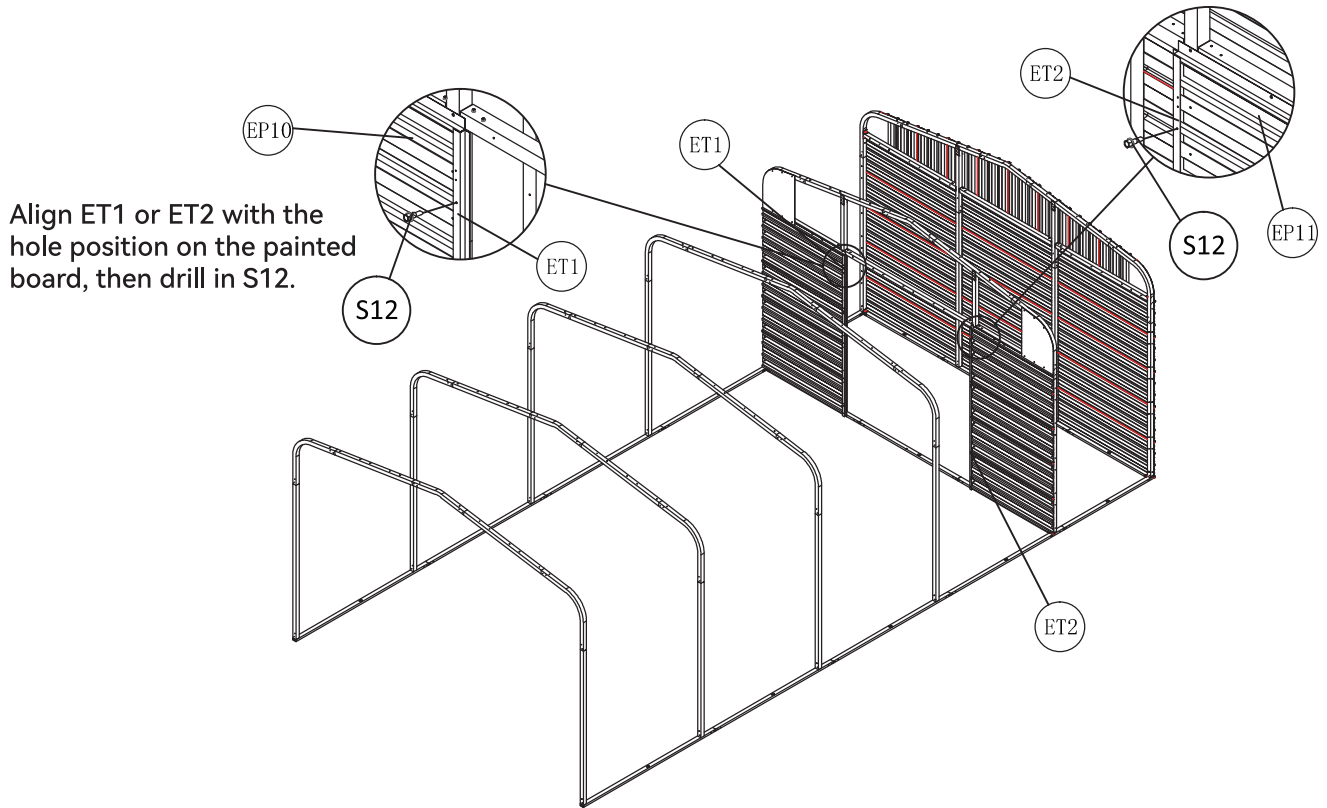


Step37:

Position the bent pieces (ET1) and (ET2) according to the sequence and orientation shown in the diagram. Align each hole of (ET1) with the corrugation holes of the left color-coated panels, and align each hole of (ET2) with the corrugation holes of the right color-coated panels. As illustrated, secure (ET1) and (ET2) from the front side using five screws (S12) for each piece.

PANEL ASSEMBLY

	EP1A	1		S12	8
	EP1B	1			

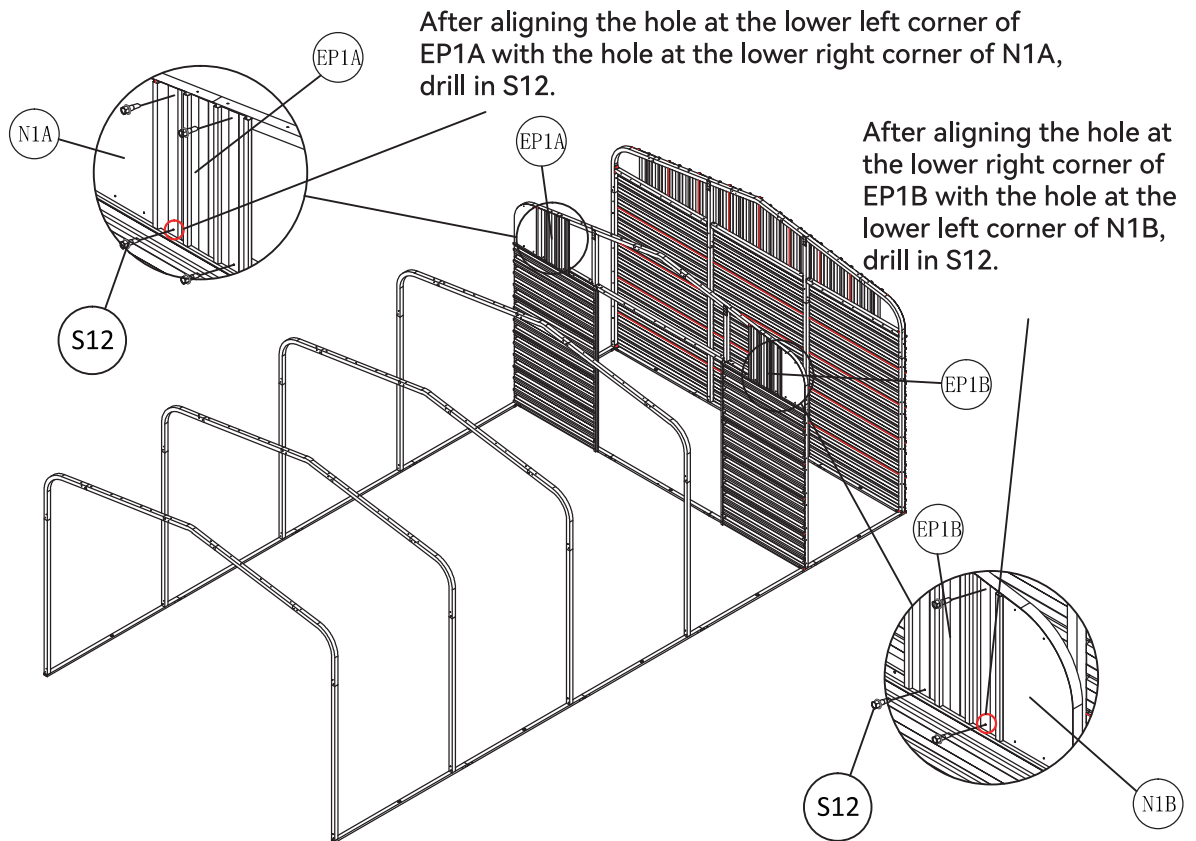


Step38:

Position one color-coated panel (EP1A) according to the sequence and dimensional orientation shown in the diagram. Align the hole at the lower left corner of the color-coated panel (EP1A) with the pre-drilled hole at the lower right corner of the color-coated sheet (N1A). As illustrated, secure from the front side using four screws (S12); use the two lower screws (S12) with the pre-drilled holes, and drill holes as required for the two upper screws (S12).

Step39:

Position one color-coated panel (EP1B) according to the sequence and dimensional orientation shown in the diagram. Align the hole at the lower right corner of the color-coated panel (EP1B) with the pre-drilled hole at the lower left corner of the color-coated sheet (N1B). As illustrated, secure from the front side using four screws (S12); use the two lower screws (S12) with the pre-drilled holes, and drill holes as required for the two upper screws (S12).

	EP2A	1		EP3A	1		EP4A	1		S12	24
	EP2B	1		EP3B	1		EP4B	1			

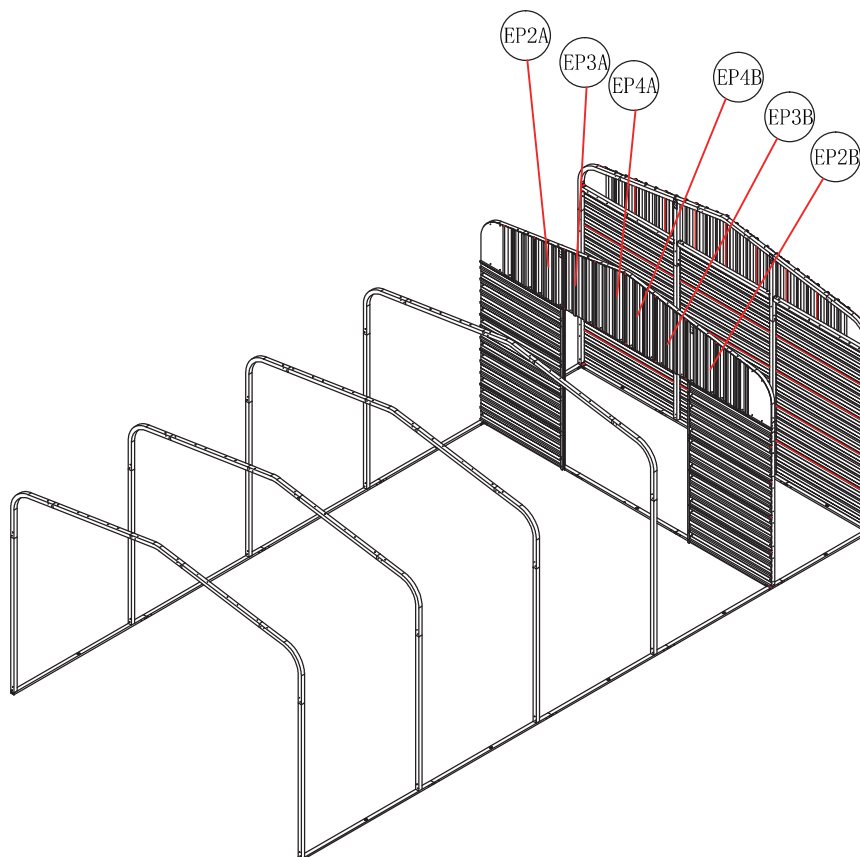

Step40 :


Position one color-coated panel (EP2A), one color-coated panel (EP3A), and one color-coated panel (EP4A) according to the sequence and dimensional orientation shown in the diagram. Align the lower edge holes of the color-coated panel (EP2A) with the pre-drilled holes in the bent piece (Z1), and align the lower edge holes of the color-coated panels (EP3A) and (EP4A) with the pre-drilled holes in (B6). As illustrated, secure from the front side using twelve screws (S12); use the six lower screws (S12) with the pre-drilled holes, and drill holes as required for the six upper screws (S12).

Step41 :

Position one color-coated panel (EP2B), one color-coated panel (EP3B), and one color-coated panel (EP4B) according to the sequence and dimensional orientation shown in the diagram. Align the lower edge holes of the color-coated panel (EP2B) with the pre-drilled holes in the bent piece (Z3), and align the lower edge holes of the color-coated panels (EP3B) and (EP4B) with the pre-drilled holes in (B6). As illustrated, secure from the front side using twelve screws (S12); use the six lower screws (S12) with the pre-drilled holes, and drill holes as required for the six upper screws (S12).

PANEL ASSEMBLY

	Z2	1		S12	5
---	----	---	---	-----	---

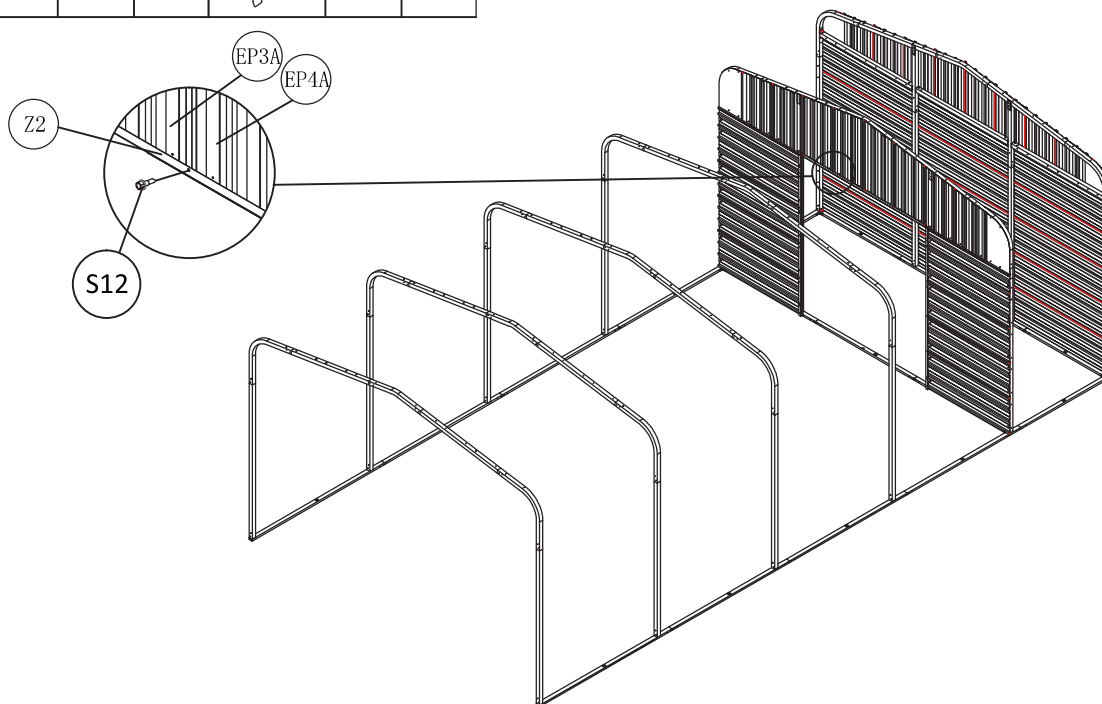


Step42:

Position one bent piece (Z2) according to the sequence and orientation shown in the diagram. Align each hole of (Z2) with the corrugation holes of the upper color-coated panels, then secure it from the front side using five screws (S12) as illustrated.


SHED ASSEMBLY LEFT DOOR

	EDP1	1		EDT1	2		EDF2	1		ED2	2		EDP2	1
	EDF3	1		ED1	1		H2	1		H3	1		S3	4
	S18	14		S5	4									

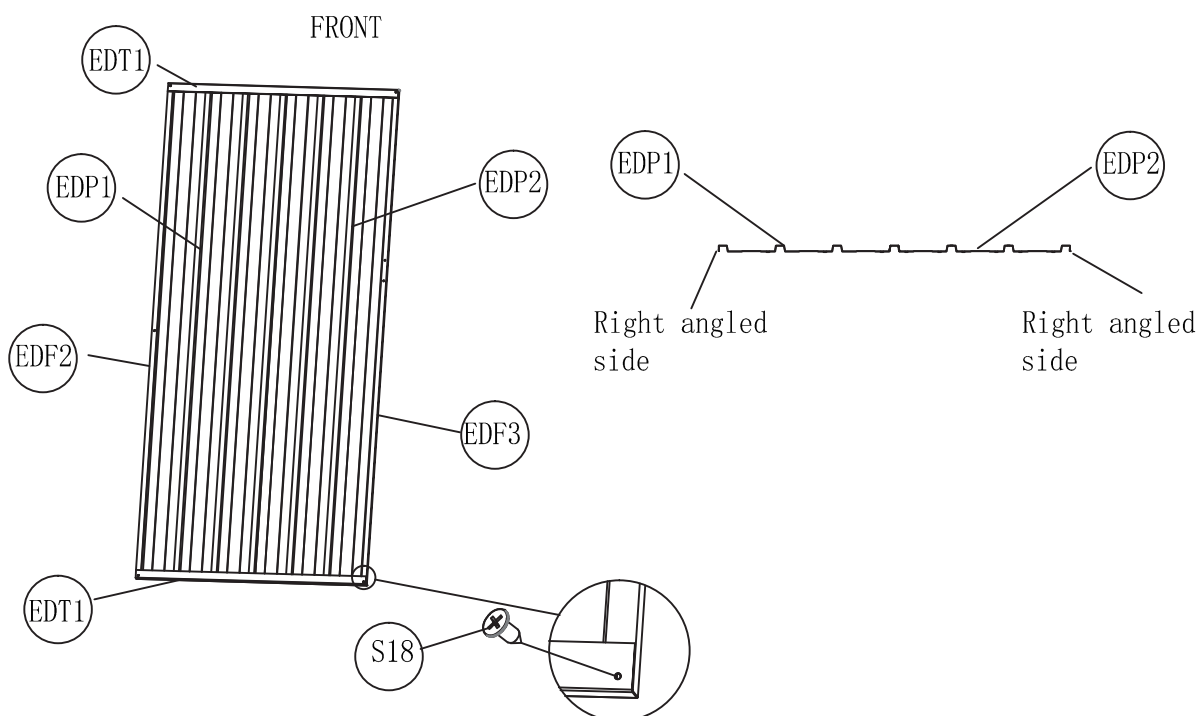

Step43:

Position two bent pieces (EDT1) and one U-shaped channel (EDF2), one U-shaped channel (EDF3), and two color-coated panels (EDP1) and (EDP2) according to the sequence and hole orientation shown in the diagram. As illustrated, place the two straight edges of the color-coated panels (EDP1) and (EDP2) facing outward, with the side of the U-shaped channel (EDF2) containing three holes facing upward and the side of the U-shaped channel (EDF3) containing four holes facing upward. Align the upper and lower holes on the left side of the bent piece (EDT1), U-shaped channel (EDF2), and color-coated panel (EDP1), then secure from the front side using two screws (S18). Align the upper and lower holes on the right side of the bent piece (EDT1), U-shaped channel (EDF3), and color-coated panel (EDP2), then secure from the front side using two screws (S18).

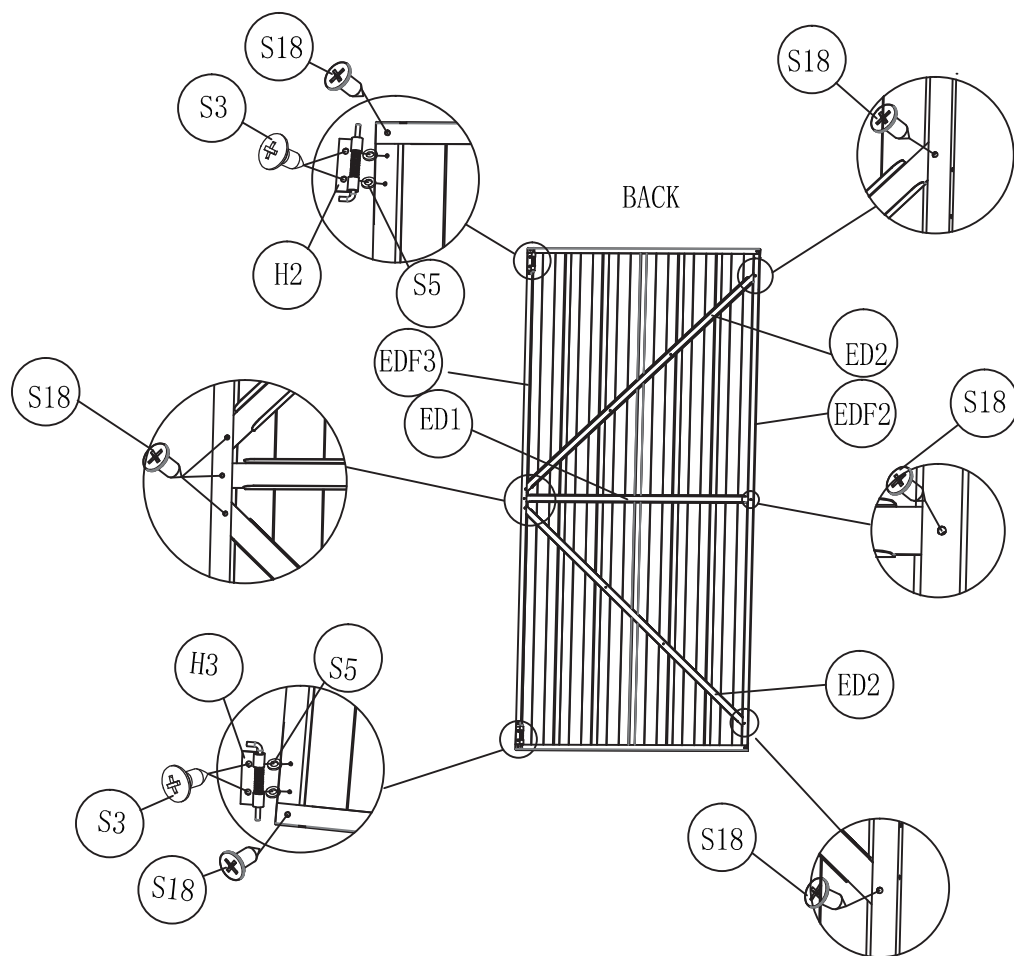

Step44:



Turn the left door assembly from Step 43 over to the back side. Position two U-shaped channels (ED2), one U-shaped channel (ED1), and five hardware pieces (H2) and (H3) according to the sequence and hole orientation shown in the diagram. Align the three upper holes of (EDF3) with the two holes of the U-shaped channel (ED2) and the single hole of the U-shaped channel (ED1), then secure from the front side using five screws (S18). Align the three lower holes of (EDF3) with the two holes of the U-shaped channel (ED2) and the single hole of the U-shaped channel (ED1) on the opposite side, then secure from the front side using five screws (S18). Align the holes at the four corners and secure them from the front side using four screws (S18). Align the holes of hardware piece (H2) with the upper holes of (EDF3), place one washer (S5) beneath each hole of (H2), then secure from the front side using two screws (S3). Align the holes of hardware piece (H3) with the lower holes of (EDF3), place one washer (S5) beneath each hole of (H3), then secure from the front side using two screws (S3).

SHED ASSEMBLY LEFT DOOR

	EH1	1		SH2	3		SC04	8		S3	5
---	-----	---	---	-----	---	---	------	---	---	----	---

Step45:

Turn the left door assembly back to the front side. Position one hardware piece (EH1) according to the sequence and orientation shown in the diagram, then secure it from the front side using two screws (SC04) through the pre-drilled holes as illustrated.

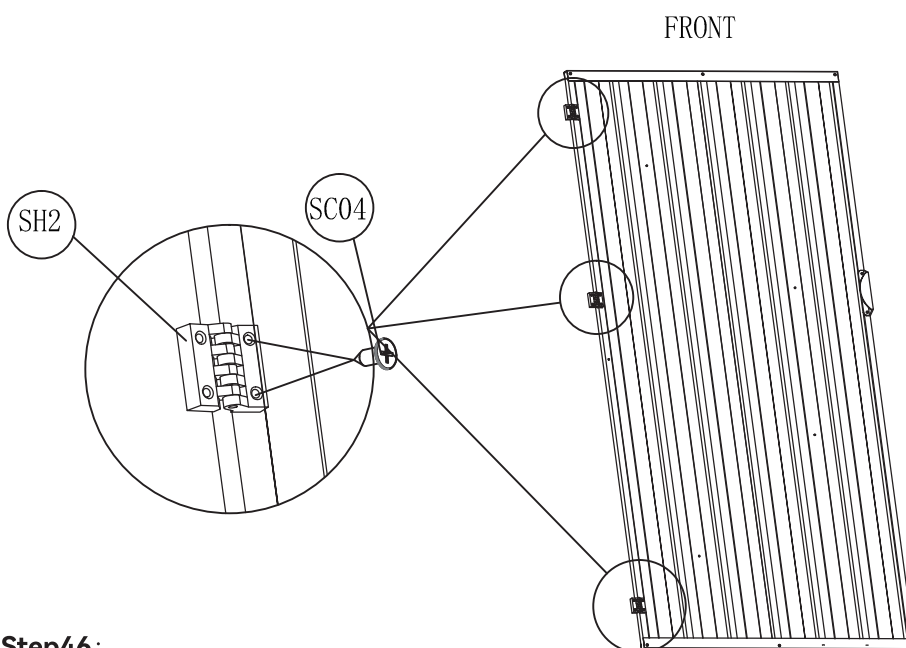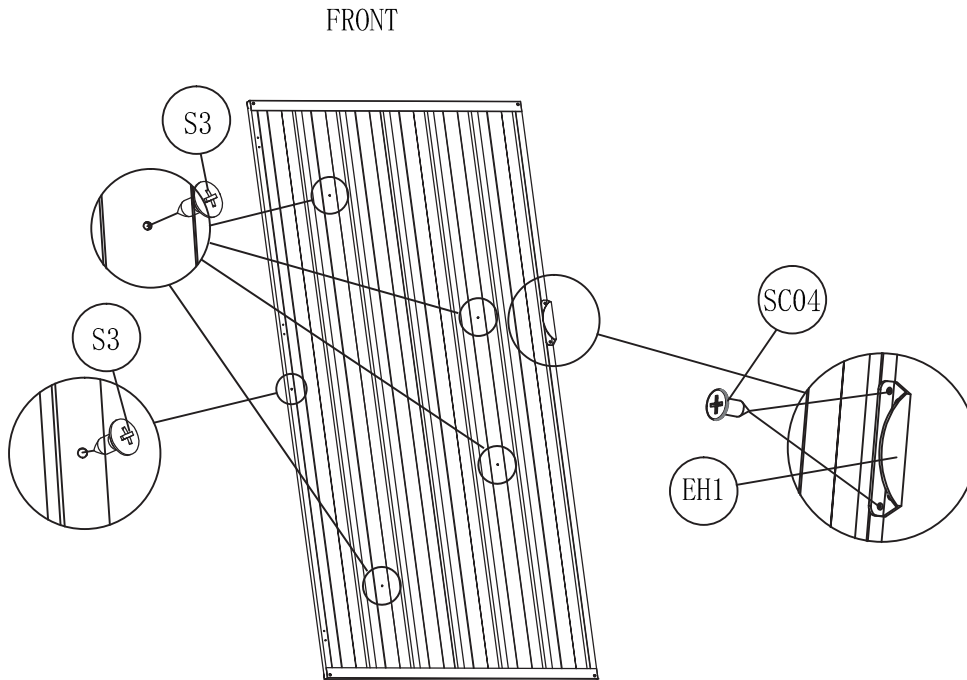


Step46:

Position three hardware pieces (SH2) according to the sequence and orientation shown in the diagram. As illustrated, secure each (SH2) from the front side using two screws (SC04) through the pre-drilled holes.


SHED ASSEMBLY RIGHT DOOR

	EDP1	1		EDT1	2		EDF4	1		S18	14		EDP3	1
	EDF5	1		ED1	1		ED2	2						

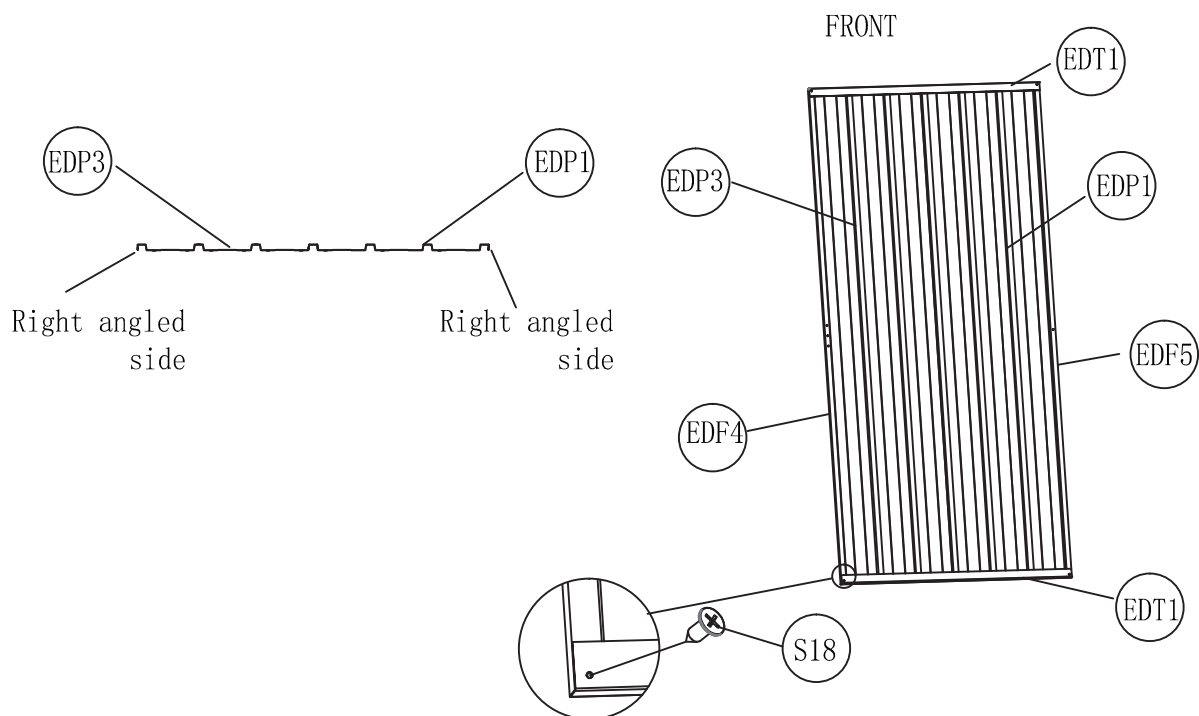

Step47:

Position two bent pieces (EDT1), one U-shaped channel (EDF4), one U-shaped channel (EDF5), and color-coated panels (EDP1) and (EDP3) according to the sequence and hole orientation shown in the diagram. As illustrated, place the two straight edges of the color-coated panels (EDP3) and (EDP1) facing outward, with the side of the U-shaped channel (EDF5) containing three holes facing upward and the side of the U-shaped channel (EDF4) containing four holes facing upward. Align the upper and lower holes on the left side of the bent piece (EDT1), U-shaped channel (EDF4), and color-coated panel (EDP3), then secure from the front side using two screws (S18). Align the upper and lower holes on the right side of the bent piece (EDT1), U-shaped channel (EDF5), and color-coated panel (EDP1), then secure from the front side using two screws (S18).

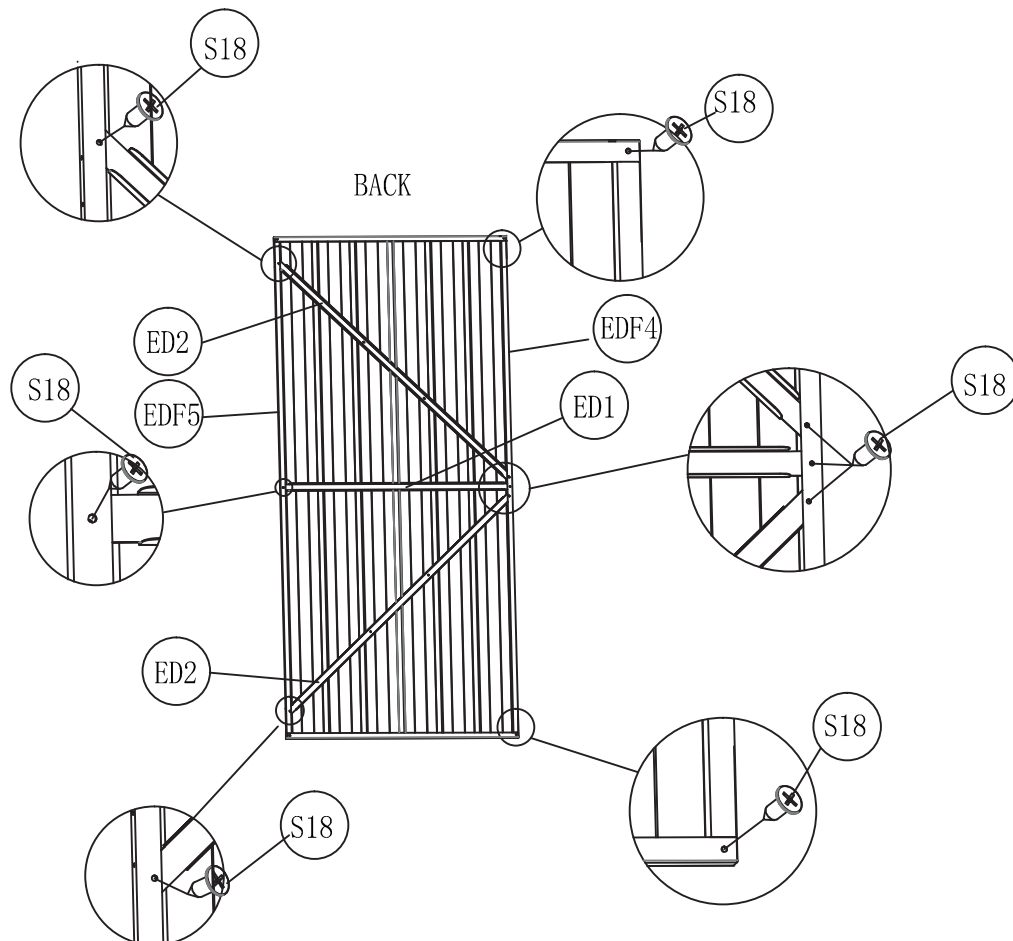

Step48:


Turn the right door assembly from Step 47 over to the back side. Position two U-shaped channels (ED2) and one U-shaped channel (ED1) according to the sequence and hole orientation shown in the diagram. Align the three center holes on (EDF4) with the holes on the two (ED2) channels and one end of (ED1), then secure each hole from the front side using one screw (S18). Align the three upper holes on (EDF5) with the holes on (ED2) and (ED1) on the opposite side, then secure each hole from the front side using one screw (S18). Align the four corner holes and secure them from the front side using four screws (S18).

SHED ASSEMBLY RIGHT DOOR

	EH1	1		SH2	3		SC04	8		S3	5
---	-----	---	---	-----	---	---	------	---	---	----	---


Step49:

Turn the right door assembly back to the front side. Position one hardware piece (EH1) according to the sequence and orientation shown in the diagram, then secure it from the front side using two screws (SC04) through the pre-drilled holes.

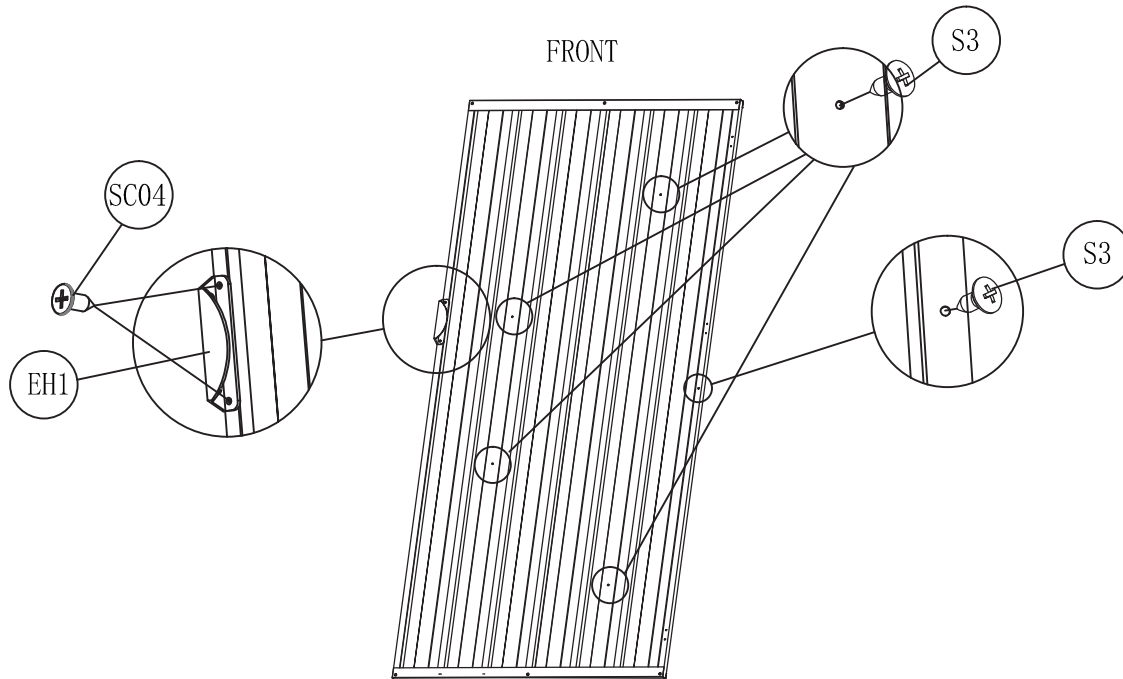

Step50:


Position three hardware pieces (SH2) according to the sequence and orientation shown in the diagram. As illustrated, secure each (SH2) from the front side using two screws (SC04) through the pre-drilled holes.

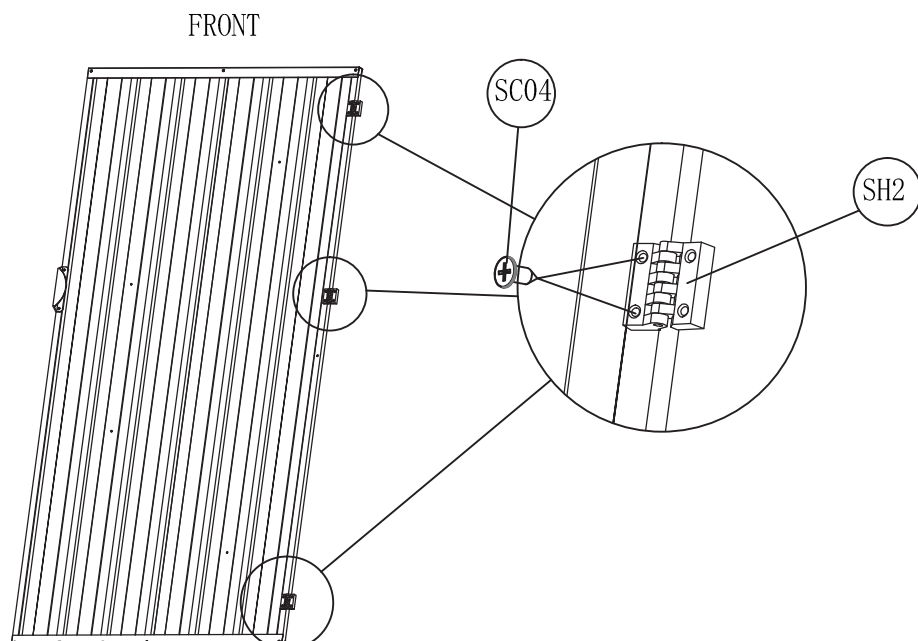

	SC04	12
---	------	----

Step51:


Position the fully assembled left and right doors according to the sequence and orientation shown in the diagram. Align the door hardware (SH2) with the holes in (ET1) and (ET2), then secure each (SH2) from the front side using two screws (SC04) through the pre-drilled holes as illustrated.

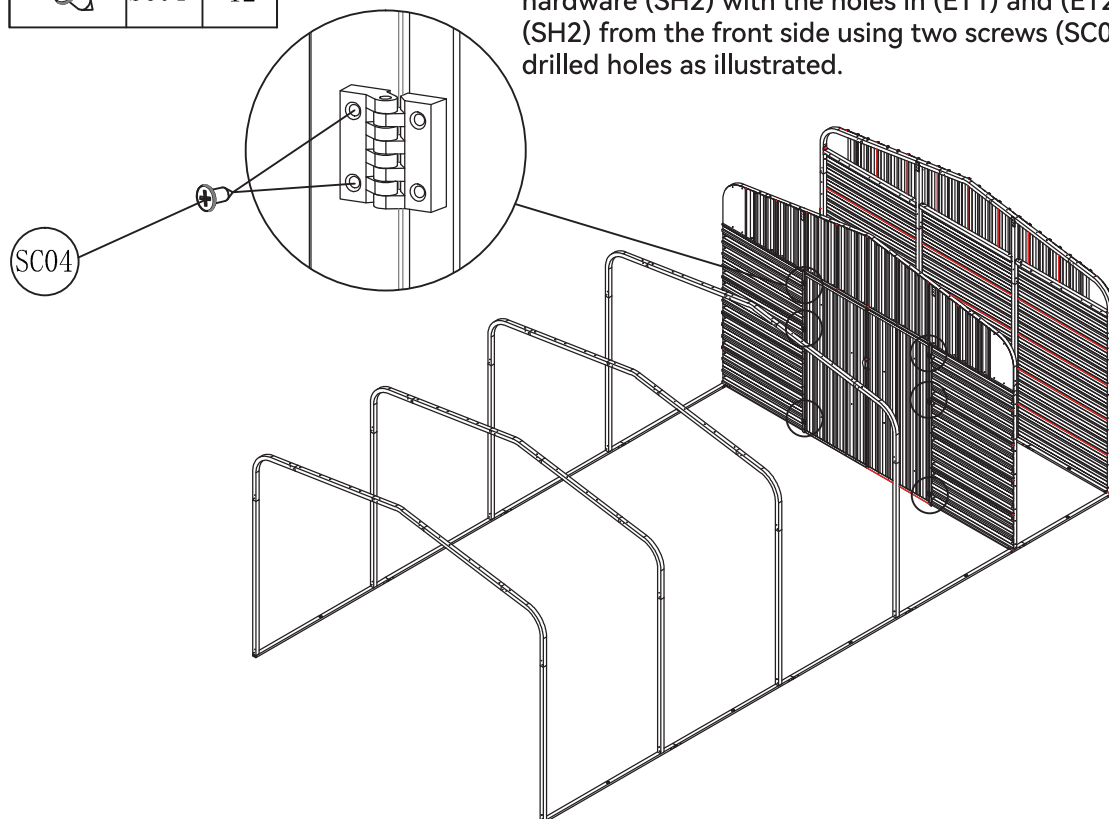


Step52:

Position one color-coated panel (ETP3) according to the sequence and dimensional orientation shown in the diagram. As illustrated, secure it from the front side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12).

	ETP3	1		S12	3
--	------	---	---	-----	---

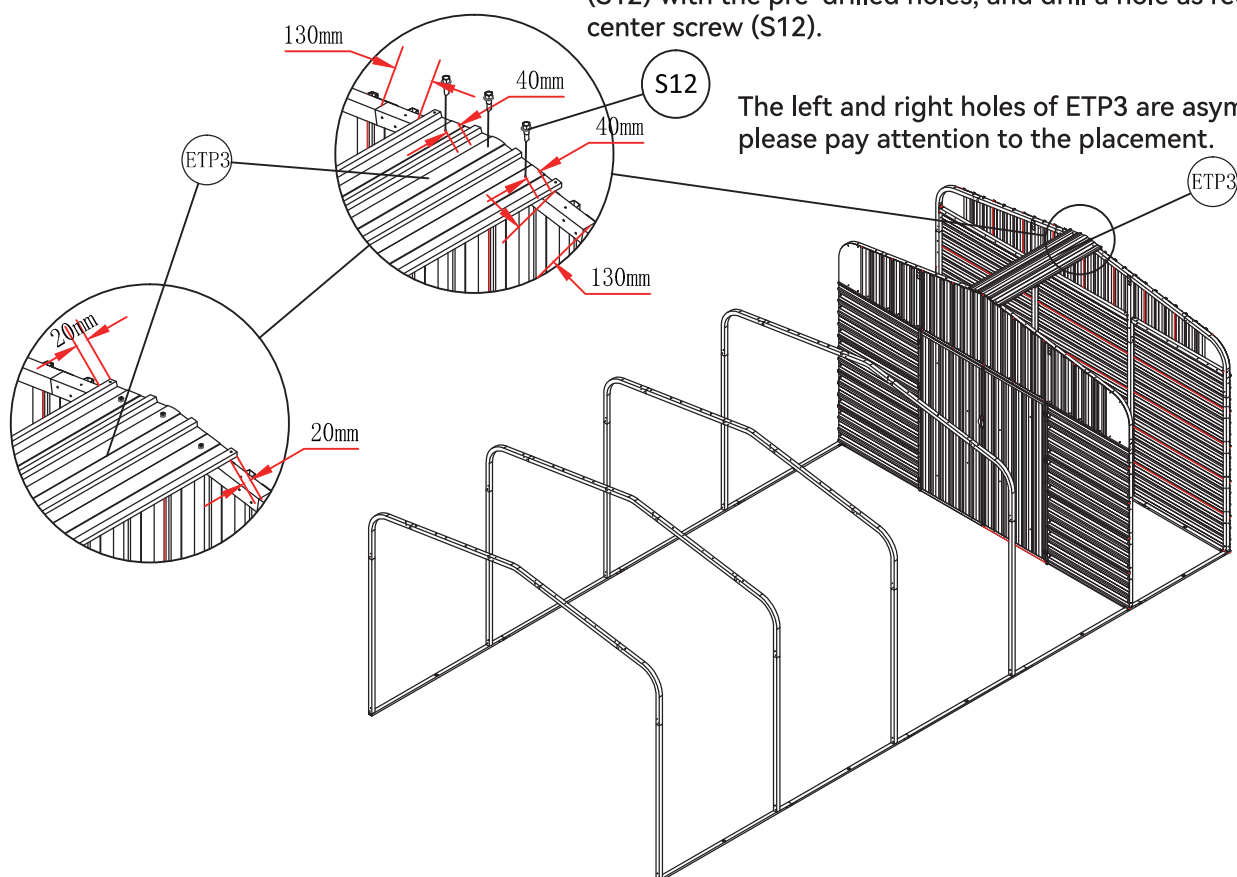

	ETP2	1		S12	3		Waterproof glue	1		Waterproof tape	1
---	------	---	---	-----	---	---	-----------------	---	--	-----------------	---

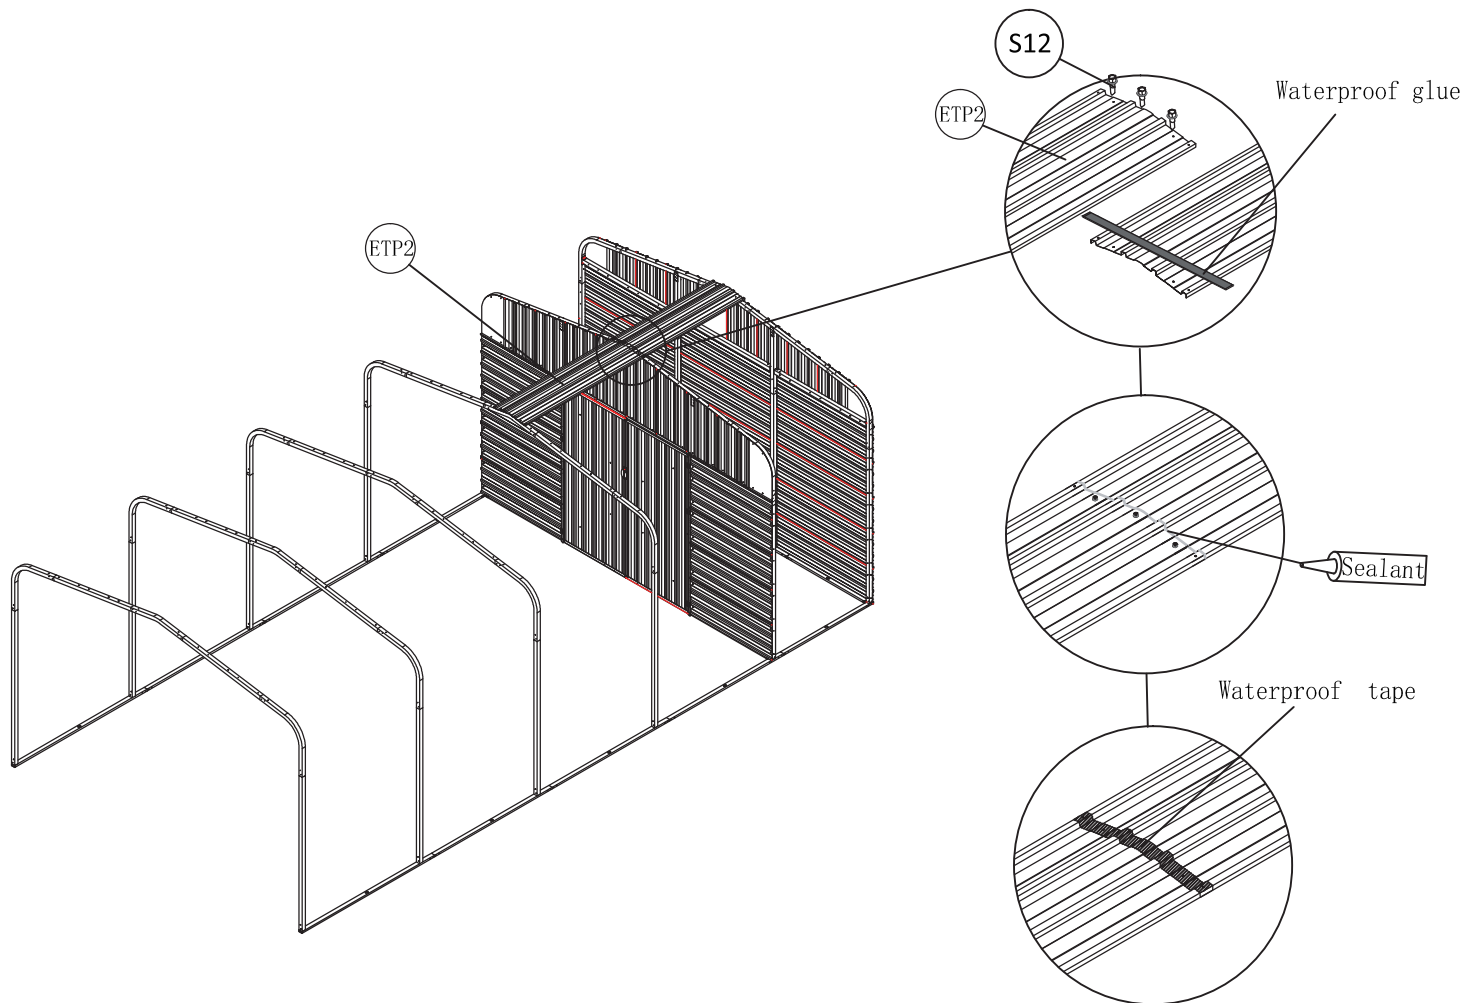


Tip: You can purchase sealant yourself and apply it to the gaps after installing the painted panel.

Step53:

Position one color-coated panel (ETP2) according to the sequence and orientation shown in the diagram. As illustrated, apply waterproof glue to the overlapping area with the color-coated panel (ETP3) installed in Step 52. Align the holes of (ETP2) with those of (ETP3), press down to ensure full adhesion of the waterproof glue between (ETP2) and (ETP3), then secure from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12). Optional: apply sealant along the joint between (ETP2) and (ETP3), and apply waterproof tape over the joint.

PANEL ASSEMBLY

	ETP2	2		S12	6		Waterproof glue	1
---	------	---	---	-----	---	---	-----------------	---

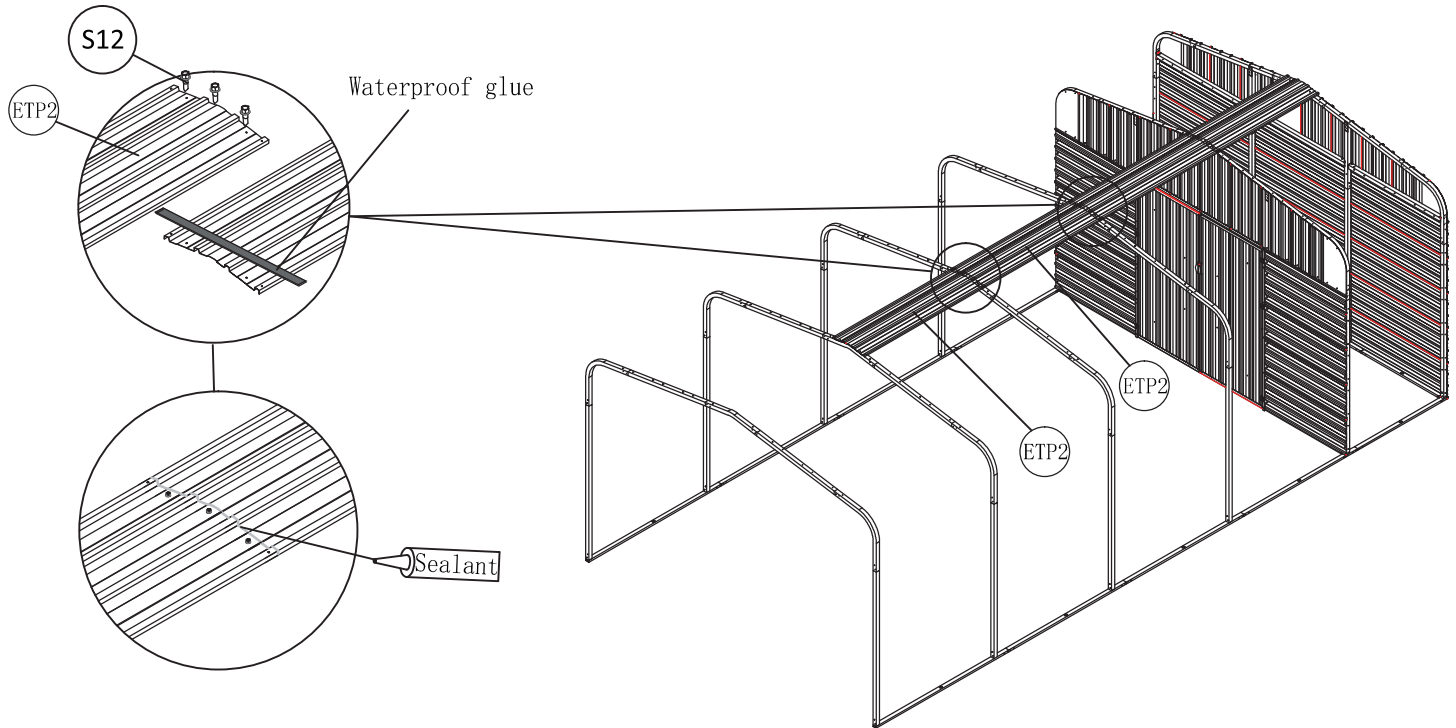


Tip: You can purchase sealant on your own and apply it to the gaps after installing the painted panel.

Step54:

Position one color-coated panel (ETP2) according to the sequence and orientation shown in the diagram. As illustrated, apply waterproof glue to the overlapping area with the color-coated panel (ETP2) installed in Step 53. Align the holes of (ETP2) with those of the previously installed (ETP2), press down to ensure full adhesion of the waterproof glue between the panels, then secure from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12). Optional: apply sealant along the joint between the two (ETP2) panels. After installation is complete, repeat the same procedure to install the remaining panel.

	ETP1	1		S12	6		Waterproof glue	1
---	------	---	---	-----	---	---	-----------------	---

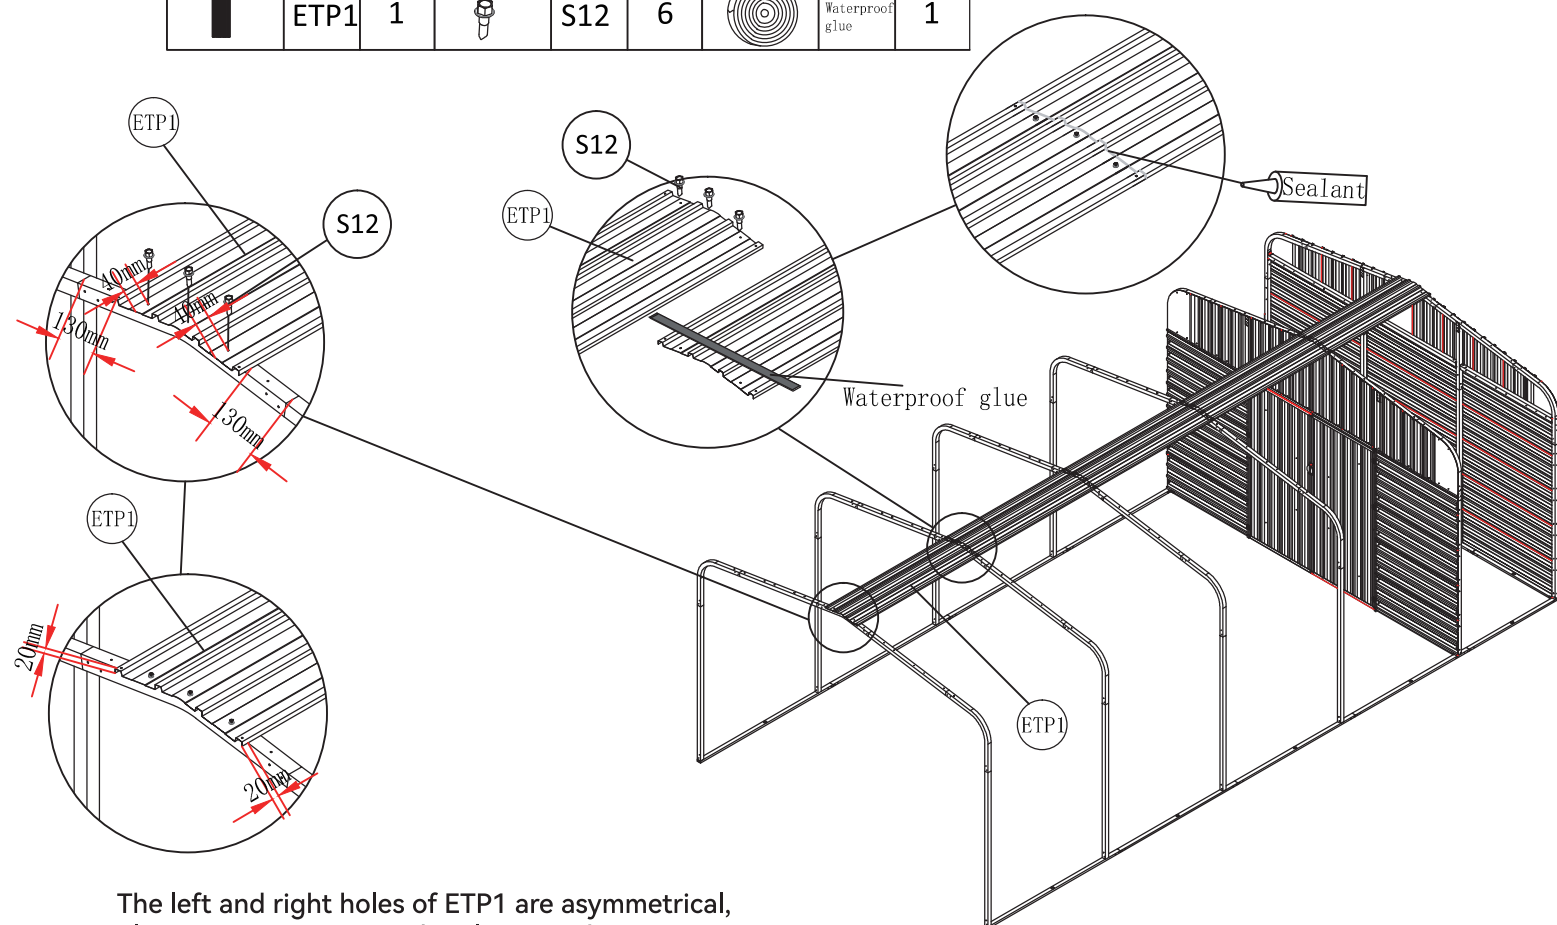

The left and right holes of ETP1 are asymmetrical, please pay attention to the placement!


Tip: You can purchase sealant on your own and apply it to the gaps after installing the painted panel.

Step55:

Position one color-coated panel (ETP1) according to the sequence and dimensional orientation shown in the diagram. As illustrated, apply waterproof glue to the overlapping area with the color-coated panel (ETP2) installed in Step 54. Align the holes of (ETP1) with those of (ETP2), press down to ensure full adhesion of the waterproof glue, then secure from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12). Optional: apply sealant along the joint between (ETP1) and (ETP2). Install the remaining color-coated panel (ETP1) on the opposite side following the same procedure.

PANEL ASSEMBLY

	ETP3	1		S12	3
---	------	---	---	-----	---

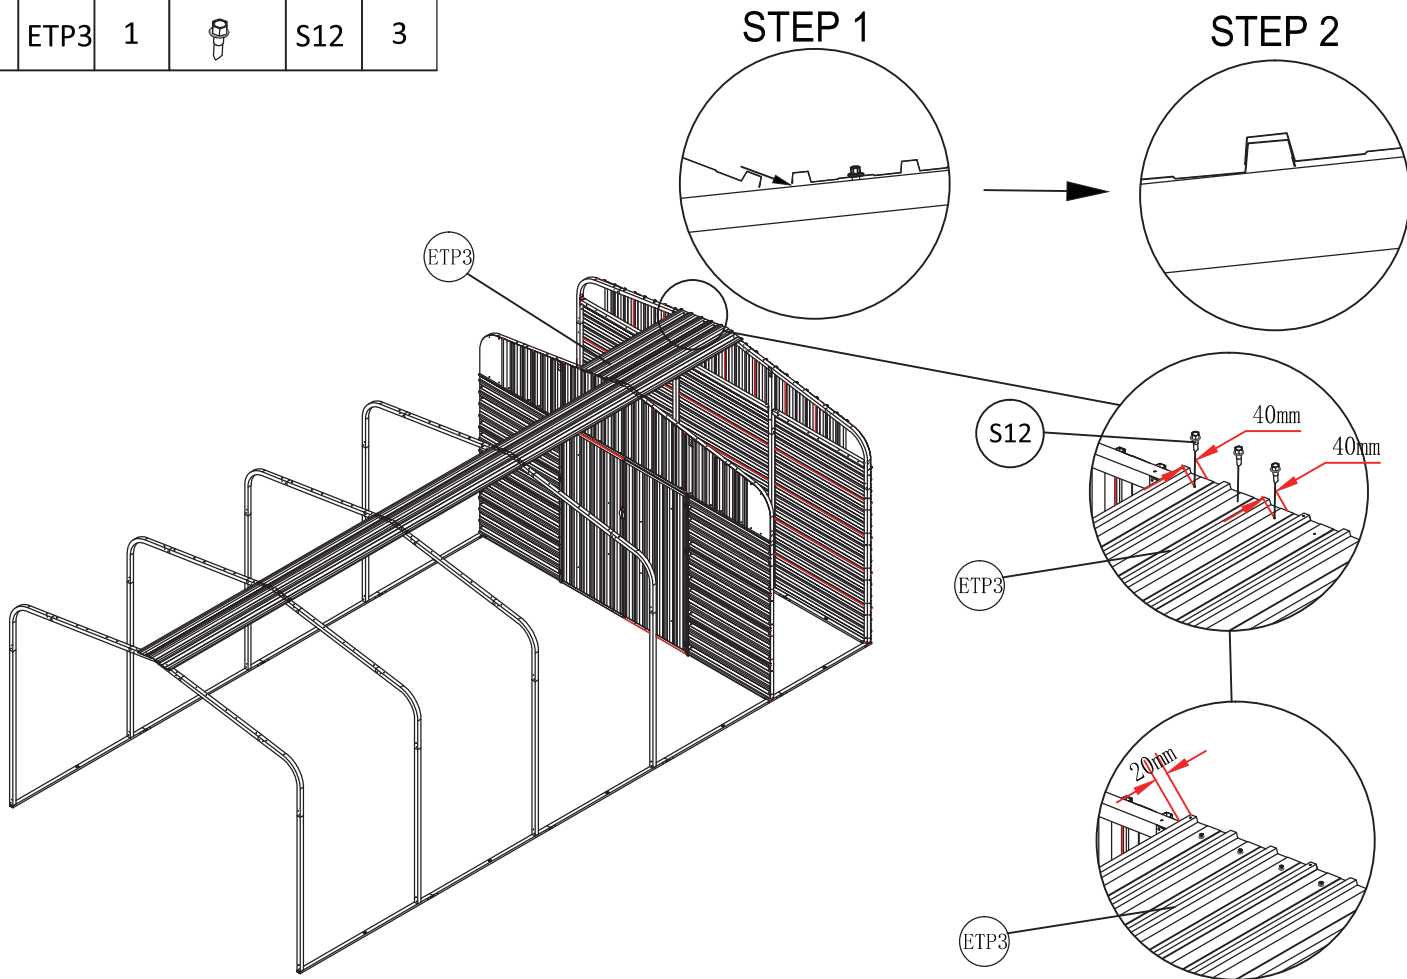

The left and right holes of ETP3 are asymmetrical, please pay attention to the placement.

Step56:


Position one color-coated panel (ETP3) according to the sequence and dimensional orientation shown in the diagram. As illustrated, the panel (ETP3) should be placed beneath the previously installed row of color-coated panels. Secure from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12).

PANEL ASSEMBLY

	ETP2	3		S12	12		Waterproof glue	1		Waterproof tape	1
---	------	---	---	-----	----	---	-----------------	---	--	-----------------	---

Step57:

Position one color-coated panel (ETP2) according to the sequence and orientation shown in the diagram. As illustrated, the panel (ETP2) should be placed beneath the previously installed row of color-coated panels. Apply waterproof glue to the overlapping area with the color-coated panel (ETP3) installed in Step 56. Align the holes of (ETP2) with those of (ETP3), press down to ensure full adhesion of the waterproof glue, then secure from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12). Optional: apply sealant along the joint between (ETP2) and (ETP3), and apply waterproof tape over the joint.

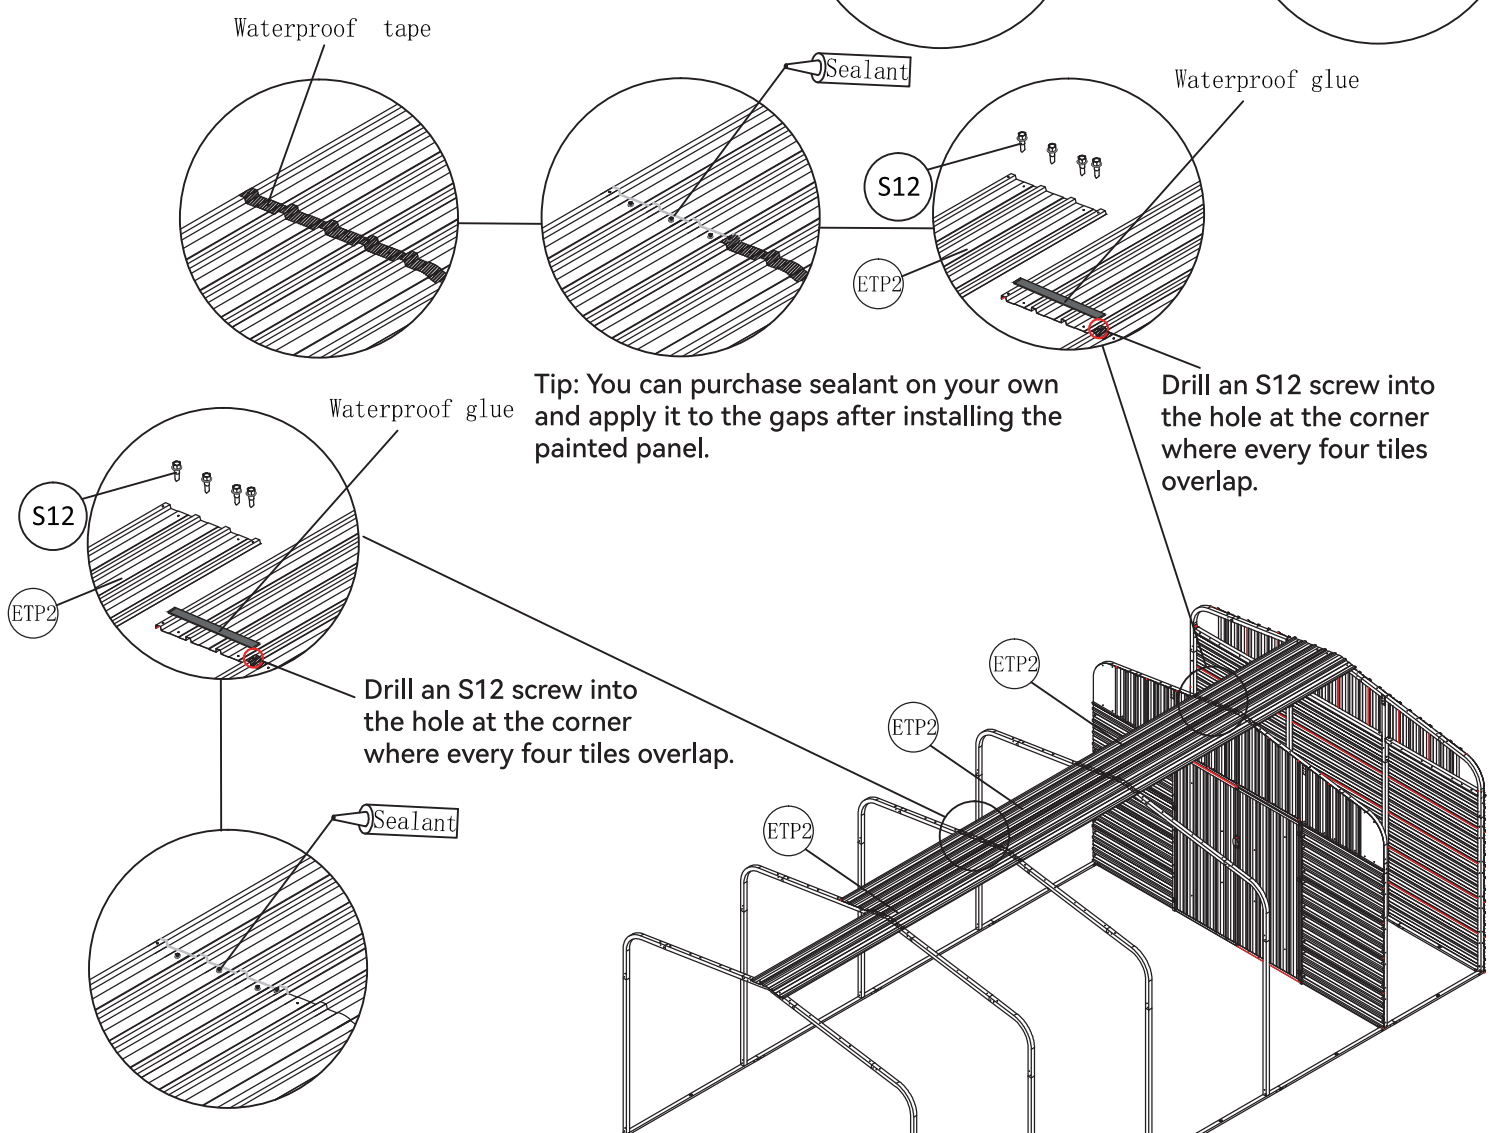

Step58:


Position one color-coated panel (ETP2) according to the sequence and orientation shown in the diagram. As illustrated, place (ETP2) beneath the previously installed row of color-coated panels. Apply waterproof glue to the overlapping area with the color-coated panel (ETP2) installed in Step 57. Align the holes of (ETP2) with those of the underlying (ETP2), press down to ensure full adhesion of the waterproof glue, then secure from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12). As shown, use one screw (S12) to secure the hole at the overlapping corner of the panels. Optional: apply sealant along the joint between the two (ETP2) panels. After completing one side, repeat the same procedure to install the next panel.

PANEL ASSEMBLY

	ETP1	1		S12	7		Waterproof glue	1
---	------	---	---	-----	---	---	-----------------	---

STEP 1

STEP 2

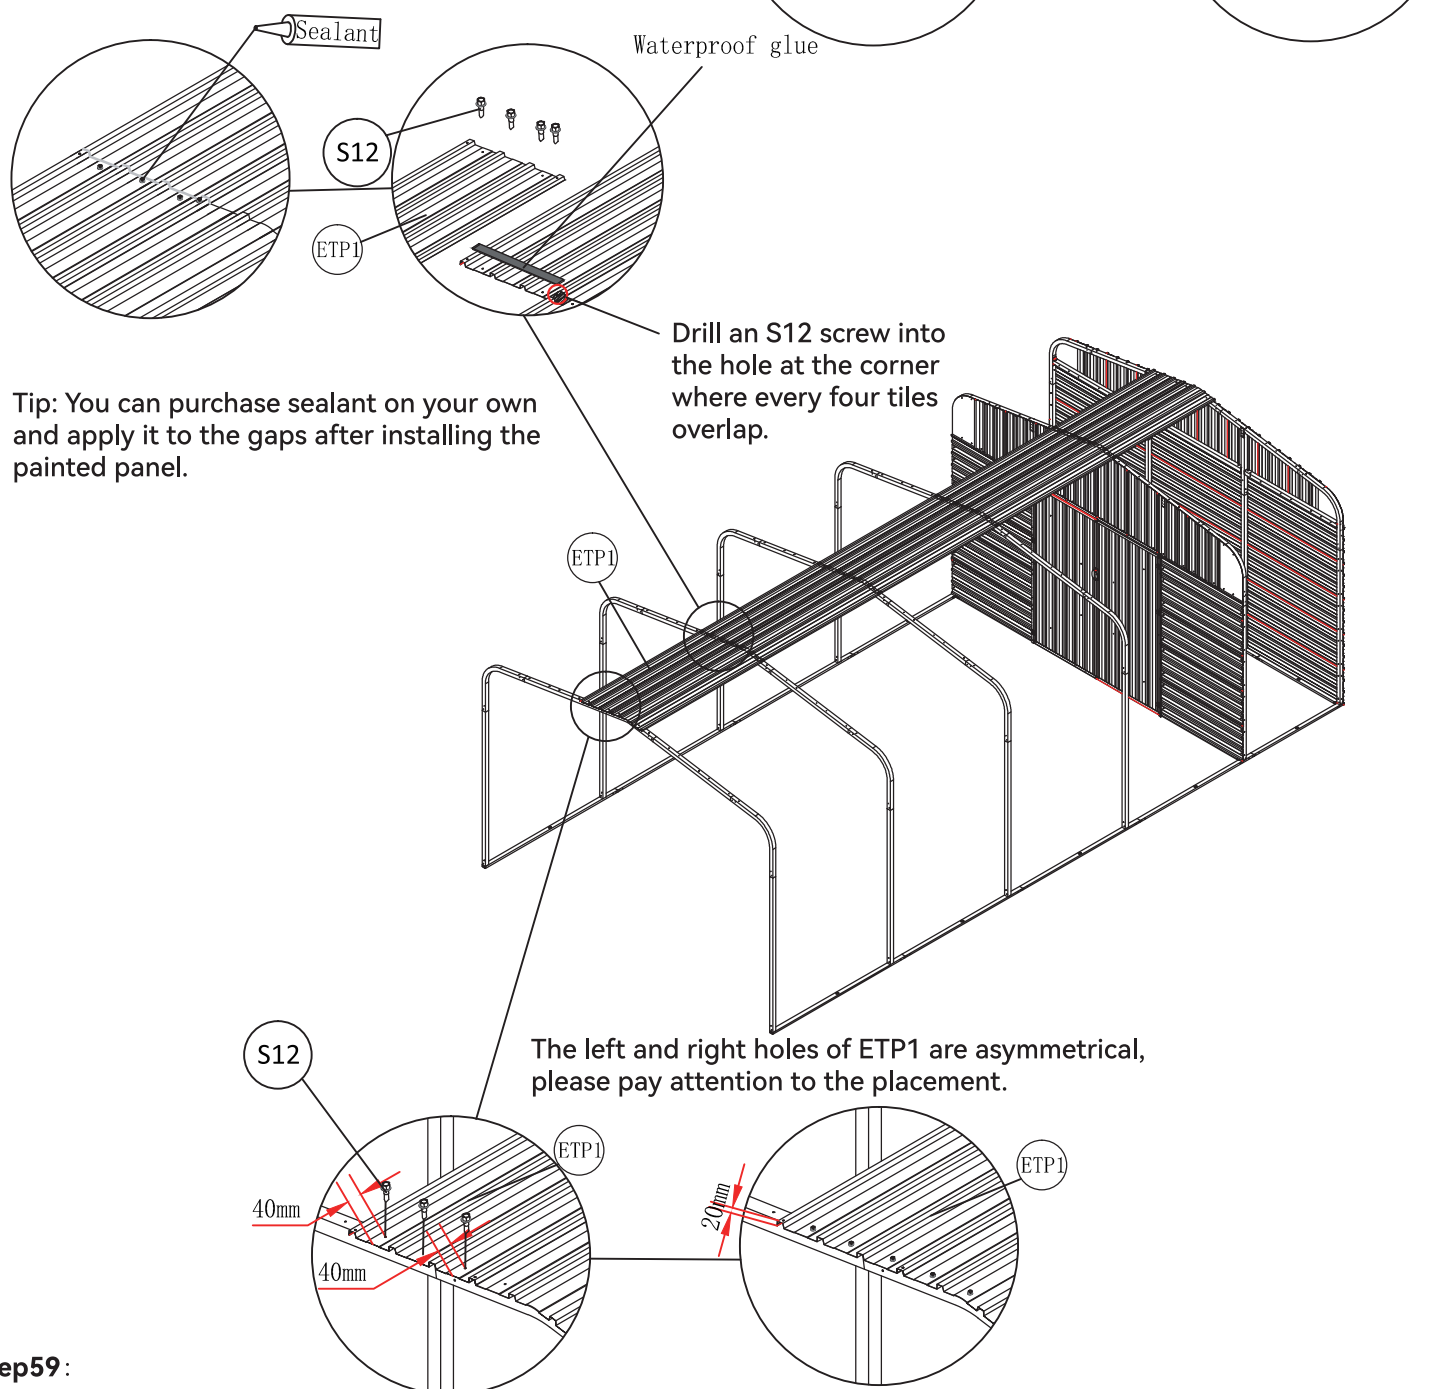

Step59:

Position one color-coated panel (ETP1) according to the sequence and dimensional orientation shown in the diagram. As illustrated, place (ETP1) beneath the previously installed row of color-coated panels. Apply waterproof glue to the overlapping area with the color-coated panel (ETP2) installed in Step 58. Align the holes of (ETP1) with those of (ETP2), press down to ensure full adhesion of the waterproof glue, then secure from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12). As shown, use one screw (S12) to secure the hole at the overlapping corner of the panels. Optional: apply sealant along the joint between (ETP1) and (ETP2). On the opposite end of the color-coated panel (ETP1), secure it from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12).

PANEL ASSEMBLY

	ETP1	1		ETP2	3		ETP3-1	1		S12	22		Waterproof glue	1
	Waterproof tape	1												

Note: Use putty to fill the gap between ETP3-1 and ETP2!

STEP 1

STEP 2

Tip: You can purchase sealant on your own and apply it to the gaps after installing the painted panel.

Waterproof tape

Sealant

S12

ETP3-1

ETP3

20mm

Waterproof glue

ETP3-1

ETP2

ETP2

ETP2

ETP1

Drill an S12 screw into the hole at the corner where every four tiles overlap.

Sealant

The left and right holes of ETP1 are asymmetrical, so pay attention to the placement position!

S12

ETP1

40mm

40mm

20mm

ETP1

Step60:

Position one transparent panel (ETP3-1) according to the sequence and dimensional orientation shown in the diagram. As illustrated, place (ETP3-1) beneath the previously installed row of color-coated panels.

Secure from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12).

Step61:

Position one color-coated panel (ETP2) according to the sequence and orientation shown in the diagram.

As illustrated, place (ETP2) beneath the previously installed row of color-coated panels. Apply waterproof glue to the overlapping area with the transparent panel (ETP3-1) installed in Step 60, align the holes of (ETP2) with those of (ETP3-1), press down to ensure full adhesion of the waterproof glue, then apply additional waterproof glue to fully seal the joint. Secure from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12). As shown, use one screw (S12) to secure the hole at the overlapping corner of the panels. Optional: apply sealant along the joint between (ETP2) and (ETP3-1), and apply waterproof tape over the joint.

Step62:

Position one color-coated panel (ETP2) according to the sequence and orientation shown in the diagram.

As illustrated, place (ETP2) beneath the previously installed row of color-coated panels. Apply waterproof glue to the overlapping area with the color-coated panel (ETP2) installed in Step 61. Align the holes of (ETP2) with those of the underlying (ETP2), press down to ensure full adhesion of the waterproof glue, then secure from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12). As shown, use one screw (S12) to secure the hole at the overlapping corner of the panels. Optional: apply sealant along the joint between the two (ETP2) panels. After completing one panel, repeat the same procedure to install the next panel.

Step63:

Position one color-coated panel (ETP1) according to the sequence and dimensional orientation shown in the diagram. As illustrated, place (ETP1) beneath the previously installed row of color-coated panels.

Apply waterproof glue to the overlapping area with the color-coated panel (ETP2) installed in Step 62. Align the holes of (ETP1) with those of (ETP2), press down to ensure full adhesion of the waterproof glue, then secure from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12). As shown, use one screw (S12) to secure the hole at the overlapping corner of the panels. Optional: apply sealant along the joint between (ETP1) and (ETP2). On the opposite end of the color-coated panel (ETP1), secure it from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12).


PANEL ASSEMBLY

	ETP1	3		ETP2	9		ETP3	3		S12	66		Waterproof tape	1
	Waterproof glue	1												

STEP 1

STEP 2

Tip: You can purchase sealant yourself and apply it to the gaps after installing the color-coated panels.

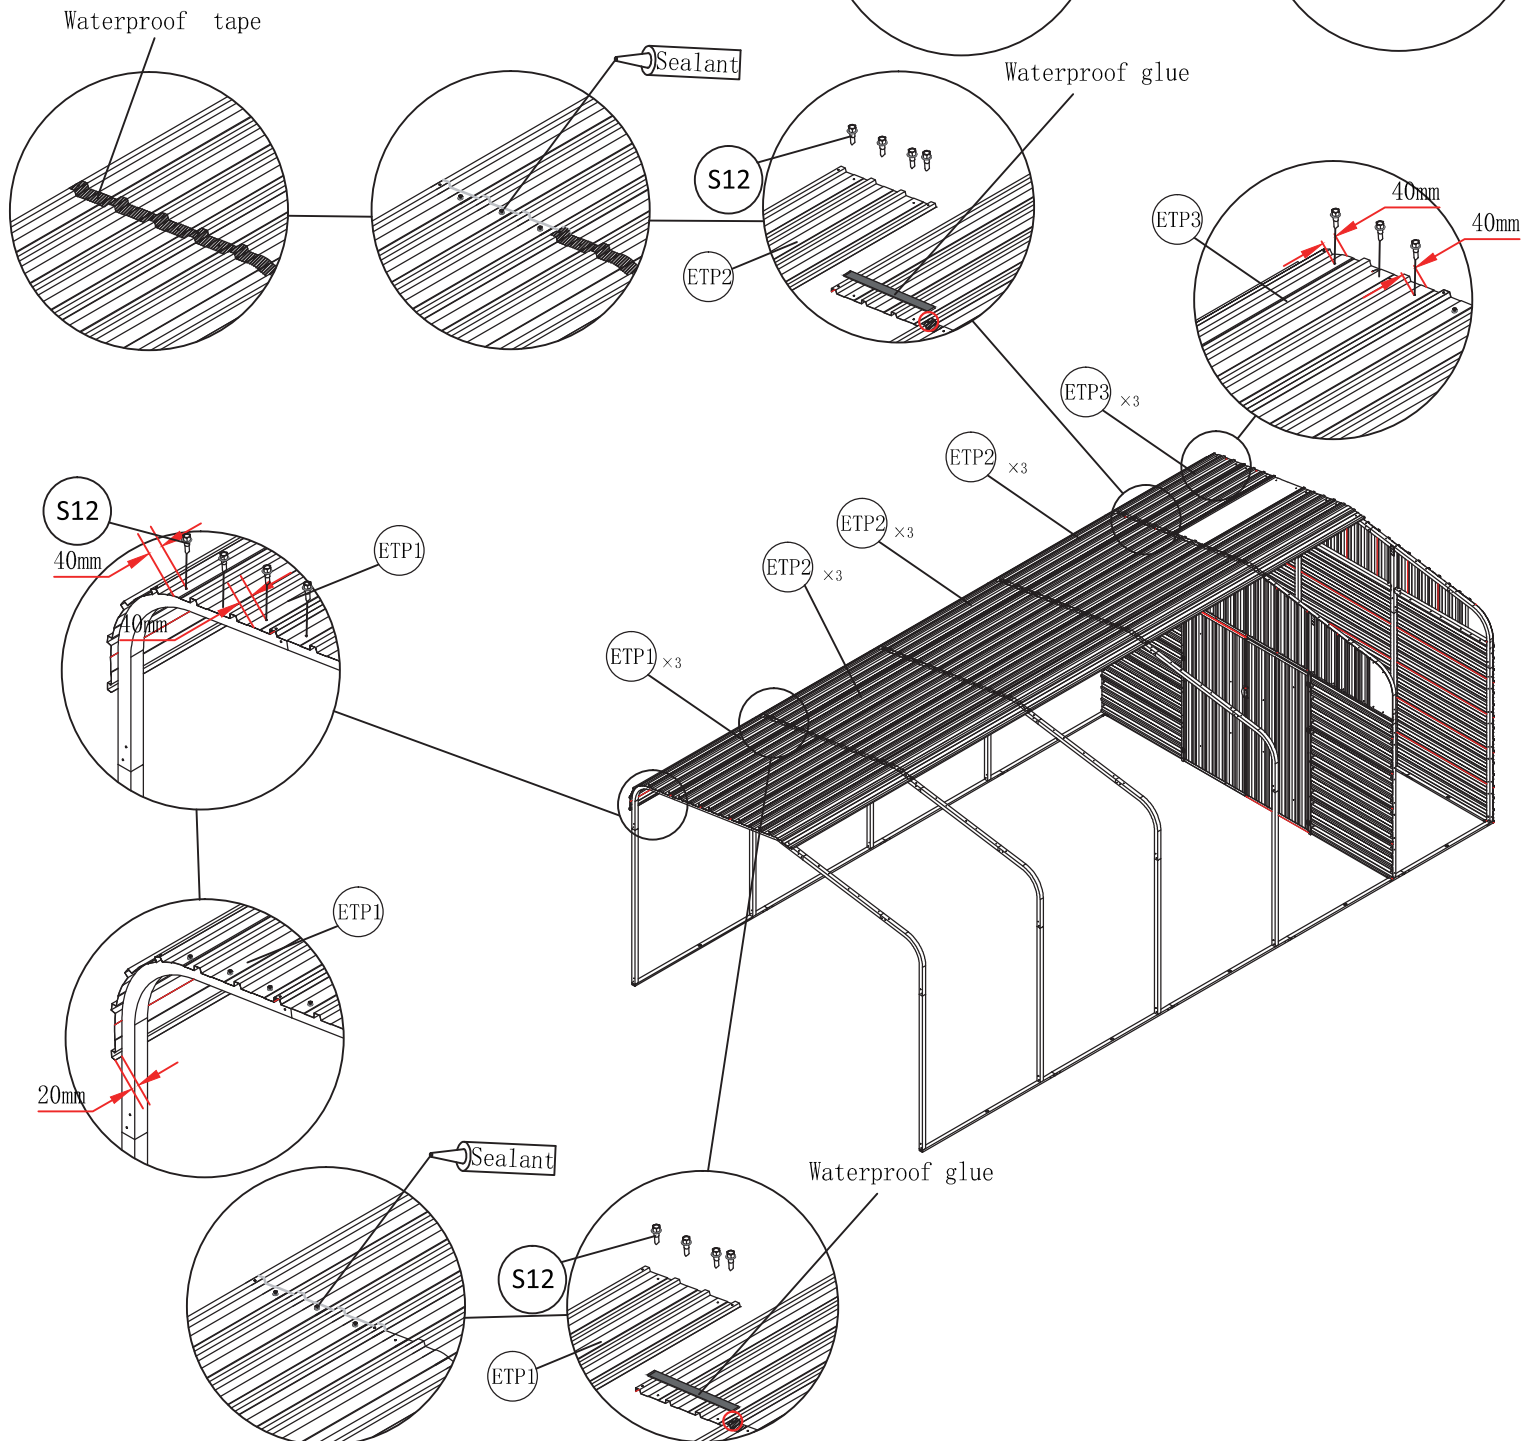

Tip: You can purchase sealant yourself and apply it to the gaps after installing the color-coated panels.

Step64:

Position one color-coated panel (ETP3) according to the sequence and dimensional orientation shown in the diagram. As illustrated, place (ETP3) beneath the previously installed row of color-coated panels, then secure from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12).

Step65:

Position one color-coated panel (ETP2) according to the sequence and orientation shown in the diagram. As illustrated, place (ETP2) beneath the previously installed row of color-coated panels. Apply waterproof glue to the overlapping area with the color-coated panel (ETP3) installed in Step 64. Align the holes of (ETP2) with those of (ETP3), press down to ensure full adhesion of the waterproof glue, then secure from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12). As shown, use one screw (S12) to secure the hole at the overlapping corner of the panels. Optional: apply sealant along the joint between (ETP2) and (ETP3), and apply waterproof tape over the joint.

Step66:

Position one color-coated panel (ETP2) according to the sequence and orientation shown in the diagram. As illustrated, place (ETP2) beneath the previously installed row of color-coated panels. Apply waterproof glue to the overlapping area with the color-coated panel (ETP2) installed in Step 65. Align the holes of (ETP2) with those of the underlying (ETP2), press down to ensure full adhesion of the waterproof glue, then secure from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12). As shown, use one screw (S12) to secure the hole at the overlapping corner of the panels. Optional: apply sealant along the joint between the two (ETP2) panels. After completing one panel, repeat the same procedure to install the next panel.

Step67:

Position one color-coated panel (ETP1) according to the sequence and dimensional orientation shown in the diagram. As illustrated, place (ETP1) beneath the previously installed row of color-coated panels. Apply waterproof glue to the overlapping area with the color-coated panel (ETP2) installed in Step 66. Align the holes of (ETP1) with those of (ETP2), press down to ensure full adhesion of the waterproof glue, then secure from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12). As shown, use one screw (S12) to secure the hole at the overlapping corner of the panels. Optional: apply sealant along the joint between (ETP1) and (ETP2). On the opposite end of the color-coated panel (ETP1), secure it from the top side using three screws (S12); use the two side screws (S12) with the pre-drilled holes, and drill a hole as required for the center screw (S12). After completing Steps 64–67, repeat the same procedure for the next row, repeating twice.

PANEL ASSEMBLY


	ETP1	5		ETP2	15		ETP3	5		S12	110		Waterproof glue	1
	Waterproof tape	1												

Step68:



Using the same procedures as Steps 64 through 67, install the row of color-coated panels on the right side. Repeat this process five times.

Tip: You can purchase sealant yourself and apply it to the gaps after installing the color-coated panels.

STEP 1

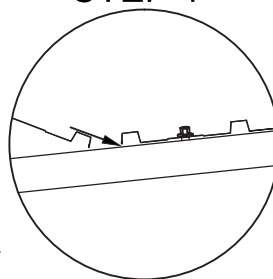


STEP 2

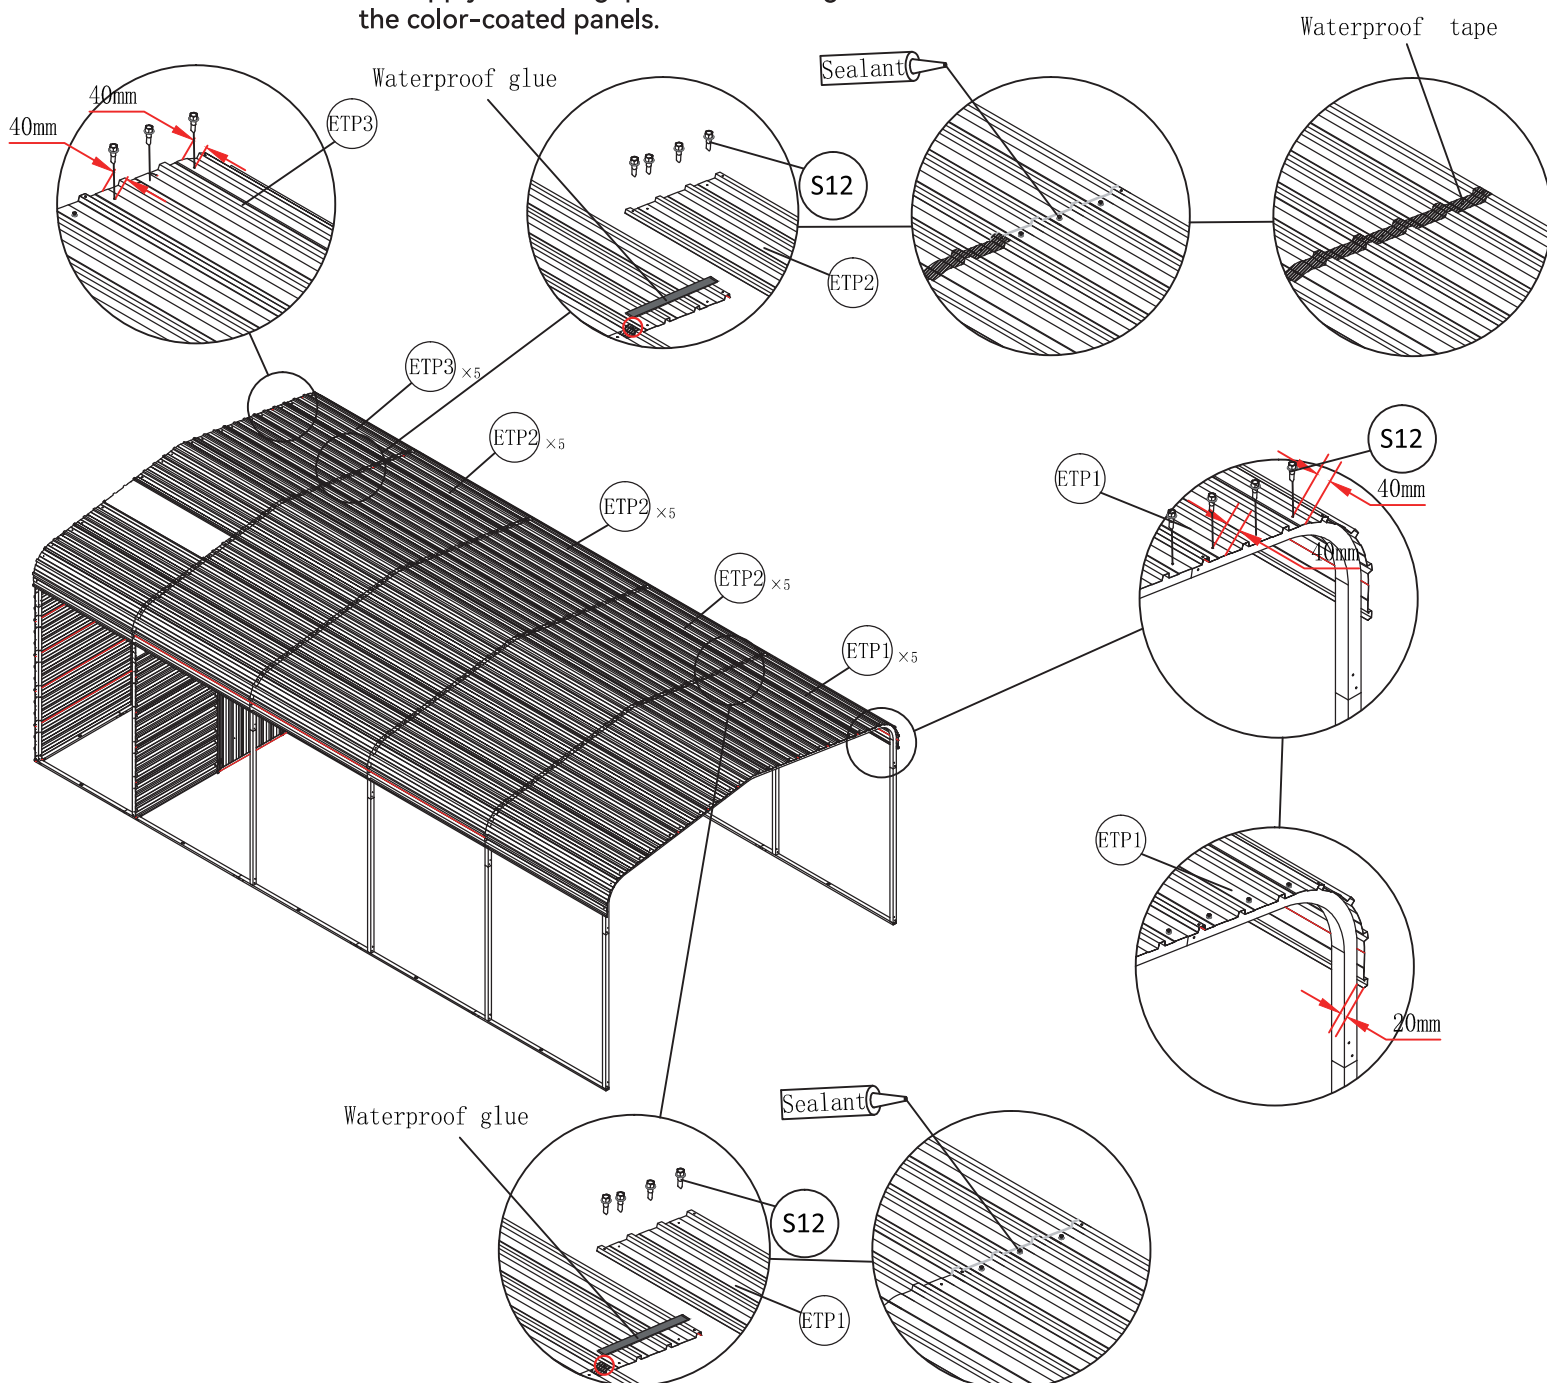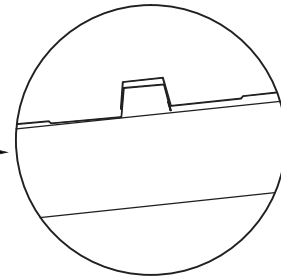



Tip: You can purchase sealant yourself and apply it to the gaps after installing the color-coated panels.

	ETP4	10		S12	40
---	------	----	---	-----	----

STEP 1

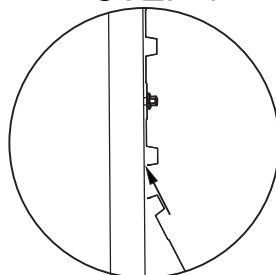


STEP 2

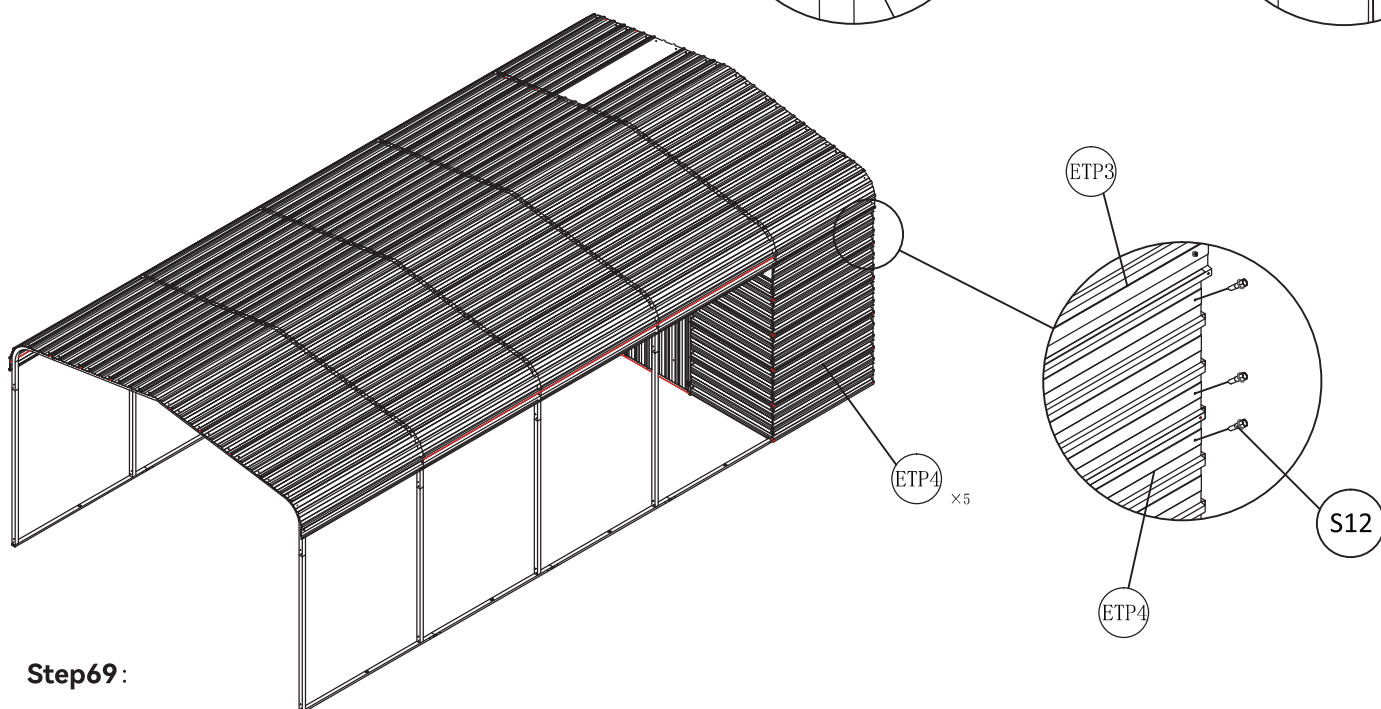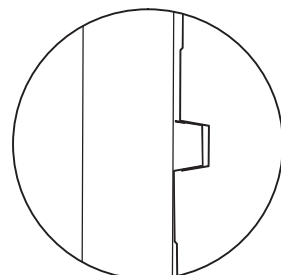

Step69:

Position one color-coated panel (ETP4) according to the sequence and dimensional orientation shown in the diagram. As illustrated, place (ETP4) beneath the previously installed row of color-coated panels and secure it from the top side using four screws (S12) through the pre-drilled holes. After installing one (ETP4), repeat the same procedure to install the next panel, repeating four times.

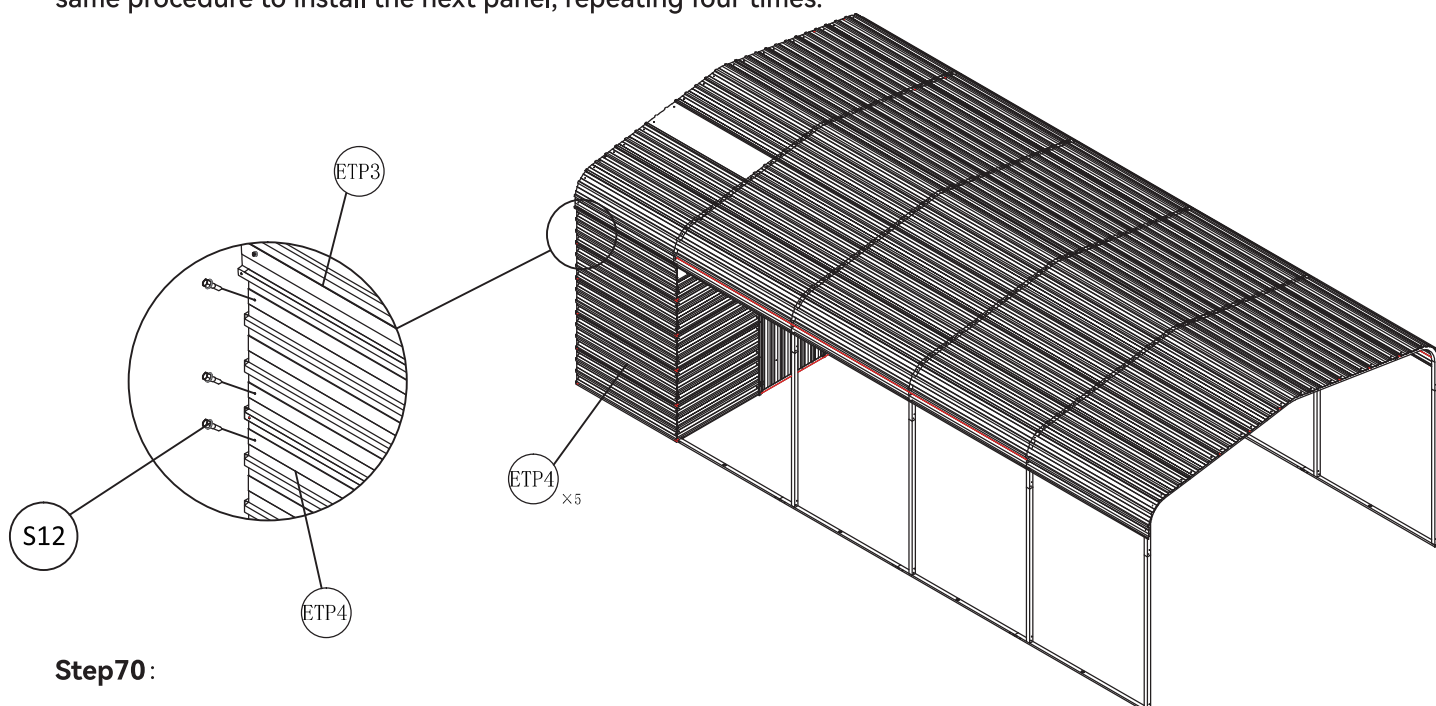


Step70:

Position one color-coated panel (ETP4) according to the sequence and dimensional orientation shown in the diagram. As illustrated, place (ETP4) beneath the previously installed row of color-coated panels and secure it from the top side using four screws (S12) through the pre-drilled holes. After installing one (ETP4), repeat the same procedure to install the next panel, repeating four times.

PANEL ASSEMBLY


	ETL5	1		ETL9	1		S12	14
	ETL6	1		ETL10	1			

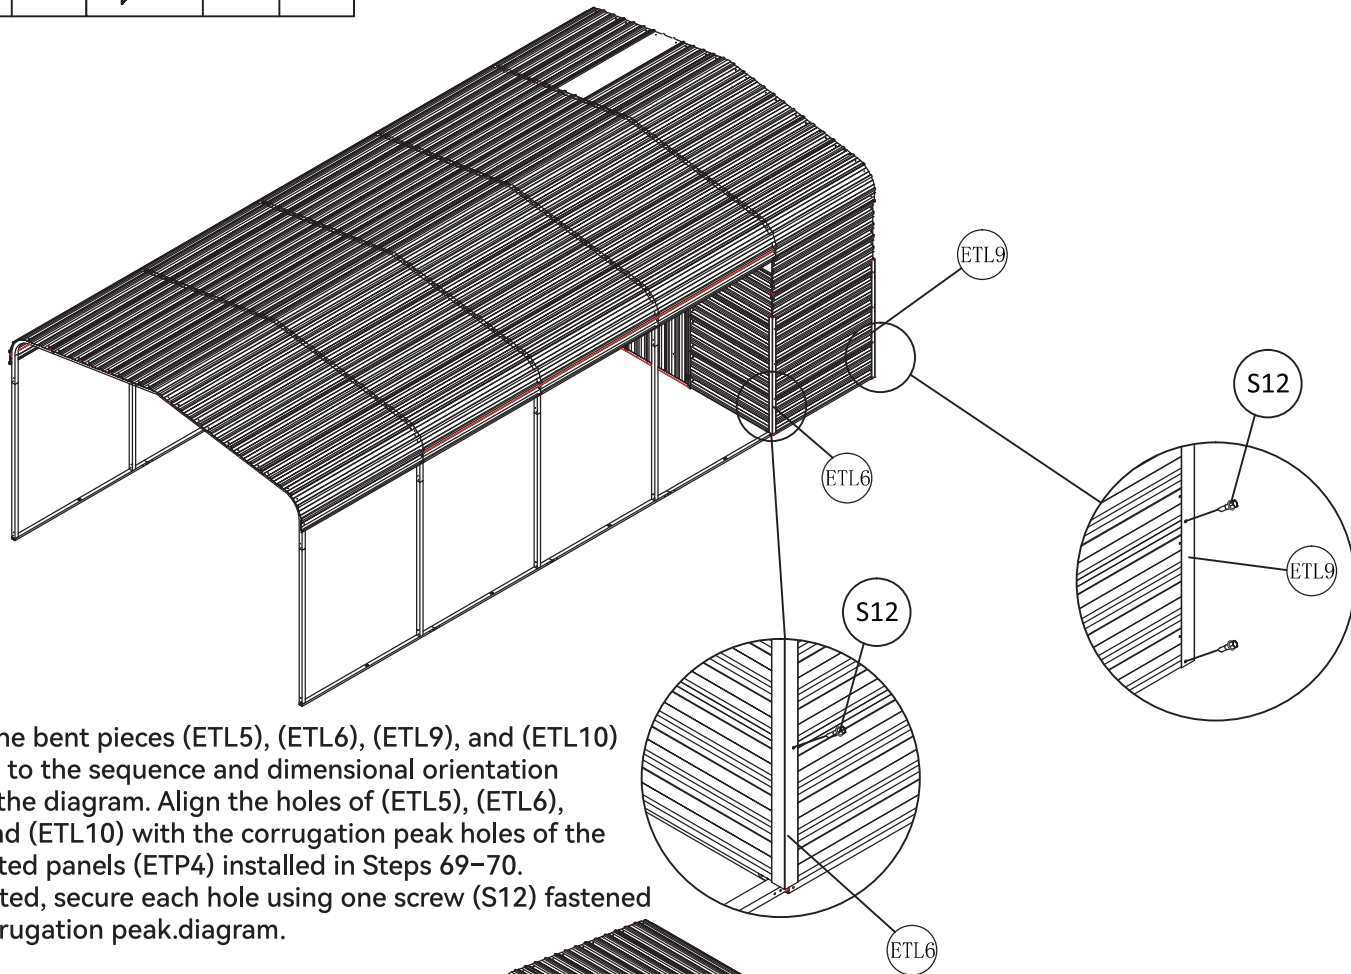

Step71 :


Position the bent pieces (ETL5), (ETL6), (ETL9), and (ETL10) according to the sequence and dimensional orientation shown in the diagram. Align the holes of (ETL5), (ETL6), (ETL9), and (ETL10) with the corrugation peak holes of the color-coated panels (ETP4) installed in Steps 69–70.

As illustrated, secure each hole using one screw (S12) fastened at the corrugation peak diagram.

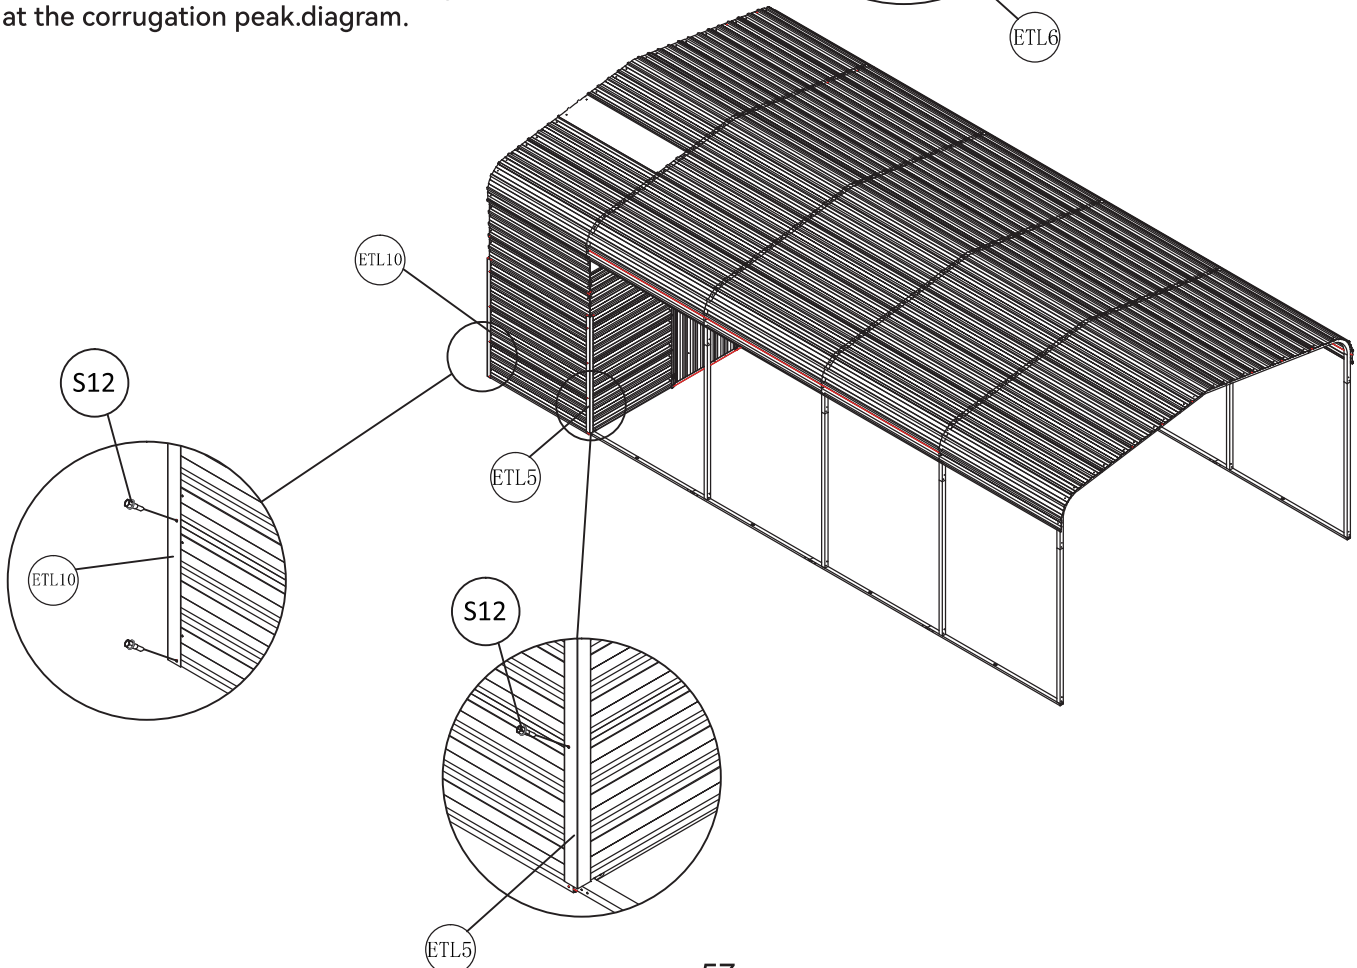


PANEL ASSEMBLY

	ETL7	2		ETL8	2		S12	8
--	------	---	---	------	---	---	-----	---

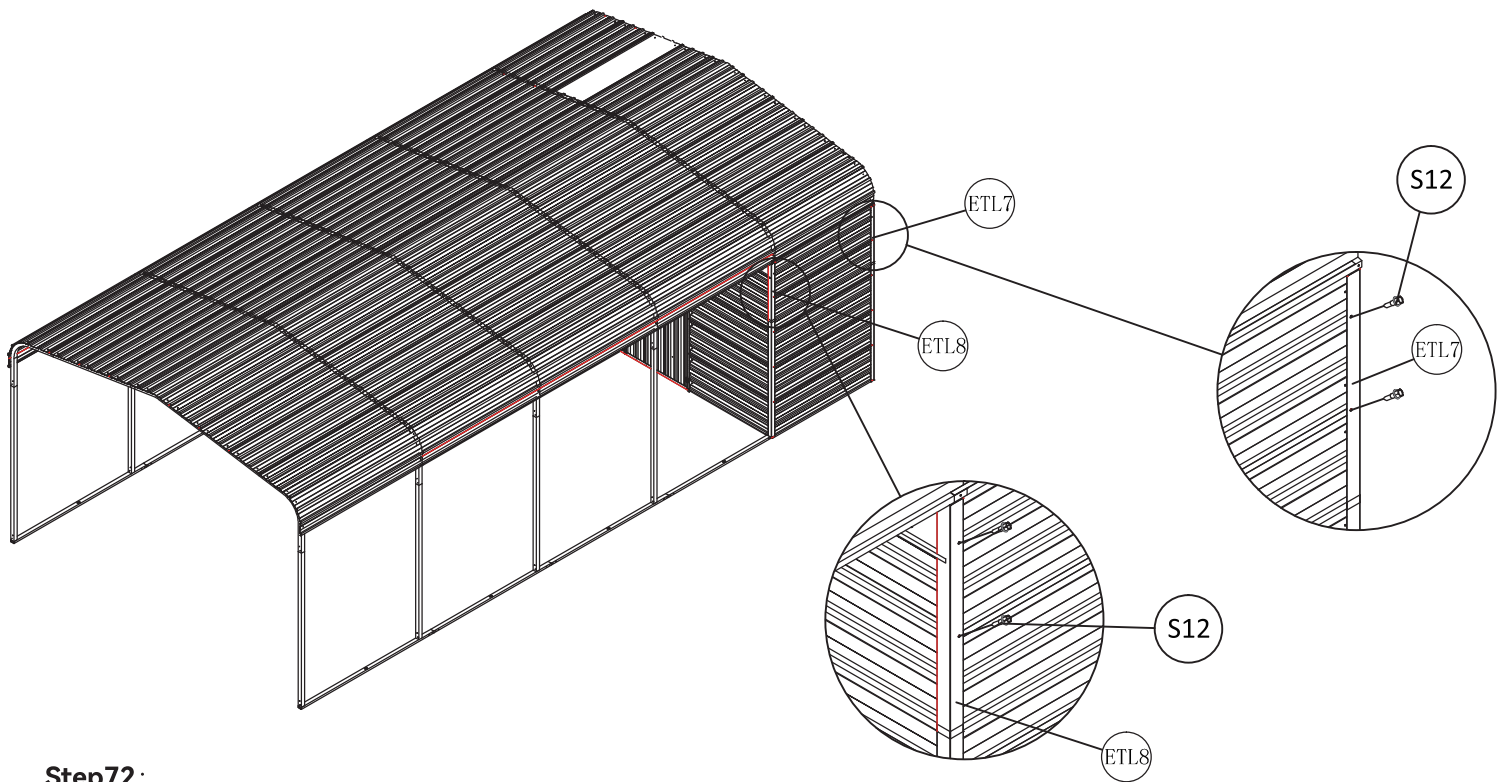

Step72:

Position the bent pieces (ETL7) and (ETL8) according to the sequence and dimensional orientation shown in the diagram. Align the holes of (ETL7) and (ETL8) with the corrugation peak holes of the color-coated panels (ETP4) installed in Steps 69–70. As illustrated, secure each hole using one screw (S12) fastened at the corrugation peak.

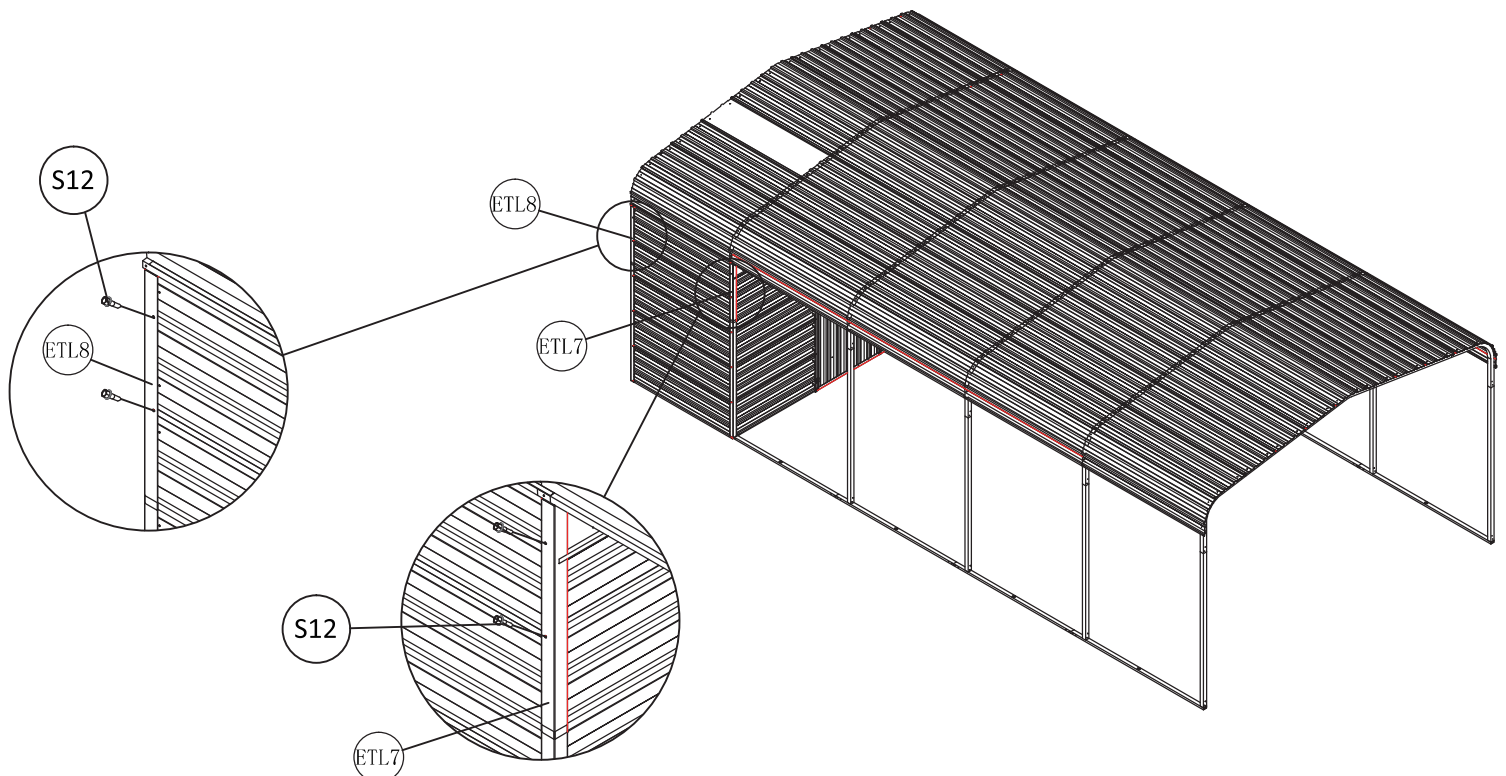


PANEL ASSEMBLY

	ETL1	2		ETL2	2		S12	20
	ETL3	2		ETL4	2			


STEP 1

STEP 2

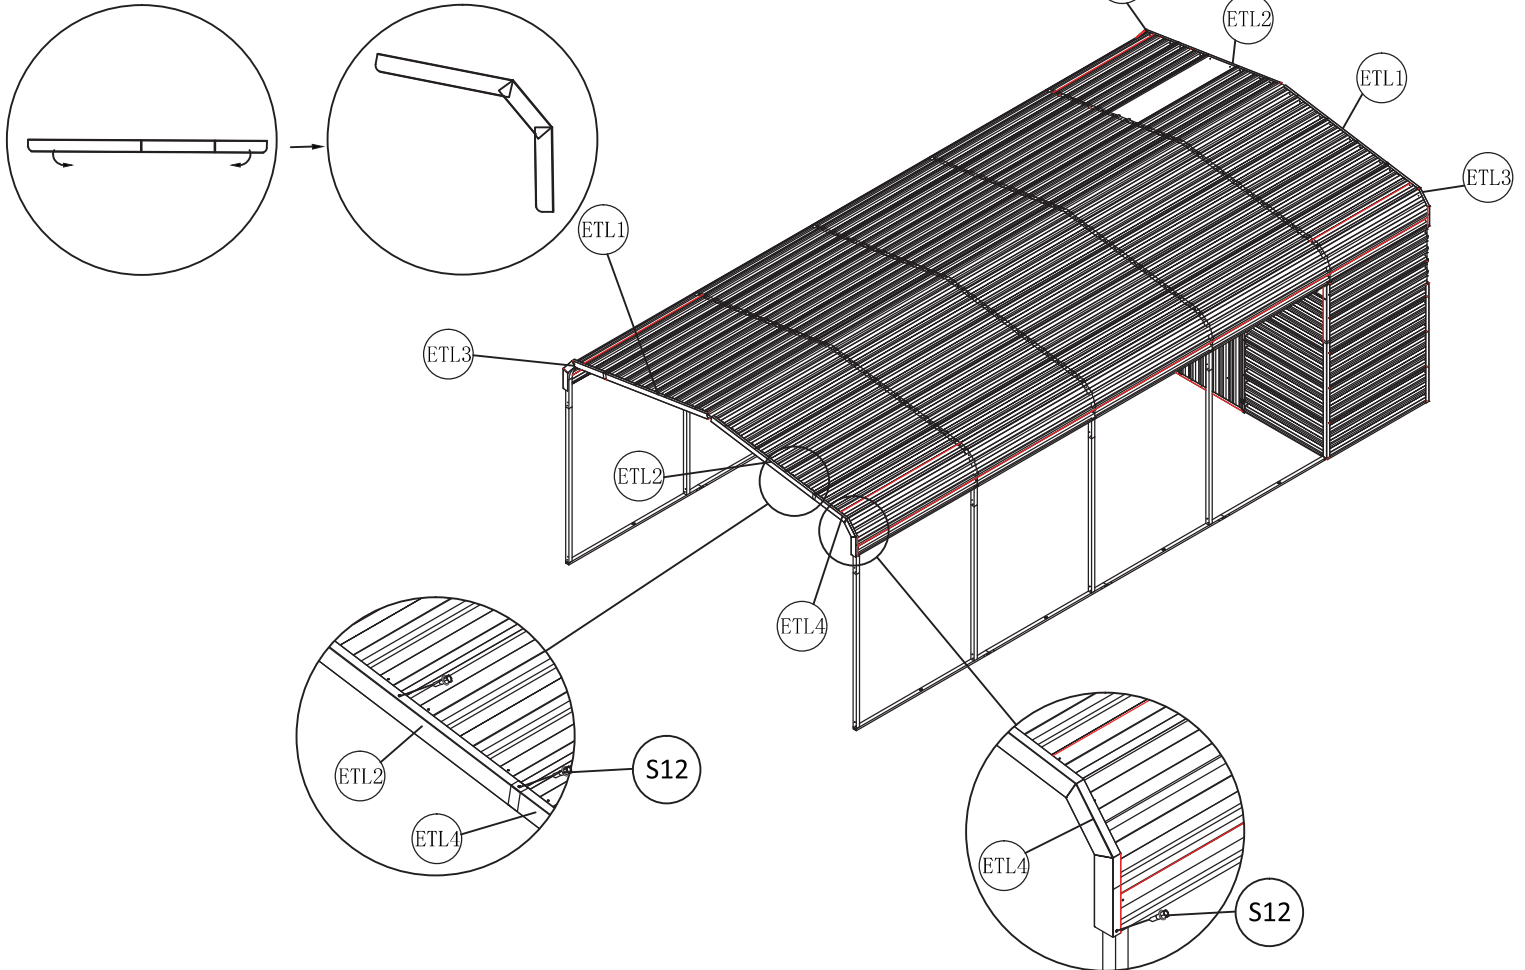

Step73:

Position the bent pieces (ETL1), (ETL2), (ETL3), and (ETL4) according to the sequence and dimensional orientation shown in the diagram. Bend (ETL3) and (ETL4) inward as illustrated. Align the holes of (ETL1), (ETL2), (ETL3), and (ETL4) with the corrugation peak holes of the color-coated panels installed at the top. As shown, secure each hole using one screw (S12) fastened at the corrugation peak.

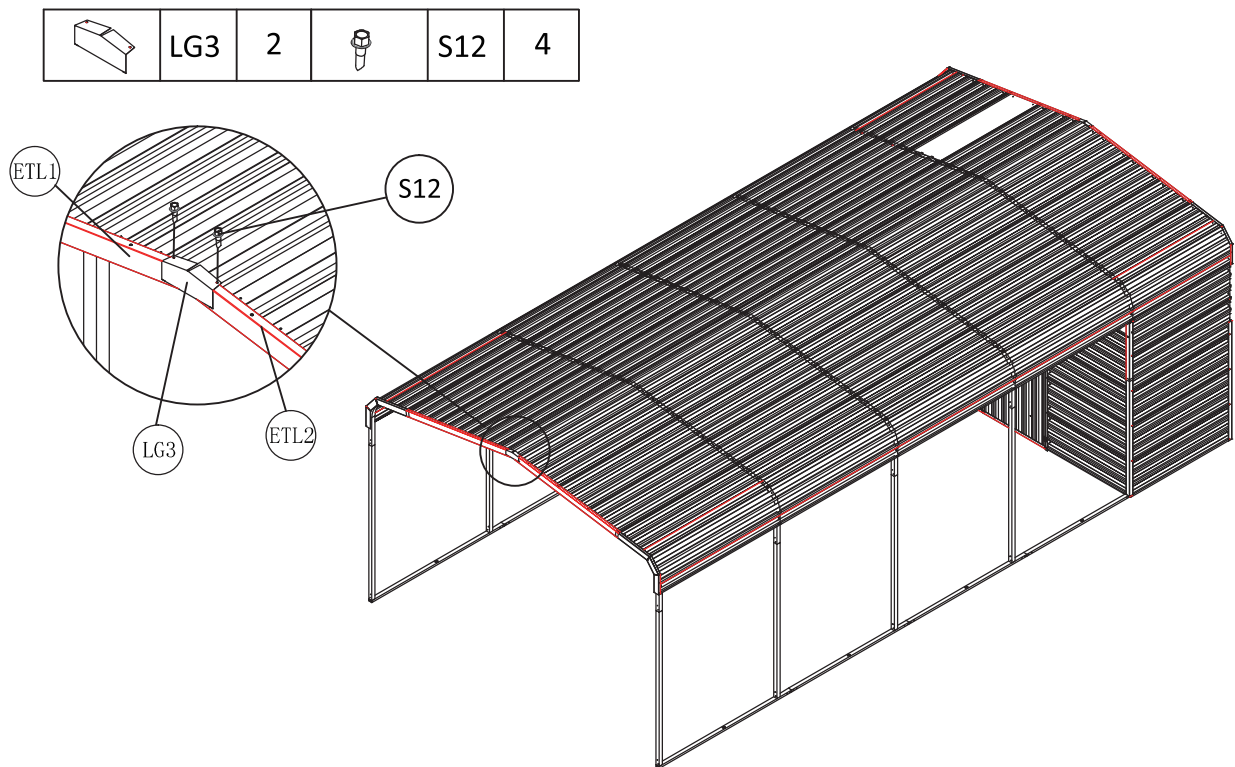


Step74:

Position two hardware pieces (LG3) according to the sequence and dimensional orientation shown in the diagram. As illustrated, secure them from the top side using two screws (S12). Drilling is required.

PANEL ASSEMBLY

	M32	16		L8	4
---	-----	----	---	----	---

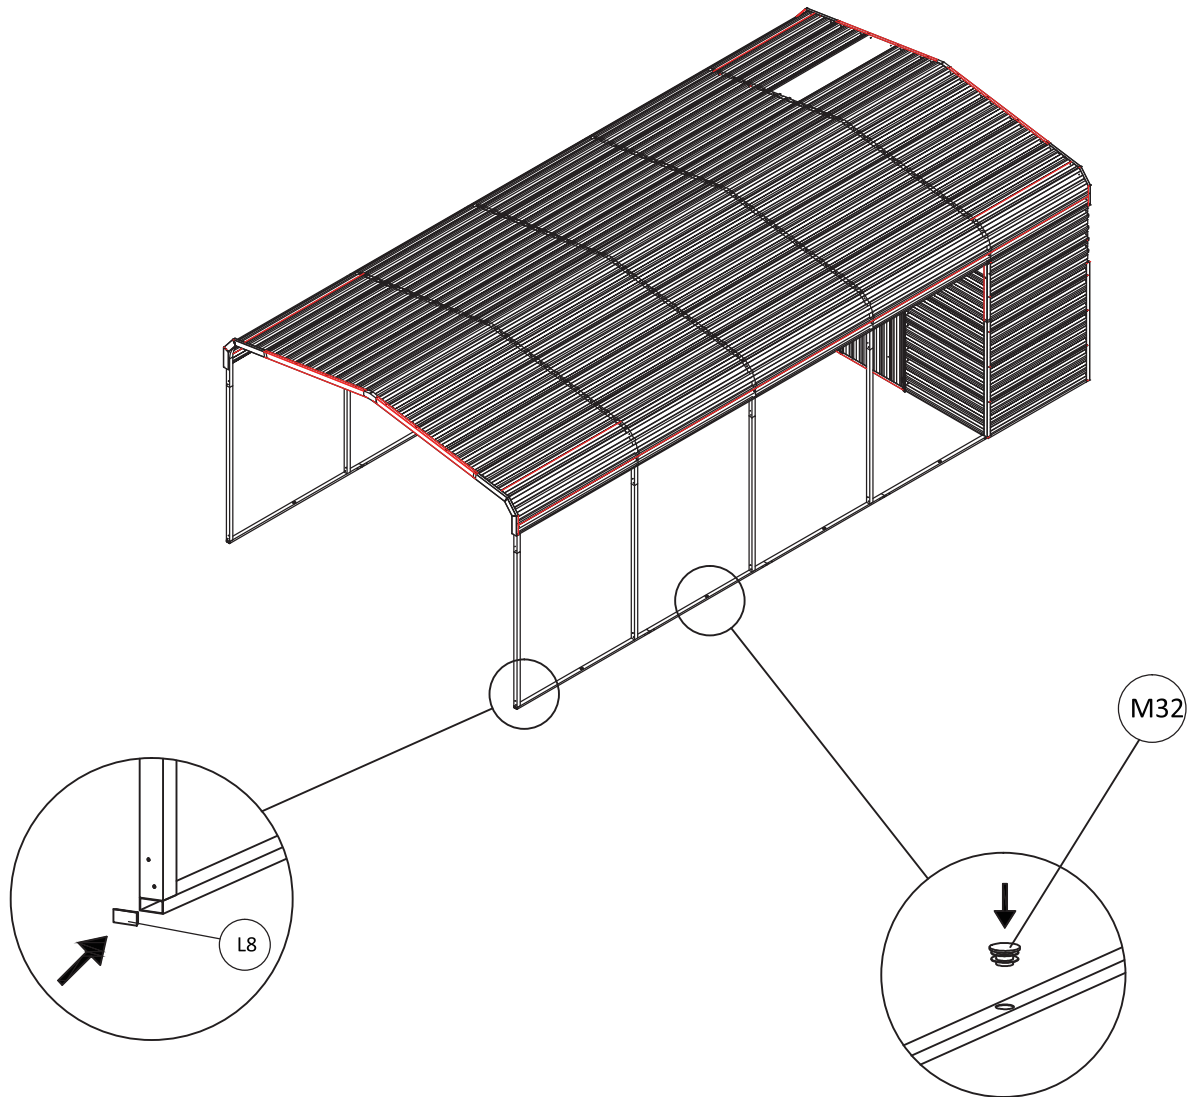

Step75:

Position sixteen hardware pieces (M32) and four pieces (L8) according to the sequence and orientation shown in the diagram. As illustrated, press the buckles into place; a rubber mallet may be used to assist installation.

Steel structure carport

SKU

BG05G2-1B1A1
BG05G2-1B1A2
BG05G2-1B1A3
BG05G2-1B1A4
BG05G2-1B1A5
BG05G2-1B1A6

V1.0